


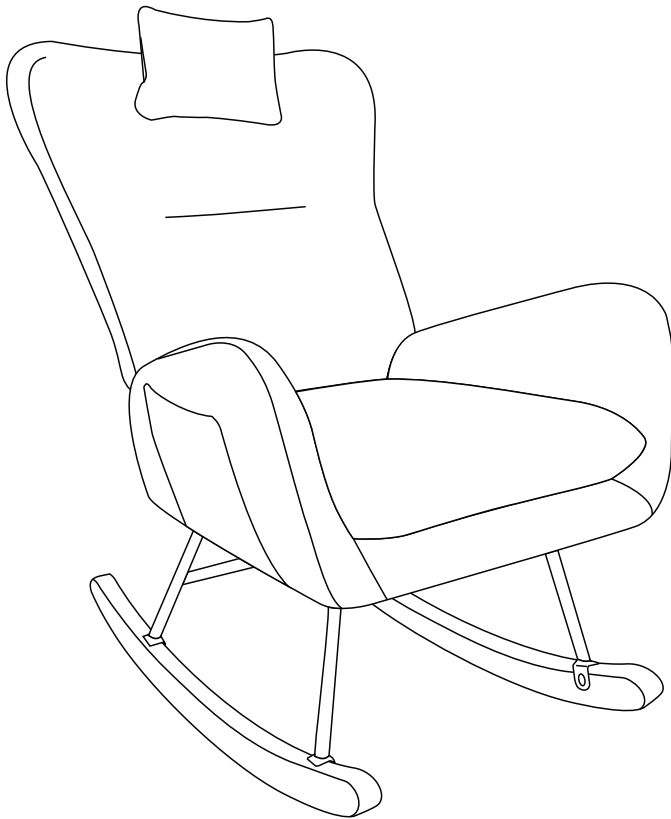
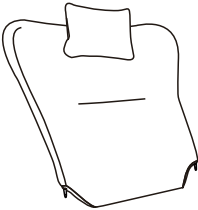
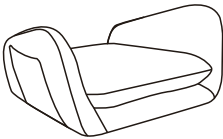
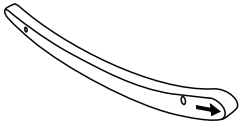


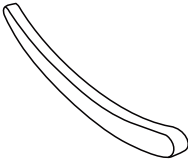

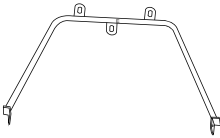

Rocking chair

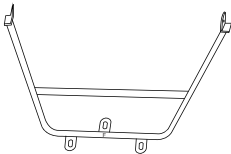


<p>A</p>  <p>x 1</p>	<p>B</p>  <p>x 1</p>	<p>C</p>  <p>x 1</p>
<p>D</p>  <p>x 1</p>	<p>E</p>  <p>x 1</p>	<p>F</p>  <p>x 1</p>
<p>G</p>  <p>x 10</p>	<p>H</p>  <p>M6x20MM</p> <p>x 12</p>	<p>I</p>  <p>M6x35MM</p> <p>x 4</p>
<p>J</p>  <p>x 1</p>		

Attention :

All steps please follow this rule.

Before draw the screws tighten, please find the holes firstly.

1

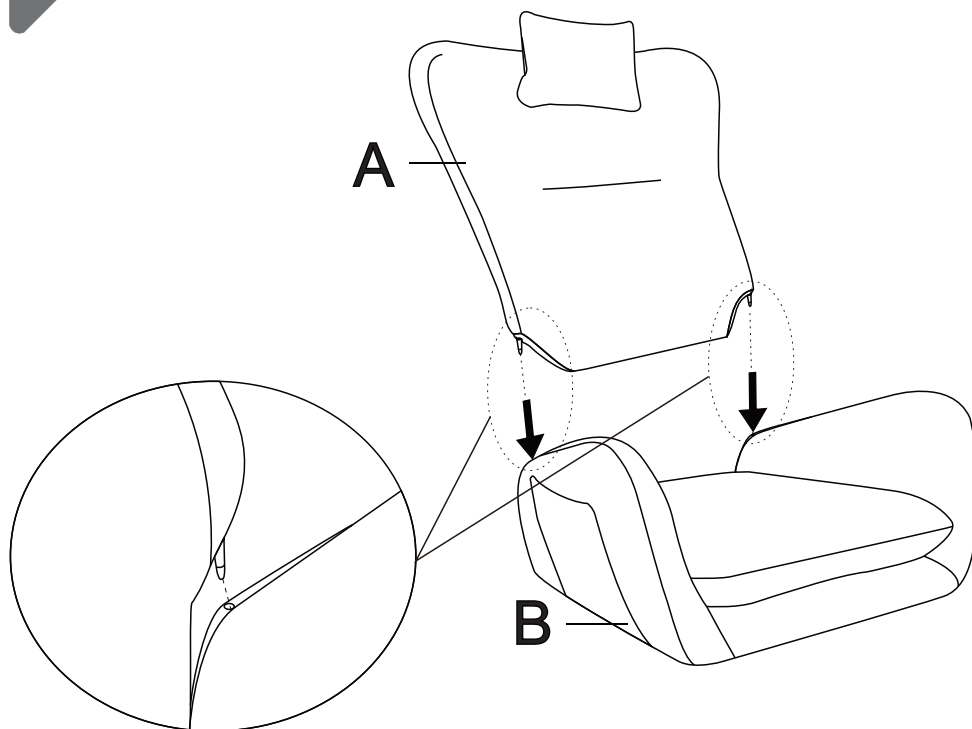

There are 2 cannon baron on the bottom of the back,
please insert them into the holes on the armrest.


Attention :

All steps please follow this rule.

Before draw the screws tighten, please find the holes firstly.

2

Hold the backrest
and press down

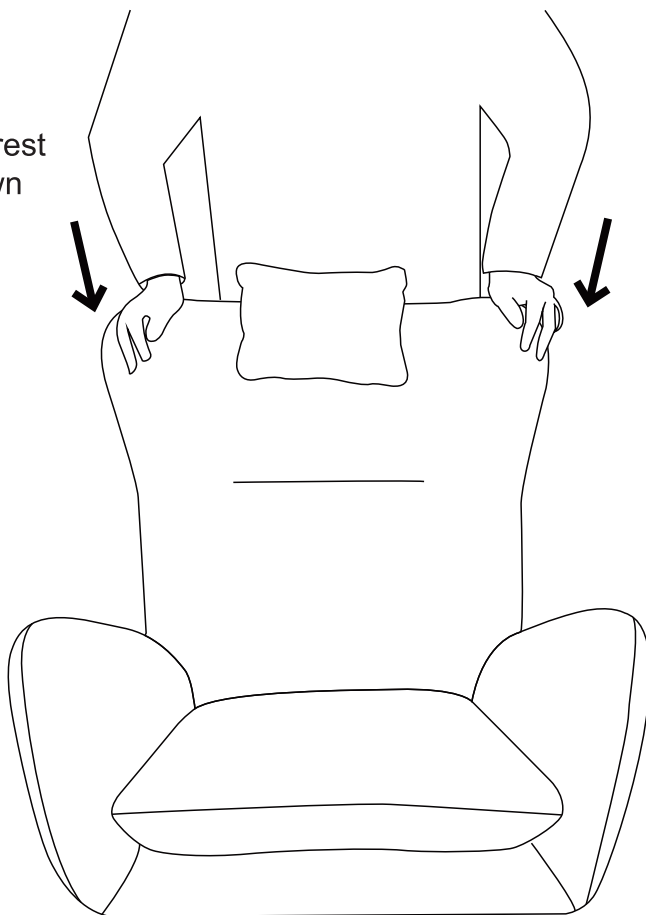


Attention :

All steps please follow this rule.

Before draw the screws tighten, please find the holes firstly.

3

Make sure the back and the bottom tight fit,
then draw the screws in, and tighten 100%.

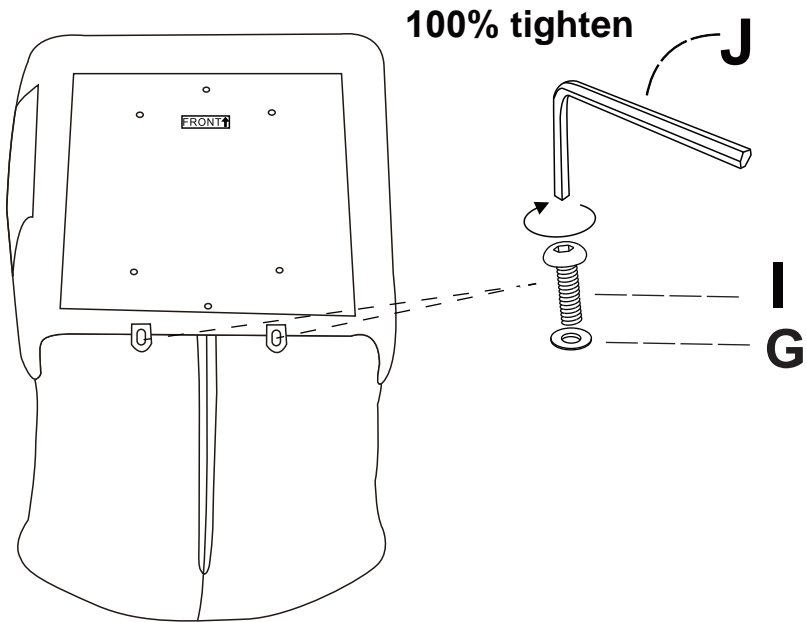

G



2PCS

I



2PCS


Attention :

All steps please follow this rule.

Before draw the screws tighten, please find the holes firstly.

4

Pay attention the E has a cross bar compare to F and tighten the screws to 50%.

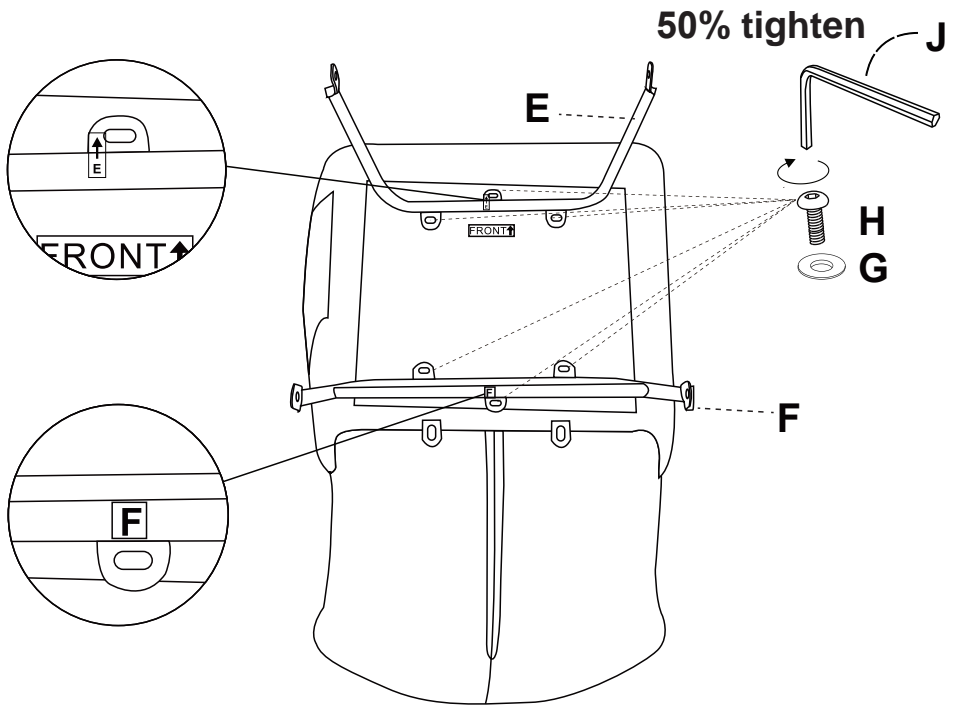

G 6PCS

H 6PCS


Attention :

All steps please follow this rule.

Before draw the screws tighten, please find the holes firstly.

5

Make sure the longer side of C and D is facing the back of the chair, and tighten the screws to 50%.

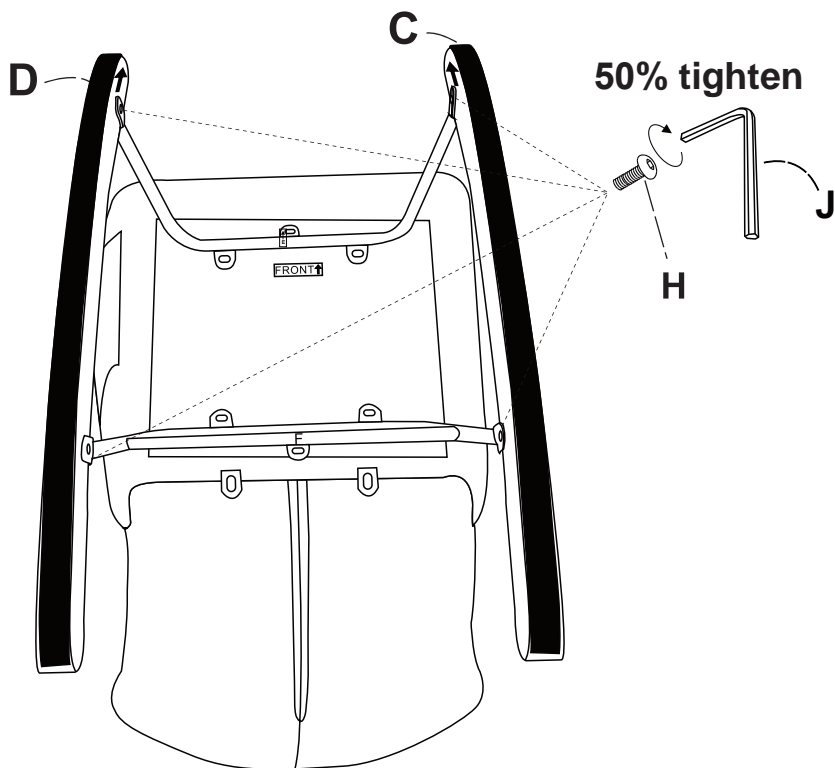

H



4PCS

Attention :

All steps please follow this rule.

Before draw the screws tighten, please find the holes firstly.

6

Tighten all of the screws to 100%.

