


# AI-BDCKBD

## Assembly Instructions

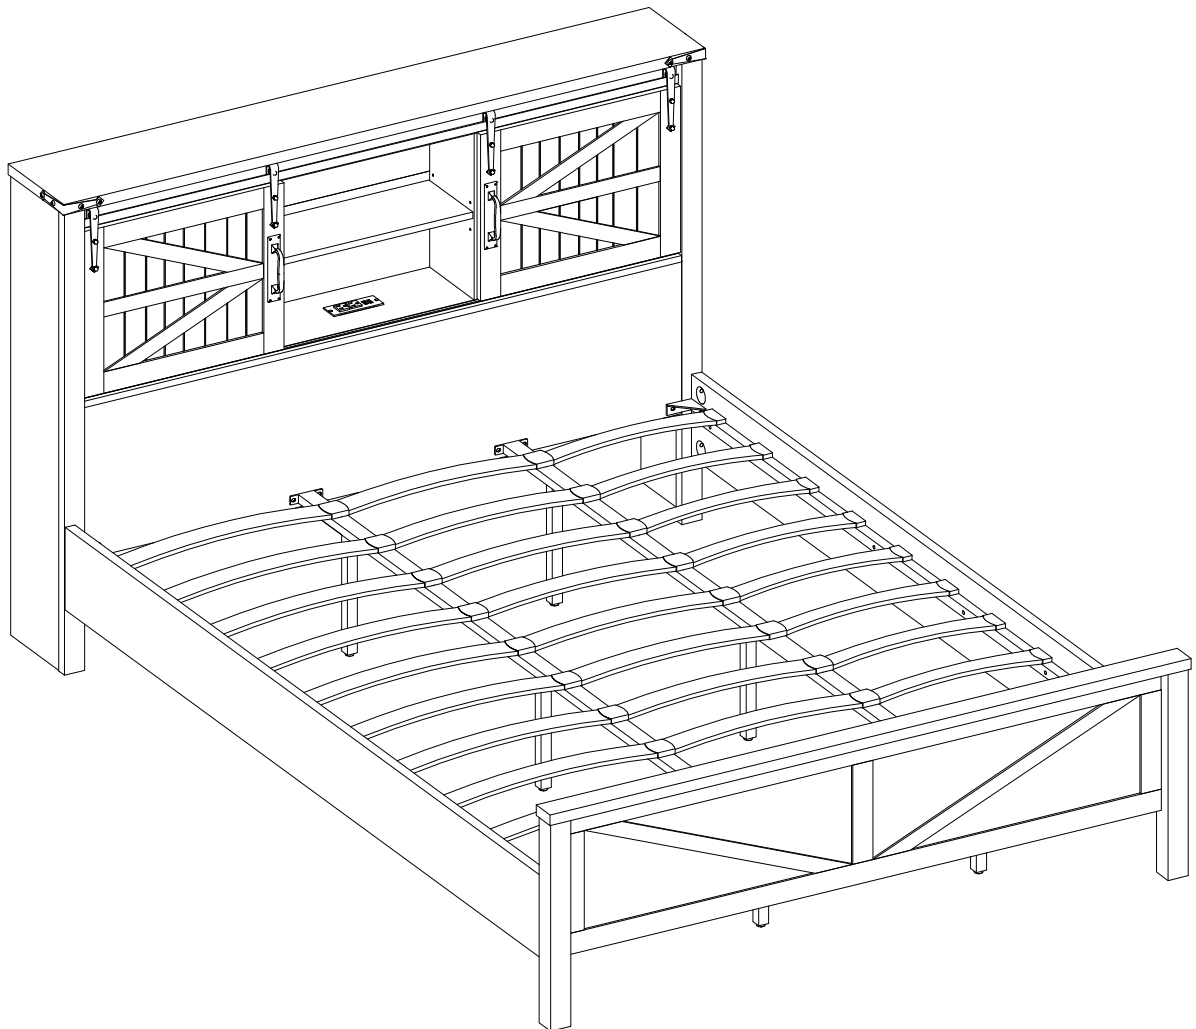

Customer Service E-mail Address : [xiuxiumaoyius@163.com](mailto:xiuxiumaoyius@163.com)

# General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.




In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.




- VI. A Phillips head screwdriver is required for the assembly of this product .

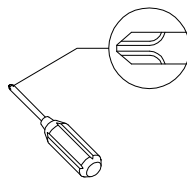





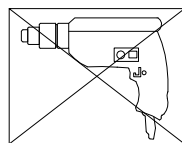






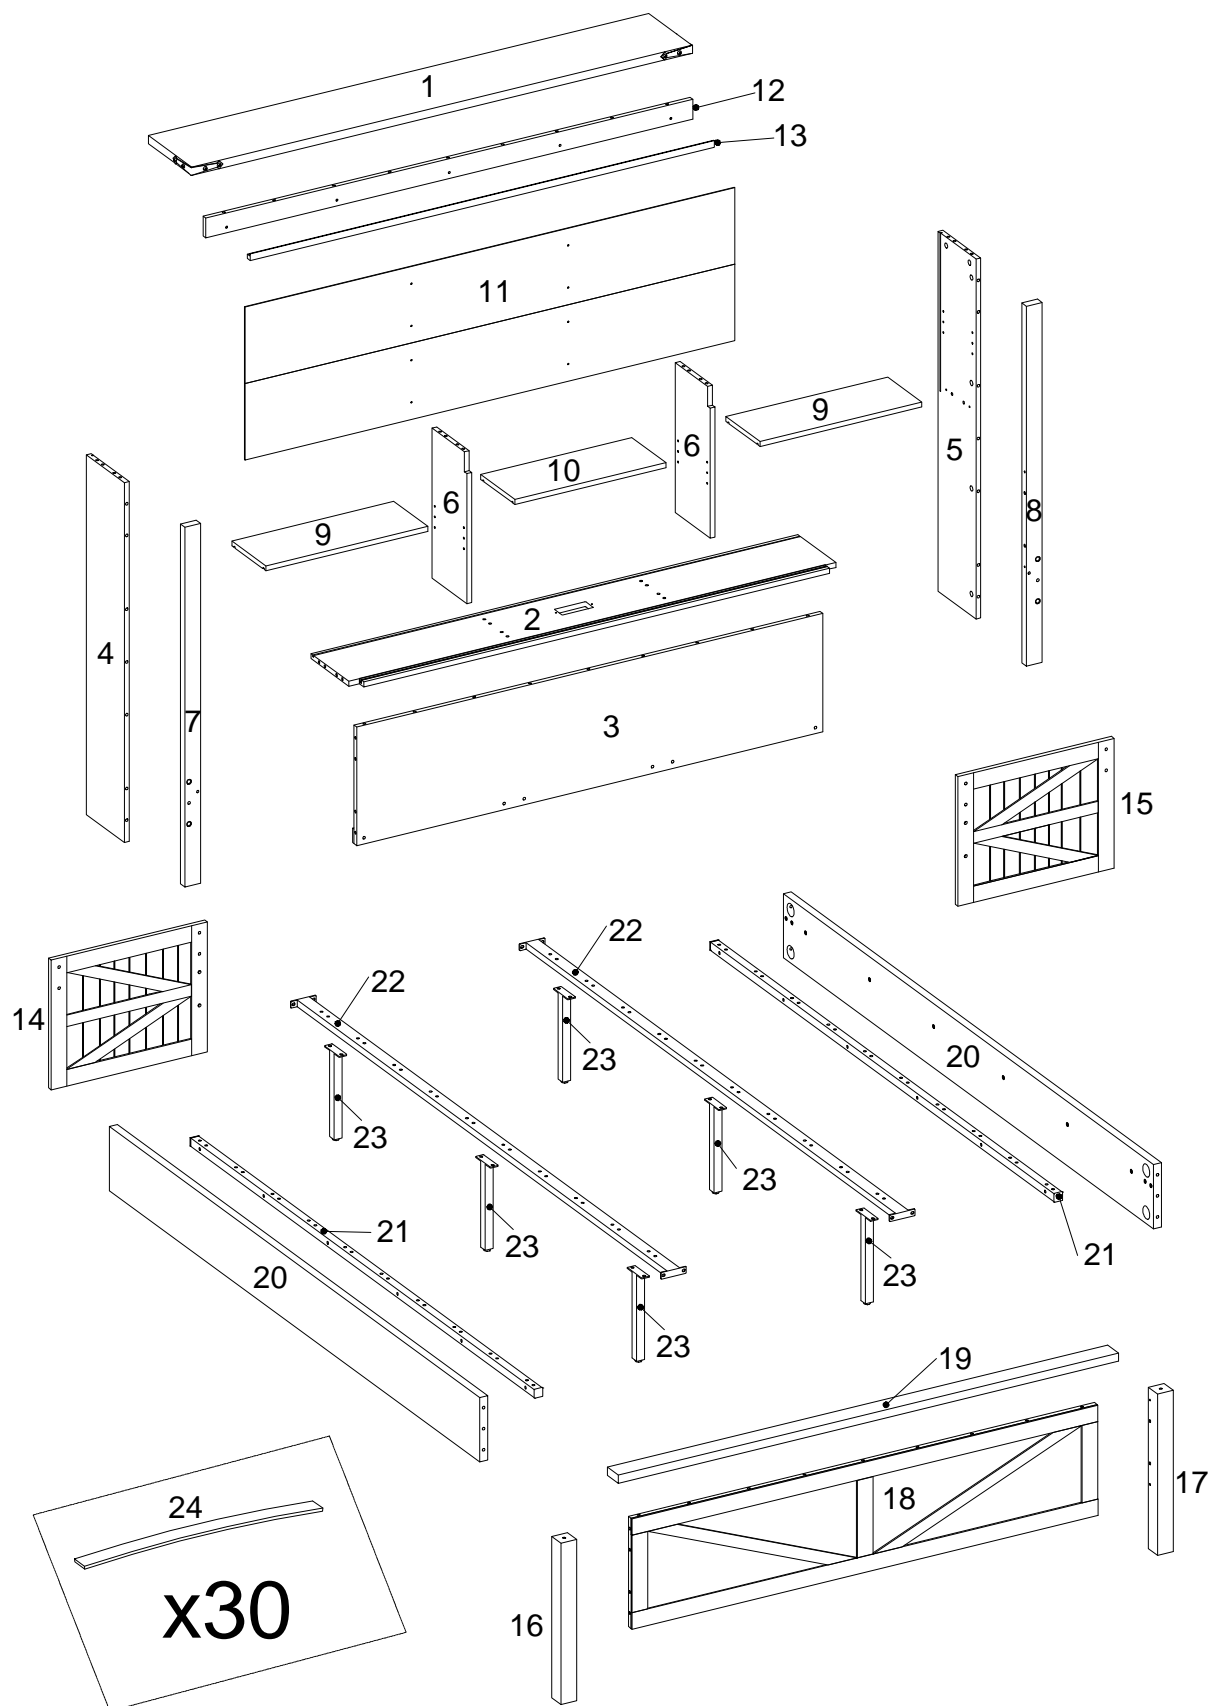








- VII. Power tools should not be used to assemble this product .




# Parts List








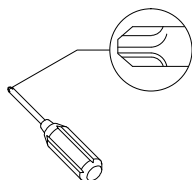




# Hardware List


A		Ø8x30mm	Wooden dowel	48 pcs
B		Ø6x35mm	Cam bolt	43 pcs
C		Ø15x11mm	Cam lock	43 pcs
D		Ø30mm	Sticker	43 pcs
E		Ø8x5x16mm	Shelf support pin	12 pcs
F			Glue tube	2 pcs
G			Plastic wedge	14 pcs
H		Ø3x17mm	Flat-head screw	14 pcs
J		Ø6x14mm	Bolt	36 pcs
K		Ø6x40mm	Bolt	12 pcs
L		Ø4x12mm	Screw	16 pcs
M			Plate	4 pcs
N			Pulley	4 pcs
P			Nut	8 pcs
Q		Ø6x25mm	Bolt	13 pcs
R			Spanner Wrench	1 pc
S		Ø6x50mm	Screw	4 pcs
T		M 4	Allen wrench	1 pcs
U		Ø3.5x12mm	Screw	2 pcs
V			USB Interface	1 pcs



Philips head screwdriver required for assembly  
(not included)


# Hardware List

W			Handle	2 pcs
X		Ø4x16mm	Handle bolt	4 pcs
Y		Ø8x60mm	Bolt	8 pcs
Z			Washer	8 pcs
AA		Ø5/16mm	Nut	8 pcs
BB		Ø5/16mm	Wrench	1 pc
CC		Ø38mm	Sticker	8 pcs
DD			Single end plastic parts	20 pcs
EE			Double-ended plastic parts	20 pcs
FF			Triangular iron sheet	4 pcs

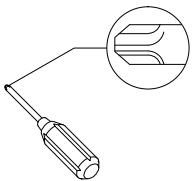


Philips head screwdriver required for assembly  
(not included)


## Step 1

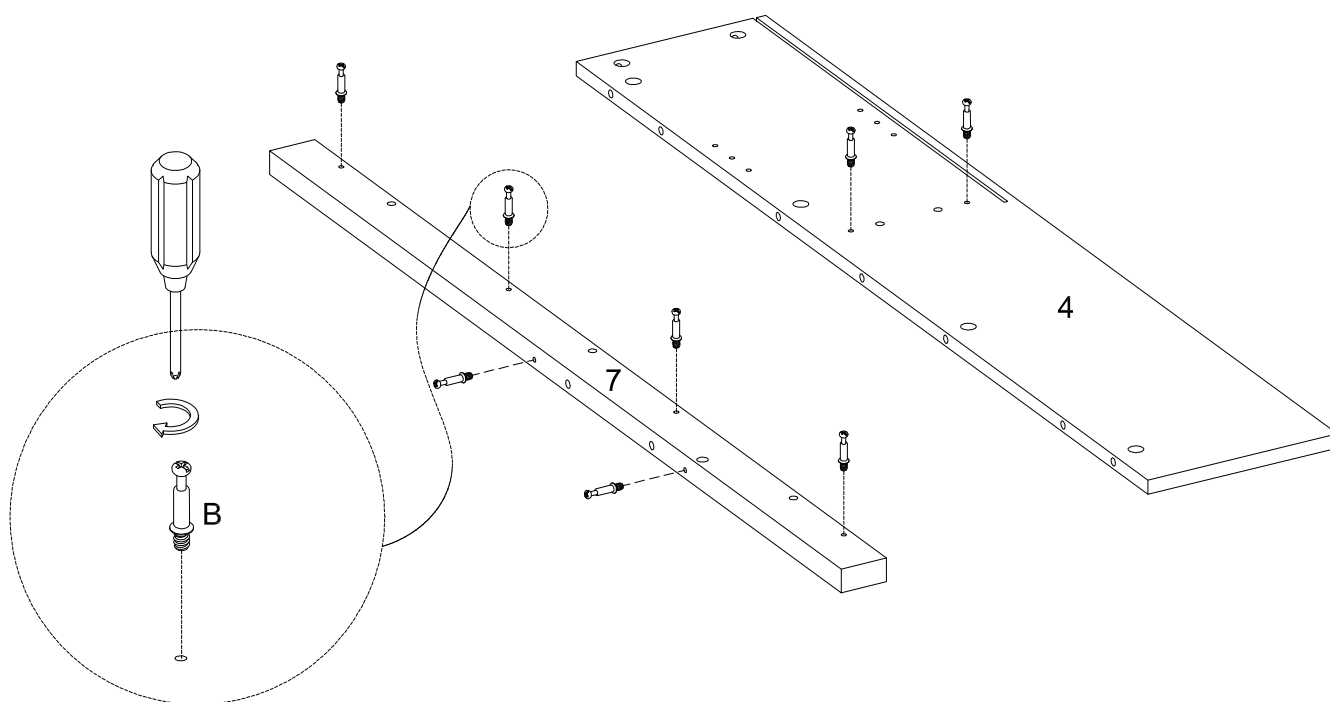


## Step 2

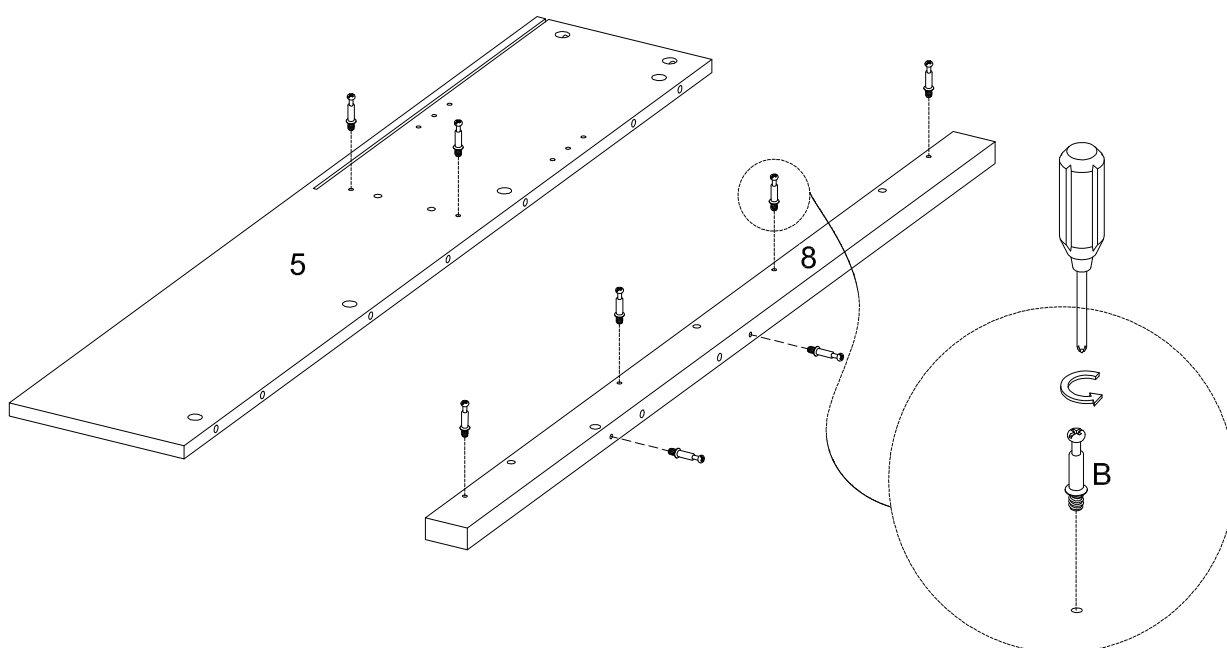


## Step 3

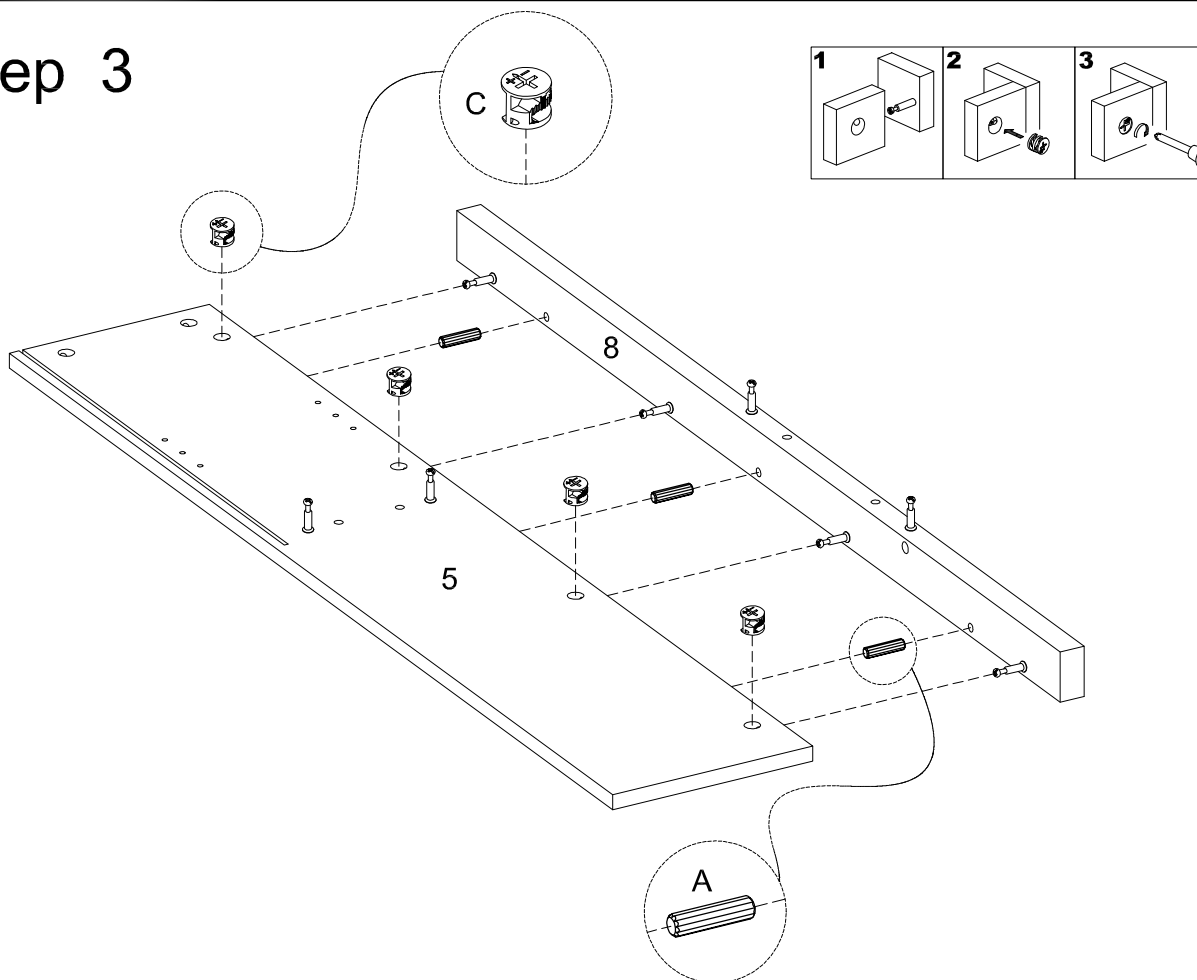


## Step 4

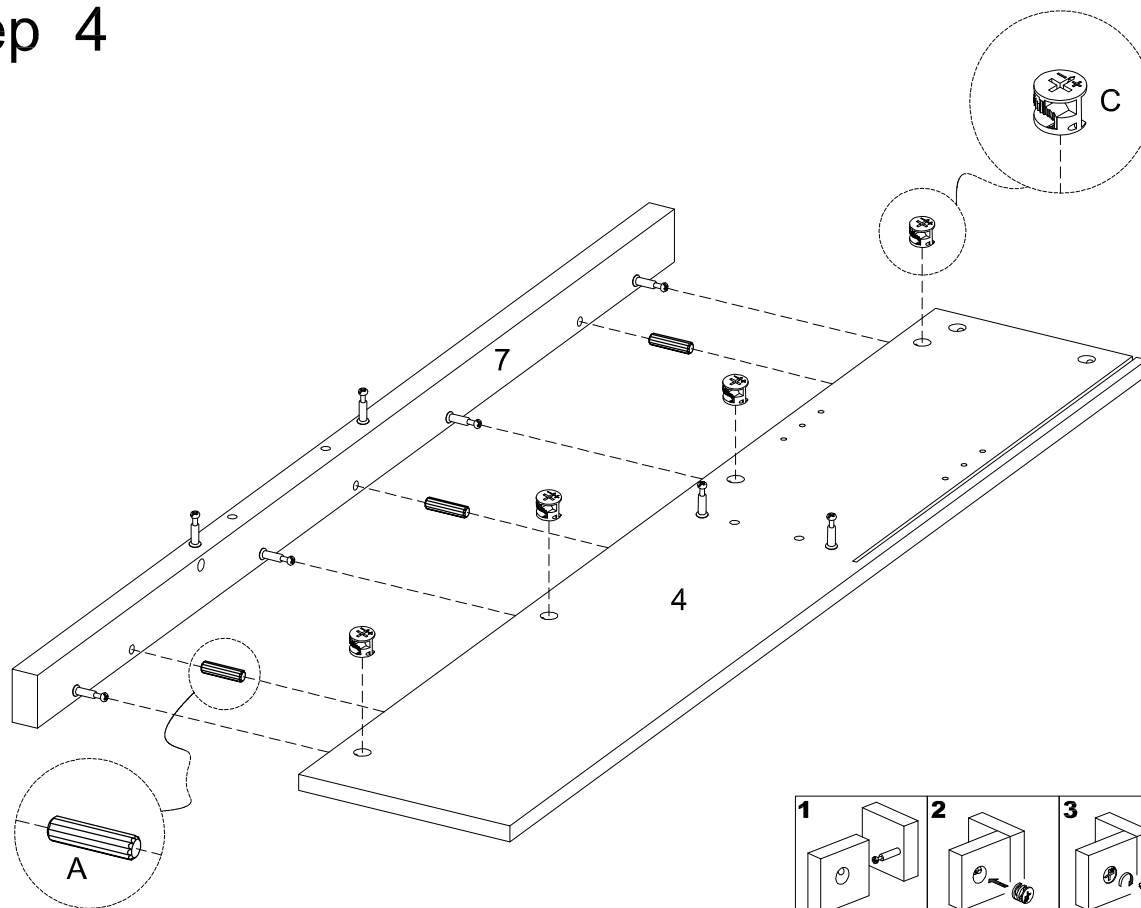

## Step 5

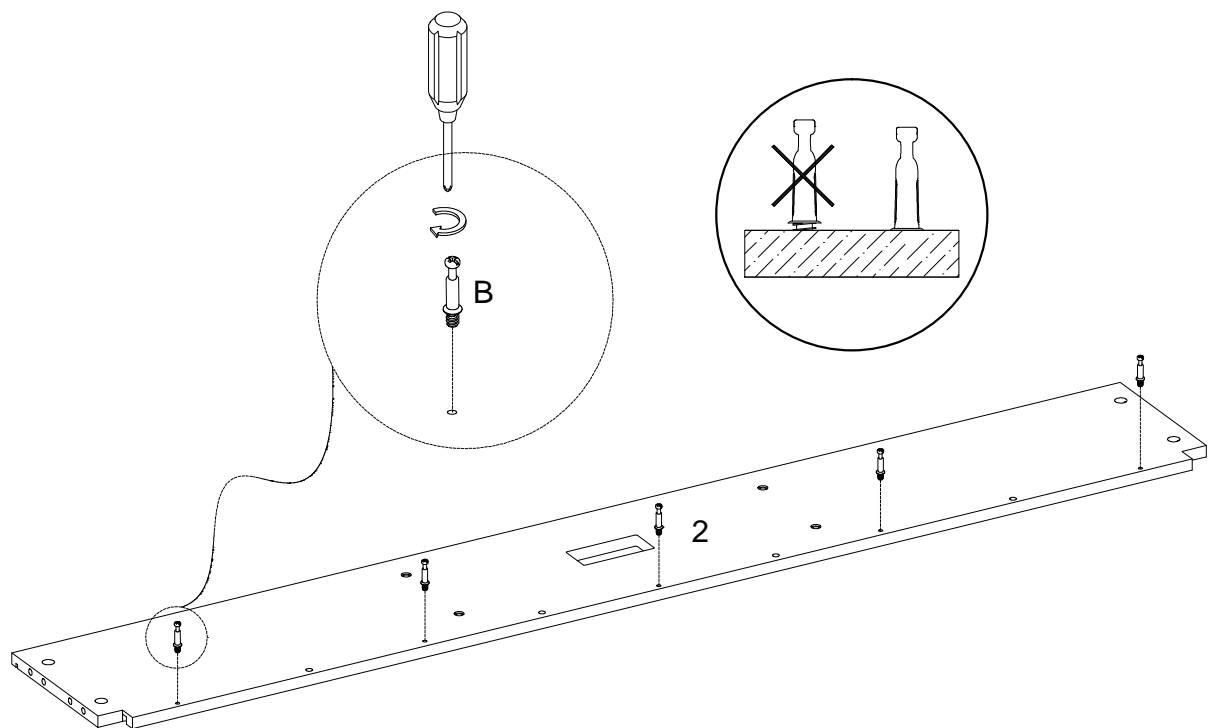


## Step 6

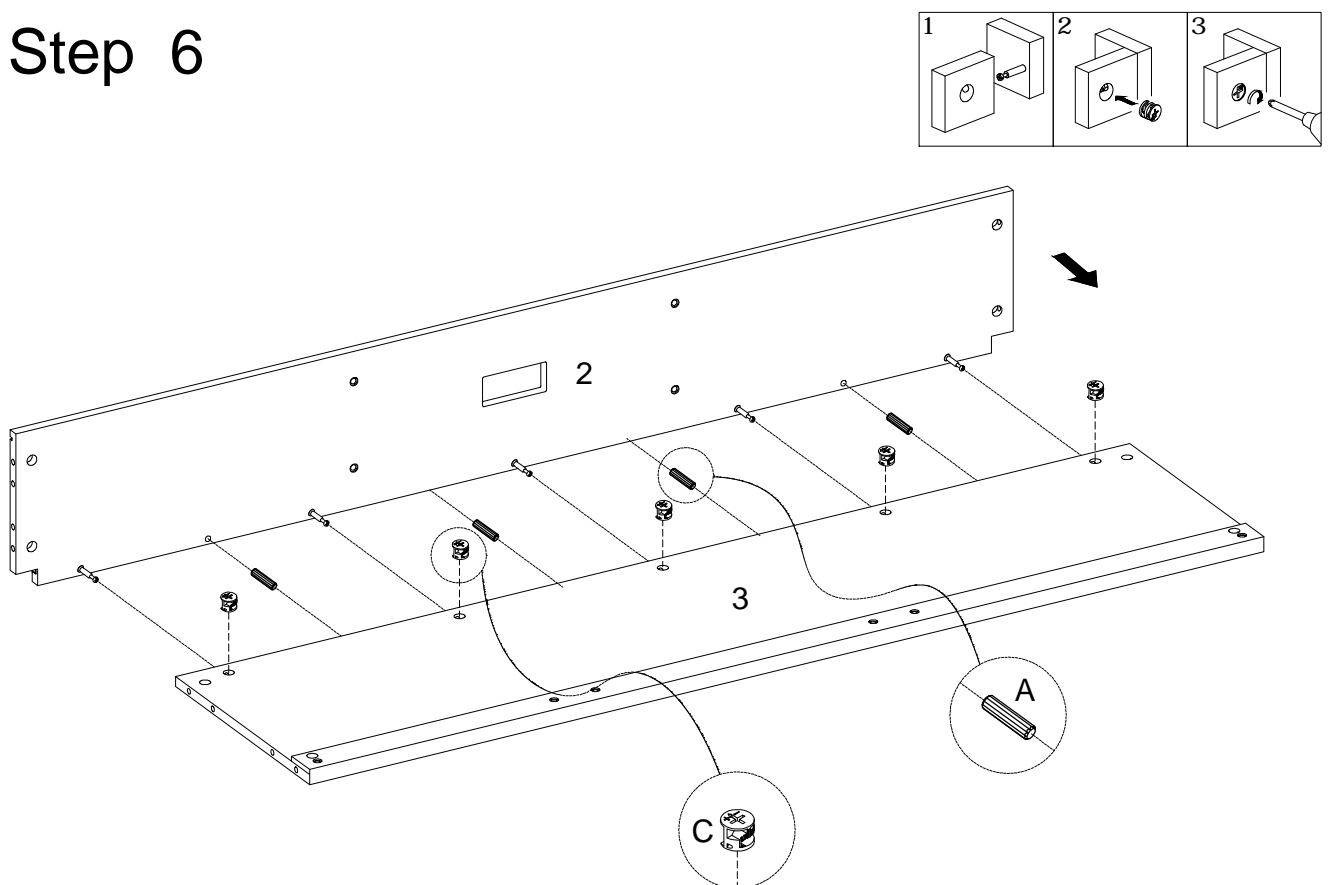





## Step 7

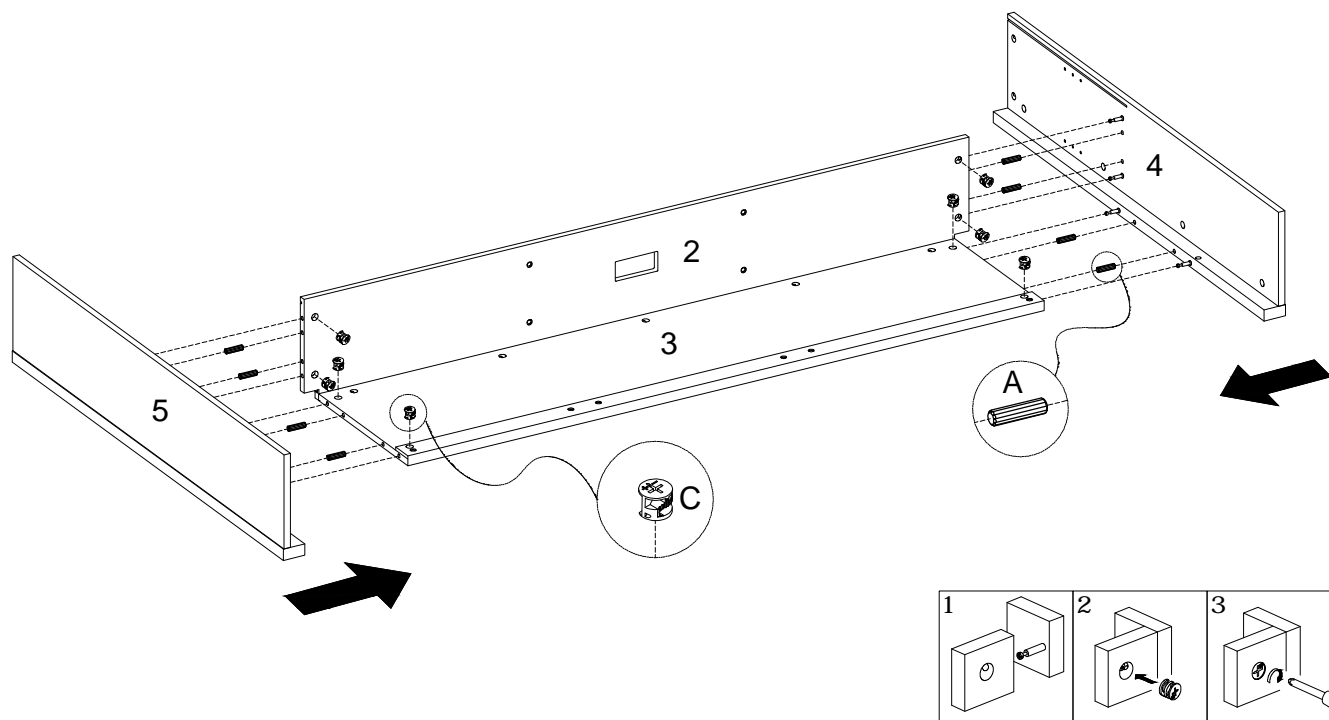


## Step 8

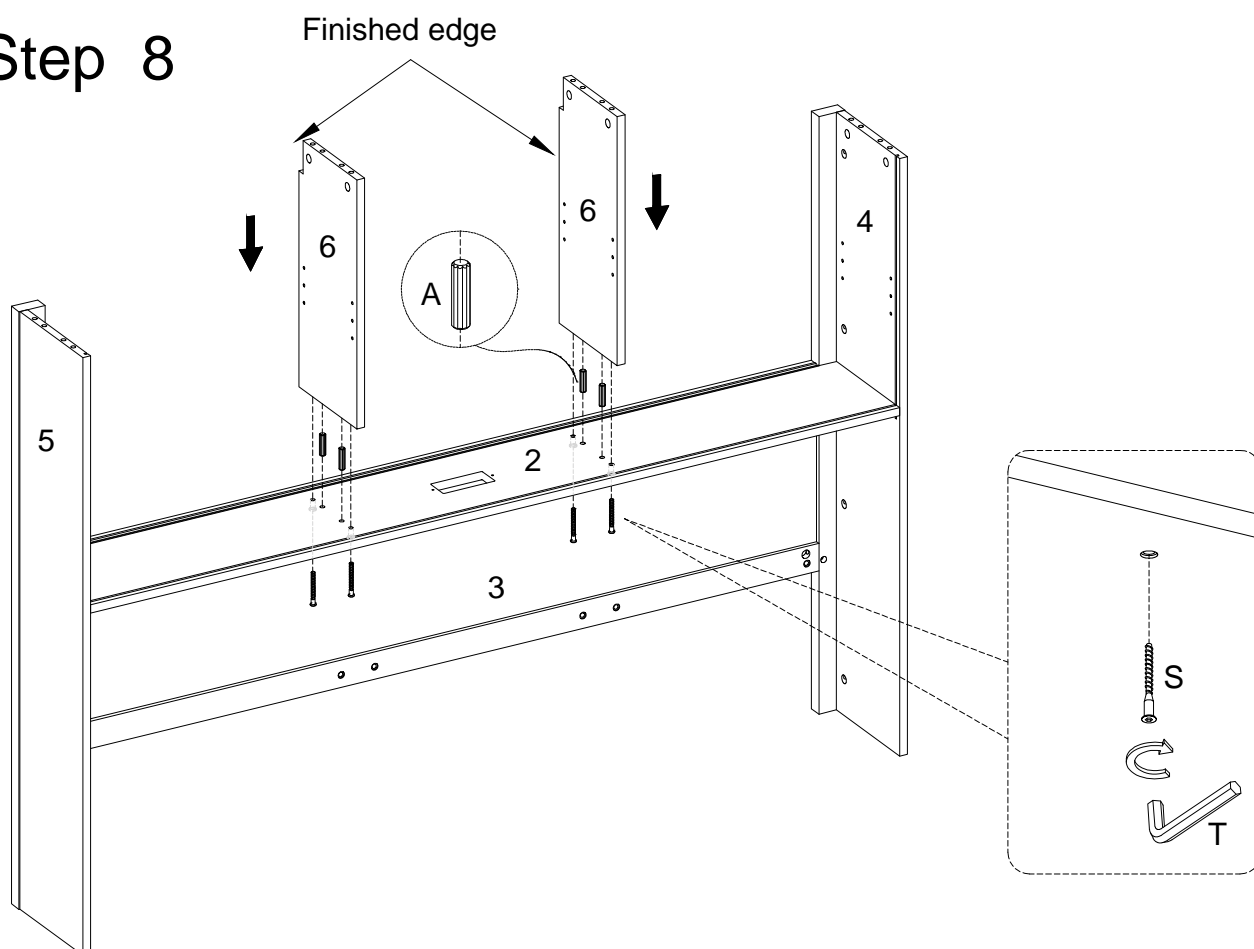


## Step 9

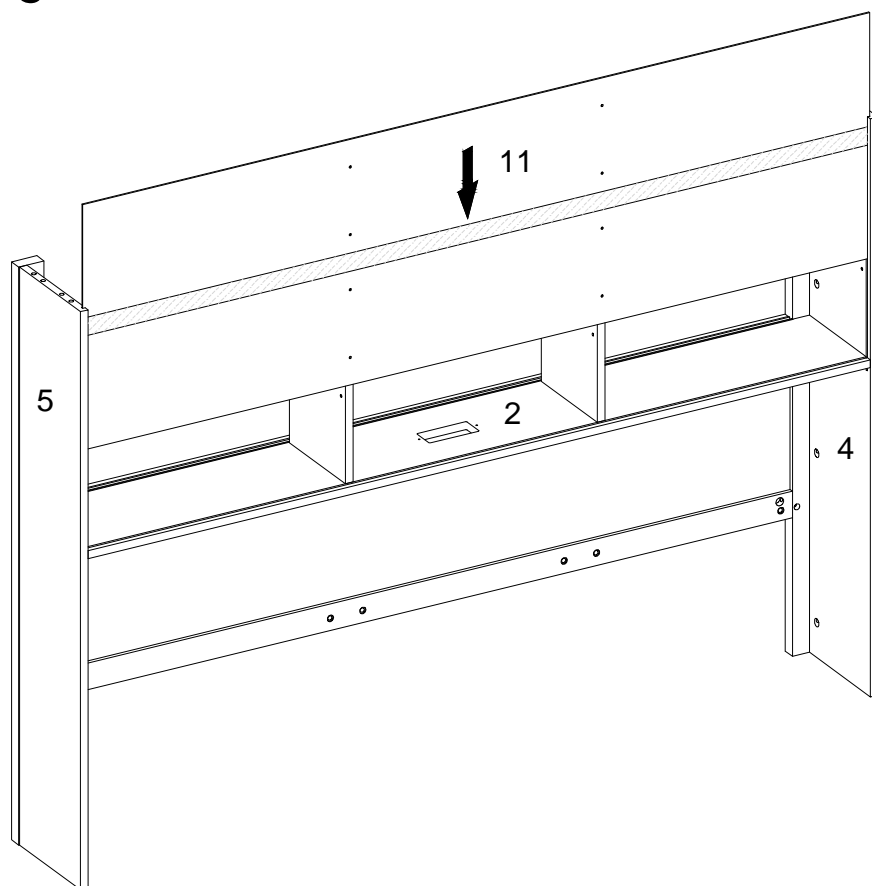


## Step 10

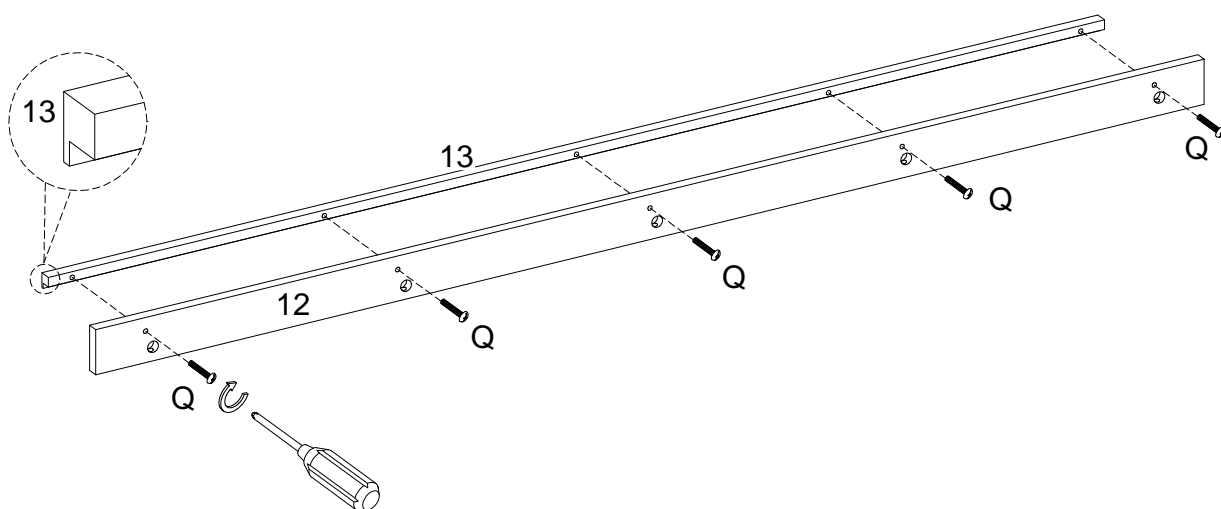


## Step 11

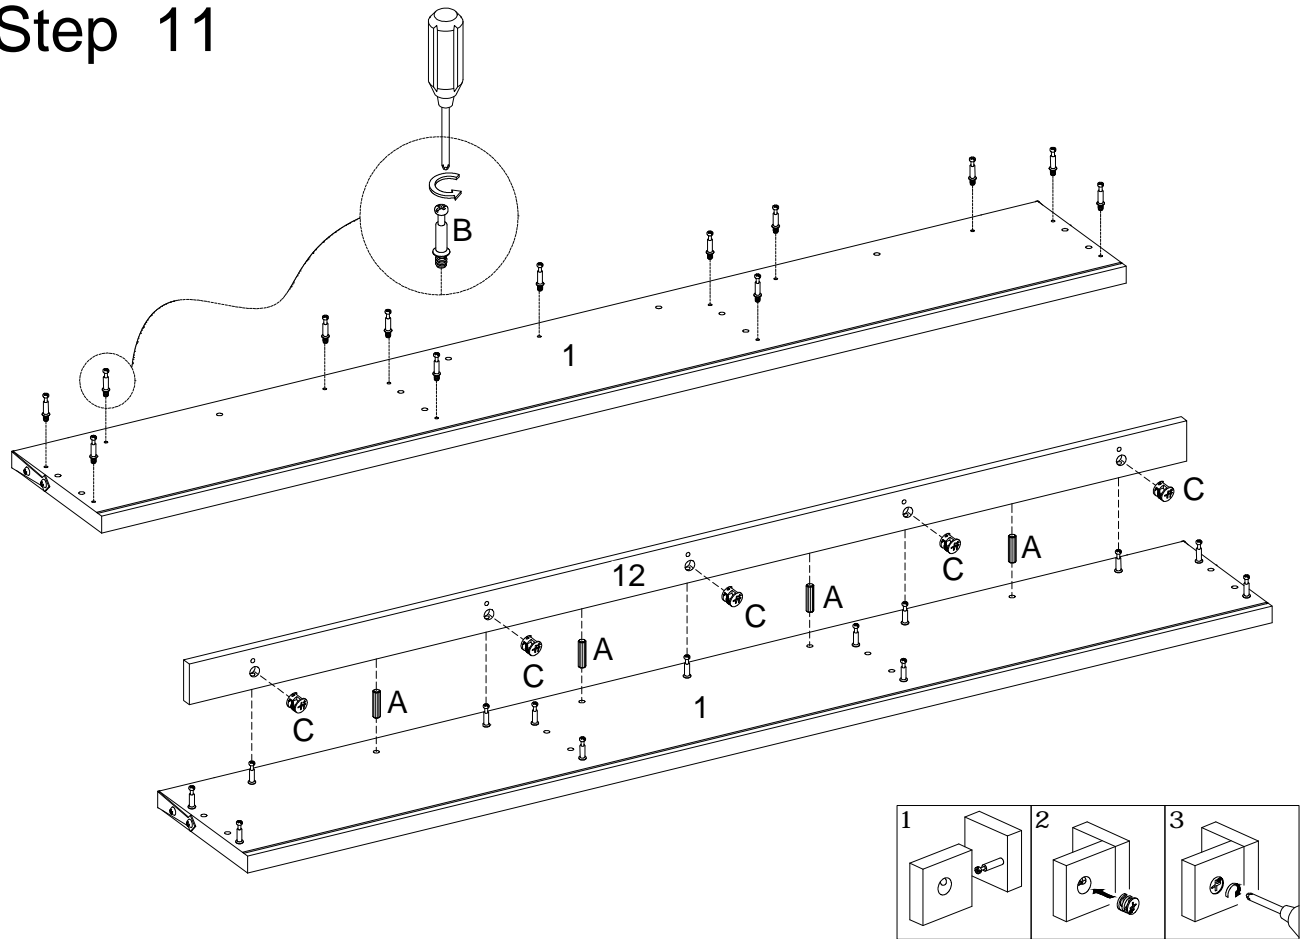


## Step 12

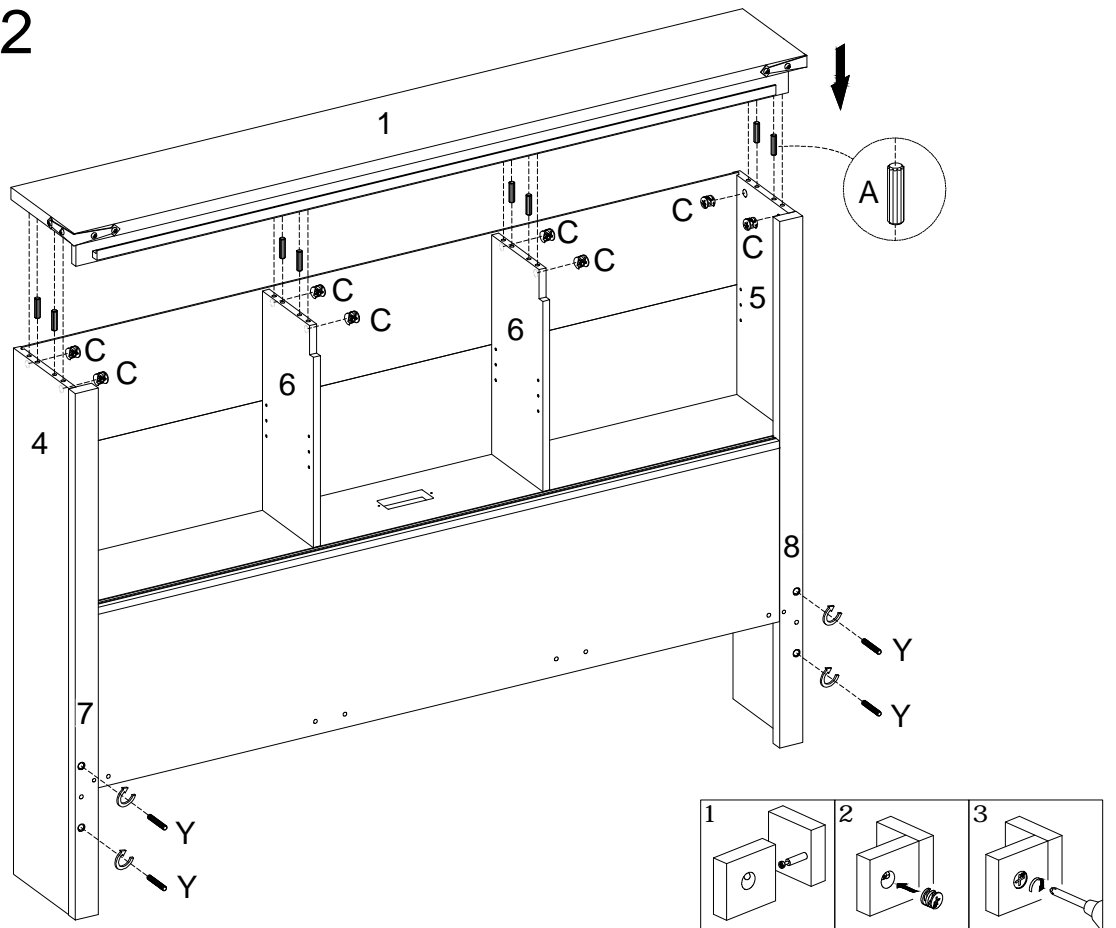


## Step 13

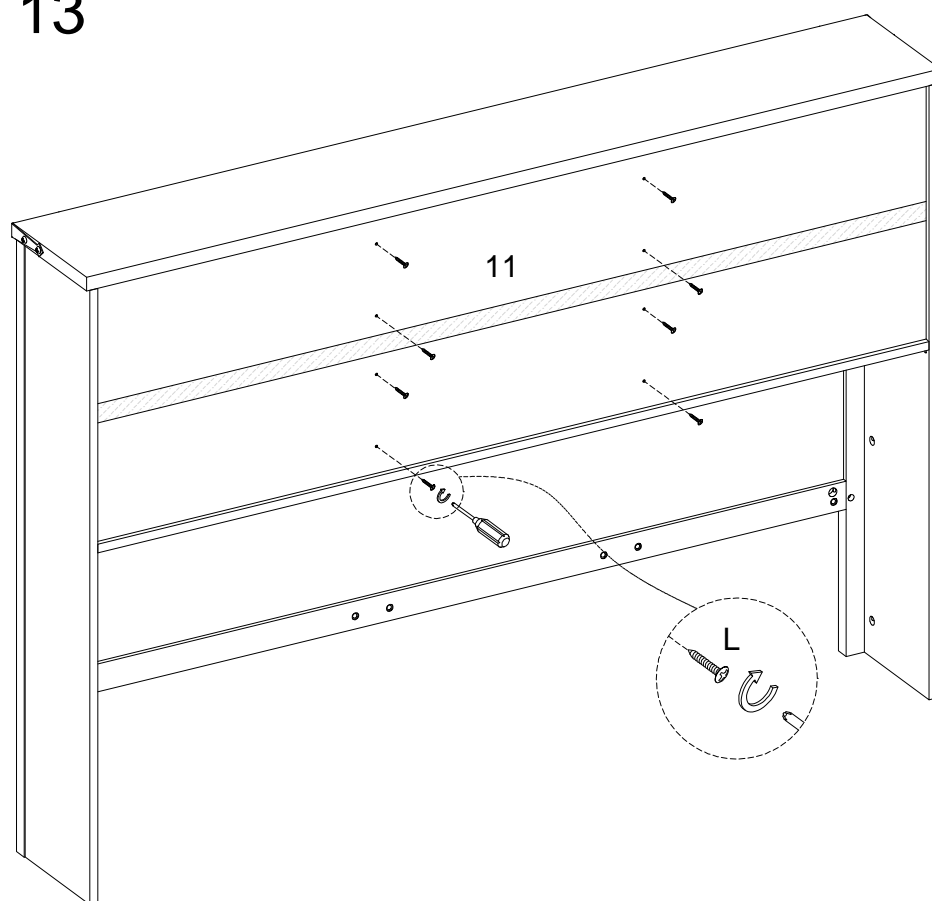


## Step 14

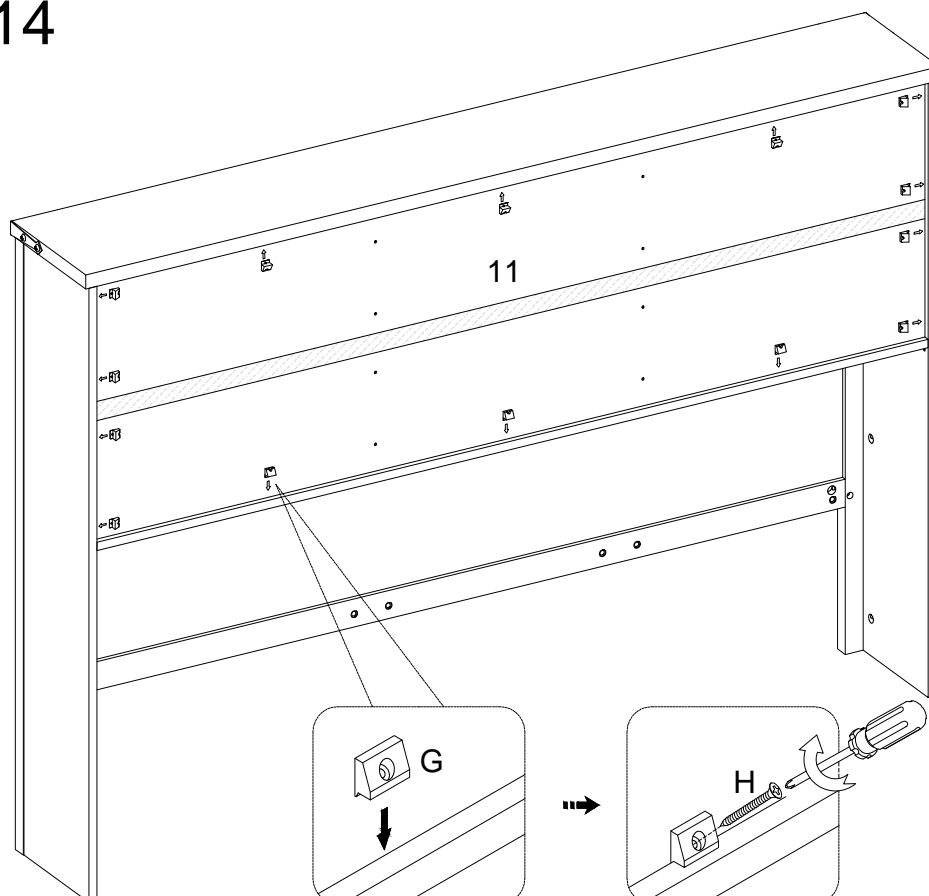


## Step 15

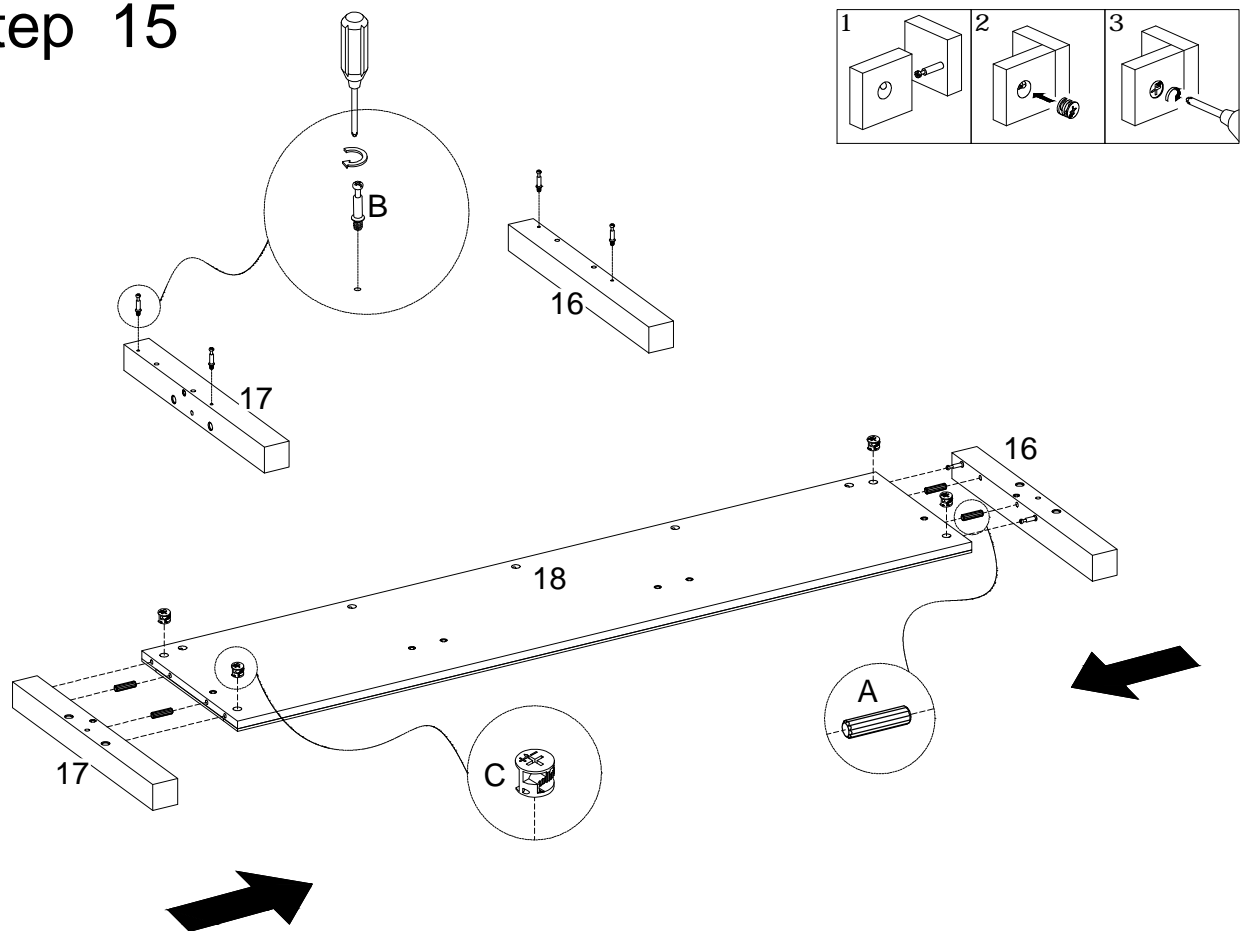

## Step 16

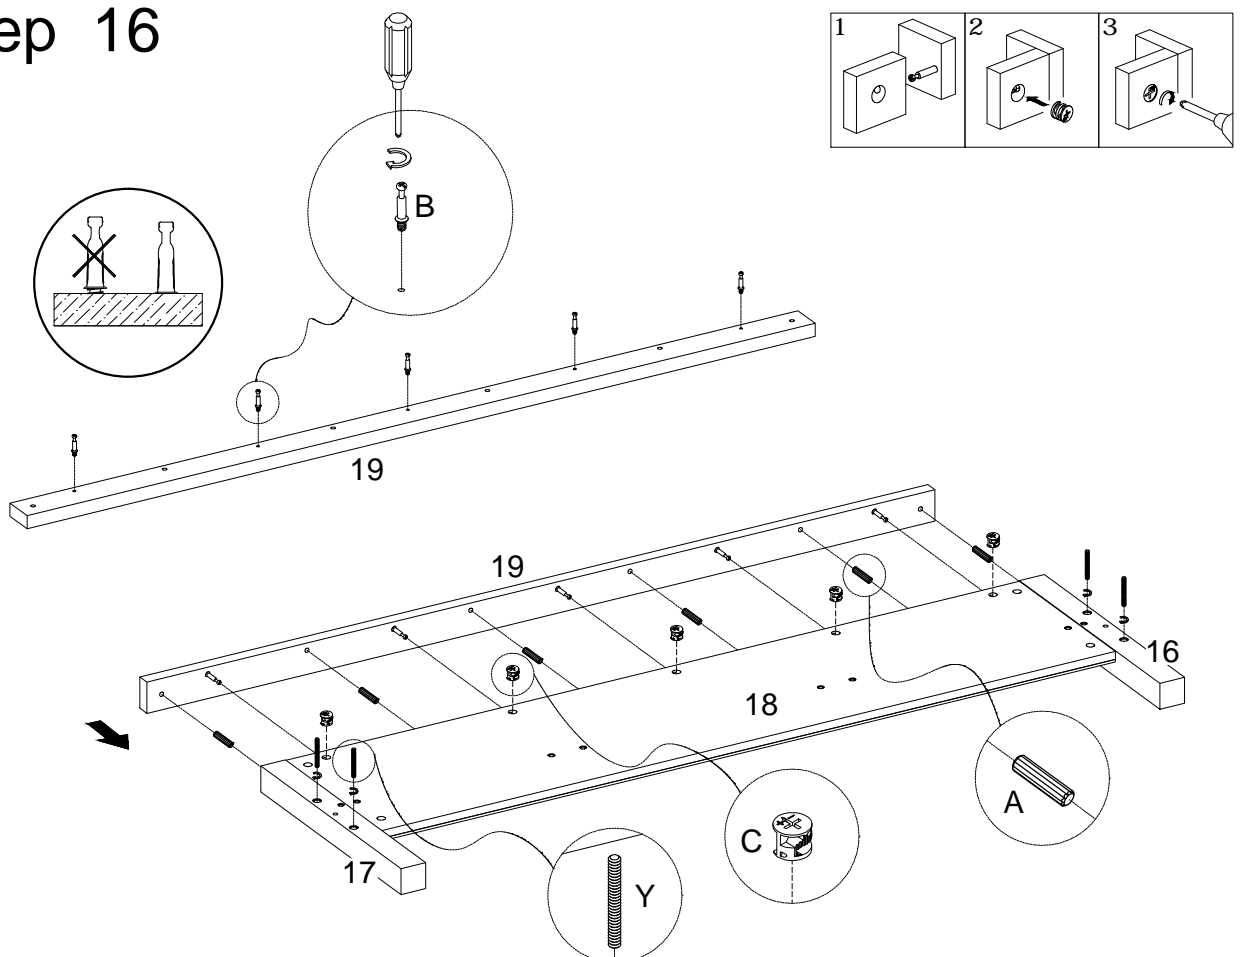


## Step 17

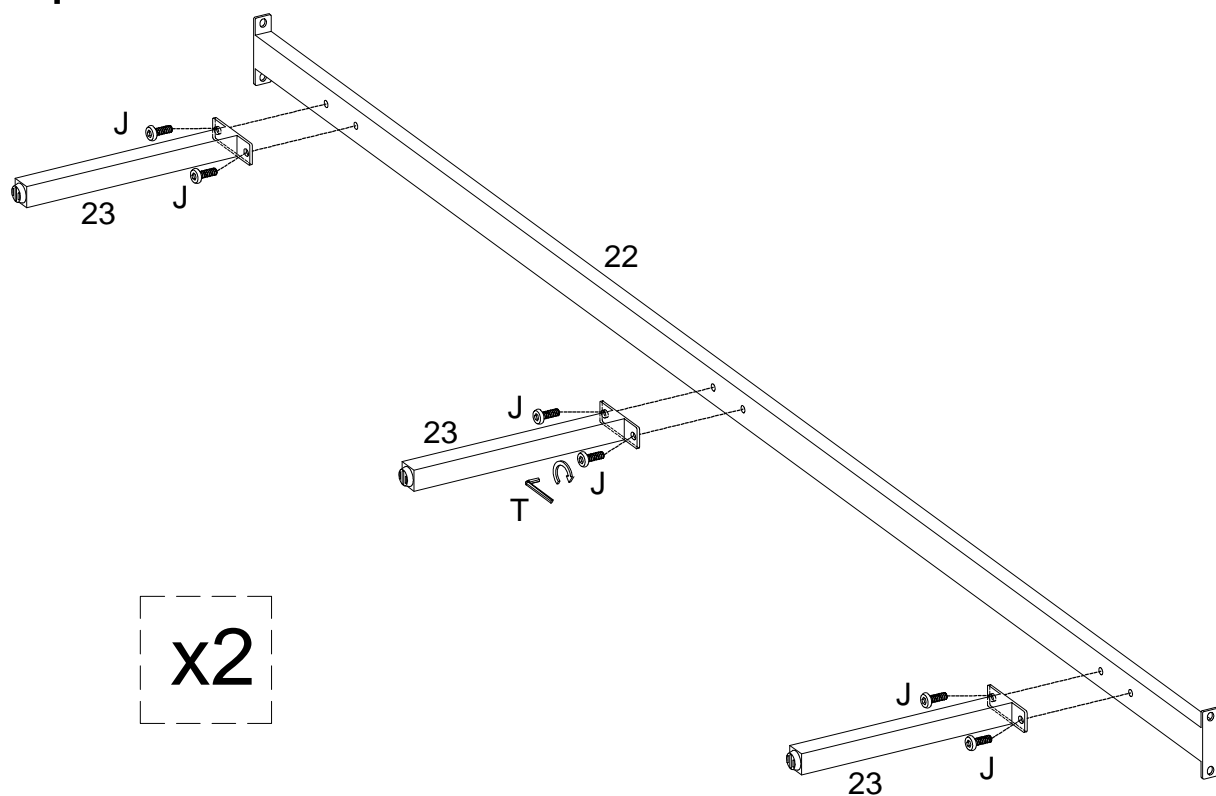


x2

## Step 18

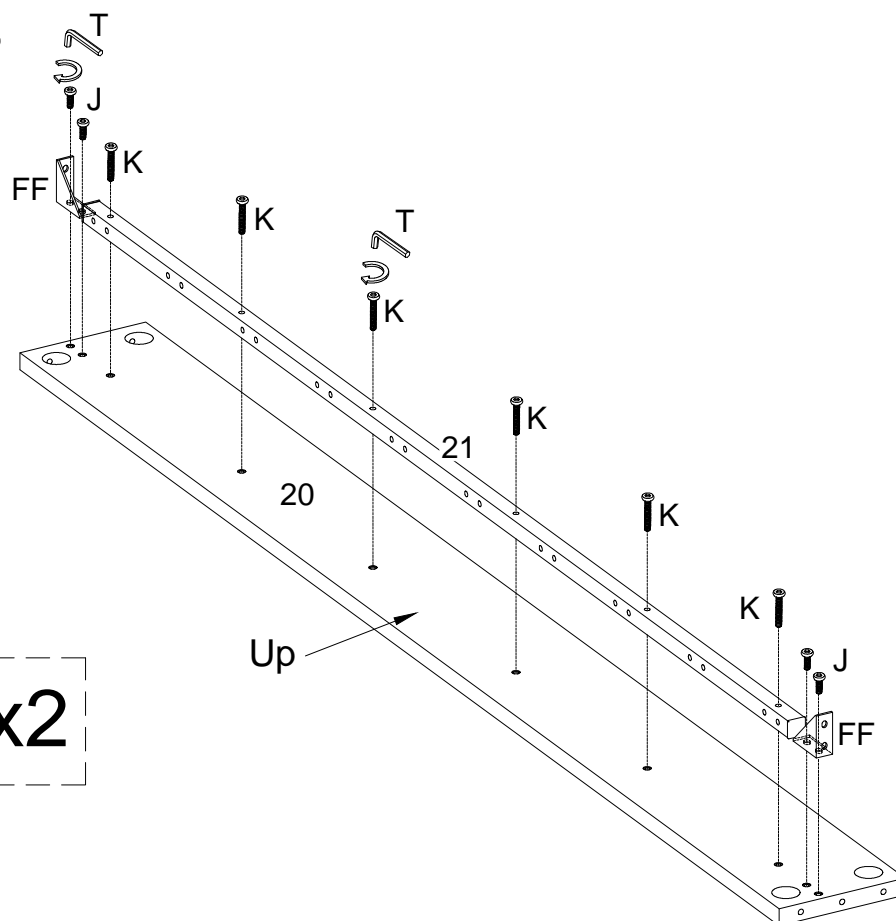


x2

## Step 19

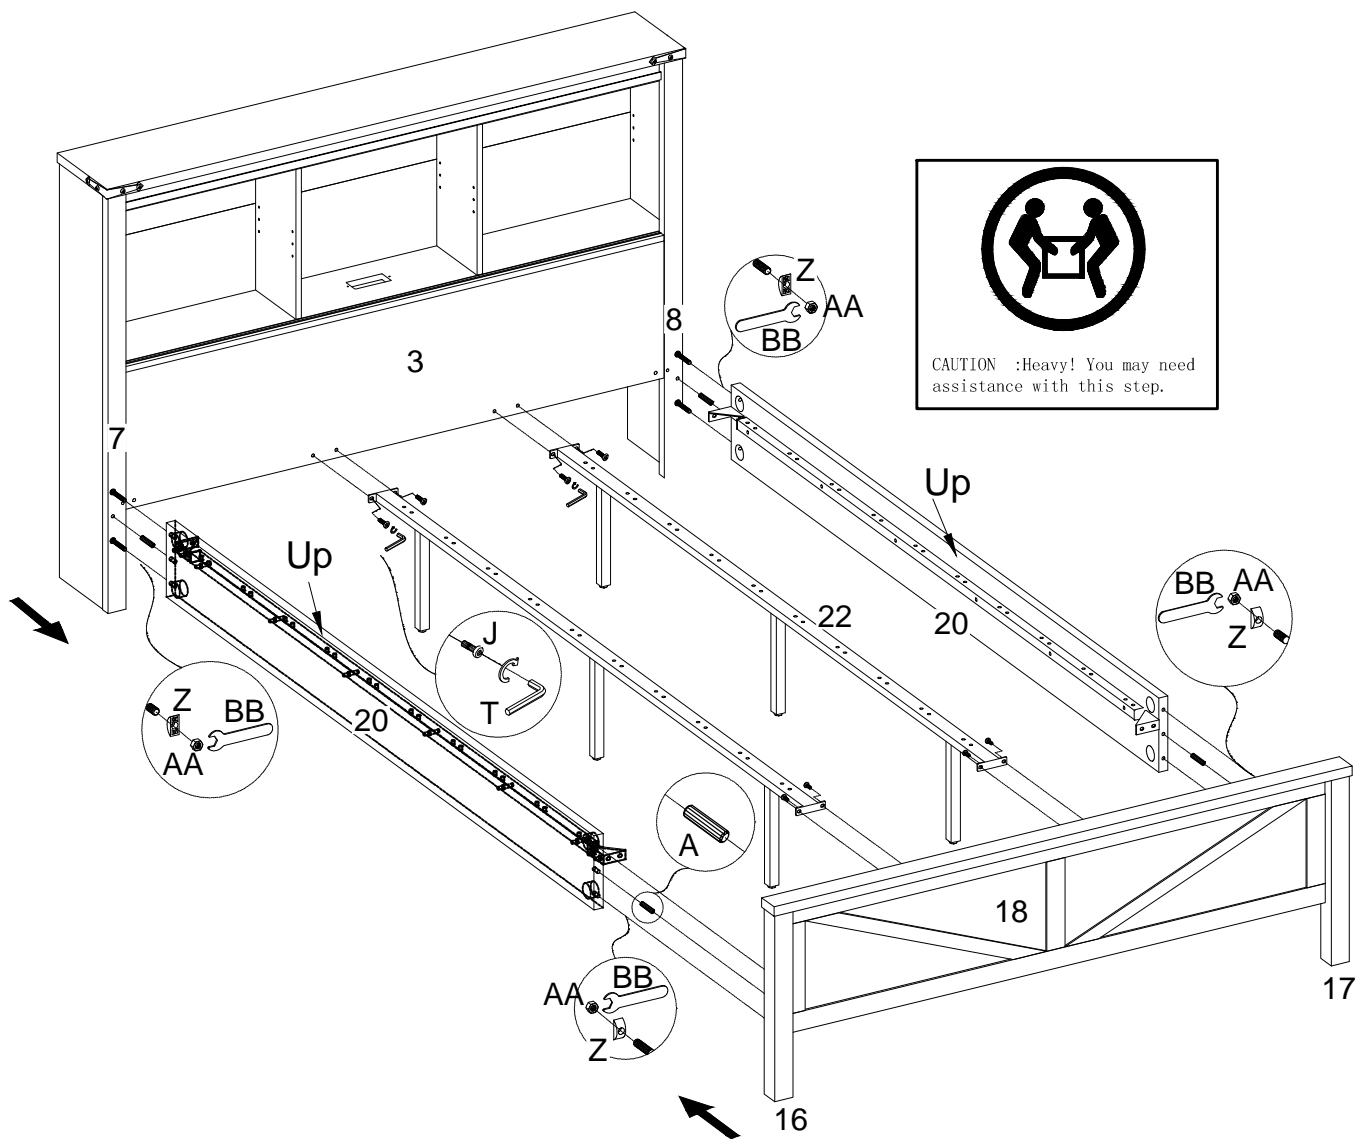


## Step 20

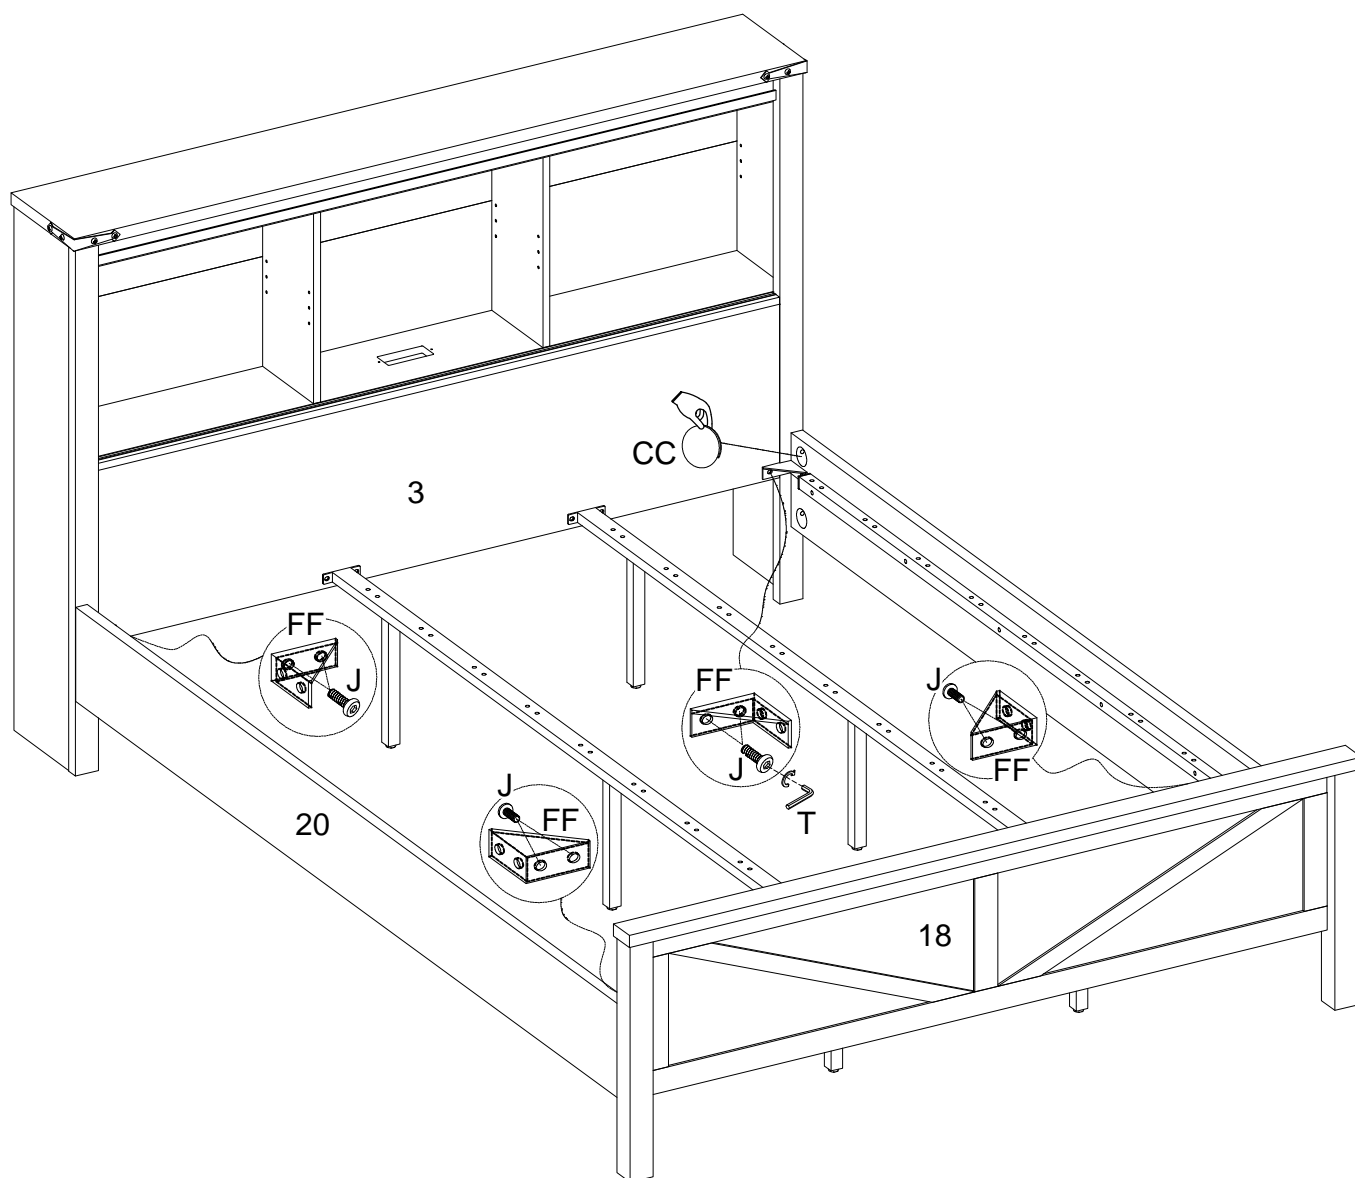





## Step 21

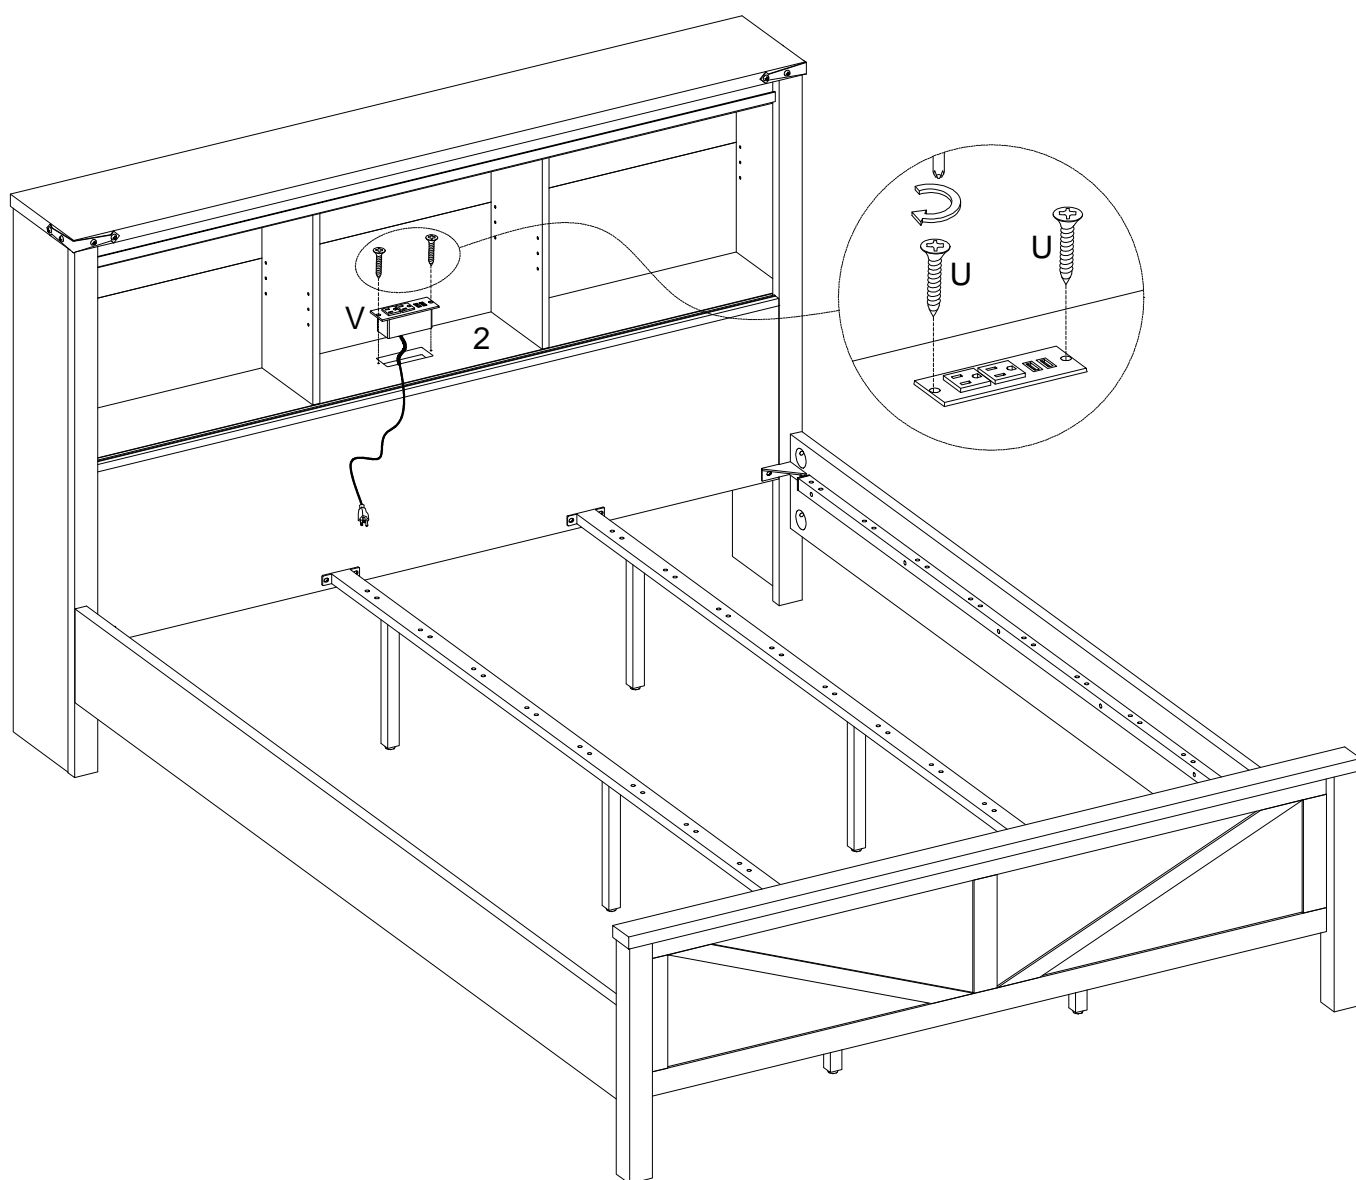


## Step 22

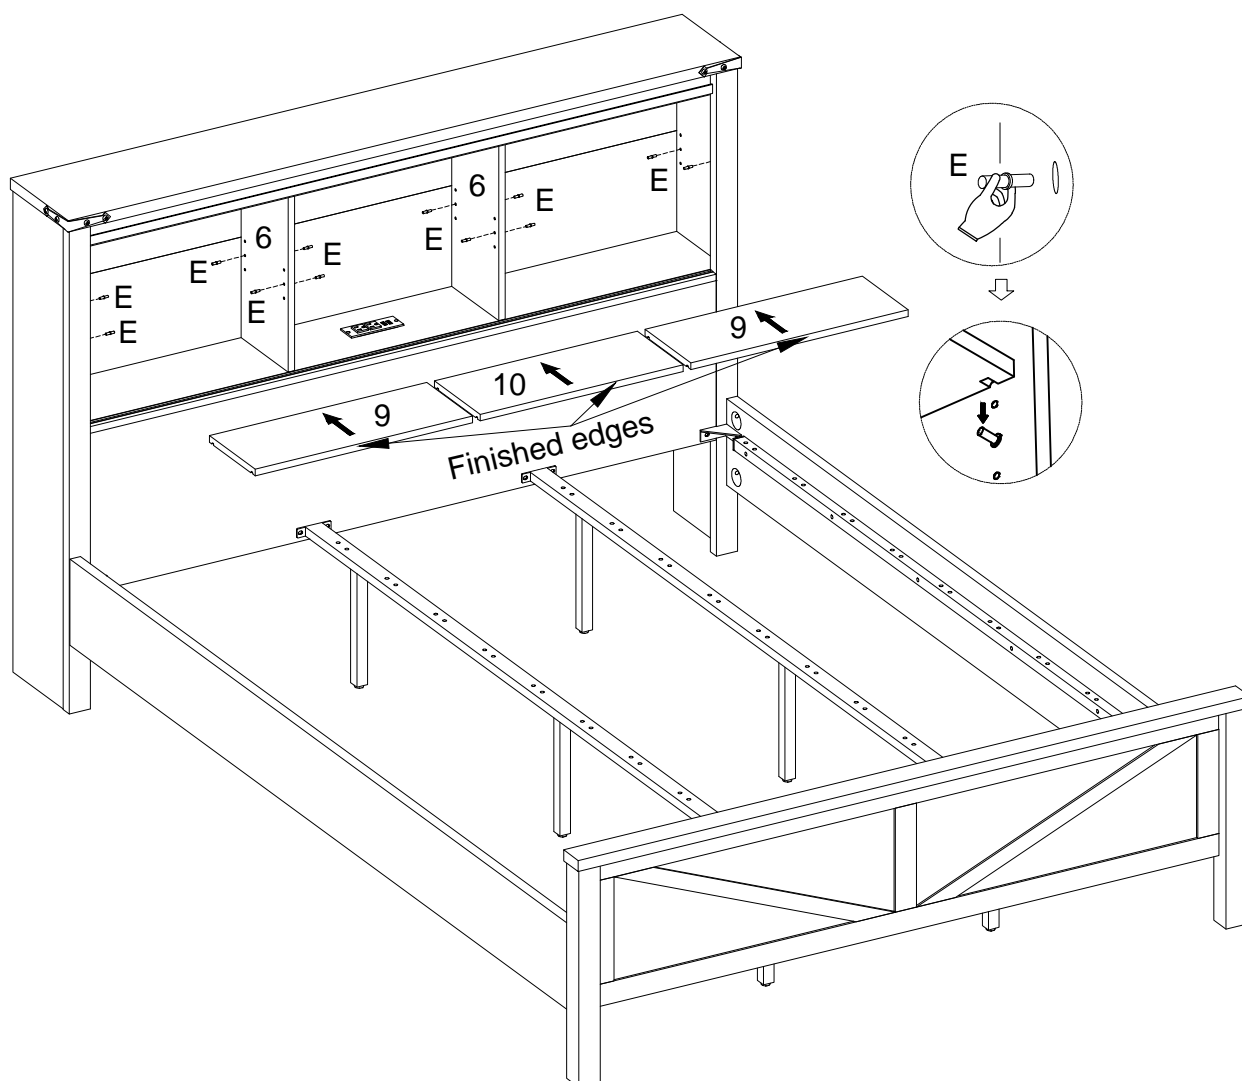



## Step 23

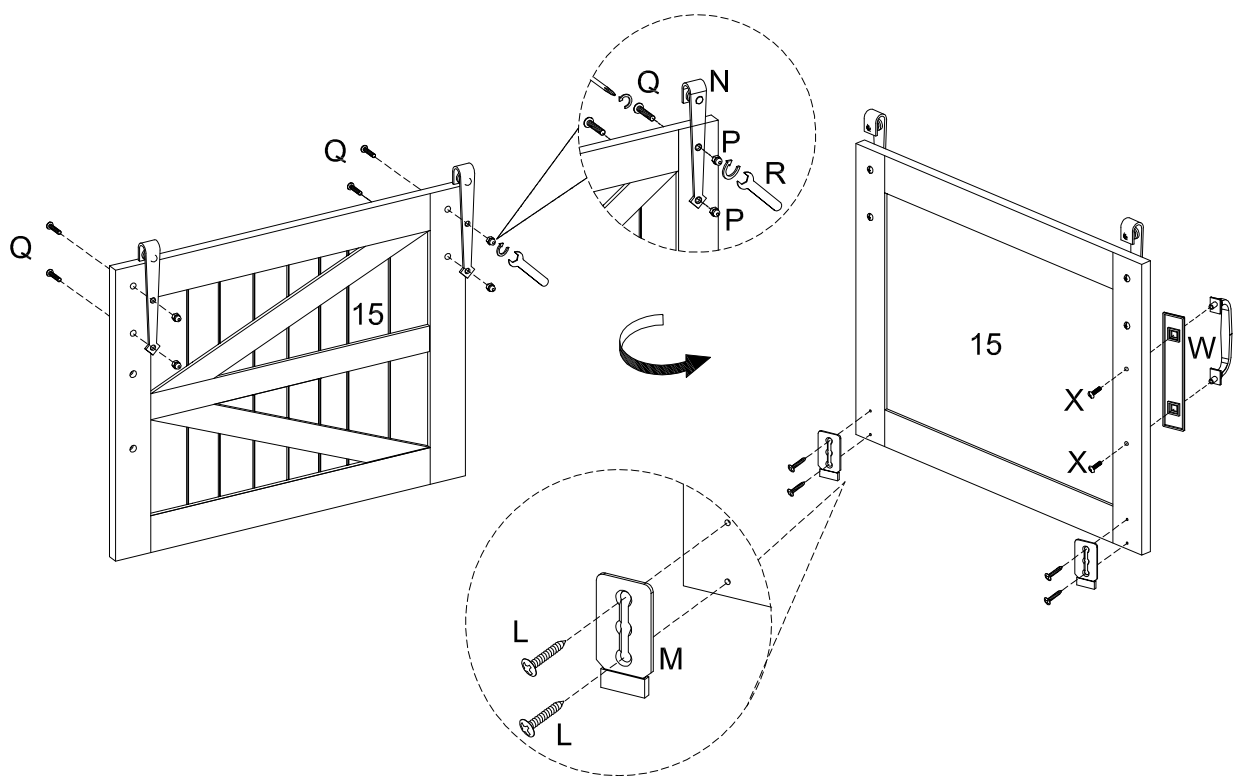


## Step 24

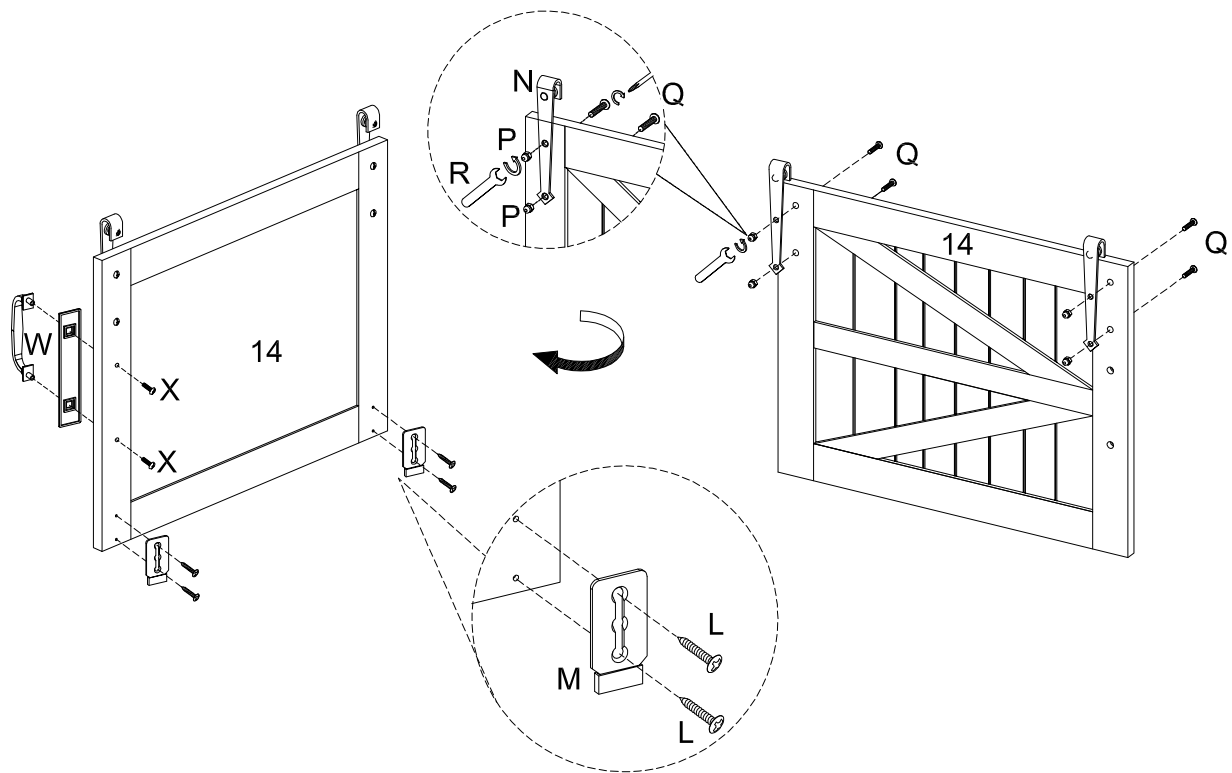



## Step 25

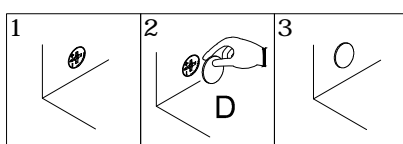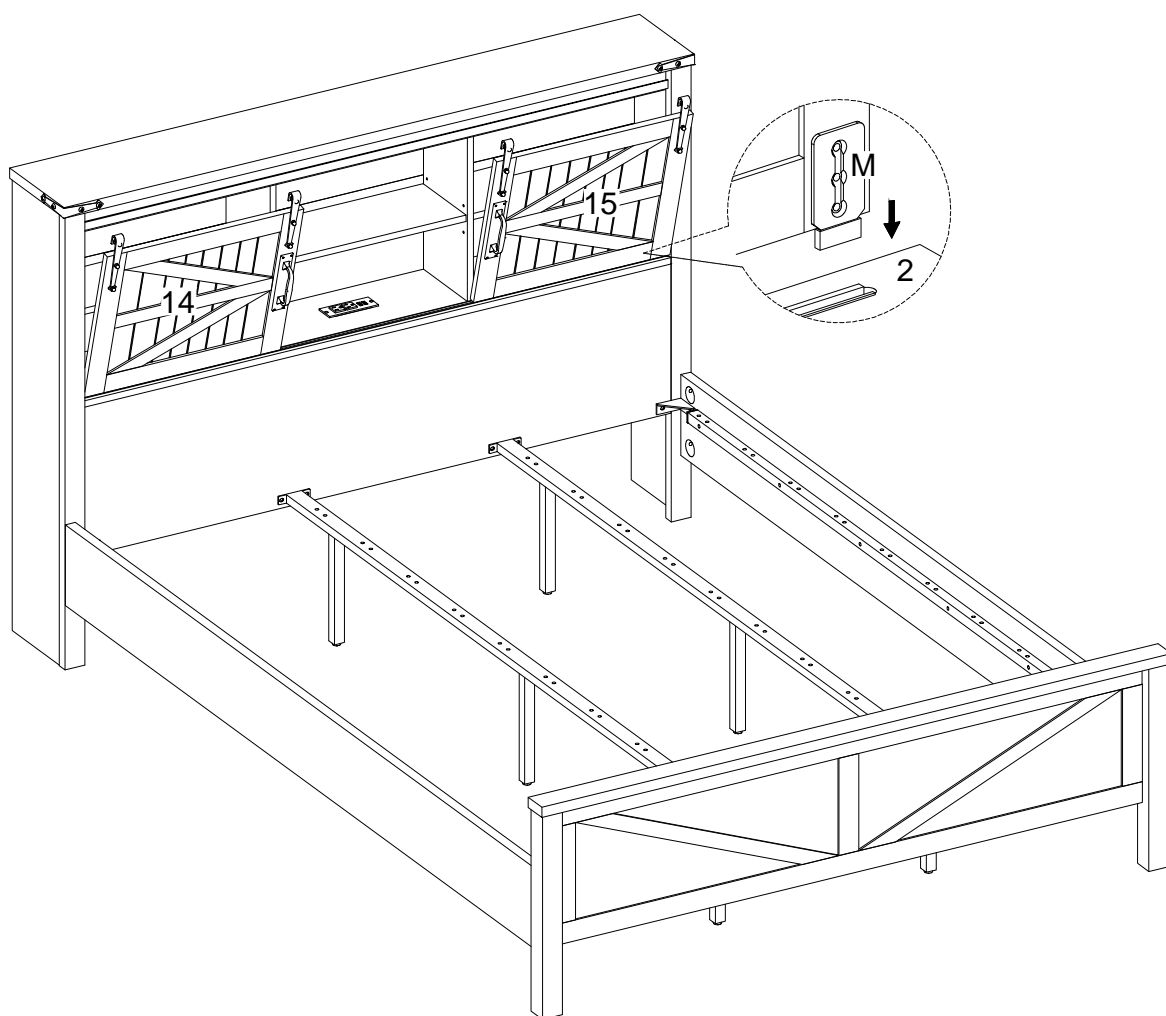


## Step 26

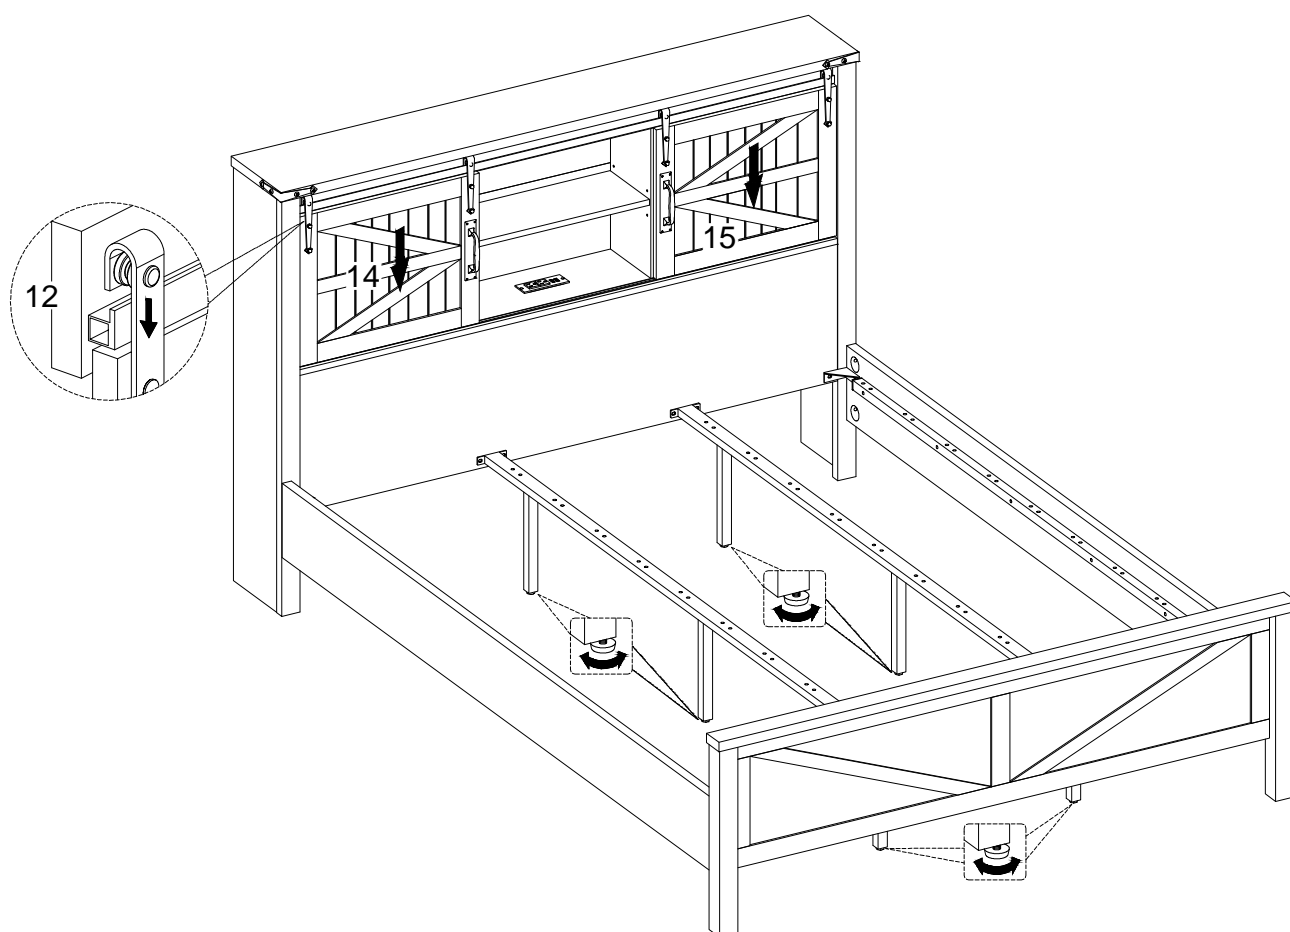

## Step 27

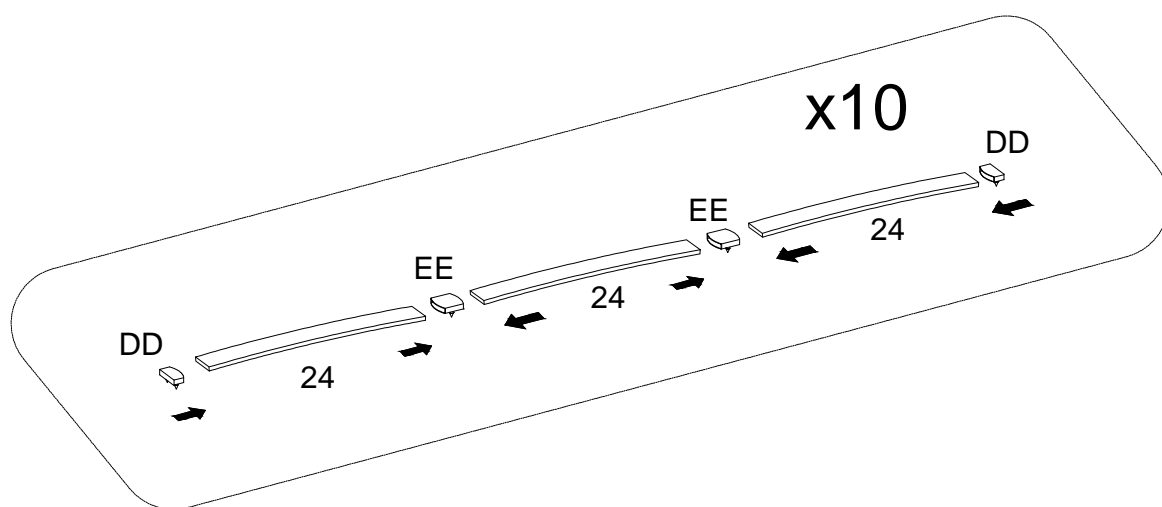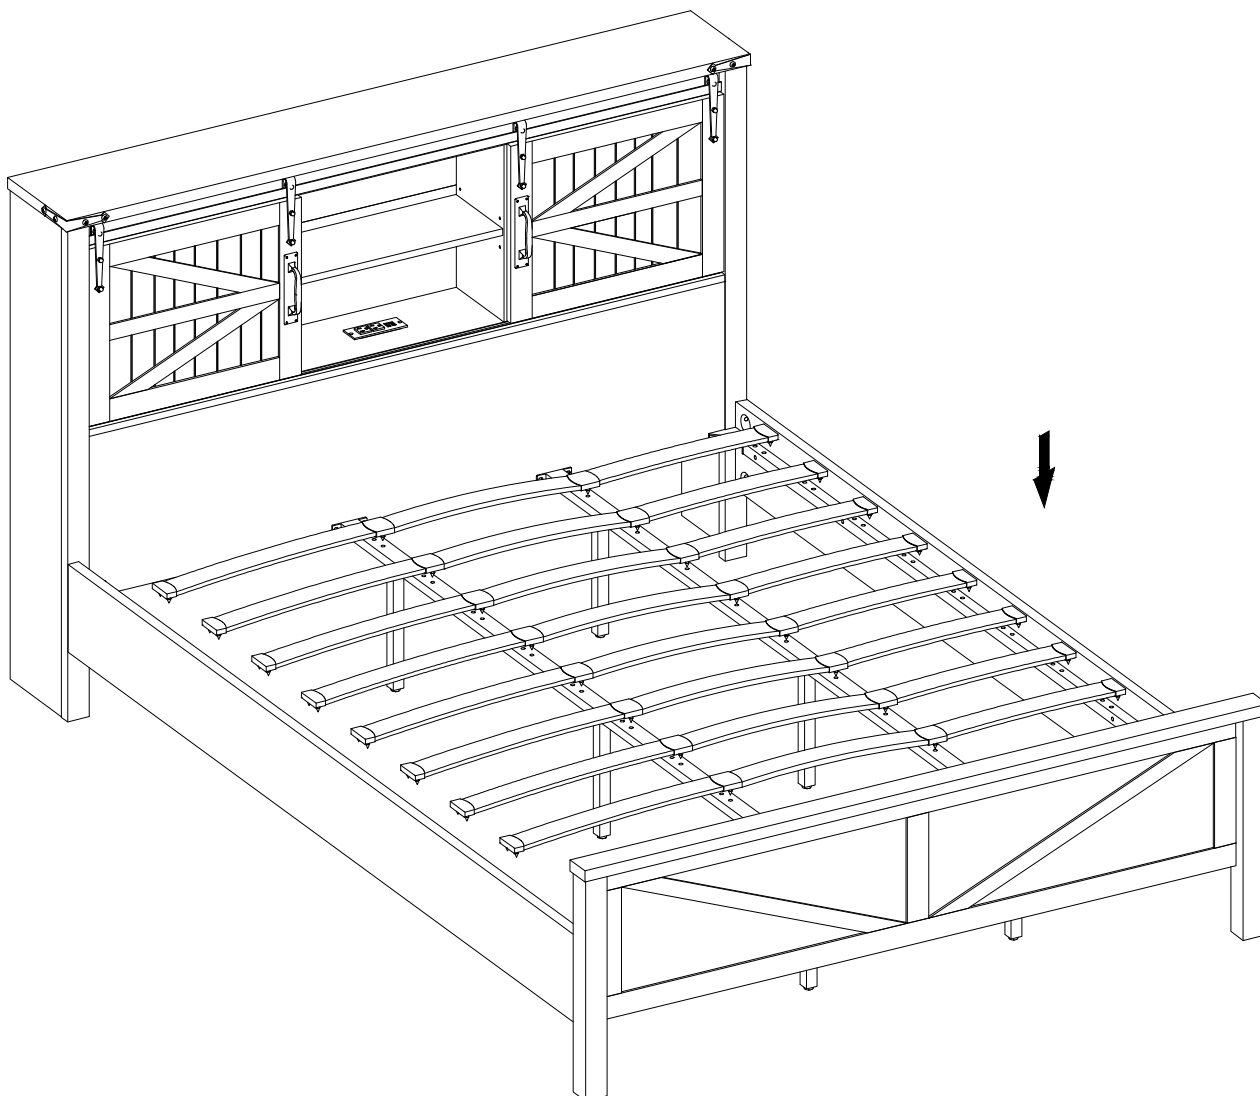

## Step 28

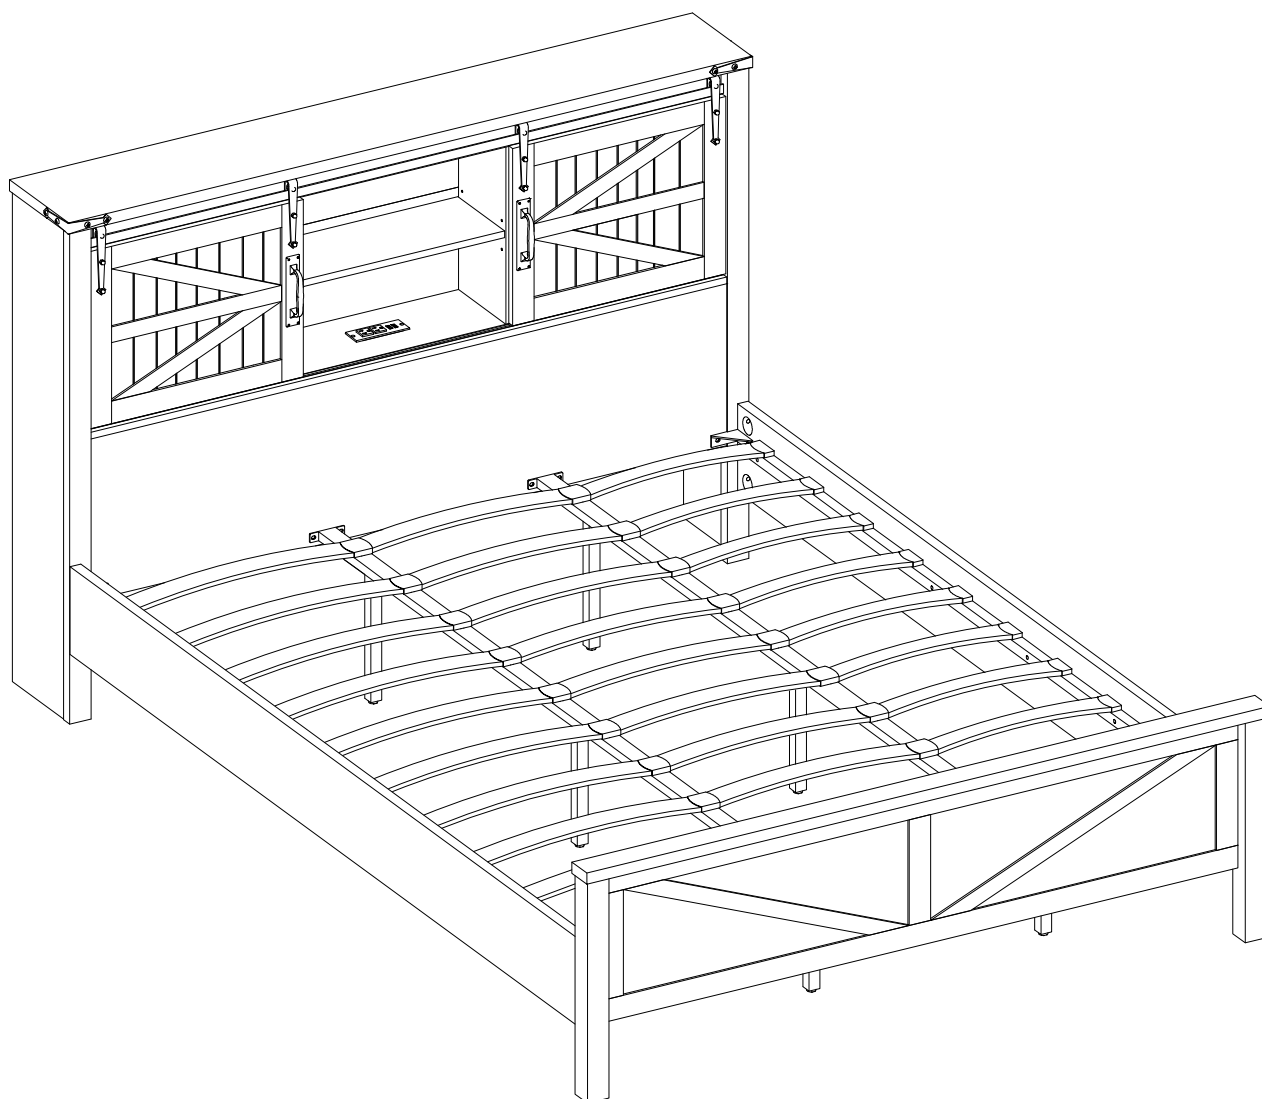

Final Assembly