


AI-BDCQBD

Assembly Instructions

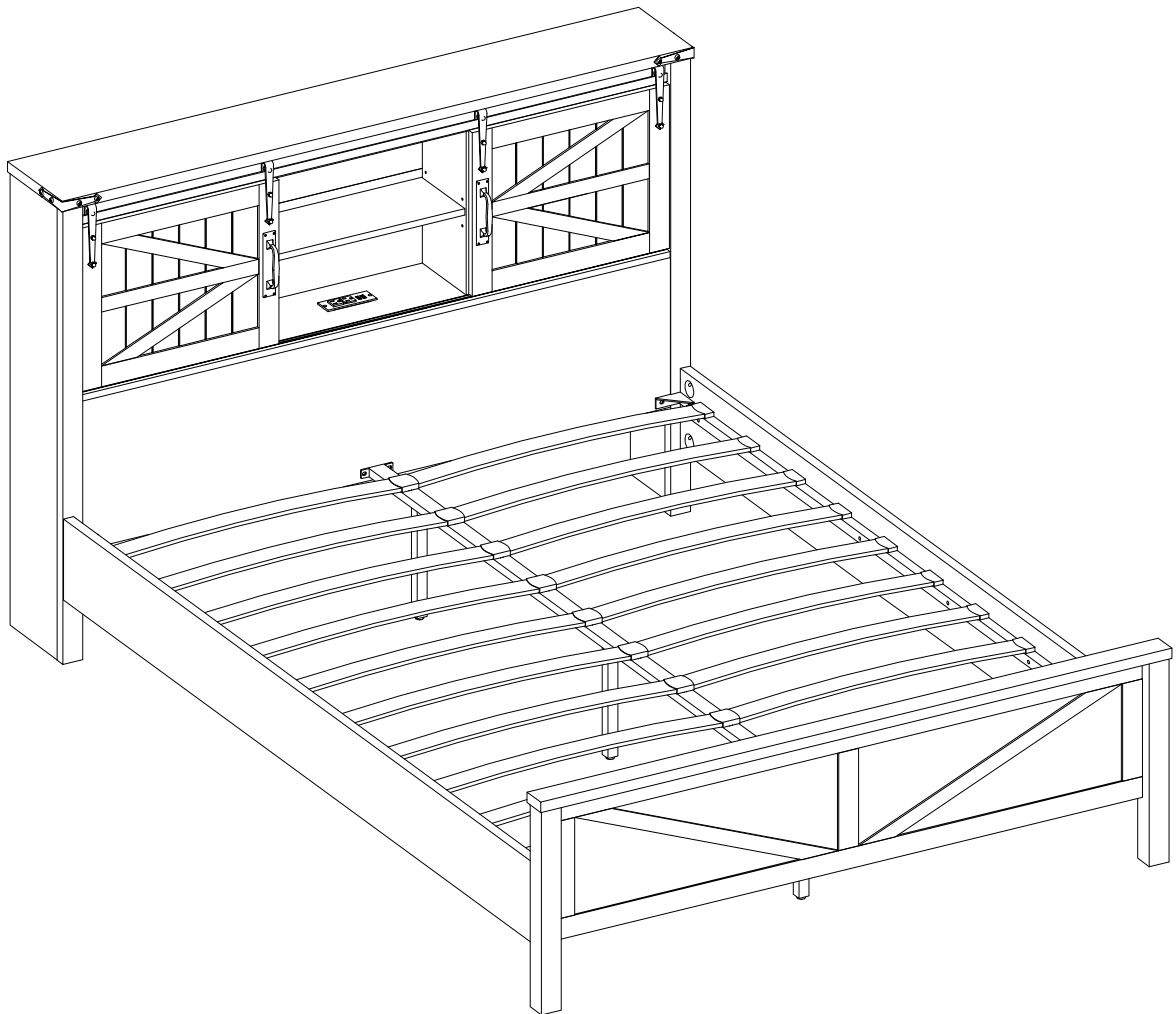

Customer Service E-mail Address : xiuxiumaoyius@163.com

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.




In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.




- VI. A Phillips head screwdriver is required for the assembly of this product .

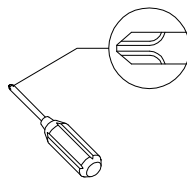





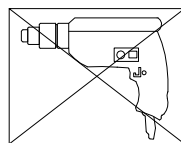















- VII. Power tools should not be used to assemble this product .

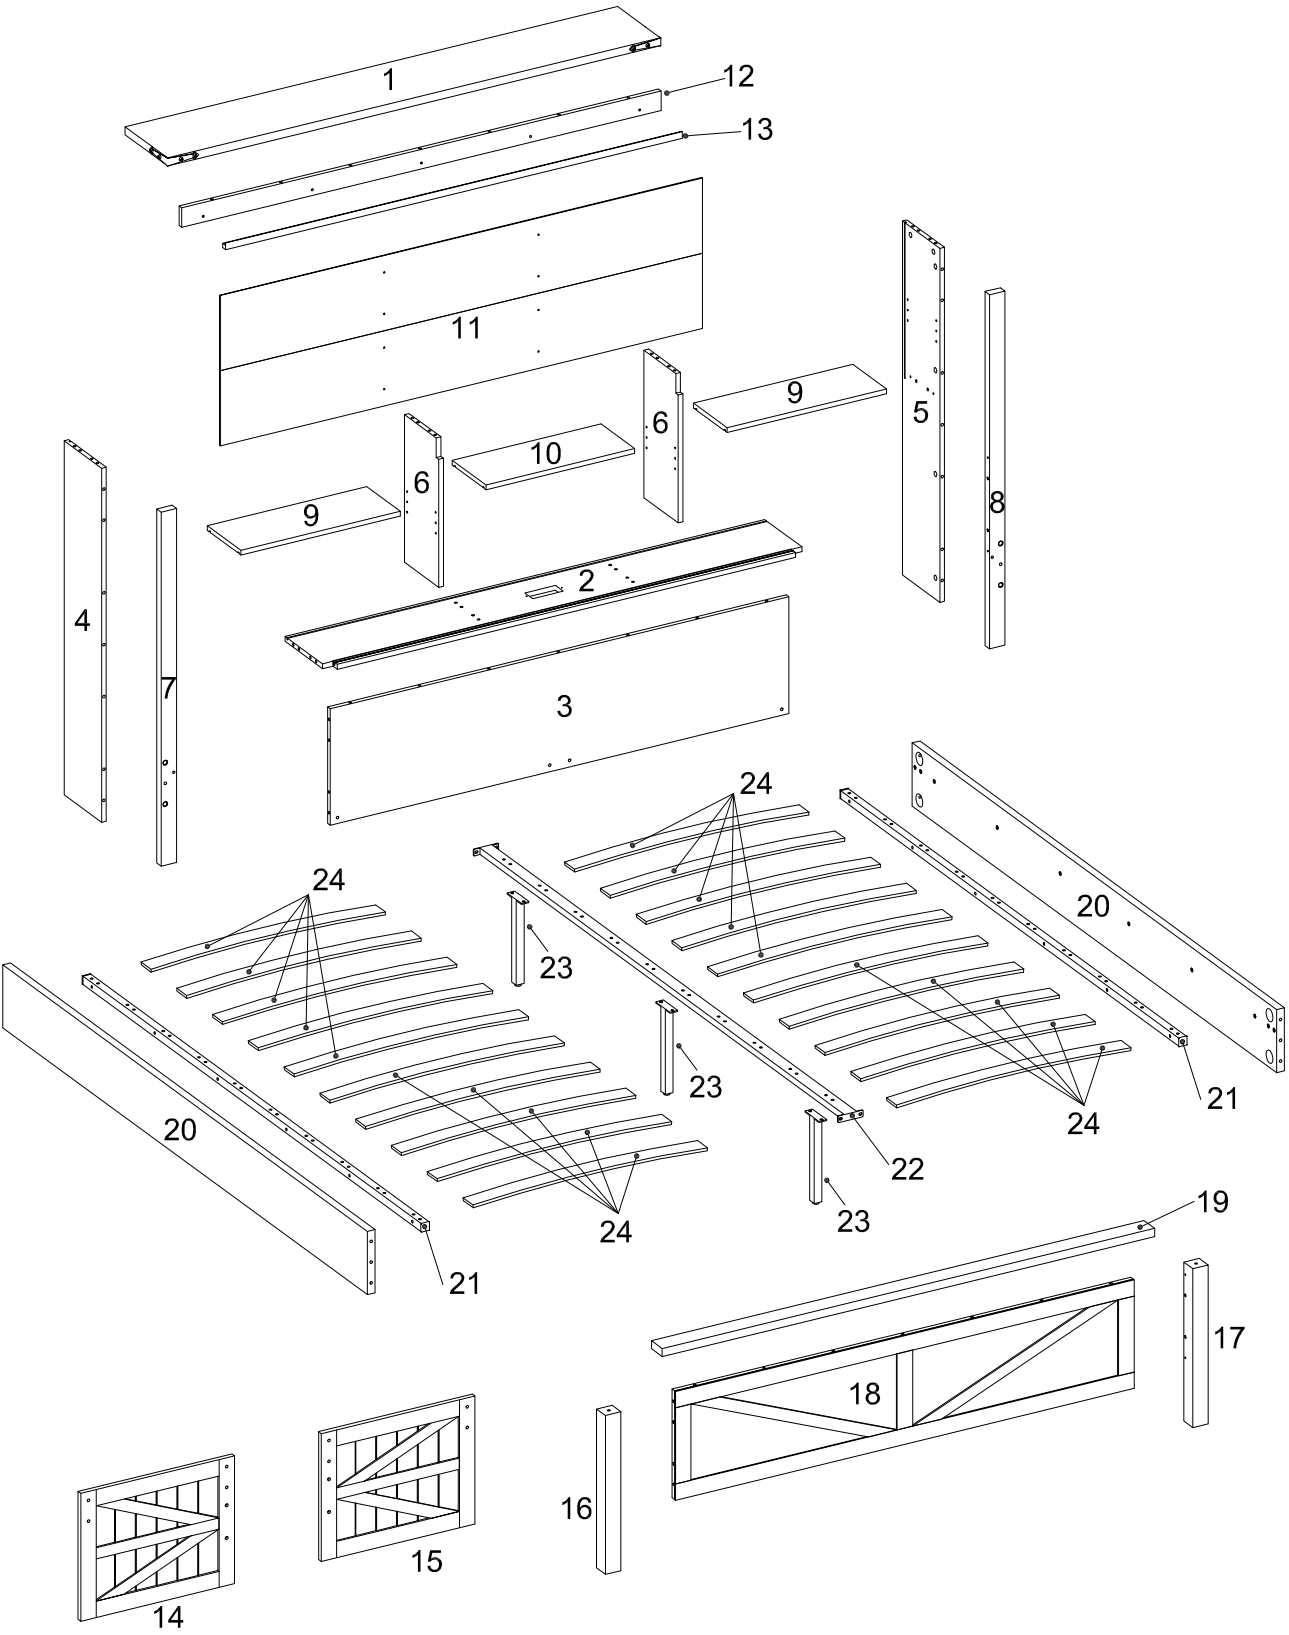


Parts List








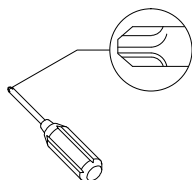




Hardware List


A		Ø8x30mm	Wooden dowel	45 pcs
B		Ø6x35mm	Cam bolt	40 pcs
C		Ø15x11mm	Cam lock	40 pcs
D		Ø30mm	Sticker	40 pcs
E		Ø8x5x16mm	Shelf support pin	12 pcs
F			Glue tube	2 pcs
G			Plastic wedge	14 pcs
H		Ø3x17mm	Flat-head screw	14 pcs
J		Ø6x14mm	Bolt	26 pcs
K		Ø6x38mm	Bolt	12 pcs
L		Ø4x12mm	Screw	16 pcs
M			Plate	4 pcs
N			Pulley	4 pcs
P			Nut	8 pcs
Q		Ø6x25mm	Bolt	13 pcs
R			Wrench	1 pc
S		Ø6x50mm	Screw	4 pcs
T		M 4	Hexagon socket key	1 pcs
U		Ø3.5x12mm	Screw	2 pcs
V			USB Interface	1 pcs



Philips head screwdriver required for assembly
(not included)


Hardware List

W			Handle	2 pcs
X		Ø4x16mm	Handle bolt	4 pcs
Y		Ø8x60mm	Bolt	8 pcs
Z			Washer	8 pcs
AA		Ø5/16mm	Nut	8 pcs
BB		Ø5/16mm	Wrench	1 pc
CC		Ø38mm	Sticker	8 pcs
DD			Single end plastic parts	20 pcs
EE			Double-ended plastic parts	10 pcs
FF			Triangular iron sheet	4 pcs

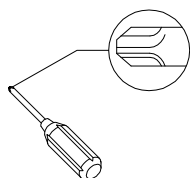


Philips head screwdriver required for assembly
(not included)


Step 1

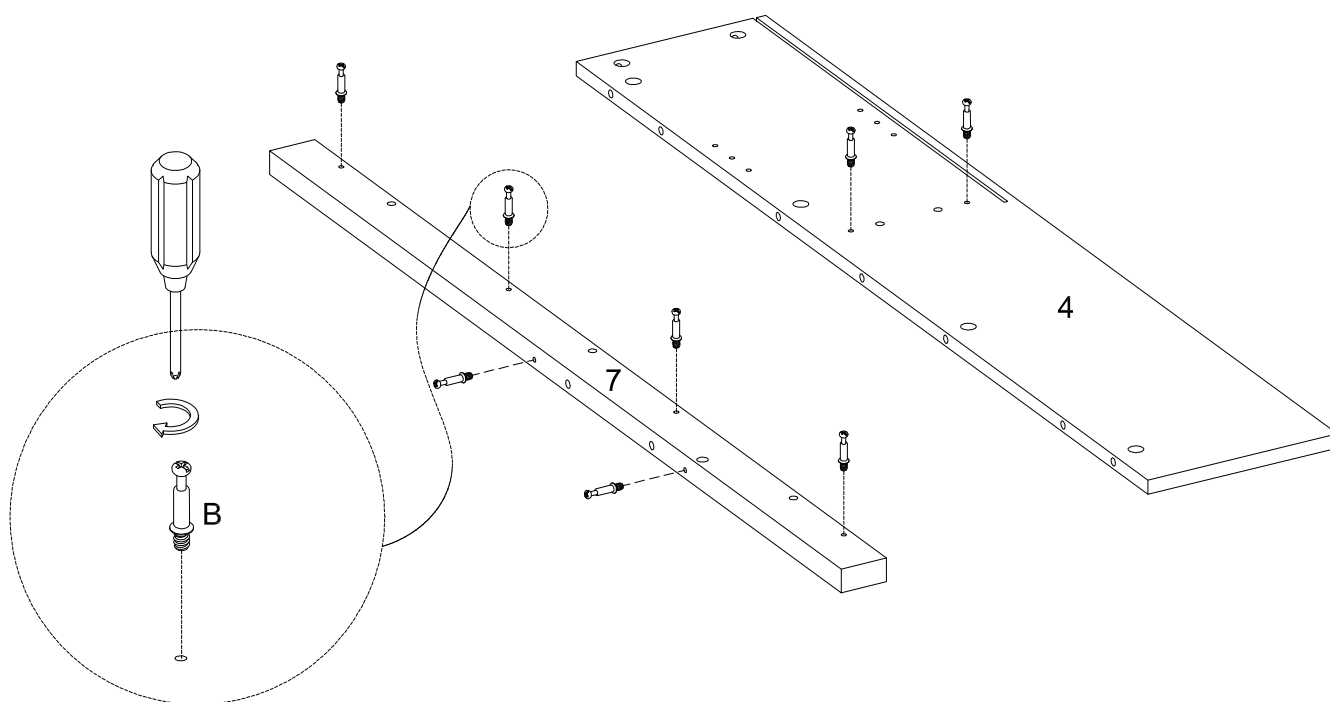


Step 2

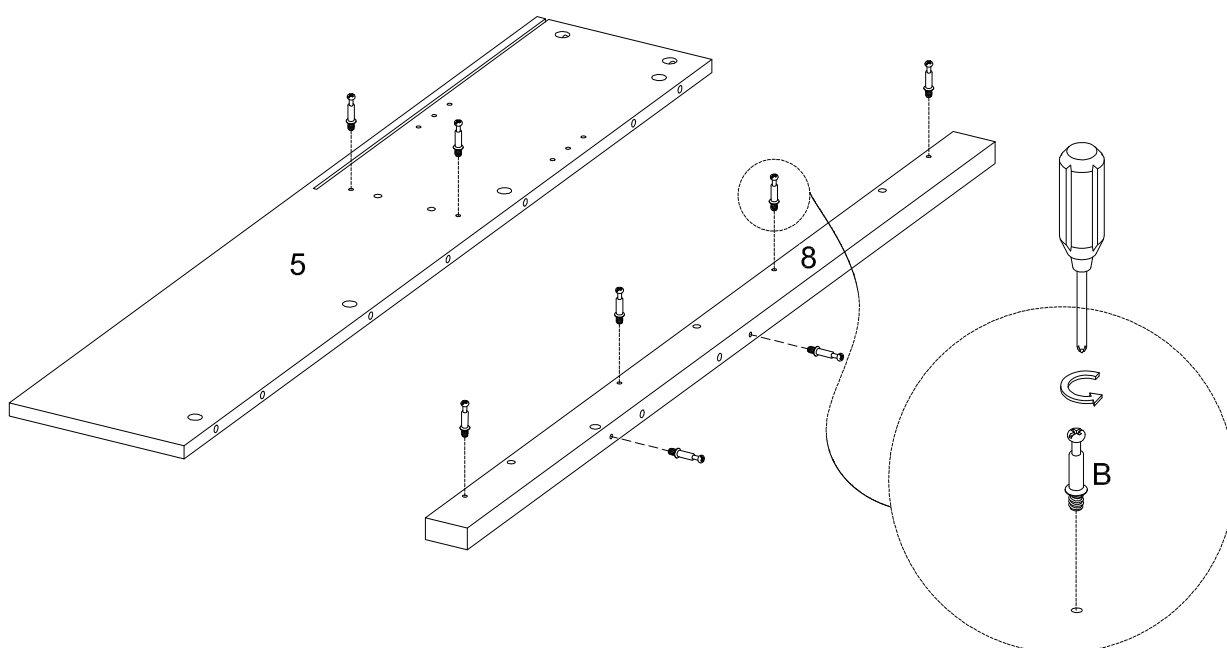


Step 3

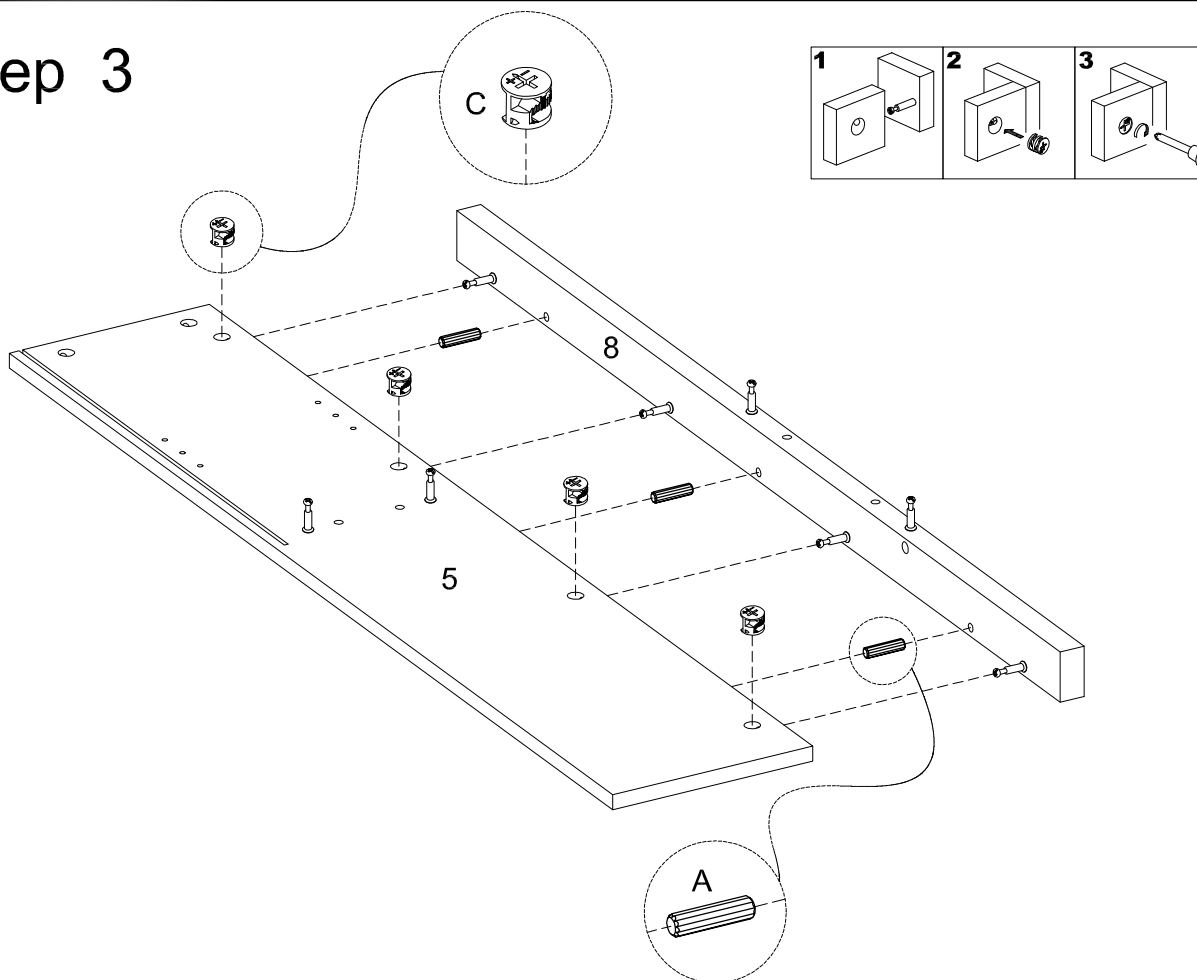



Step 4

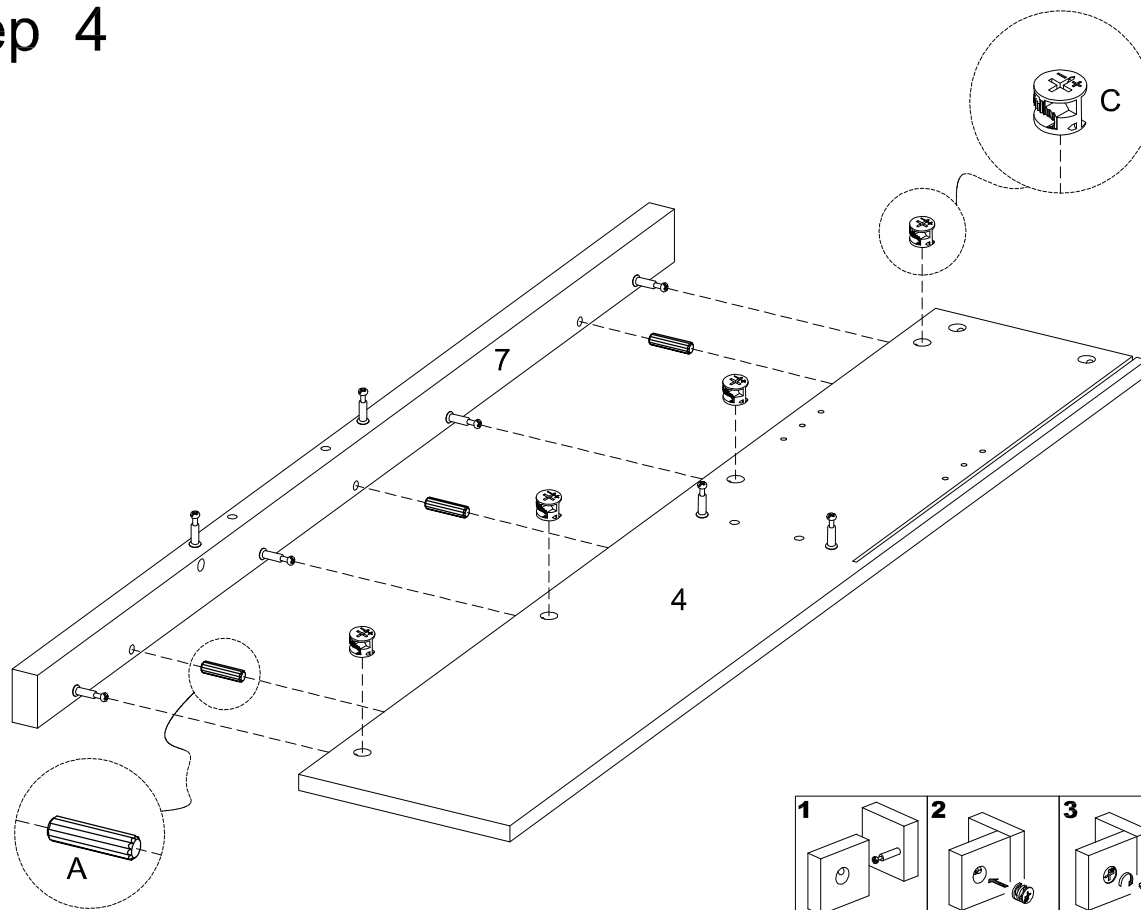


Step 5

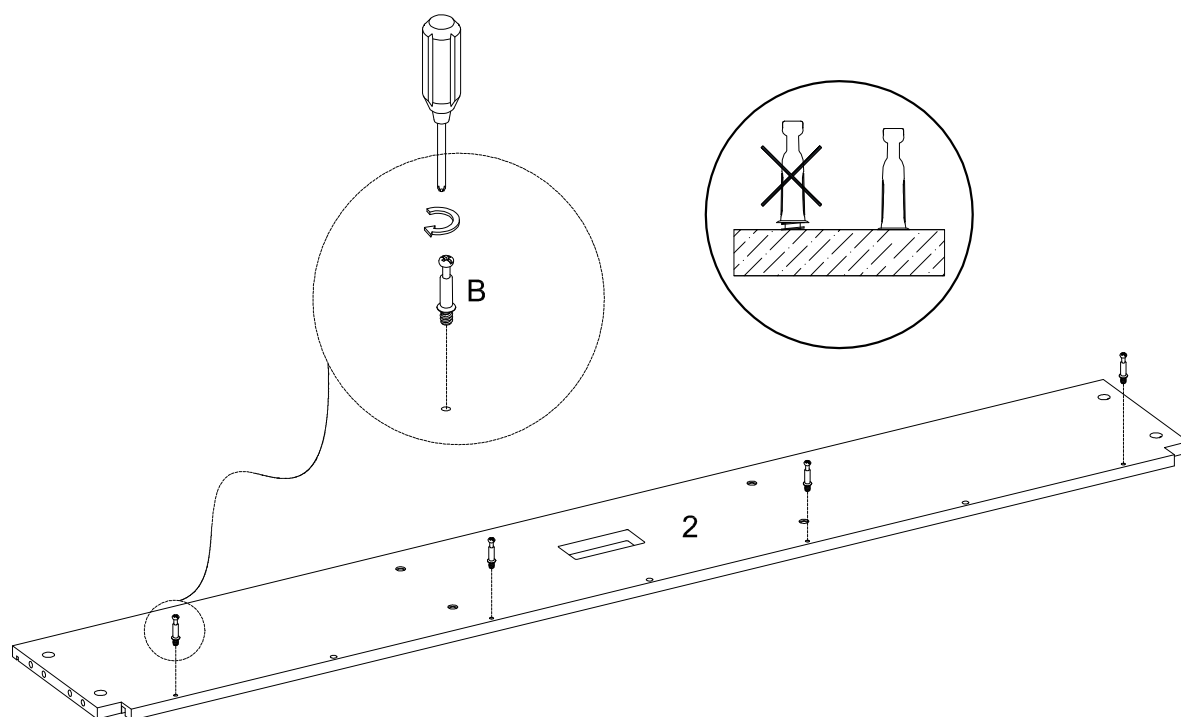


Step 6

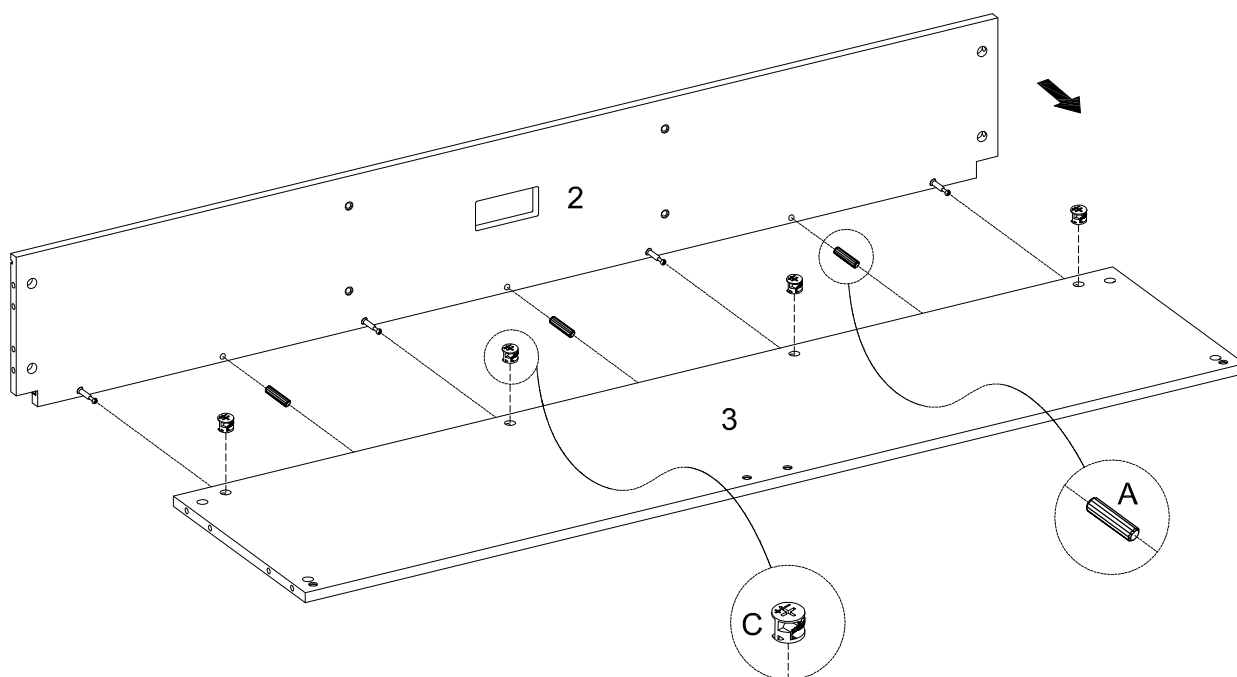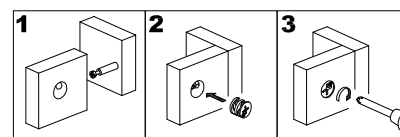


Step 7

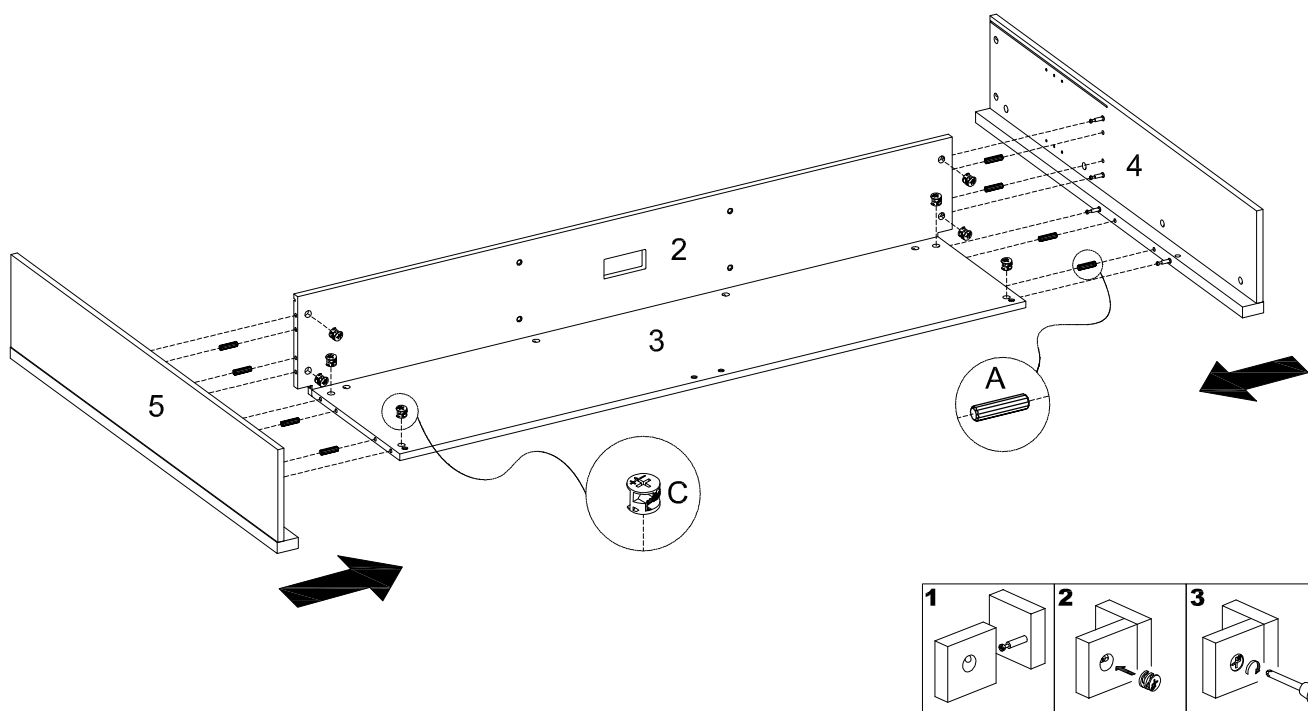


Step 8

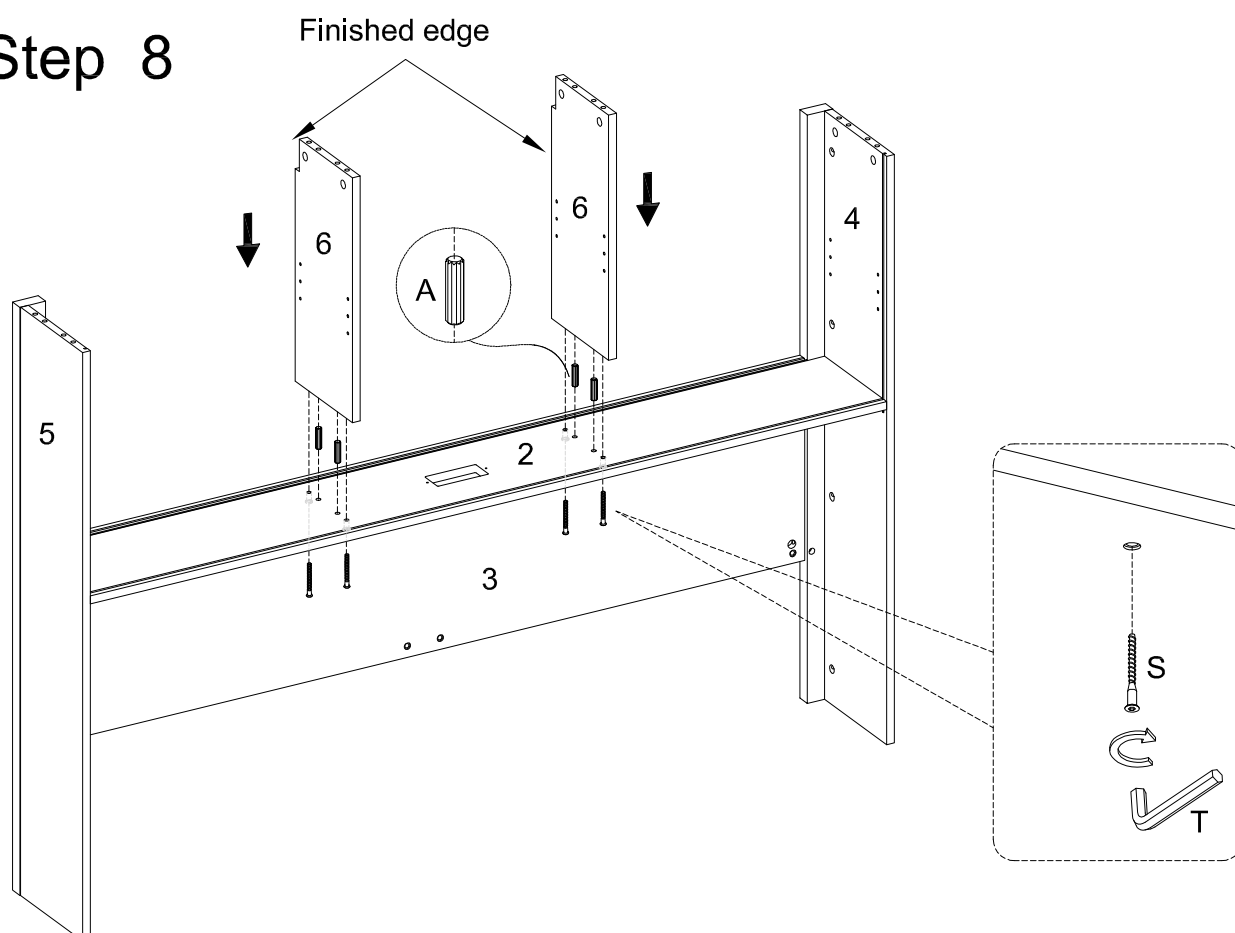


Step 9

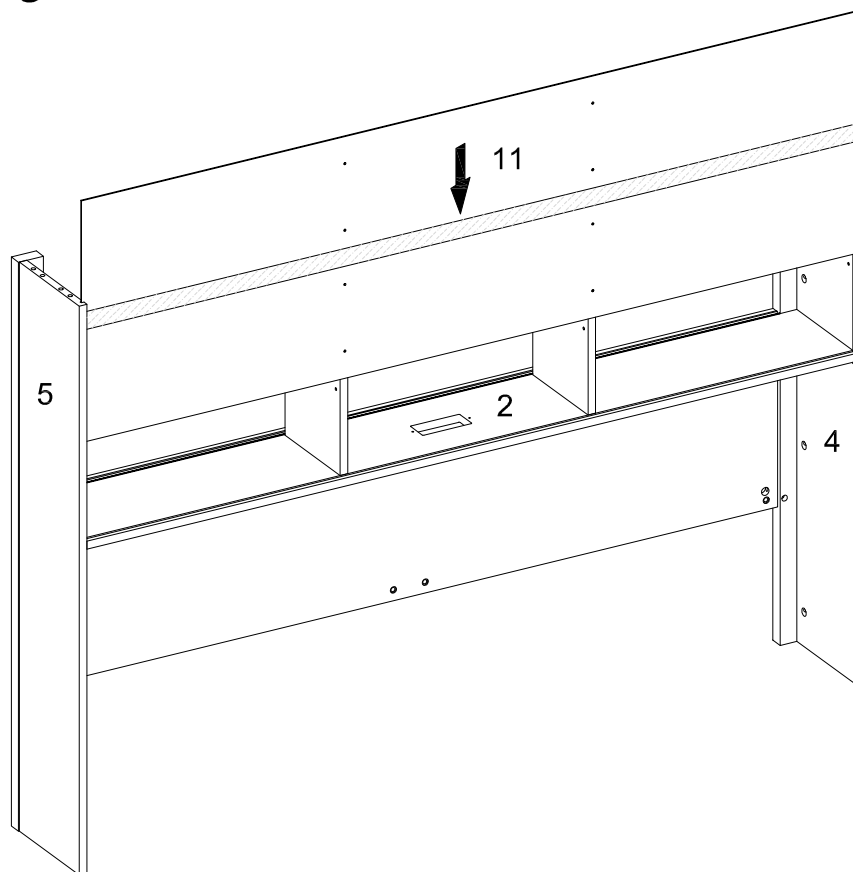


Step 10

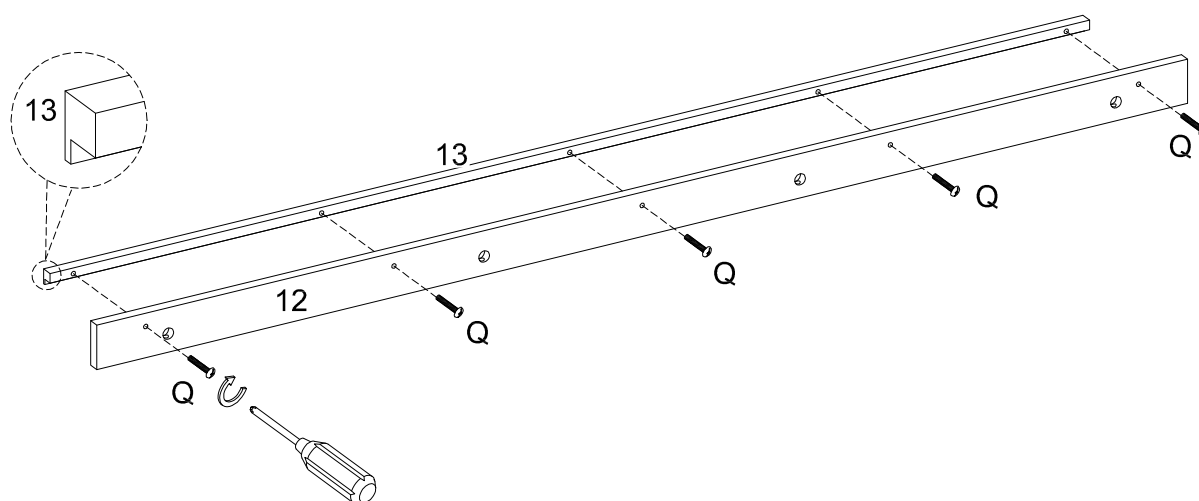


Step 11

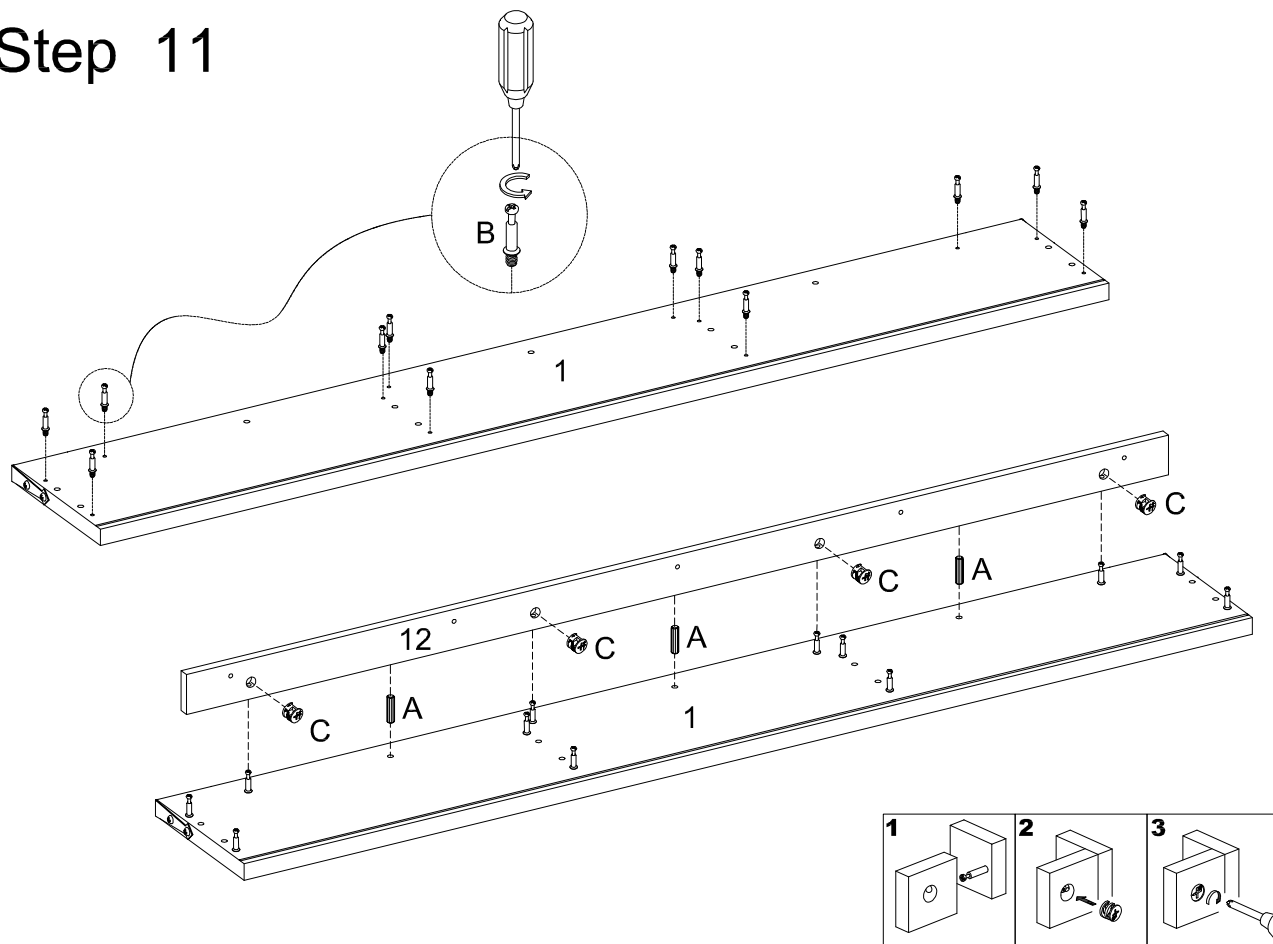


Step 12

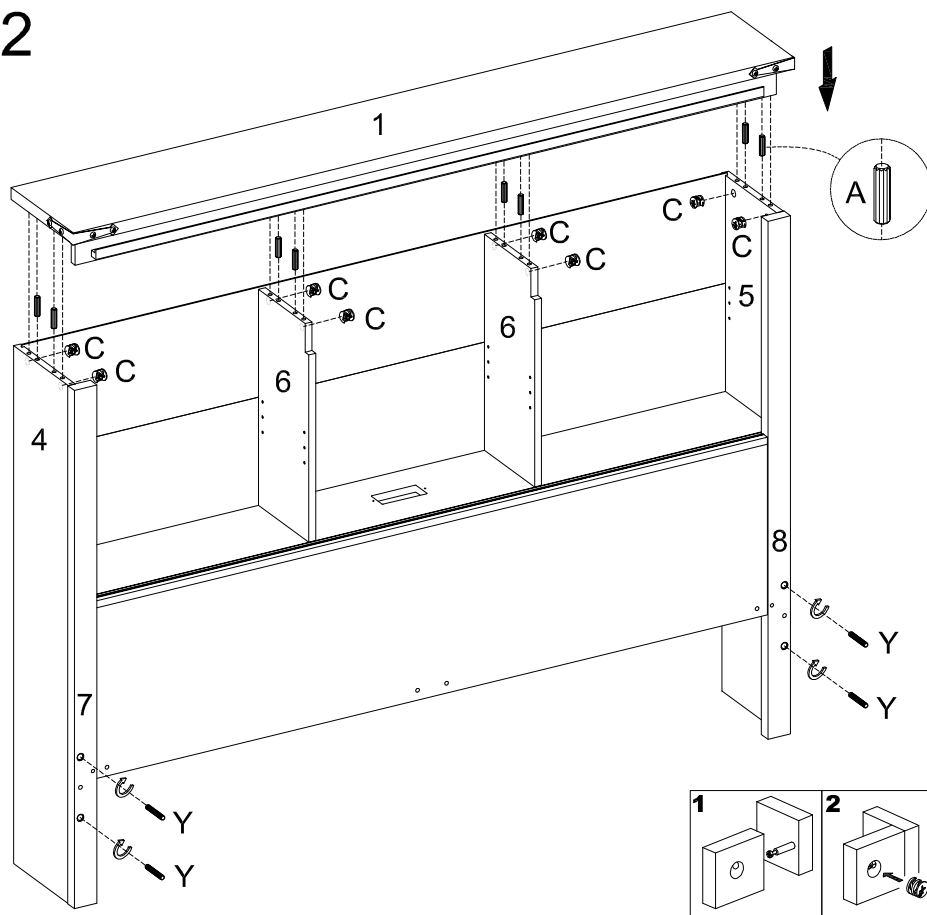


Step 13

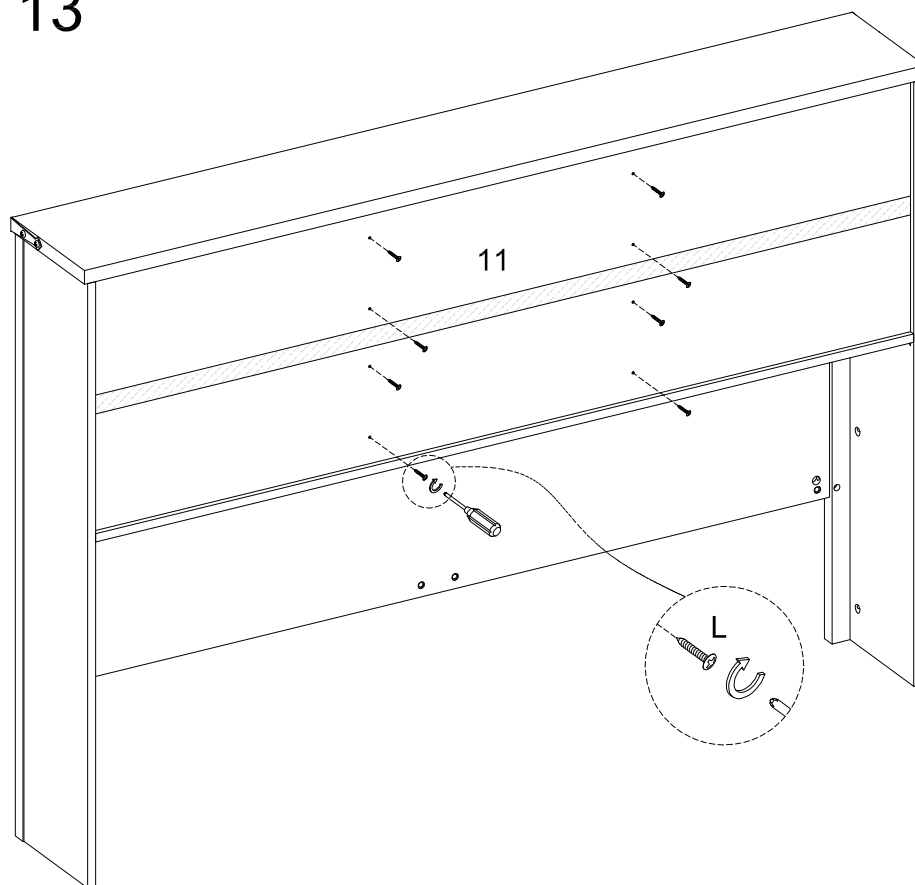


Step 14

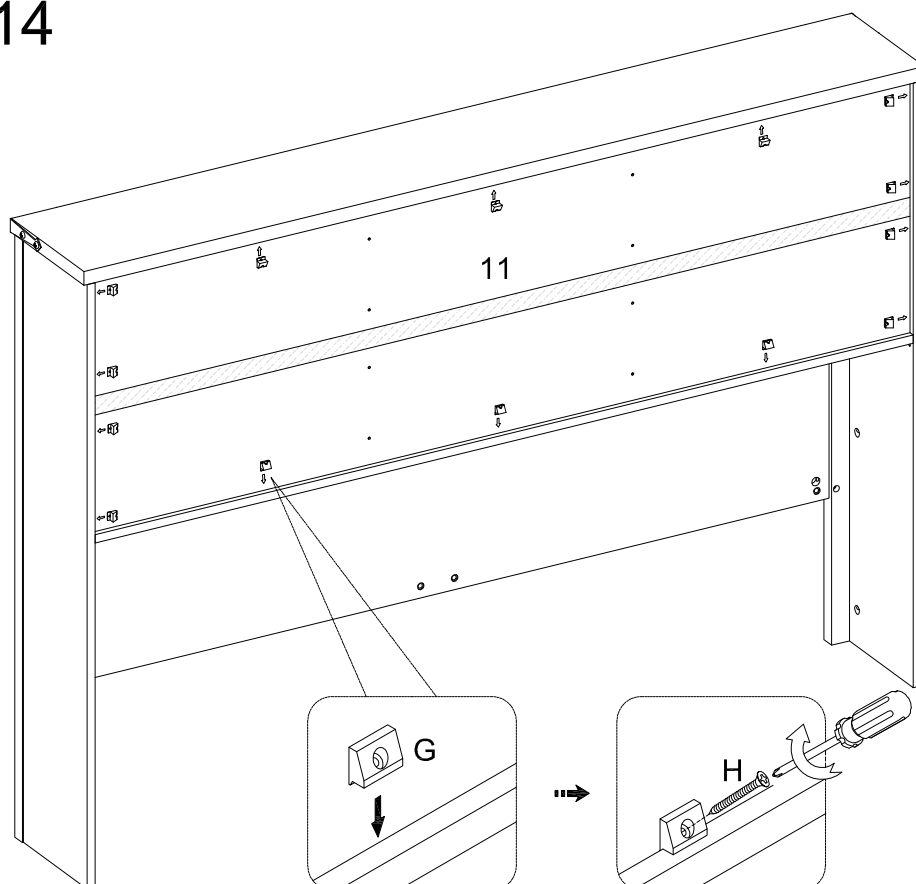


Step 15

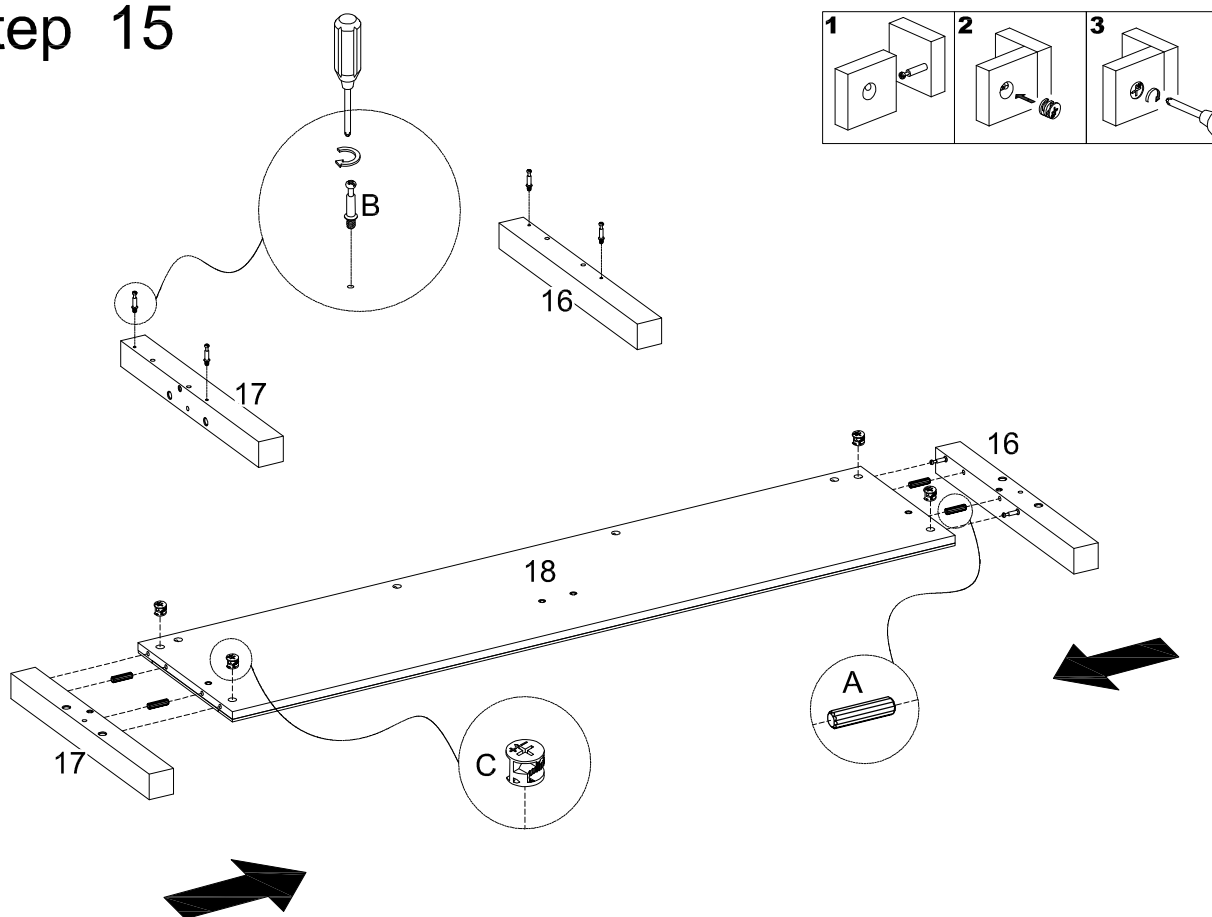


Step 16

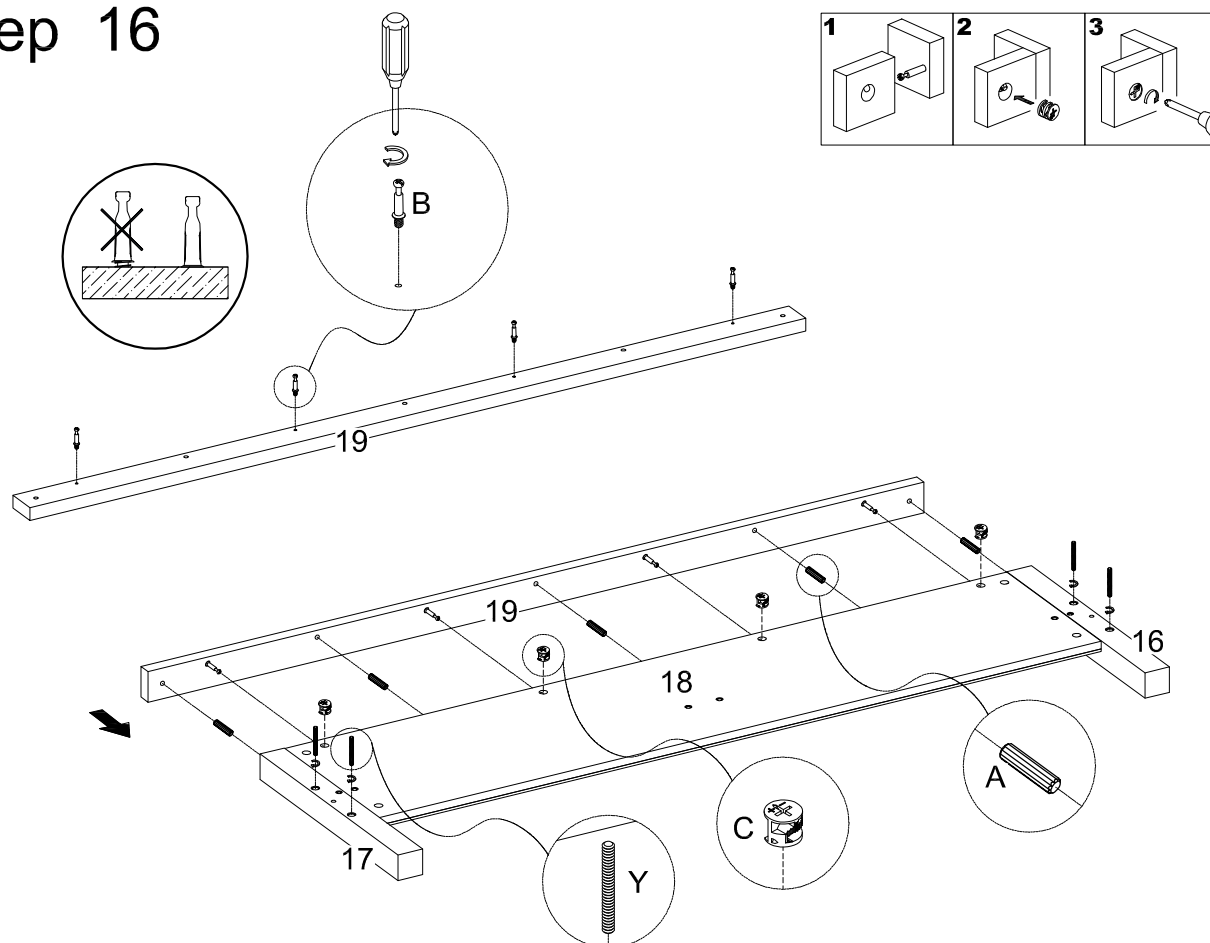


Step 17

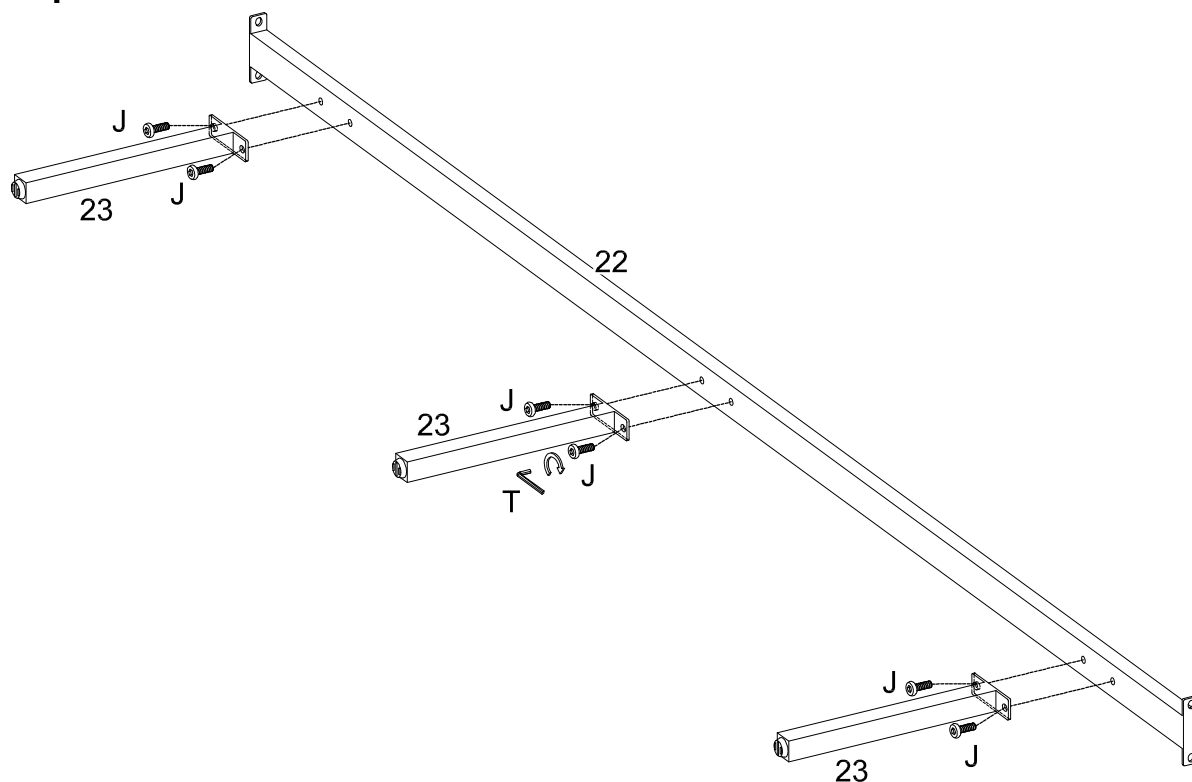


Step 18

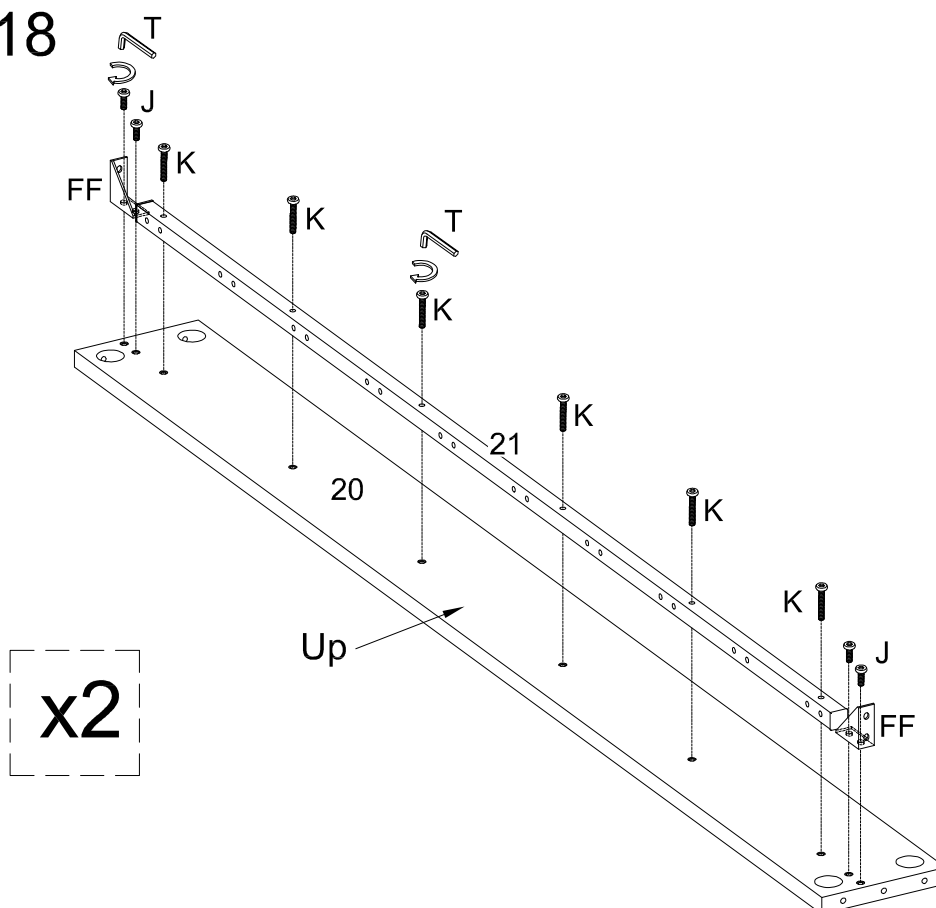


Step 19

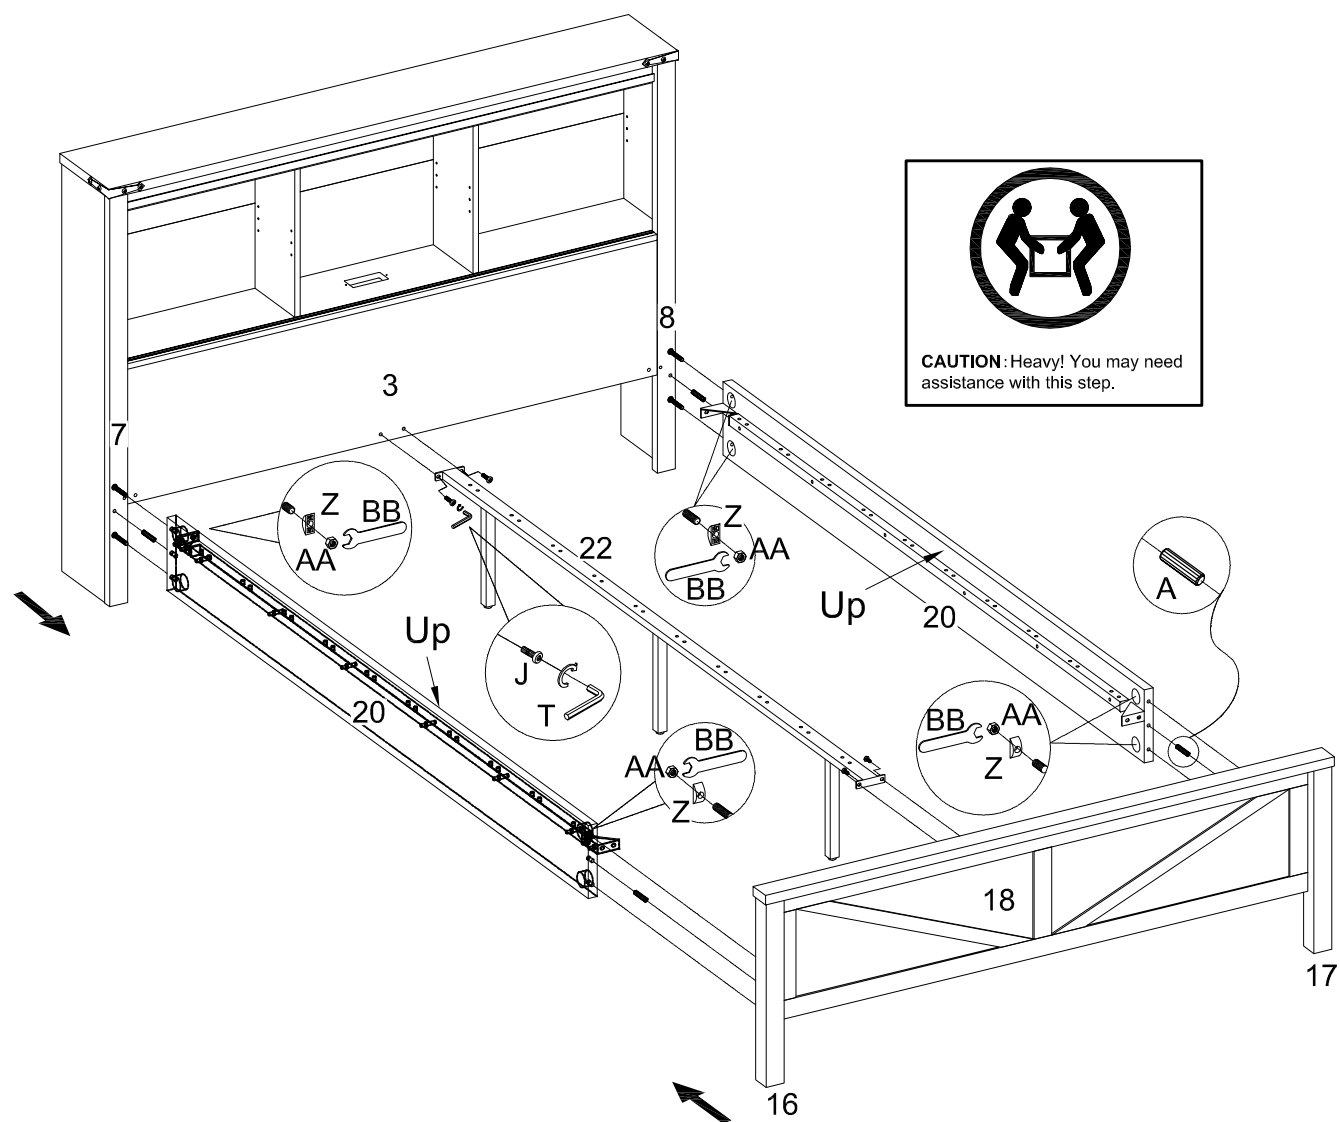


Step 20

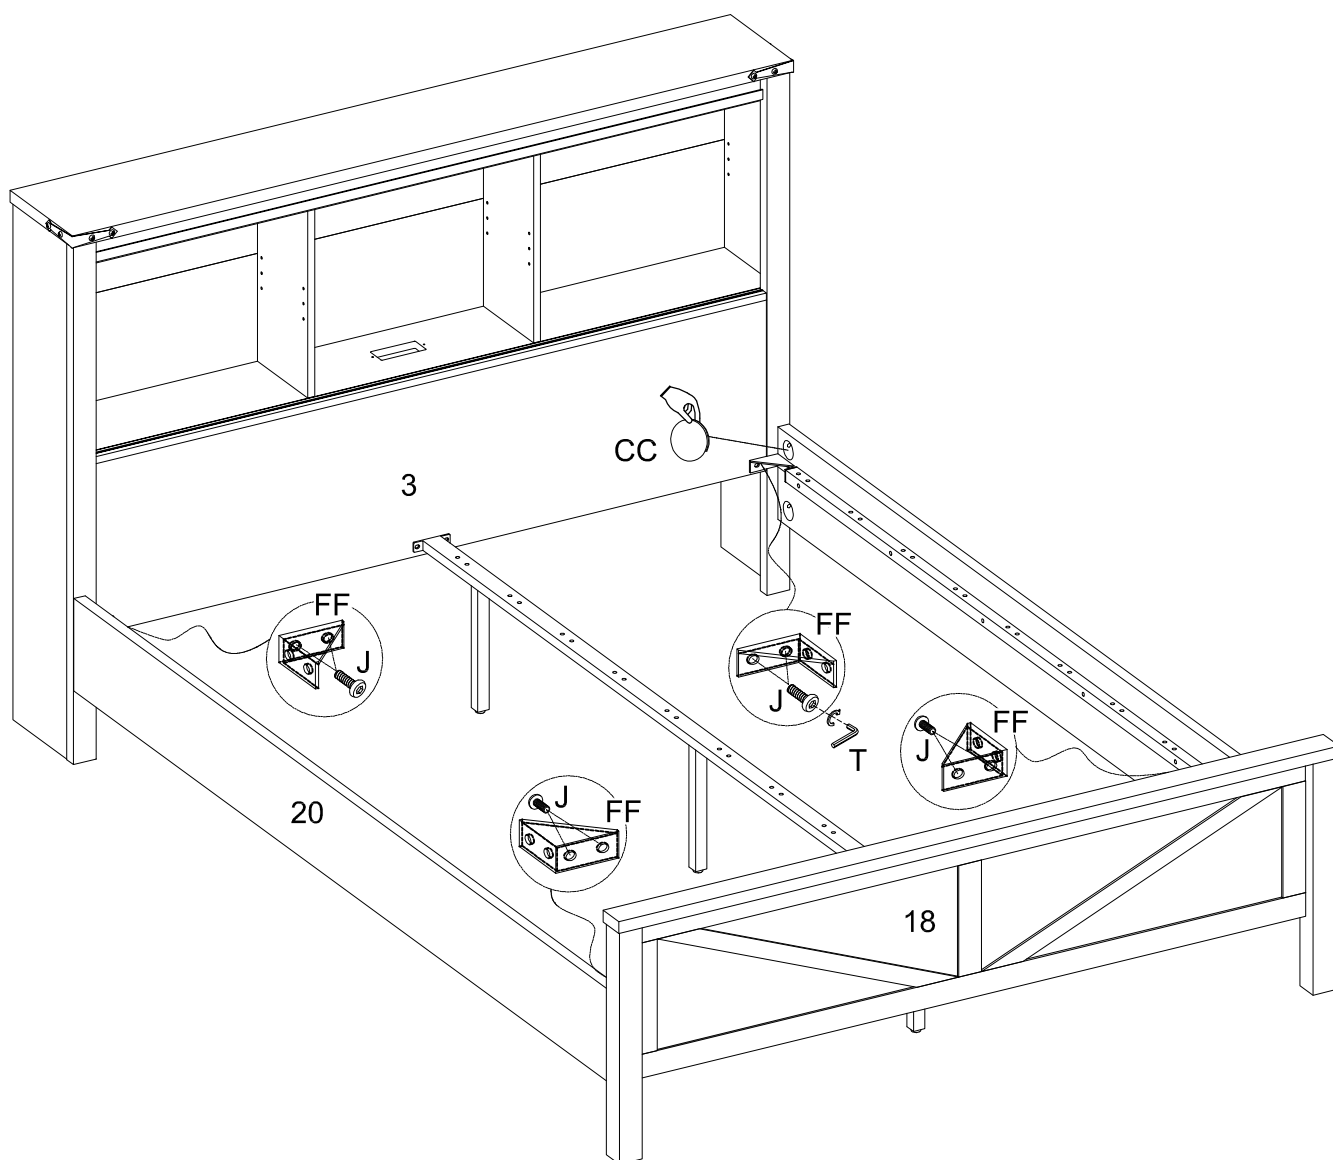


Step 21

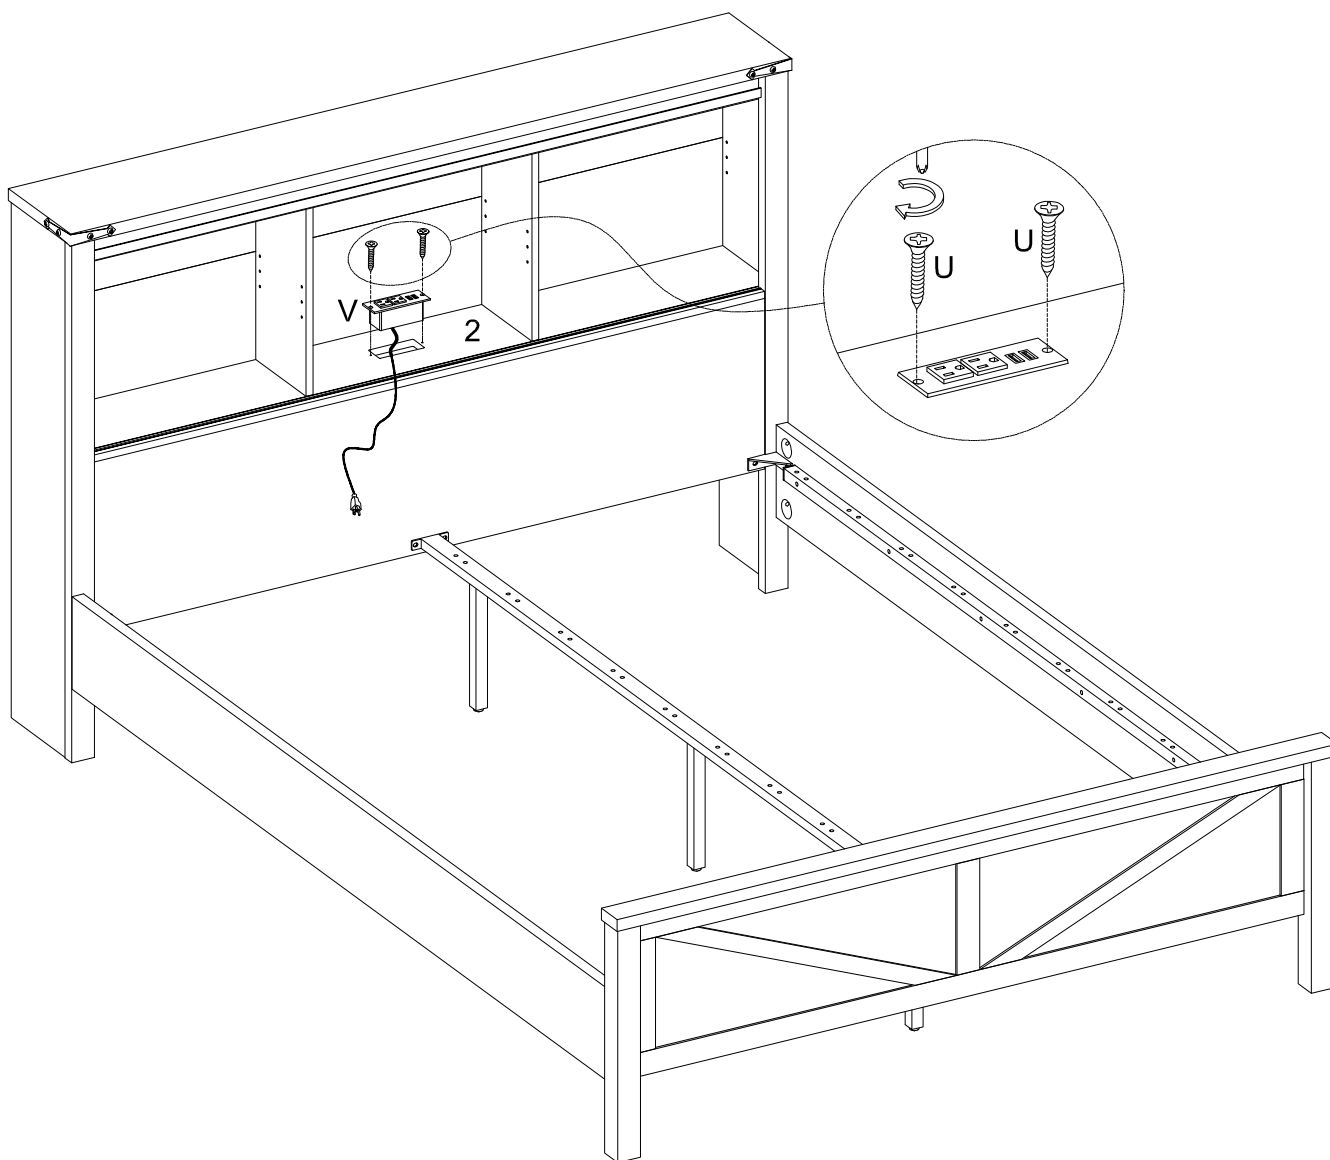


Step 22

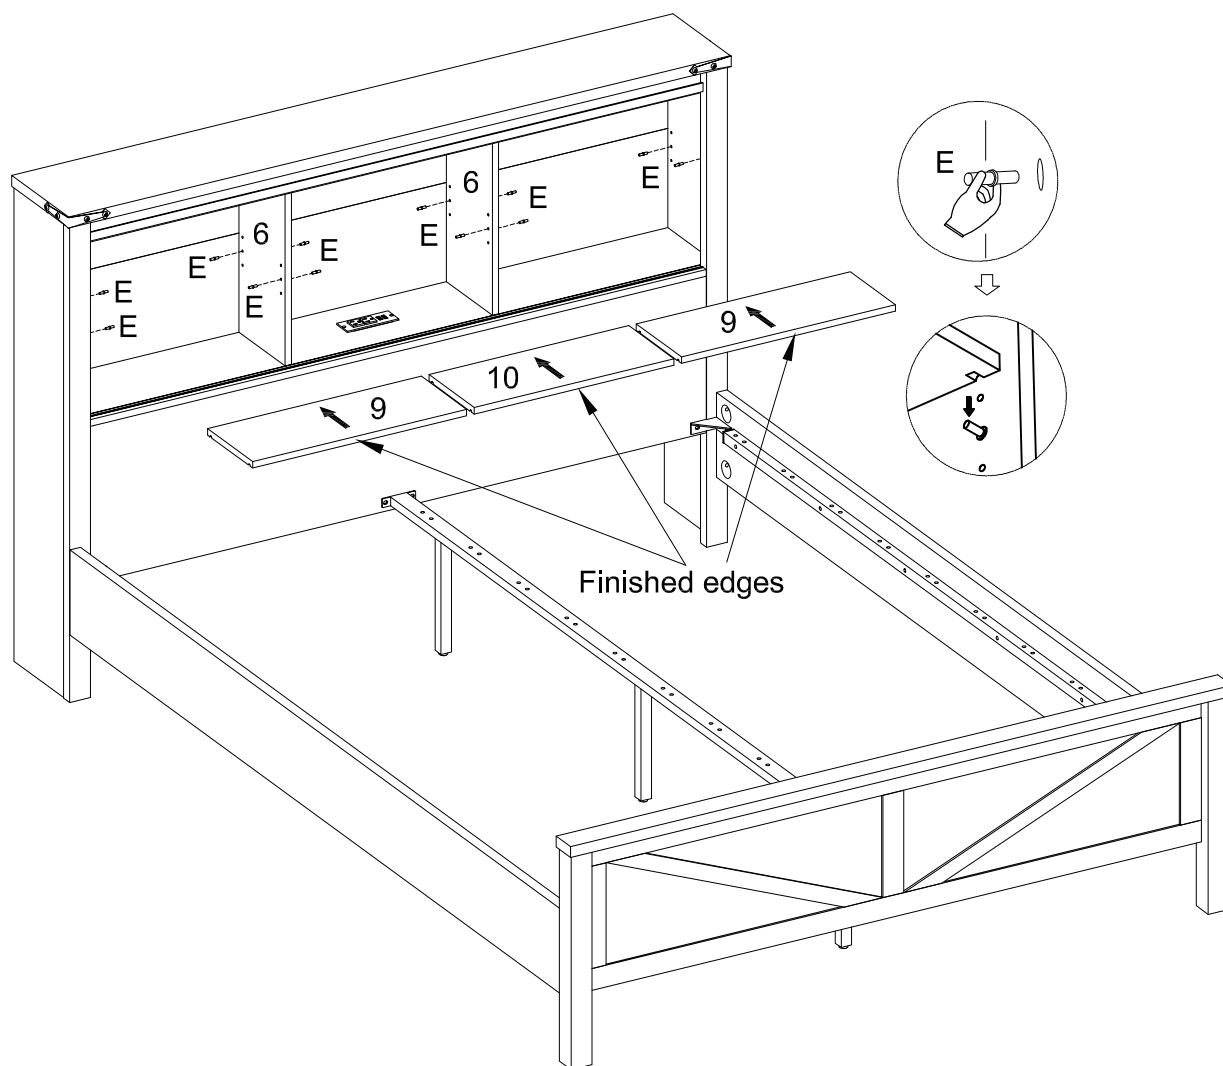



Step 23

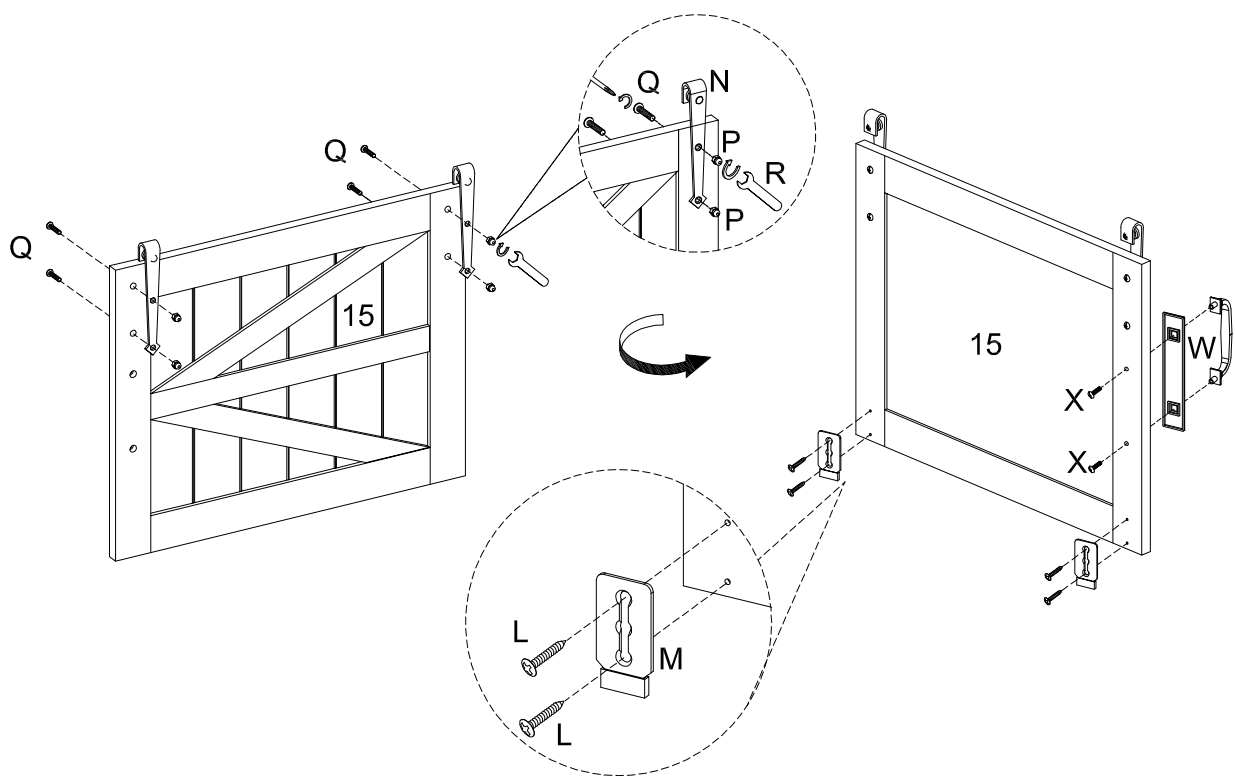


Step 24

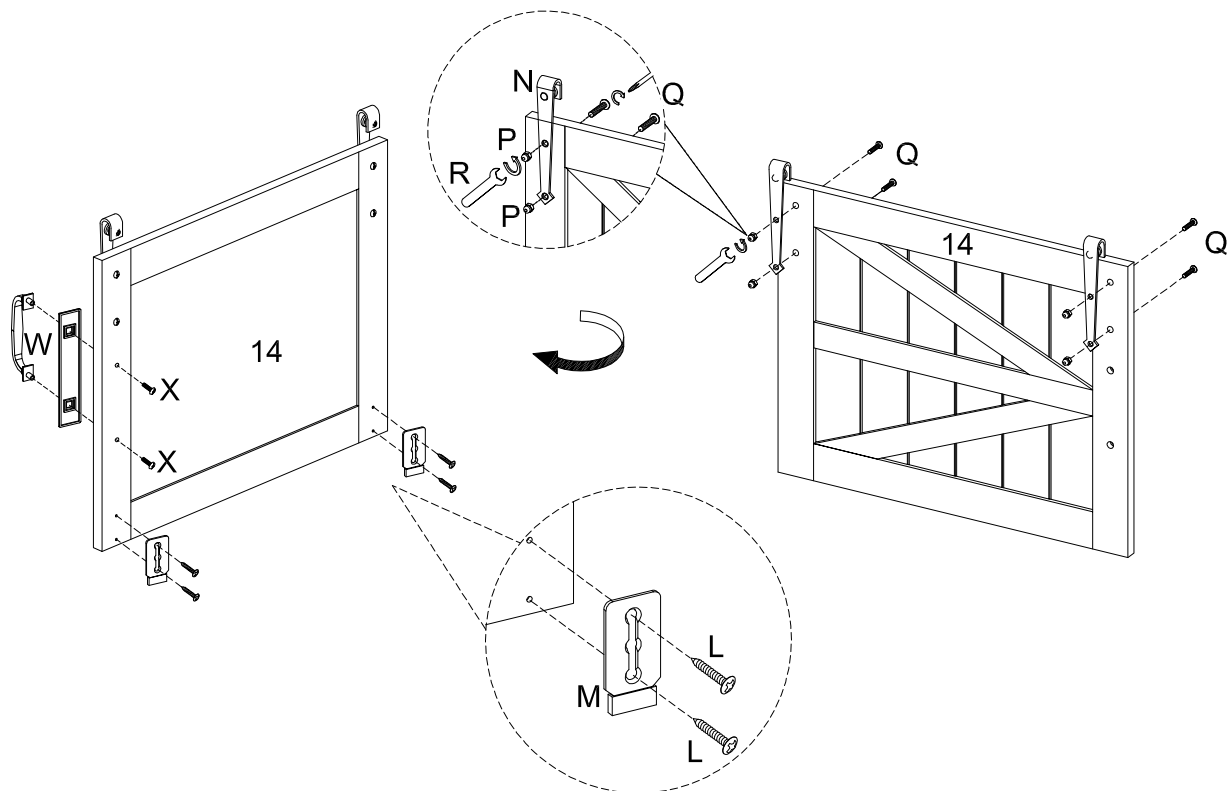



Step 25

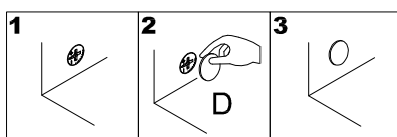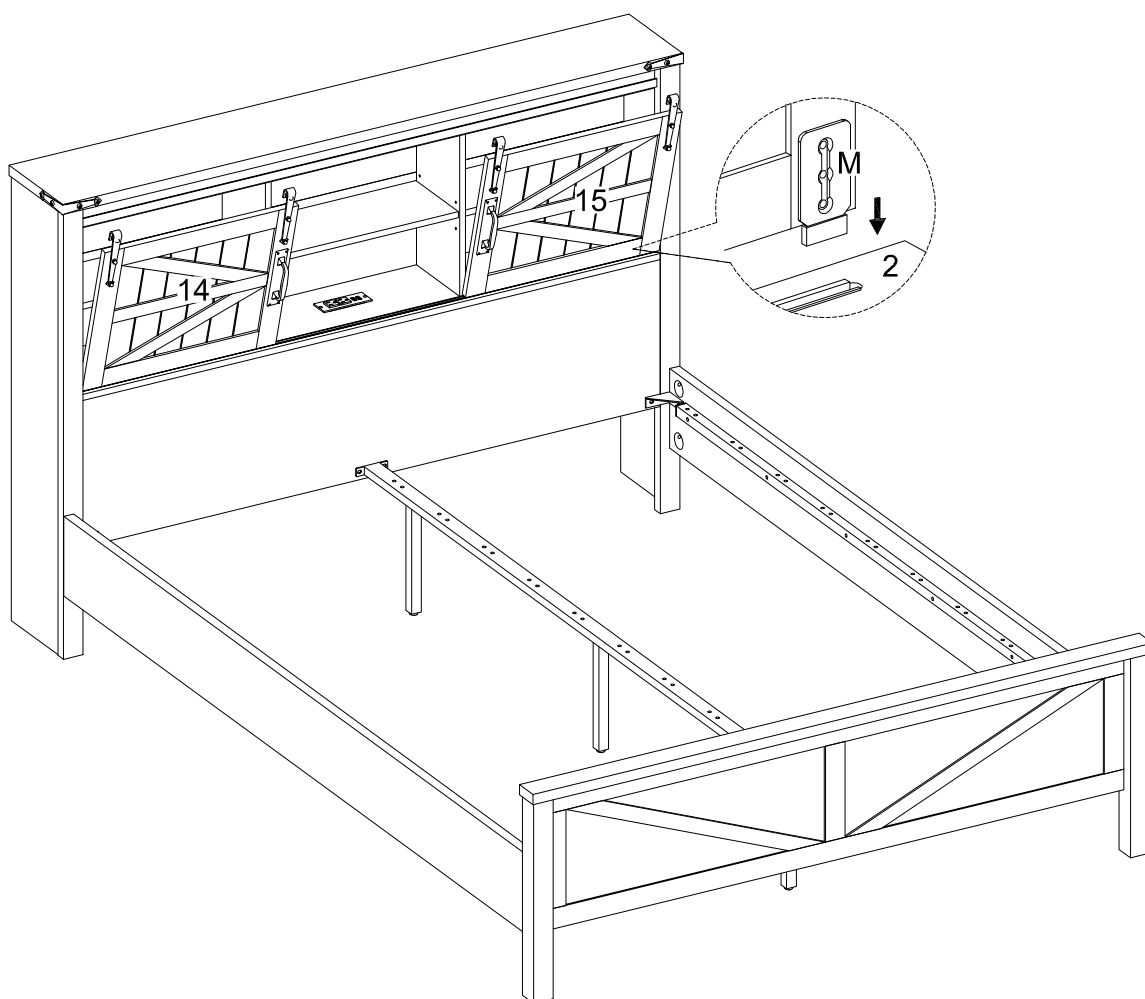


Step 26

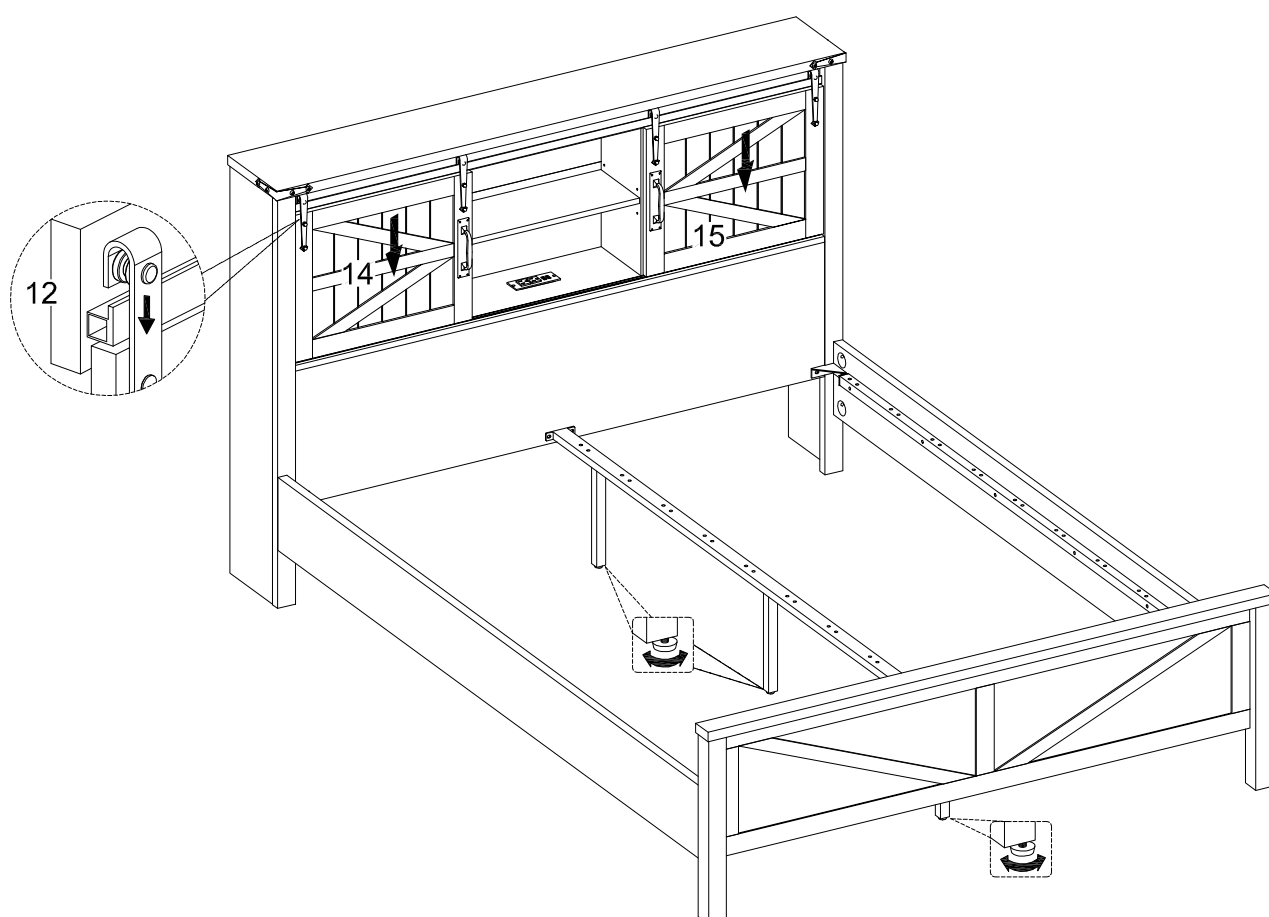

Step 27

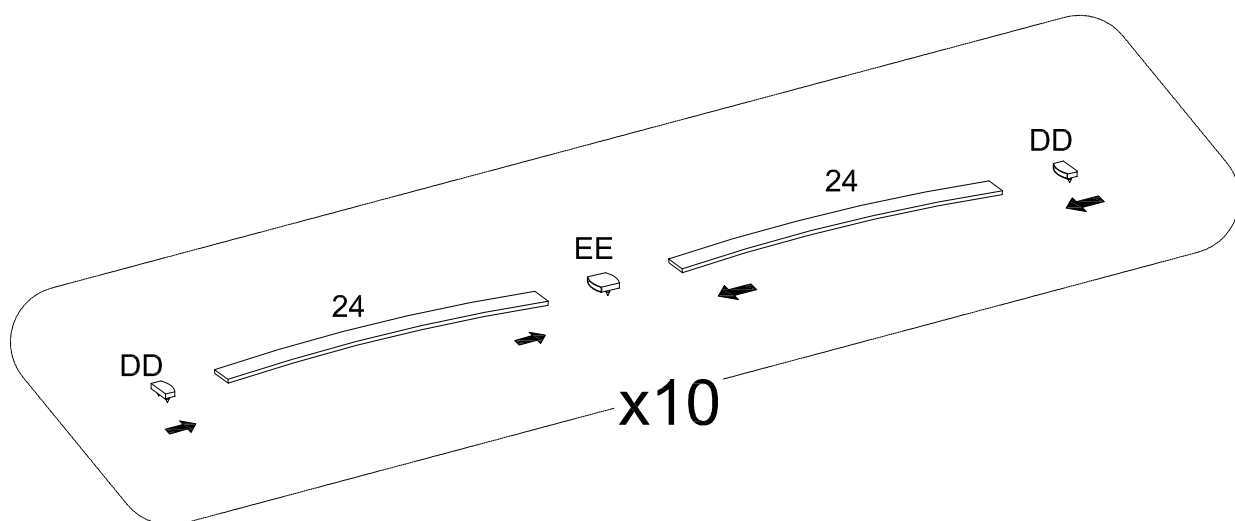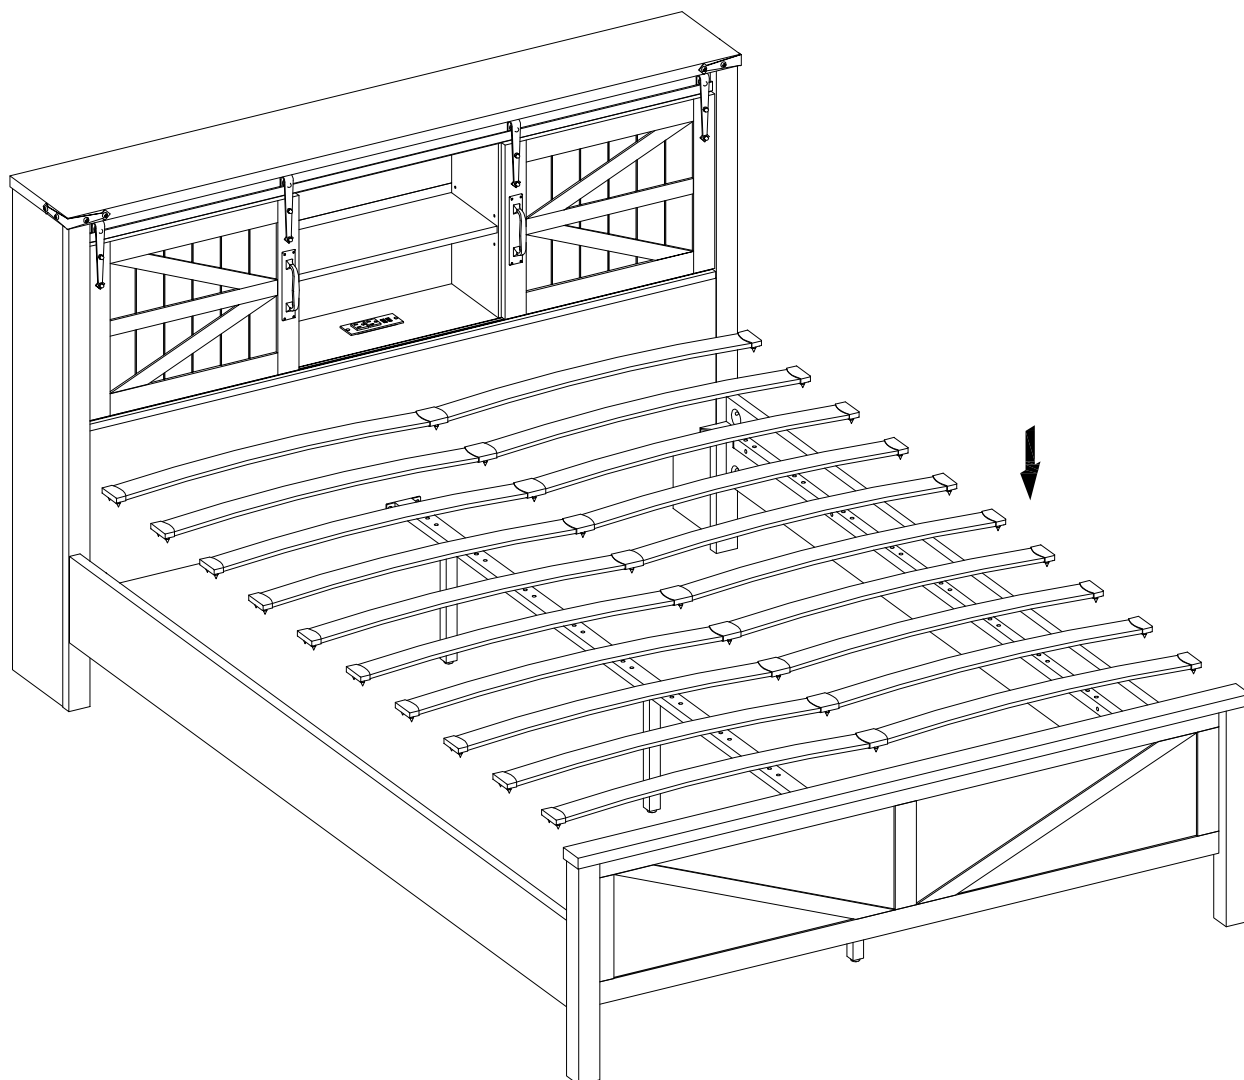

Step 28

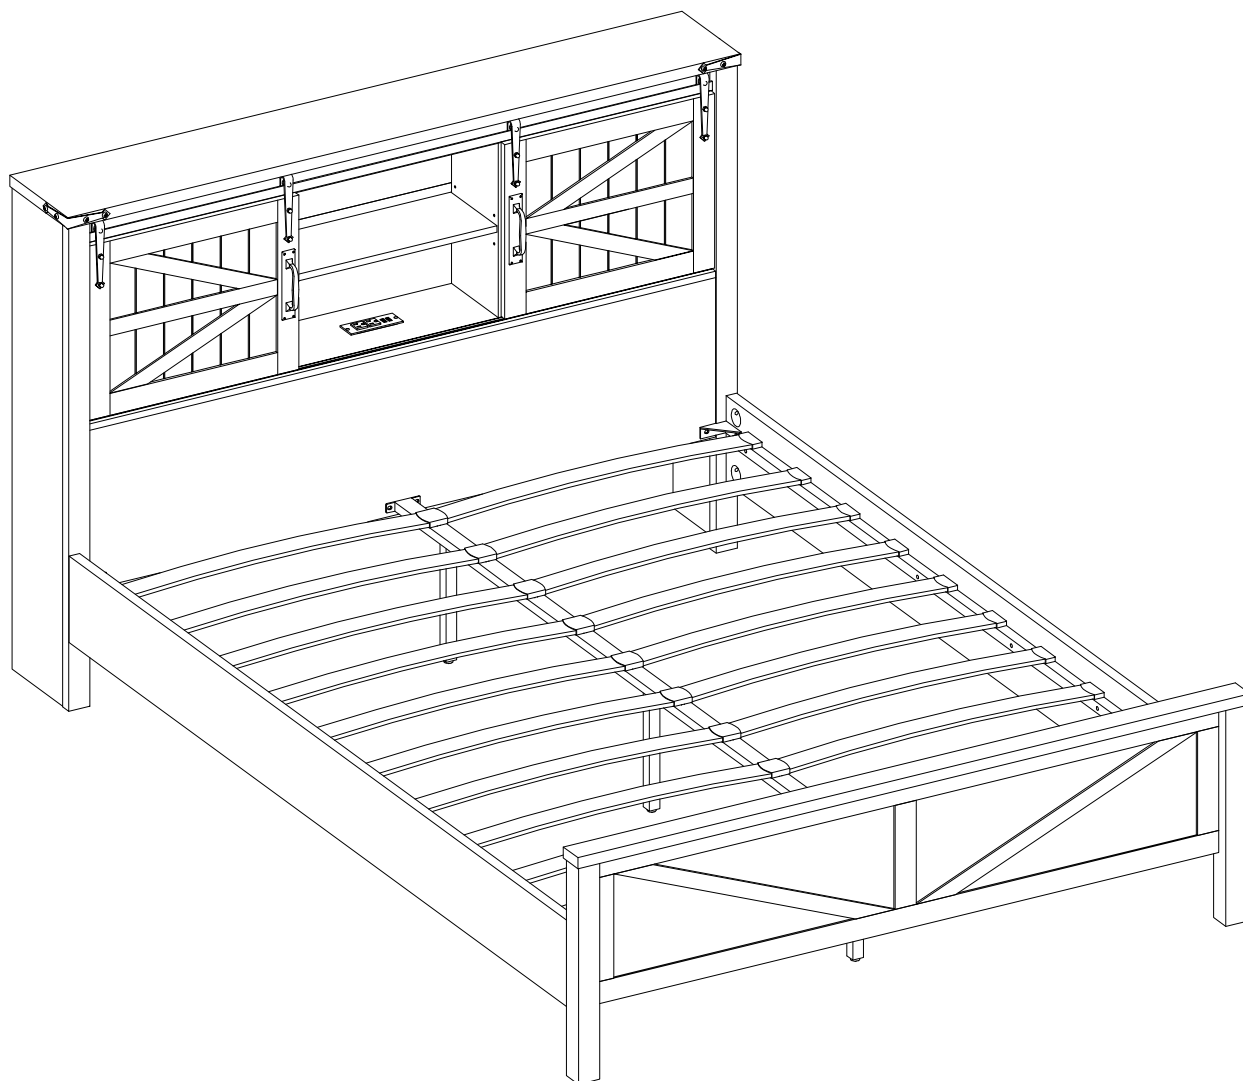

Final Assembly