

ASSEMBLY INSTRUCTIONS

ITEM# HT-17055




If you find any damage after opening, please be sure to take pictures of the damage and contact us. We will help you solve the problem as soon as possible.


THANK YOU

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.

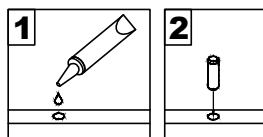


In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.

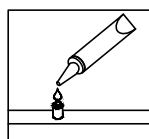


- VI. Insert cam lock into panel tighter with a screwdriver;
Note: Please don't over-tighten the cam lock, otherwise, it will be broken.

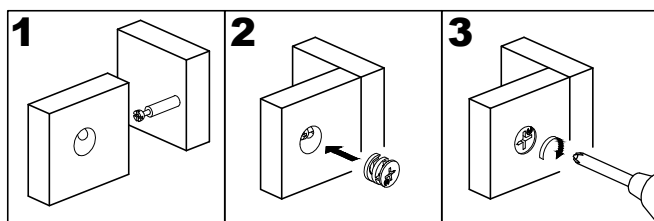

- VII. Power tools should not be used to assemble this product .

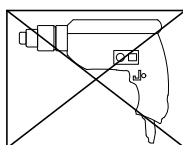


ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)

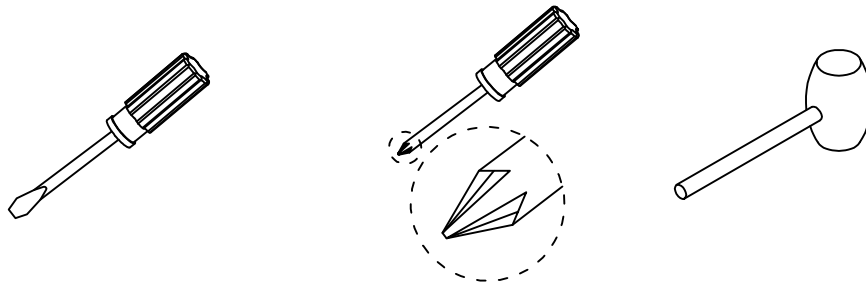


WOODEN DOWEL INSTALLATION PROCEDURE

Gently tap dowel into hole with rubber mallet

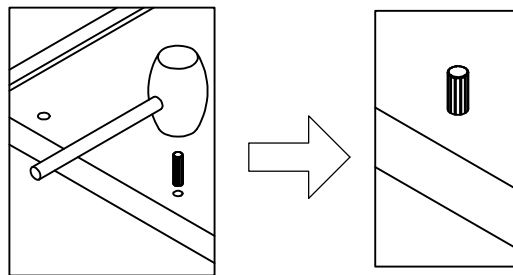
















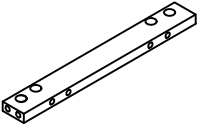
HIDDEN CONNECTOR.....ASSEMBLY TECHNIQUES

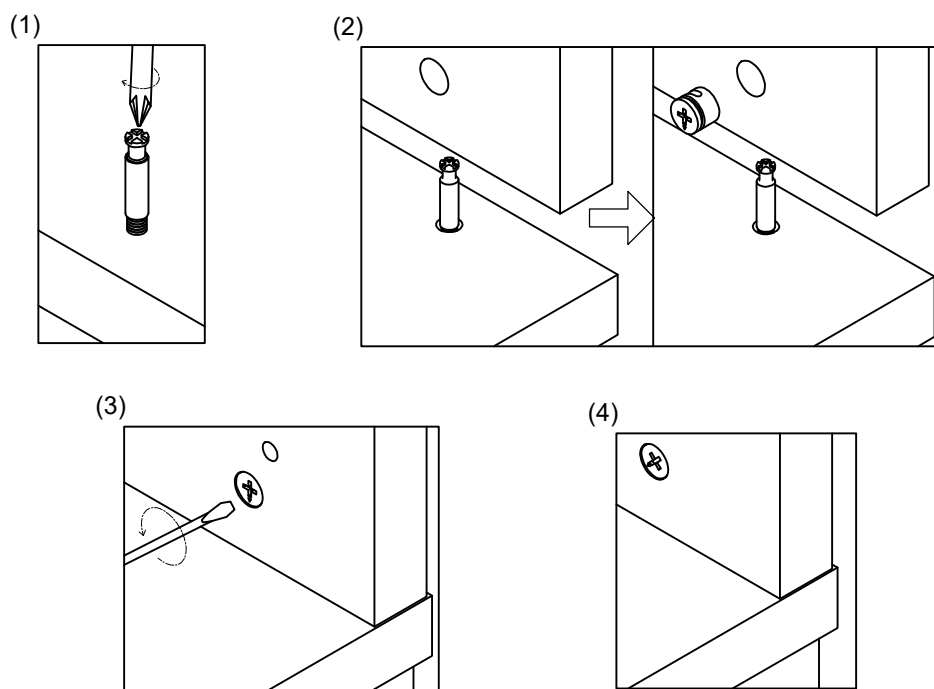

Note: Please don't over-tighten the cam lock, otherwise, it will be broken.

PARTS LIST

A Carton part list
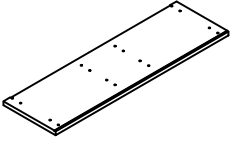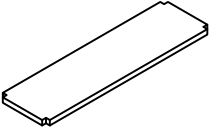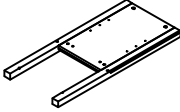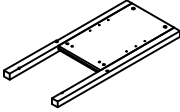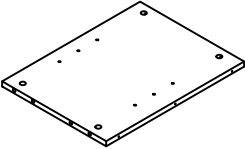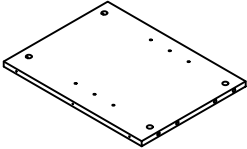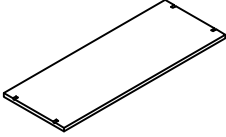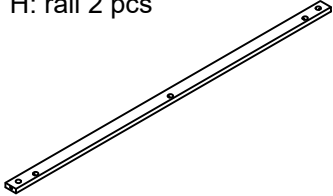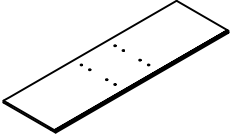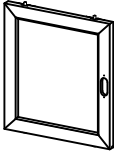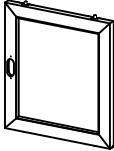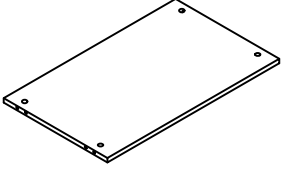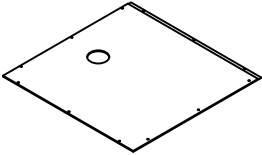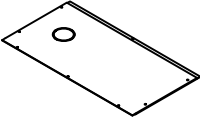
<p>A:Top panel 1 pc</p> 	<p>B:Bottom panel 1 pc</p> 	<p>C:Left panel 1 pc</p> 	<p>D:right panel 1 pc</p> 
<p>E: Left partition1 pc</p> 	<p>F: Right Partition 1 pc</p> 	<p>G:Shelf 2 pc</p> 	<p>H: rall 2 pcs</p> 
<p>I: Shelf 1 pc</p> 	<p>J:Left door 1 pc</p> 	<p>k:Right door 1 pc</p> 	<p>L: Fixed shelf 1 pc</p> 
<p>M:Back panel 2 pcs</p> 	<p>N:Mid Back panel 2 pcs</p> 	<p>P:Leg 1 pc</p> 	<p>HARDWARE PKG 1 pc IA 1 pc</p>
<p>Q:Reinforcing Strip 3 pcs</p> 			

PARTS LIST

HARDWARE LIST

1:Cam lock 44 pcs



Ø15*10.5

2:Cam bolt 36 pcs



Ø6*32

3:Wood plug 4 pcs



Ø8*30

4:Wood plug 32pcs



Ø6*30

5:Pull knob 2 pcs



6:Screw 4 pcs




Ø4x14

7:Wood screw 33 pcs



Ø3.0*12

8:Cam bolt 8pcs



Ø6*32

9: Bolt 4 pcs



M6*50(mm)


10.Spring washer 4PC



11.Washer 4PC



12.Hexagon socket key 1PC



13.Shelf support pin 8 pc




Ø8x5x16


14.Sticker 12 pcs




15 Glue tube 2 pc




Step 1

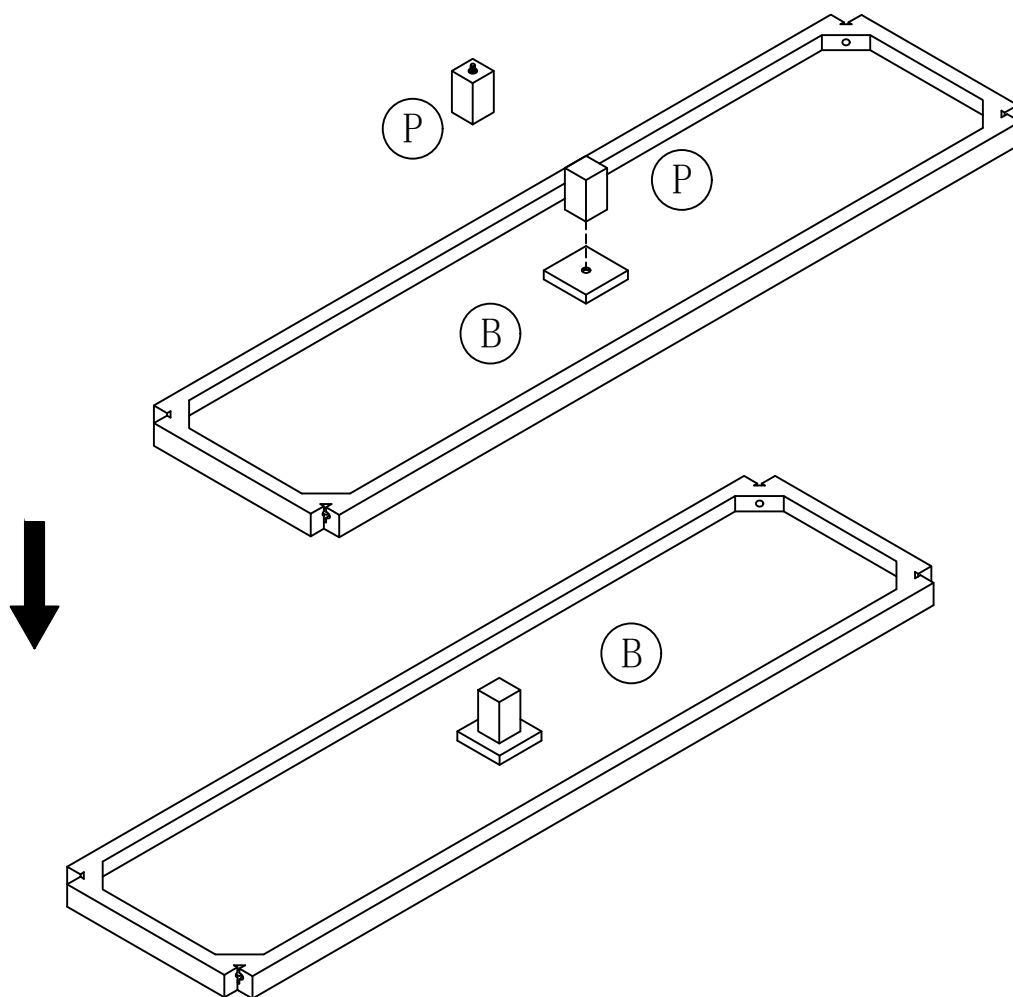





Step 2

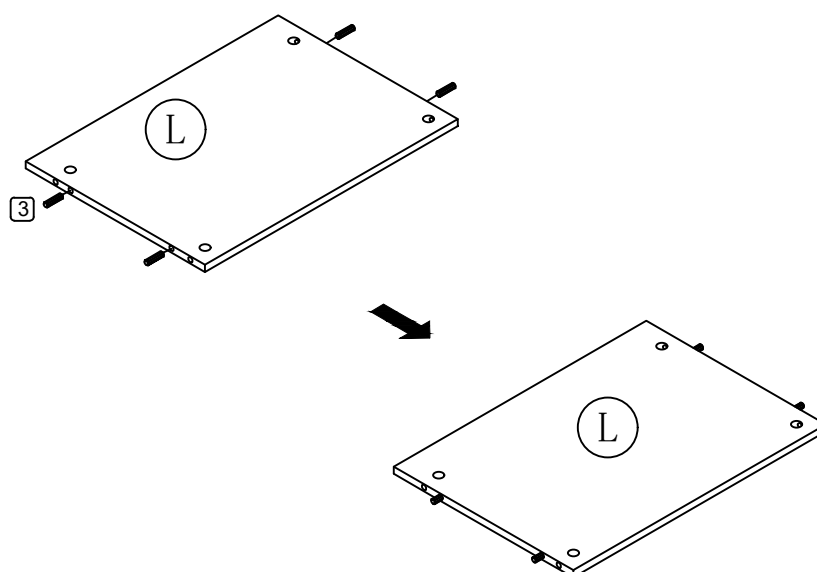4:  4 pcs



Step 3

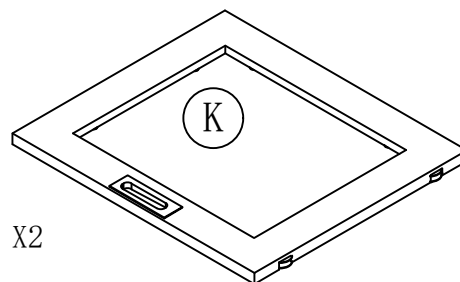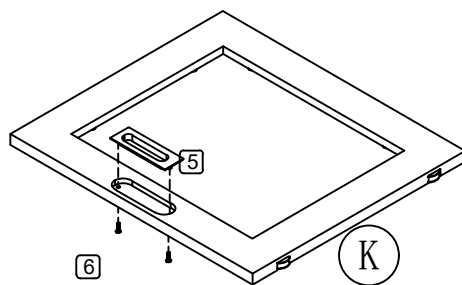

- | | | |
|----|---|-------|
| 5: |  | 2 pcs |
| 6: |  | 4 pcs |




X2

J & K is same way assembling


Step 4

- | | | |
|----|---|-------|
| 2: |  | 8 pcs |
| 3: |  | 4 pcs |

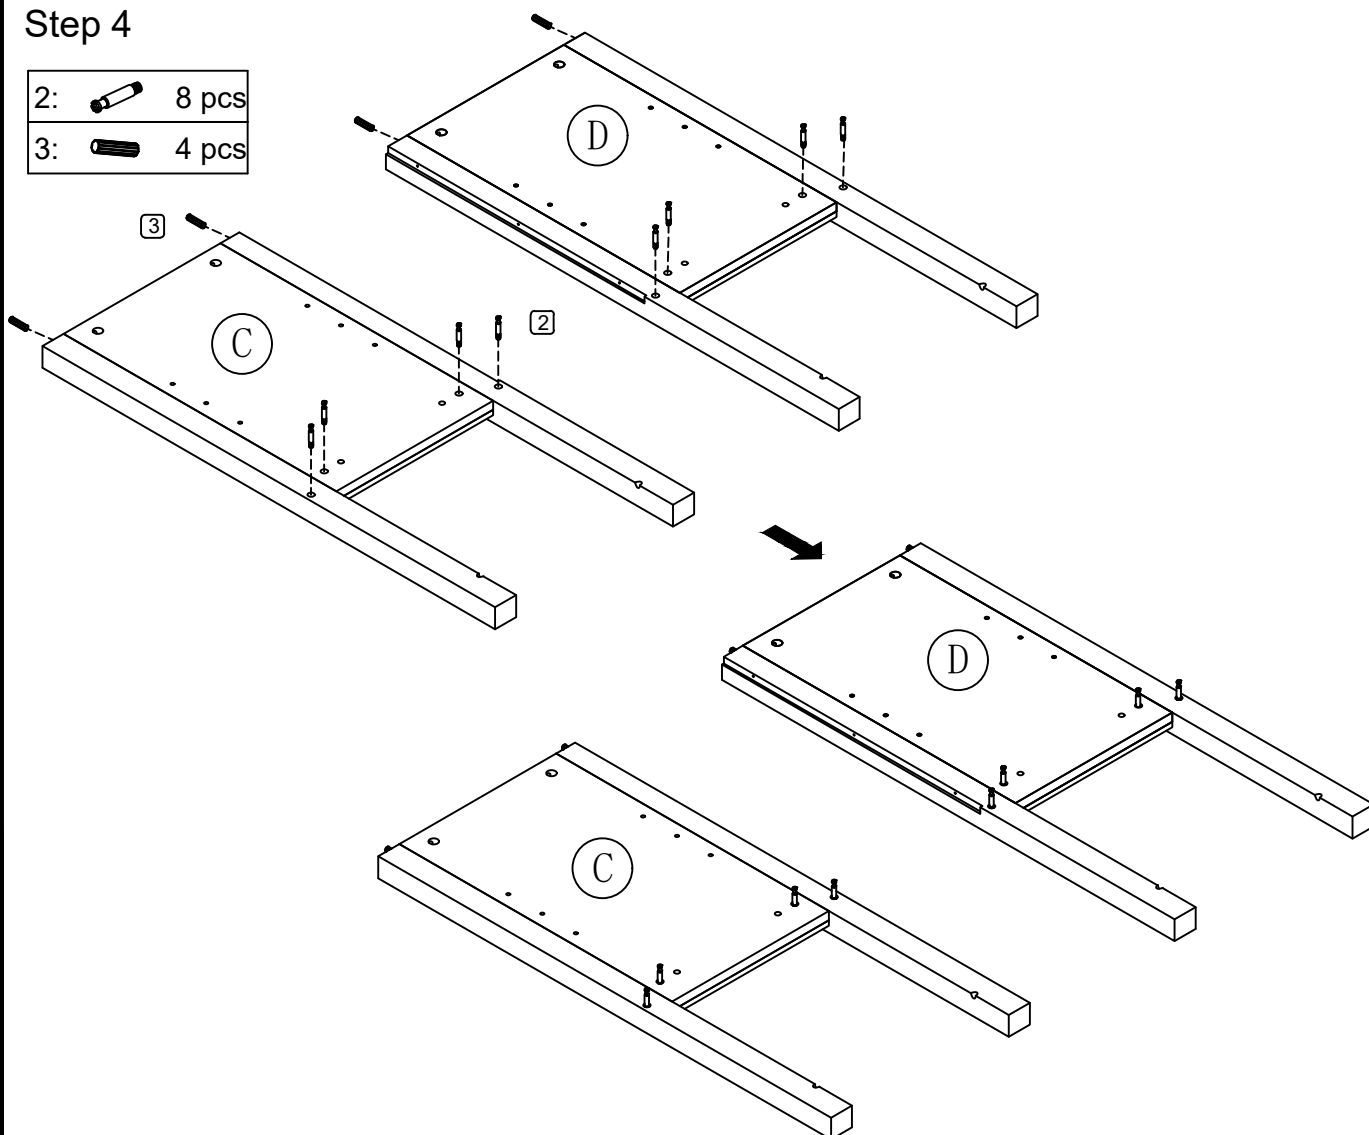


Step 5


2:  8 pcs

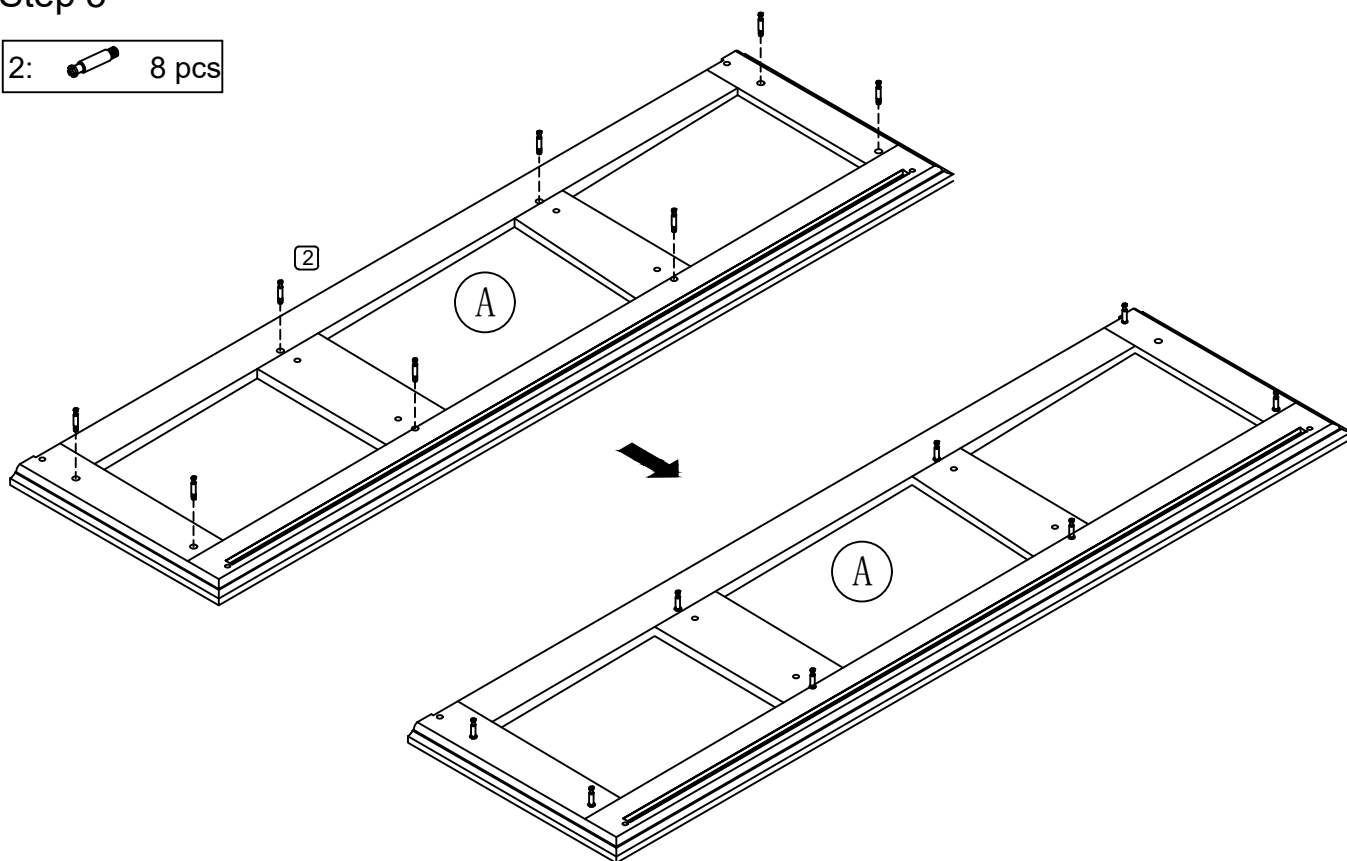


Step 6



2:  10 pcs


4:  4 pcs

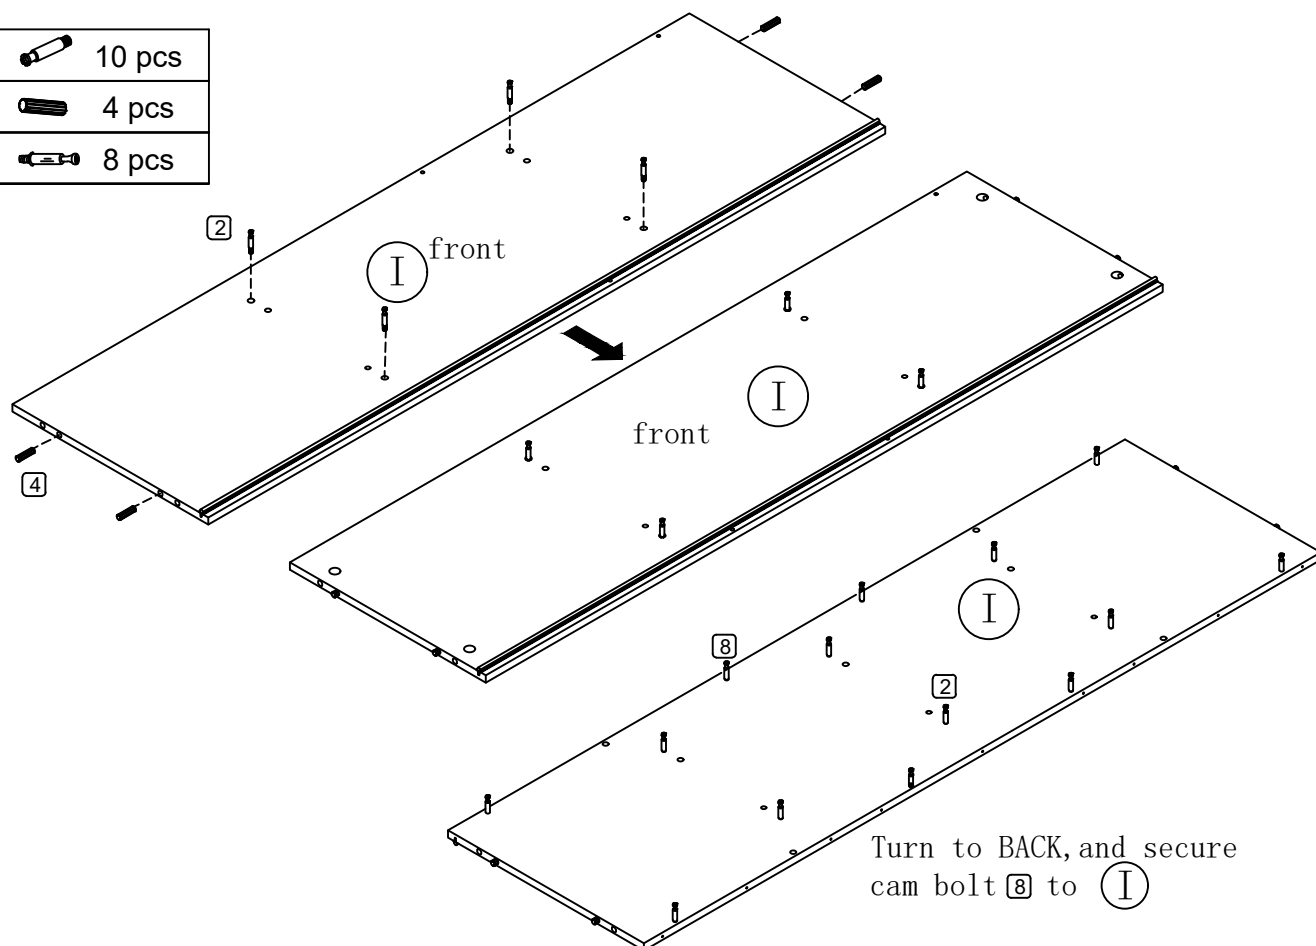8:  8 pcs




Step 7

2:		10 pcs
4:		24 pcs

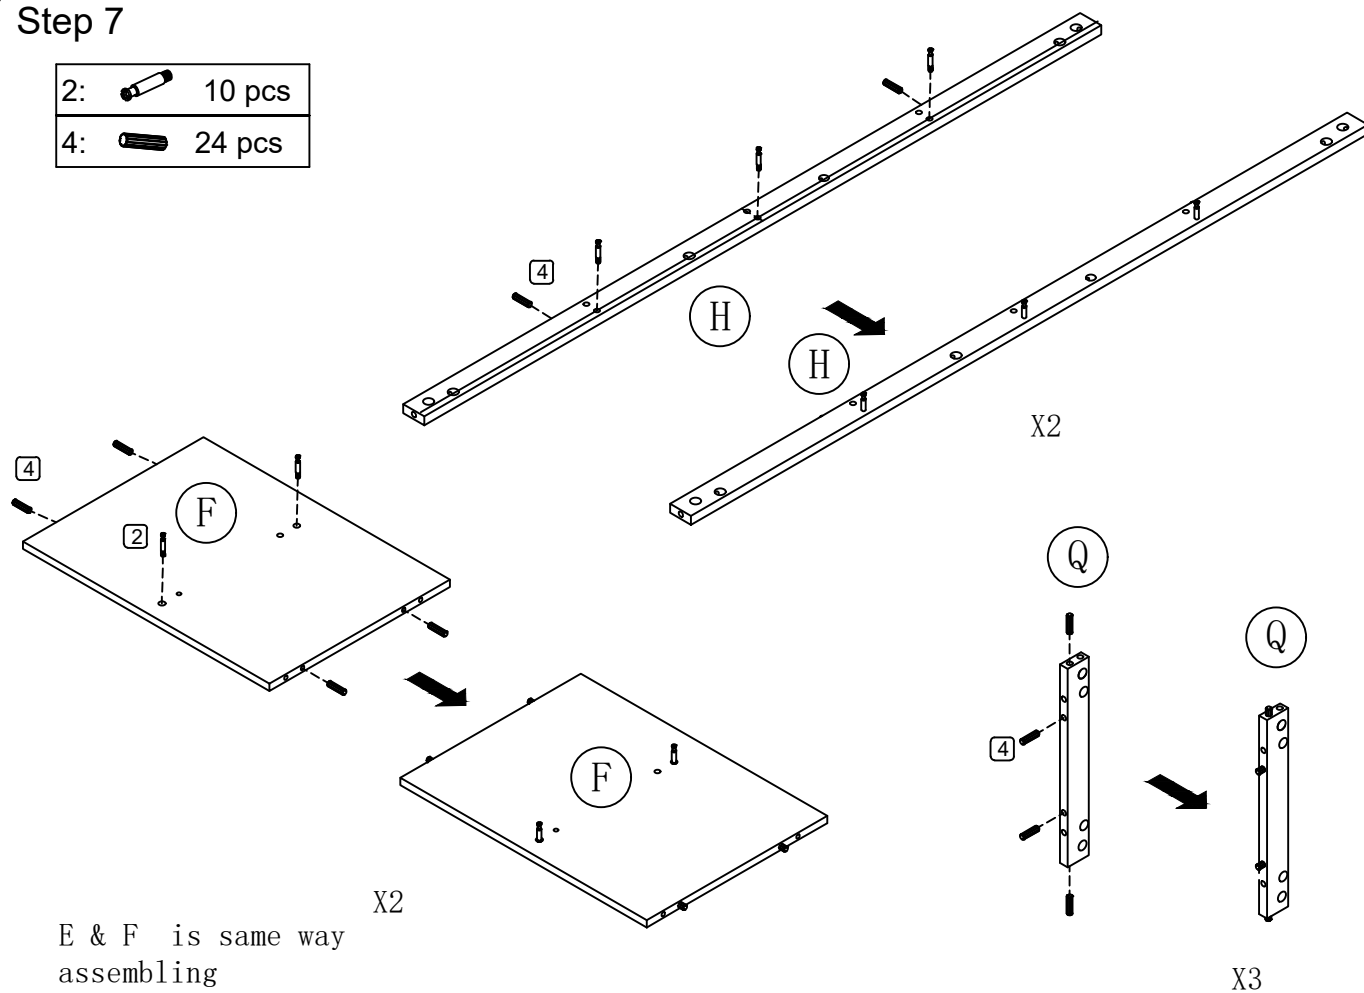


Step 8

1:		4 pcs
----	---	-------

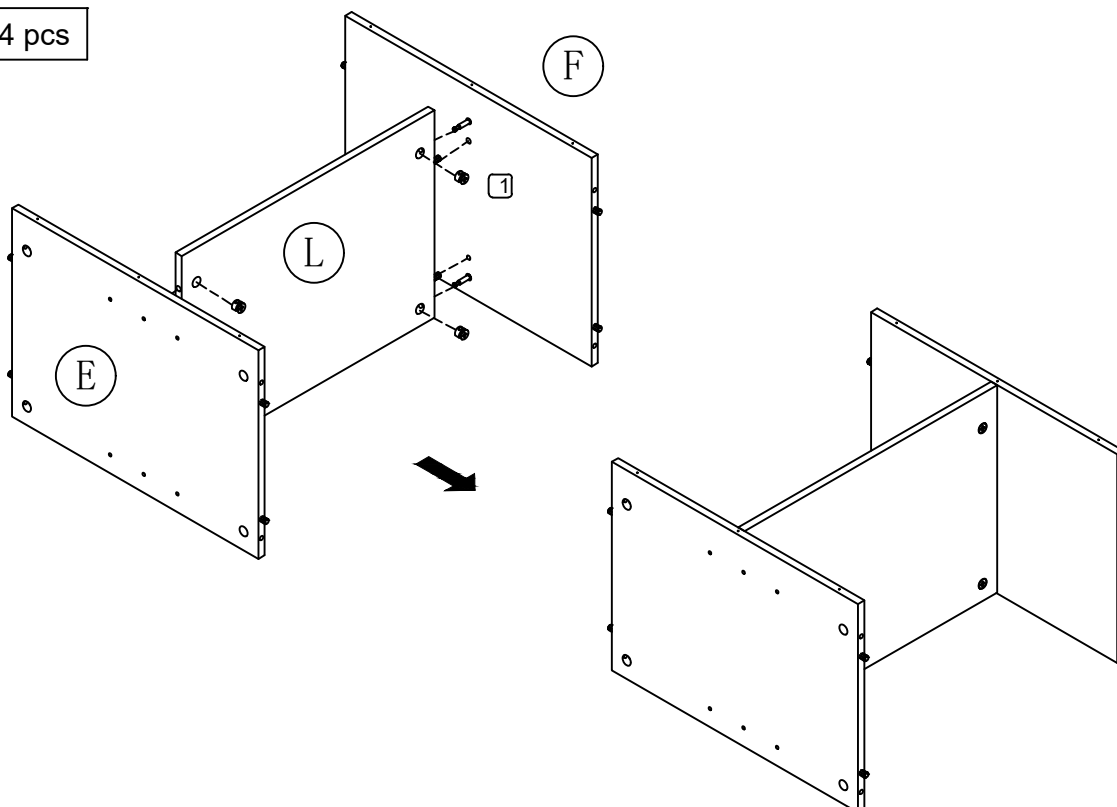


Step 9

1:  24 pcs

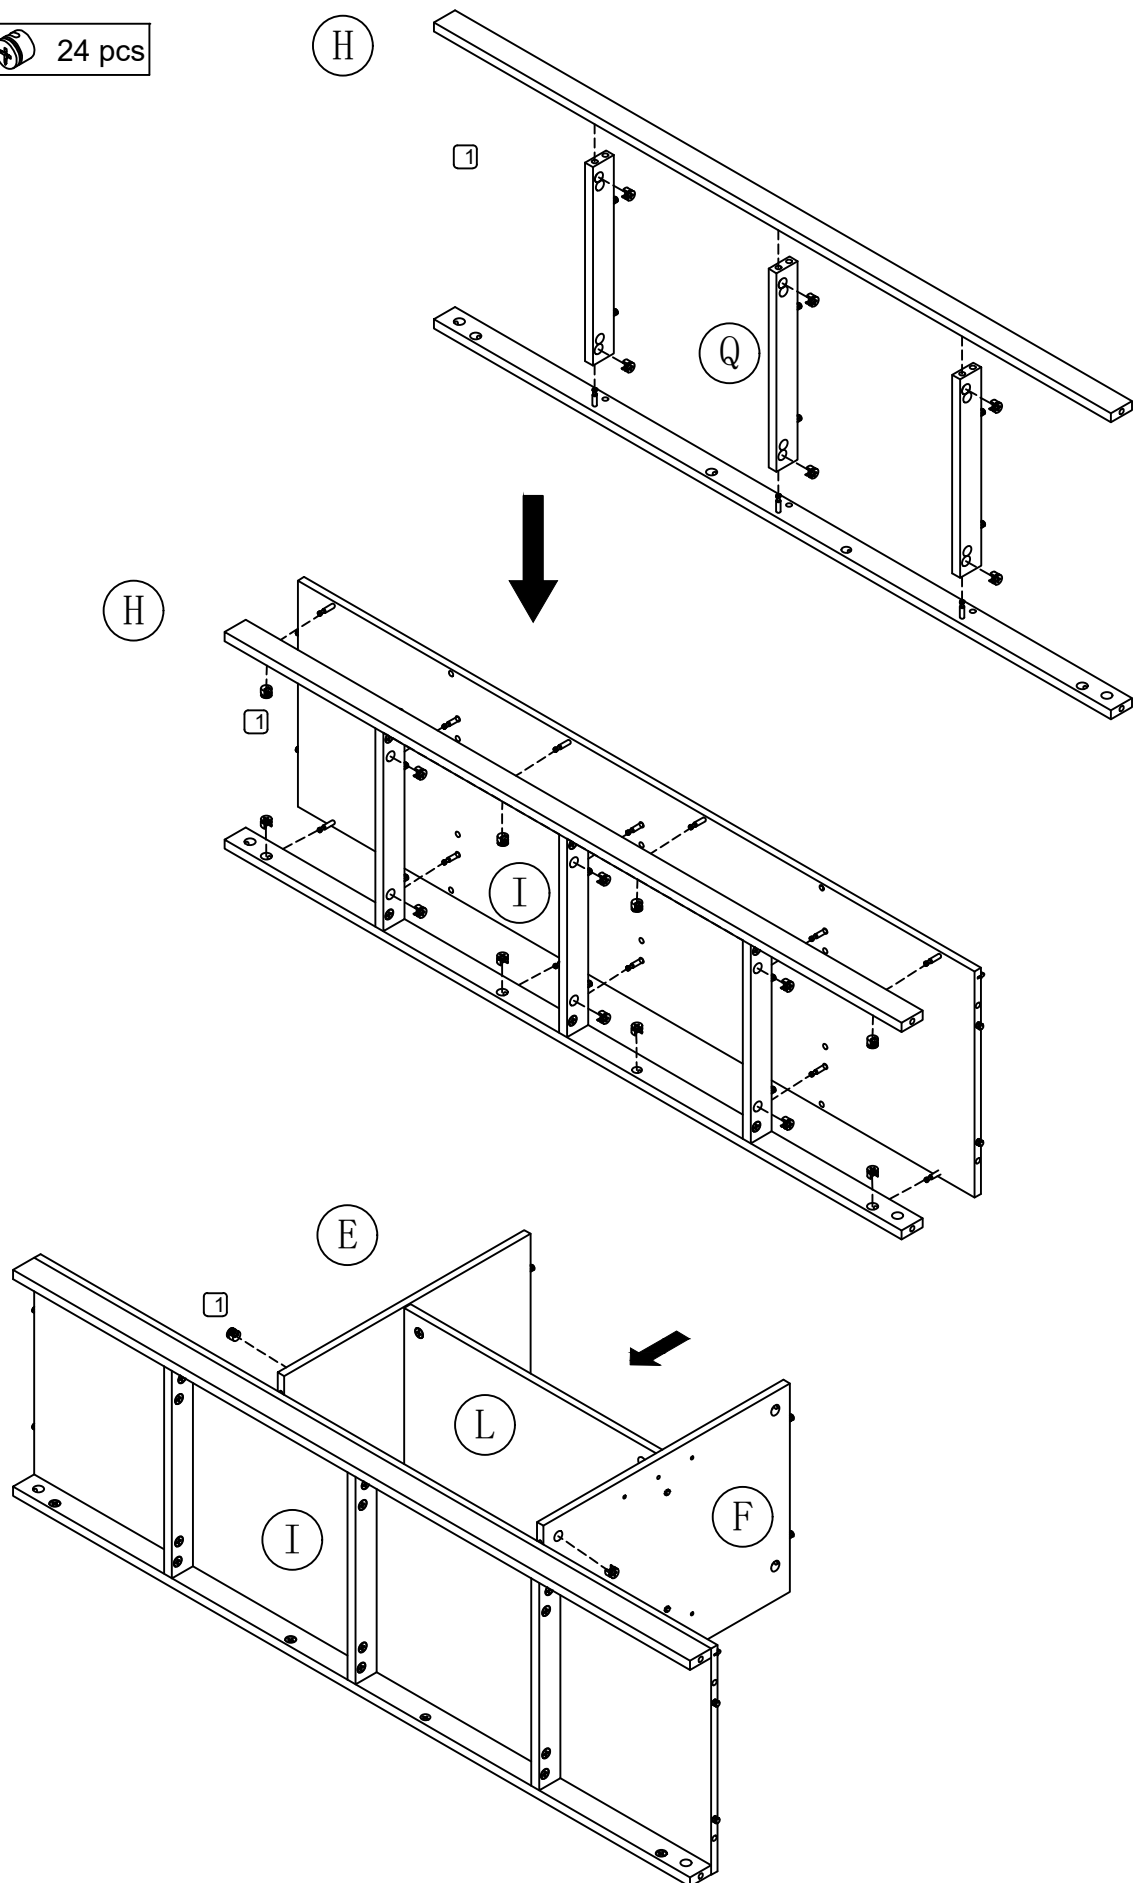


Step 10

1:  8 pcs

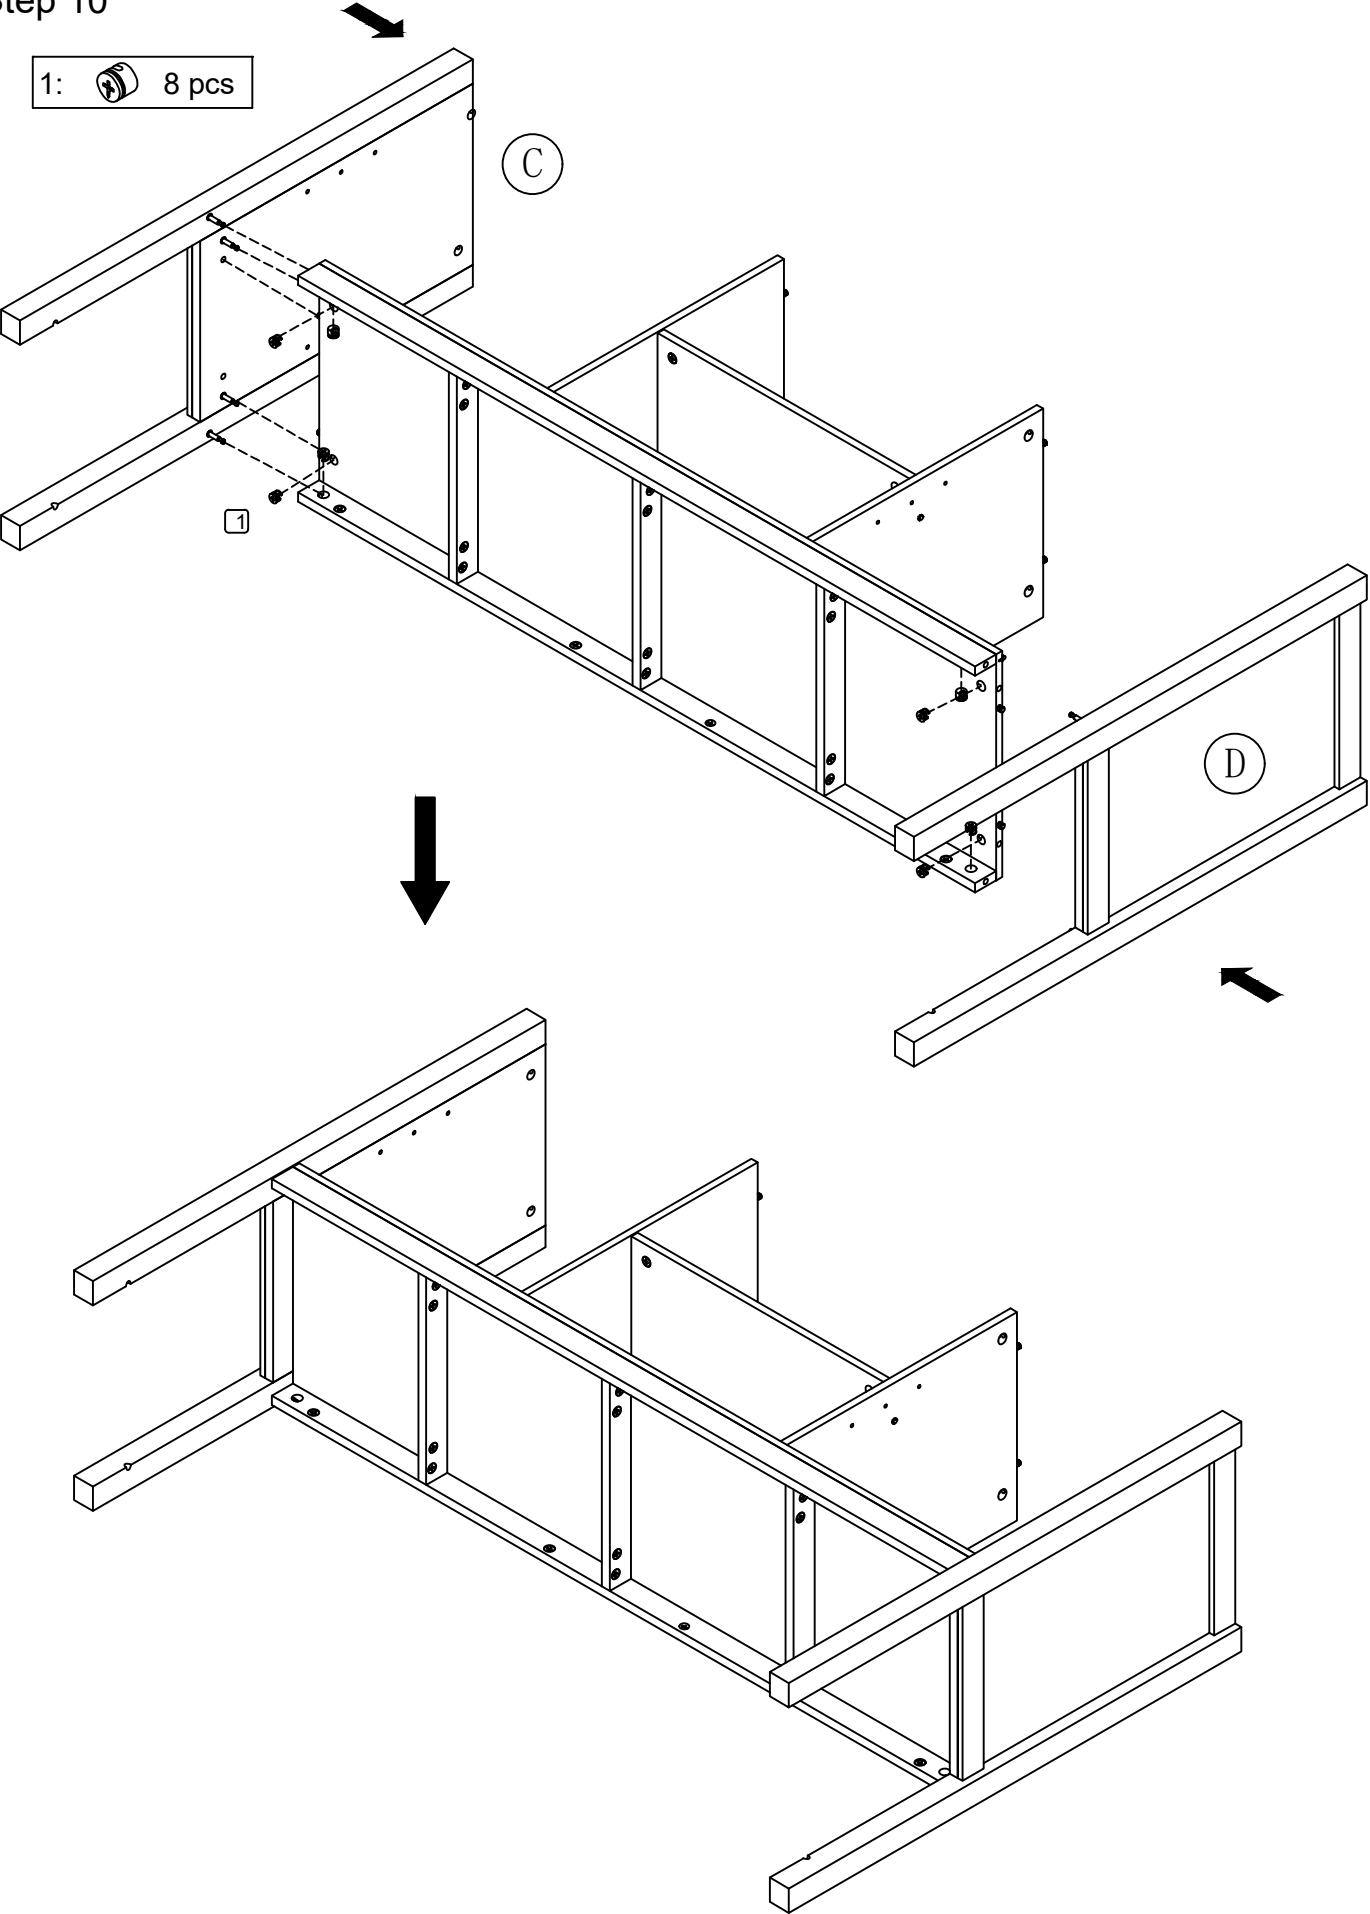





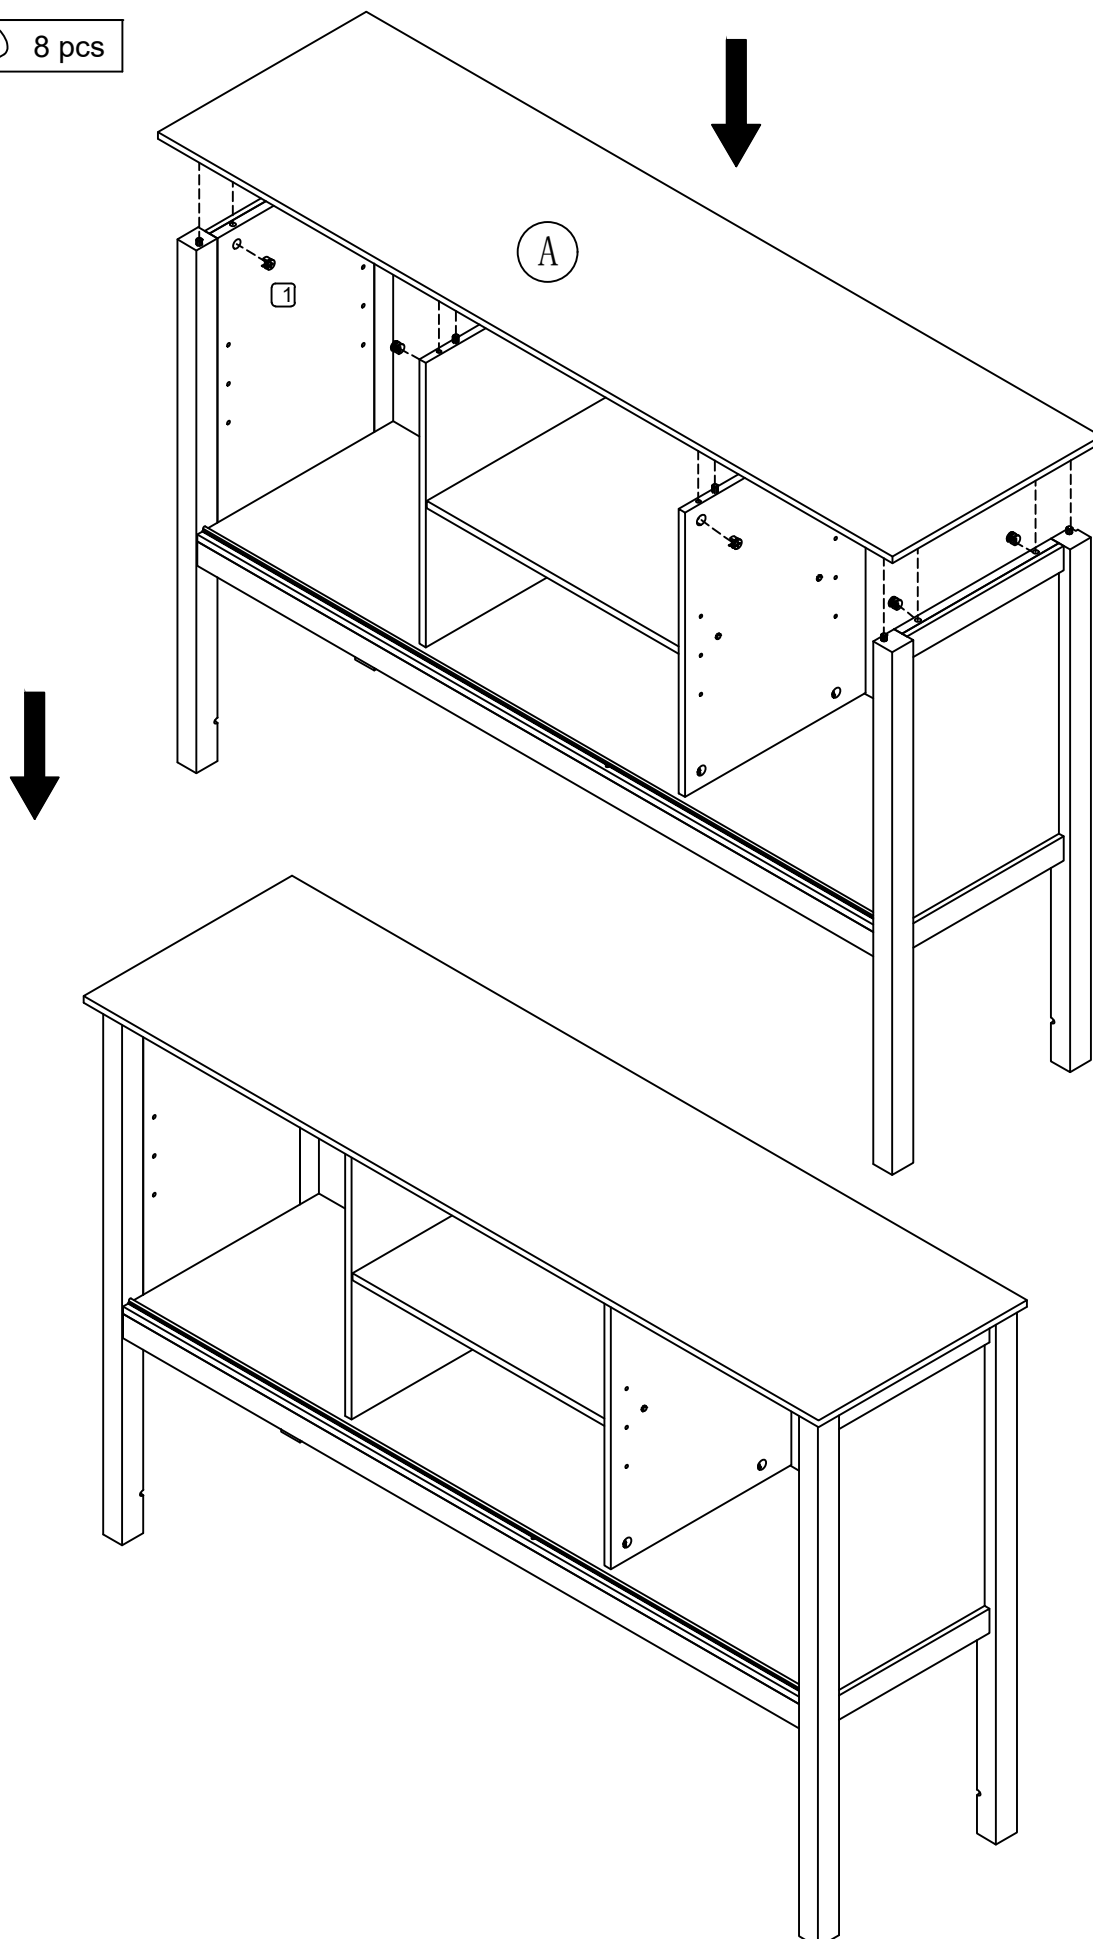


Step 11

1:  8 pcs




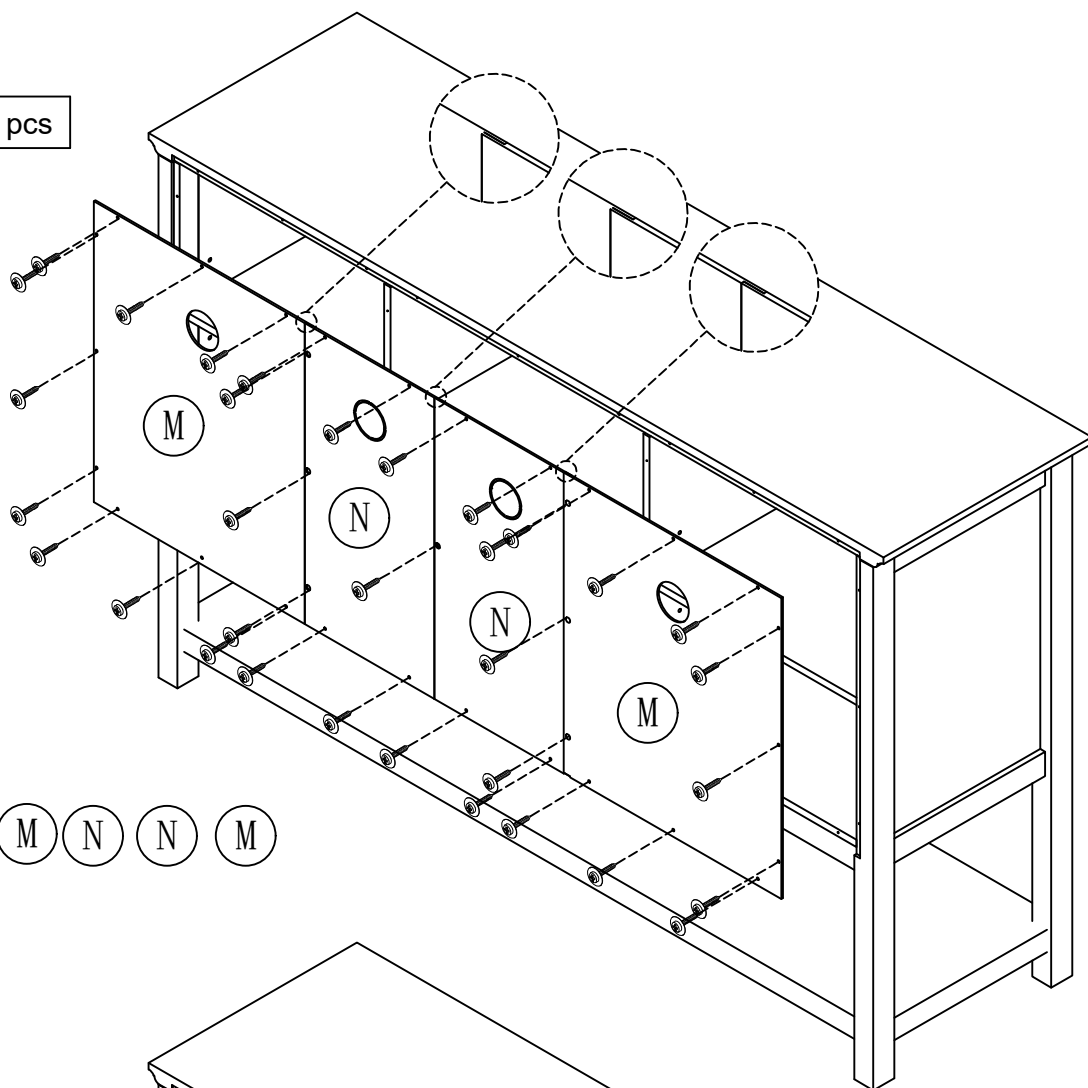
Step 12

9:  4 pcs	13:  8 pcs
10:  4 pcs	14:  12 pcs
11:  4 pcs	
12:  1 pcs	

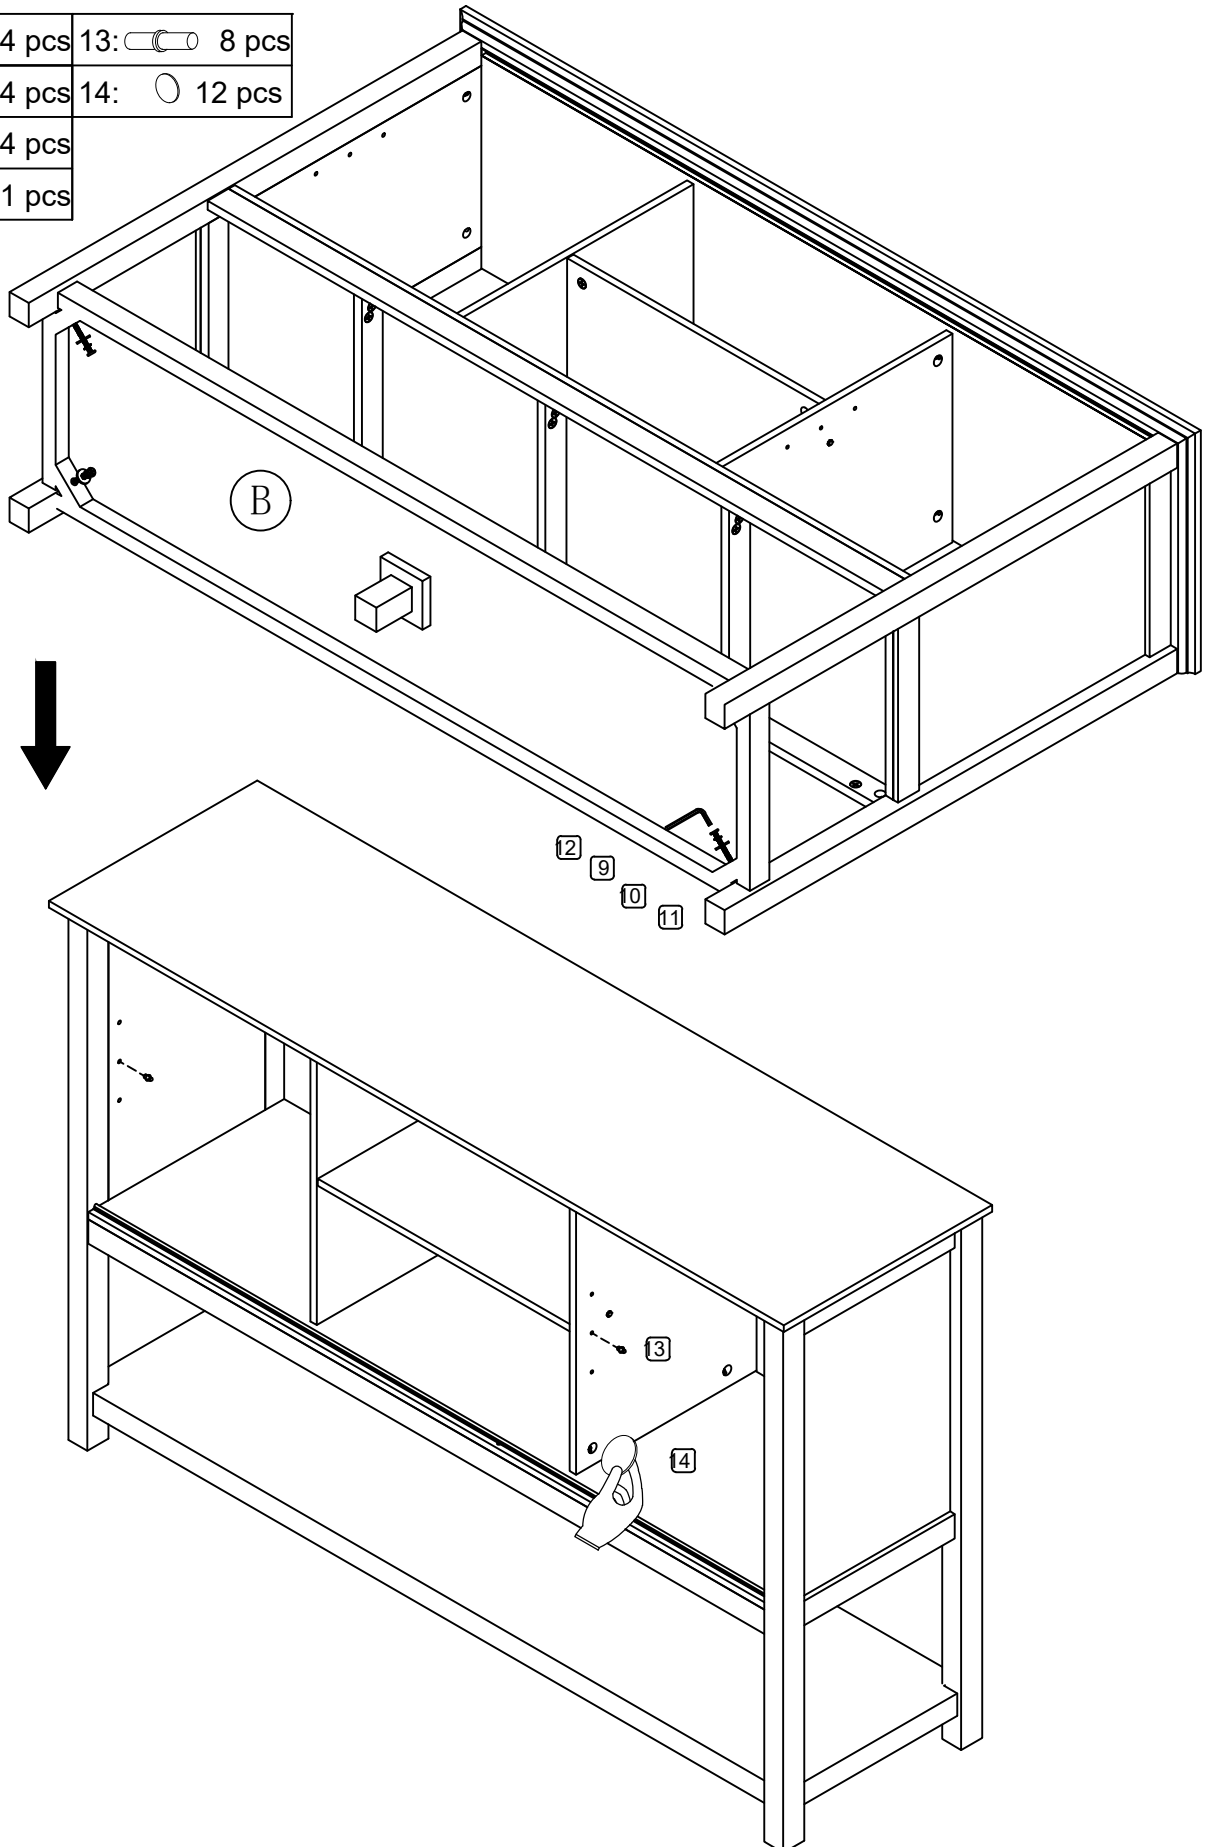

Step 13


7:  33 pcs





Sequence: (M) (N) (N) (M)



Step 14

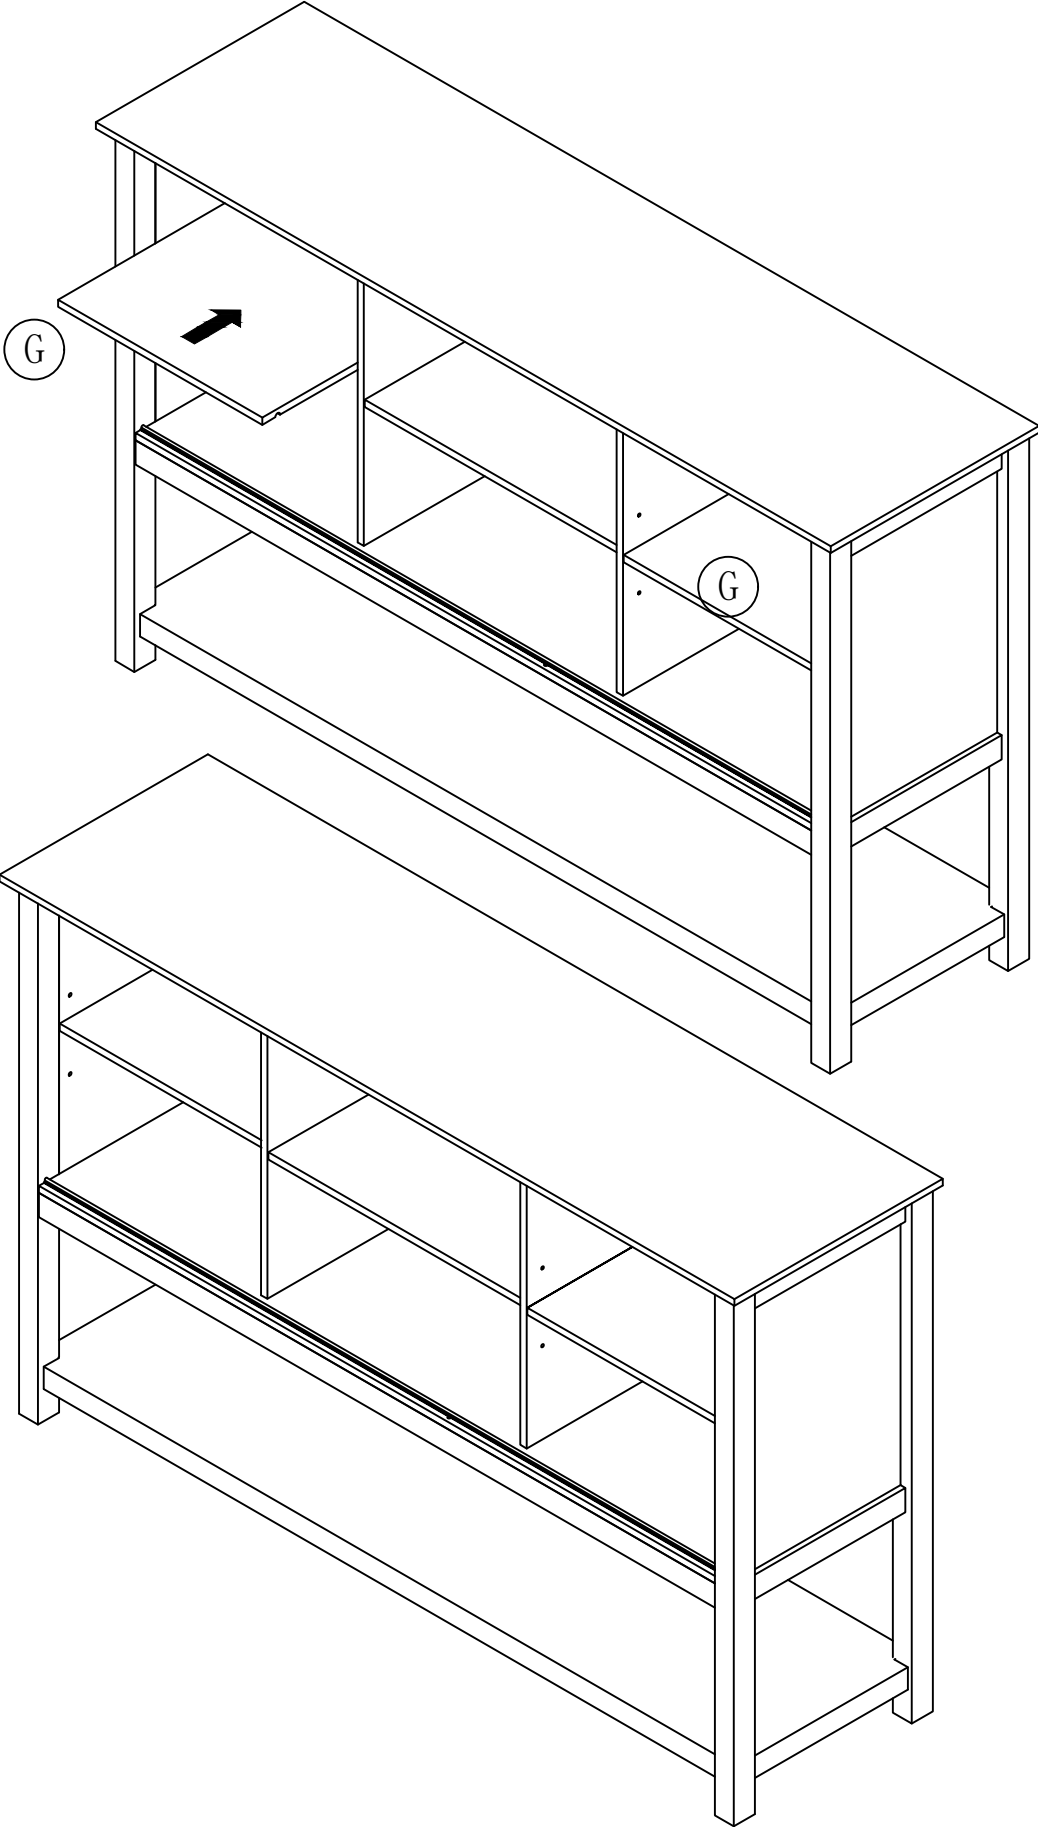

Step 15

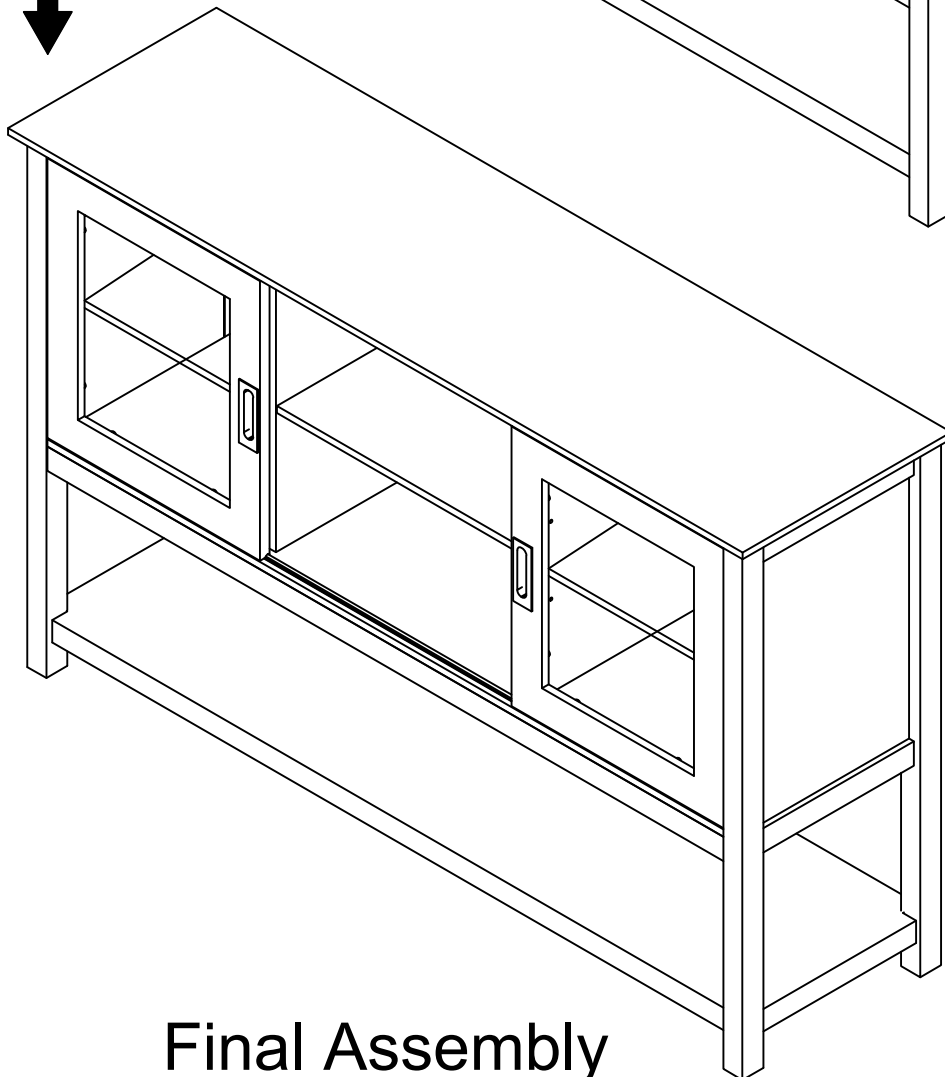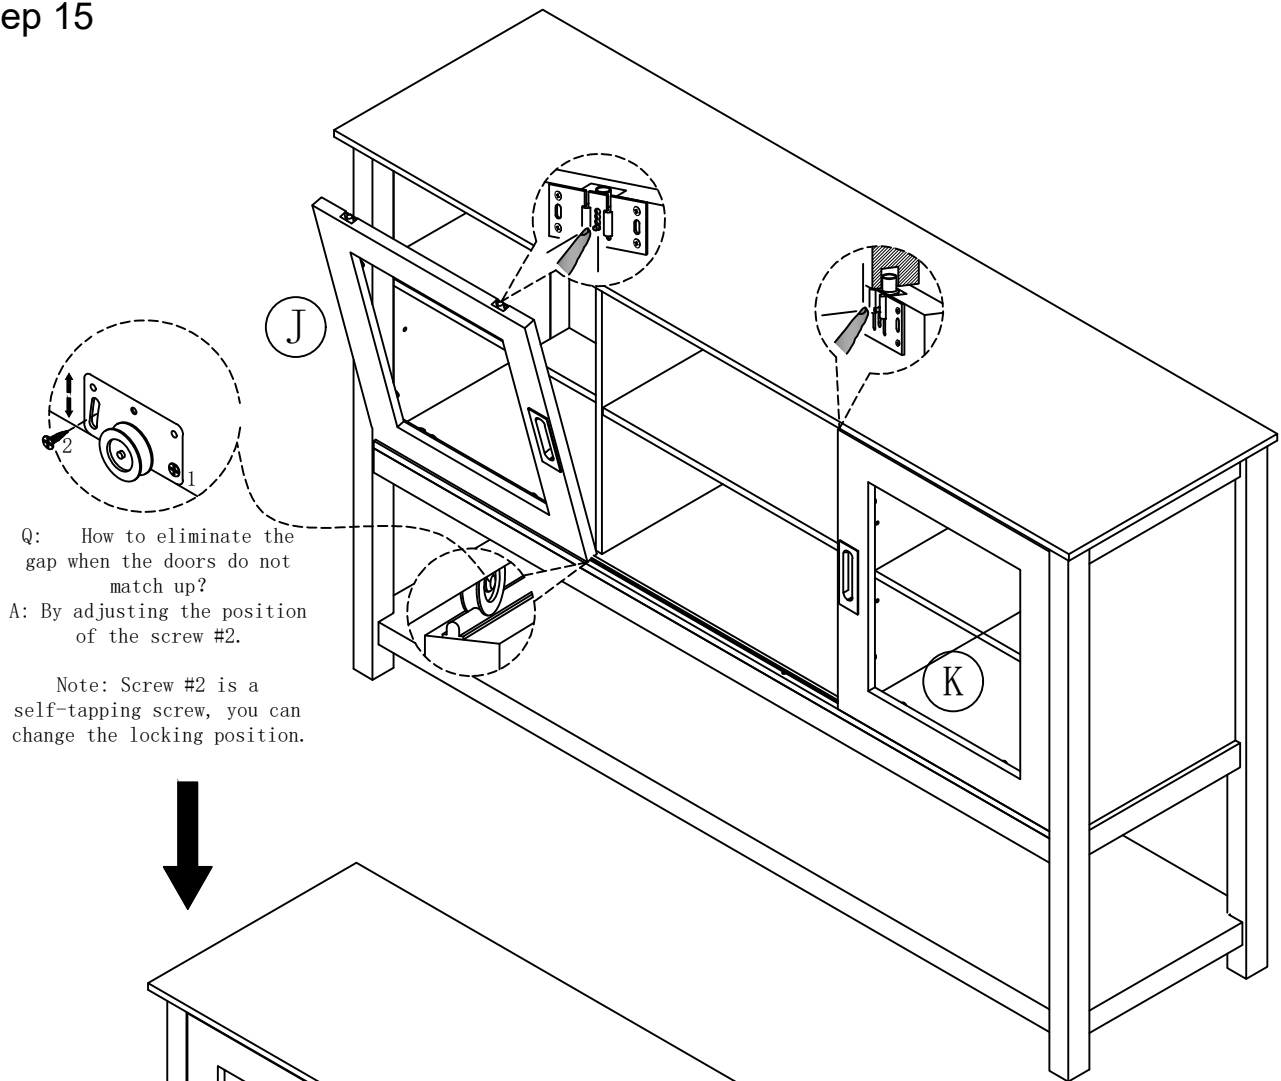

Final Assembly