


Assembly Instructions


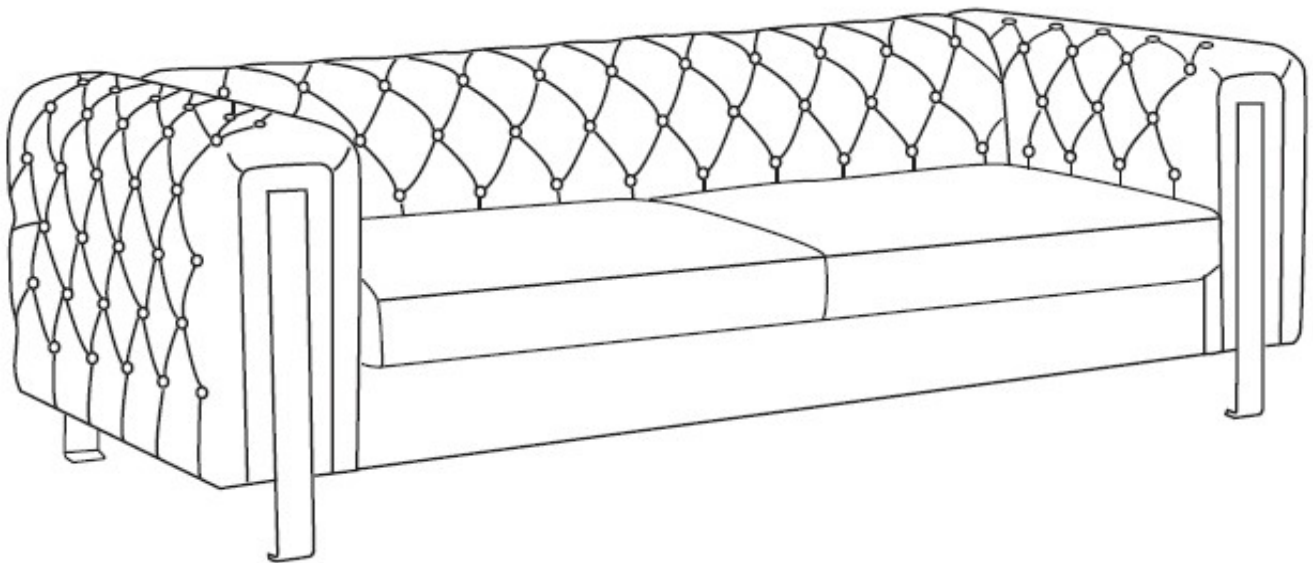



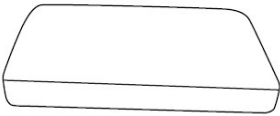
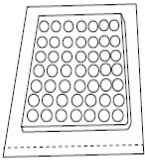

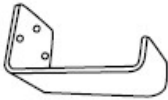
Caution: You must read this before you proceed.

Look In the Armrest and Backrest Housing for Seat Cushion, Hardware packs and Legs.





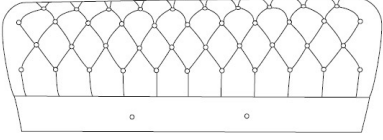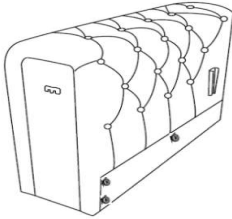



SOFA



Part List


Label	Picture	Description	QTY
A		Backrest (with pre-attached Tapered Connectors)	1
B		Left Armrest (with pre-attached Tapered Connectors)	1
C		Right Armrest (with pre-attached Tapered Connectors)	1
D		Seat Base (with pre-attached Handle Straps (at the Top Side) and pre-attached Metal Brackets (at the Bottom Side)	1
E		Front Rail (as shown here from the inside - with Wooden Support Bar)	1
F		Seat Cushion / Cover	2
G		Compressed Seat Spring Package	2
H		Front Leg	2
I		Back Leg	2

Hardware List

Label	Picture	Description	QTY
①		Bolt (M8*25MM)	11
②		Bolt (M8*40MM)	3
③		Flat Washer (M8)	11
④		Spring Washer (M8)	11
⑤		Allen Wrench(S5)	1
⑥		Bolt (M6*20MM)	5
⑦		Metal Bracket	2
⑧		Allen Wrench(S4)	1

Assembly Preparation

Before Beginning Assembly:

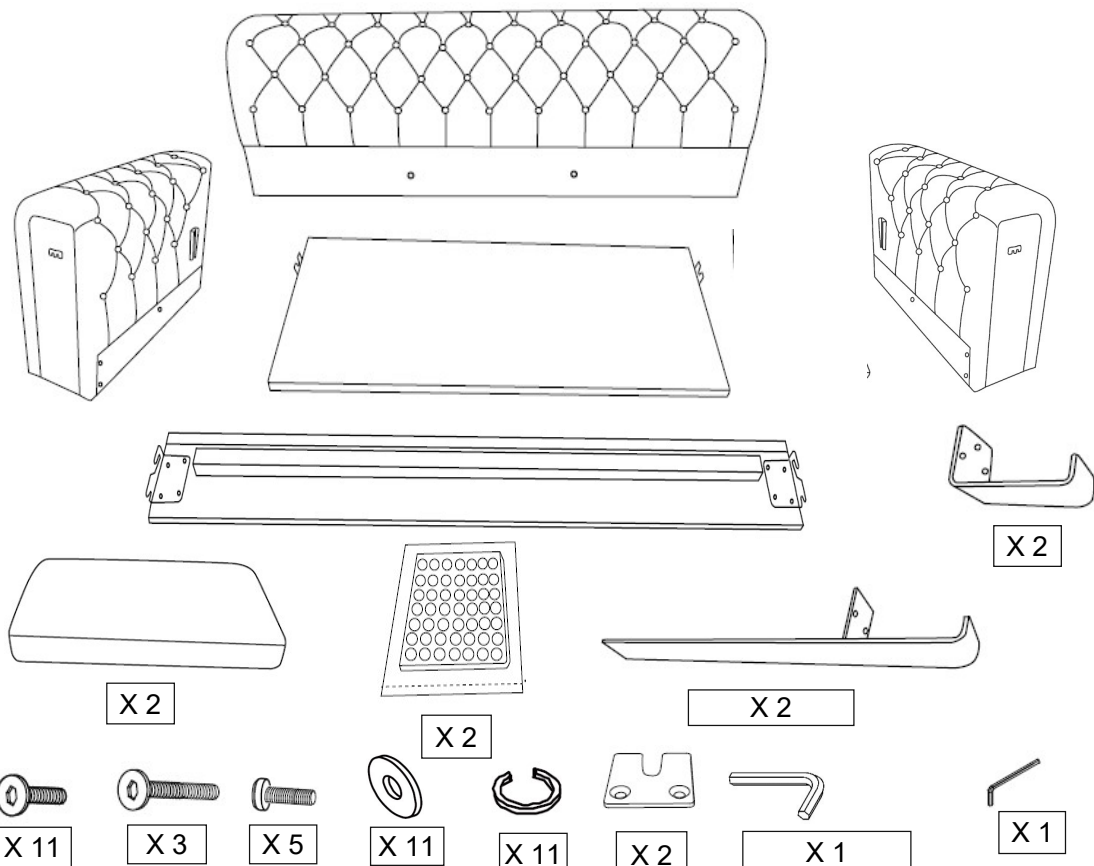

• Read instructions, cover to cover-



• Have 2 adults on hand for assembly-



• Do not assemble on flooring or carpet-




• Assemble on a clean non-marring surface (packing foam)-



• Save all packaging until finished-

Assembly Steps

OVERVIEW

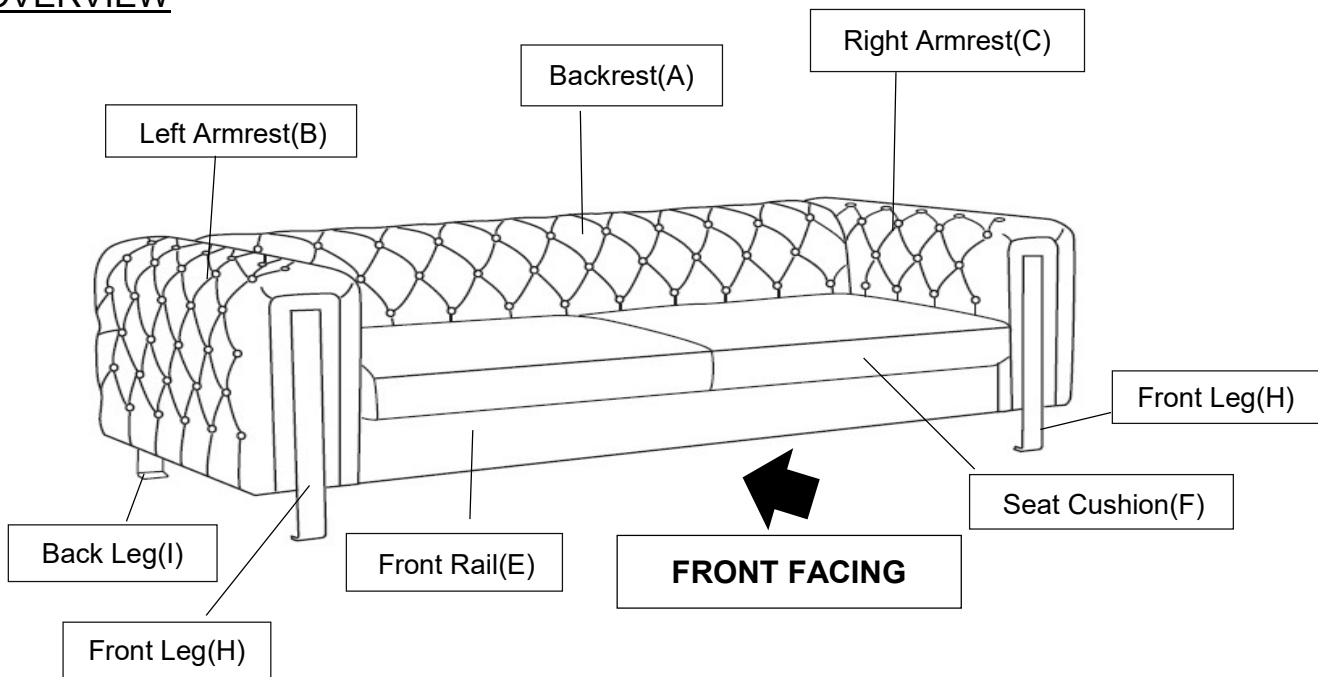


This Sofa has multiple parts and may require up to 60 minutes to assemble.

To give you an overview of the Sofa parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Note: It is recommended that you have an adult partner to assist during the entire assembly process.

Step 1

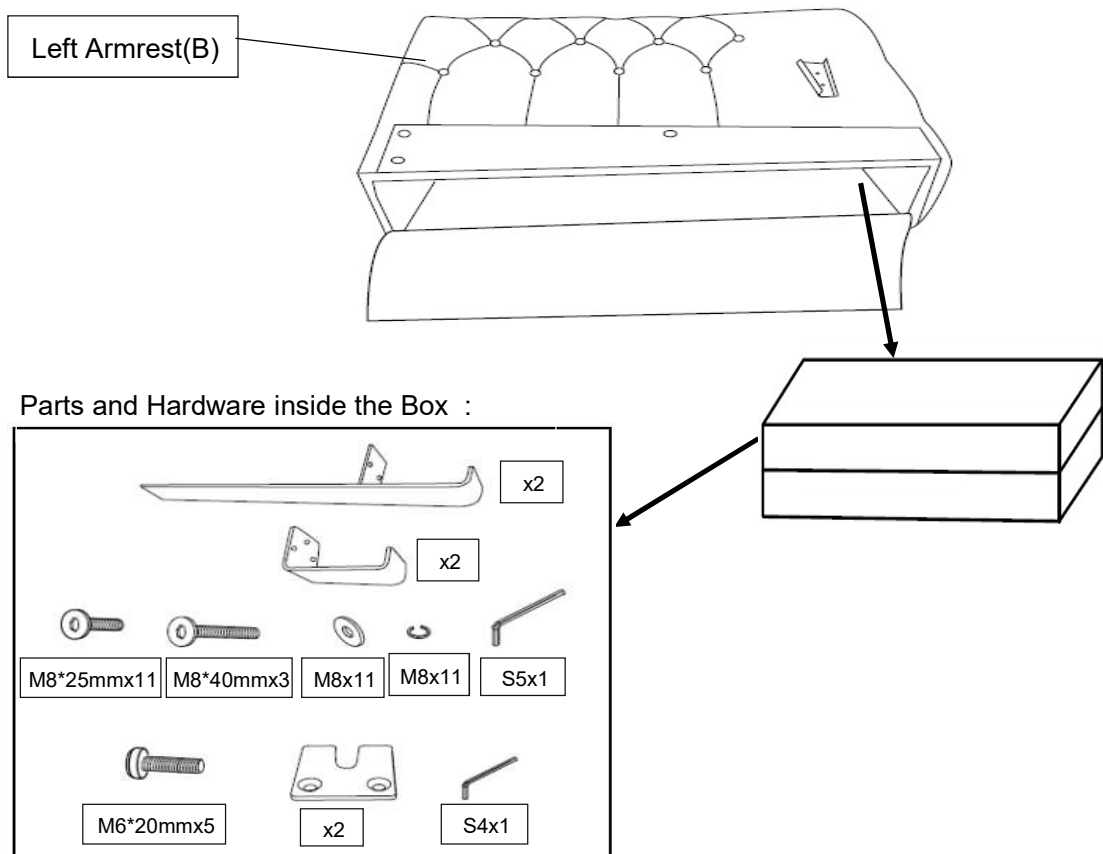

Open the carton and place all the parts on a clean, non-marring surface.

Place the Left Armrest(B), flat on the floor with the base facing you.

Peel off the Black non-woven fabric at the underside of the armrest.


Retrieve the carton box that is stowed inside the Armrest housing.

Inside the box - you will find the Hardware package and Leg(H)&(I) as shown above.

Seal back the Black Non-Woven fabric to its original position and condition.

With your hand, smooth down the fabric / magic tape over the bottom edge of the armrest frame.

Step 2

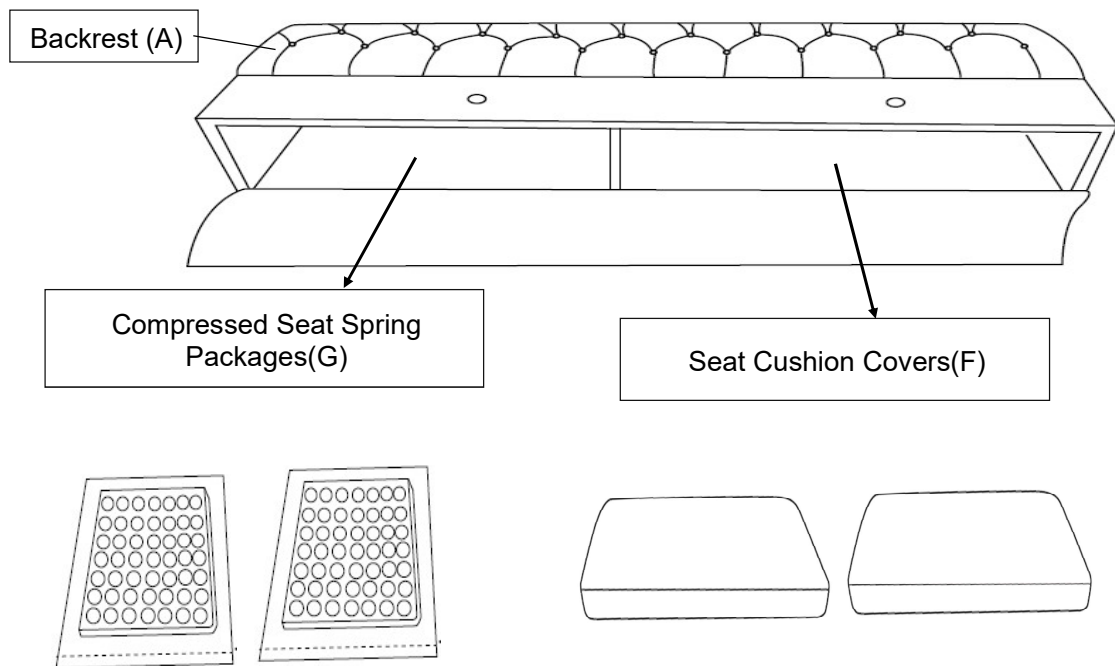

Here, in Step 2, place the Backrest(B) panel flat on its back.

Peel off the Black non woven fabric at the base of the Backrest panel, and you will see packages inside.

Retrieve these packages and these are : Compressed Seat Spring packages and the Seat Cushion Covers.

These Cushion Covers are packed inside a White Non Woven wrap.


Open up these packages in preparation for the Seat Spring(G) to be placed inside.

Note : 2 pcs of Seat Cushion are packed in non-woven fabric and are not compressed.

Upon completion of retrieving these packages, seal the Black non woven fabric back to its original position / condition.

With your hand, smooth down the fabric / magic tape over the edge of the backrest frame.

Step 3

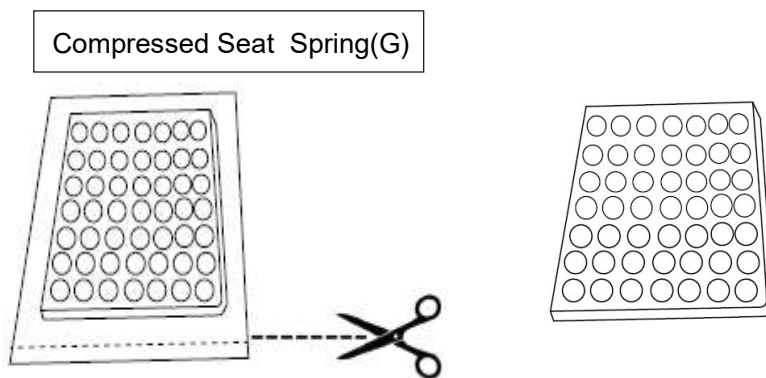

Next, cut the package to the Compressed Seat Spring(G) along the side, as shown above.


Note : Scissors not provided.

Retrieve the Compressed Seat Spring(G) from the package.

Repeat the same step with the other Compressed Seat Spring(G) package.

Caution : Exercise caution so that you do not cut the Compressed Seat Spring item.

Step 4

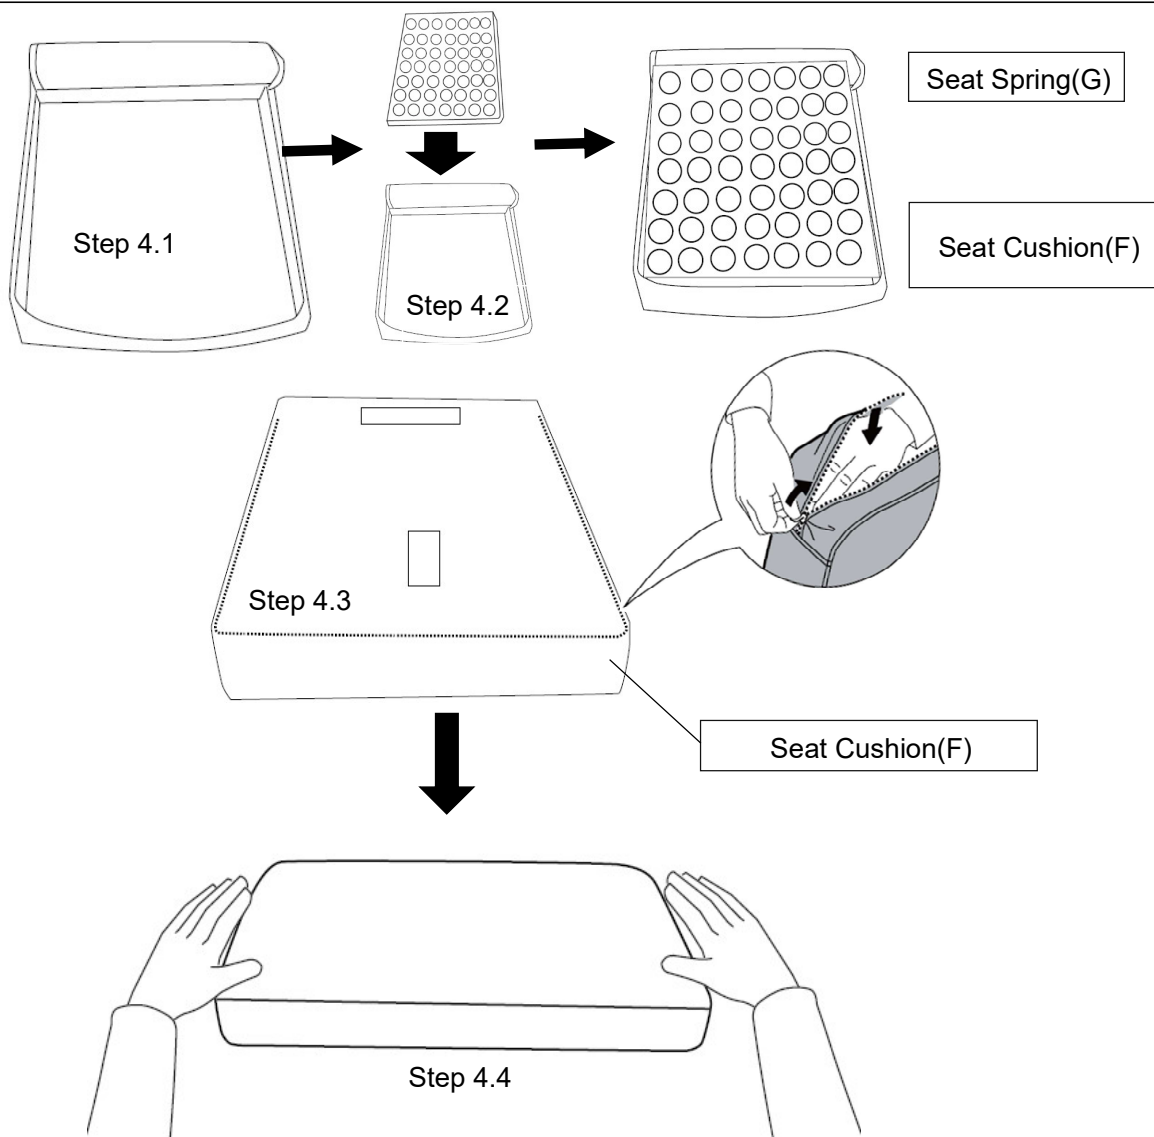

Here Step 4 involves 4 sub-steps to place the Spring Seat into the Cushion Cover.

Step 4.1 - Turn the Cushion Cover(F) upside down. Open by unzipping from edge to edge.

Step 4.2 - Place the now uncompressed Spring Seat(G) into the housing of the Seat Cushion Cover(F).

When placing the Spring Seat(G) into the Cover, make sure there is no bunching up of the foam or the fabric covers on any of the 2(four) side walls of the Cushion Cover(F).

Ensure the Seat Spring(G) fits snugly into the four corners of the Cushion Cover.

Step 4.3 - Zip up the Seat Cushion Cover(F).

Turn the Seat Cushion right side up.


Step 4.4 - Give the, now fully inserted Seat CUshion(G), a good padding on all sides and all 4 (four) corners.

This allows the Seat Cushion to fill up, and smooth out any folds and wrinkles.

The above steps complete your Seat Cushion placement.

Repeat the same steps for the remaining Cushion.

Step 5

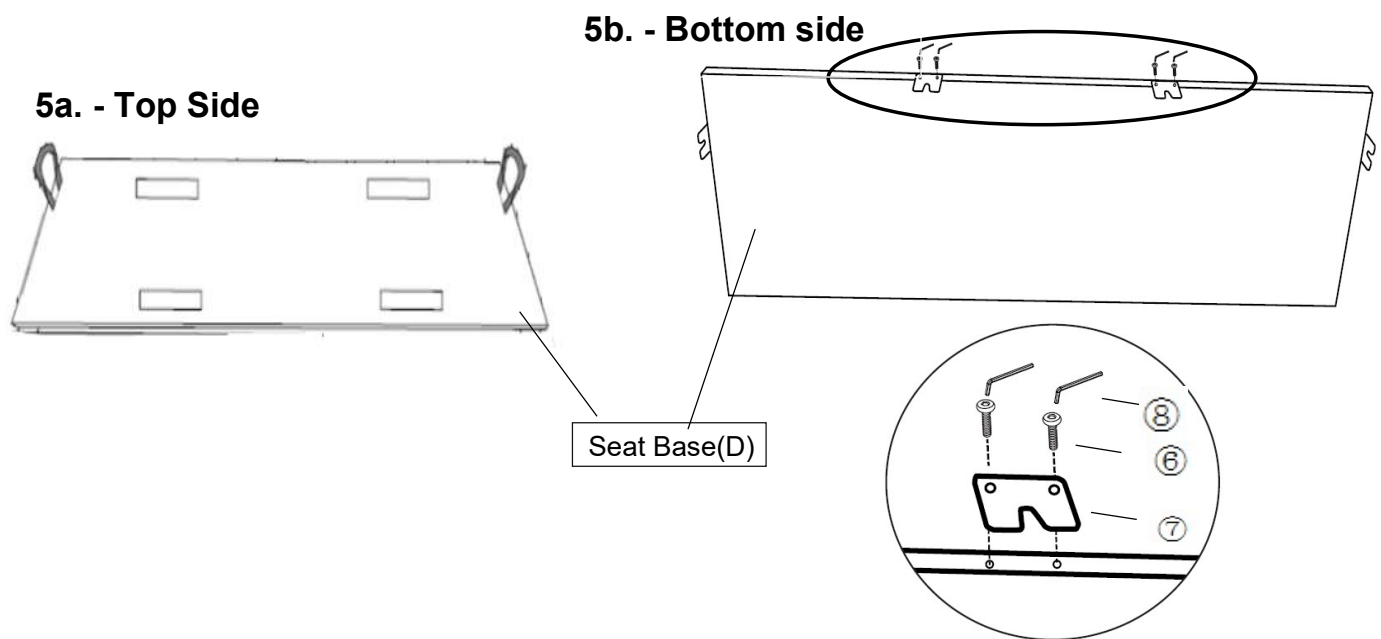

Note : The Seat Base Board(D) has a TOP Side with Strap Handles(5a) and a Bottom side(5b) where the Metal Brackets are to be attached to the Sofa.

The Strap Handles side are to be placed towards / closest to the Backrest, later.


With assistance from your partner, using Bolts(⑥) and the Allen Wrench(⑧), attach the Metal Brackets(⑦) into the Seat Base(D), at the pre-marked pilot holes / position.

Turn the Bolts in a clockwise direction.

Tighten the bolts in place, in a sequential manner.

Caution: When assembling the Metal Bracket(⑦), the direction of the Metal Bracket(⑦) should be facing the same direction as the two(2) pre-attached Metal Brackets seen on the two sides of the Seat Base(D).

Step 6

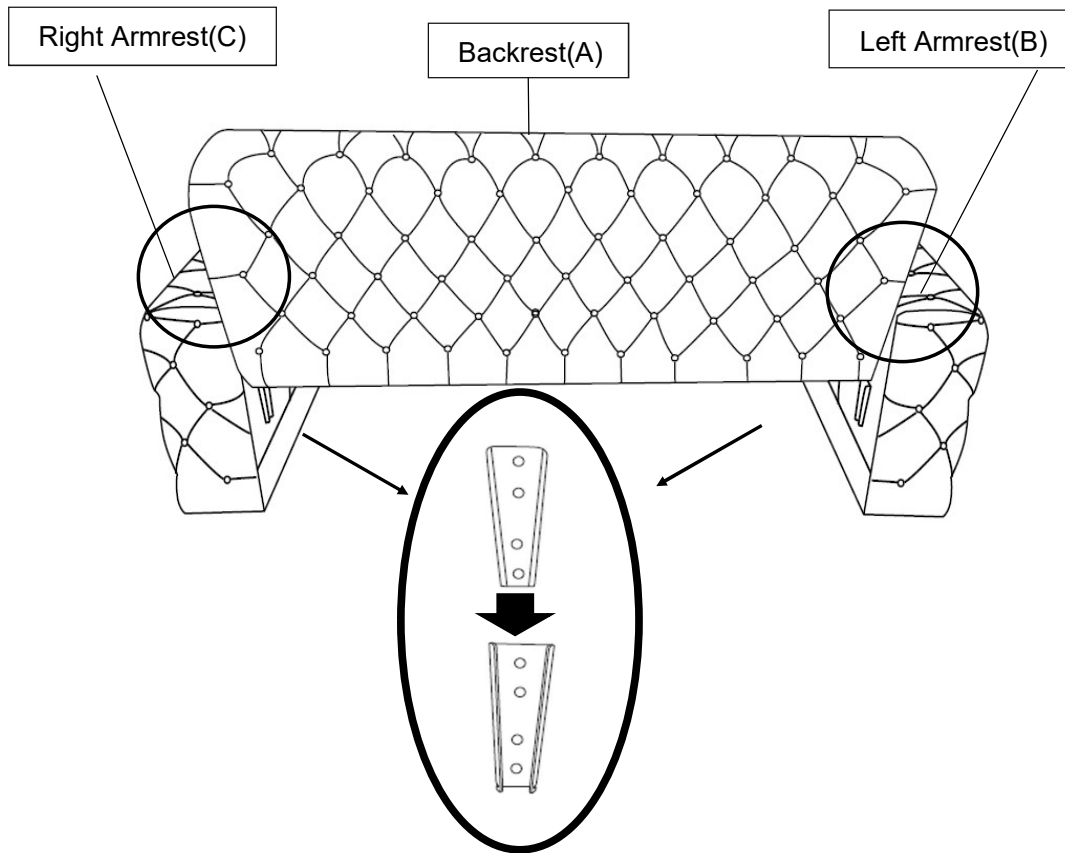

Caution :

1.) You may need to use one hand to depress the foam cushion in the Backrest panel to ease the installation into the armrests.
2.) Be careful to NOT get your fingers caught or pinched at the Tapered Connectors area.
3.) A well timed synchronised timing and speed will result in an easy assembly of the Backrest Panel into the Armrests.

Here, Step 6 assembly requires assistance from your adult partner.

First, make sure the pre-attached Tapered Connectors in the arms are both facing inwards.


Then, place both the Left and Right Armrest(A & B) apart to the width space of the Backrest Panel(A).

Next position your partner and yourself, standing at the back, to the edge of the Backrest Panel(A).

Together, lift the Backrest Panel(A) till the pre-attached Tapered Connectors in the Backrest Panel is above the Tapered Connectors of the Armrests.

In synchronised timing, gently and slowly, slide the Backrest Panel Connectors into the Connectors of the Armrests.


Step 7

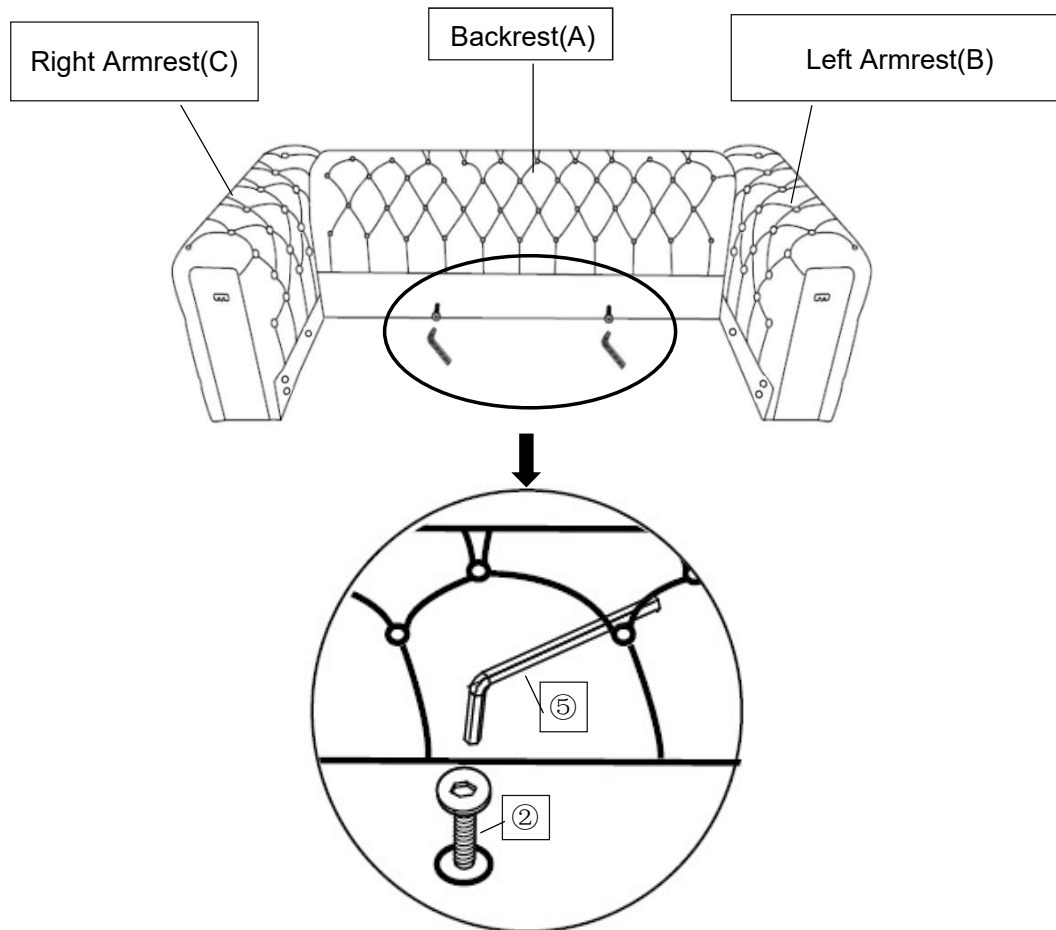

Next, move and stand into the seat box area of the sofa.

Using the Allen Wrench(5), turn the Bolts(2) clockwise, turn about 0.5inches (half an inch) into the Backrest, as shown above.


Step 8

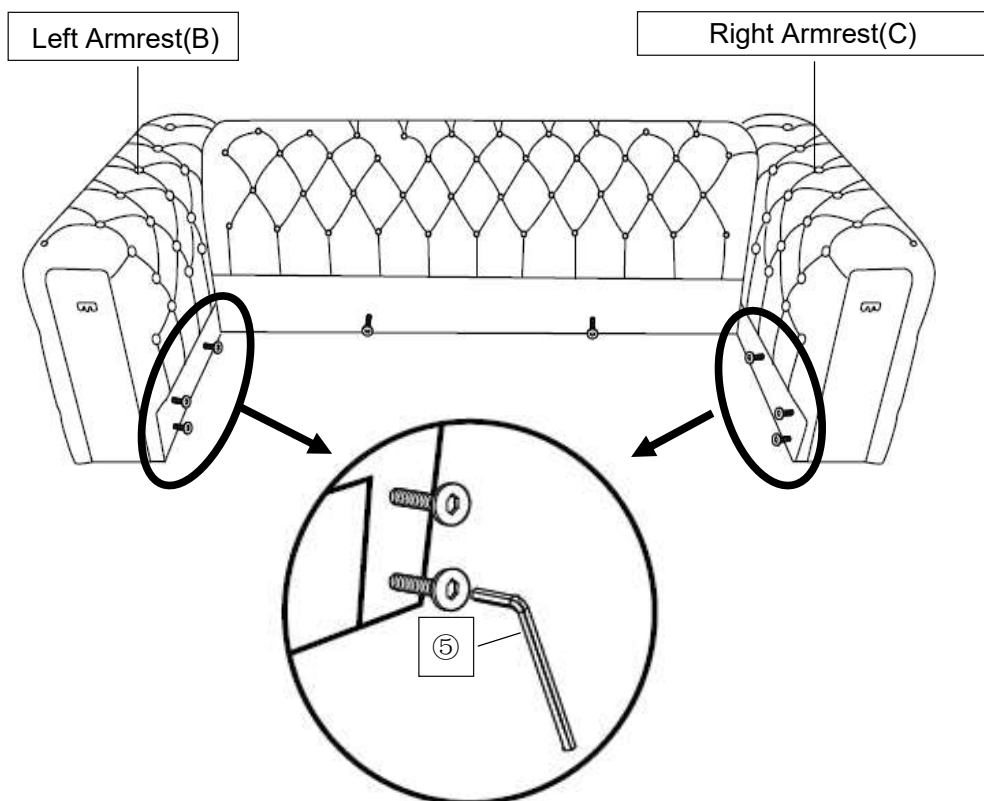

As pictured above, in the inner face of both Armrests and towards the base of the arm, you will see six (6) pcs of pre-attached bolts.

Using the Allen Wrench(Ⓢ), loosen these bolts to about half an inch.

Step 9

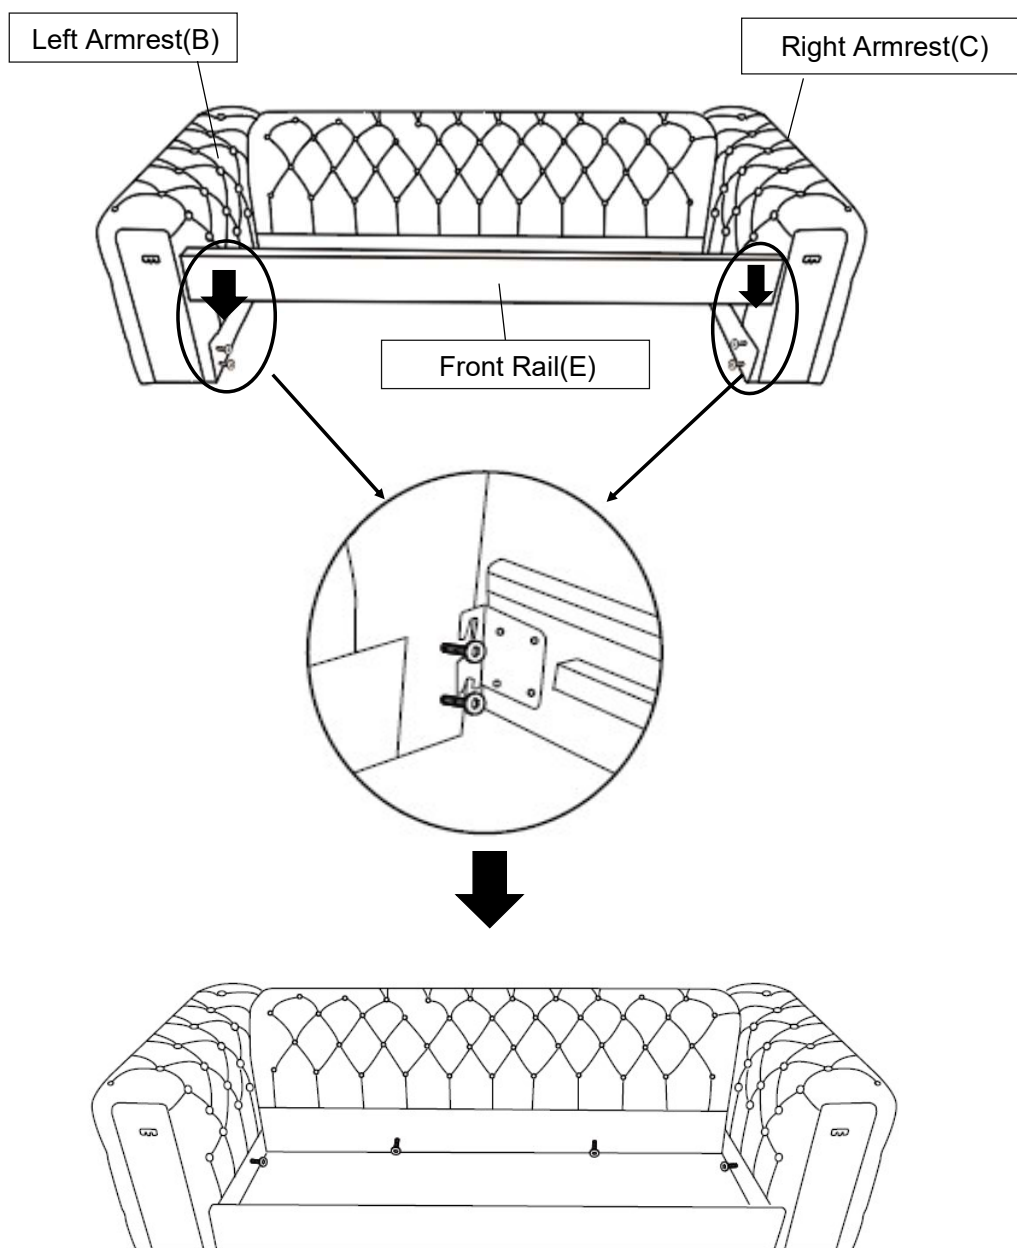

Note : Whilst attaching this Front Rail(E), the sliding action needs to be synchronised with your partner.


With the assistance of your partner, slide the hook at the ends of Front Rail(E) into the bolts on the Left Armrest(B) and Right Armrest(C), as shown above.

Then, proceed to TIGHT-LOCK the bolts on Front Rail(E).

Allow for 0.2 inches space.

DO NOT over tighten.

Step 10

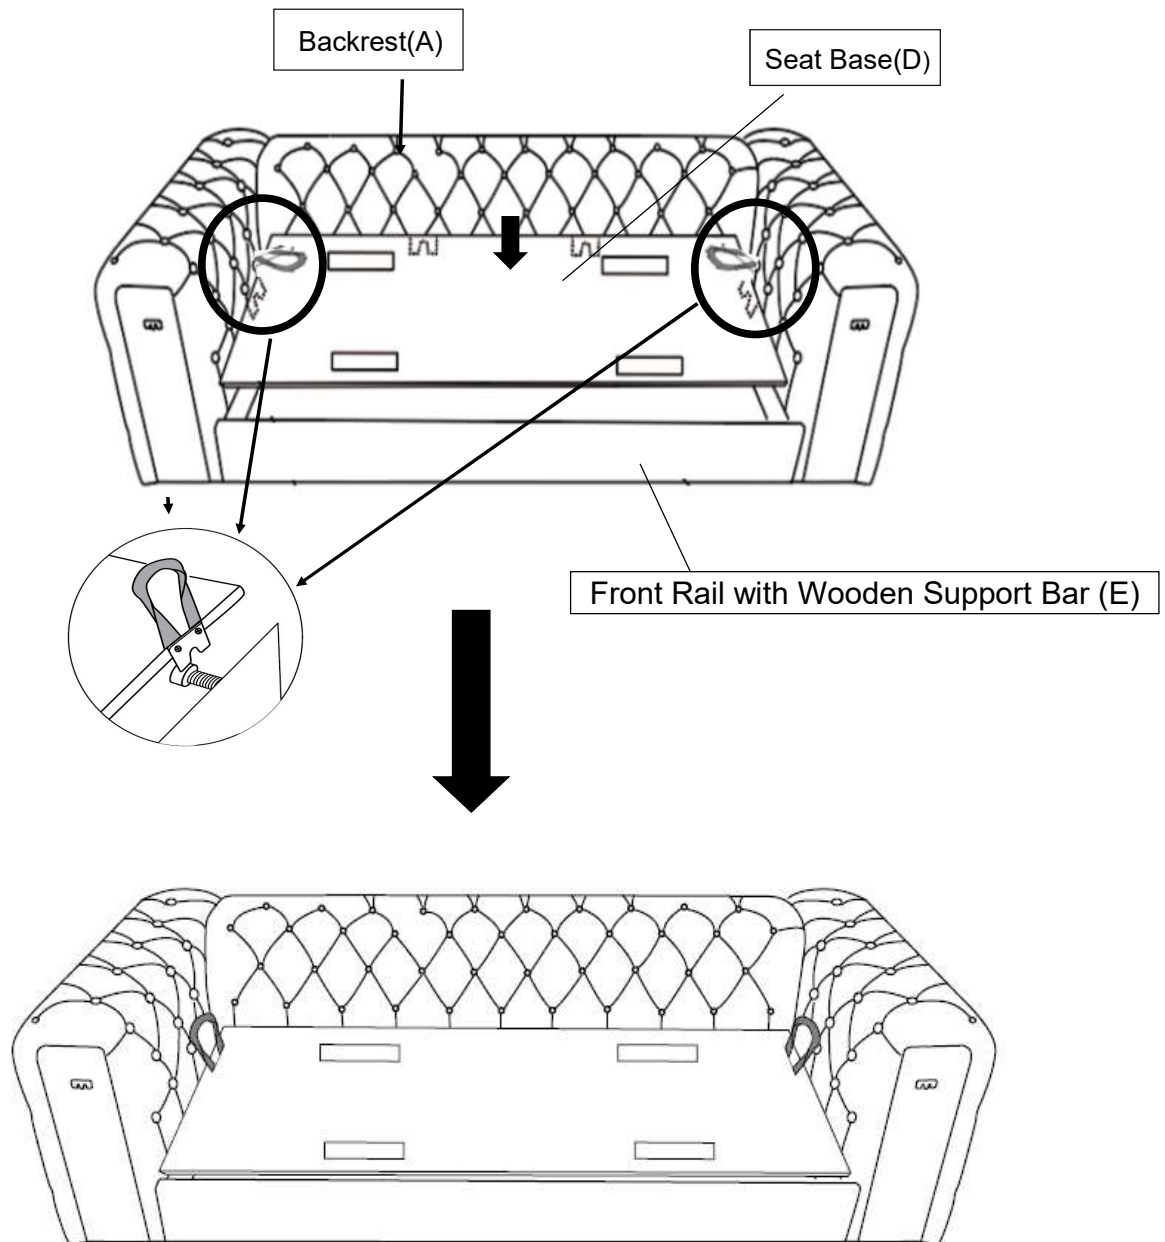


Note : All the Metal Brackets(⑦) must be hooked into the Bolts .

Together with your partner, lift the Strap Handles, at the sides, found on the Top face of the Seat Base(D).


Gently, place the Seat Base(D) into the Sofa so as to allow for :

1.) 2 (two) Metal Brackets(⑦) to hook into the Bolts at the base of the Backrest ;
2.) 2 (two) Metal Brackets(⑦) to hook into the Bolts in both bases of the Armrests ;
3.) The front of the Seat Base(D) to rests onto the Wooden Support Bar in the Front Rail(E).


Step 11

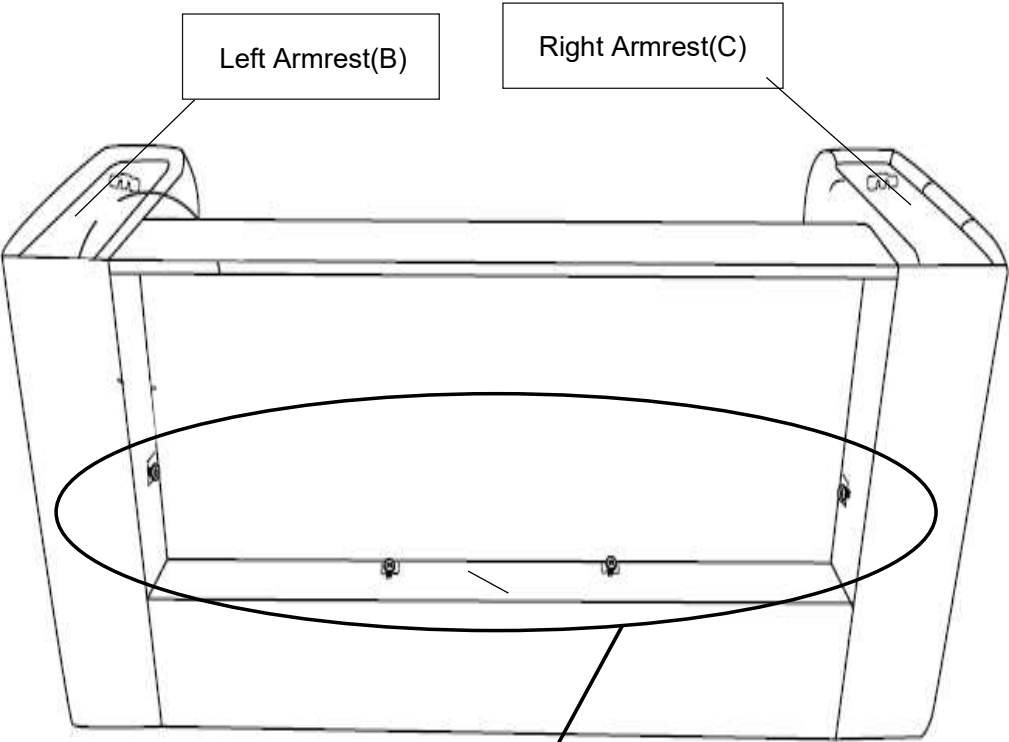

Step 11.1

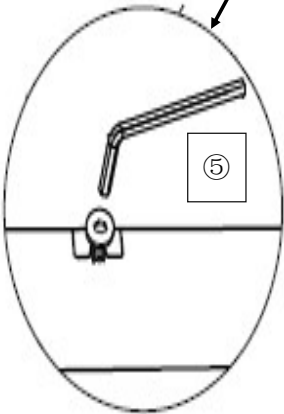

Step 11.2

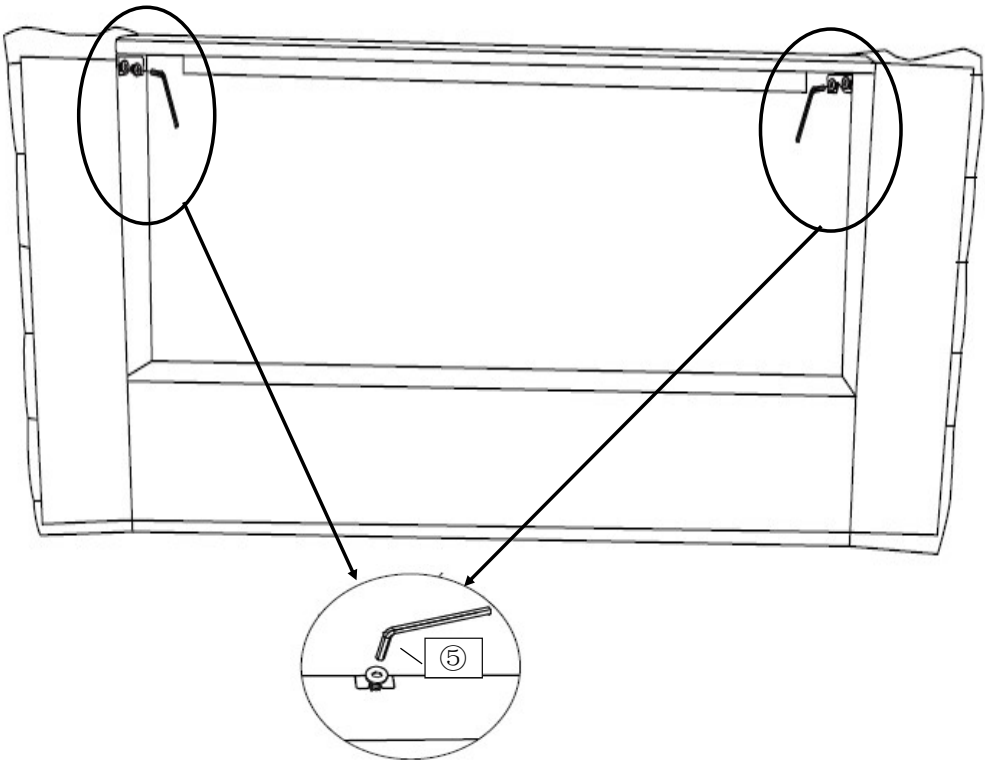


Here in Step 11 - there are 2 sub-steps.
First, tilt and lay the Sofa on its Backrest.
In a sequential manner, using the Allen Wrench (⑤) :

Step 11.1.) FULLY Tighten ALL 4 (four) bolts in the Backrest and Armrests.

Step 11.2.) FULLY Tighten ALL 4 (four) Bolts at the INNER edges of the Front Rail.

Step 12

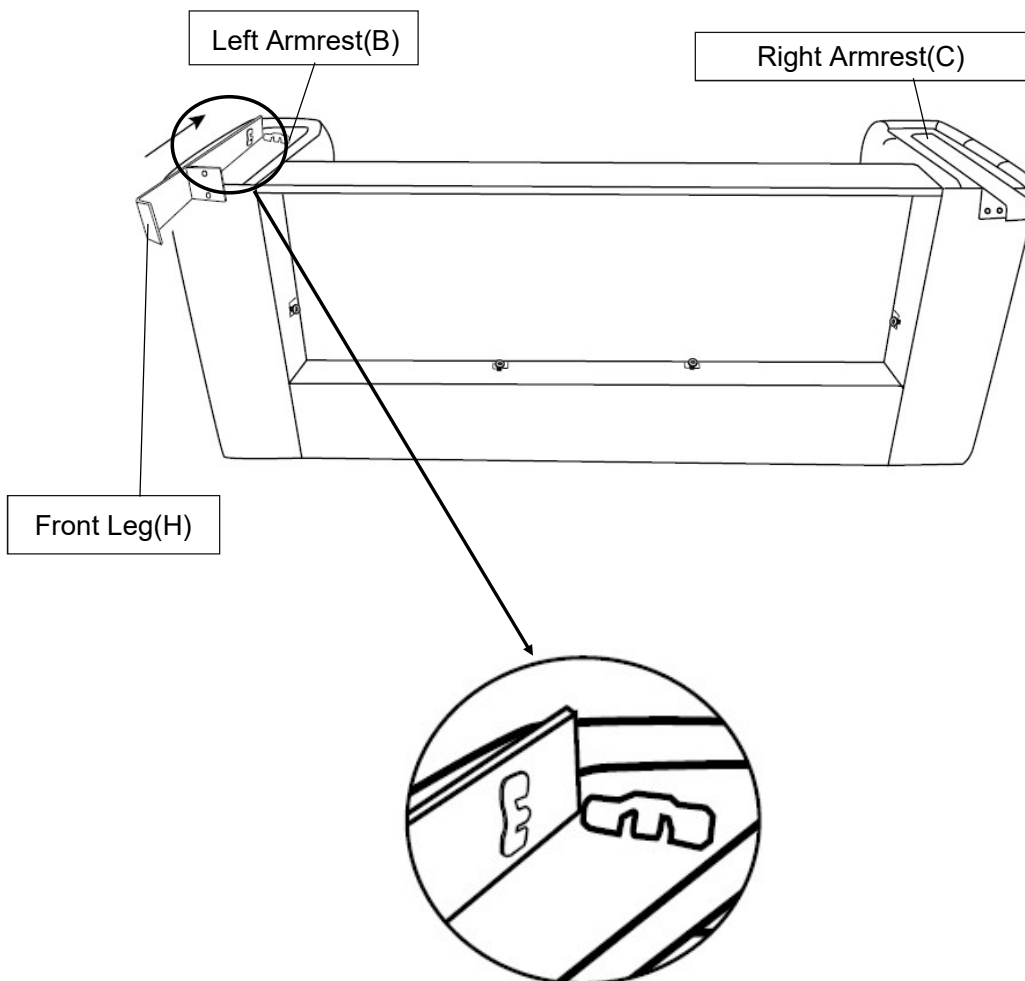


To assemble the Leg Panels,

1.) Position the Leg Panel to the FRONT face of the Armrest panel, as shown, above.
2.) Then turn the Leg Panel inwards and allow for the Bracket in the Leg Panel to be **SLIPPED UNDER** and **PUSH UPWARDS** .
3.) The Upward Push allows for the Leg Panel, to be **LOCKED** into position.
4.) Next, align the bolt positions to the pre-drilled pilot bolt positons.

Repeat the same steps for the Right Leg Panel.

Step 13

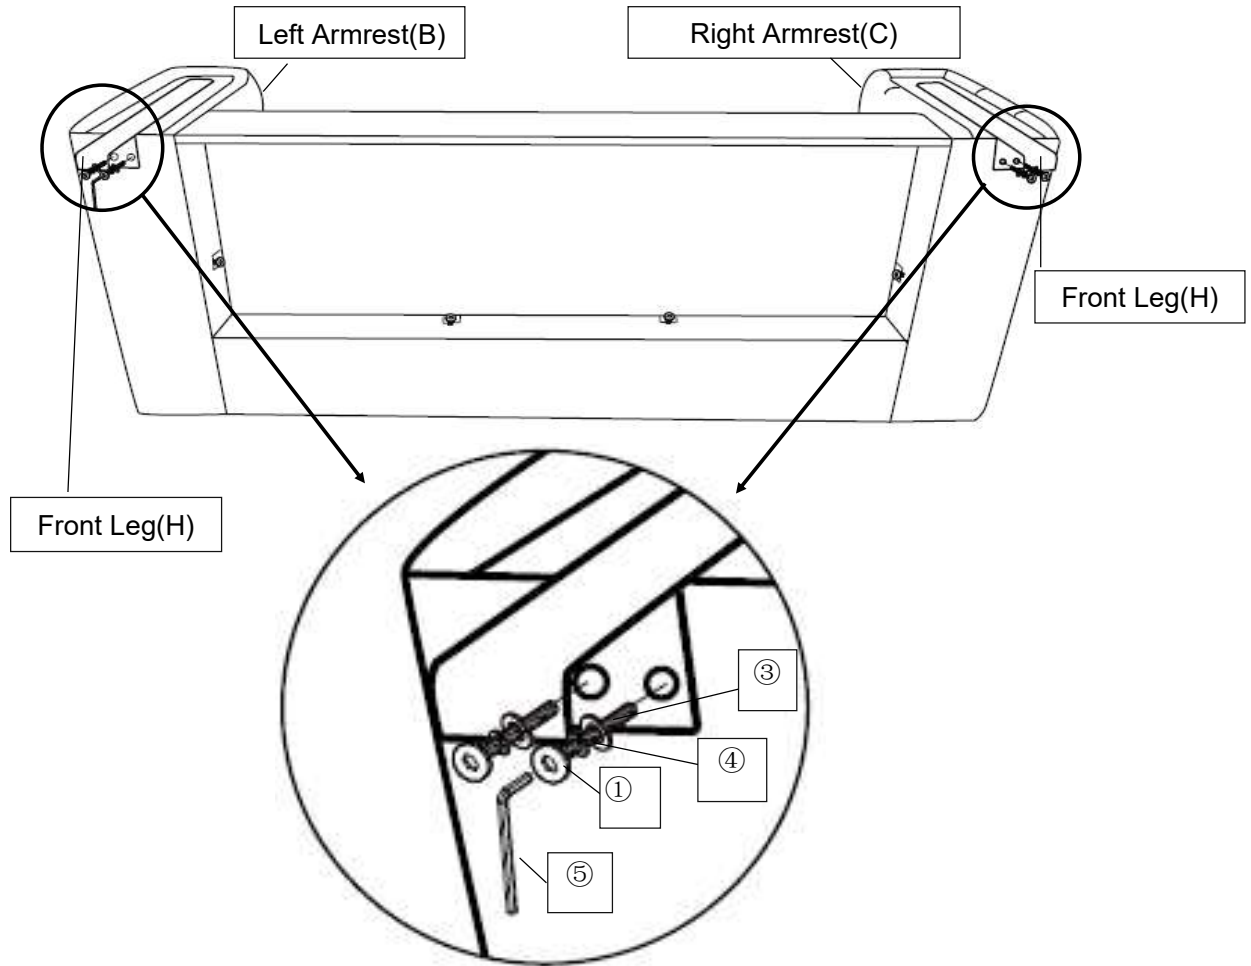


Secure both the Front Leg(H) panels at both the Armrests by :

1.) Using the Bolt(①), Spring Washer(④) and Flat Washer(③).

2.) Using the Allen Wrench(⑤), fully tighten the bolts, by turning clockwise.

Step 14

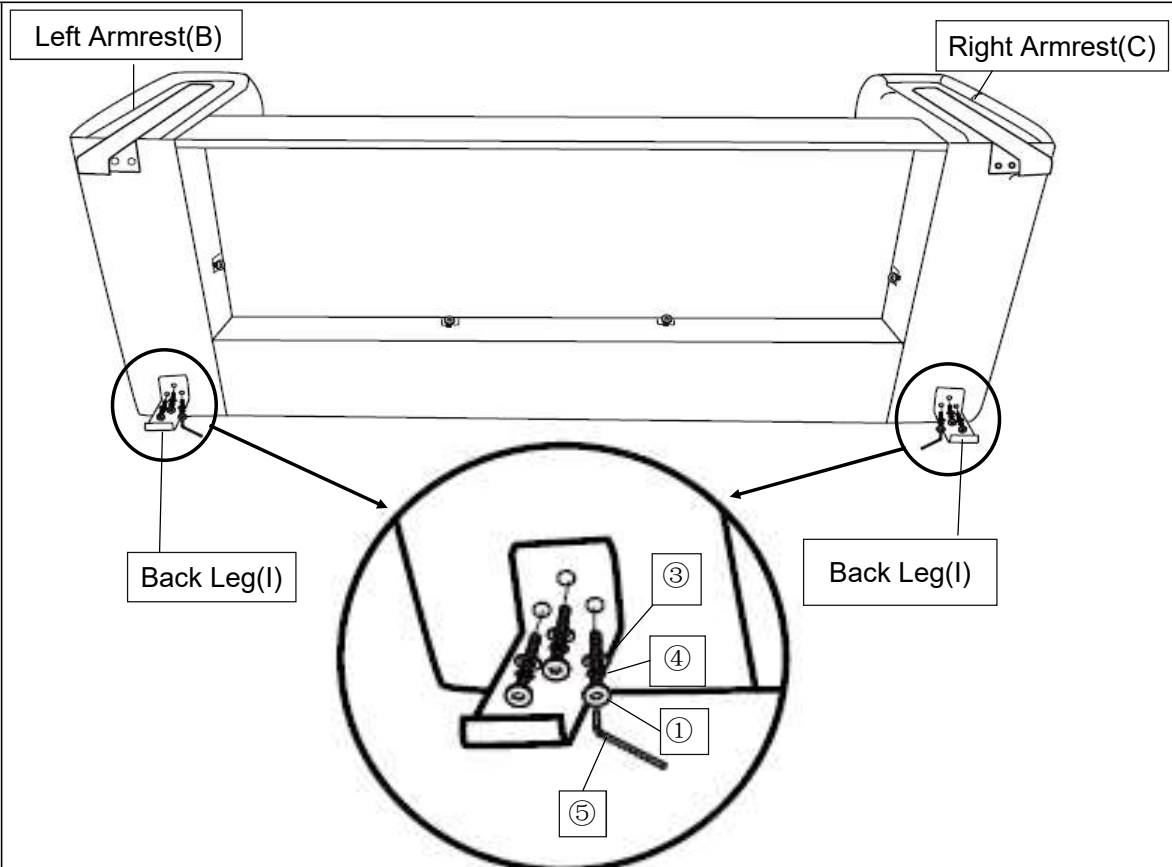


To attach the Back Legs(I) to the Sofa :

1.) Keep the Sofa, still rested, on the Backrest.
2.) Position the Leg Panel to the pre-drilled pilot use.
3.) Pick up and align Bolt(①) with Spring Washer(④), and Flat Washer(③) and place over the mounting points.
4.) Use the Allen Wrench(⑤), tighten the bolts, by turning clockwise.


Repeat the above steps for the remaining Back Leg(I).

Step 15

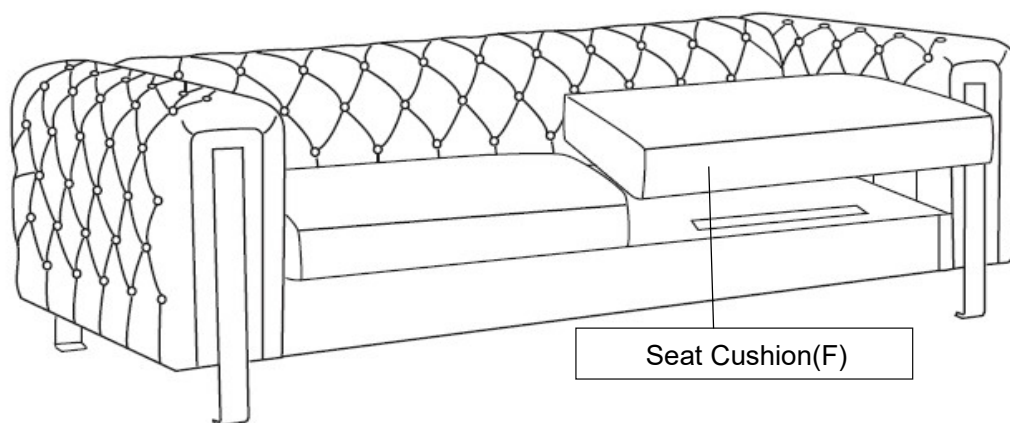

Position the Sofa right side up.
If necessary, fluff up the Seat Cushions and place into the Sofa.

Step 16

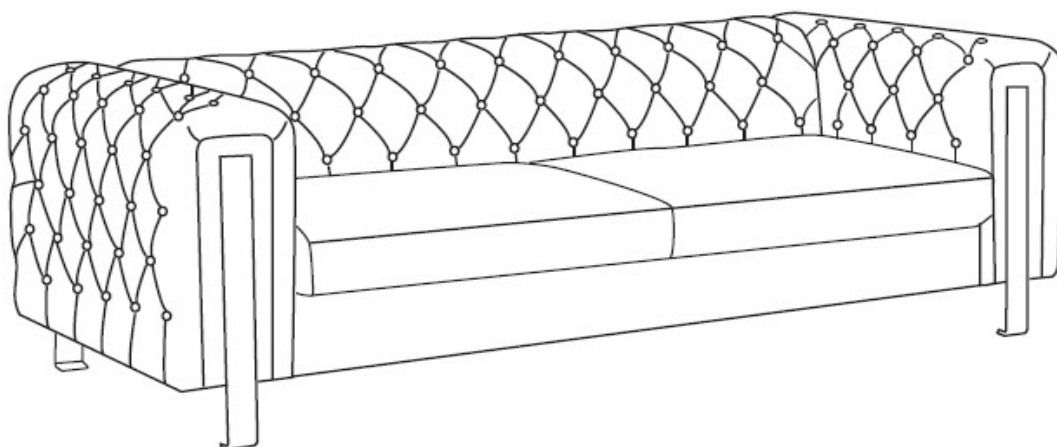

Your Sofa is ready for use.
This Sofa is to be used only on a flat and level surface.

Care & Maintenance



- Furniture may scratch floors. We recommend using furniture pads to protect your floors.



- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture under direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside . For indoor use only.



- Not for commercial use. For residential use only.



- Stains may be removed with mild soap solution and damp cloth.



- Children should not climb or jump on the furniture.



- Dust and pick-up spills using a clean, non-colored, lint-free cloth.