### **NOTICE**

- \* Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- \* This item may require periodic tightening.
- \* If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

#### **PREPARATION**

- \* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- \* If any part is missing or damaged, do not attempt to assemble the product.
- \* Estimated Assembly Time: 10 minutes.
- \* Tools Required for Assembly (included): Allen Key

#### **CARE AND MAINTENANCE**

- \* Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.
- \* The use of steam or water-based cleaners may cause excessive shrinking or staining.


#### Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	
А	Bench Body		1X
В	Bench Leg	P	2X
С	Bench Leg	P	2X
HW1	Split Lock Washer (M8)		8X
HW2	Flat Washer(M8)	0	8X
HW3	Socket Screws 8*1.25*65MM	<b>@</b>	8X
HW4	Allen Key		1X

# SAFAVIEH COUTURE

Model#: SFV4755

Dimensions: 53.1 "WX 20.9 "DX20.9 "H

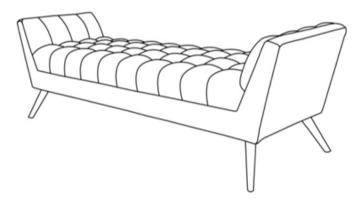



Weight Capacity: 275lbs

**WARNING: DO NOT STAND ON BENCH** 

WARNING: DO NOT OVER TORQUE BOLTS/SCREWS

## **PREPARATION**

- \* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- \* If any part is missing or damaged, do not attempt to assemble the product.
- \* Estimated Assembly Time: 10 minutes.
- \* Tools Required for Assembly (included): Allen Key
- \* If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

A	HW2 HW1 HW3	A HW4
STEP1 OPEN THE VELCRO ON THE UNDERSIDE OF THE SEAT AND TAKE OUT LEGS AND HARDWARE	STEP2 PUT THE WASHERS ON THE SCREW IN THE ORDER SHOWN IN THE PICTURE	STEP3 INSERT THE LEGS AND SCREW IN THE SCREWS BUT DON'T TIGHTEN COMPLETELY.
B C C B		
STEP4 CLOSE THE ZIPPER ON THE UNDERSIDE OF THE SEAT.NOTE: ATTACH THE LEGS WITH CORRECT DIRECTION.	STEP5 PUT THE BENCH UPRIGHT AND MAKE SURE ALL LEGS ARE LEVEL, THEN FIRMLY TIGHTEN BOLTS WITH ALLEN KEY WHILE THE BENCH IS UPRIGHT AS PICTURE ADOVE, THE BENCH IS READY TO ENJOY NOW!	