




PC311 PC312 ASSEMBLY INSTRUCTION

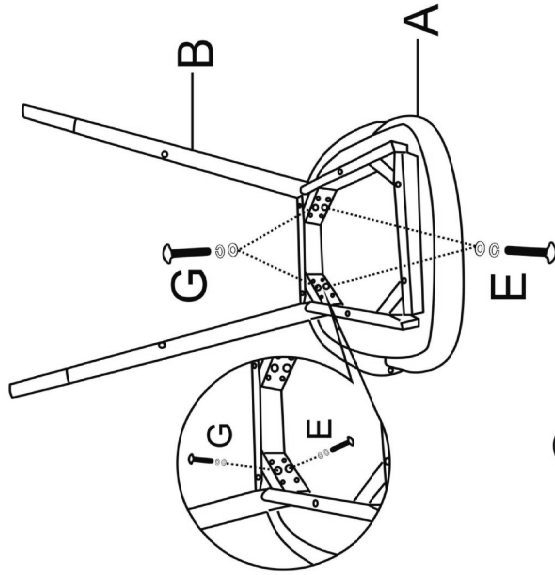


① Put the screws in the holes, tight the screws, but not too tight, 90% is ok.

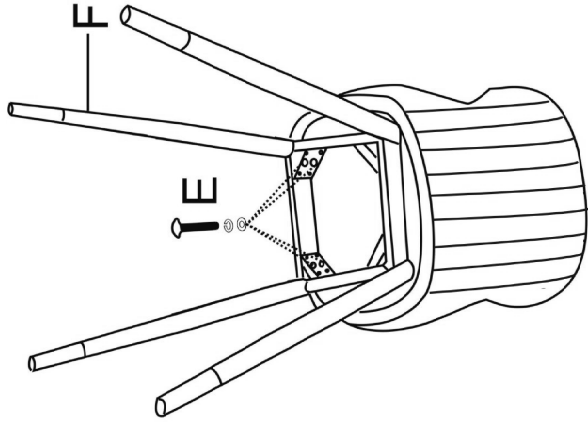

② Put the screws in the holes, tight the screws, but not too tight, 90% is ok.

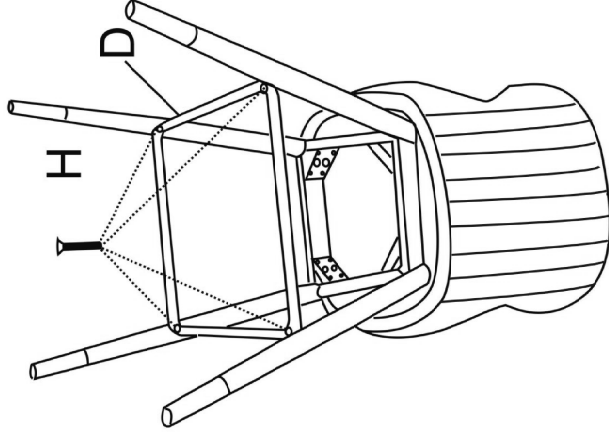

③ Put the screws in the holes, tight the screws, but not too tight, 90% is ok.

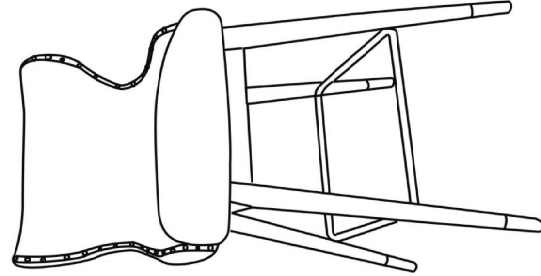

④ Stand the chair upright & ensure it is level before tightening all screws, Then tight all the screws to 100%

A		F		B		D	
Back 1PC		Front Leg 2PCS		Back Leg 2PCS			
E	③③ M6x65mm6PCS	G	③③ M6x70mm2PCS	H	M6x30mm4PCS	I	
E		G		H		I	