


VSC6DRSC

Assembly Instructions




General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. A Phillips head screwdriver is required for the assembly of this product .

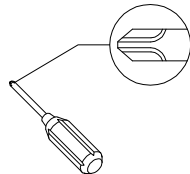

- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

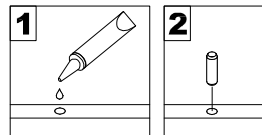


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

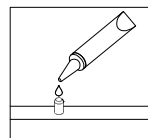


VI HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS


- 1.Screw the Cam Bolt into the pre-drilled hole on the panel. Make sure Cam Bolt goes into the pre-drilled hole on the end of panel for Cam Lock.
- 2.Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of Cam Lock points towards Cam Bolt.
- 3.Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt.
- 4.Use the sticker to conceal the Cam.

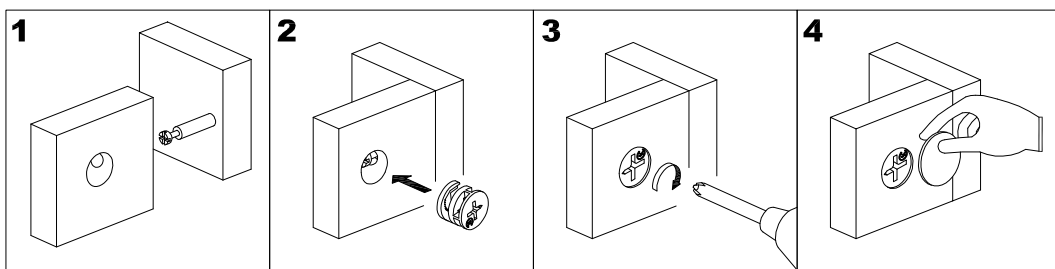

- VII. Power tools should not be used to assemble this product .

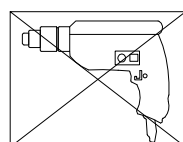


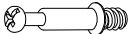




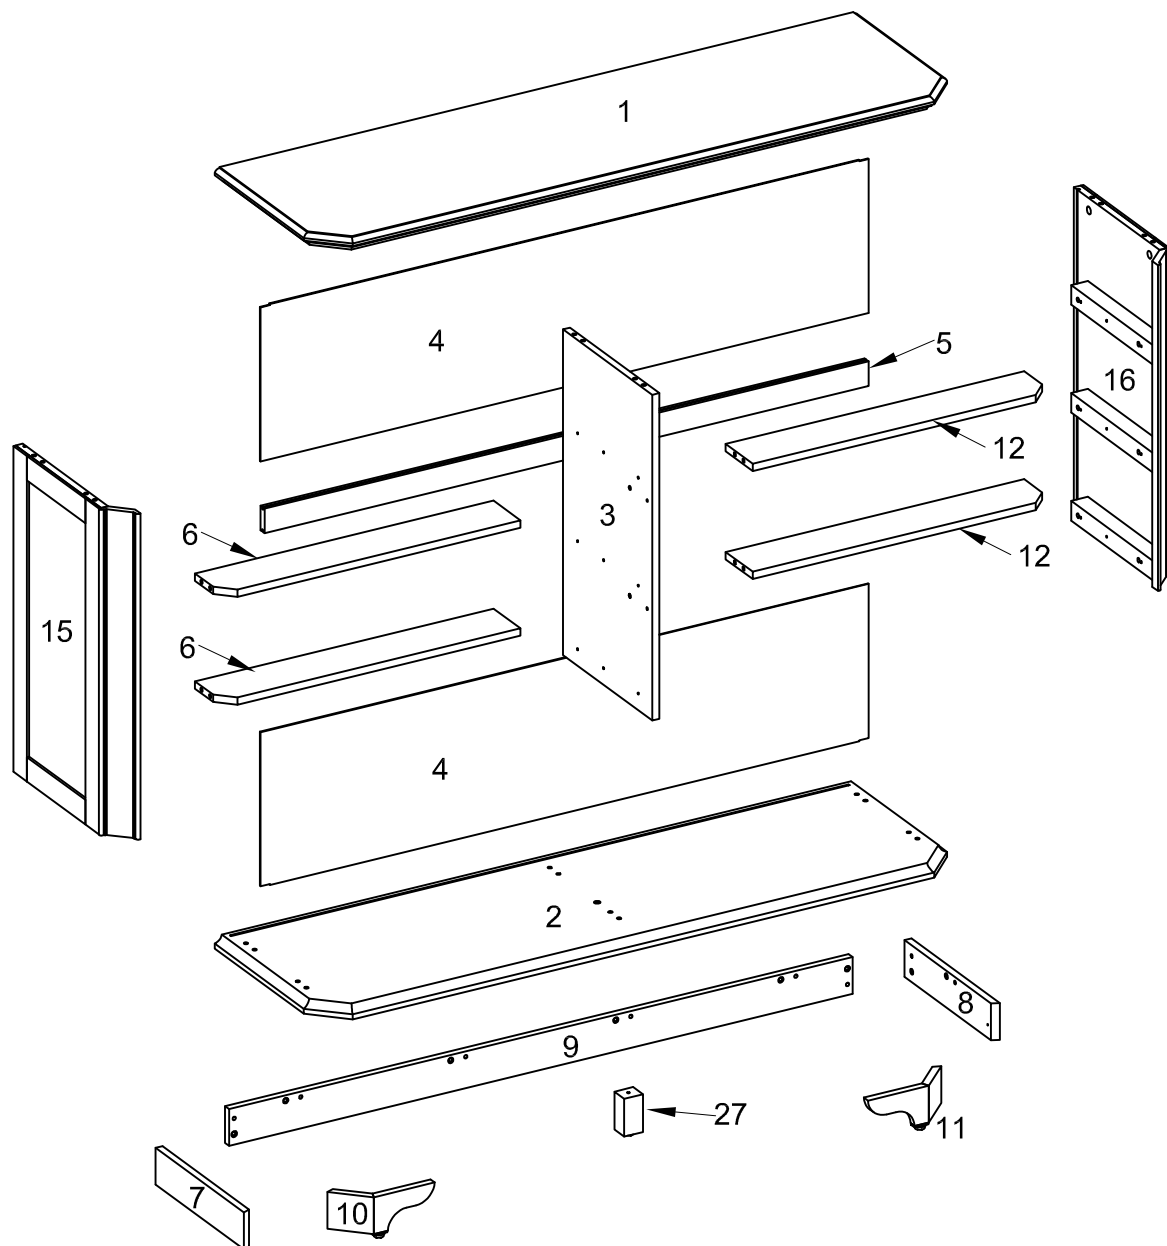







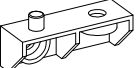
Parts List




x3

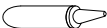x3


Hardware List

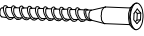
A		Ø8x30mm	Dowel	20 pcs
B		Ø6x35mm	Cam bolt	44 pcs
C		Ø15x11mm	Large Cam lock	14 pcs
D		Ø30mm	Cam cover	44 pcs
E			Glue	1 pc
F			Plastic Bracket	16 pcs
G		Ø3x17mm	Flat-head screw	16 pcs
H		Ø4x12mm	Knob bolt	24 pcs
K			Handle	12 pcs
L		Ø15x9.5mm	Small Cam lock	30 pcs
M		Ø4x38mm	Screw	36 pcs
N		Ø6x50mm	Screw	7 pcs
P		M 4	Allen wrench	1 pc
Q		Ø6x12mm	Bolt	24 pcs
R			Connector block	12 pcs

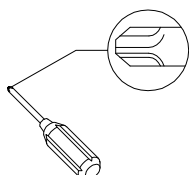

Philips head screwdriver required for assembly
(not included)


Hardware List

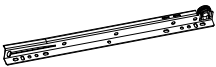S		Ø3.5x12mm	Screw	76 pcs
T		12"	Left Glide Track	6 pcs
U		12"	Right Glide Track	6 pcs
V		12"	Left Glide Runner	6 pcs
W		12"	Right Glide Runner	6 pcs
X		Tipping Restraint Hardware		2 sets
Y		L shape bracket		2 pcs

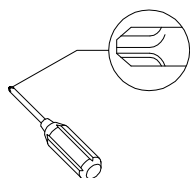


Philips head screwdriver required for assembly
(not included)

Step 1

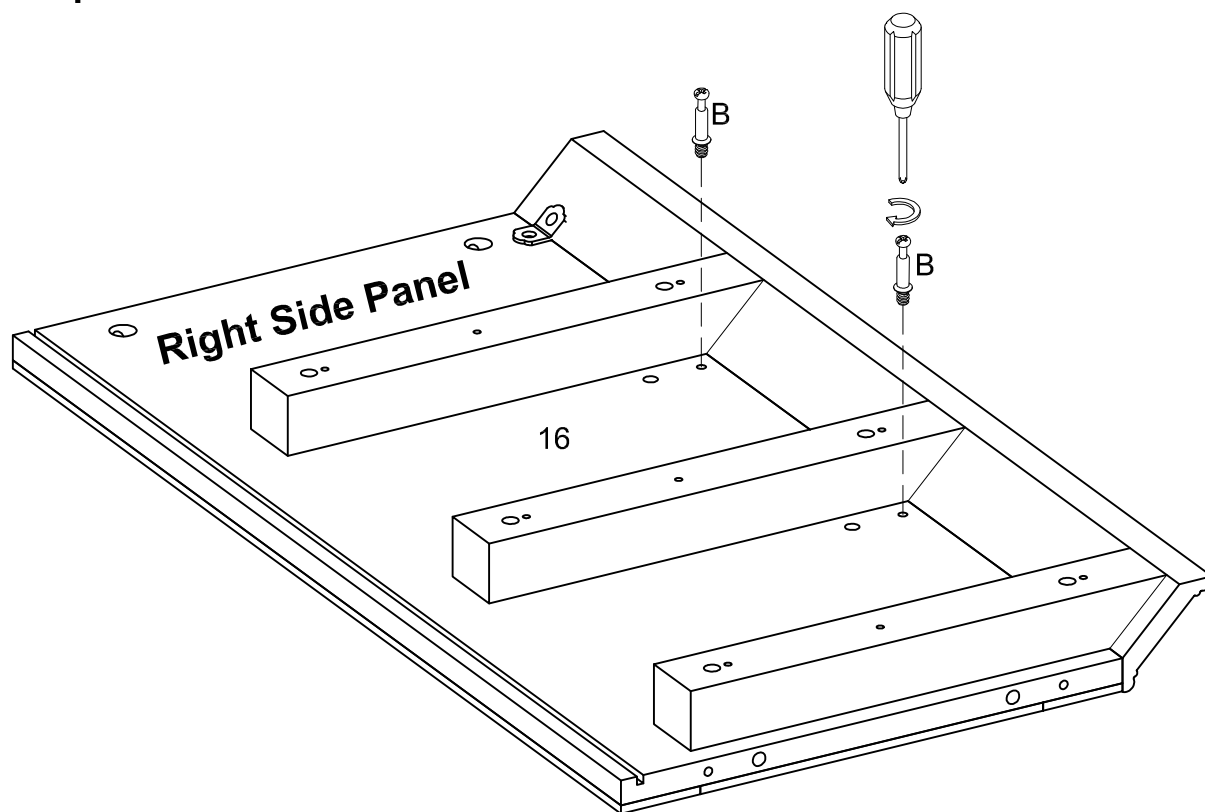


Step 2

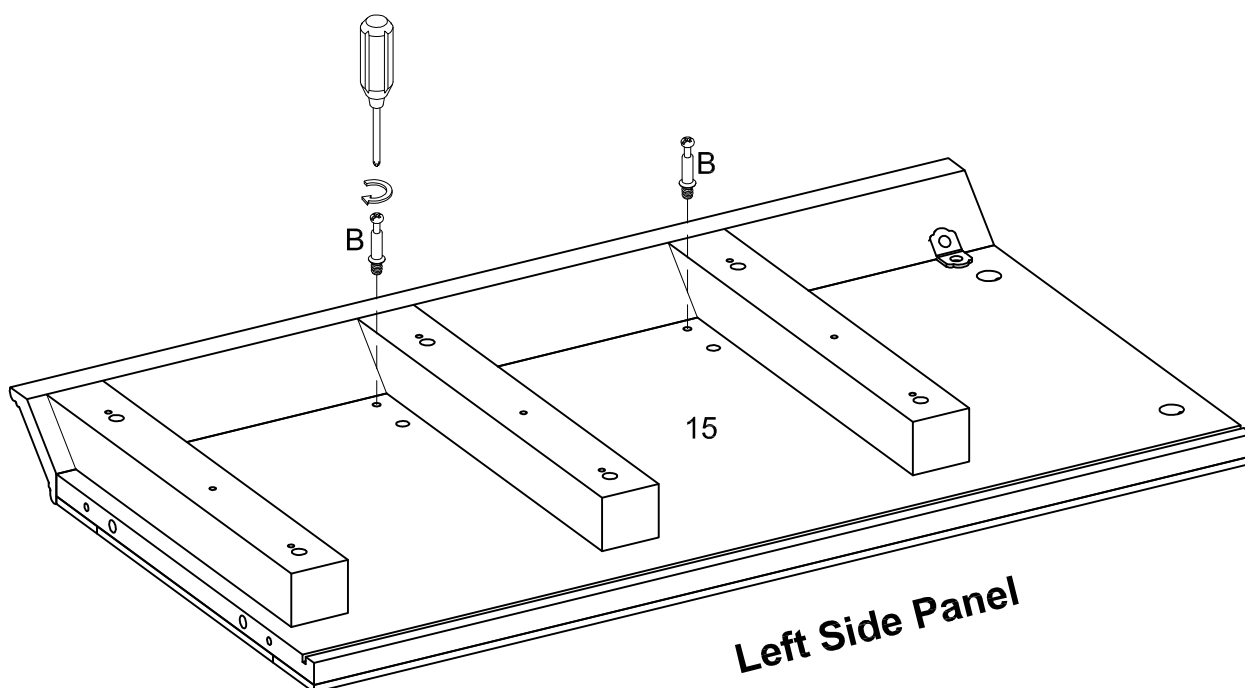


Step 3

Right Side Panel

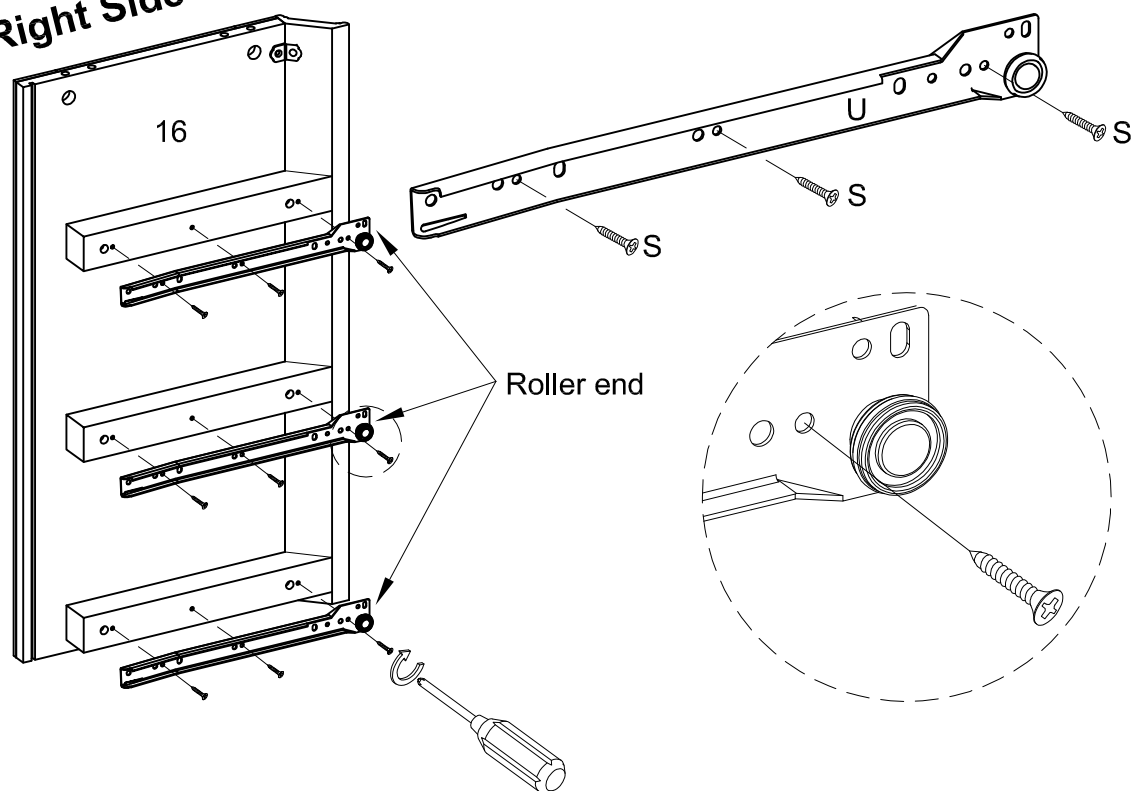


Step 4


Left Side Panel

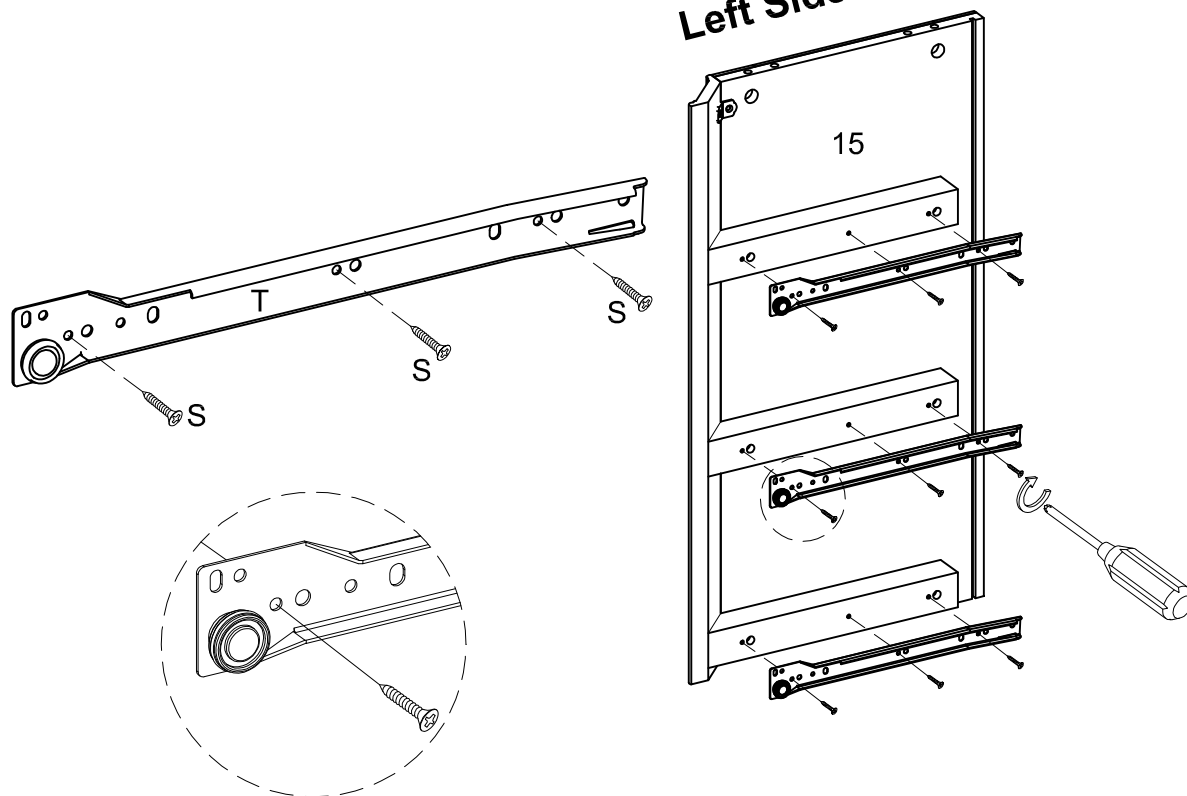



Step 5

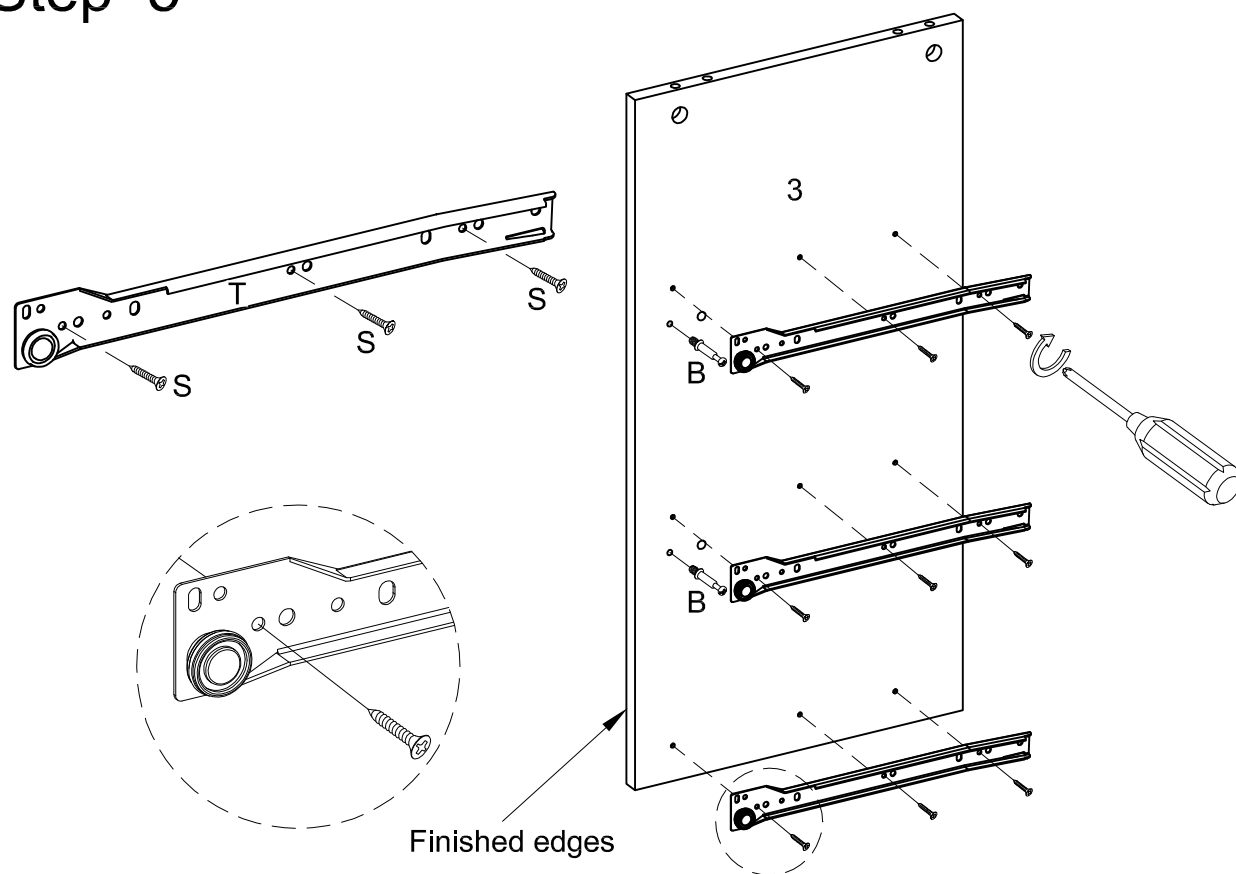



Step 6

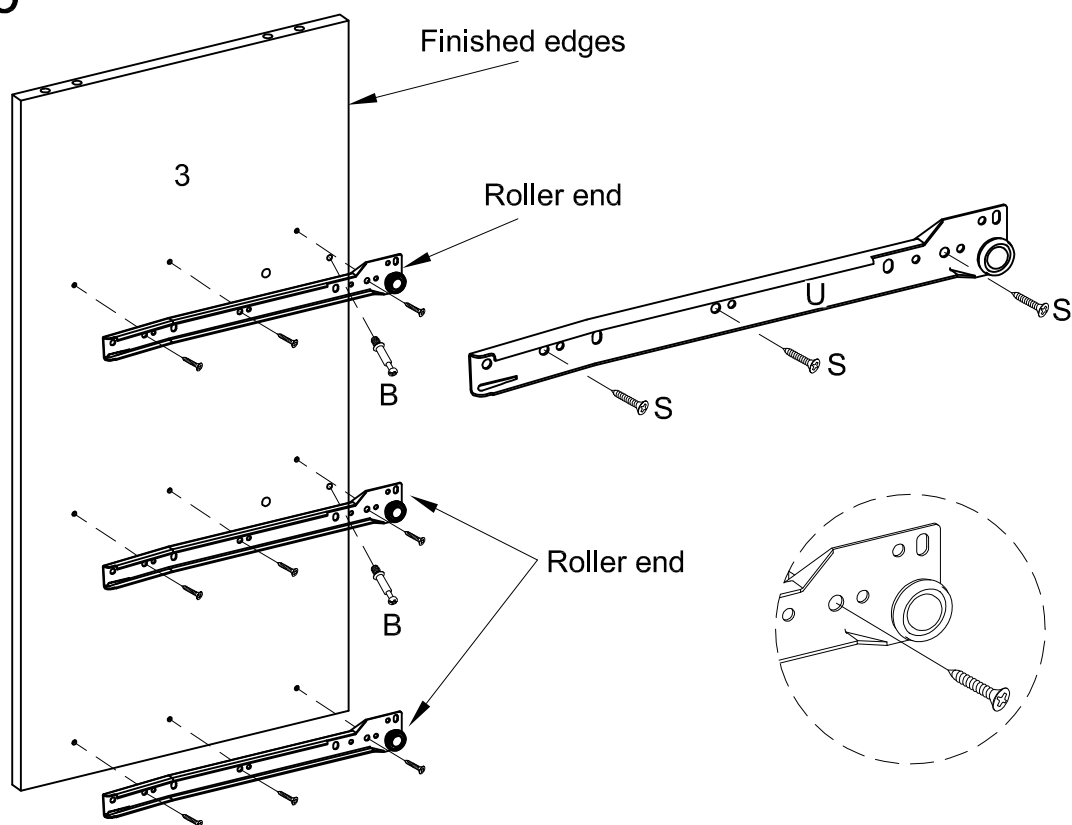


Step 7

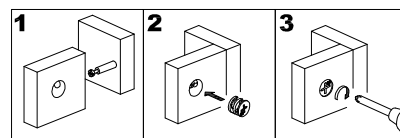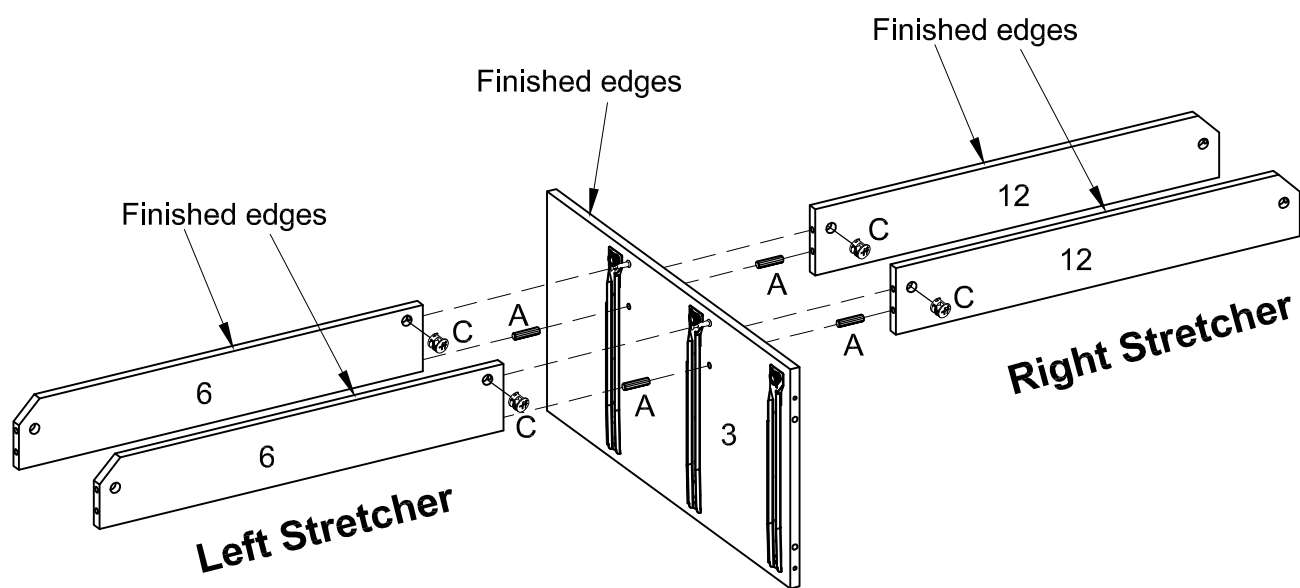


Step 8

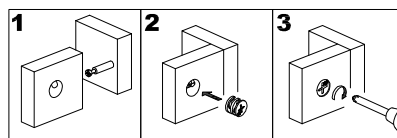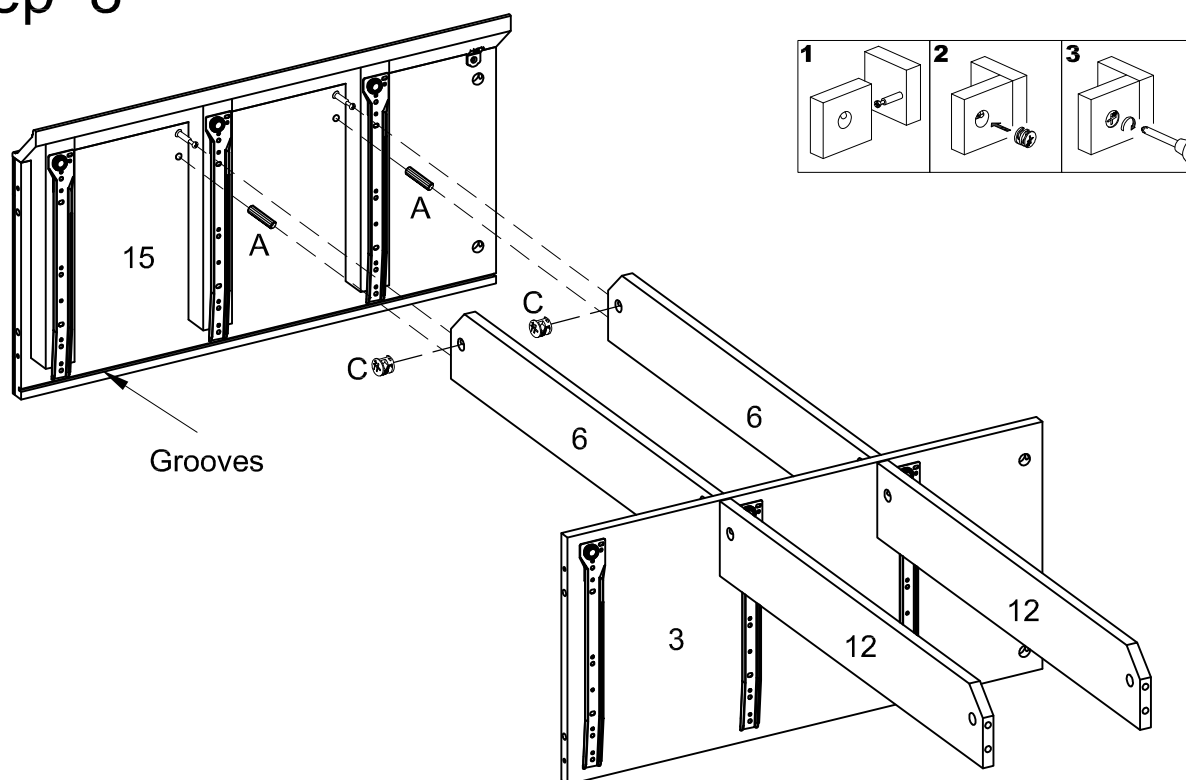


Step 9

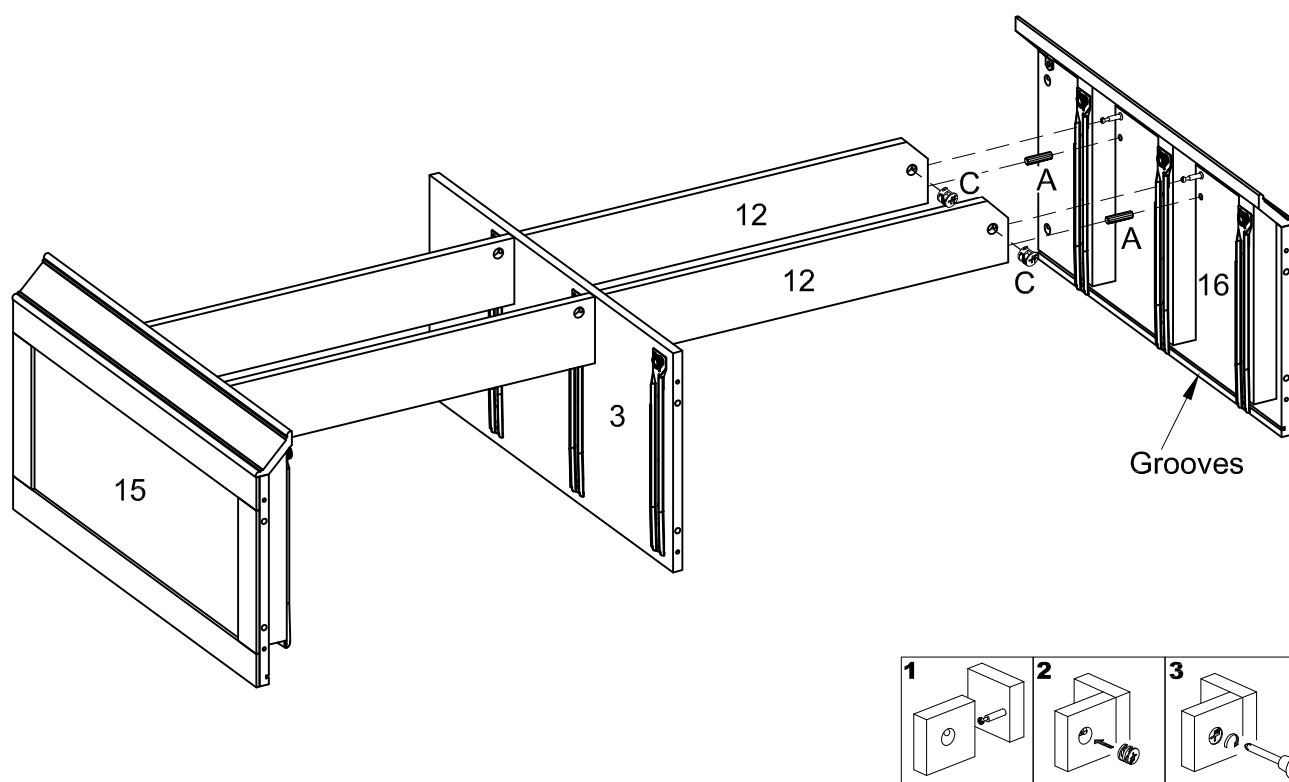


Step 10

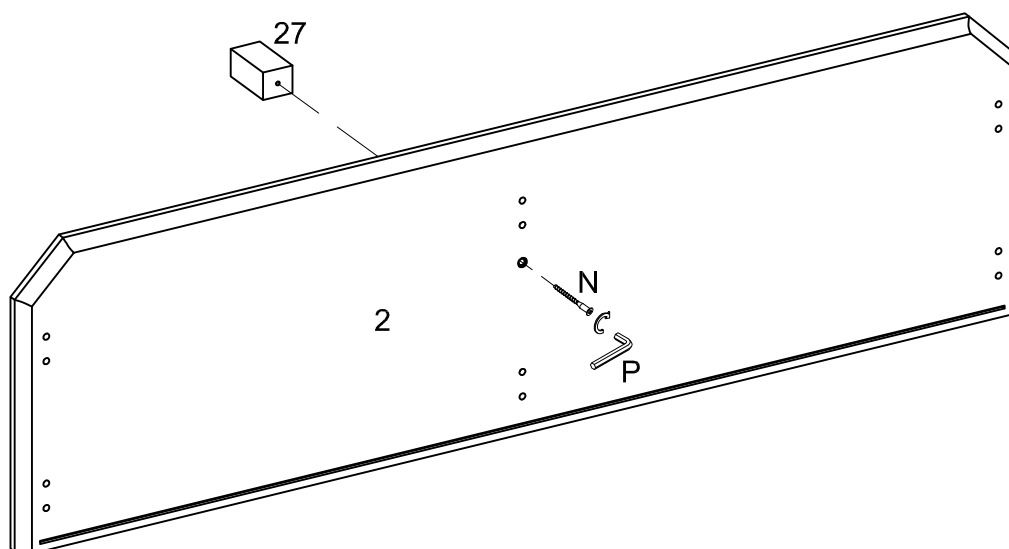


Step 11

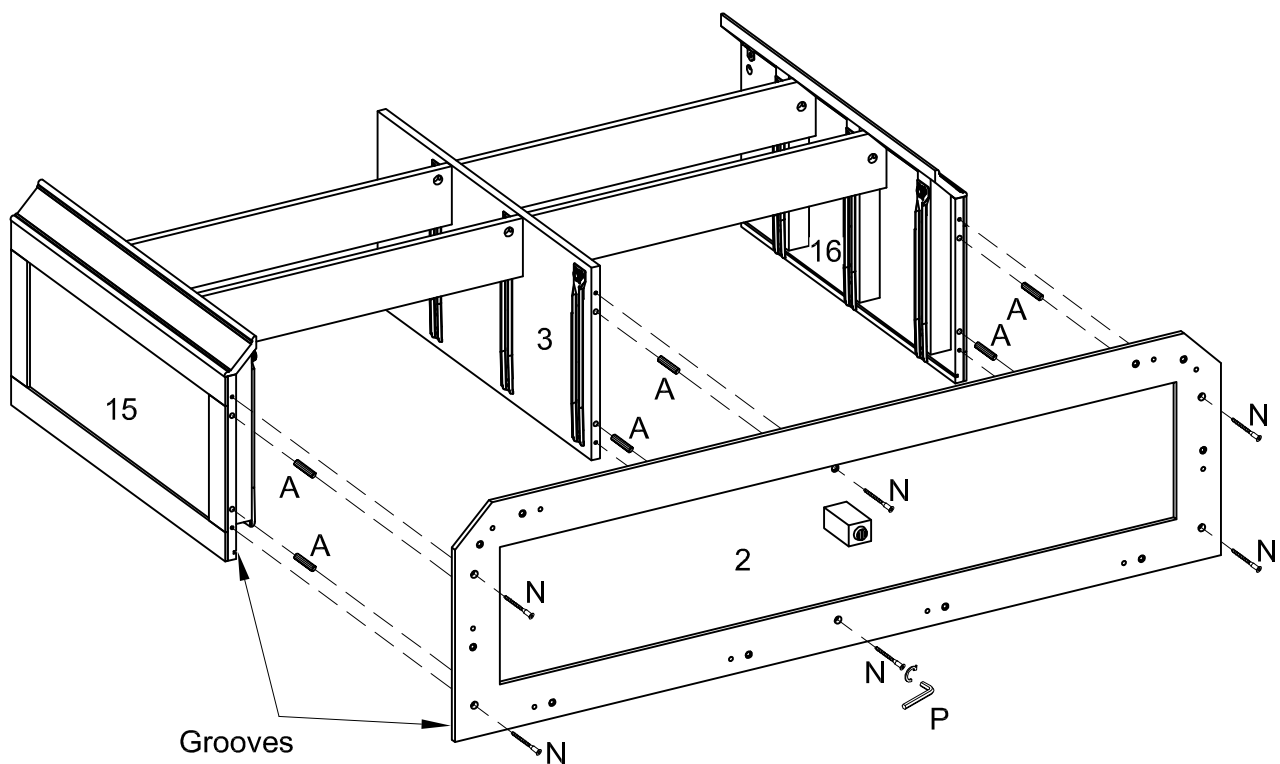


Step 12

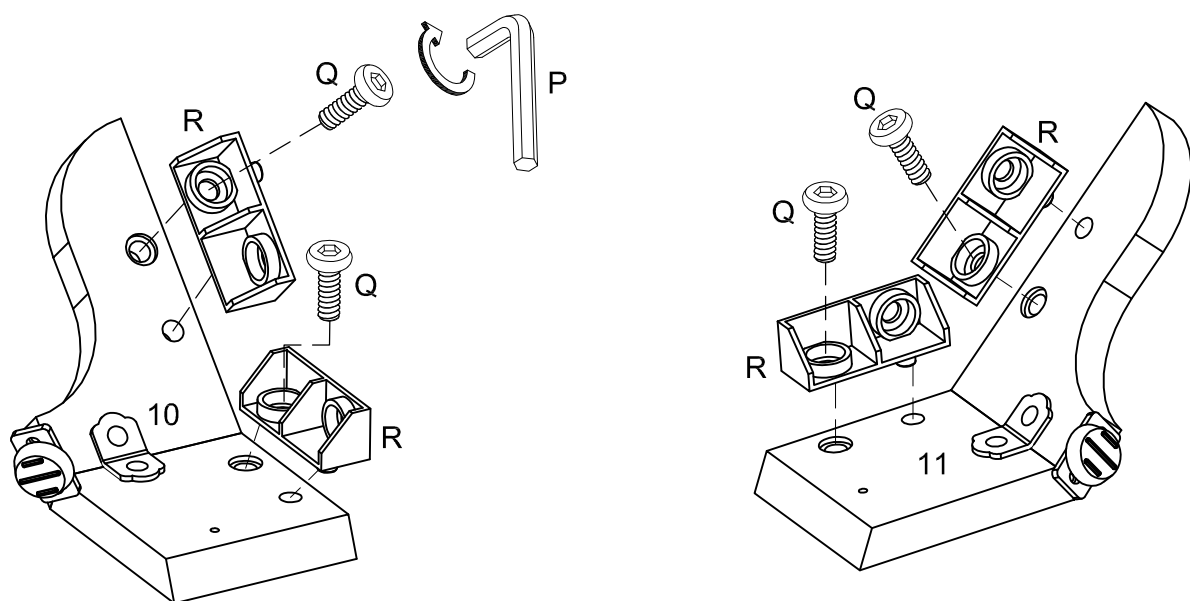


Step 13

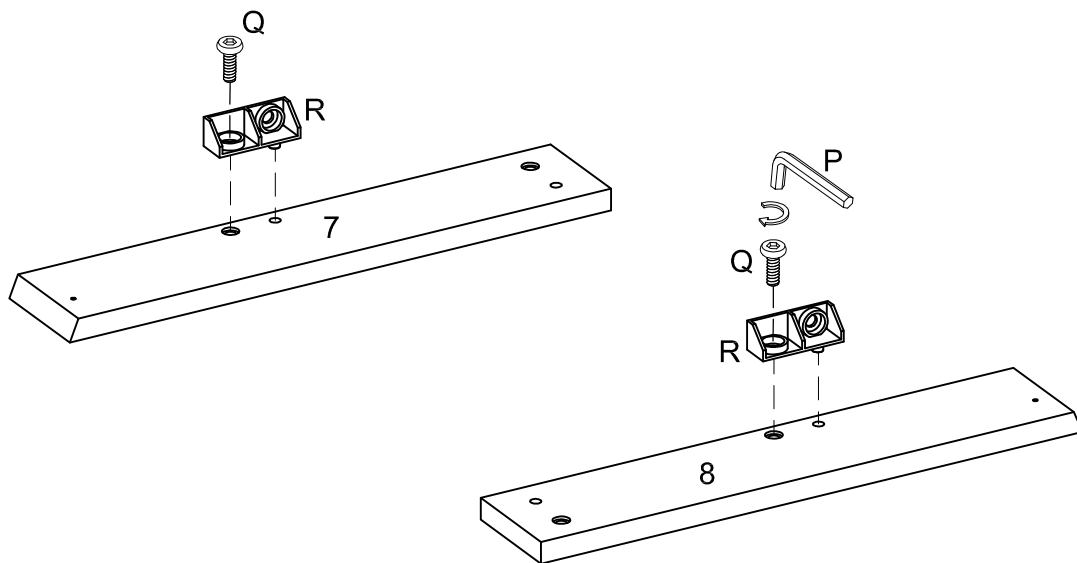


Step 14

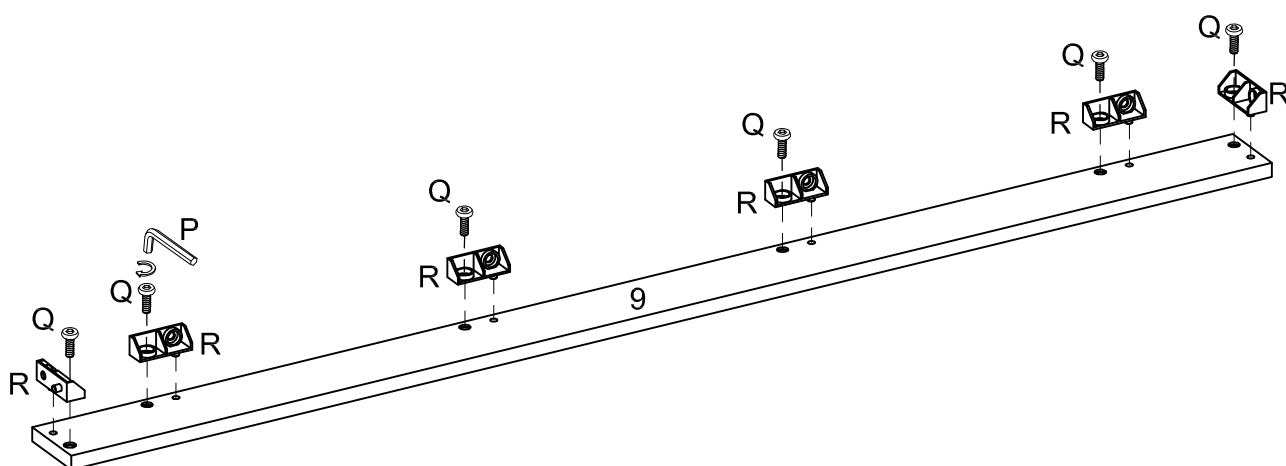


Step 15

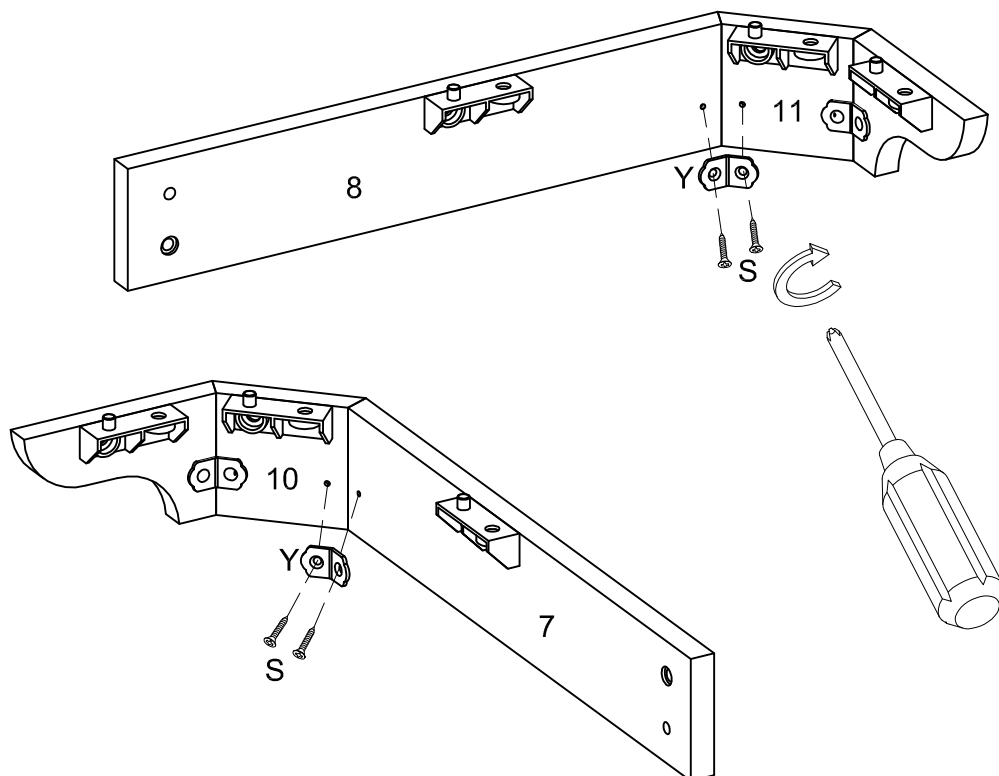


Step 16

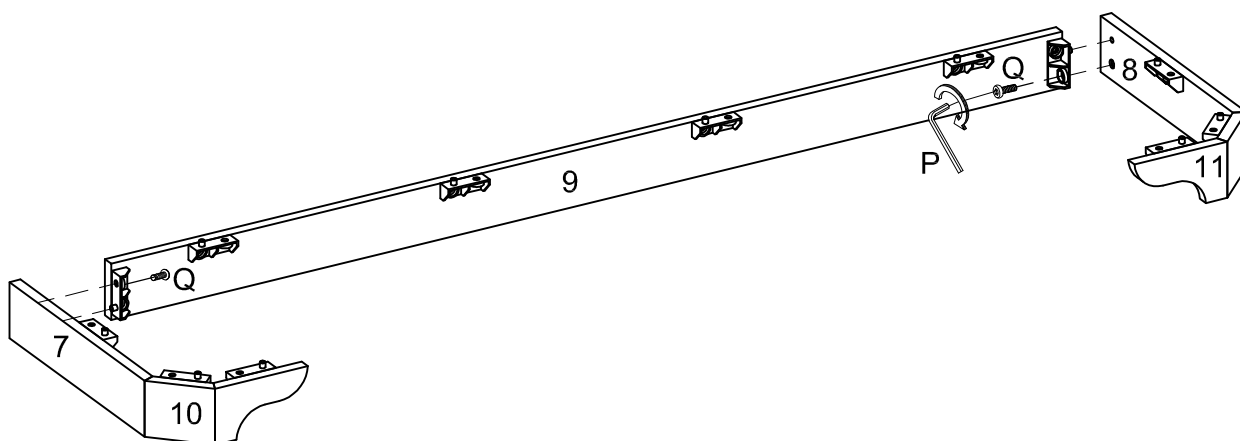


Step 17

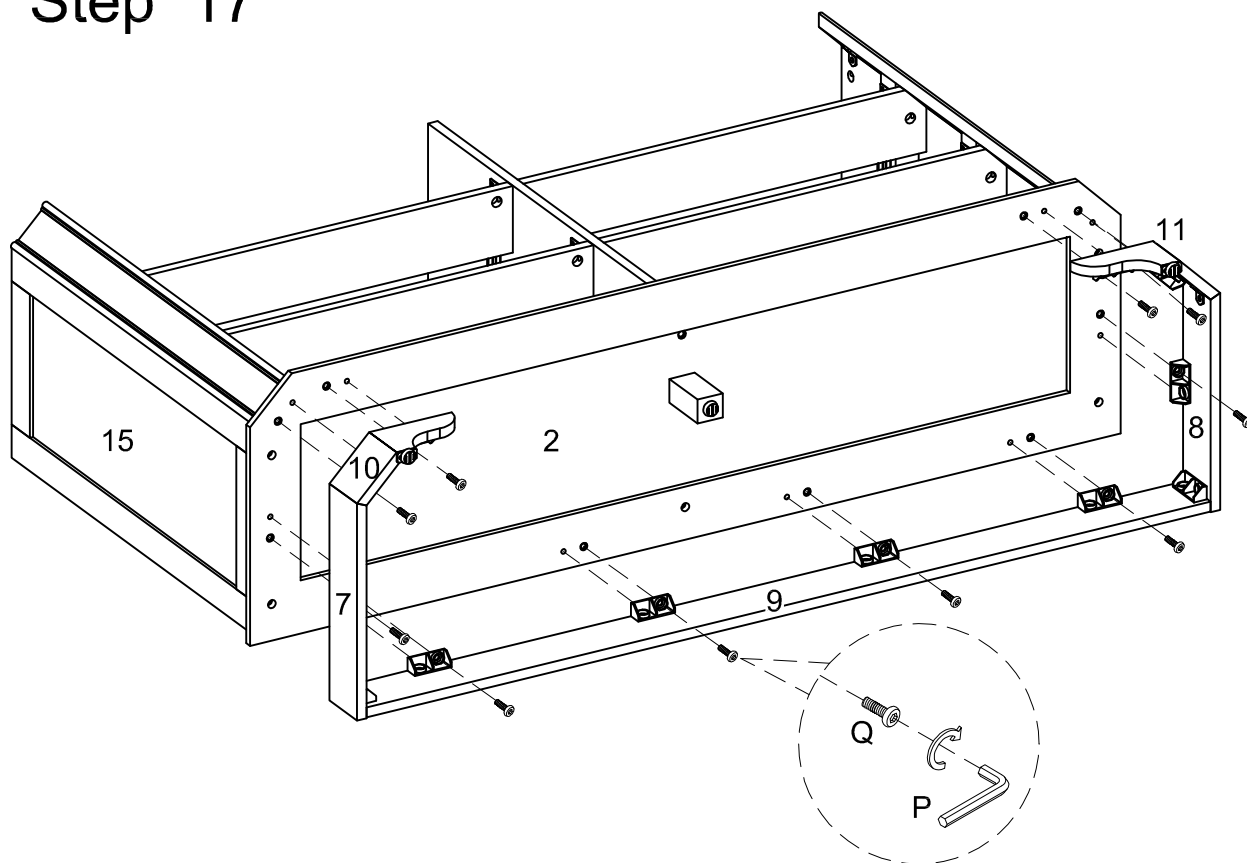



Step 18

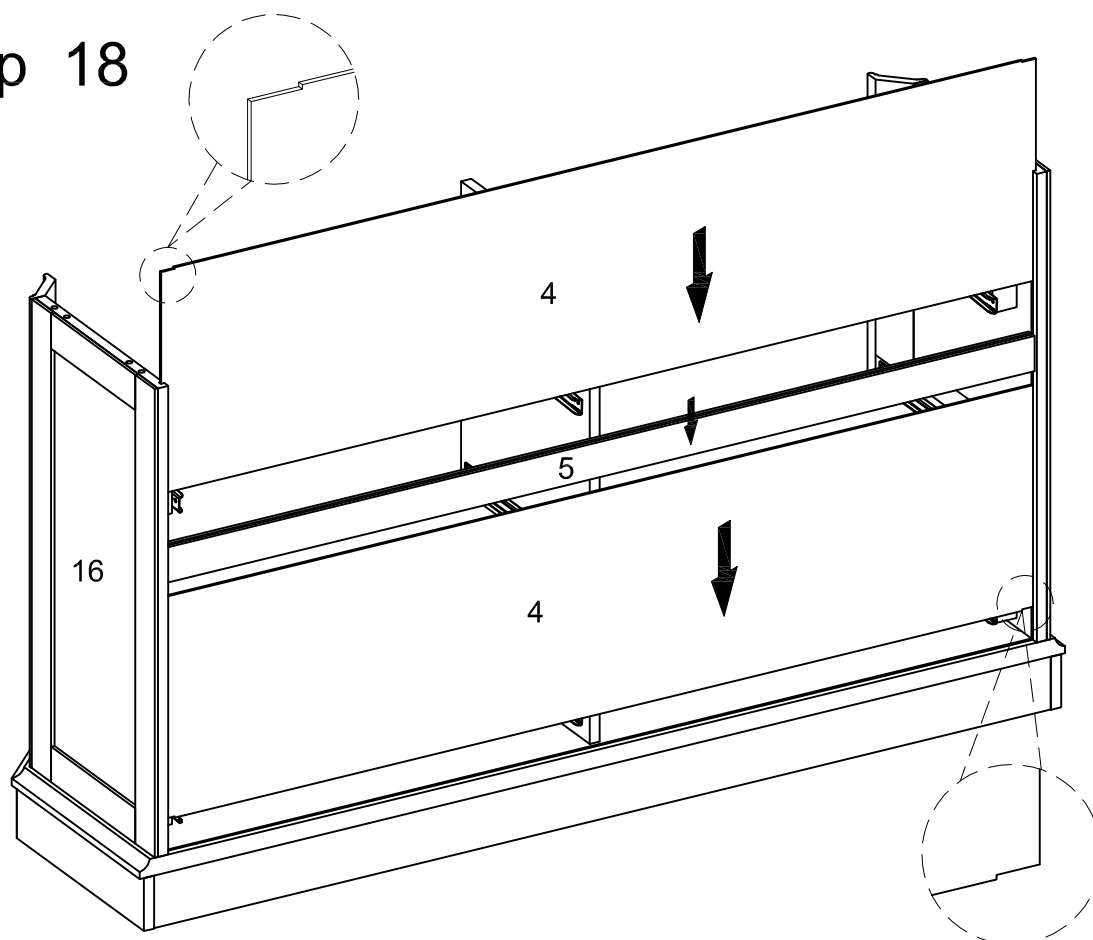


Step 19

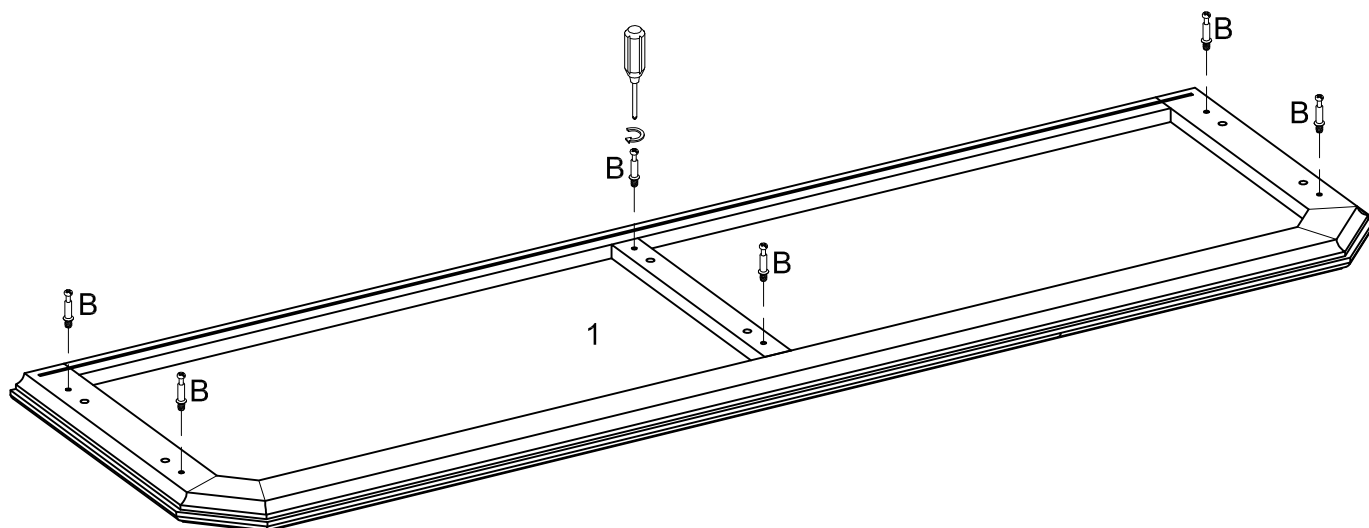


Step 20

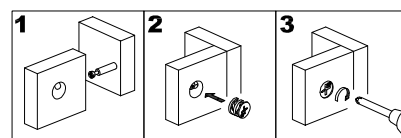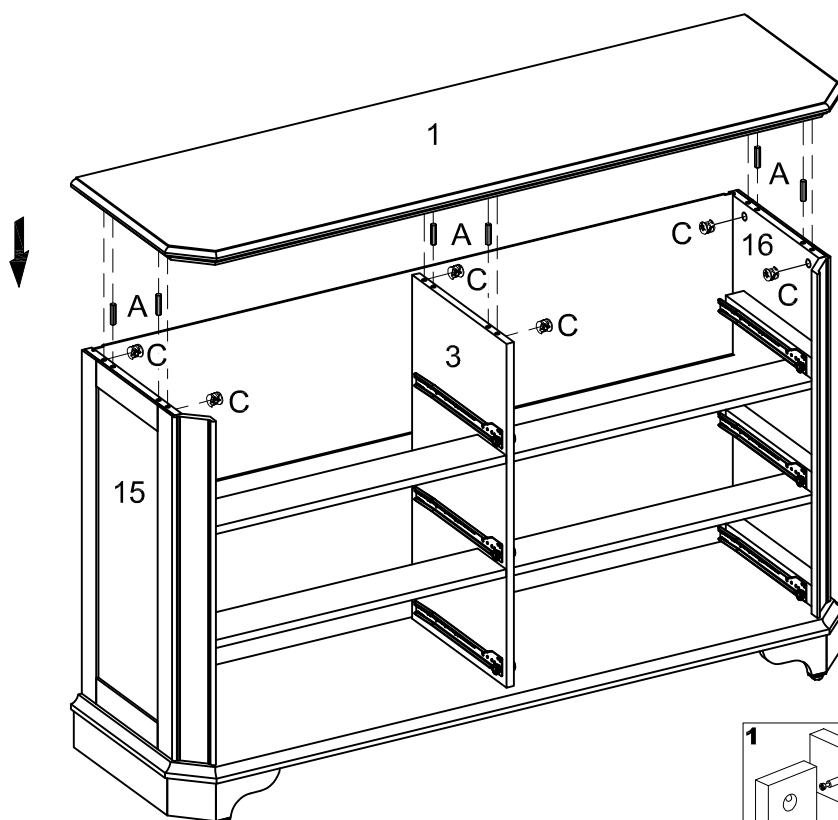

Step 21


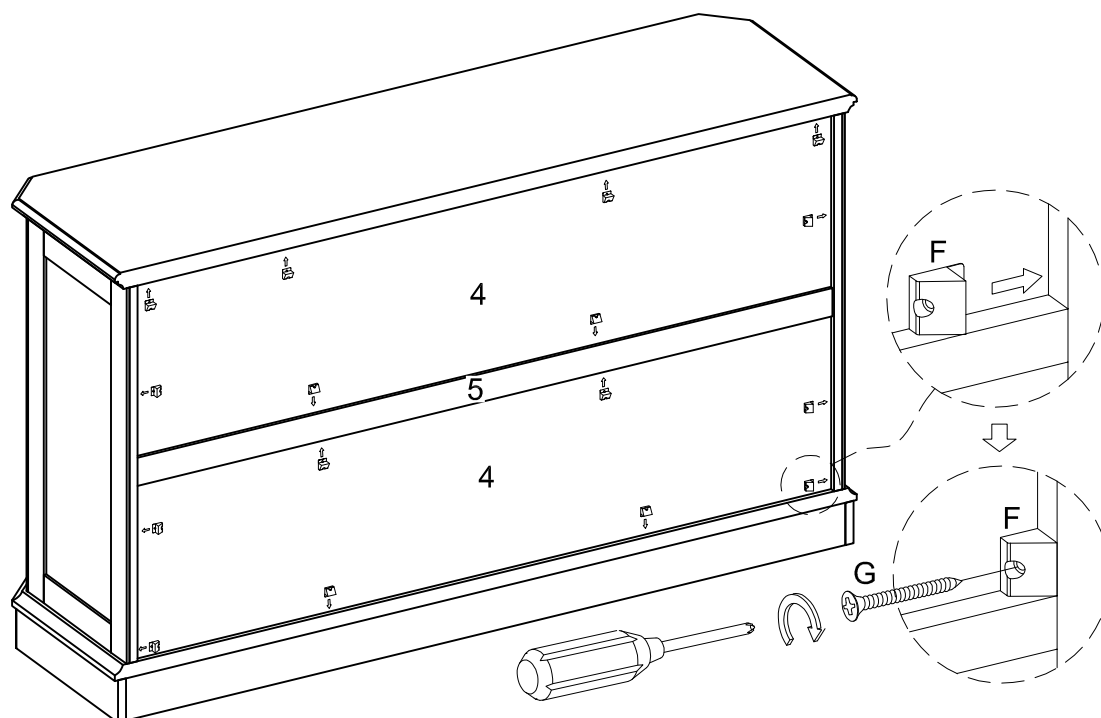


Step 22

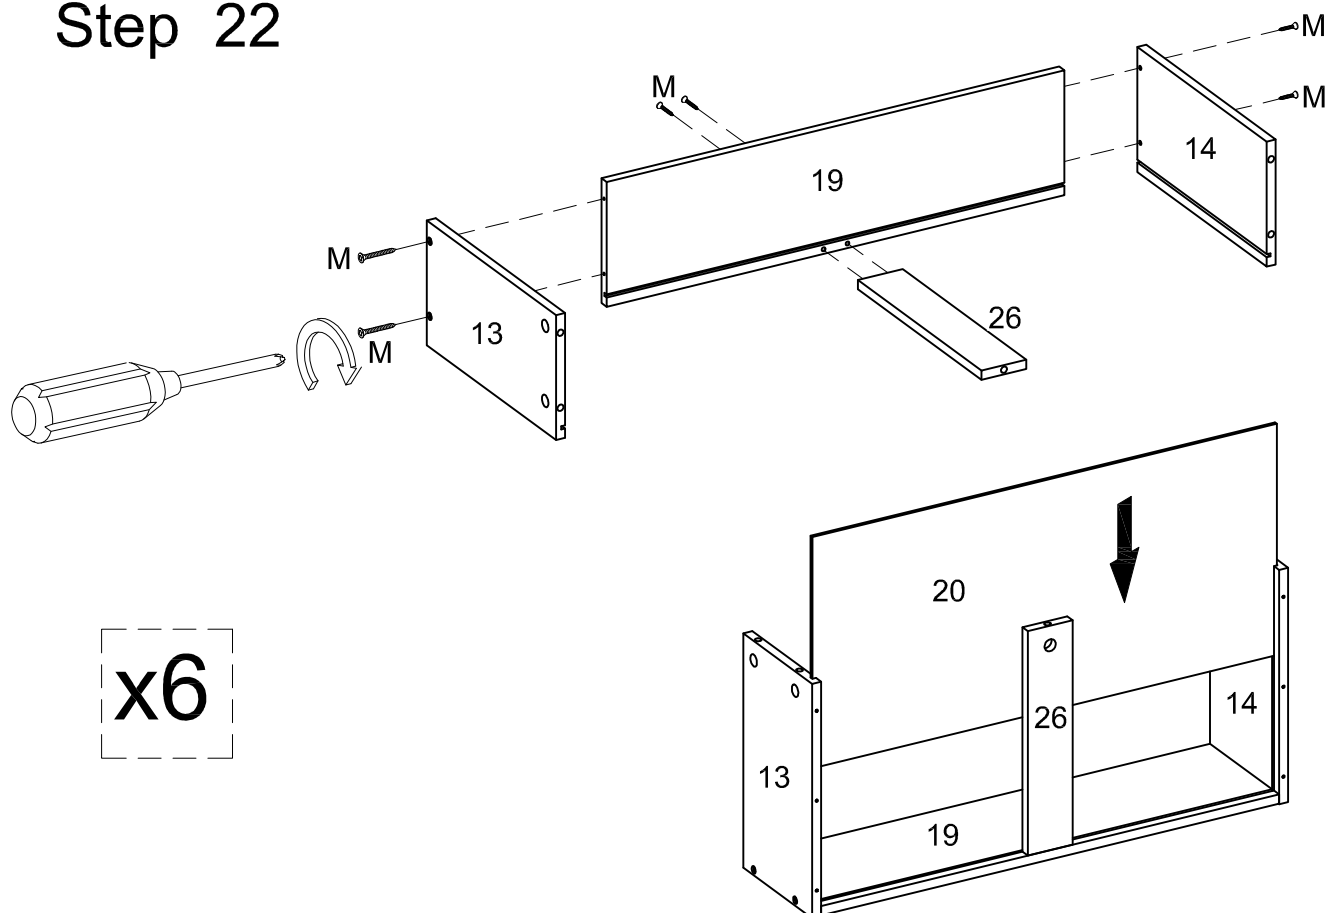



Step 23

x3

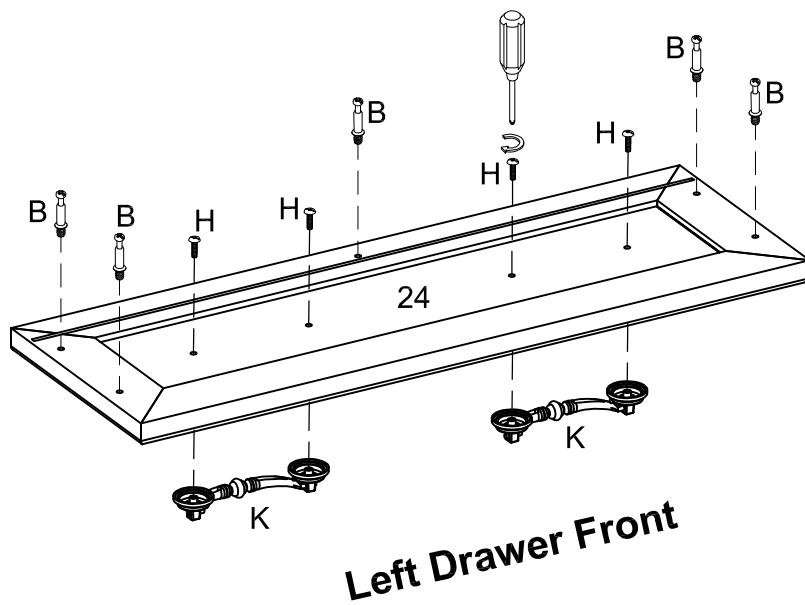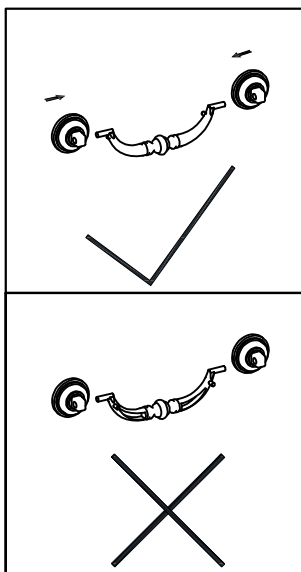


Step 24

x3

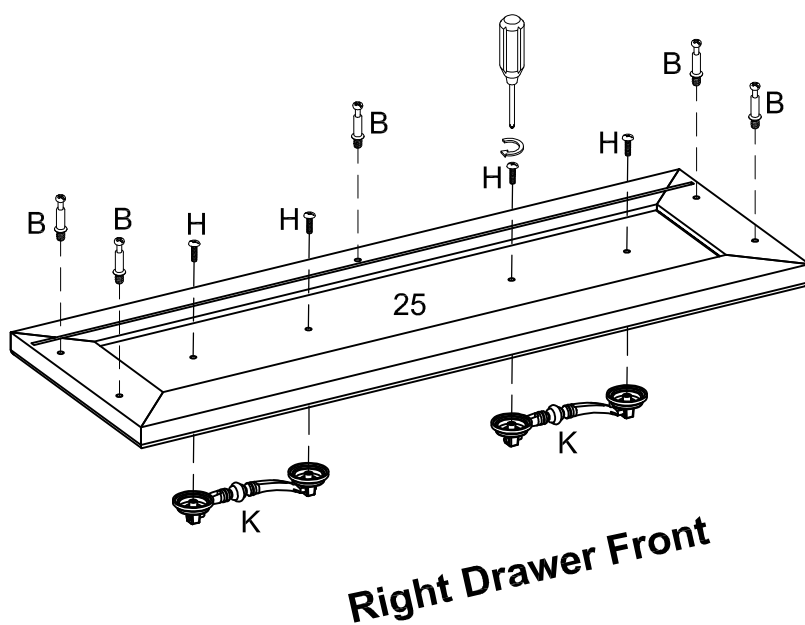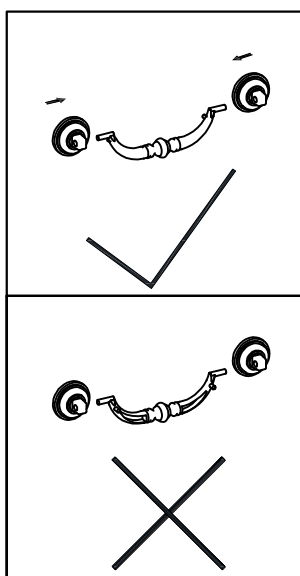


Step 25

Left Drawer Front

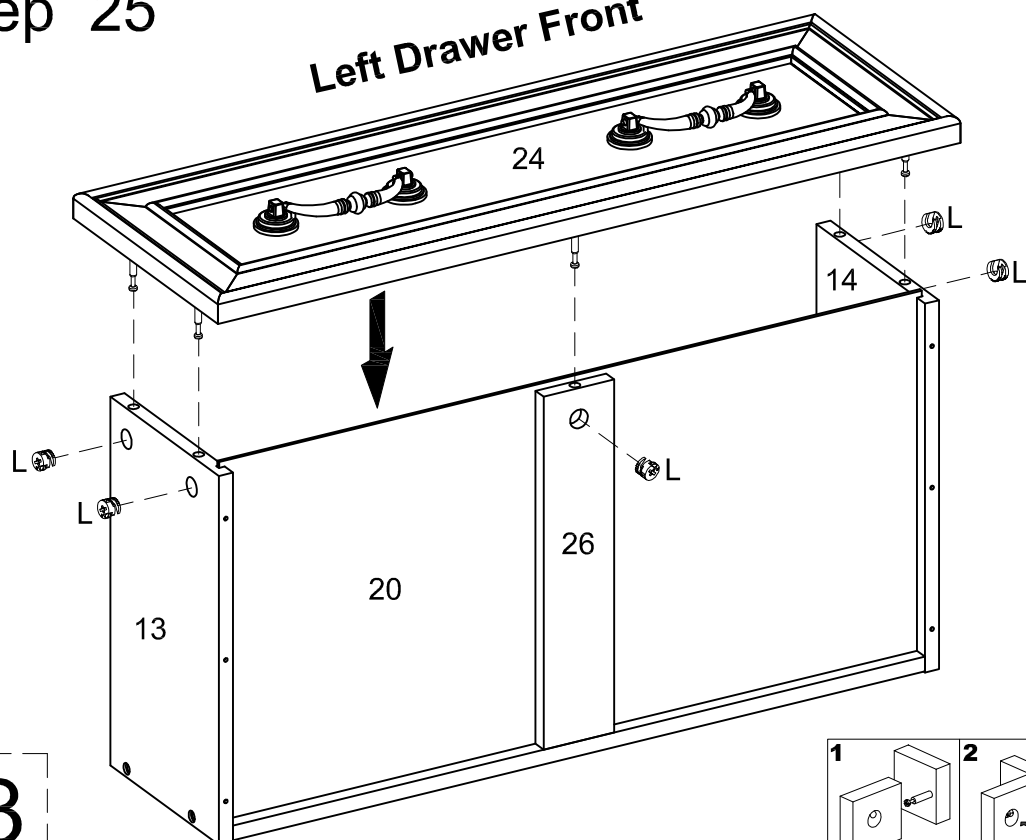


x3

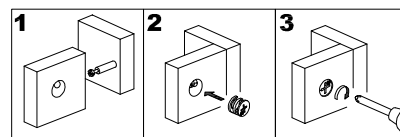


Step 26


Right Drawer Front

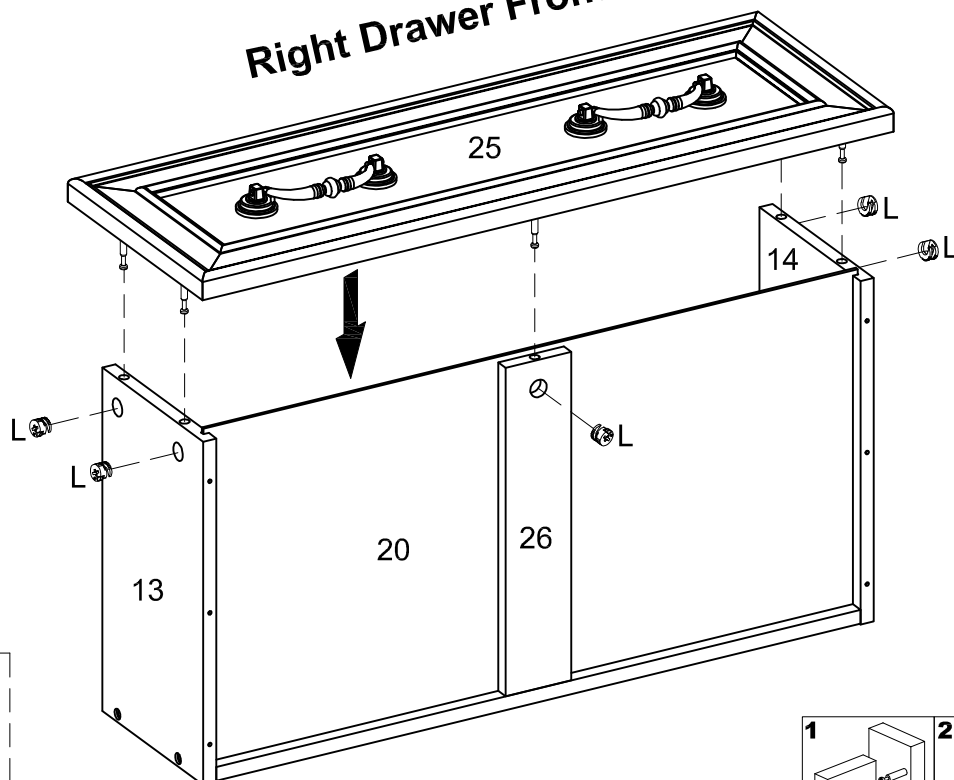


x3

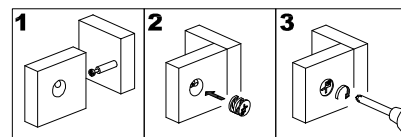






Step 27

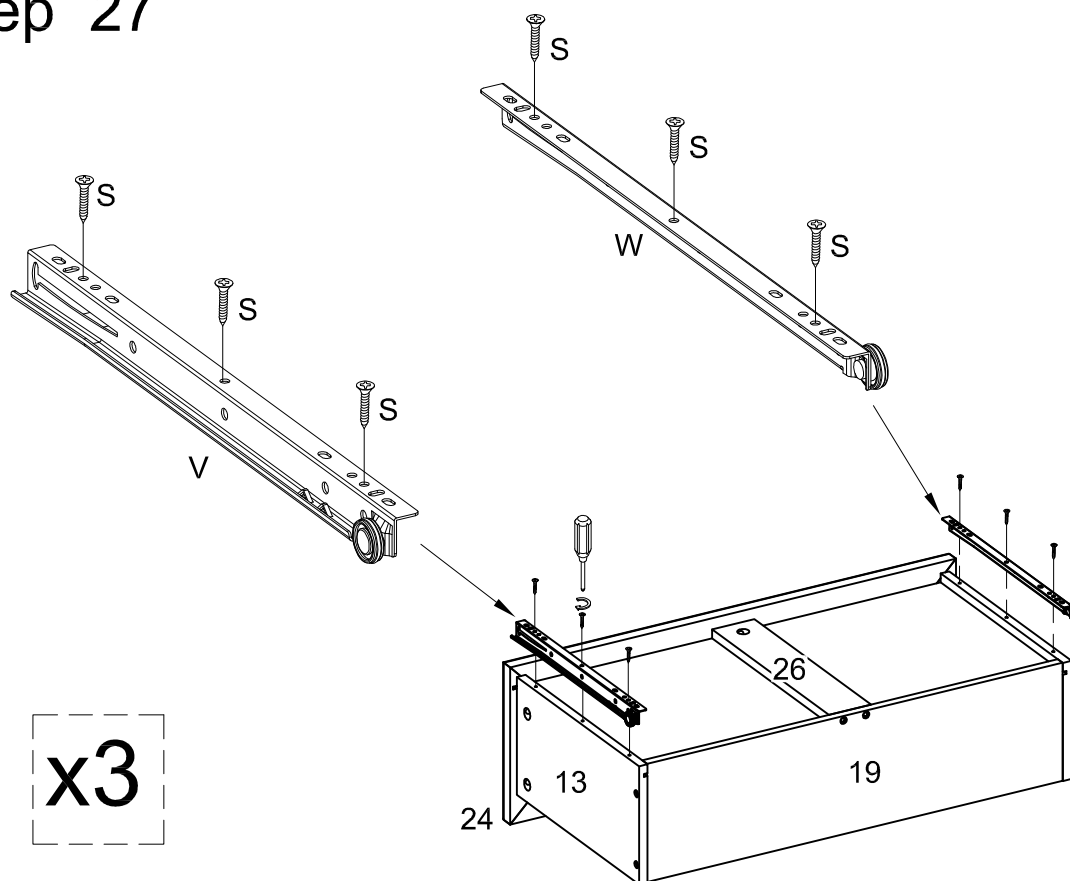


Step 28

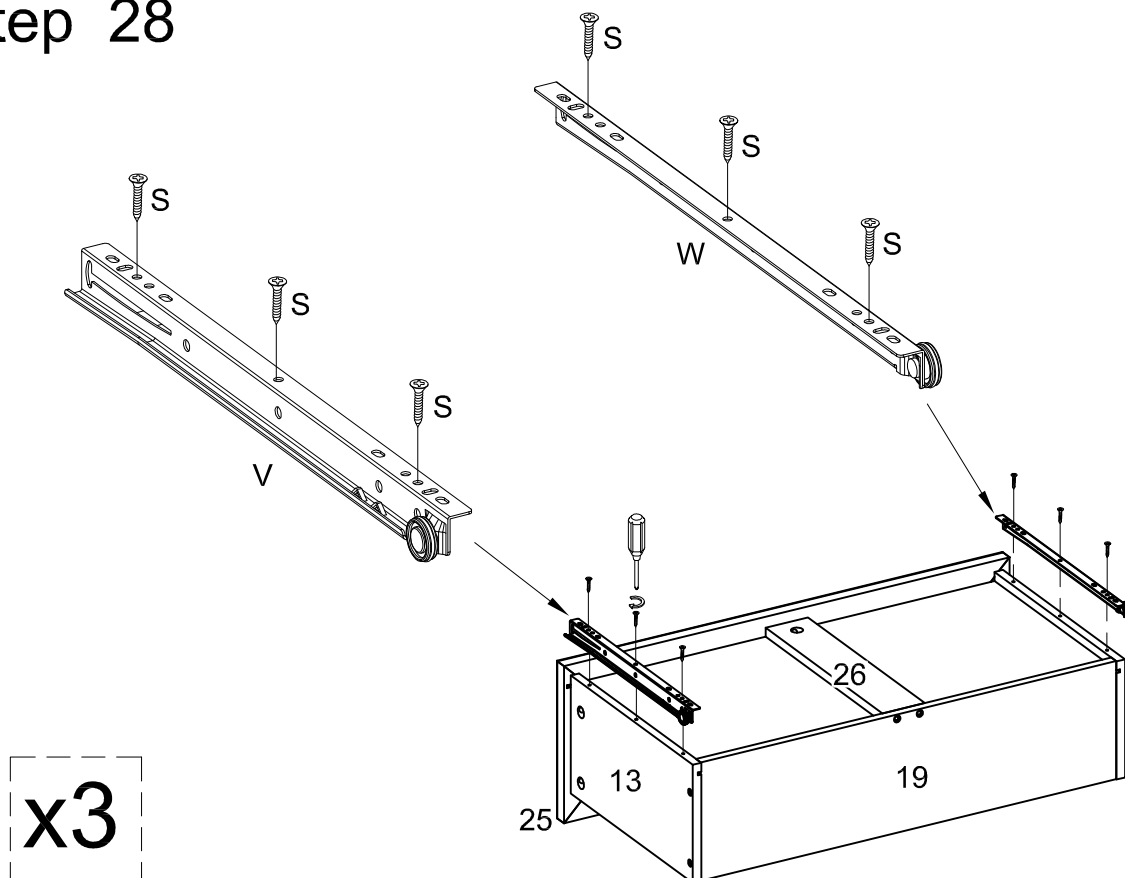

Step 29

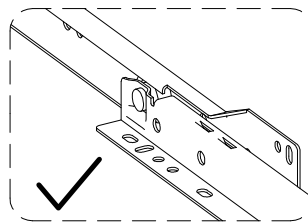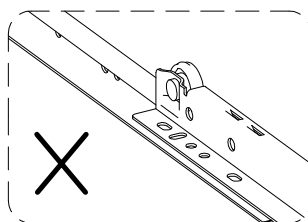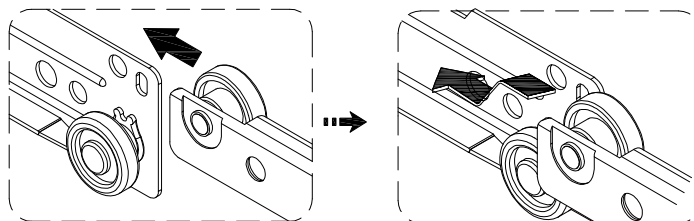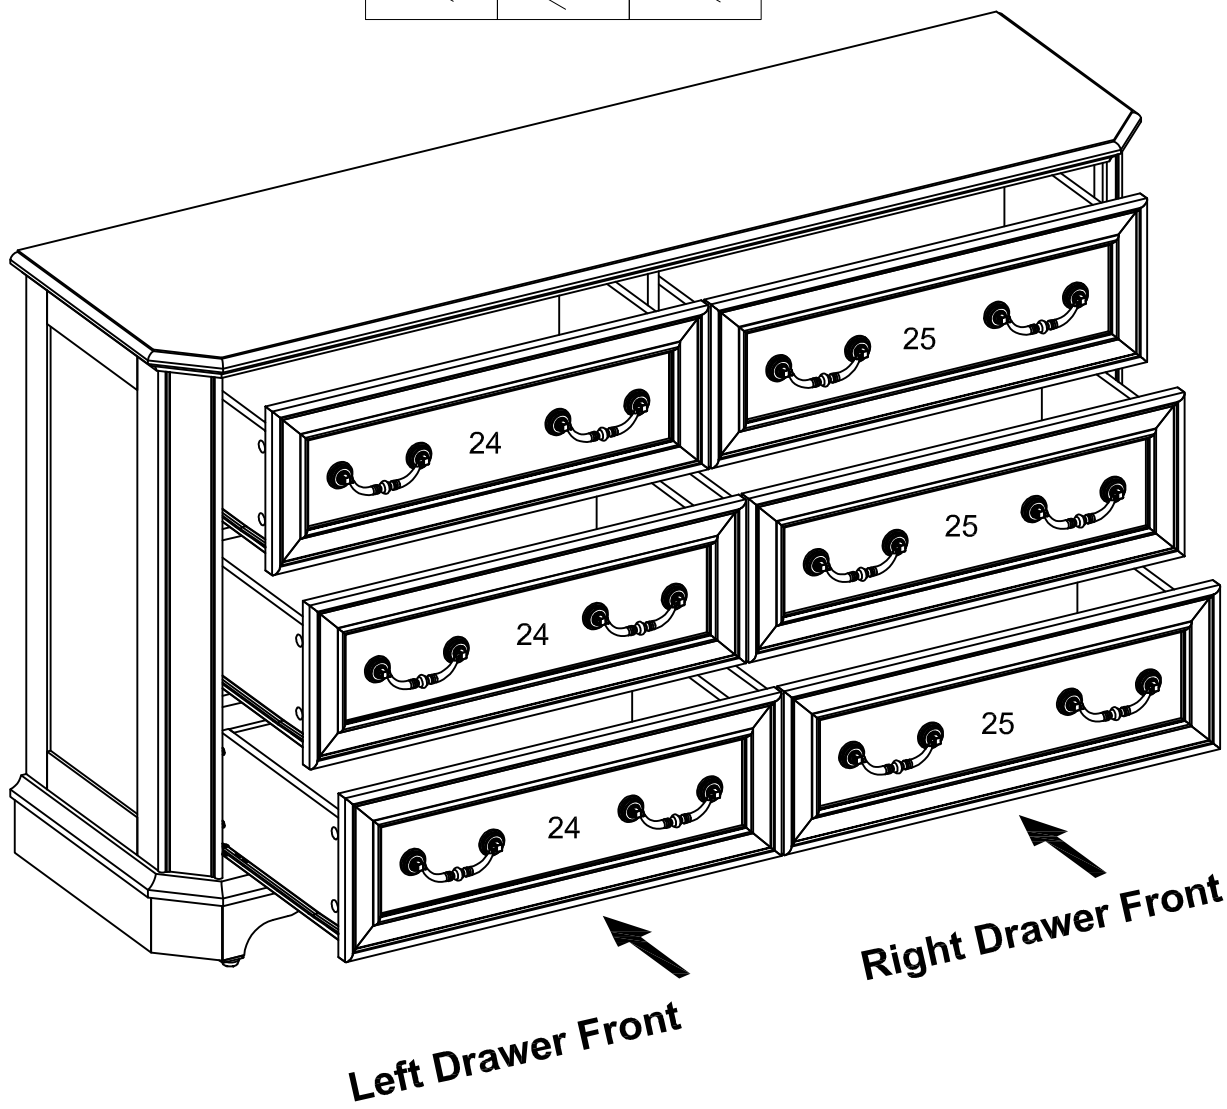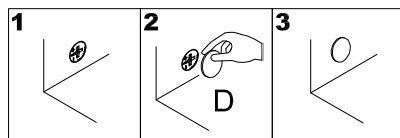


Step 30

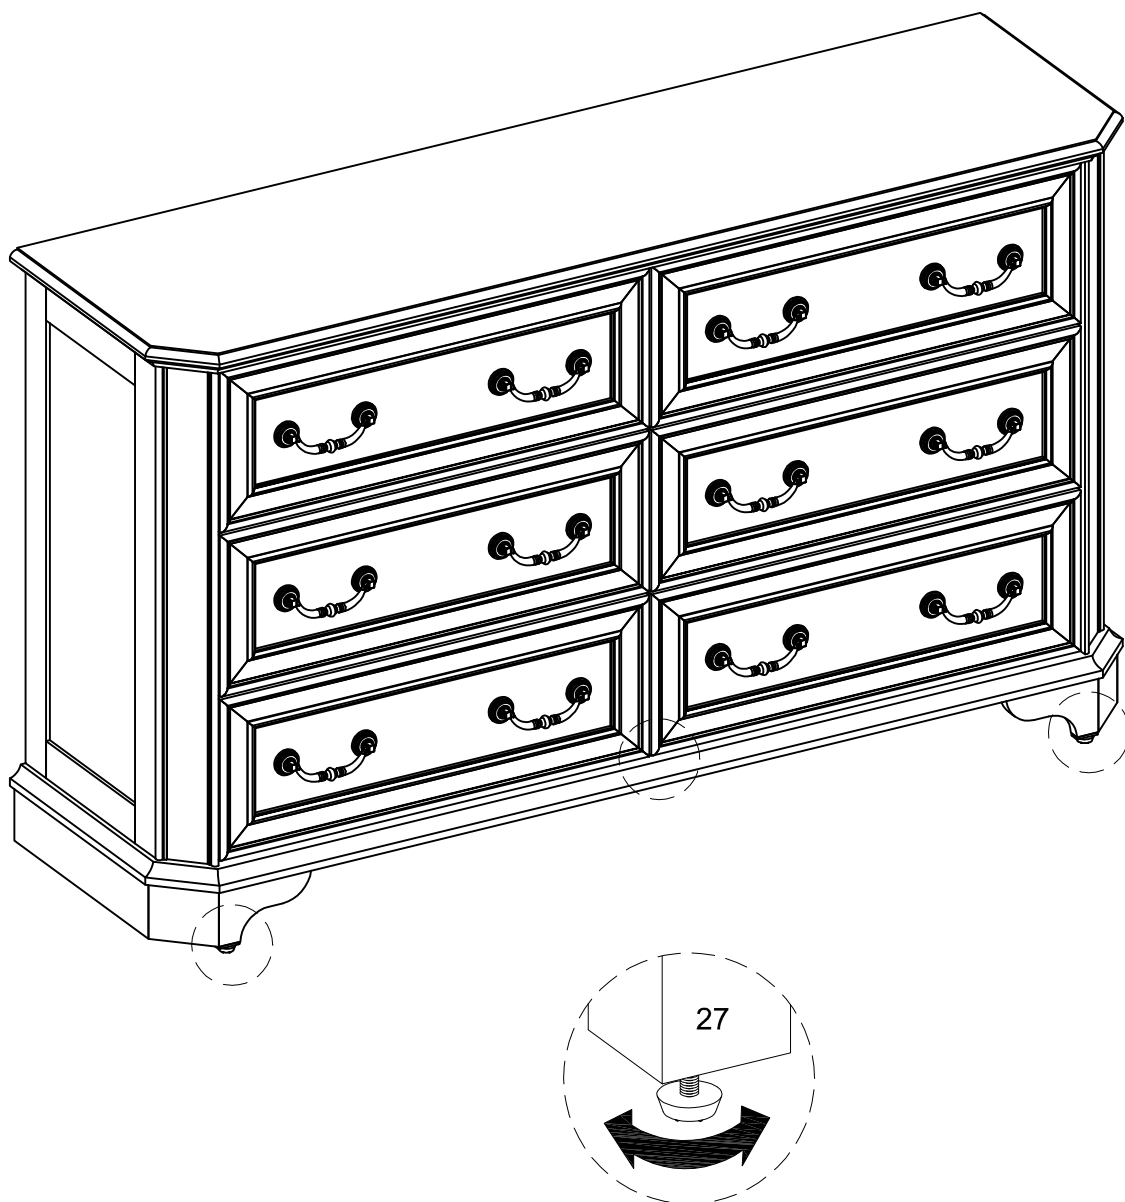


If necessary adjust the floor leveler at the bottom of the Support Leg to improve the gap around the Drawer.

Step 31

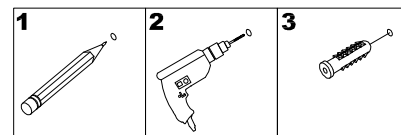

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

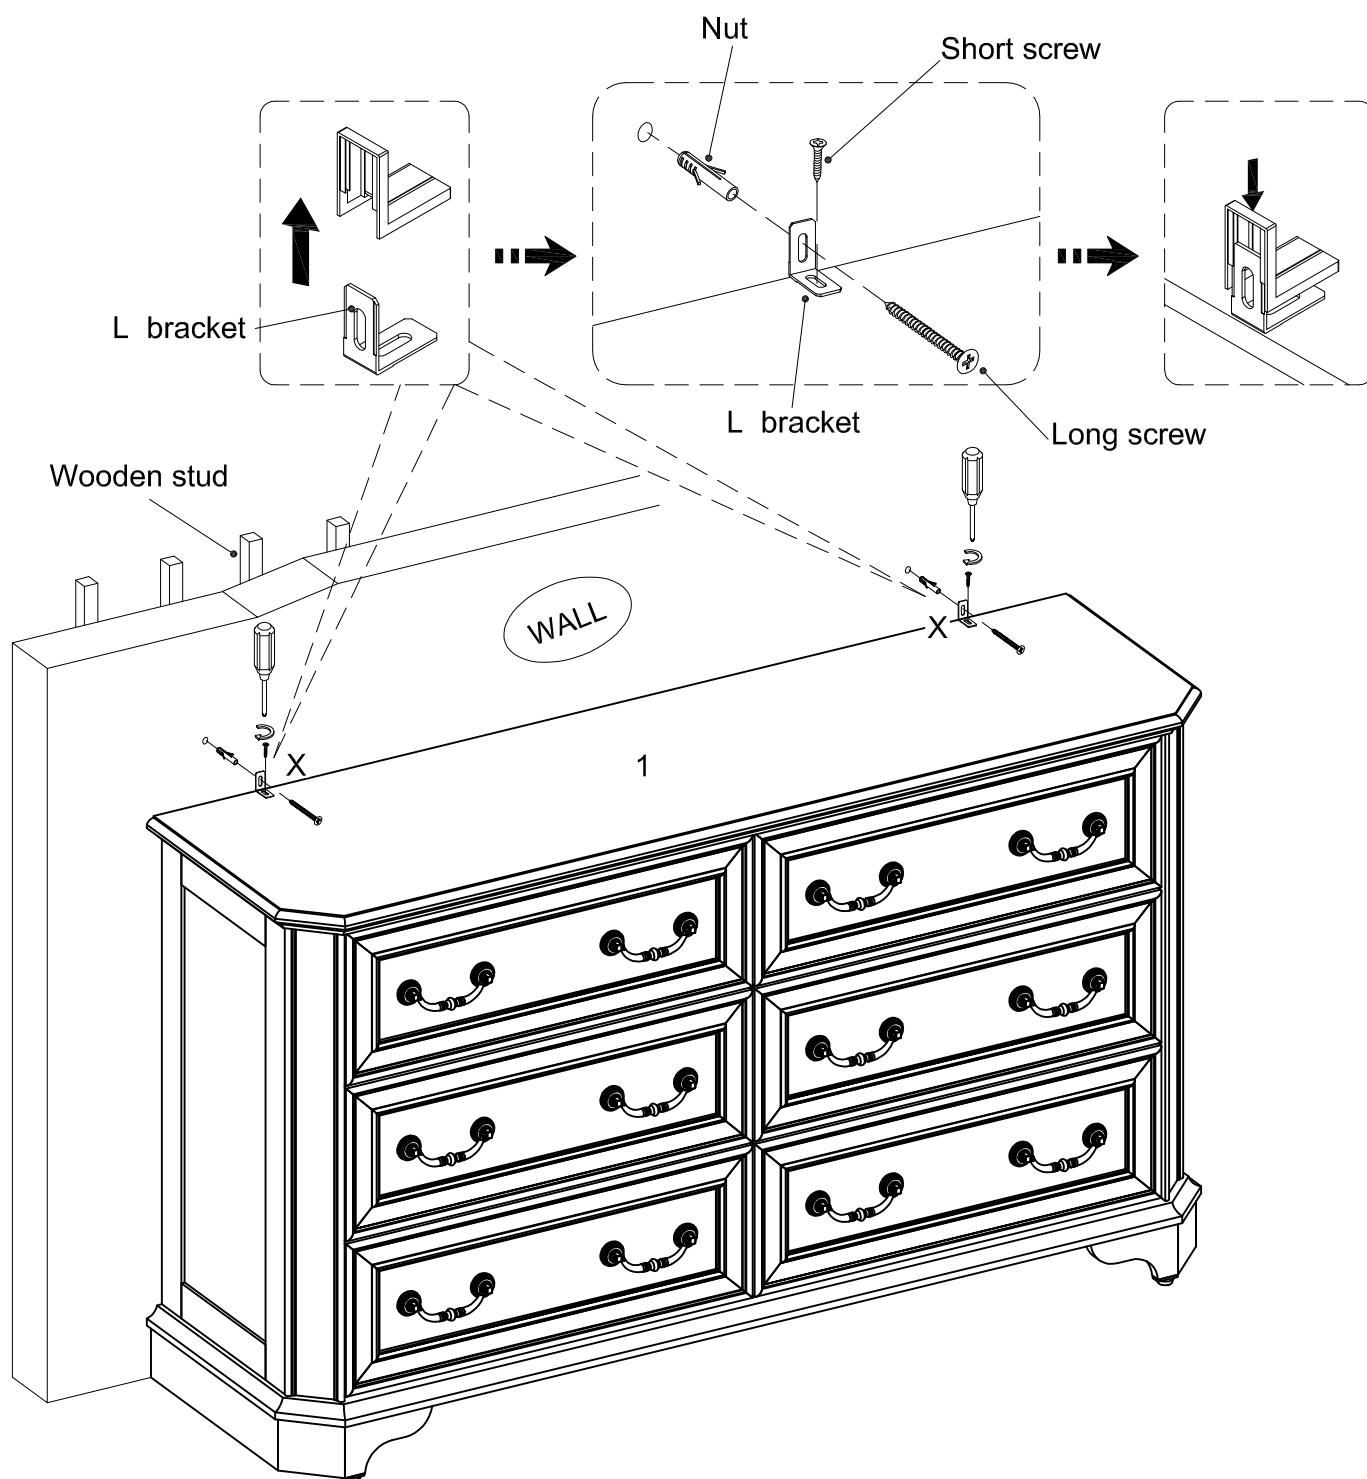

Step 32



Final Assembly