

AI - VSC7DRSC

Assembly Instructions



Customer Service E-mail Address : xiuxiumaoyius@163.com

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.




In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.




- VI. A Phillips head screwdriver is required for the assembly of this product .

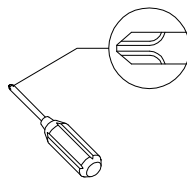





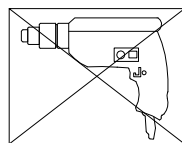







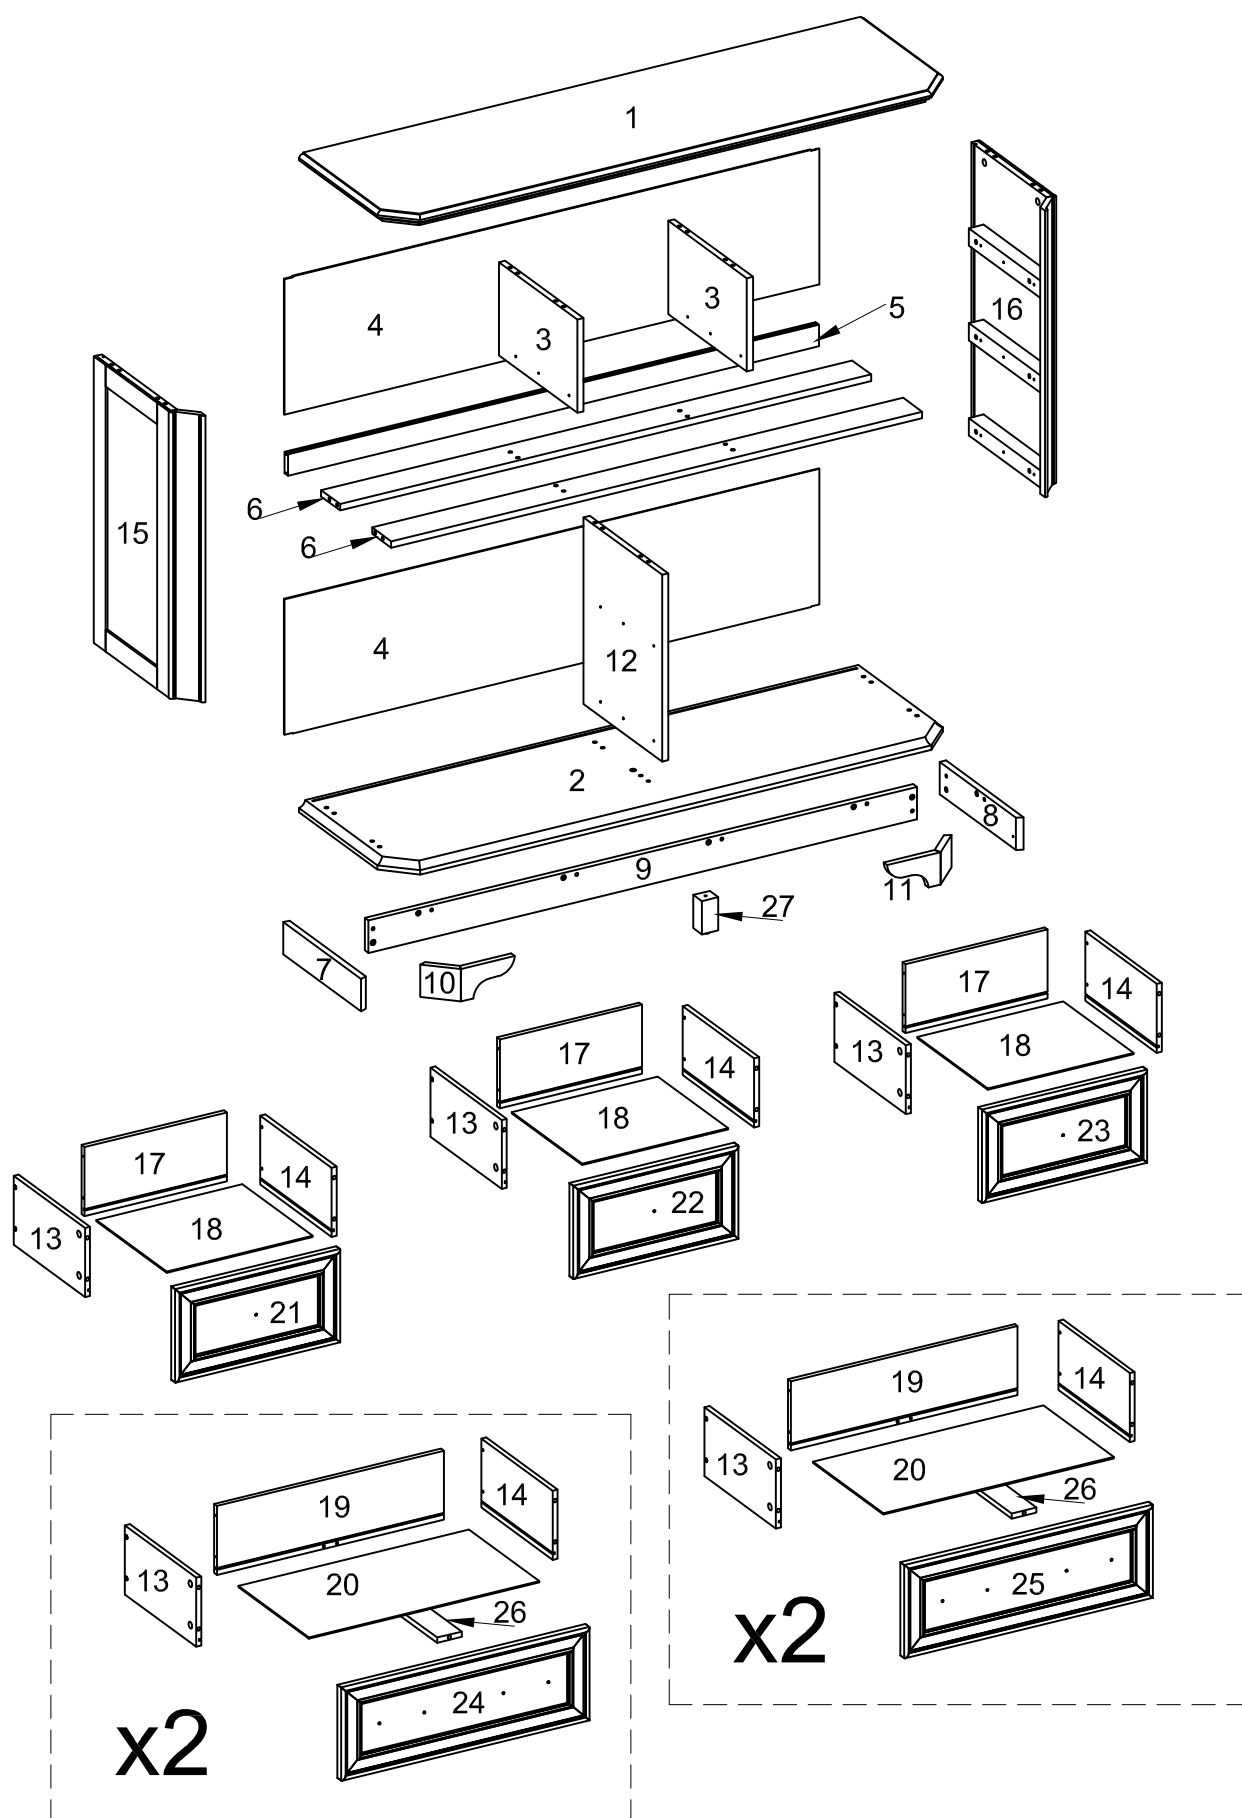



- VII. Power tools should not be used to assemble this product .




Parts List










Hardware List

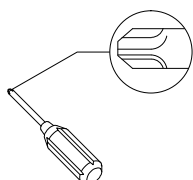
A		Ø8x30mm	Long dowel	24 pcs
B		Ø6x35mm	Cam bolt	46 pcs
C		Ø15x11mm	Large Cam lock	14 pcs
D		Ø30mm	Cam cover	46 pcs
E			Glue	1 pc
F			Plastic Bracket	16 pcs
G		Ø3x17mm	Flat-head screw	16 pcs
H		Ø4x12mm	Knob bolt	19 pcs
J			Knob	3 pcs
K			Handle	8 pcs
L		Ø15x9.5mm	Small Cam lock	32 pcs
M		Ø4x38mm	Screw	36 pcs
N		Ø6x50mm	Screw	11 pcs
P		M 4	wrench	1 pc
Q		Ø6x12mm	Bolt	24 pcs
R			Connector	12 pcs



Philips head screwdriver required for assembly
(not included)


Hardware List

S		Ø3.5x12mm	Screw	88 pcs
T		12"	Left cabinet member	7 pcs
U		12"	Right cabinet member	7 pcs
V		12"	Left drawer runner	7 pcs
W		12"	Right drawer runner	7 pcs
X		Tipping Restraint Hardware		2 sets
Y		L shape bracket		2 pcs

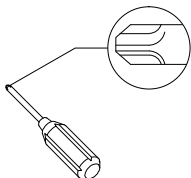


Philips head screwdriver required for assembly
(not included)


Step 1

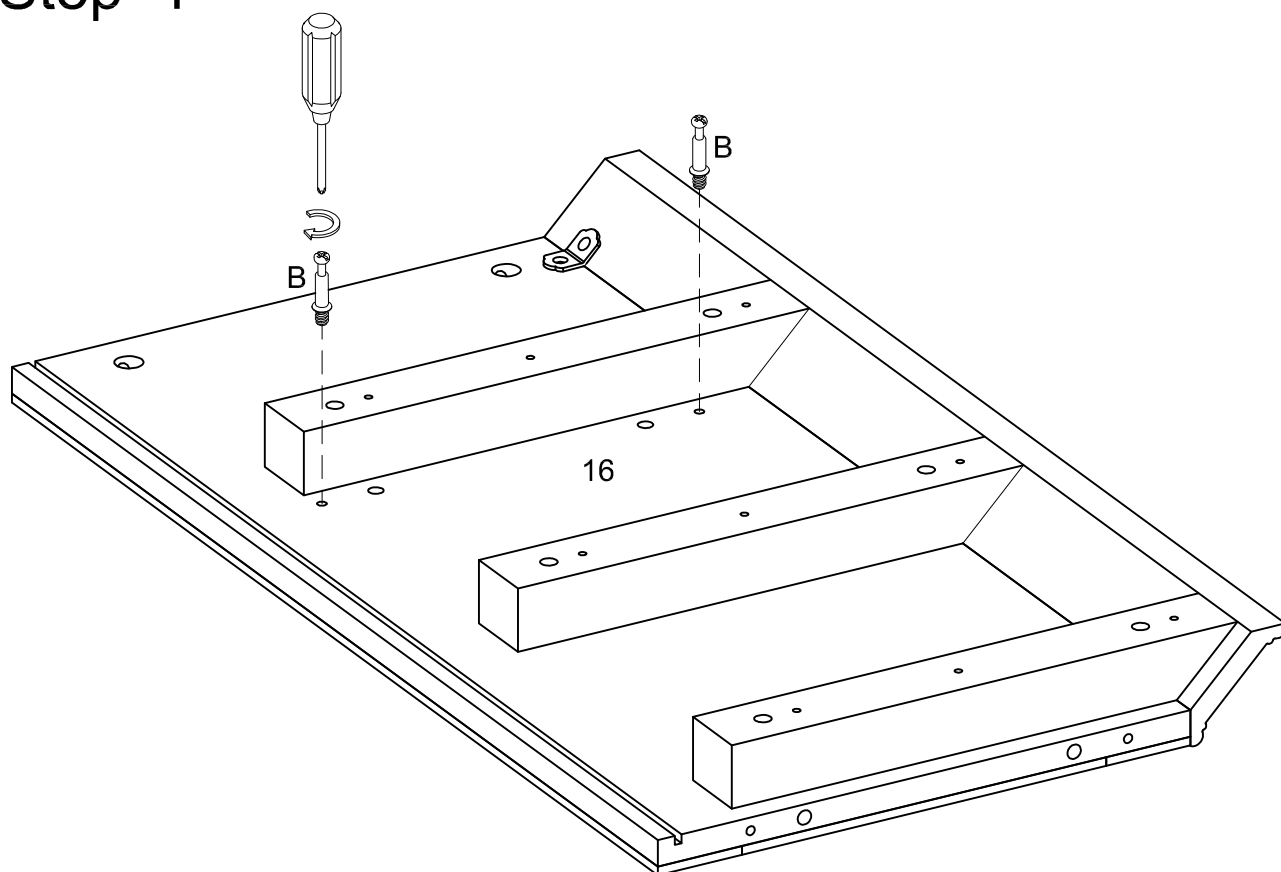


Step 2

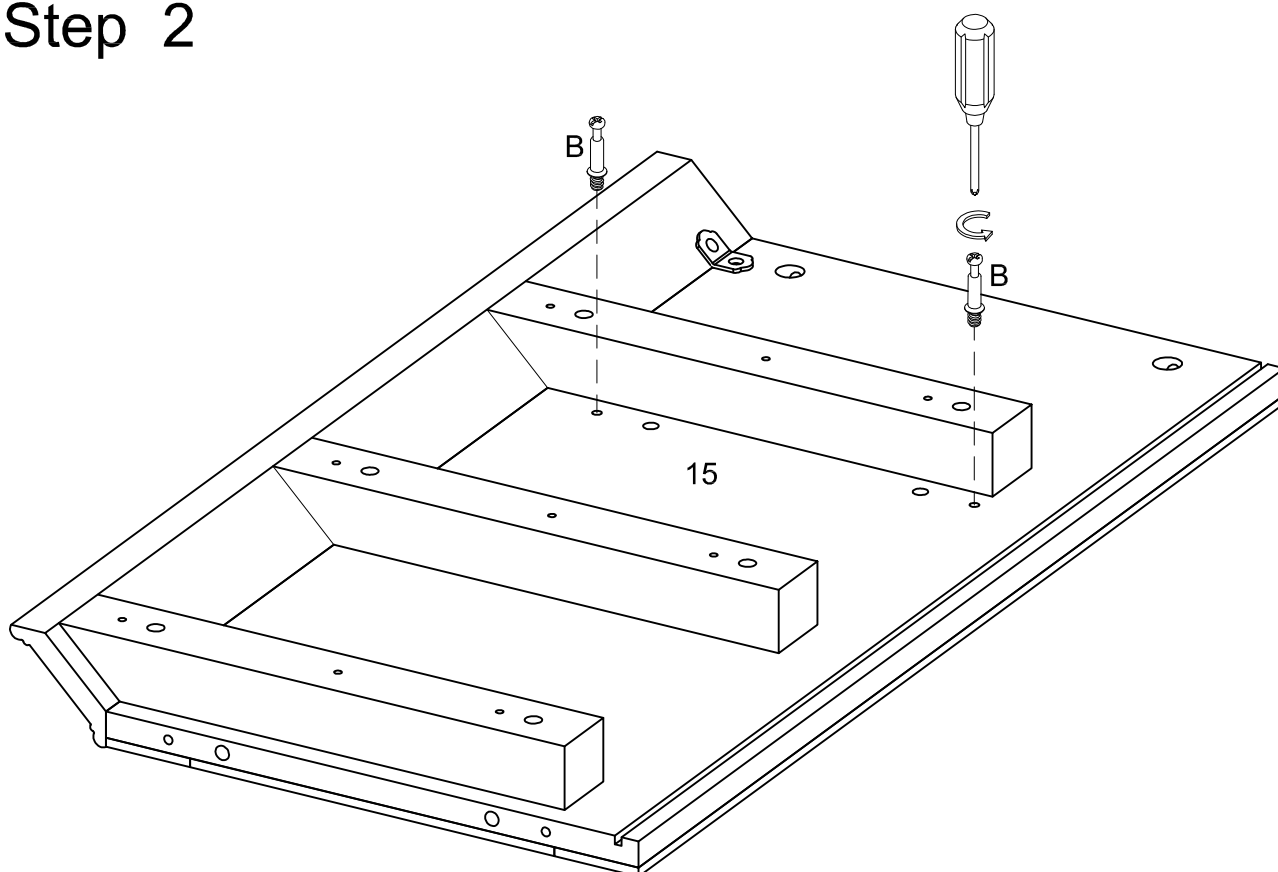


Step 3

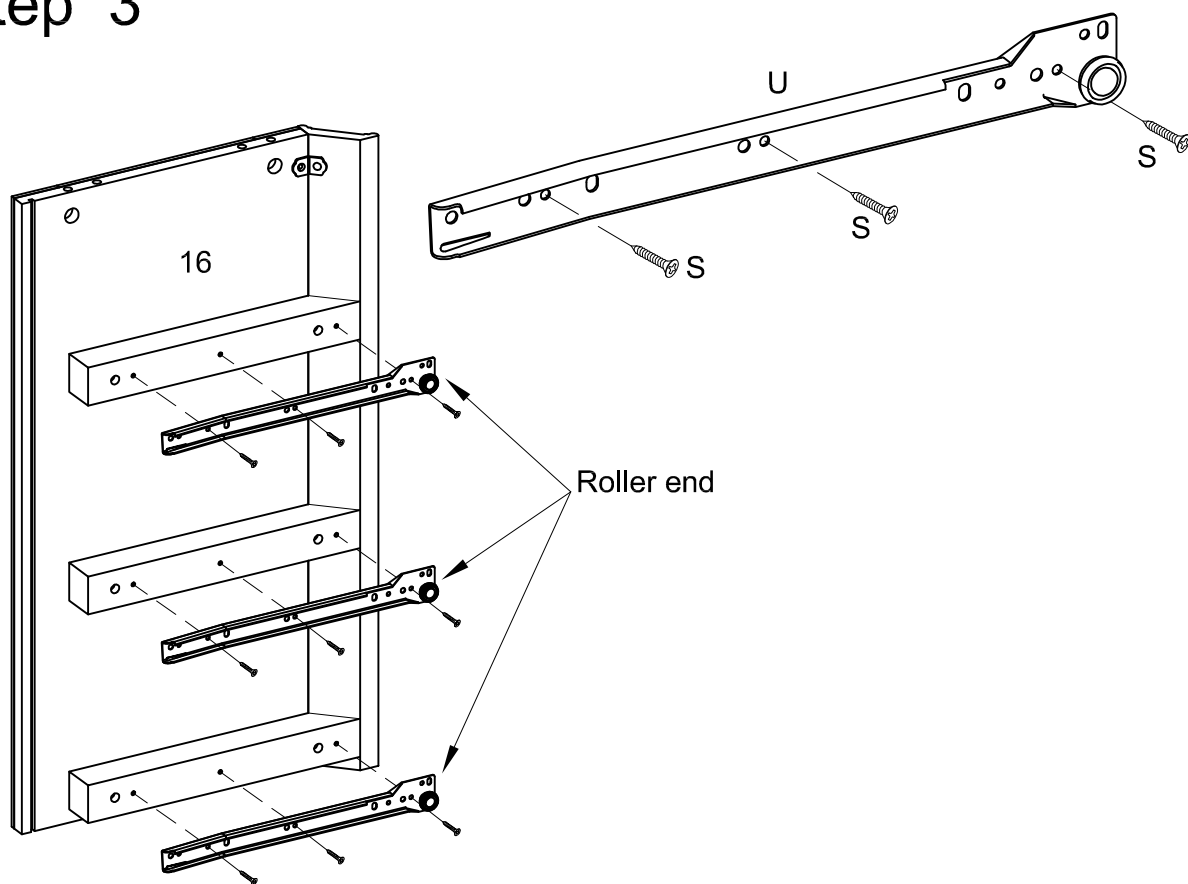


Step 4

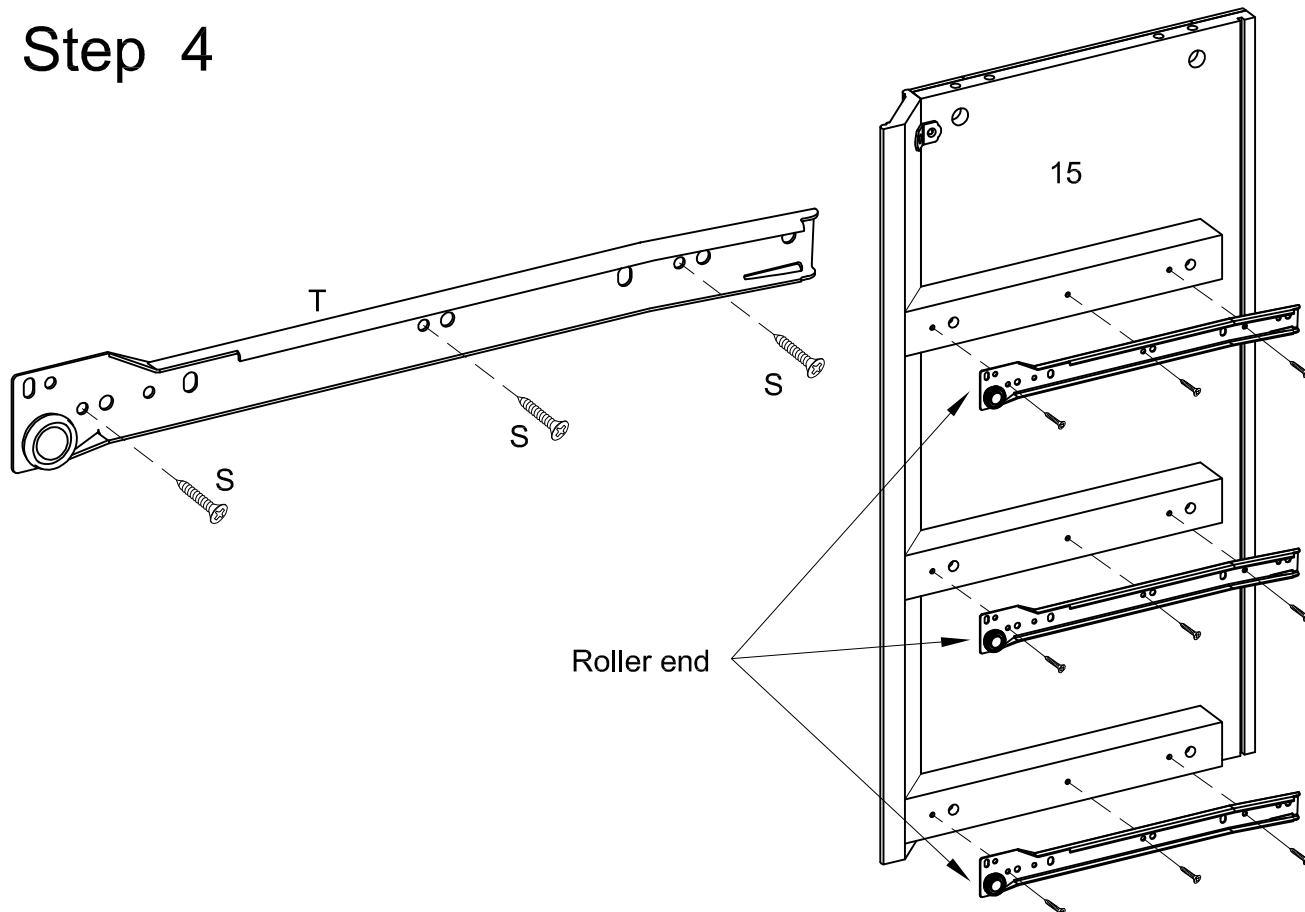


Step 5

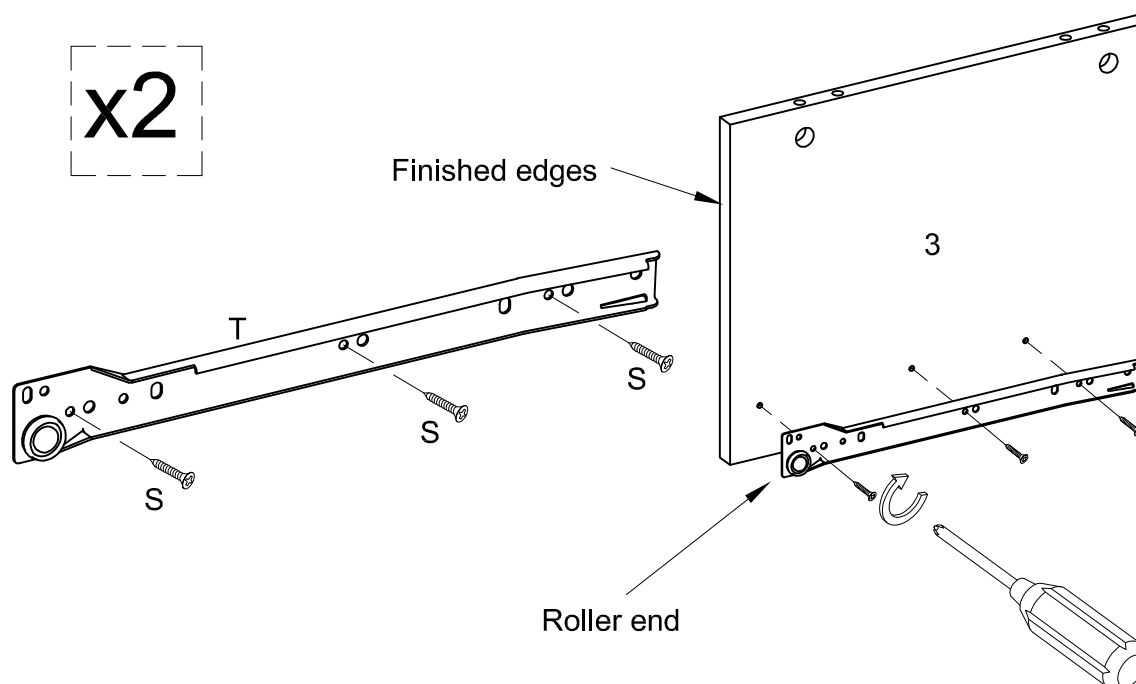


Step 6

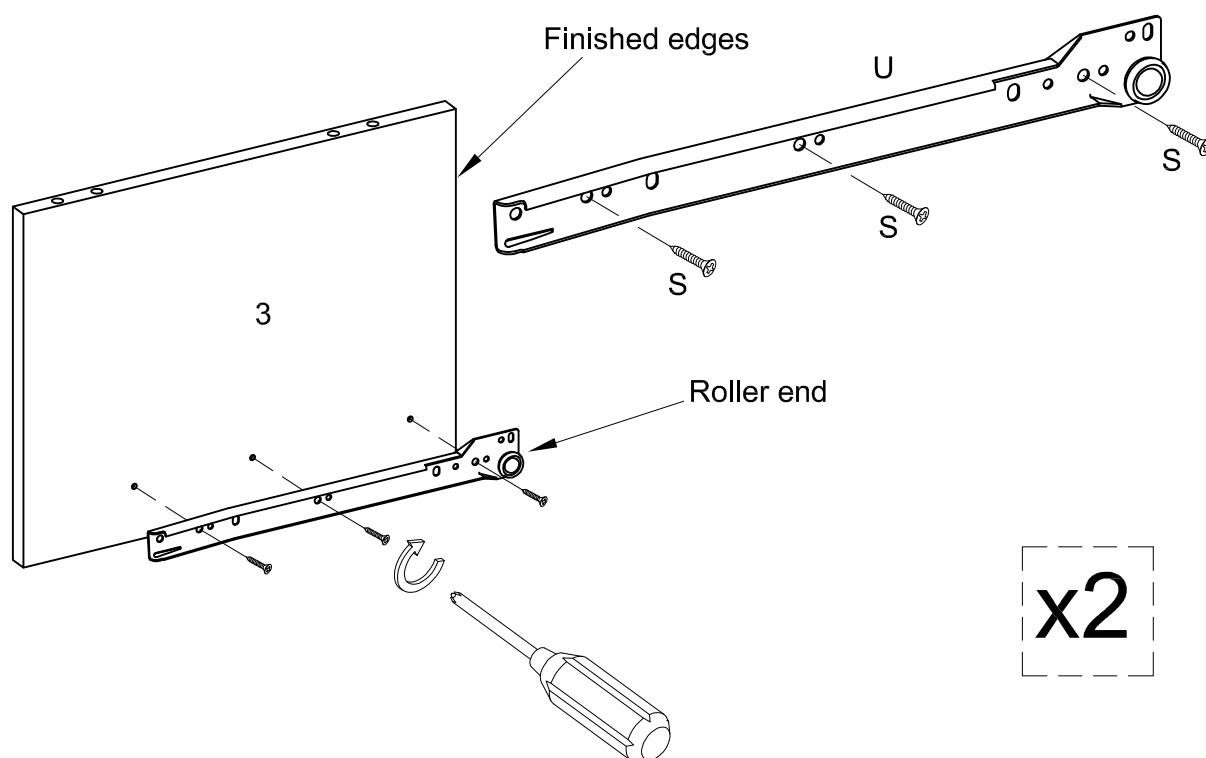


Step 7

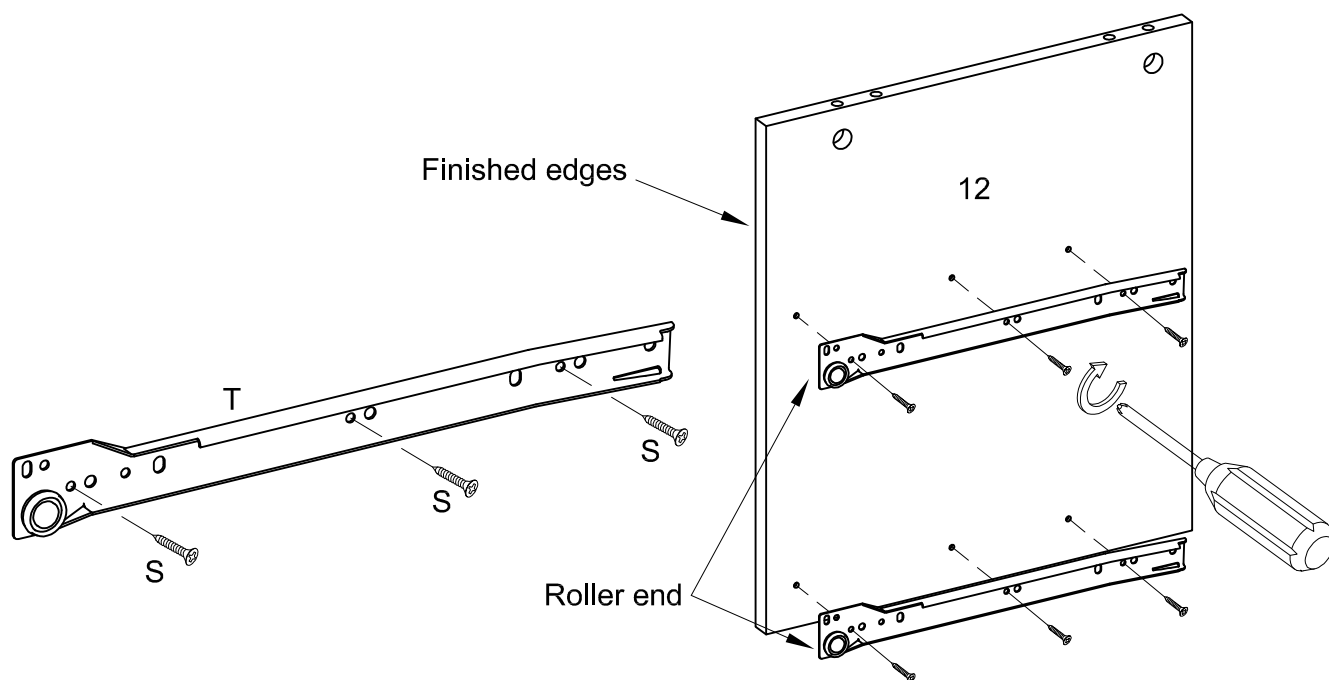


Step 8

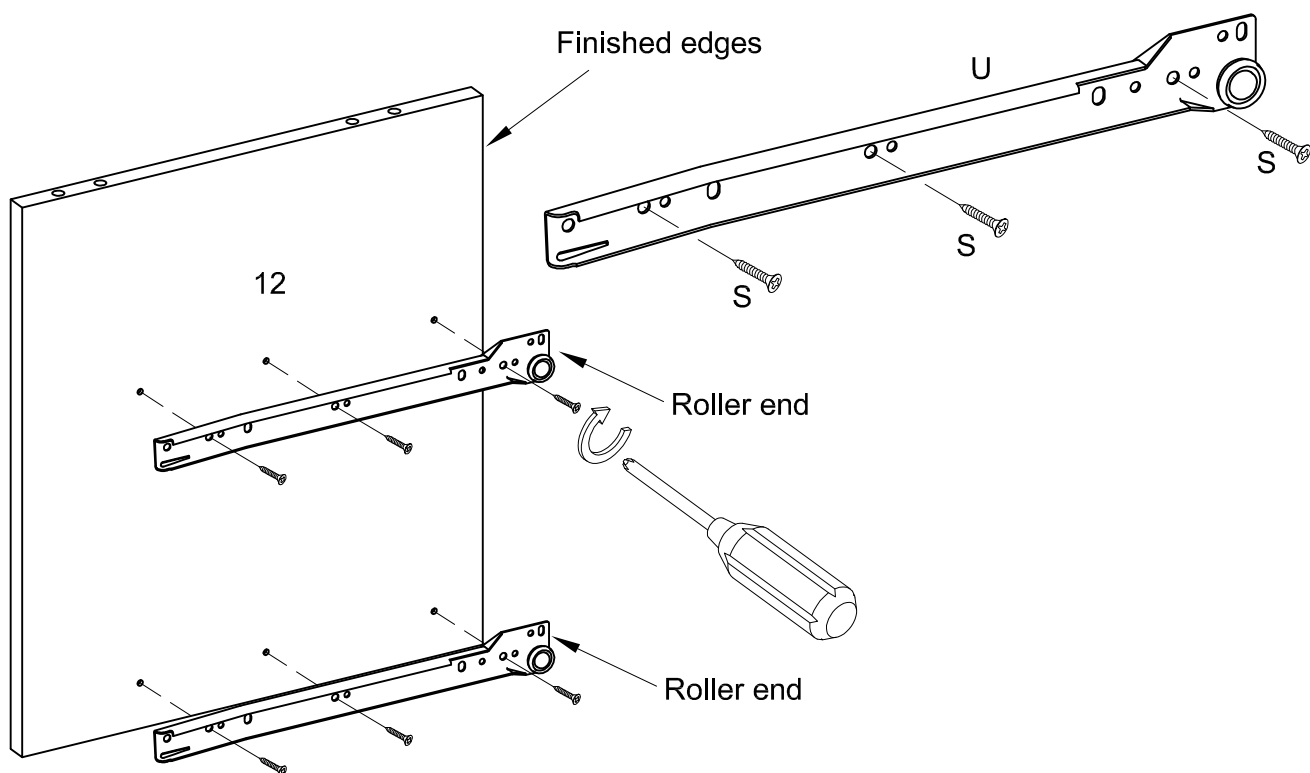



Step 9

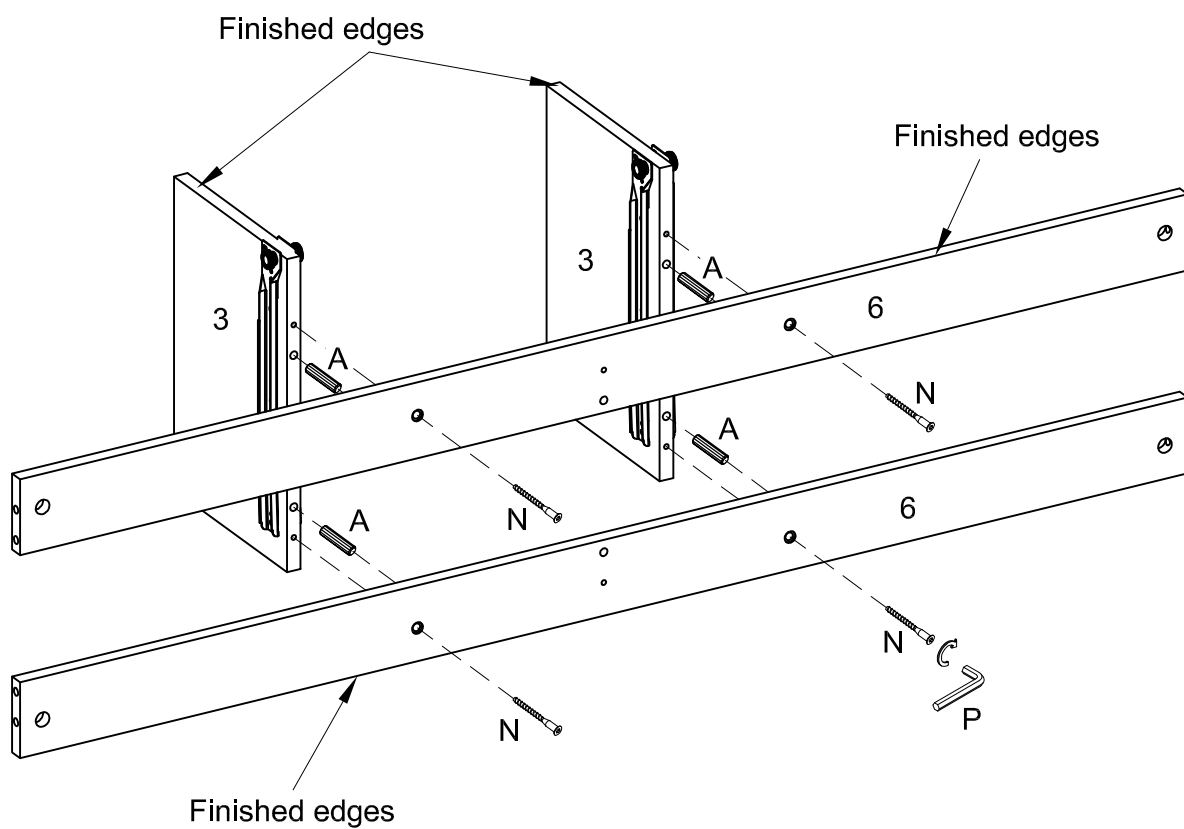



Step 10

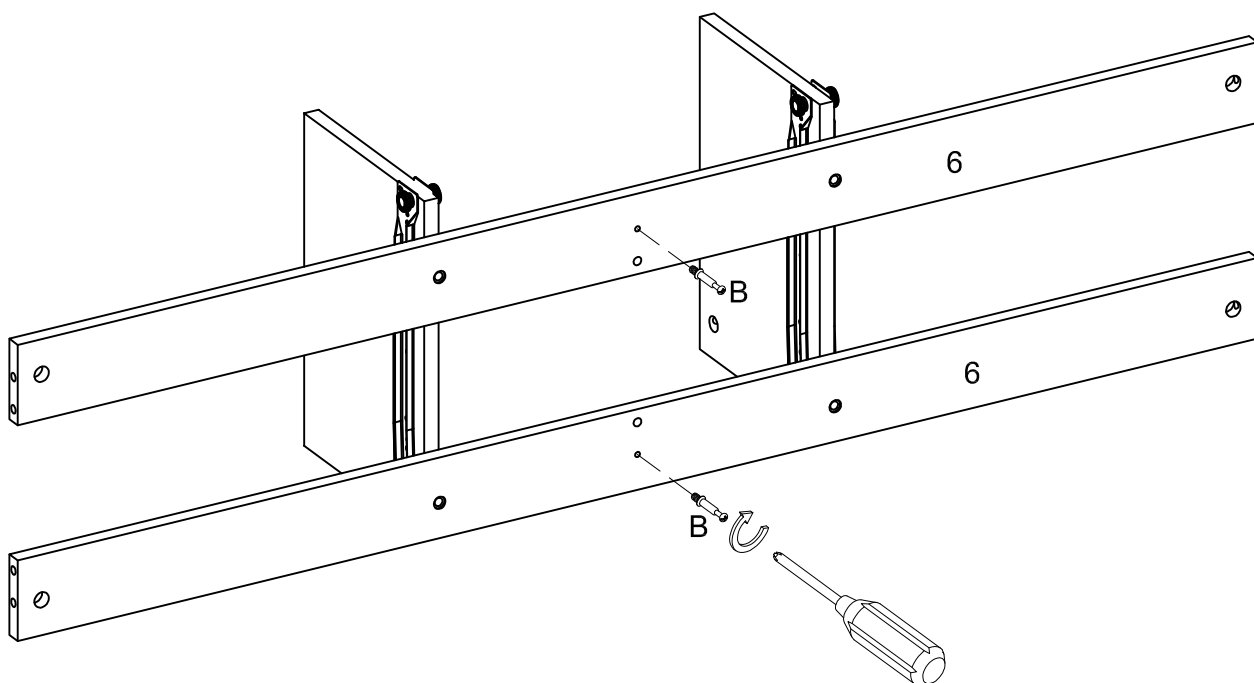


Step 11

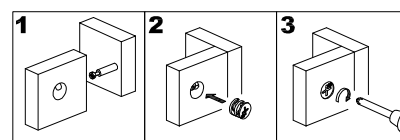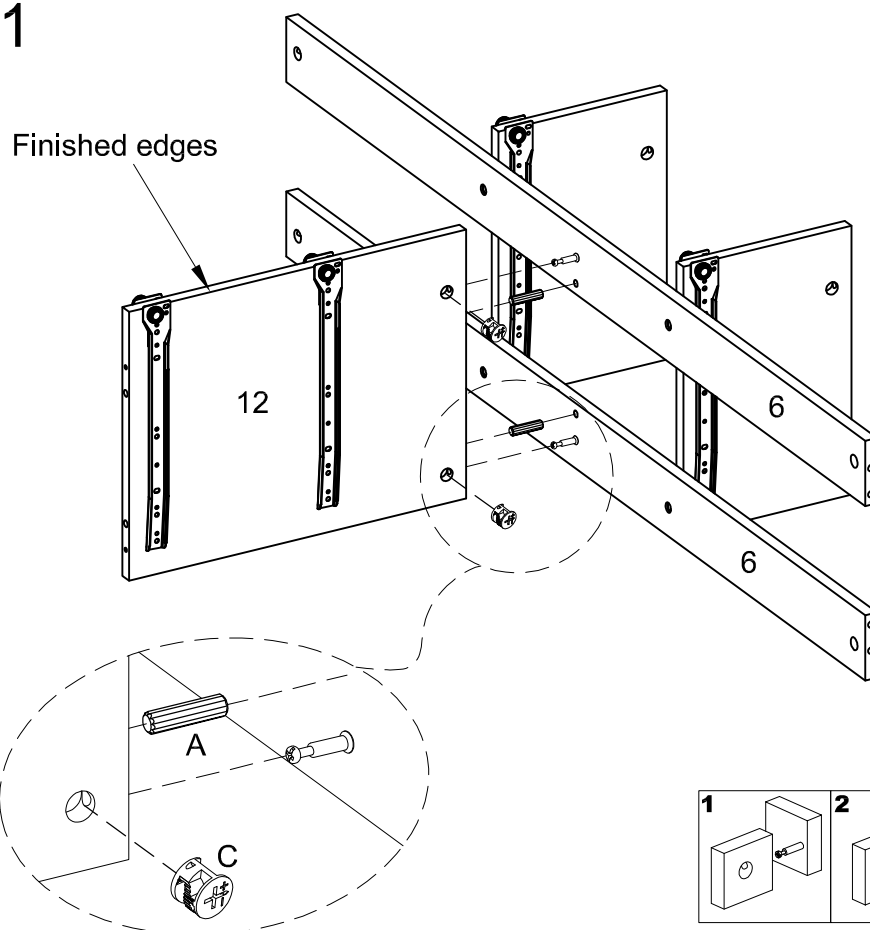


Step 12

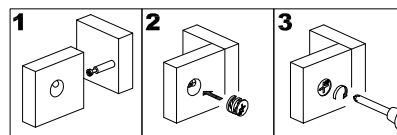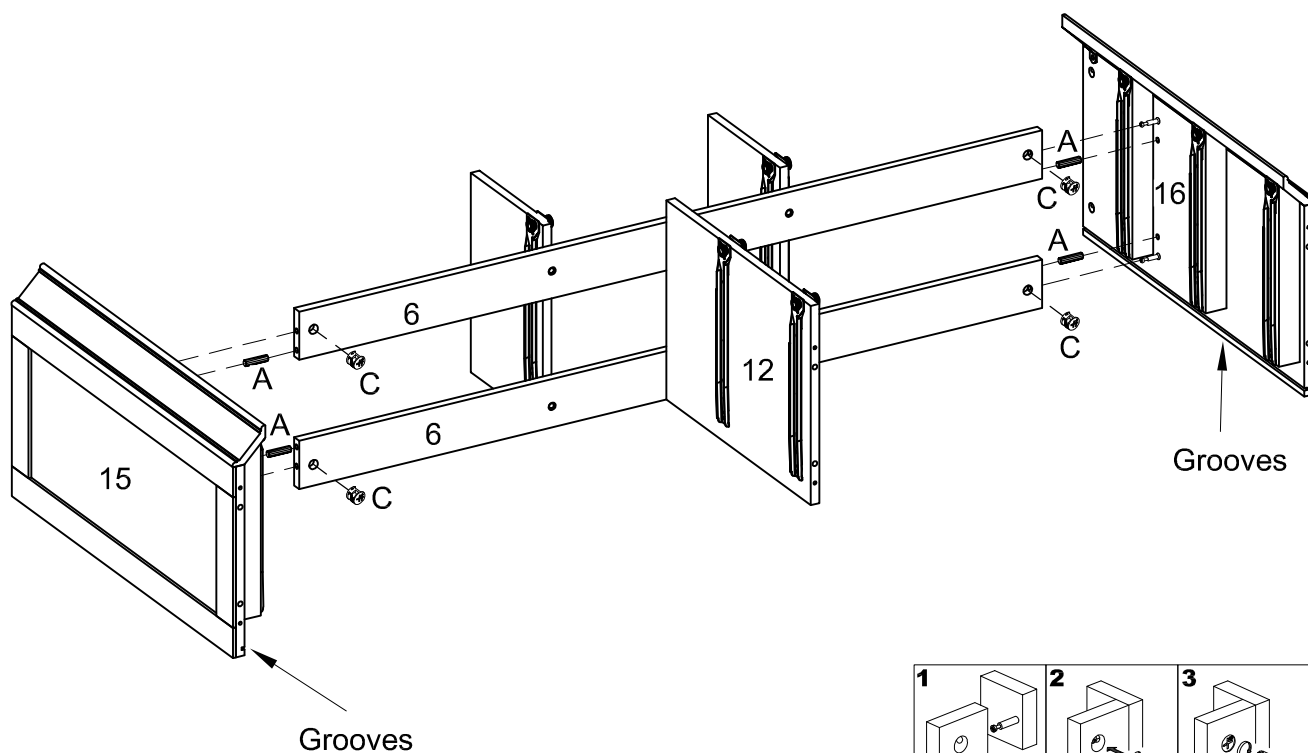


Step 13

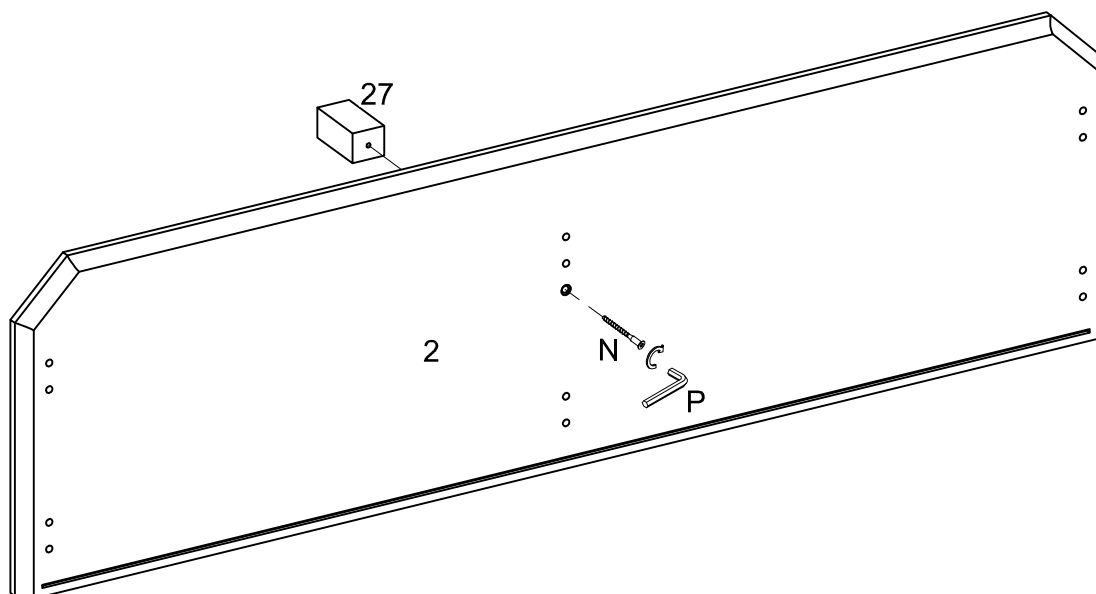


Step 14

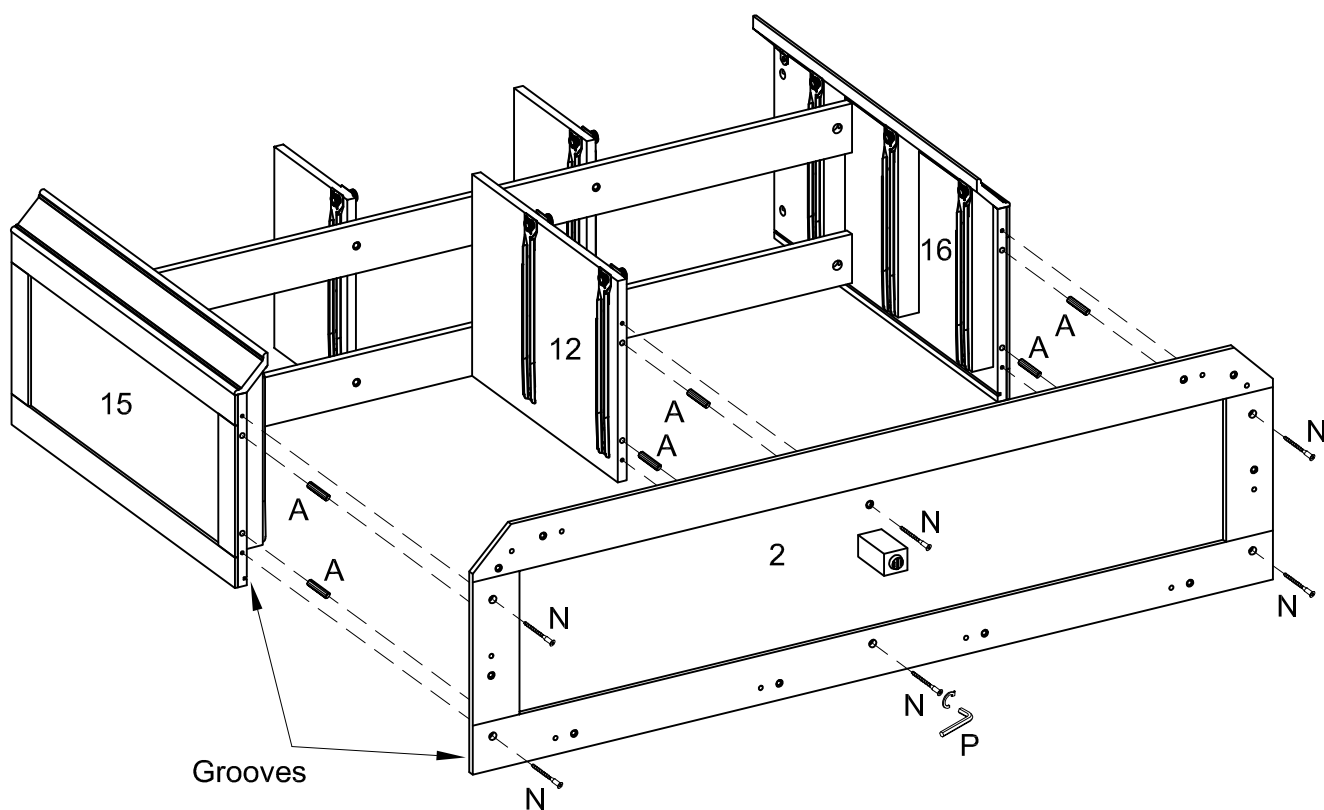


Step 15

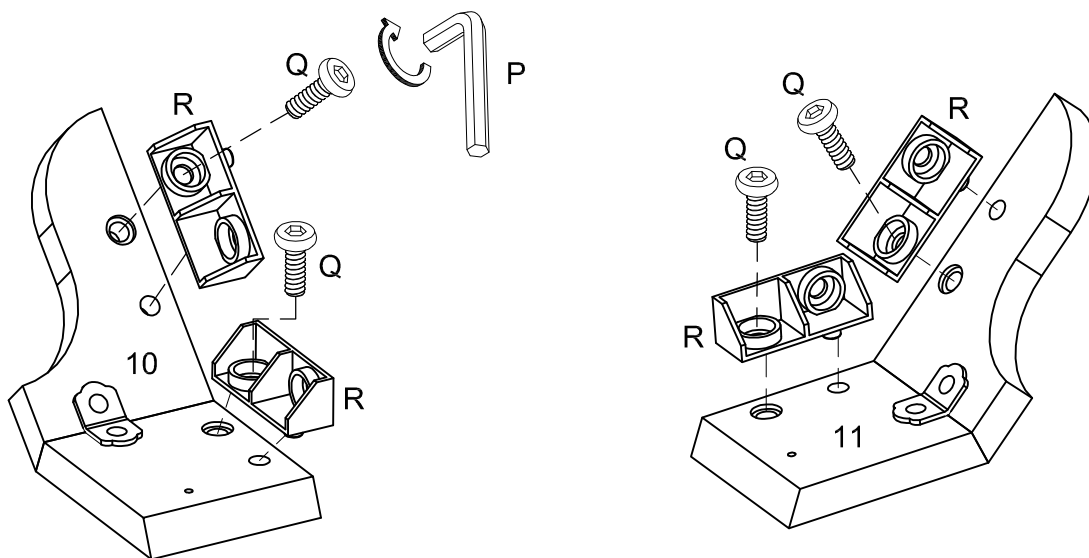


Step 16

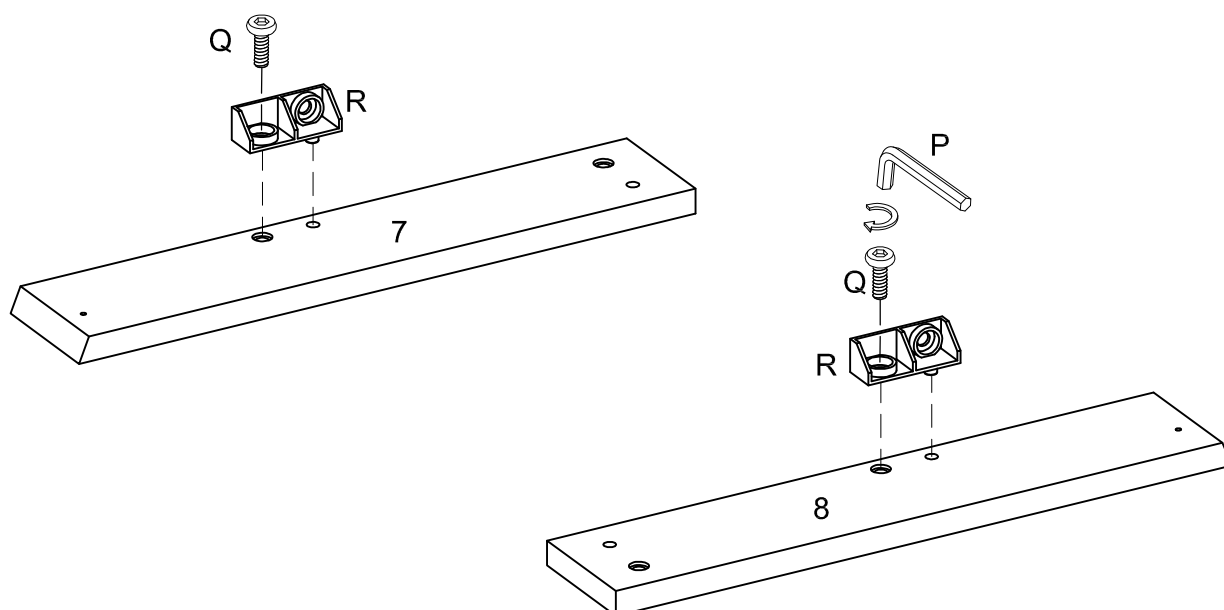


Step 17

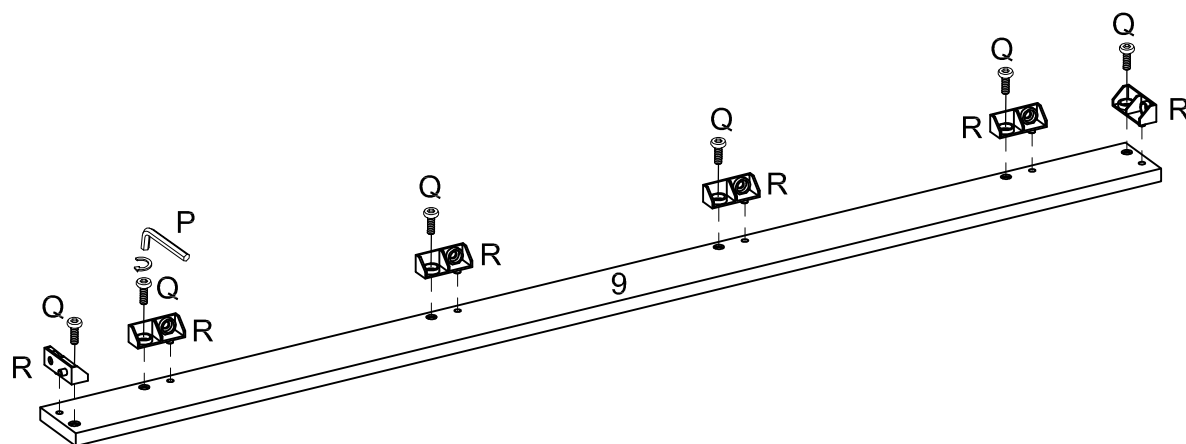


Step 18

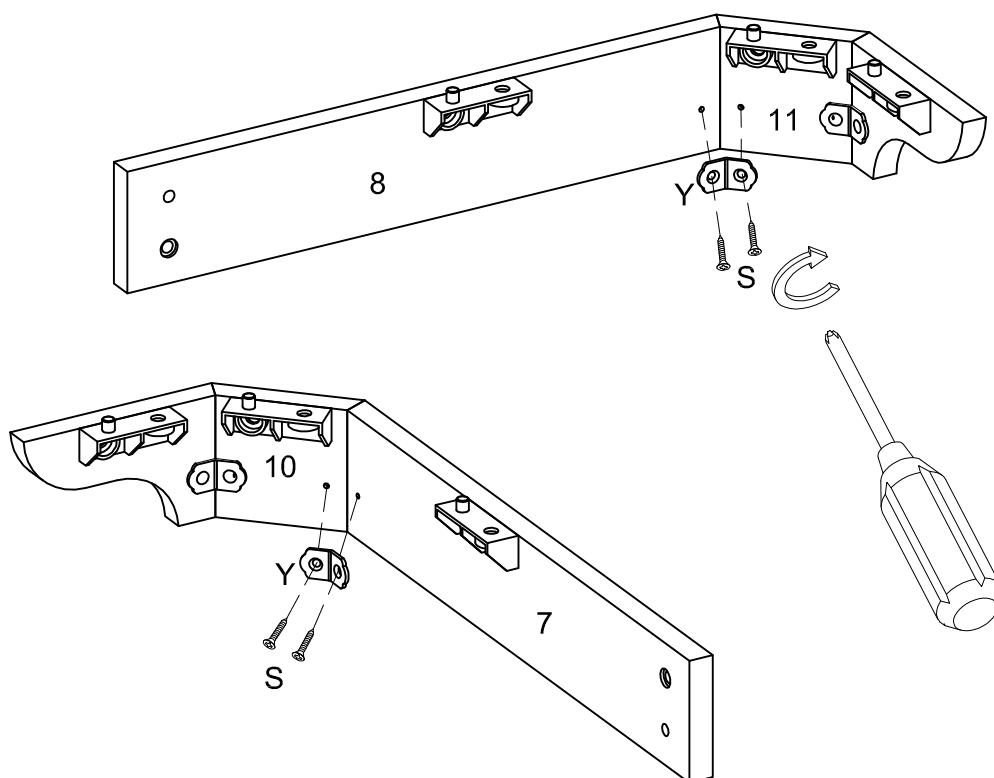


Step 19

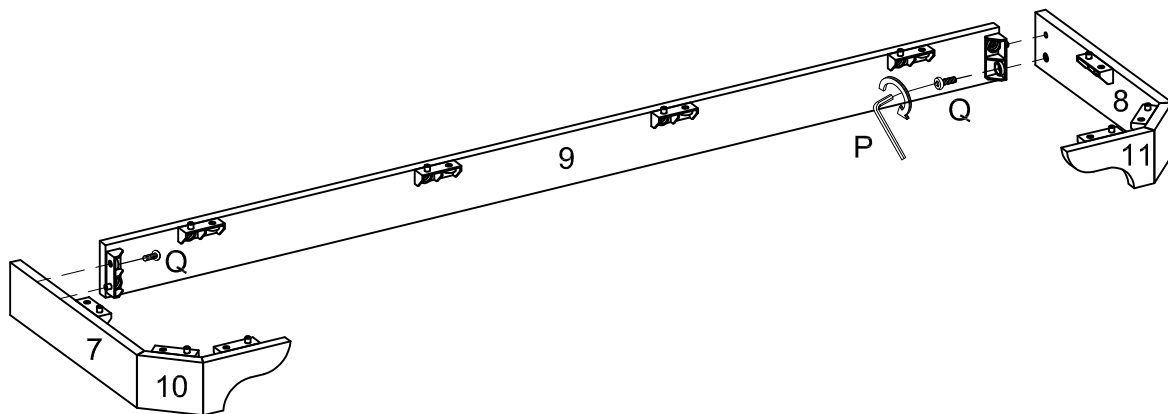


Step 20

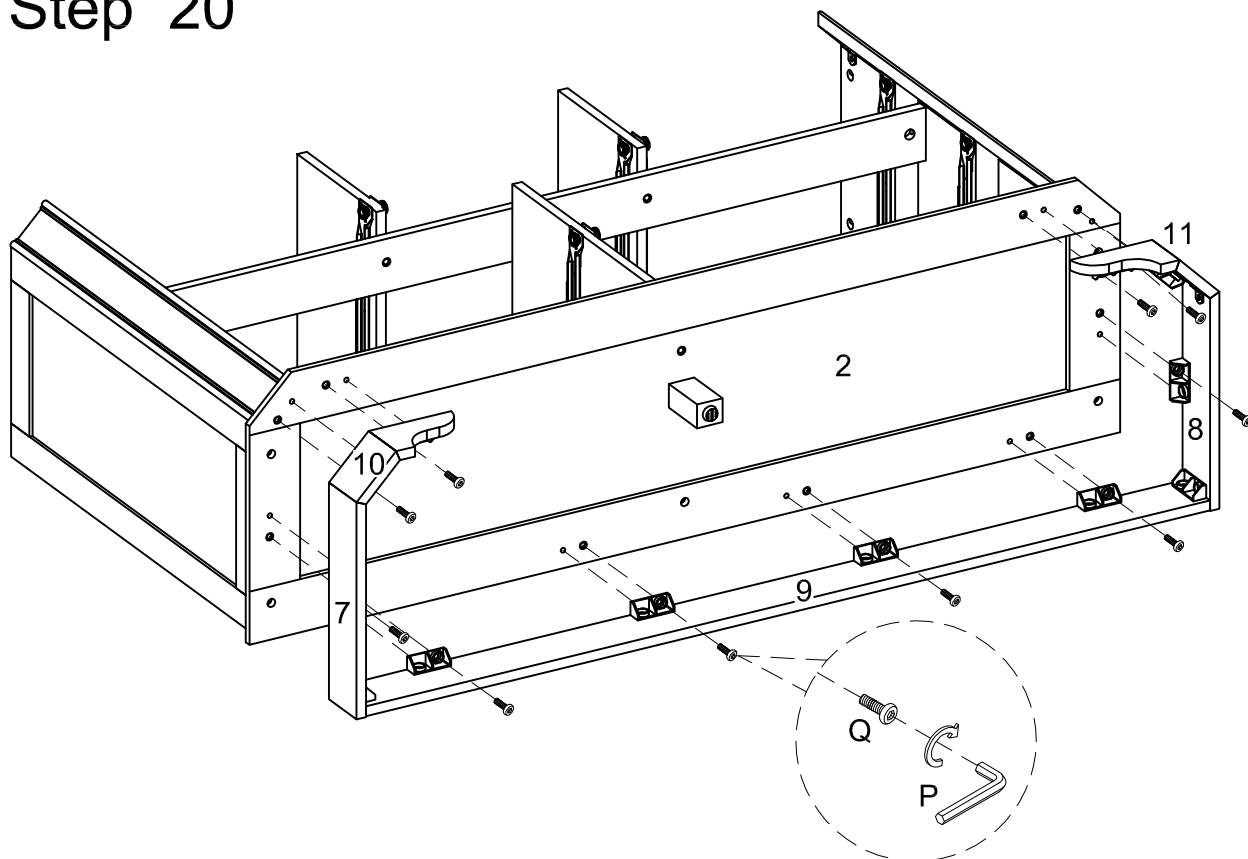


Step 21

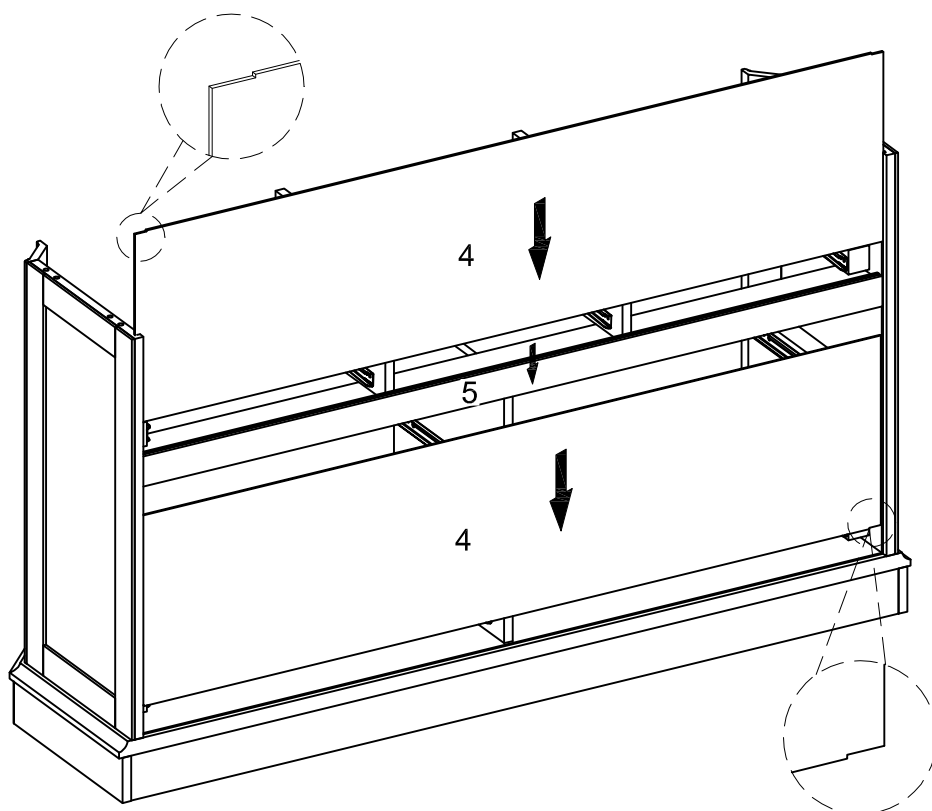


Step 22

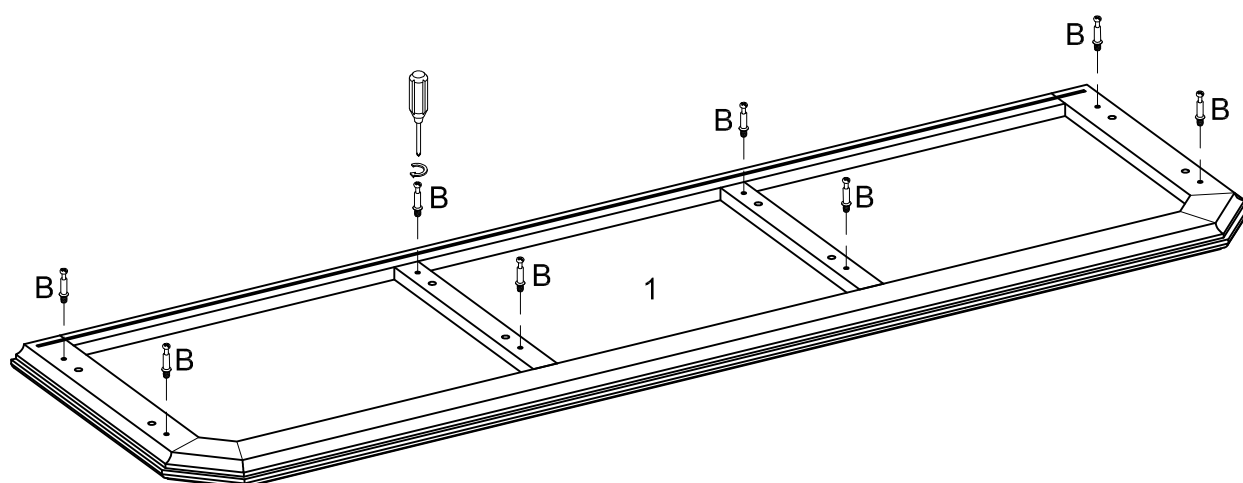


Step 23

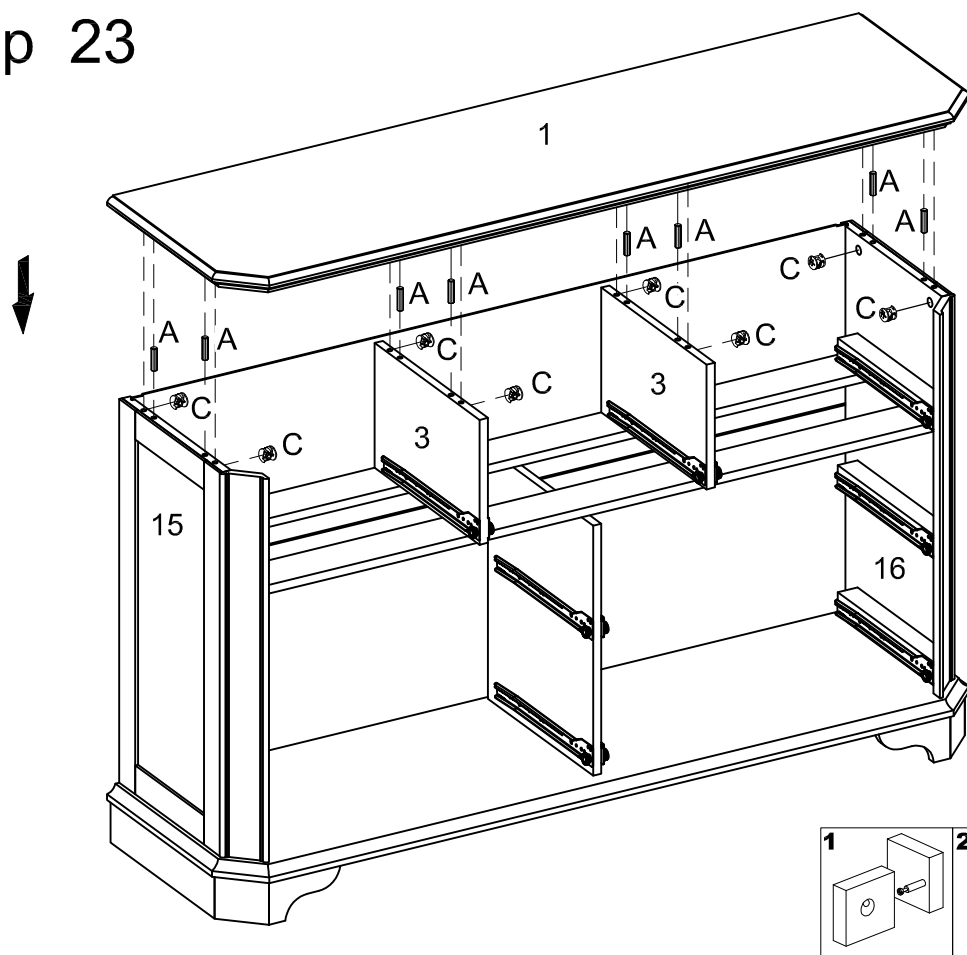



Step 24

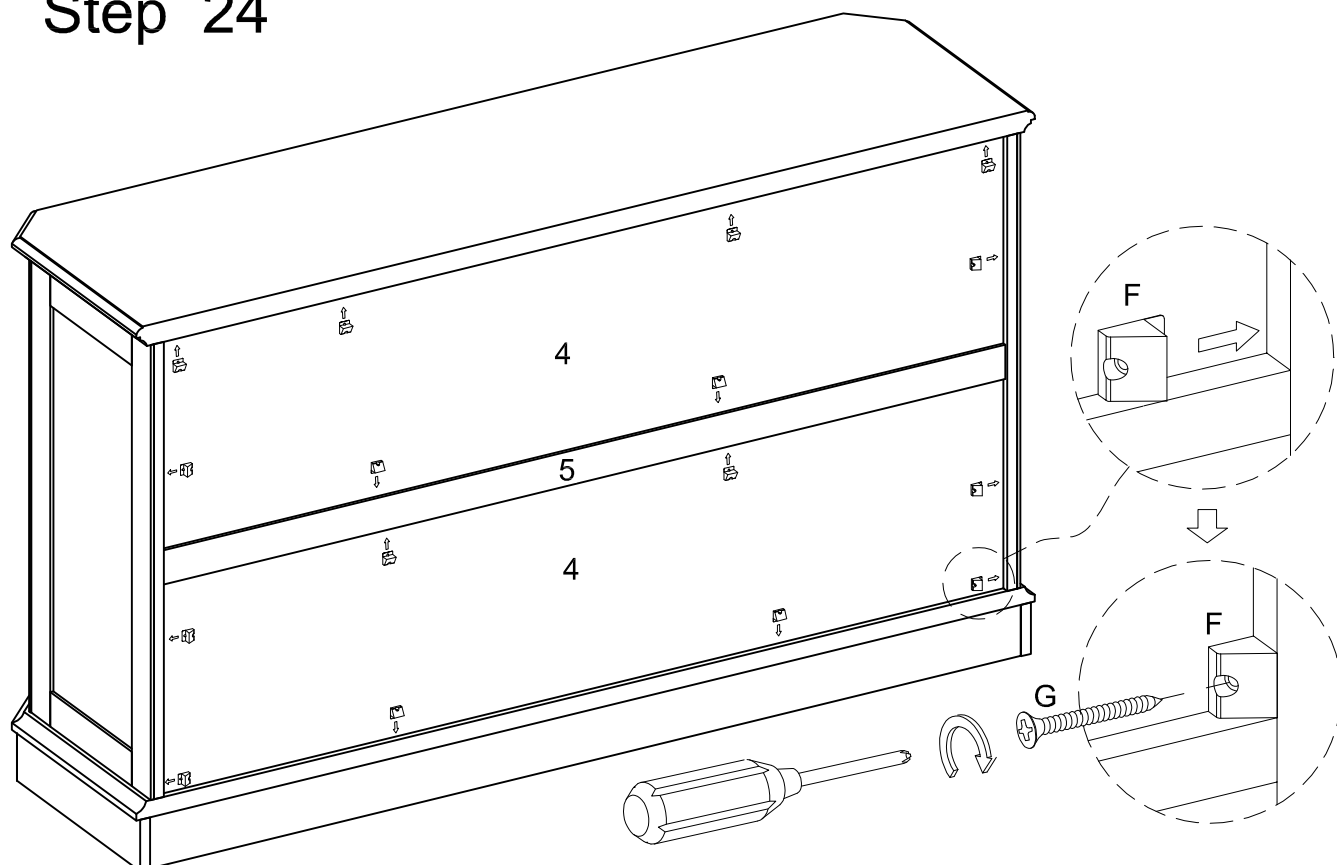


Step 25

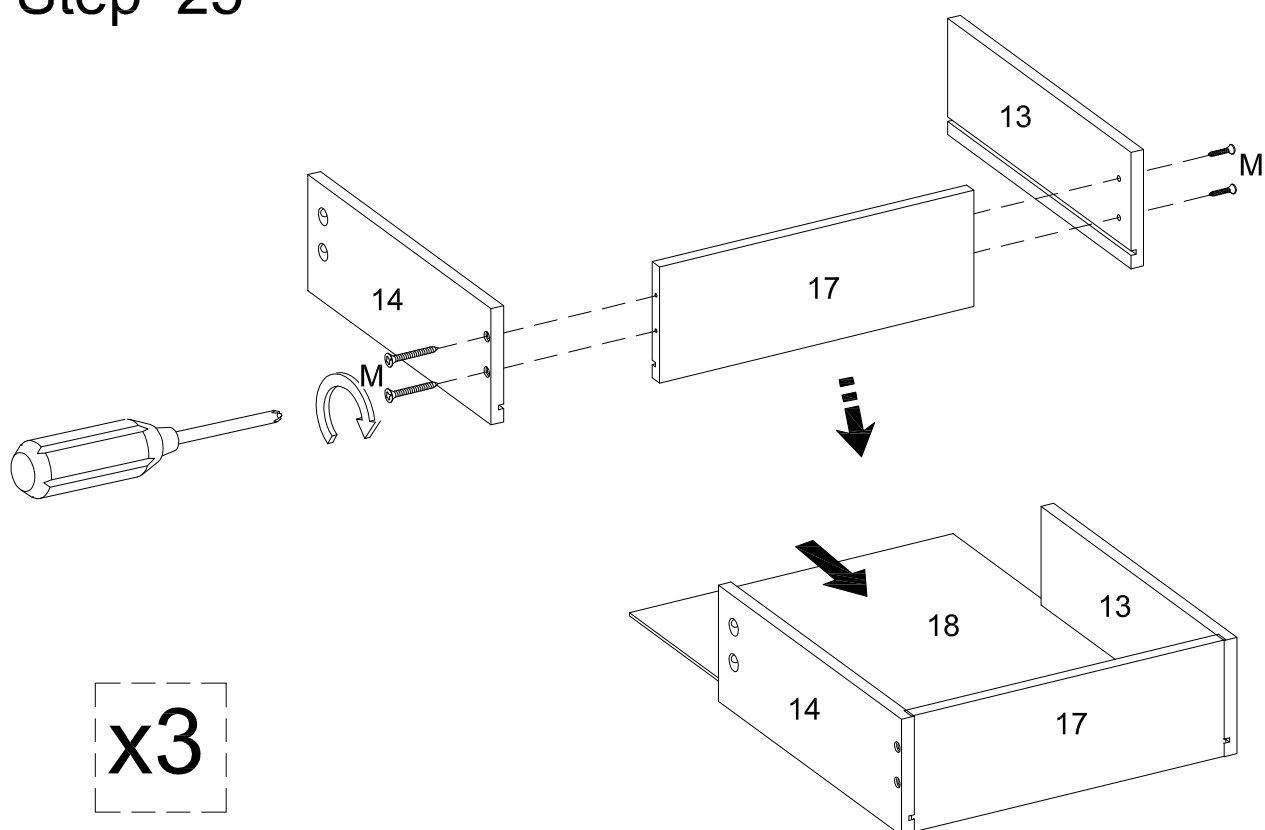


Step 26

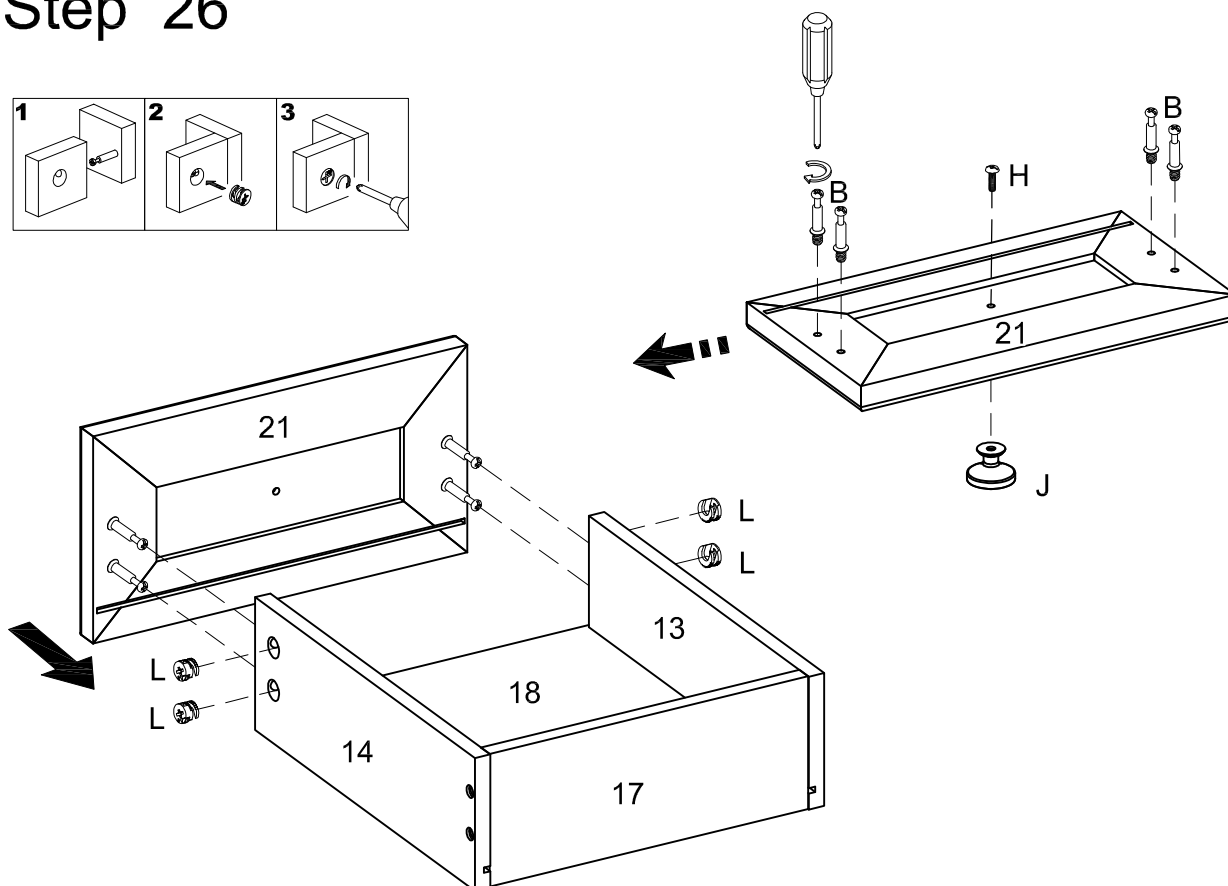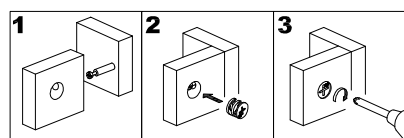


Step 27

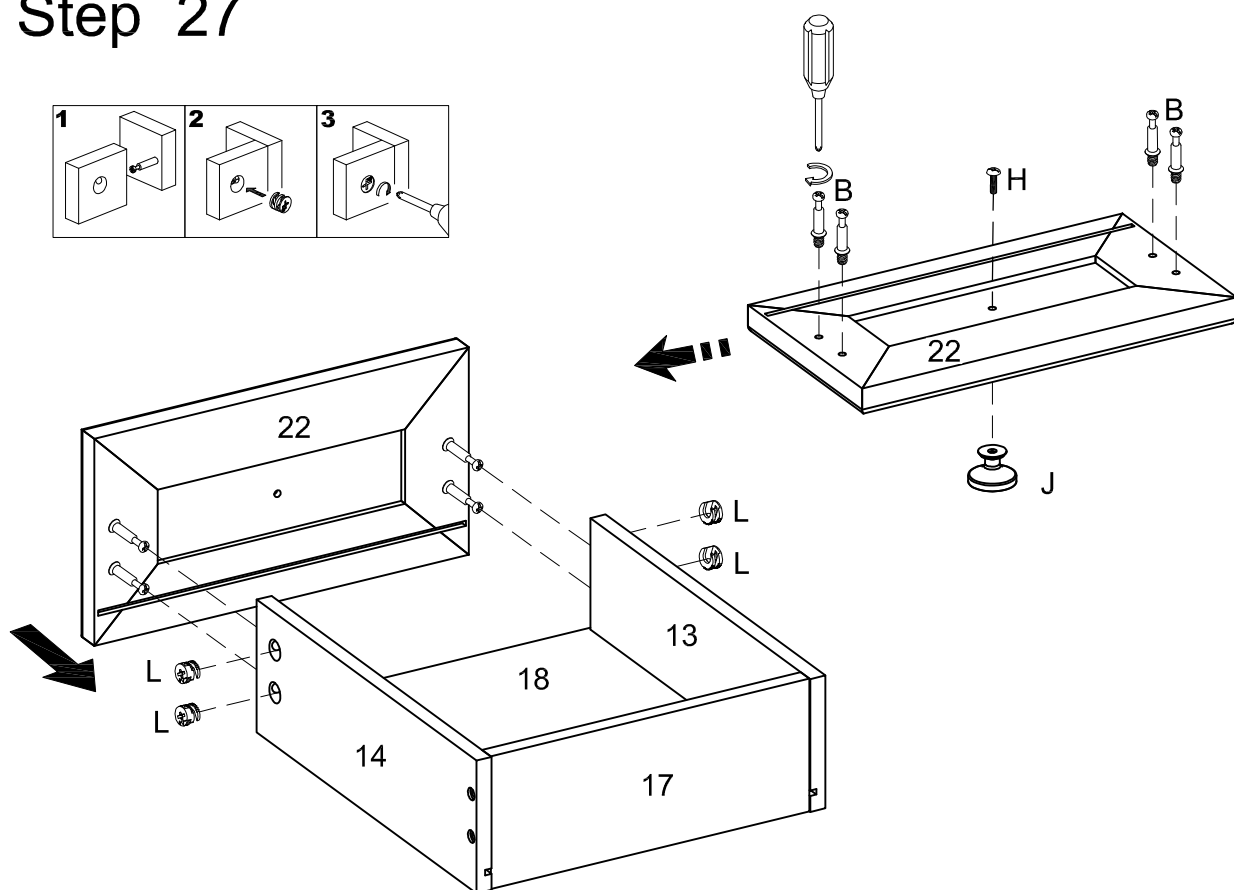


Step 28

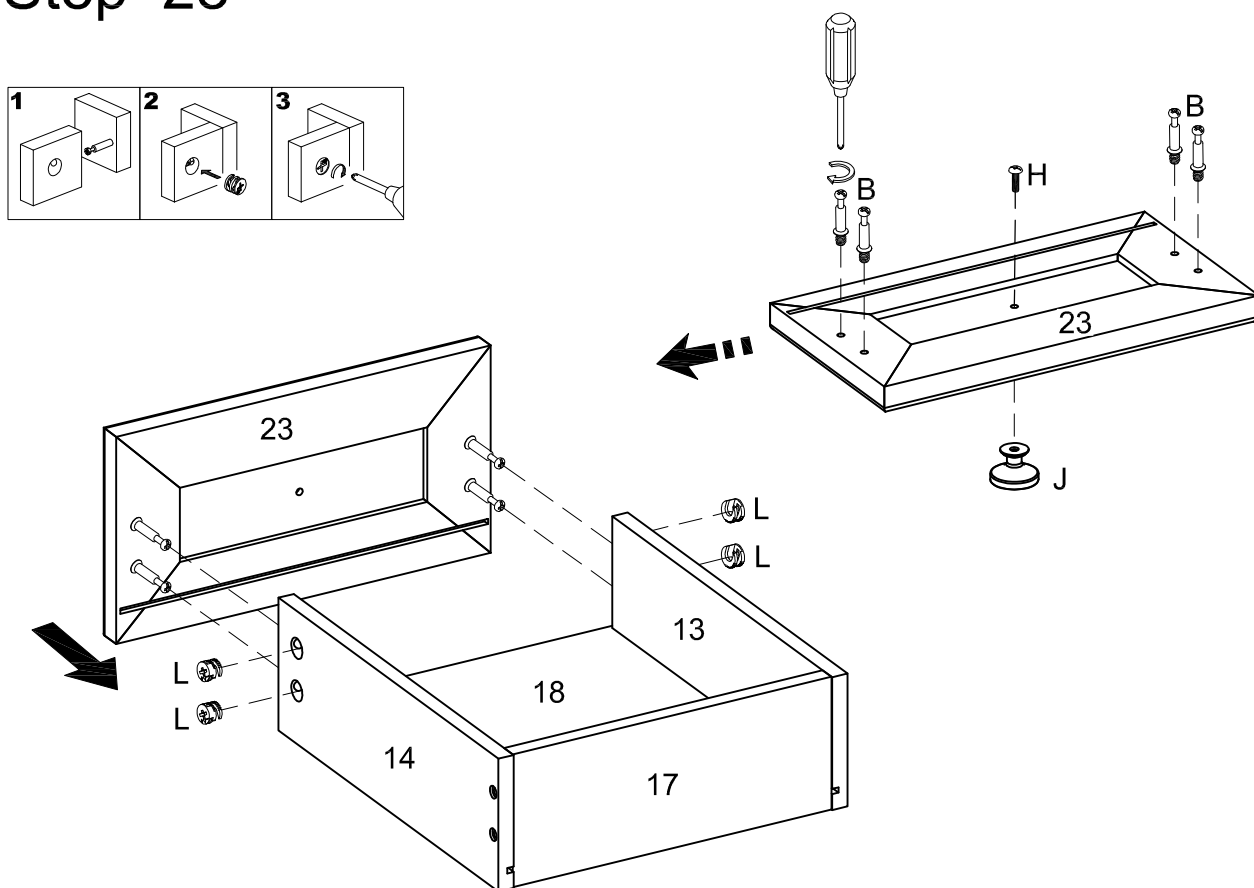


Step 29

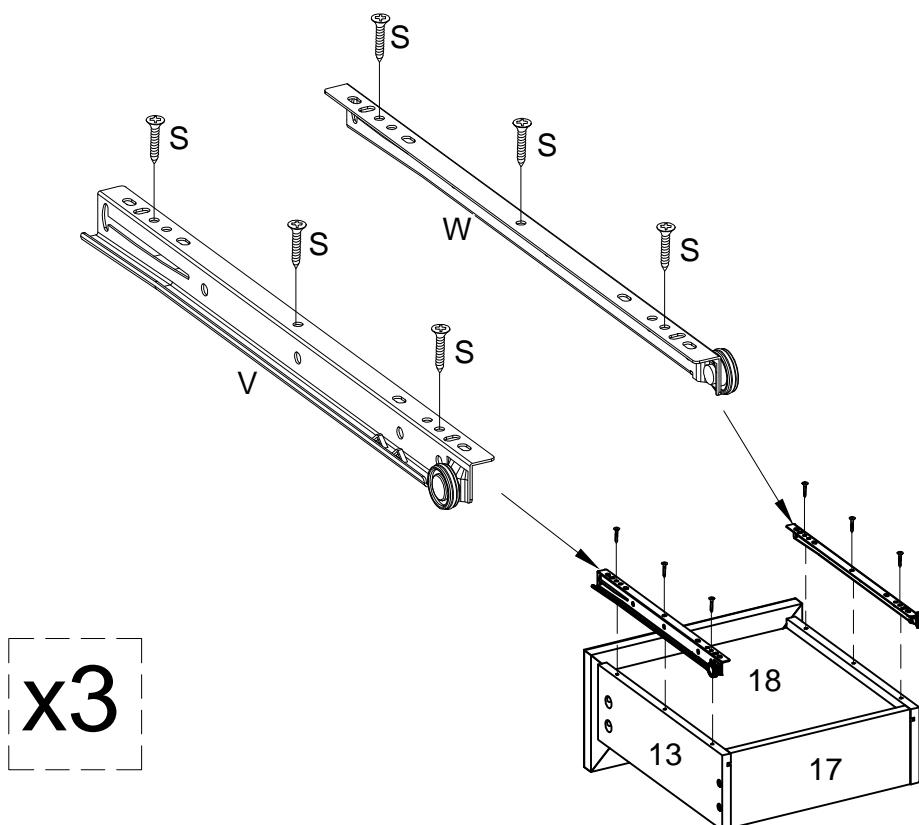



Step 30

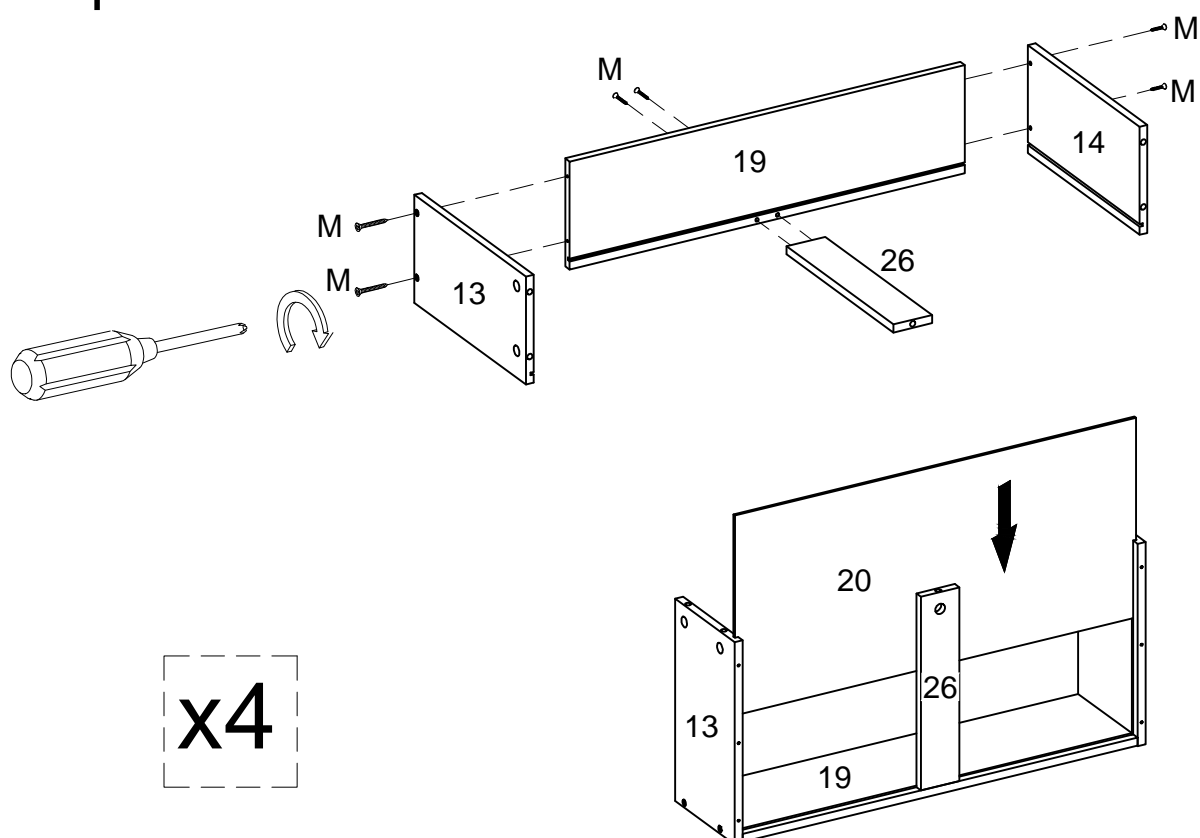



Step 31

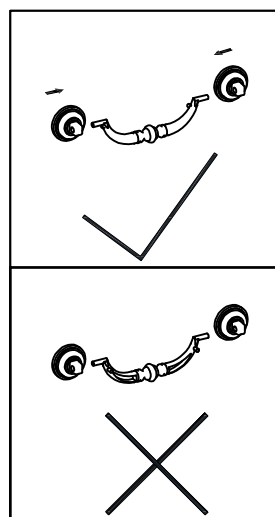

x2

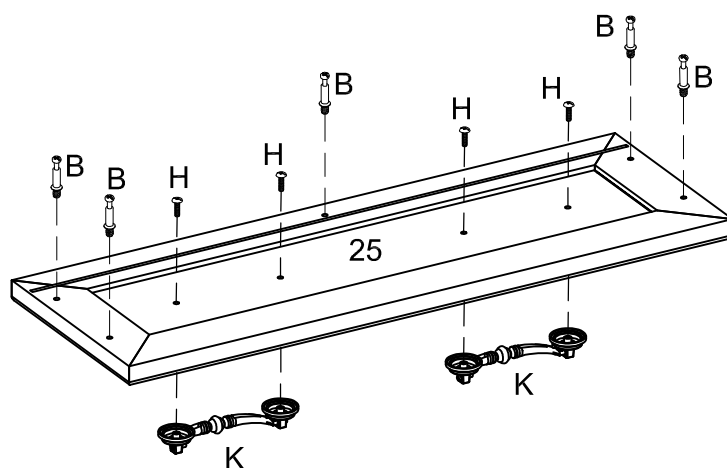
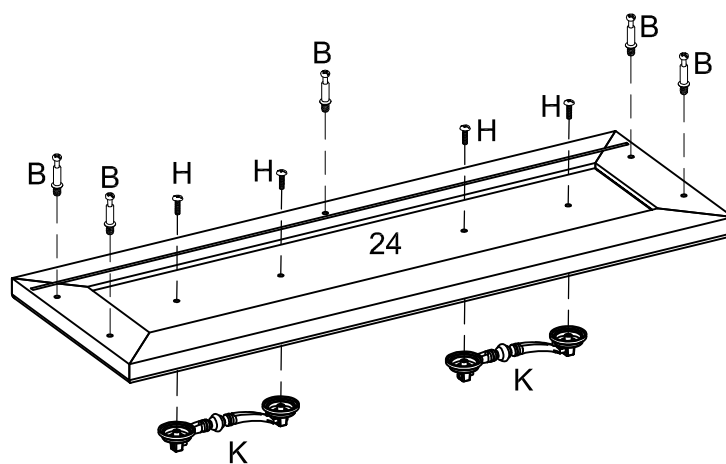


Step 32

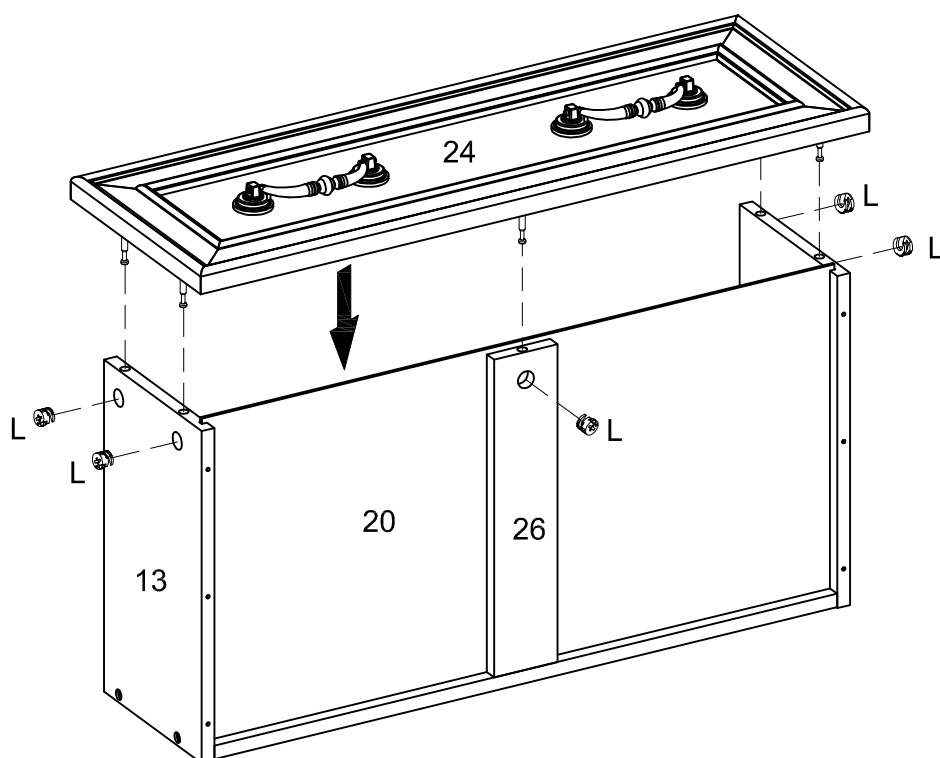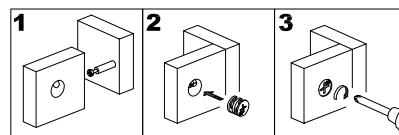


x2

Step 33

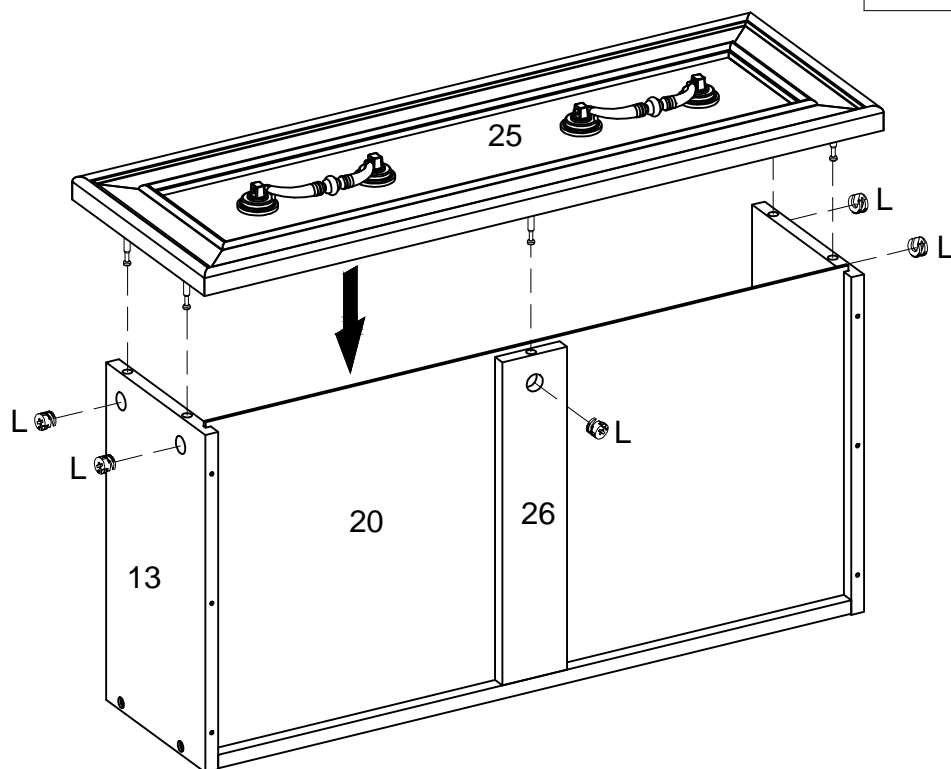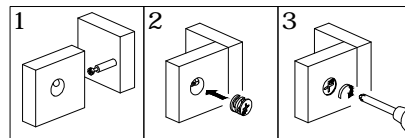




x2

Step 34

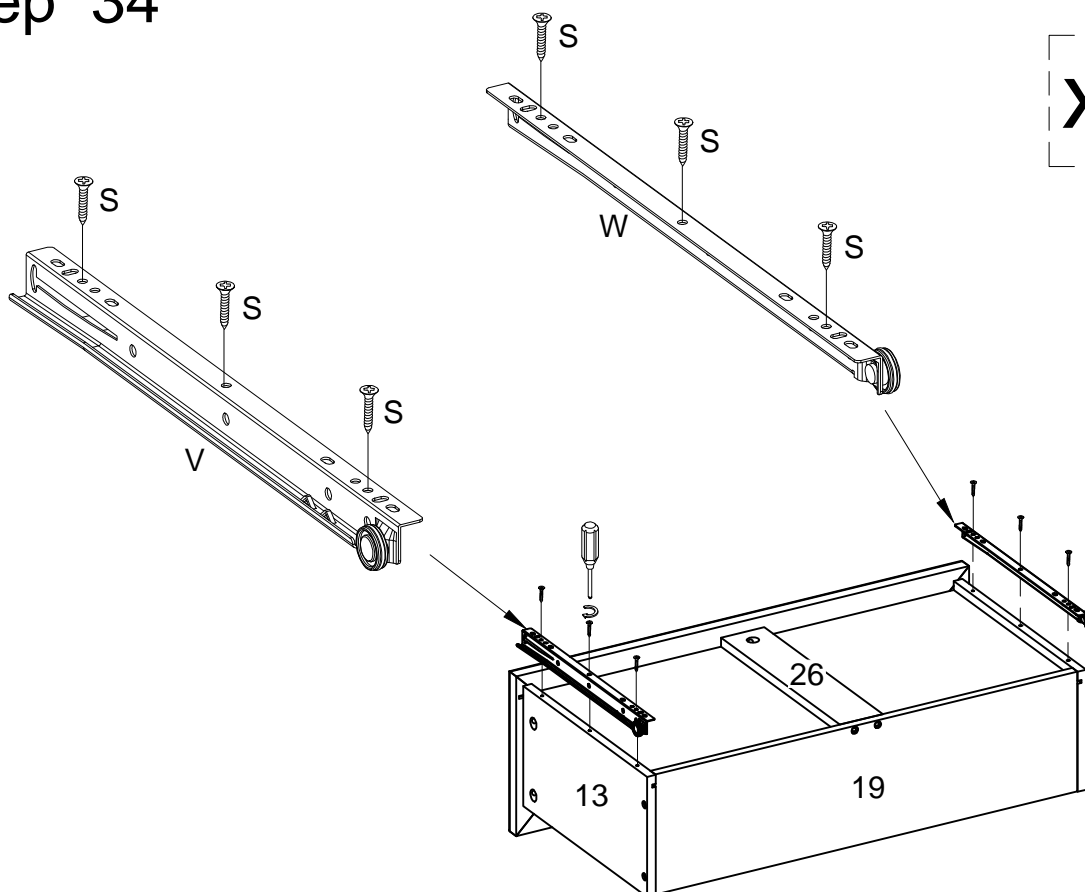


x4


Step 35

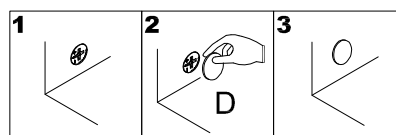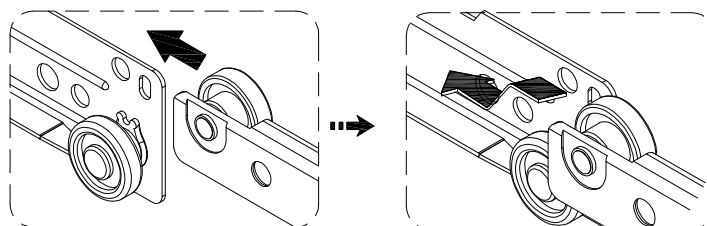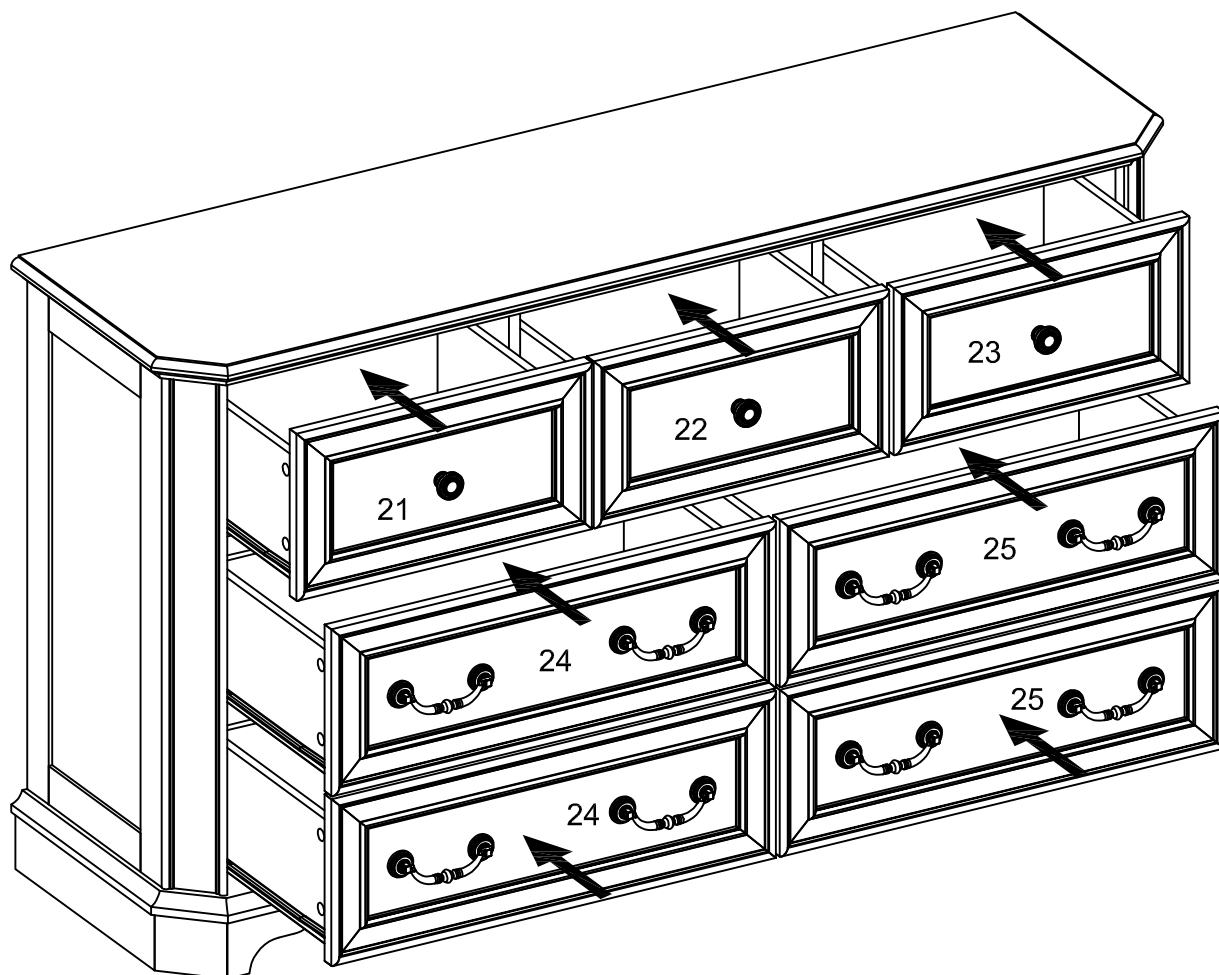



Step 36

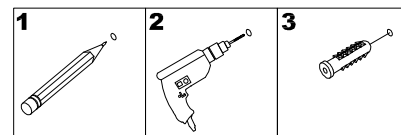

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

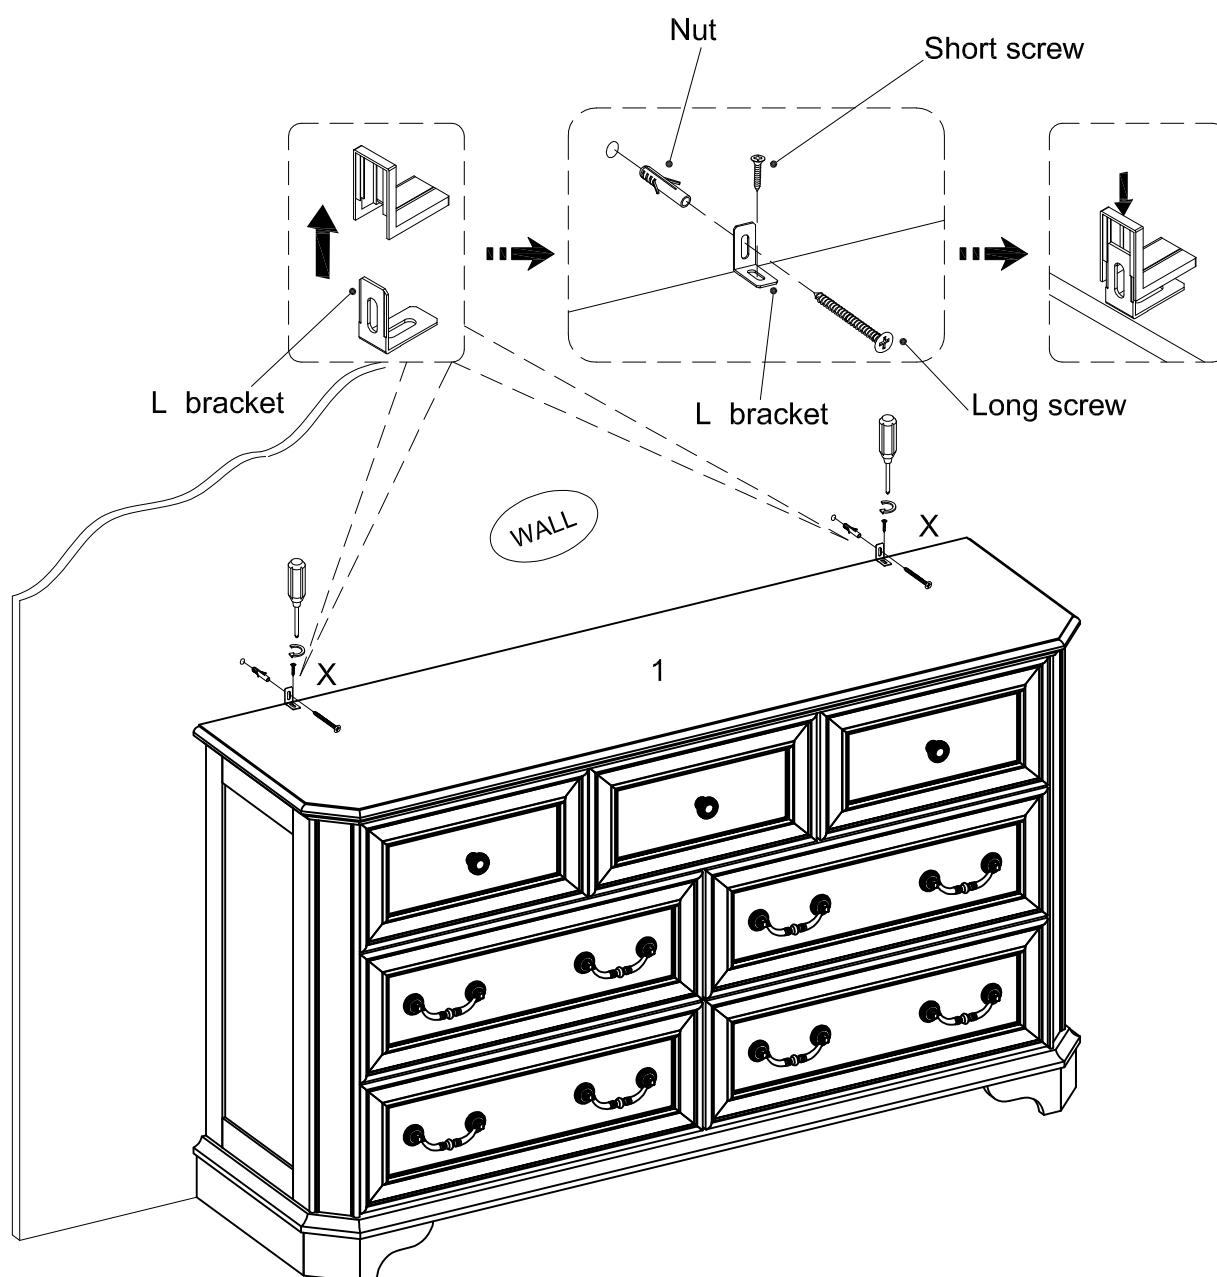

Step 37

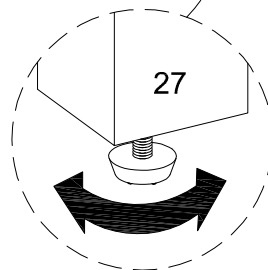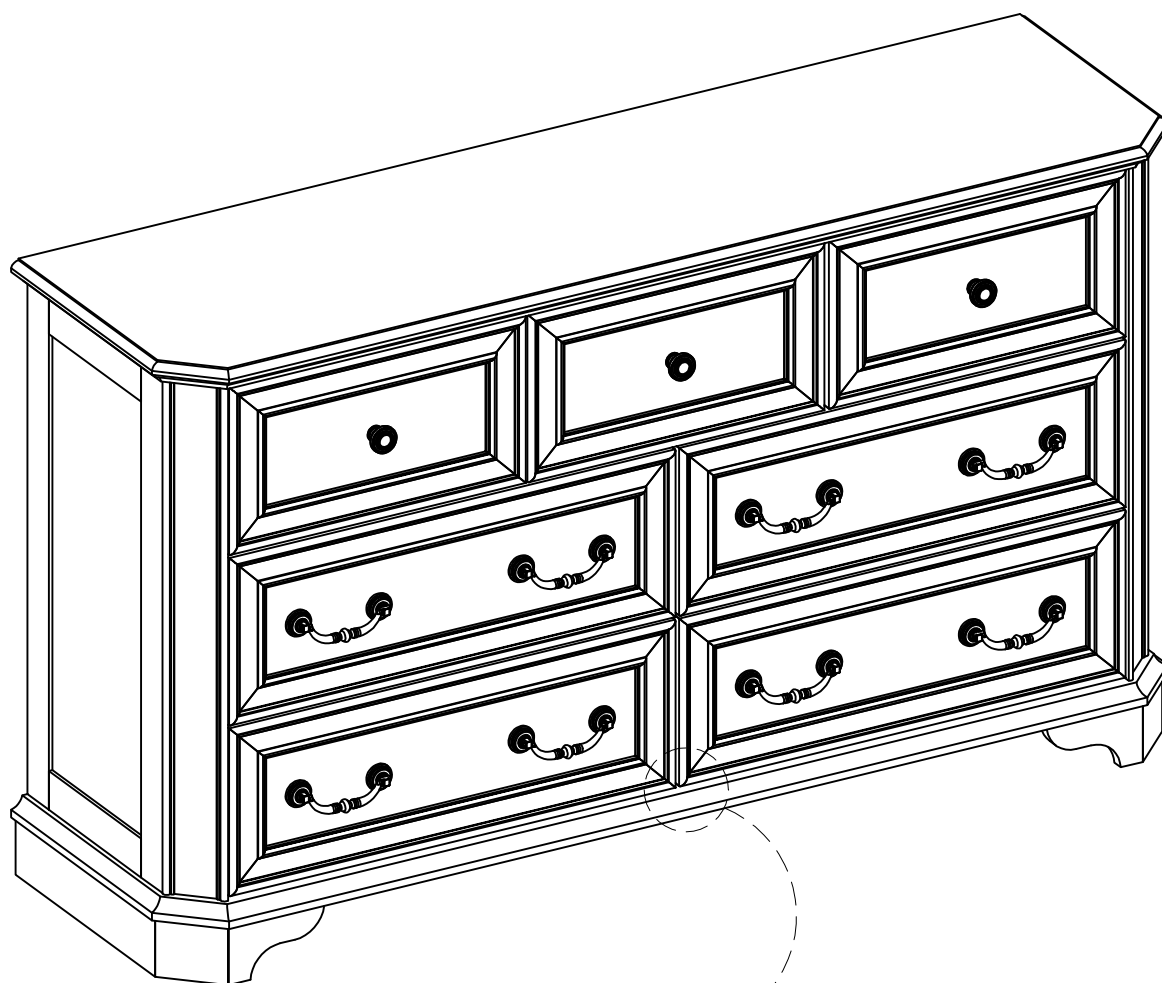

Final Assembly