


# AI-BDCSPV

## Assembly Instructions

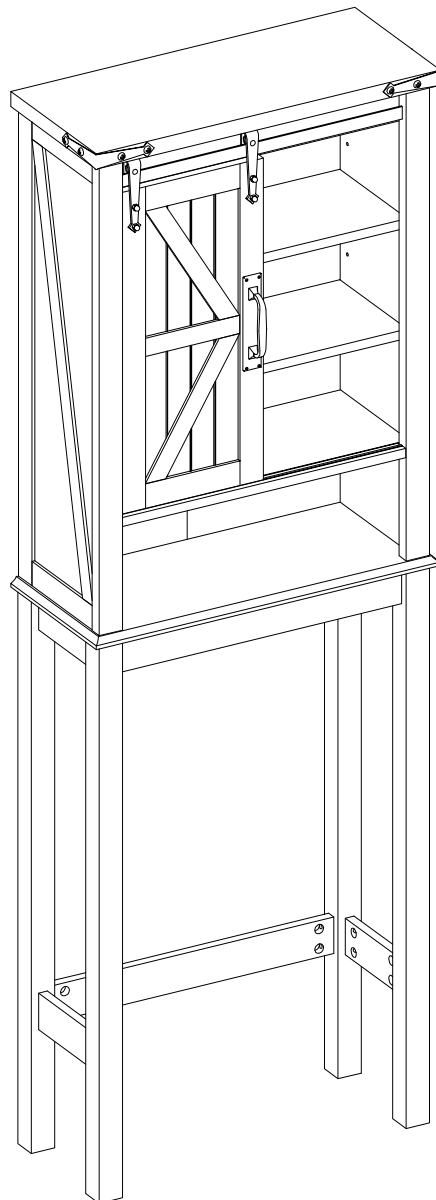

Customer Service E-mail Address : [xiuxiumaoyius@163.com](mailto:xiuxiumaoyius@163.com)

# General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are : wood dowels , screws and bolts.
- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.




In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.




- VI. A Phillips head screwdriver is required for the assembly of this product .

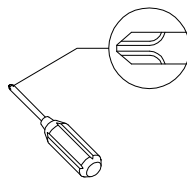





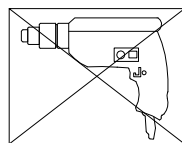







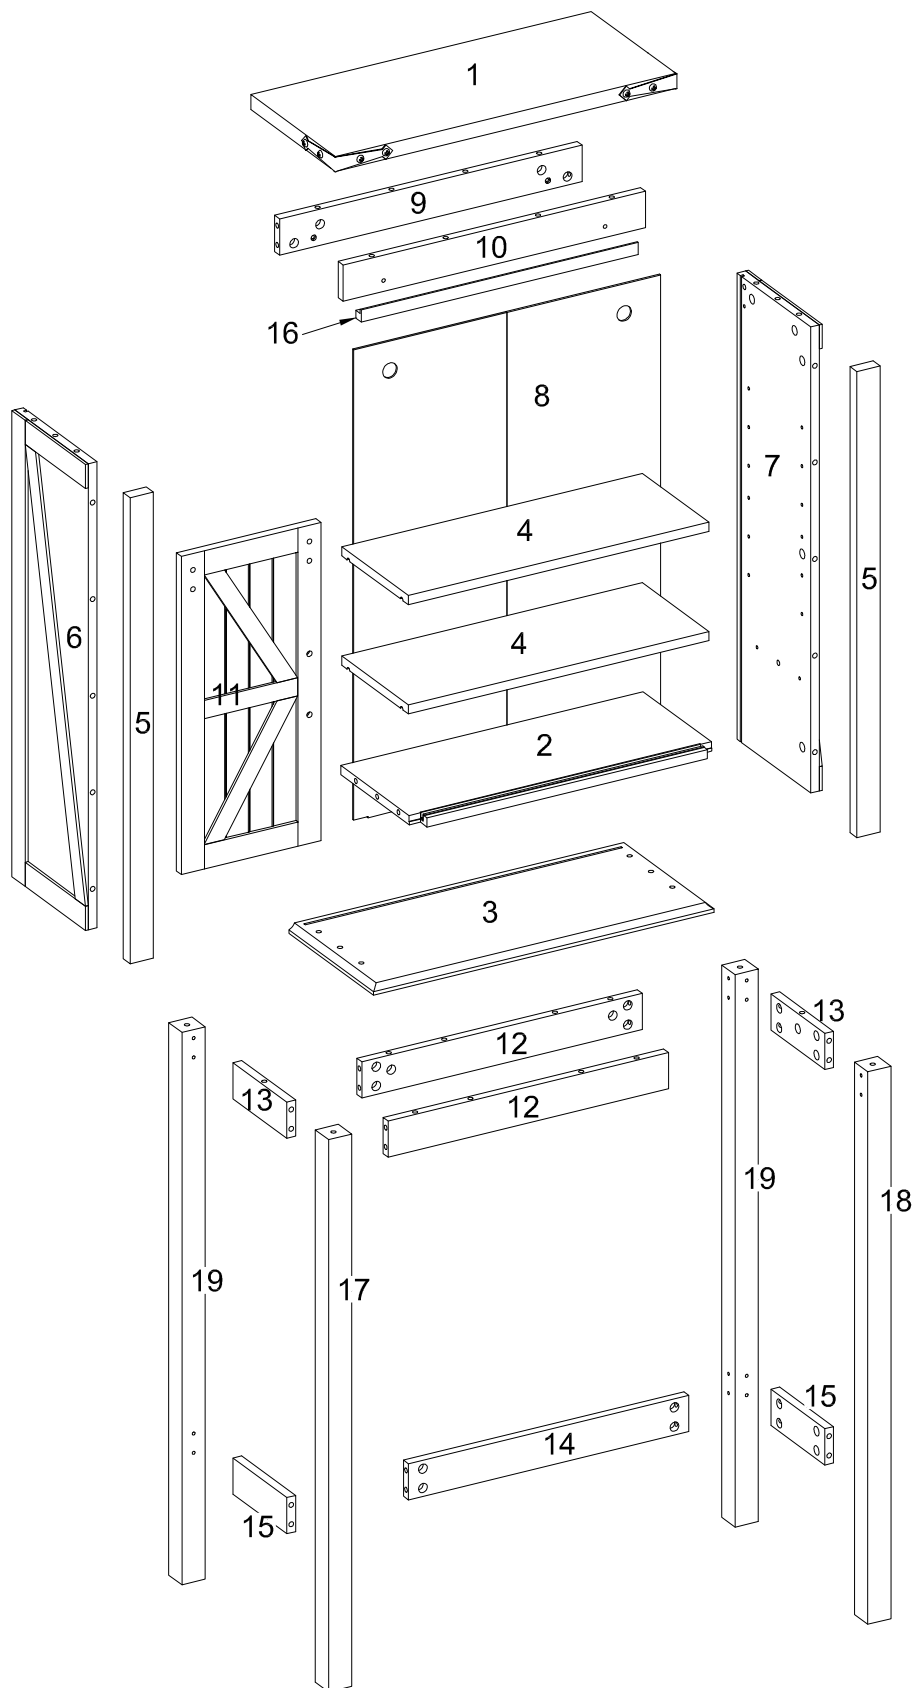








- VII. Power tools should not be used to assemble this product .




# Parts List




# Hardware List

A		Ø8x30mm	Wooden dowel	24 pcs
B		Ø6x35mm	Cam bolt	54 pcs
C		Ø15x11mm	Cam lock	54 pcs
D		Ø30mm	Sticker	54 pcs
E		Ø8x5x16mm	Shelf support pin	8 pcs
F			Glue tube	1 pcs
G			Plastic wedge	6 pcs
H		Ø3x17mm	Flat-head screw	6 pcs
J		Ø4x12mm	Handle bolt	2 pcs
K			Handle	1 pcs
L			Pulley	2 pcs
M			Nut	4 pcs
N			Wrench	1 pcs
P		Ø6x25mm	Bolt	6 pcs
Q		Ø6x50mm	Screw	4 pcs
R		M 4	Hexagon socket key	1 pcs
S			Plate	2 pcs
T		Ø4x12mm	Screw	4 pcs
U		Ø7x30mm	NUT	2 pcs
V		Ø13x1mm	Washer	2 pcs
W		Ø4x60mm	Screw	2 pcs


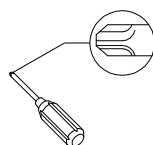


Philips head screwdriver required for assembly  
(not included)



## Step 1

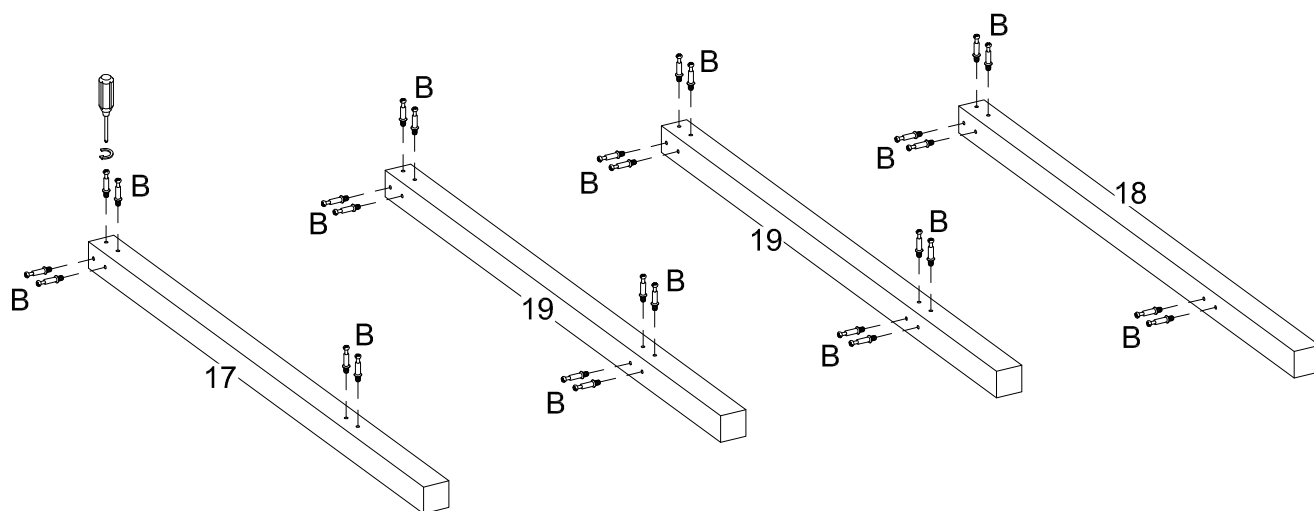



## Step 2

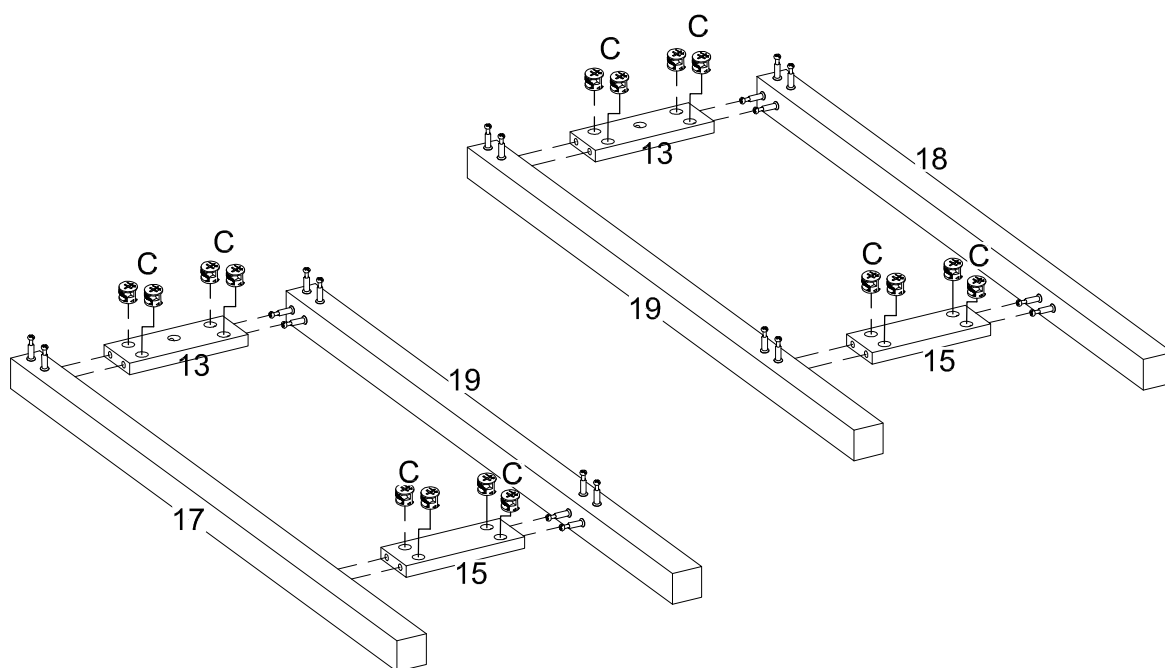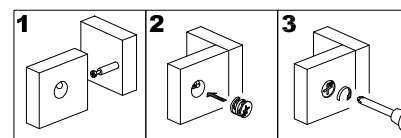


## Step 3

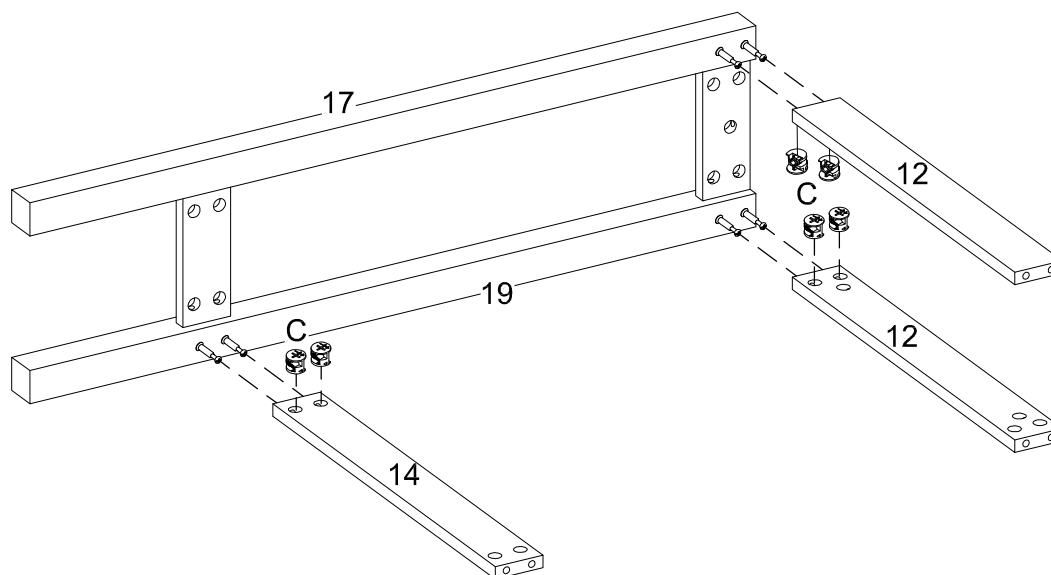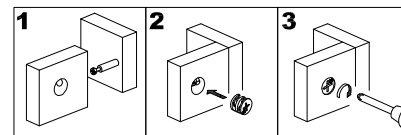


## Step 4

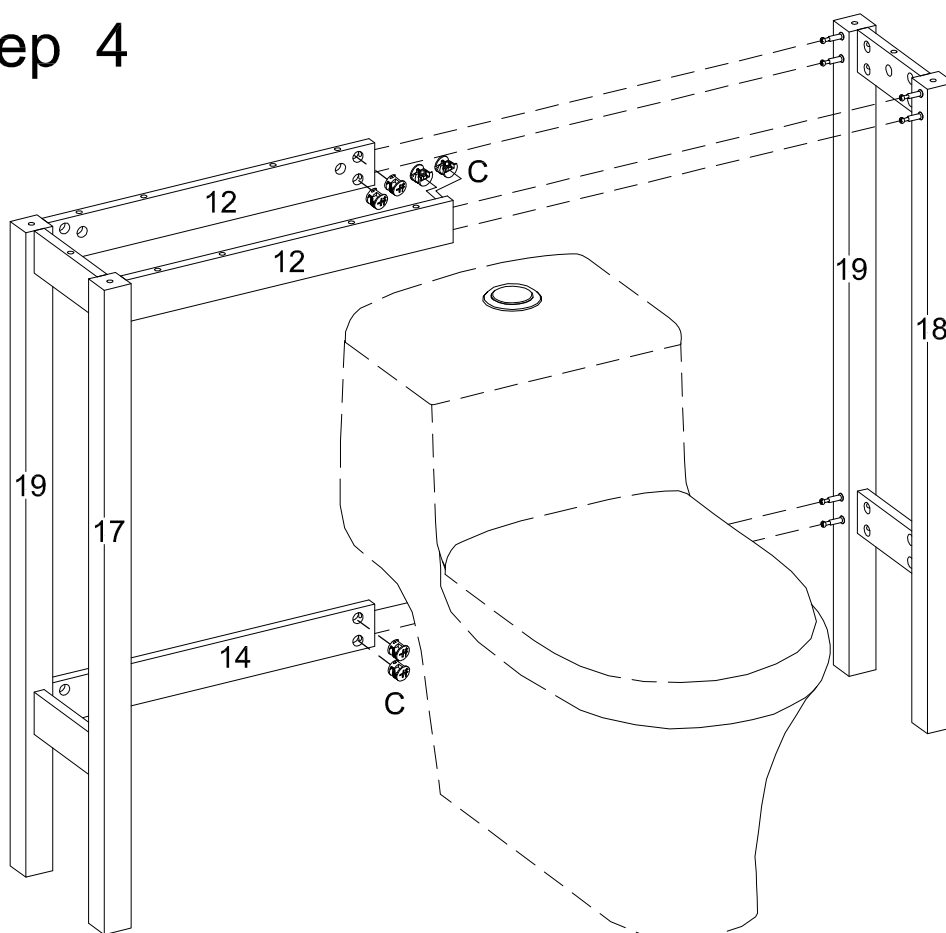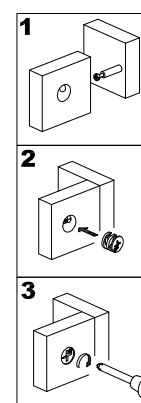



## Step 5

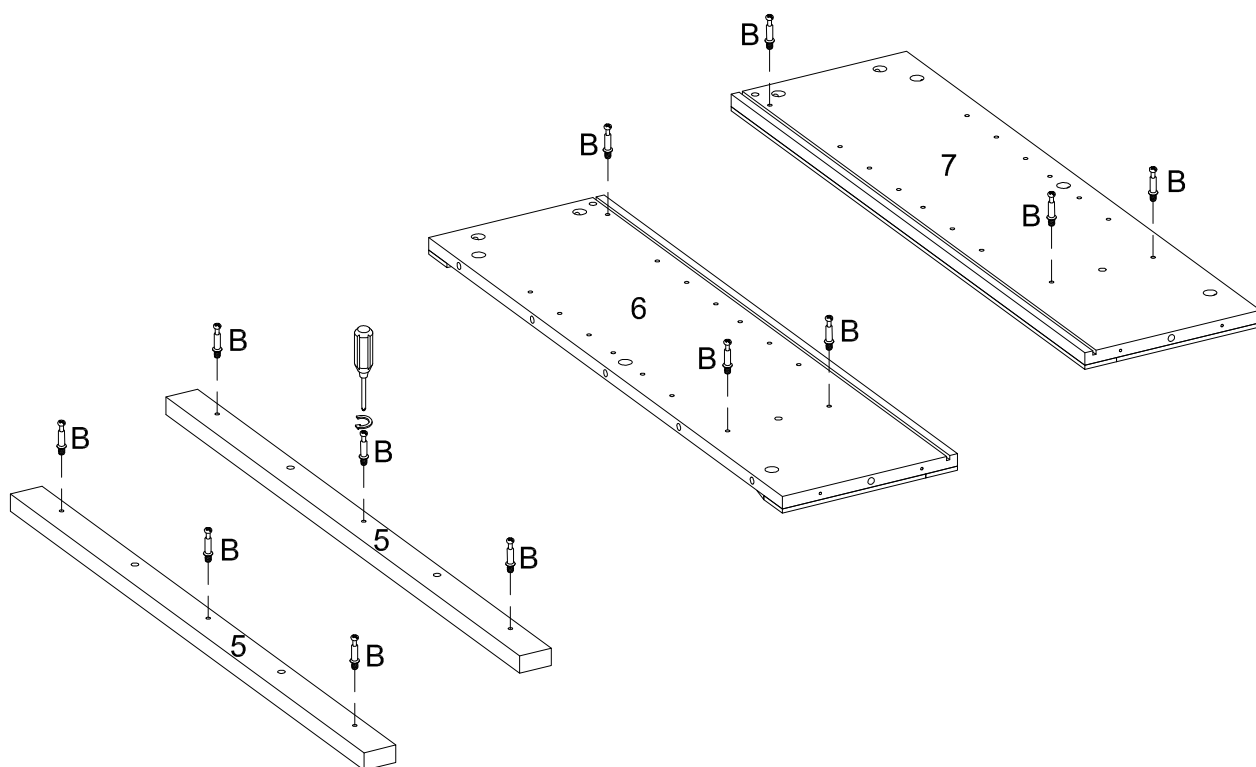


## Step 6

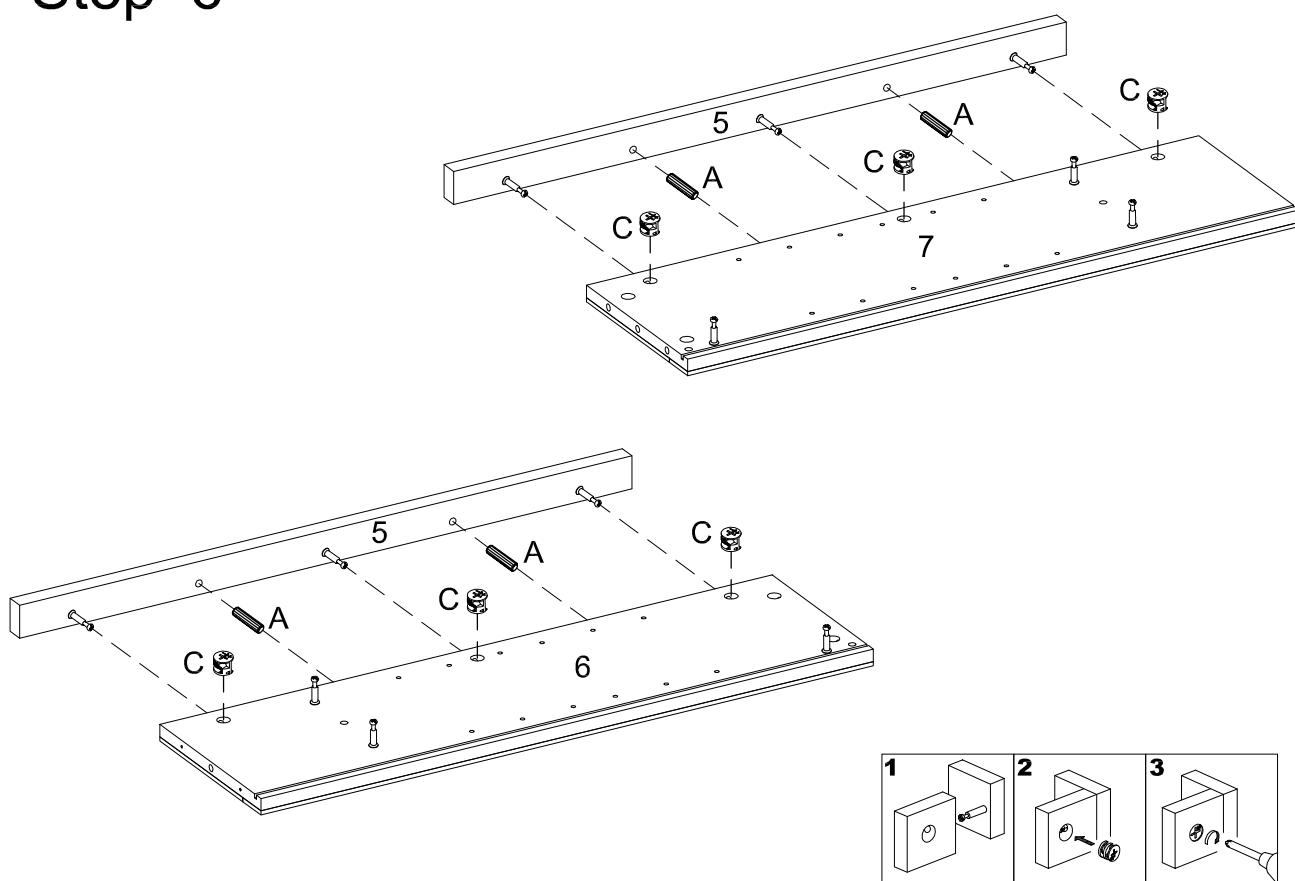

## Step 7

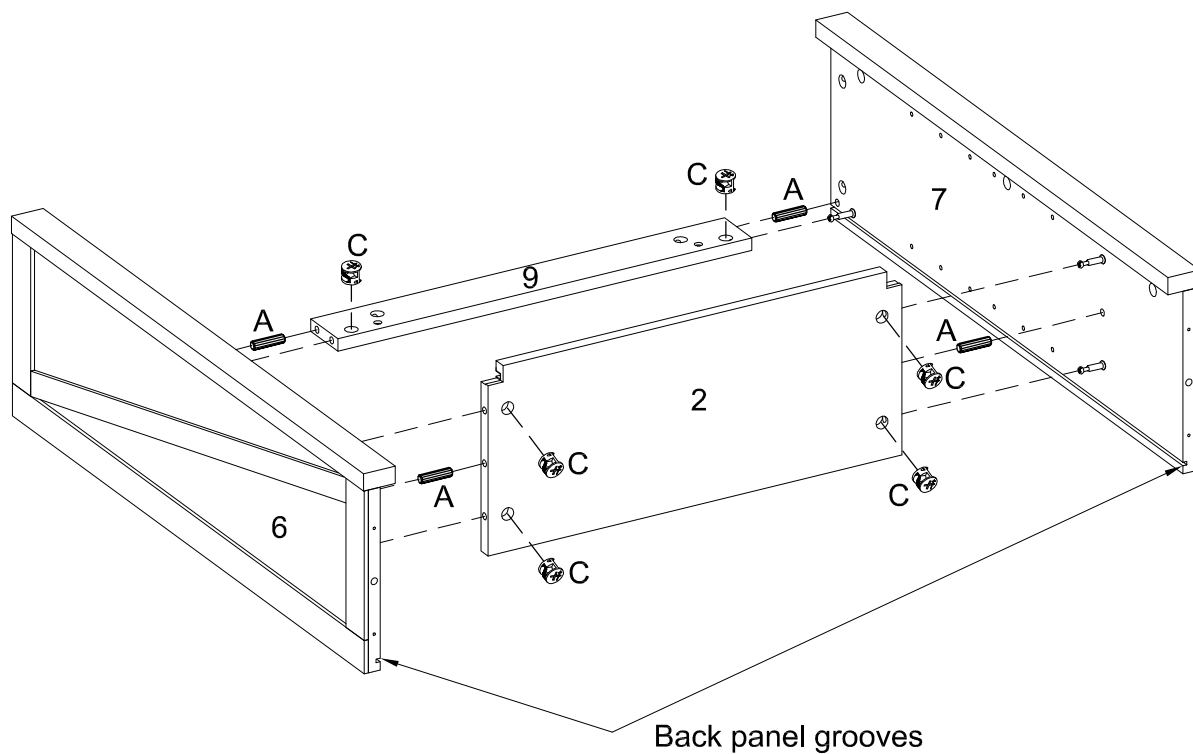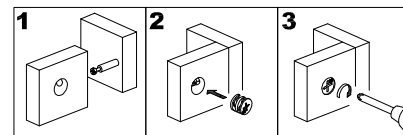


## Step 8

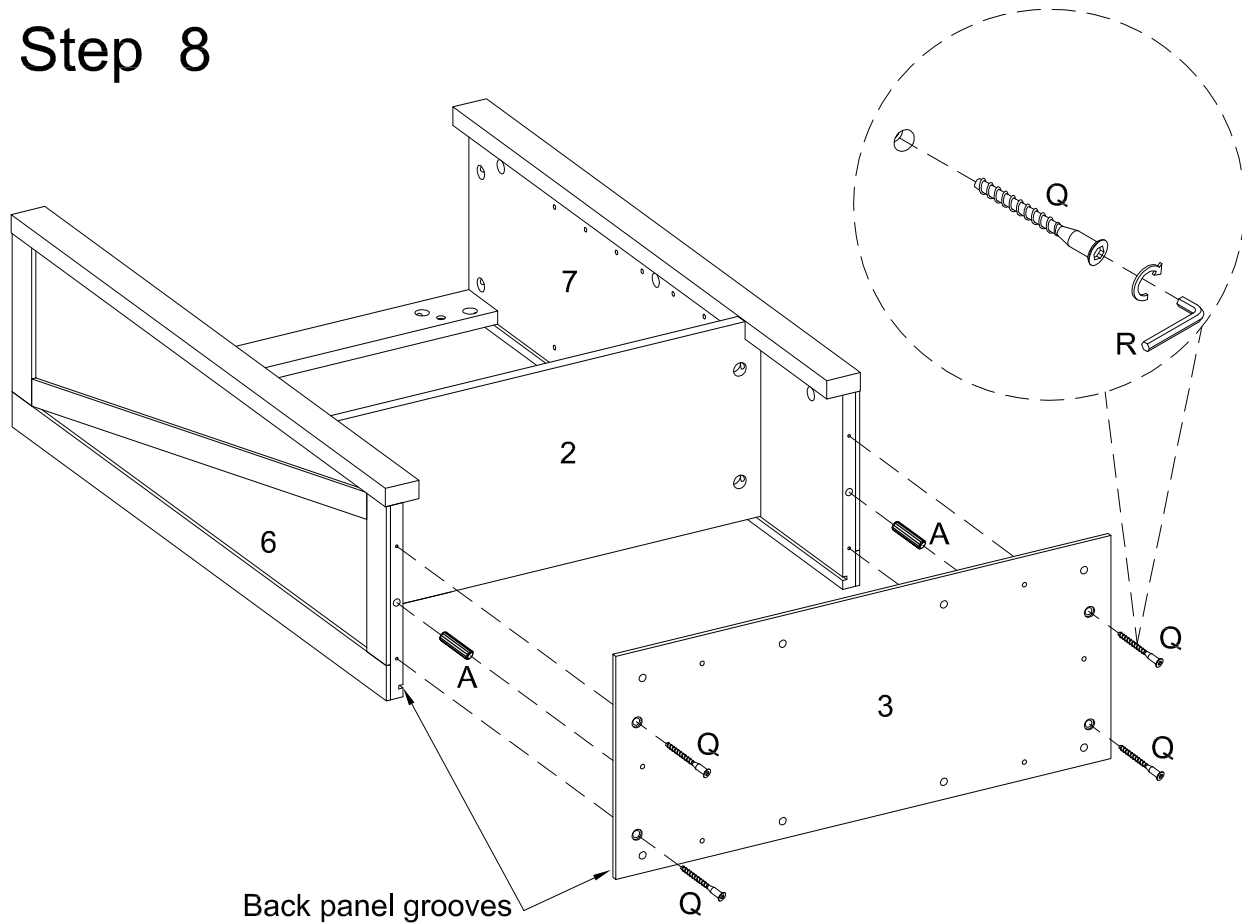





## Step 9

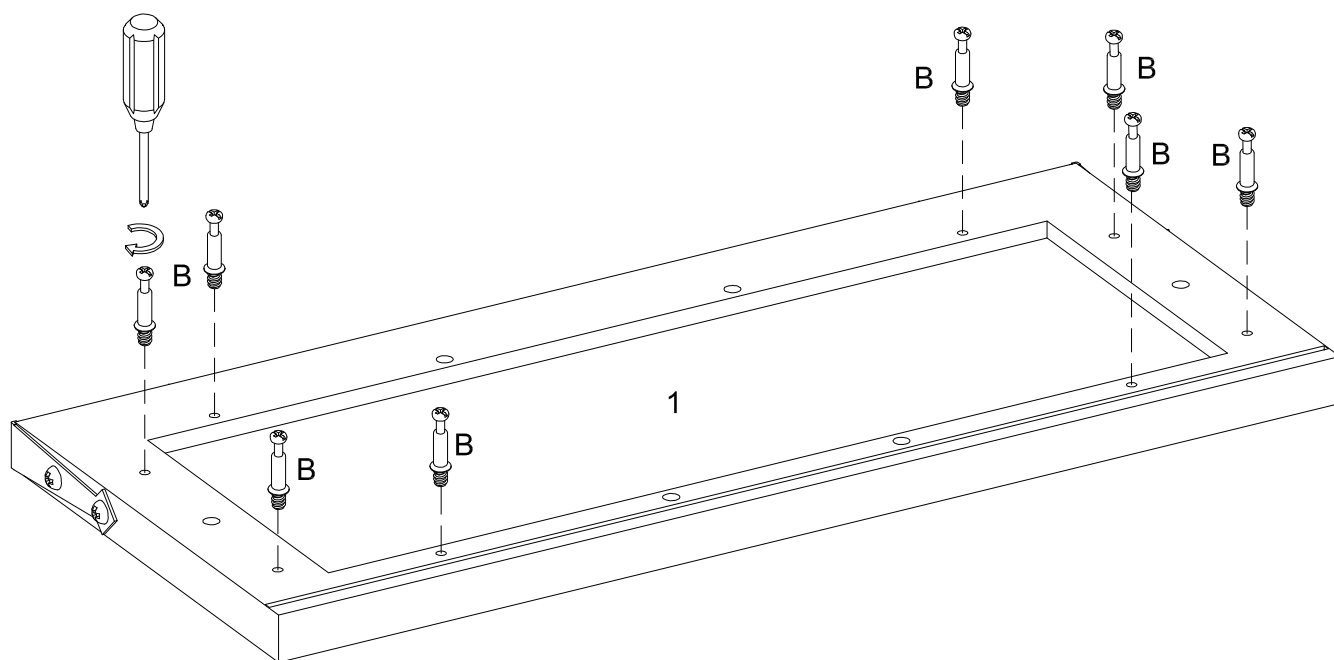


## Step 10

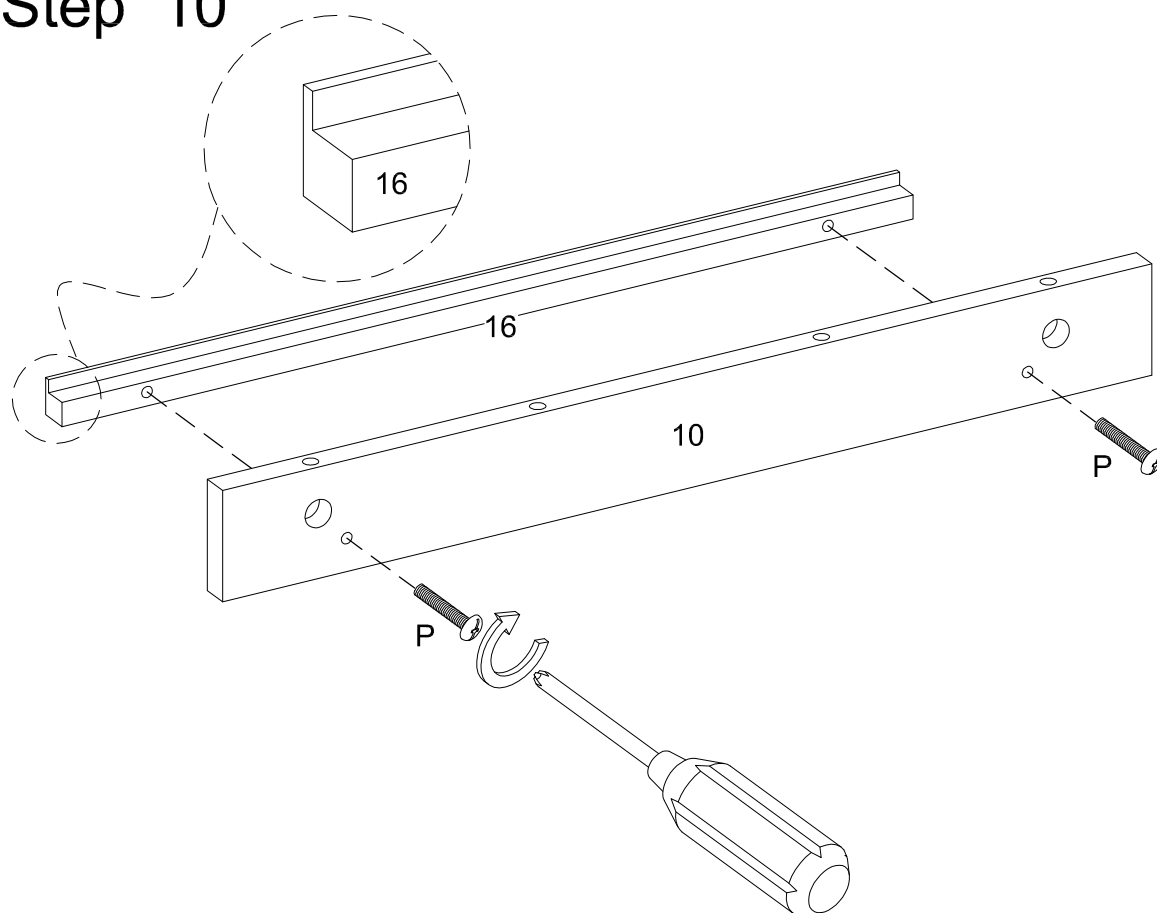



## Step 11

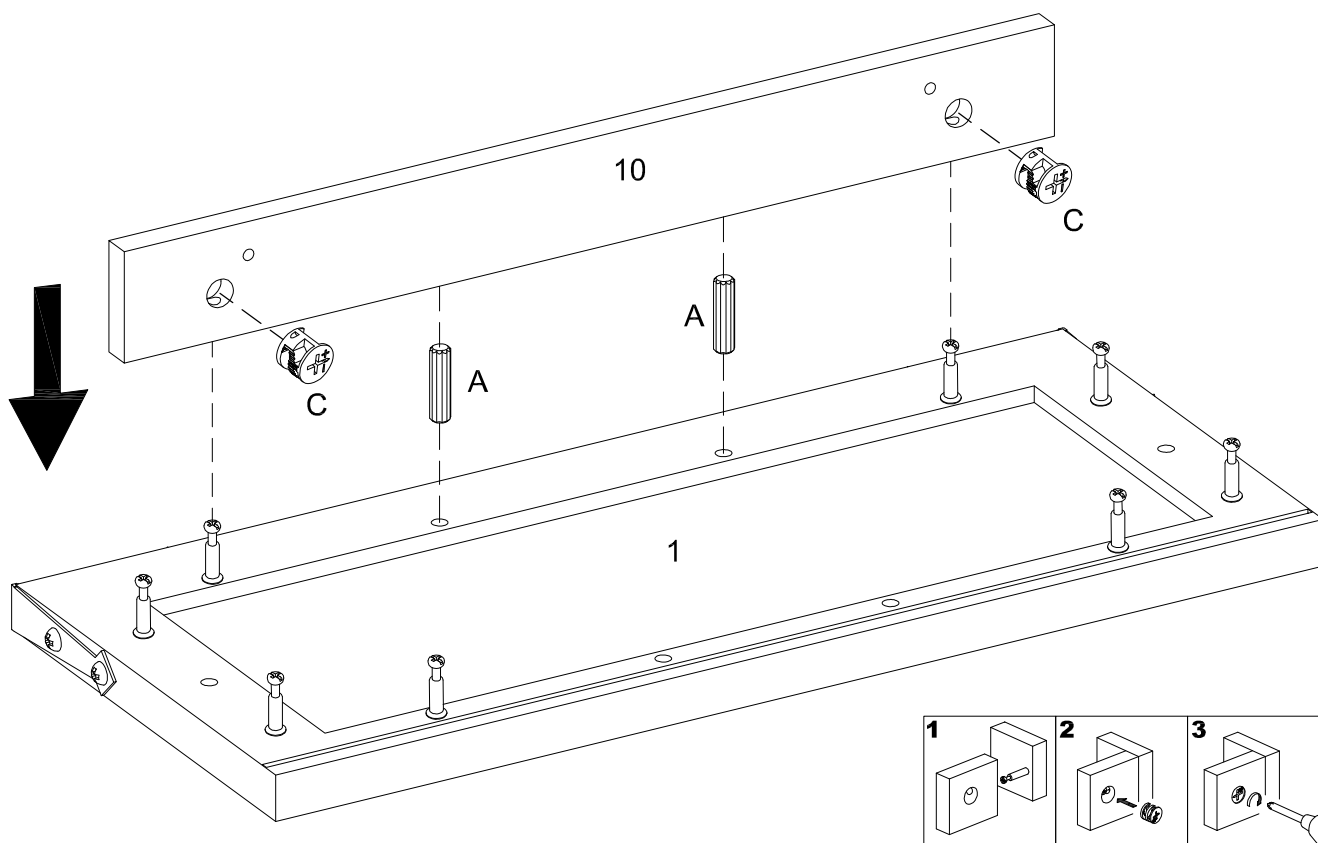


## Step 12

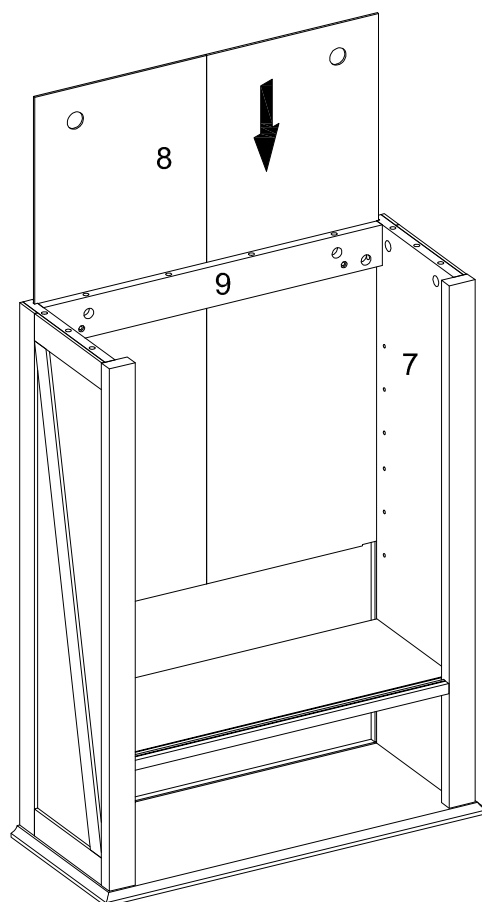


# Step 13

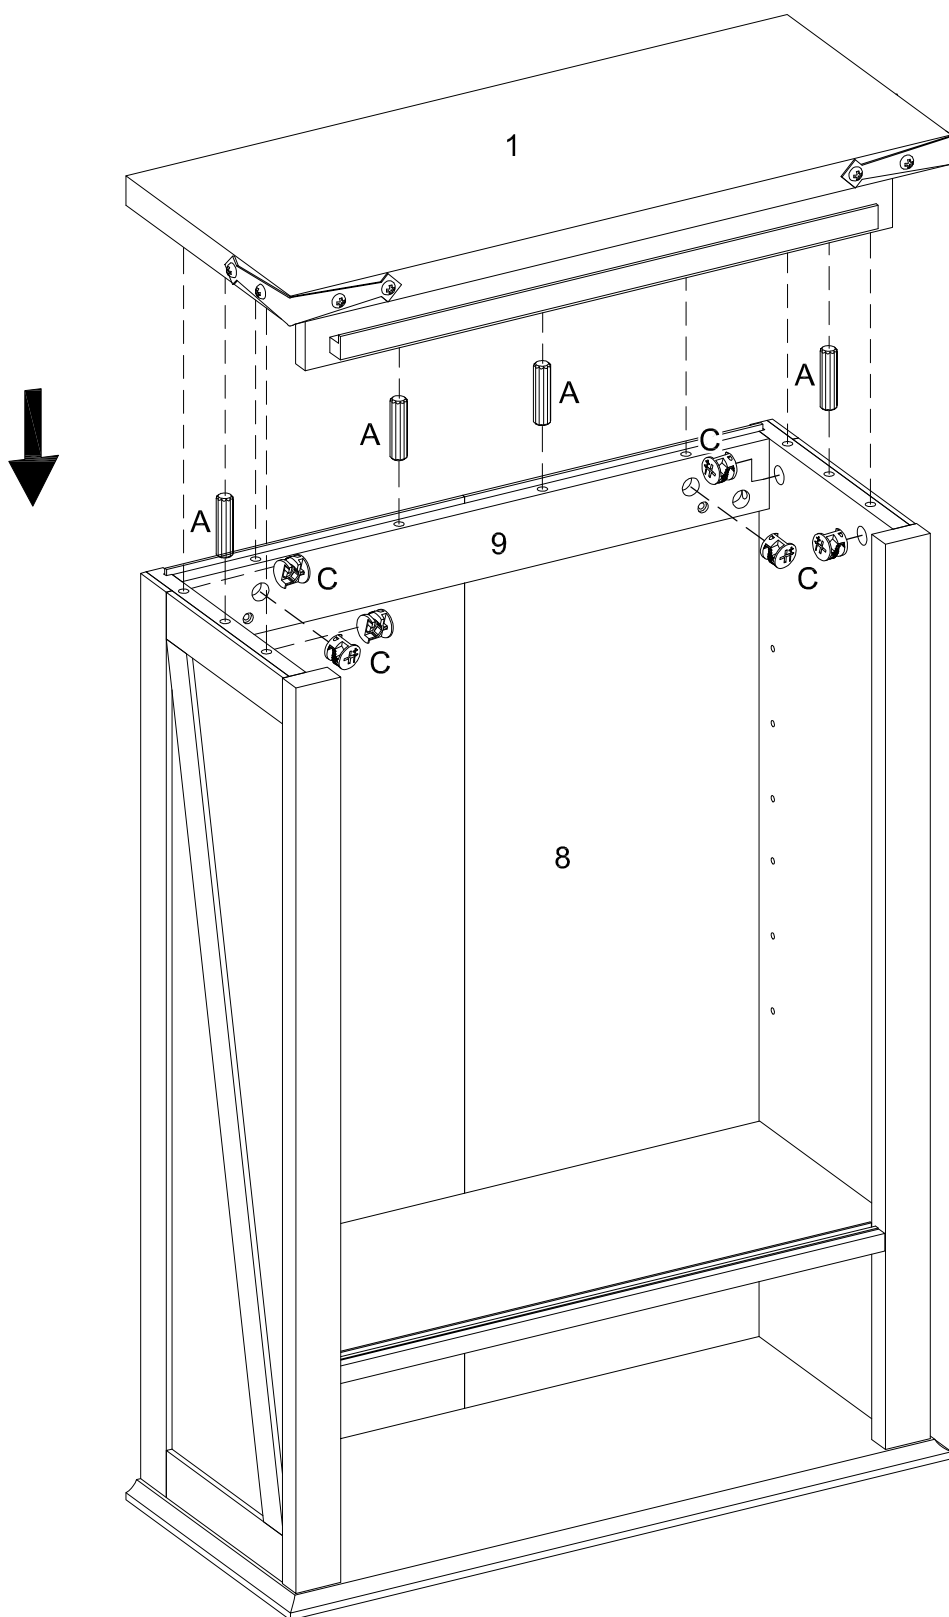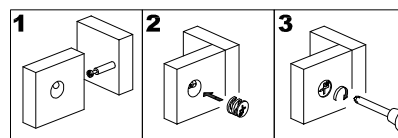


# Step 14

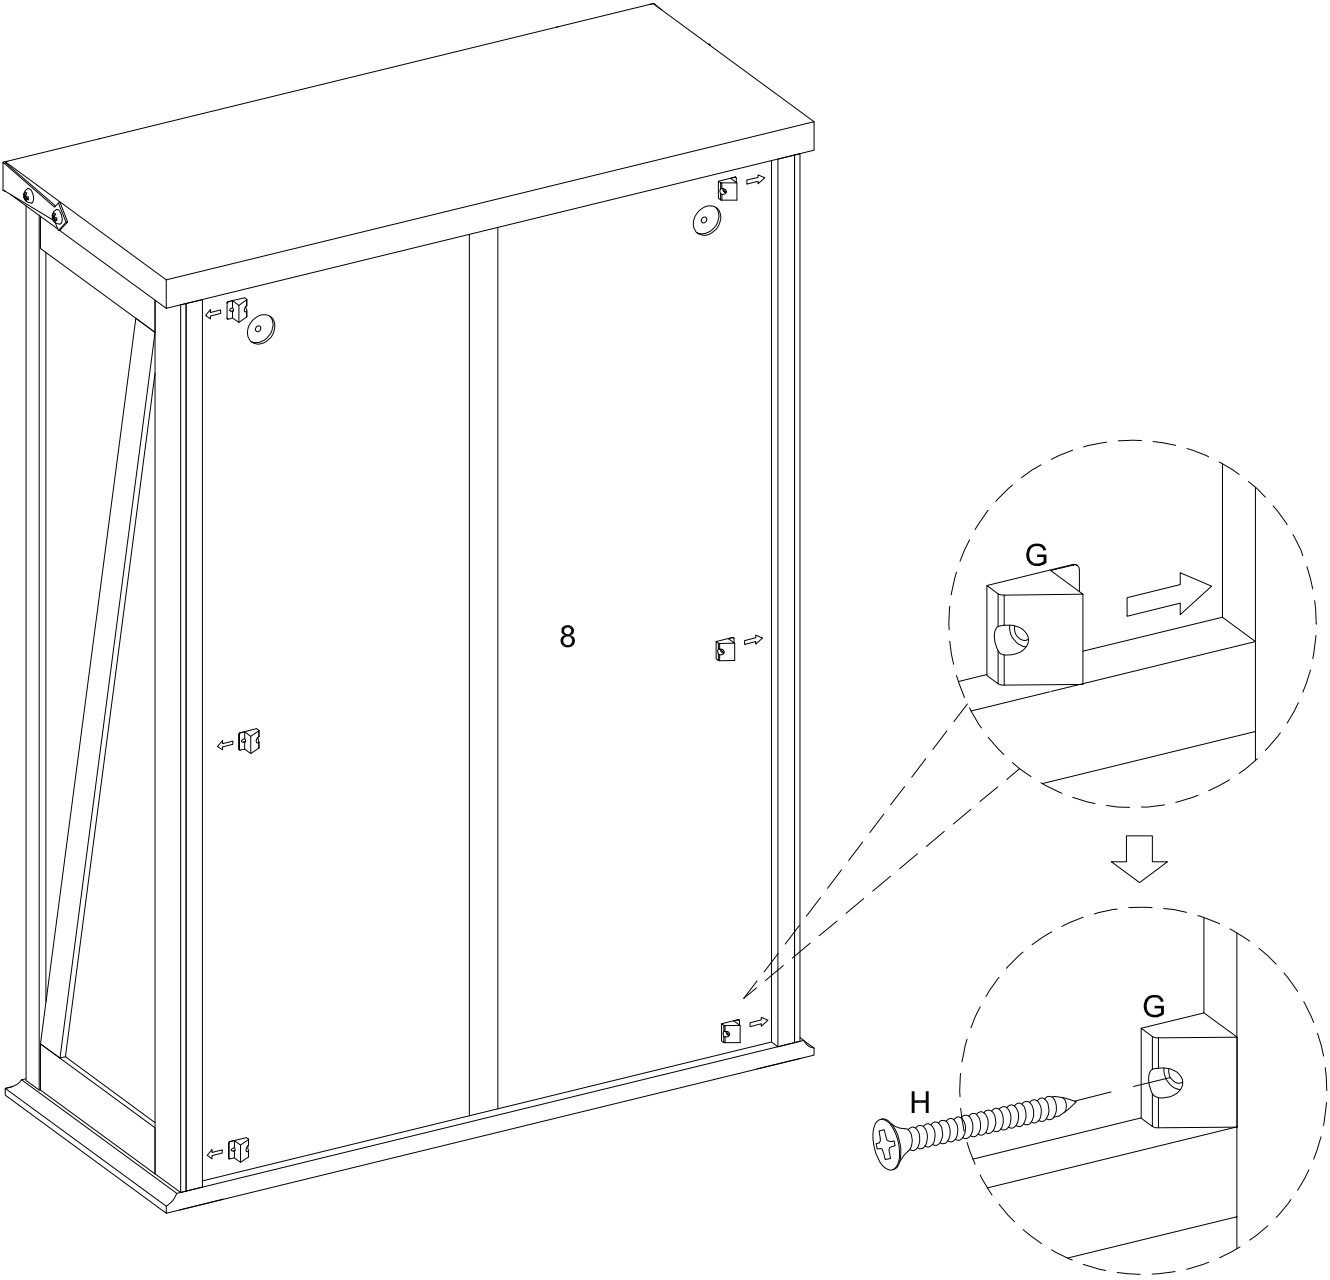


## Step 15

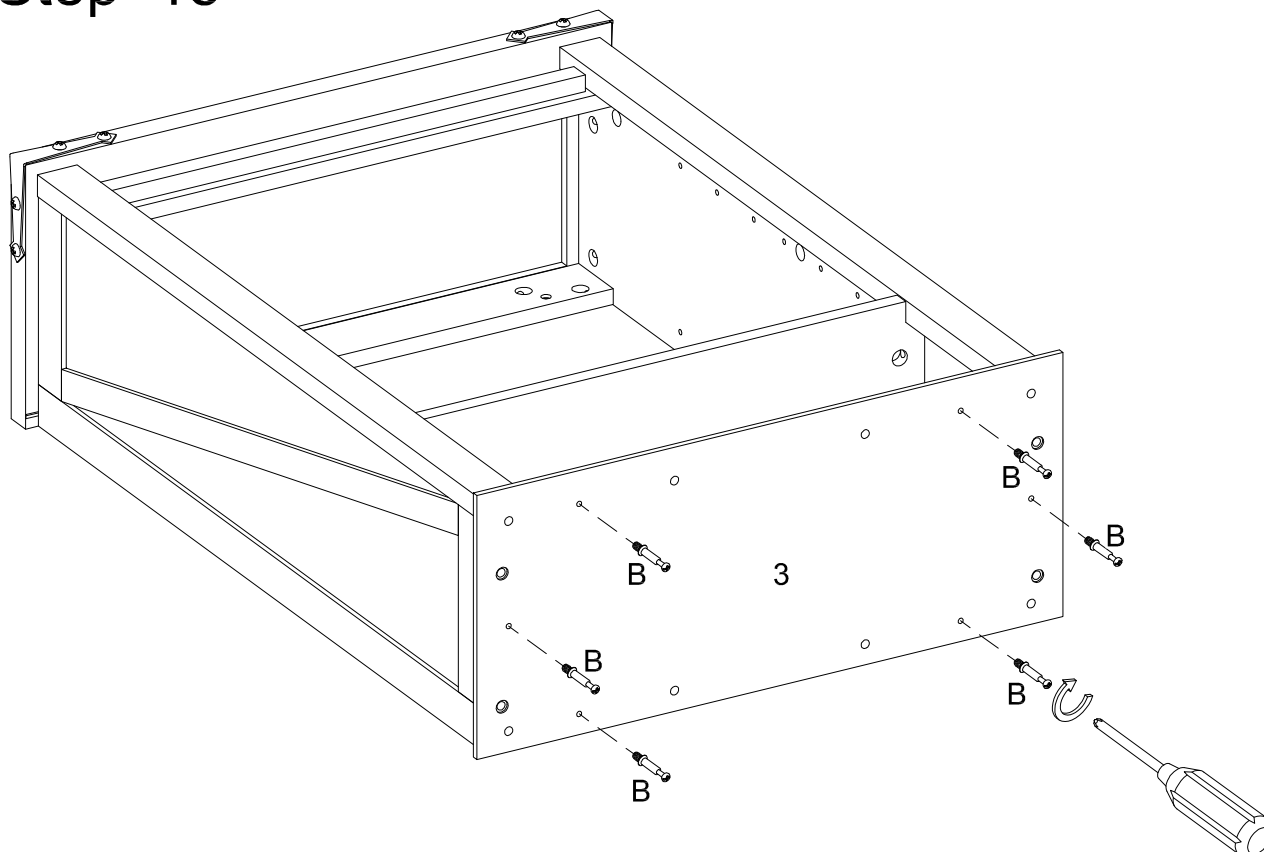

## Step 16

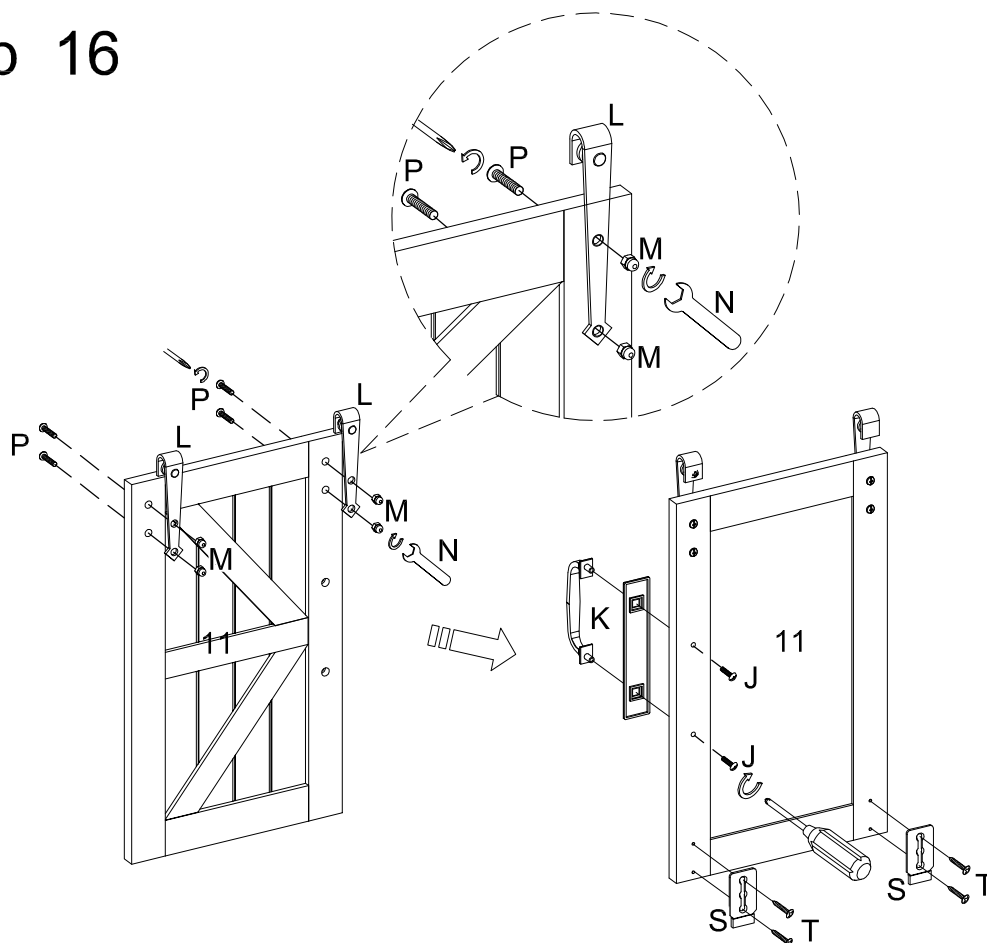


## Step 17

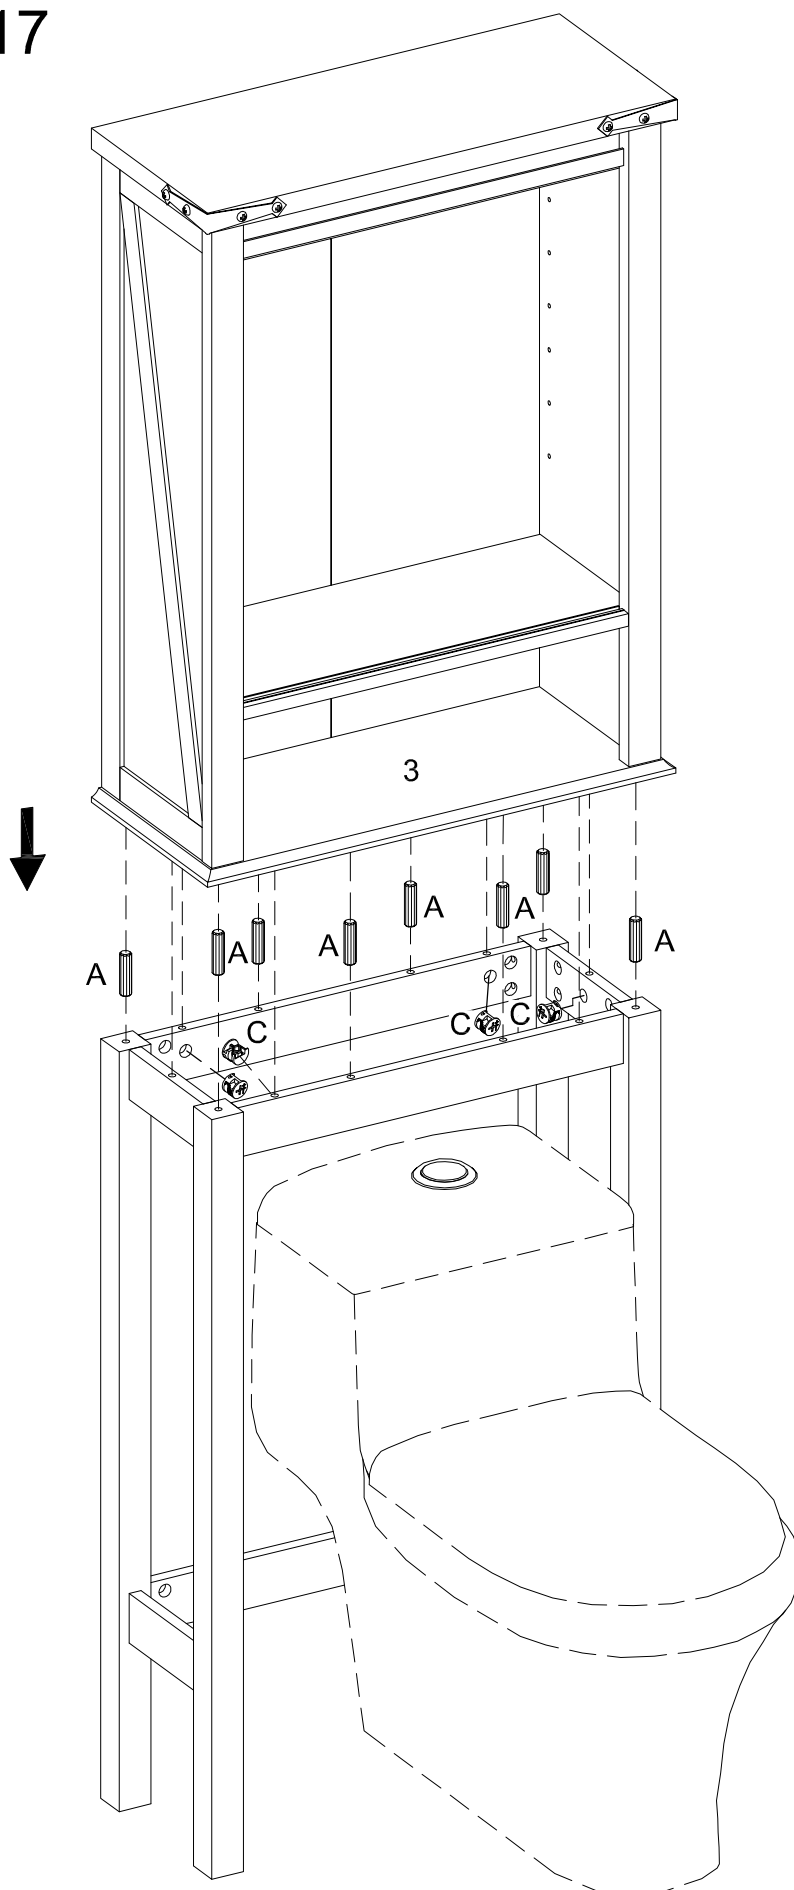


## Step 18

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

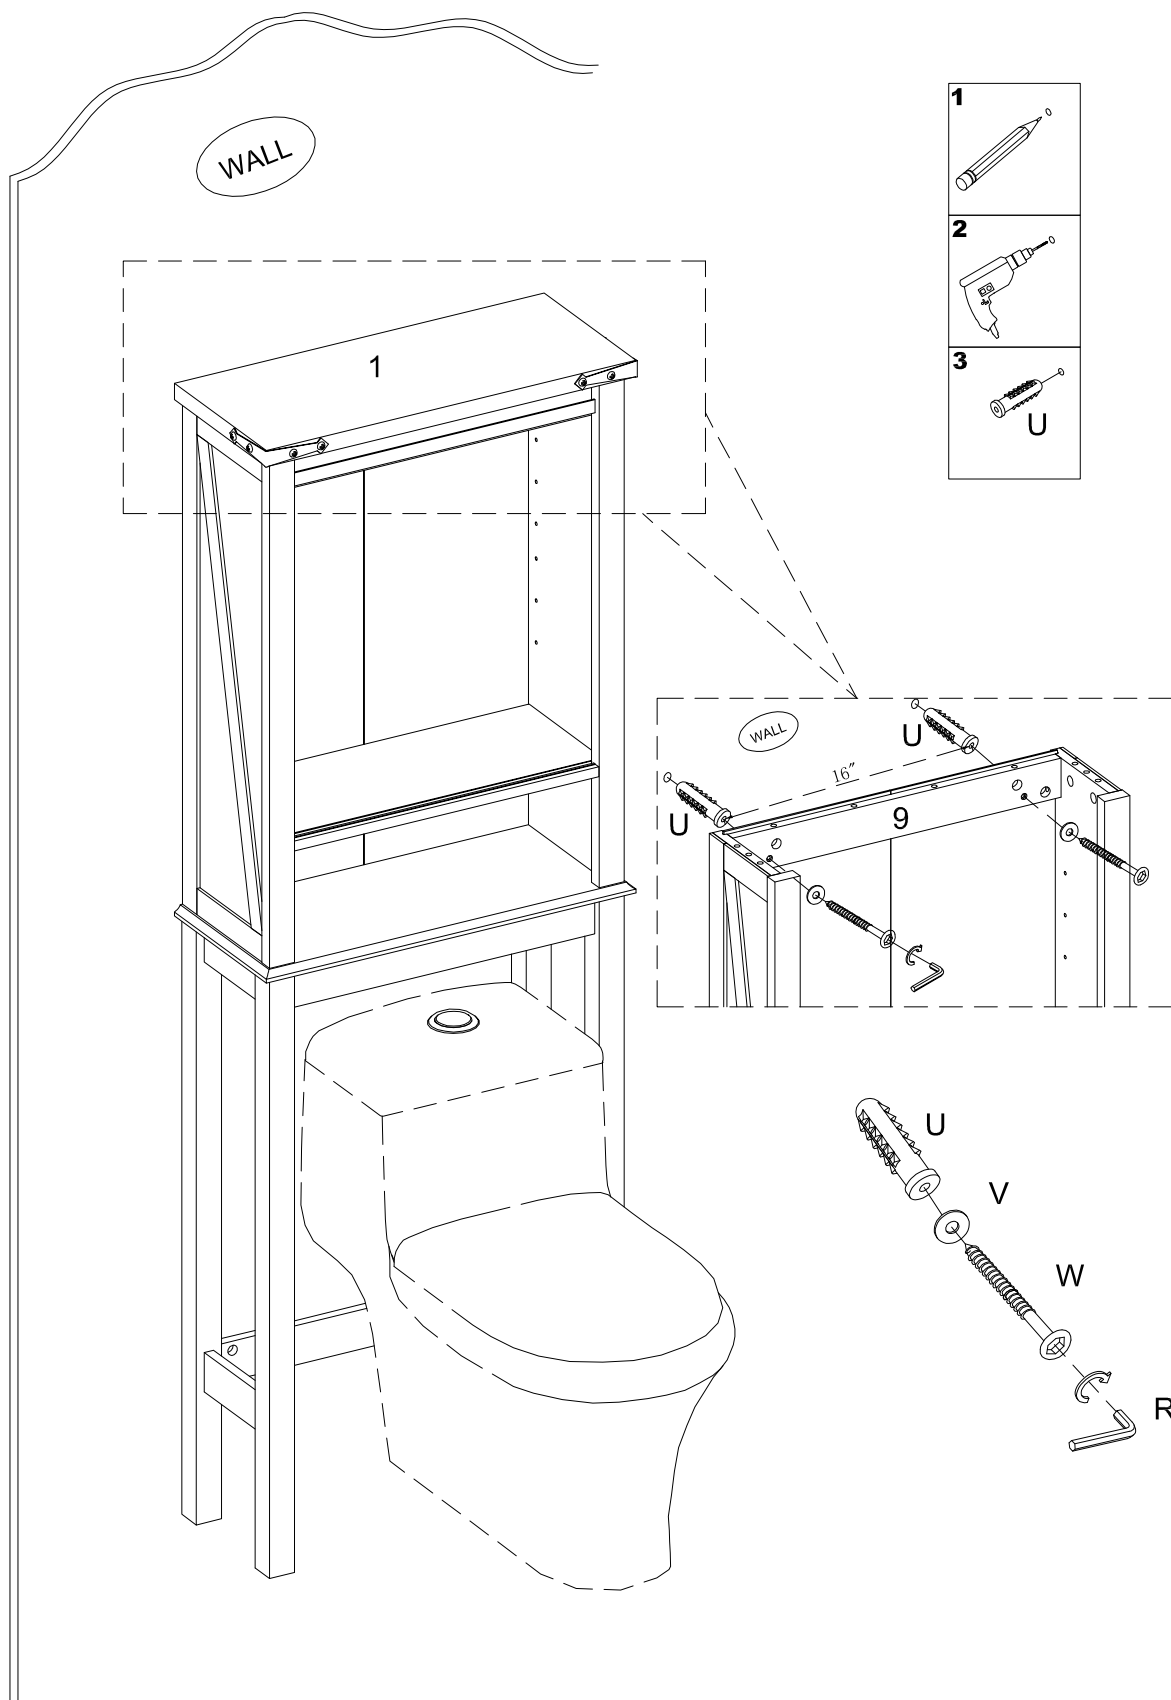


## Step 19

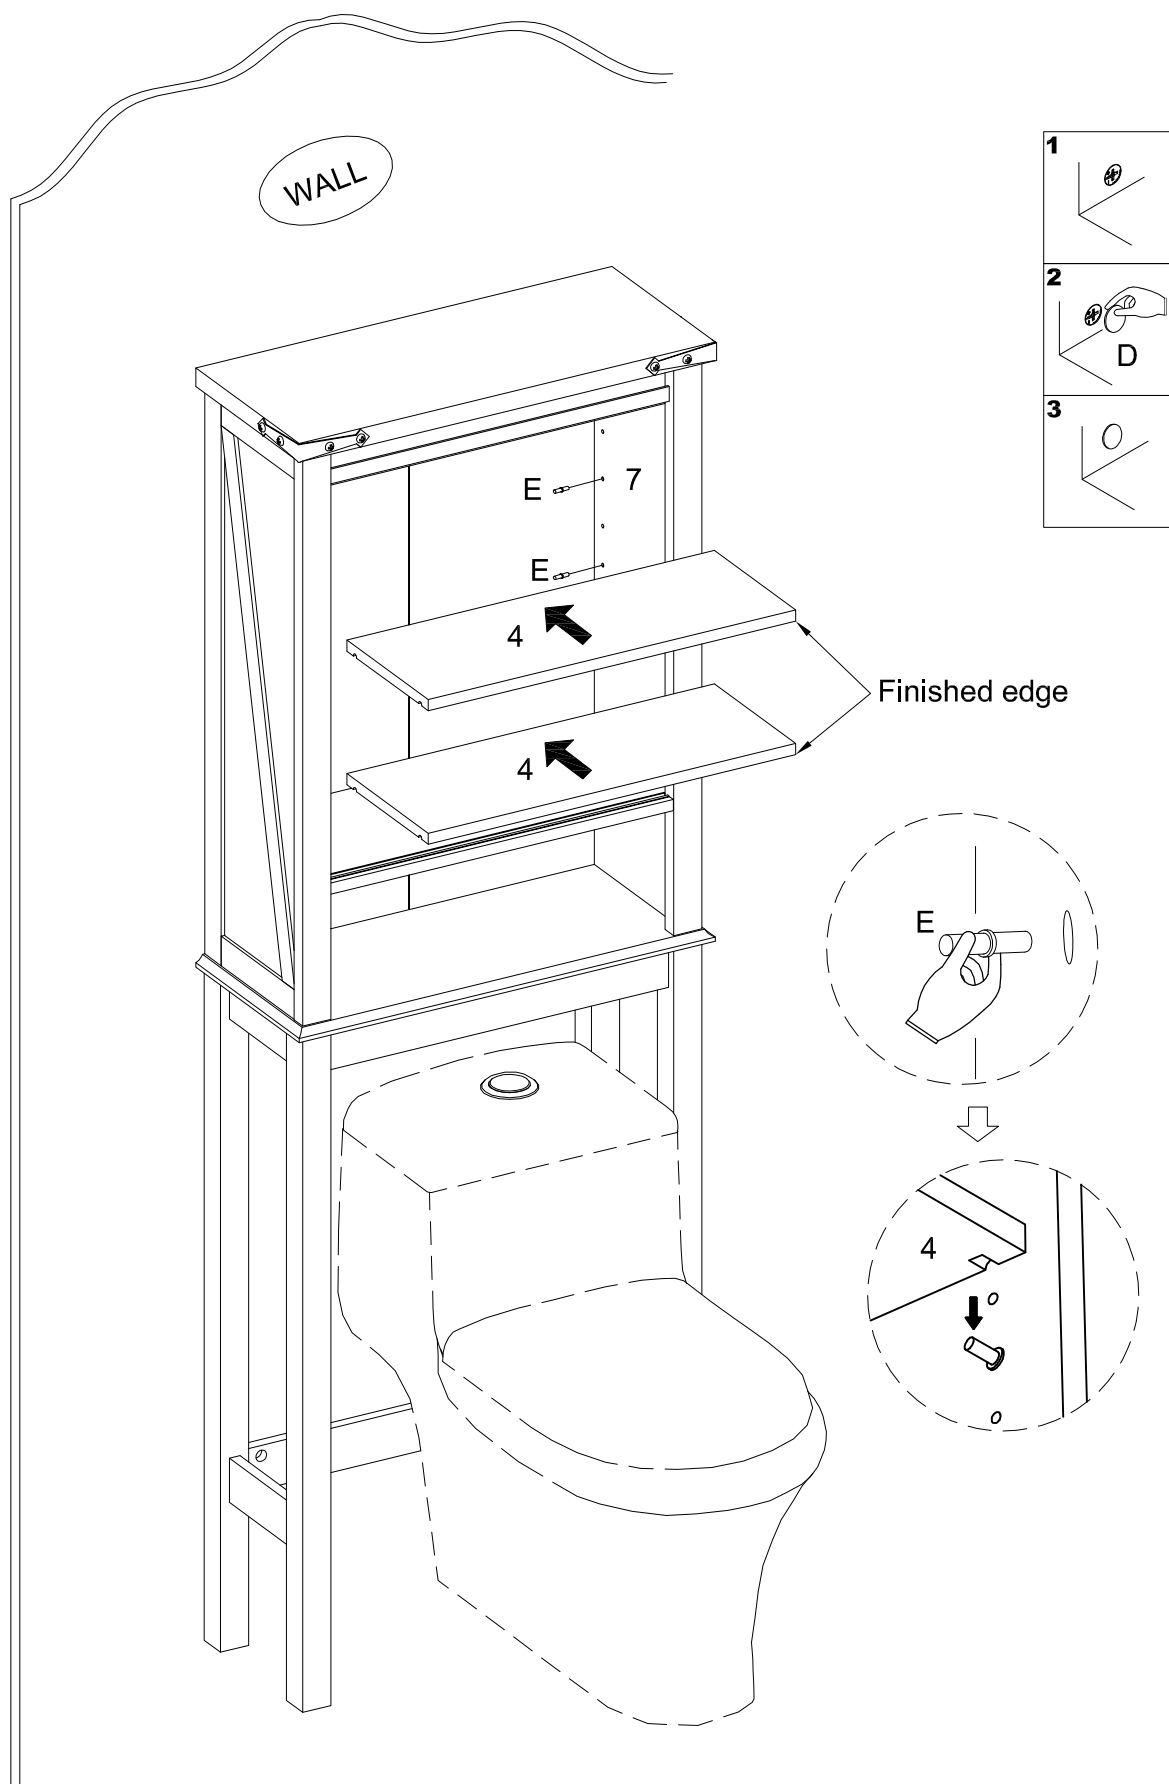





## Step 20

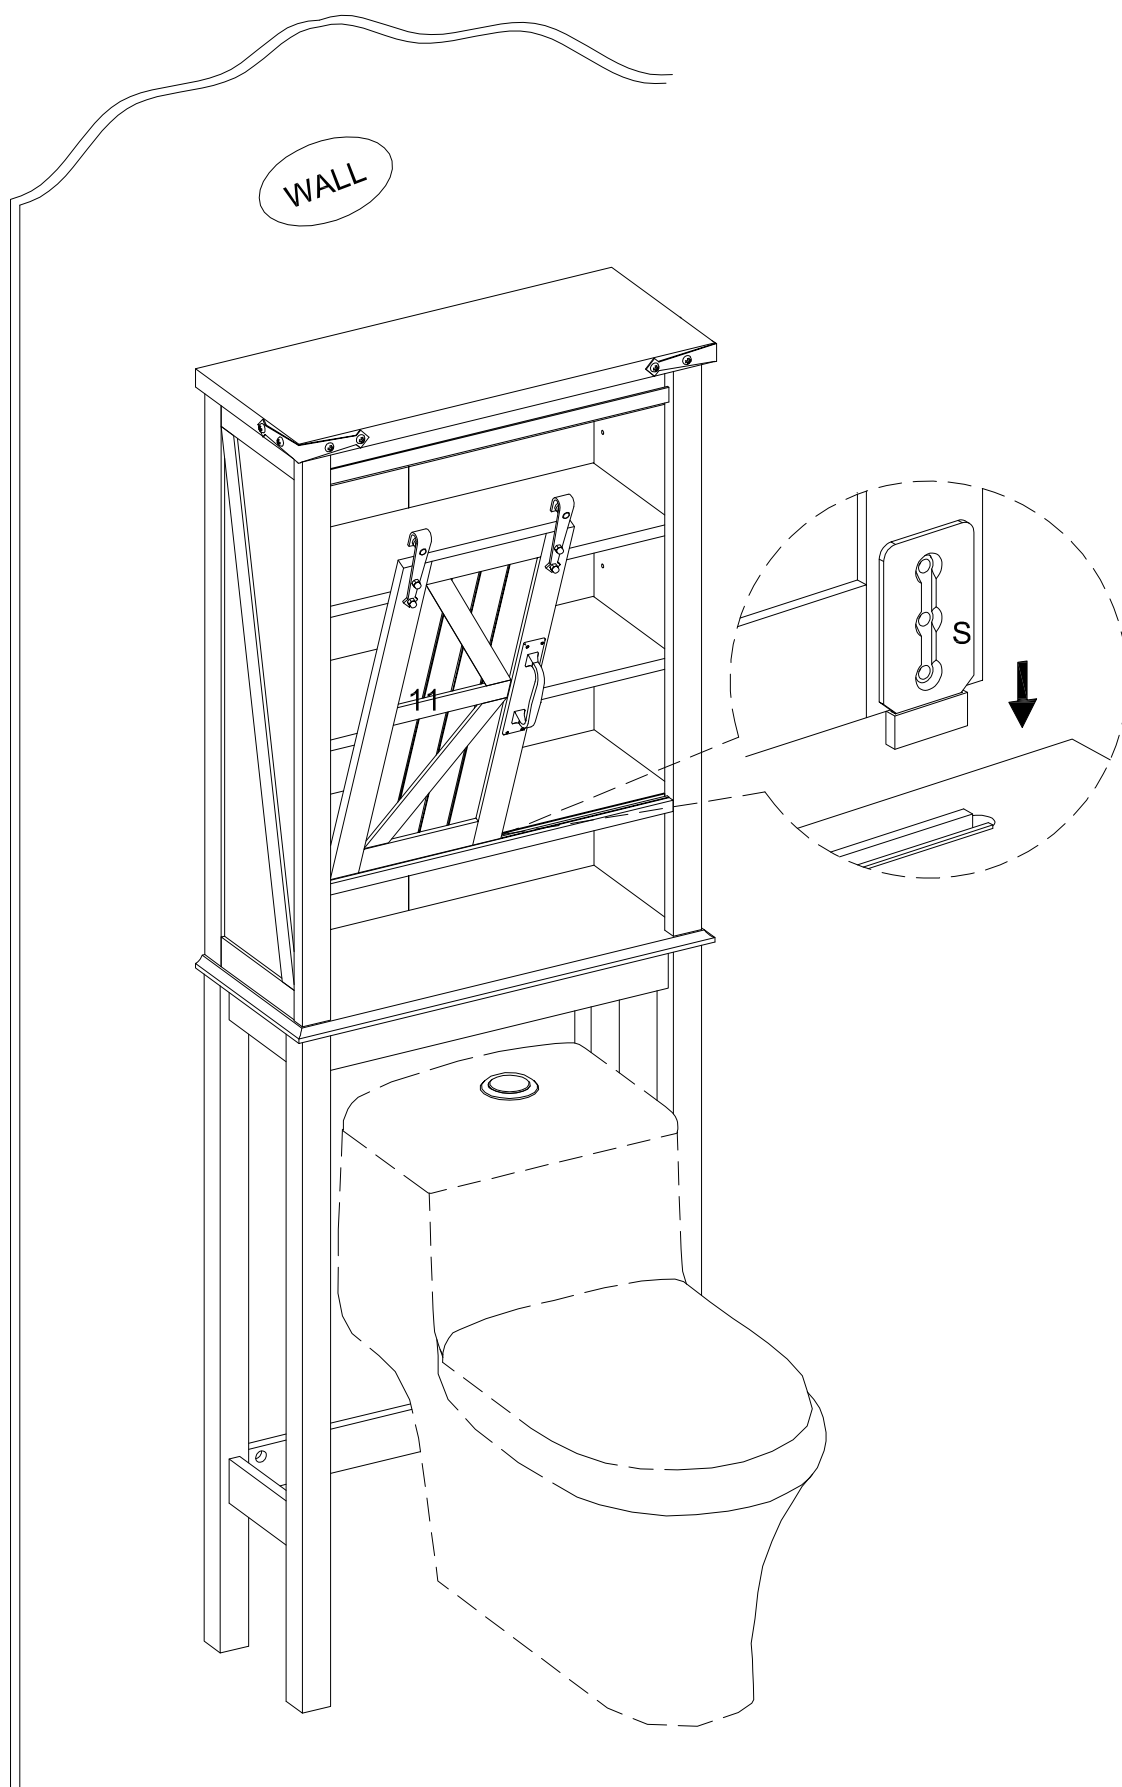

## Step 21

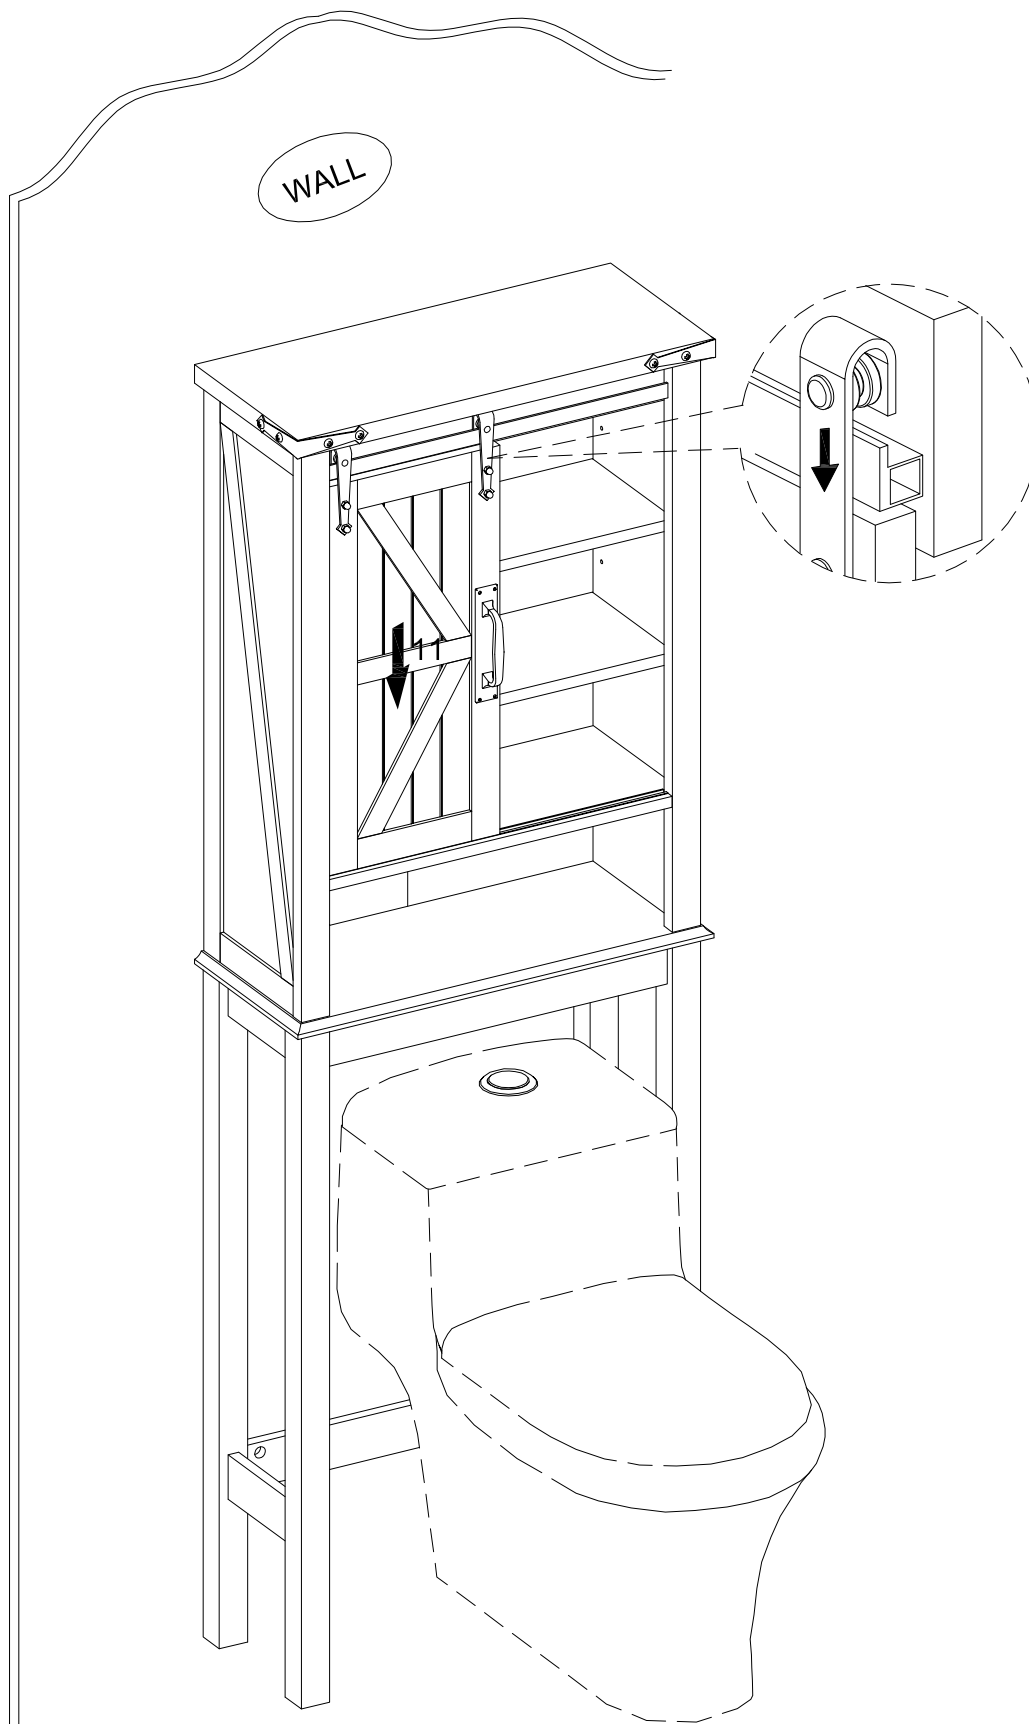

## Step 22

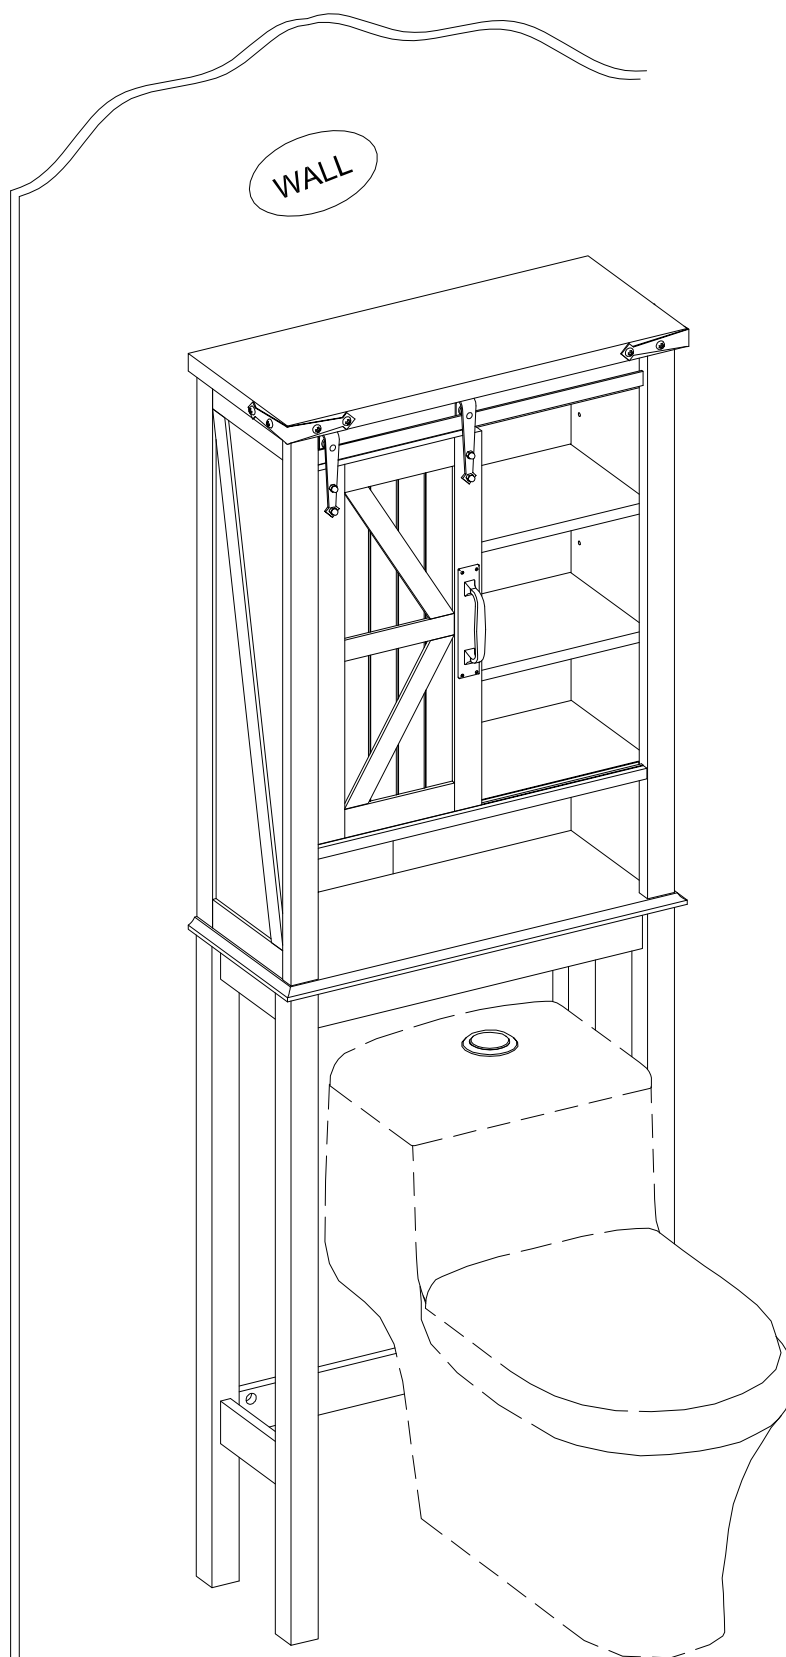

Final Assembly