


## **ASSEMBLY INSTRUCTIONS**

# QUEEN BED WITH HB BOOKCASE AND 2 DRAWERS

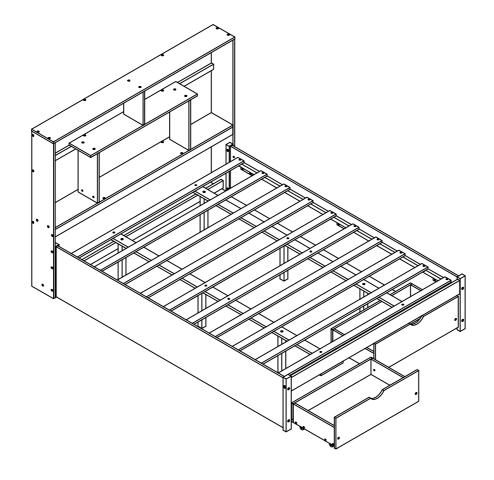

WF324223/WF324224

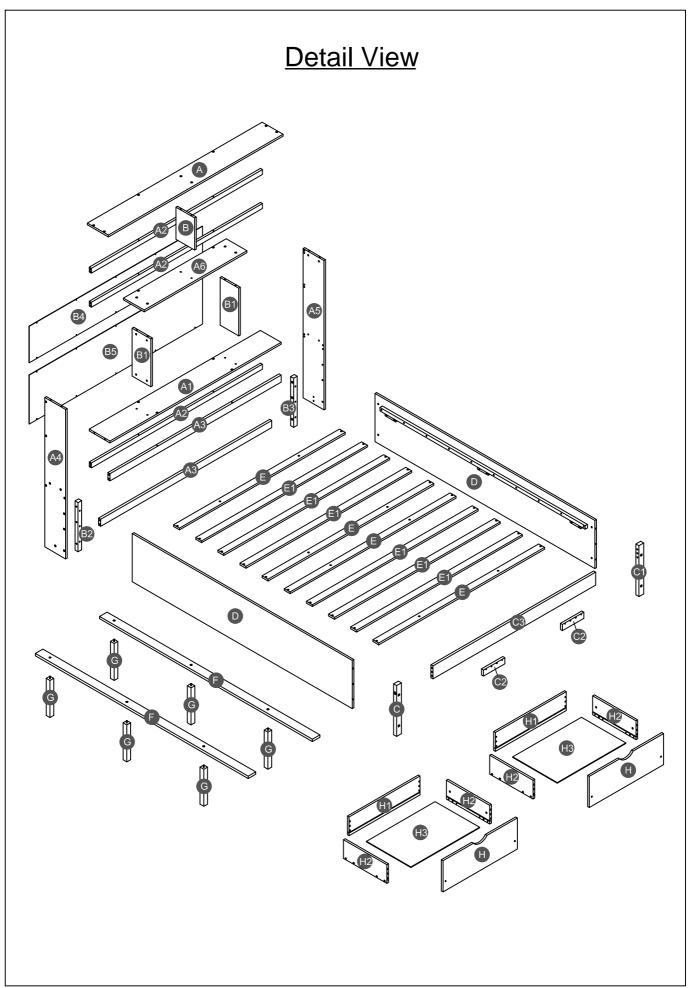


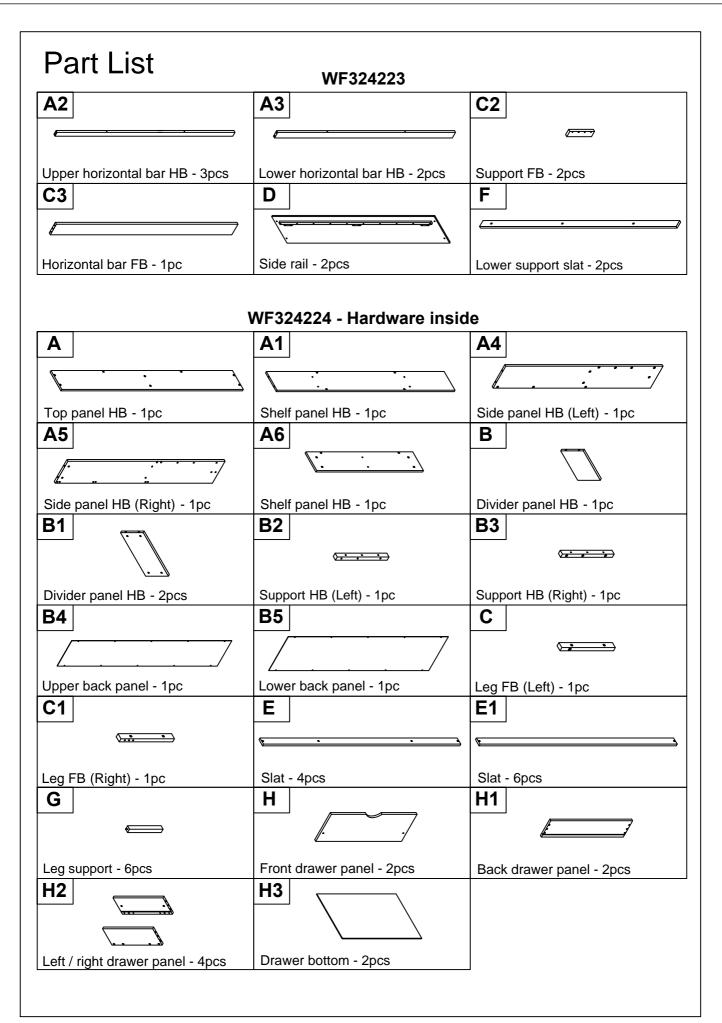

#### Hardware List WF324224

	<b>2</b>	<b>3</b>
Ø10*20mm	Ø8*30mm	(Ø15)1/4"*80mm
Wood dowel (8pcs)	Wood dowel (38pcs)	Hex-Head bolts (2pcs)
4	5	
		( ) proceedings
(Ø12)1/4"*70mm	(Ø12)1/4"*60mm	(Ø12)1/4"*40mm
Hex-Head bolts (8pcs)	Hex-Head bolts (38pcs)	Hex-Head bolts (6pcs)
7	<b>8</b>	9
1/4"*15 (9.5mm)	(Ø12)1/4"*40mm	(1/4")4.5*58mm
Horizontal-Hole bolts(48pcs)	Hex-Head bolts (8pcs)	Allen key (1pc)
10		12
Ø4*30mm	Ø3.5*15mm	100*54*20 mm
Wood screws (48pcs)	Wood screws (20pcs)	Wheels (8pcs)

### ASSEMBLY TOOLS REQUIRED ( NOT INCLUDED )







PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS!







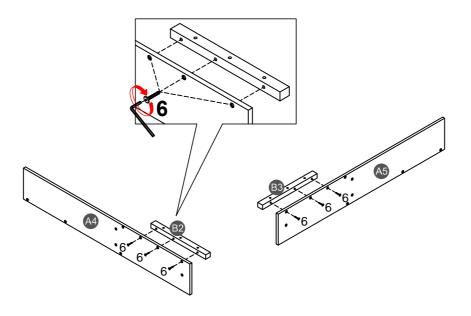


<u>STEP 2:</u>




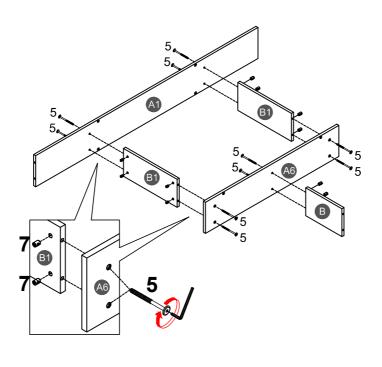


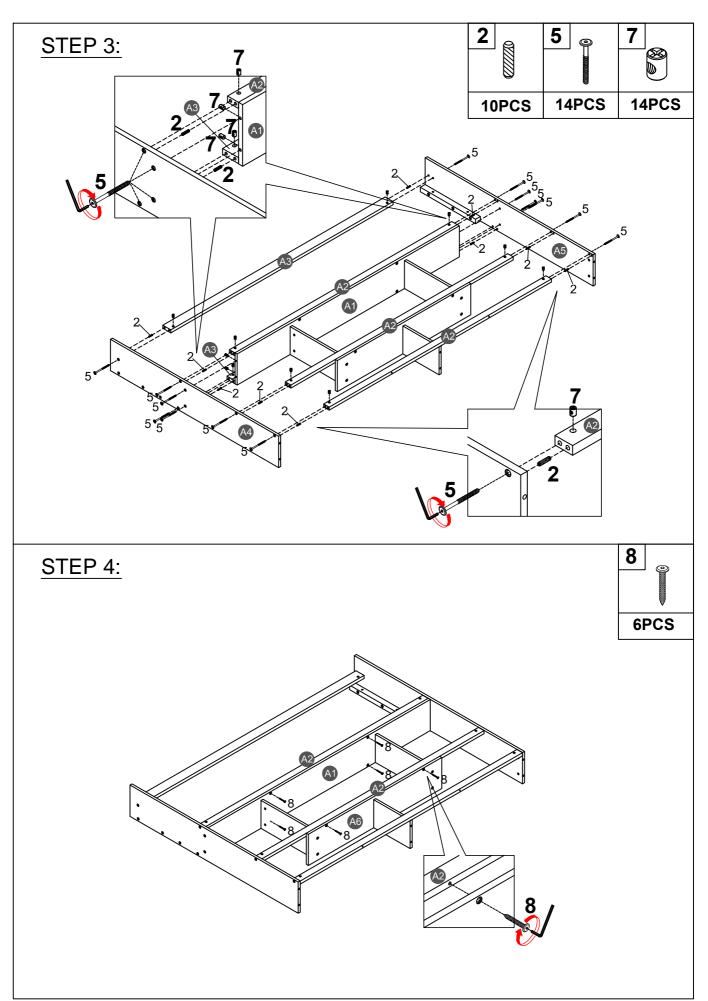

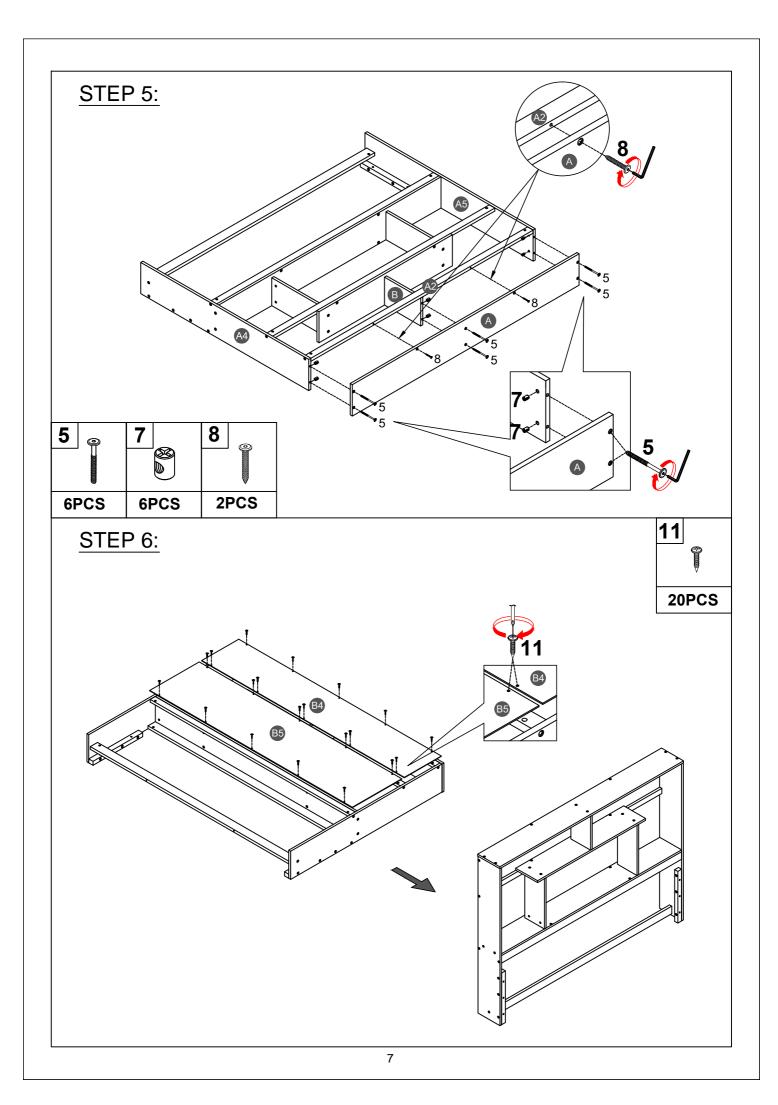








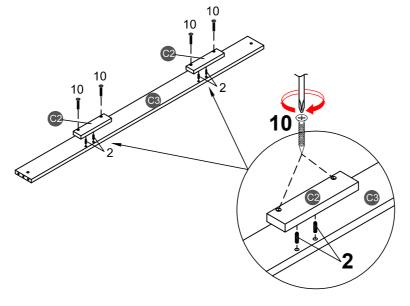


STEP 8:




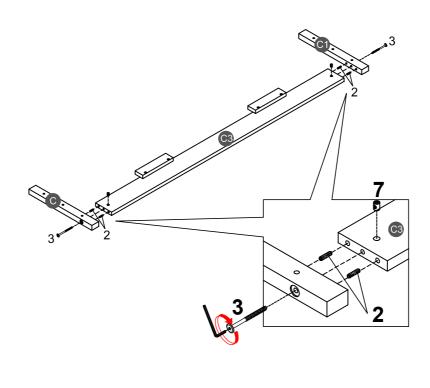

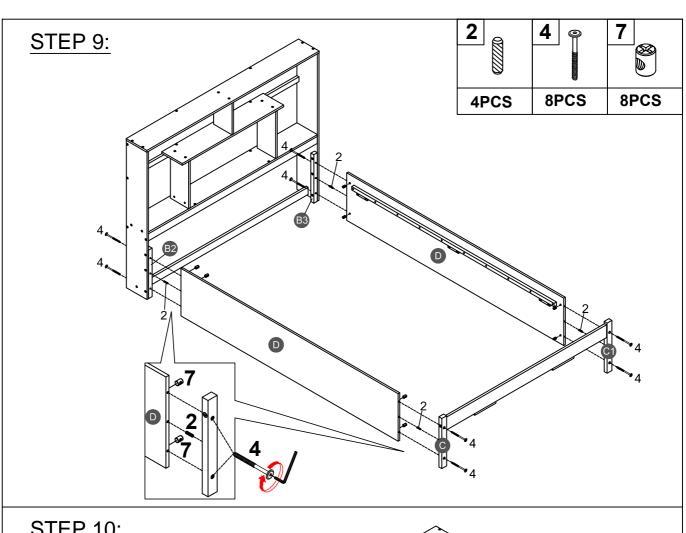


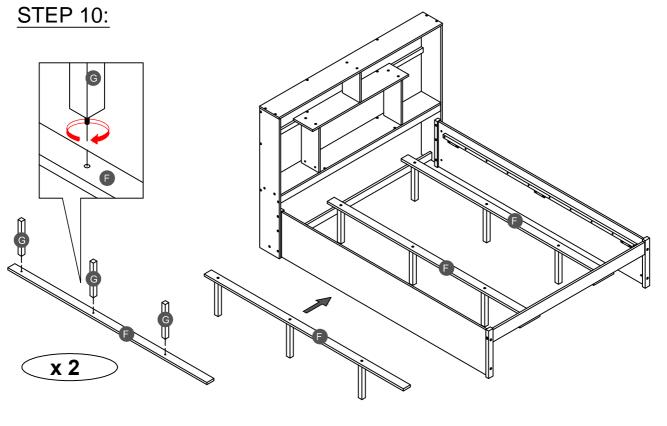


Assembling leg support (G) with lower support slat (F) later rotate, Move support slat inside Queen bed.

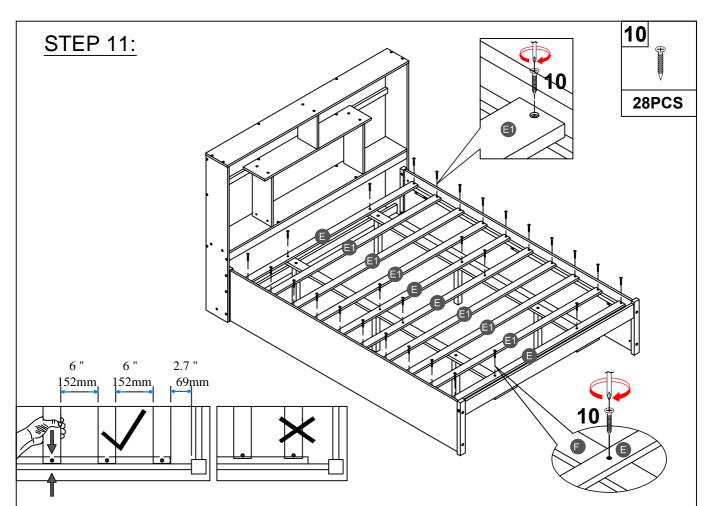


**NOTE:** Please make sure the bed slats close to the side rail before locking the screws to avoid breakage. This step is required for both the left and right sides. Moreover, please do not lock the screws of the bed slats at the outermost edge to avoid damaging.

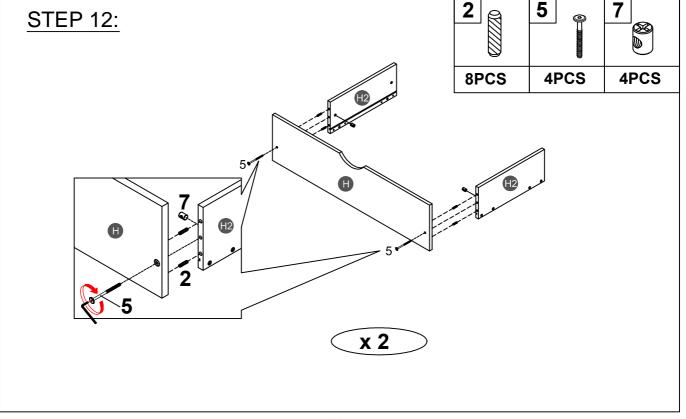

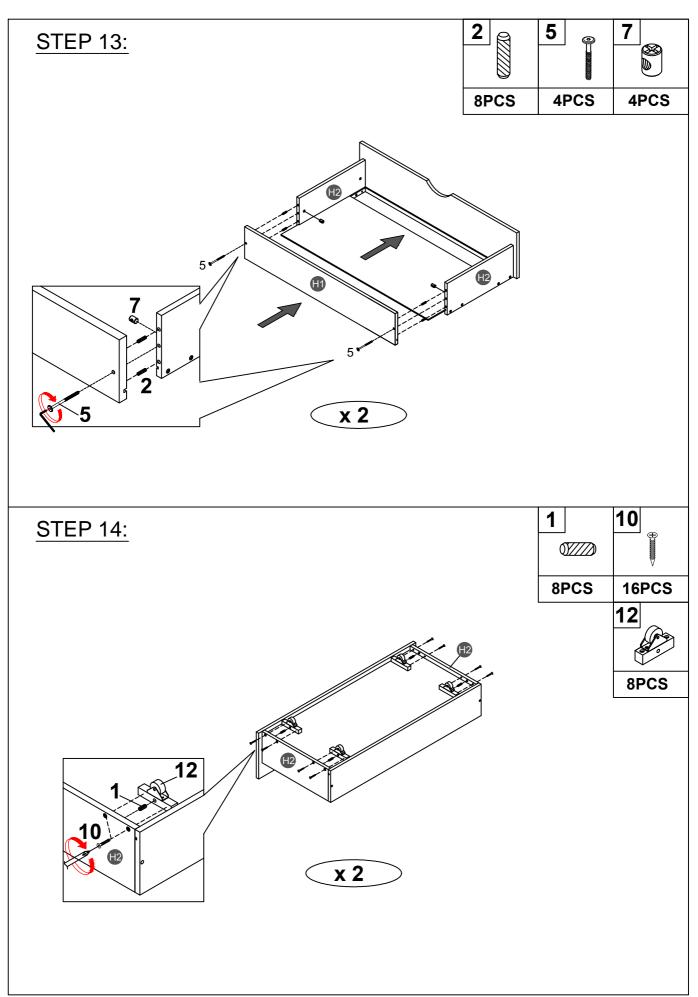

### STEP 15:

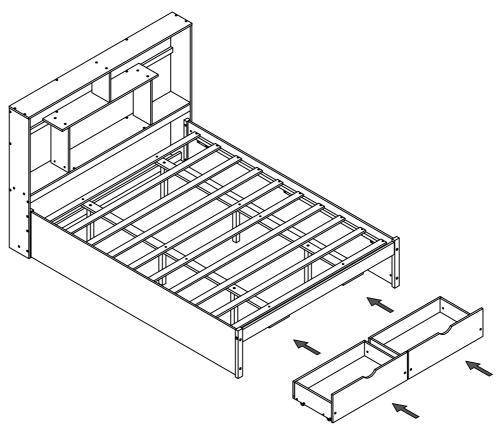

Push Drawers under the bottom of Queen bed.

