



ASSEMBLY INSTRUCTIONS

FULL BED WITH HB BOOKCASE AND 2 DRAWERS

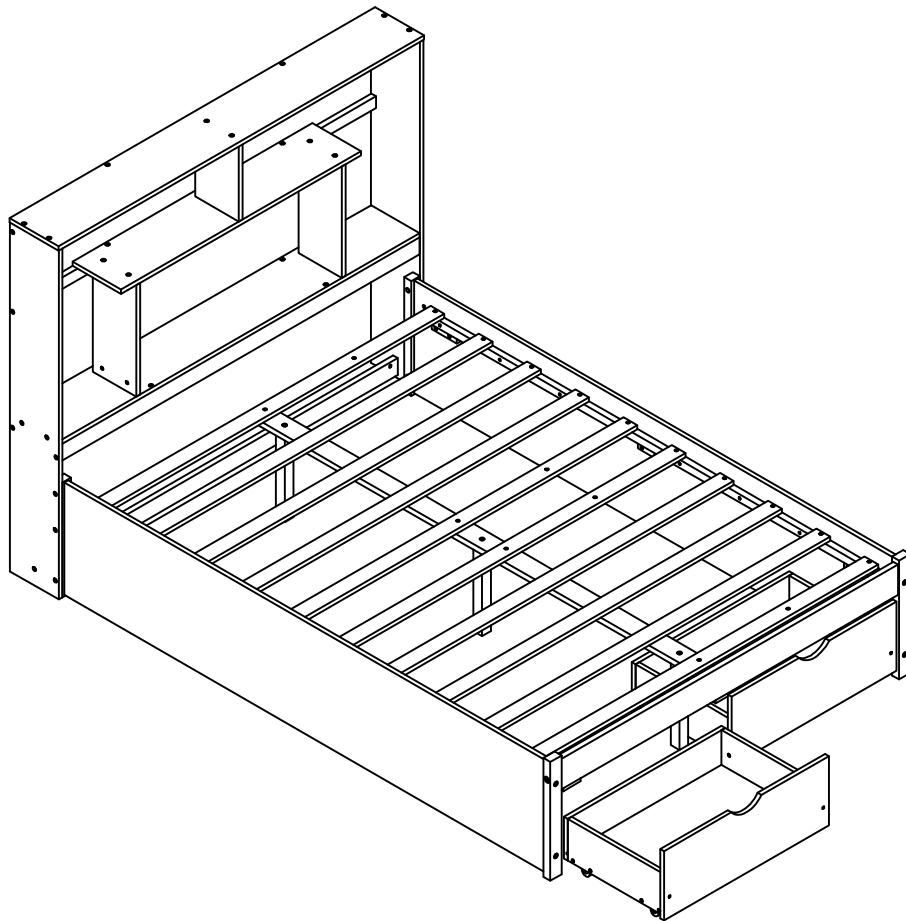






WF324221/WF324222

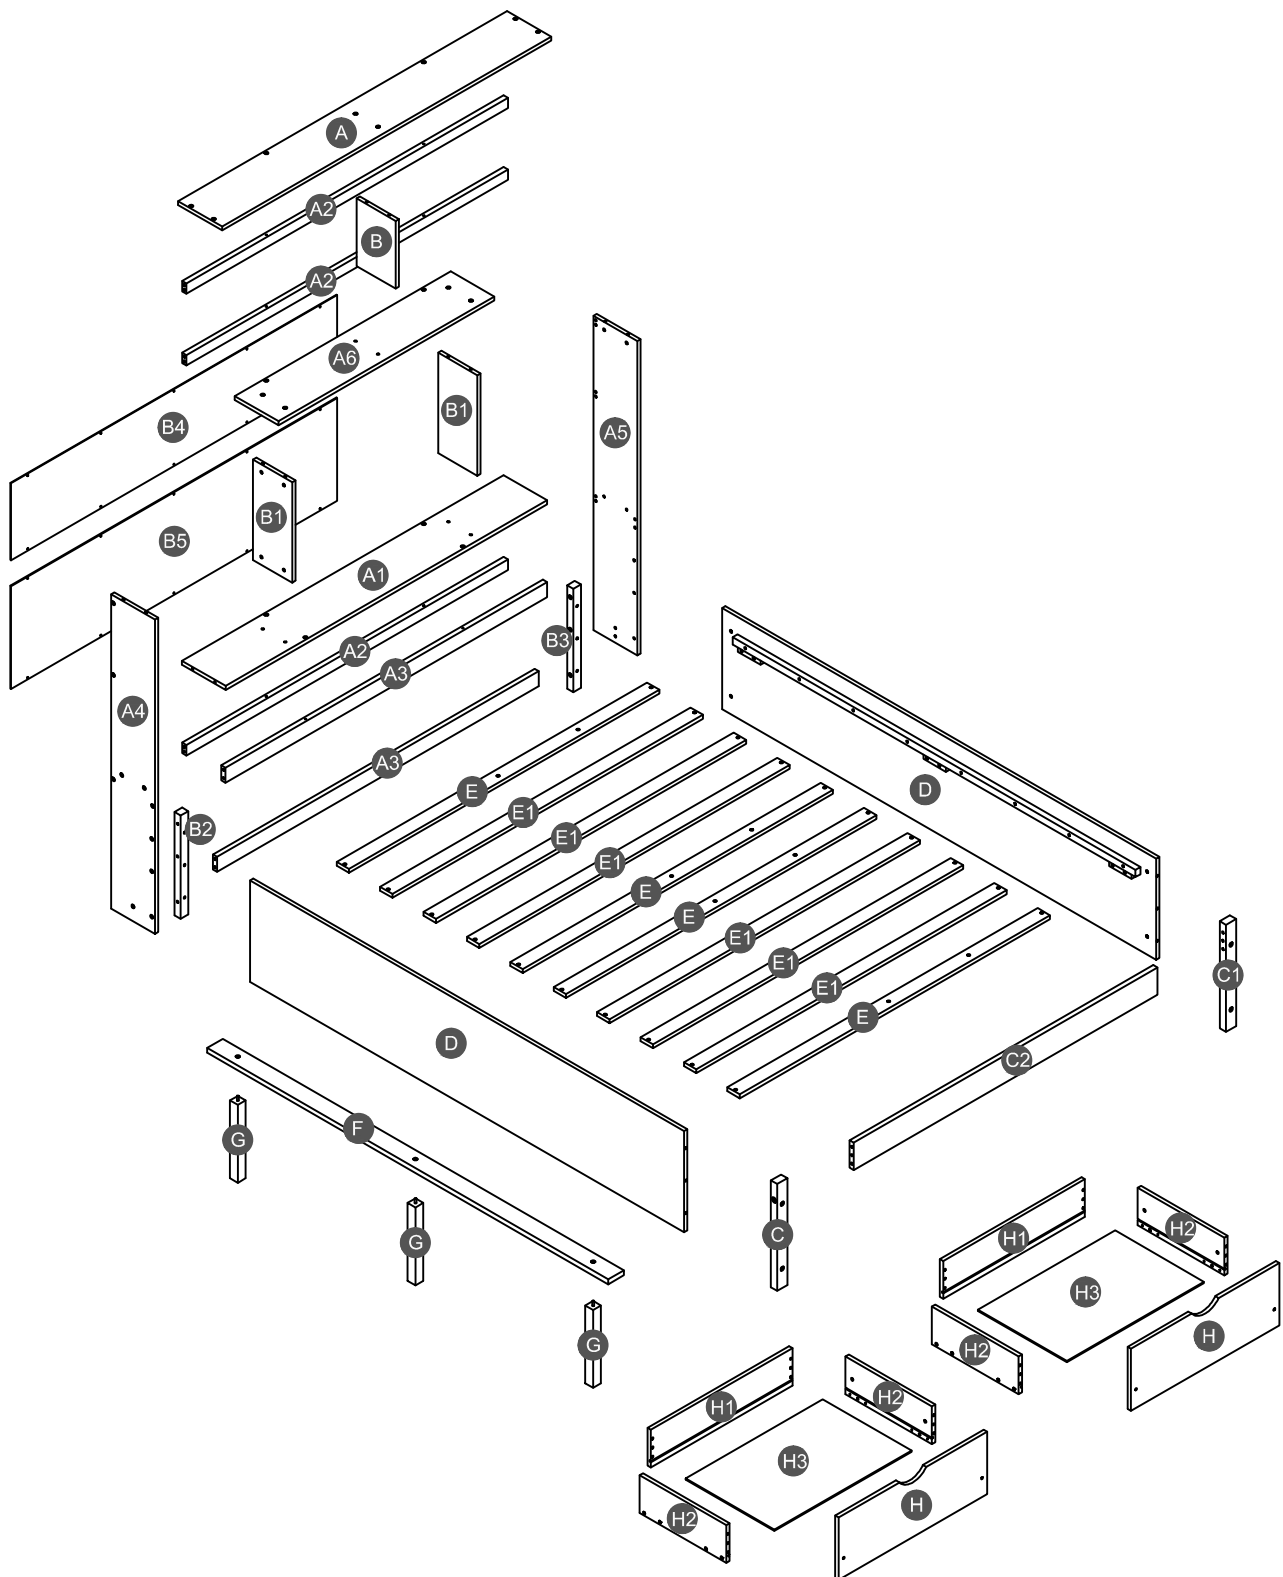Detail View























Part List














WF324221

A2  Upper horizontal bar HB - 3pcs	A3  Lower horizontal bar HB - 2pcs	C2  Horizontal bar FB - 1pc
D  Side rail - 2pcs	F  Lower support slat - 1pc	


WF324222 - Hardware inside

A  Top panel HB - 1pc	A1  Shelf panel HB - 1pc	A4  Side panel HB (Left) - 1pc
A5  Side panel HB (Right) - 1pc	A6  Shelf panel HB - 1pc	B  Divider panel HB - 1pc
B1  Divider panel HB - 2pcs	B2  Support HB (Left) - 1pc	B3  Support HB (Right) - 1pc
B4  Upper back panel - 1pc	B5  Lower back panel - 1pc	C  Leg FB (Left) - 1pc
C1  Leg FB (Right) - 1pc	E  Slat - 4pcs	E1  Slat - 6pcs
G  Leg support - 3pcs	H  Front drawer panel - 2pcs	H1  Back drawer panel - 2pcs
H2  Left / right drawer panel - 4pcs	H3  Drawer bottom - 2pcs	

Hardware List WF324222


1  $\varnothing 10 \times 20 \text{mm}$ Wood dowel (8pcs)	2  $\varnothing 8 \times 30 \text{mm}$ Wood dowel (34pcs)	3  $(\varnothing 15) 1/4" \times 80 \text{mm}$ Hex-Head bolts (2pcs)
4  $(\varnothing 12) 1/4" \times 70 \text{mm}$ Hex-Head bolts (8pcs)	5  $(\varnothing 12) 1/4" \times 60 \text{mm}$ Hex-Head bolts (38pcs)	6  $(\varnothing 12) 1/4" \times 40 \text{mm}$ Hex-Head bolts (6pcs)
7  $1/4" \times 15 (9.5 \text{mm})$ Horizontal-Hole bolts (48pcs)	8  $(\varnothing 12) 1/4" \times 40 \text{mm}$ Hex-Head bolts (8pcs)	9  $(1/4") 4.5 \times 58 \text{mm}$ Allen key (1pc)
10  $\varnothing 4 \times 30 \text{mm}$ Wood screws (46pcs)	11  $\varnothing 3.5 \times 15 \text{mm}$ Wood screws (20pcs)	12  $100 \times 54 \times 20 \text{mm}$ Wheels (8pcs)
13  $70 \times 50 \times 19 \text{mm}$ Drawer stopper (3pcs)		


ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)





PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !


STEP 1:

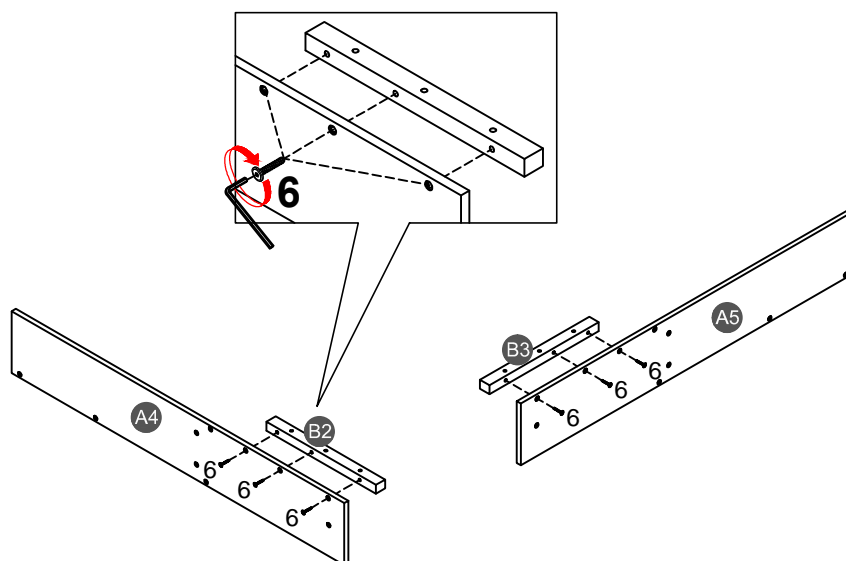6	
6PCS	




STEP 2:


5		7	
10PCS		10PCS	

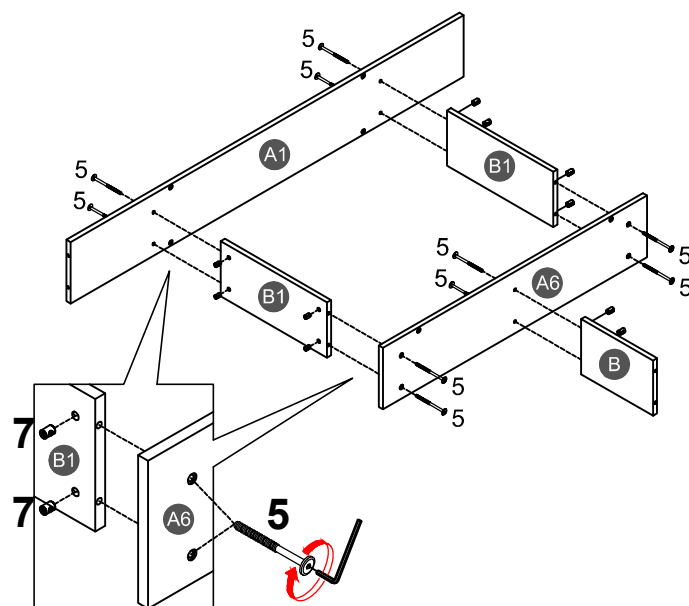


STEP 3:

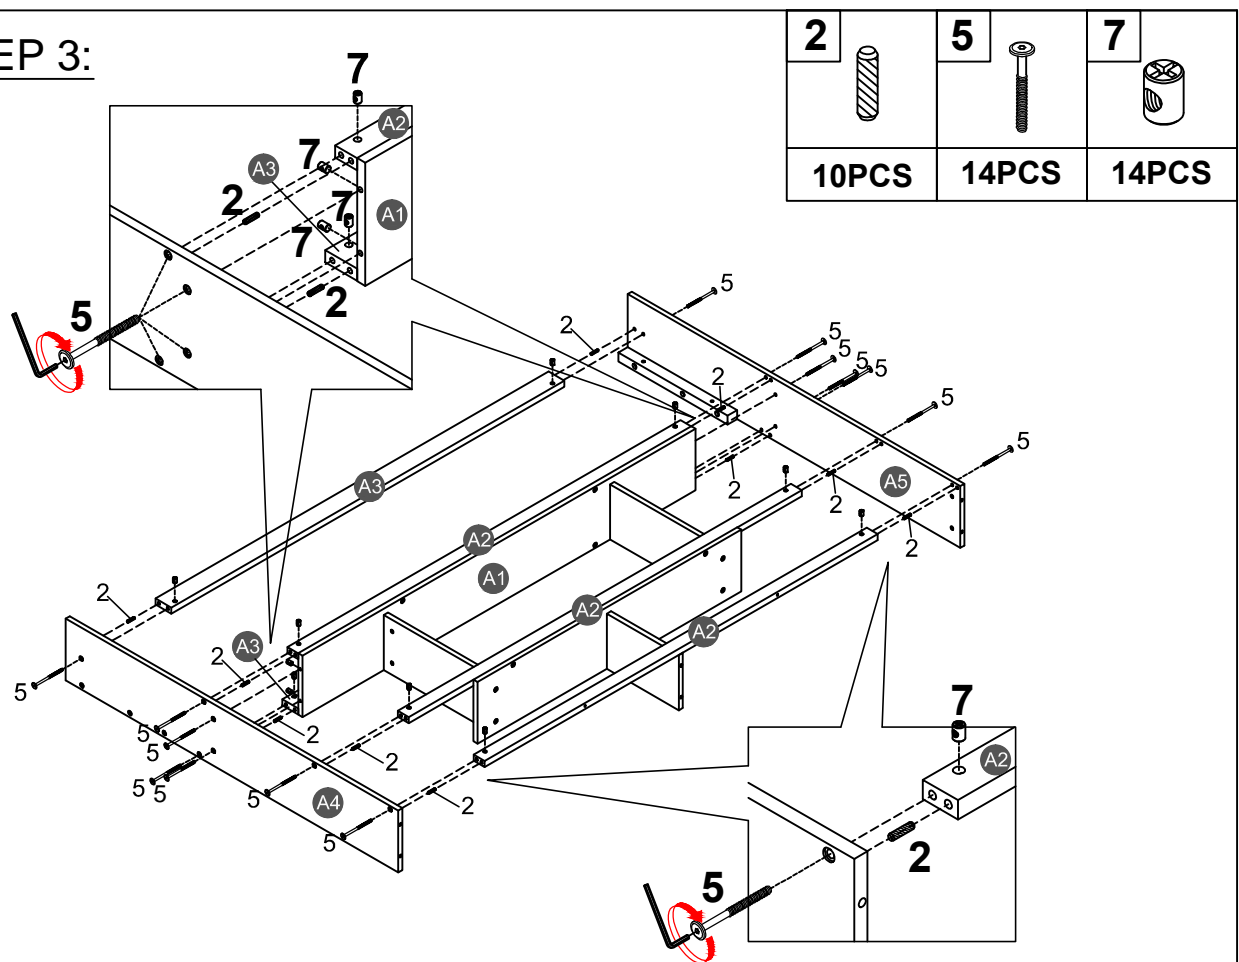

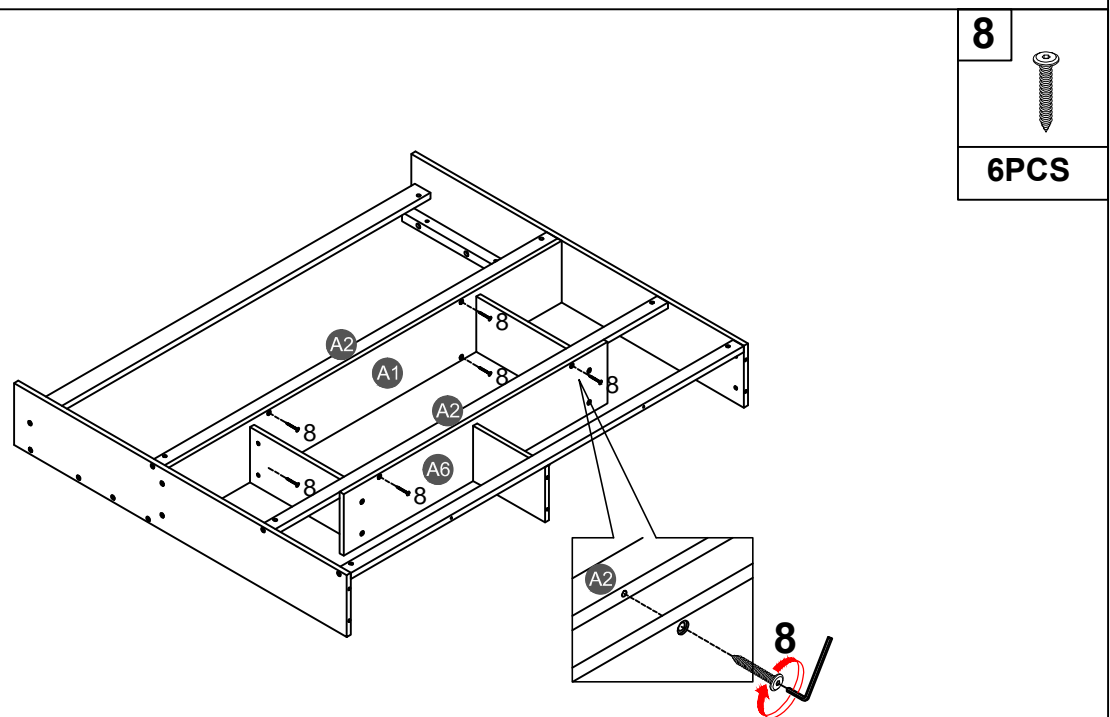


STEP 4:

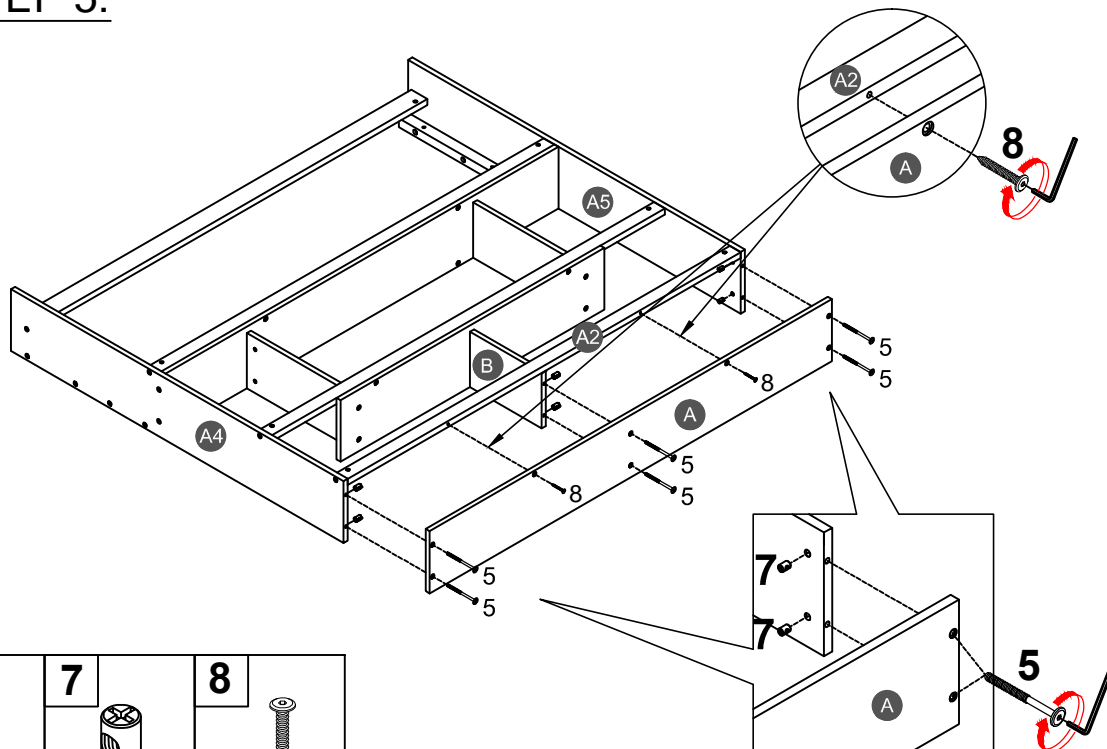



STEP 5:




5		7		8	
6PCS		6PCS		2PCS	

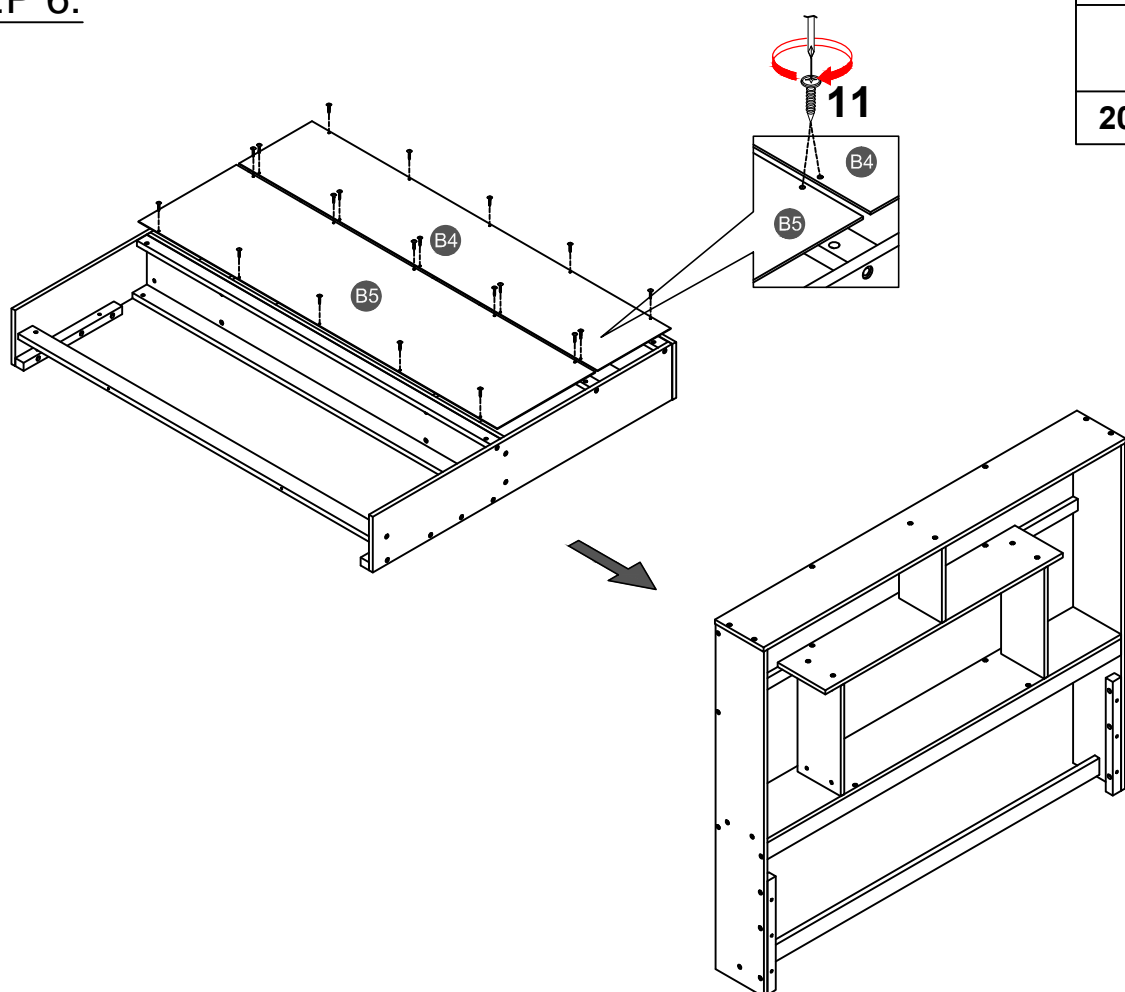

STEP 6:




11	
20PCS	

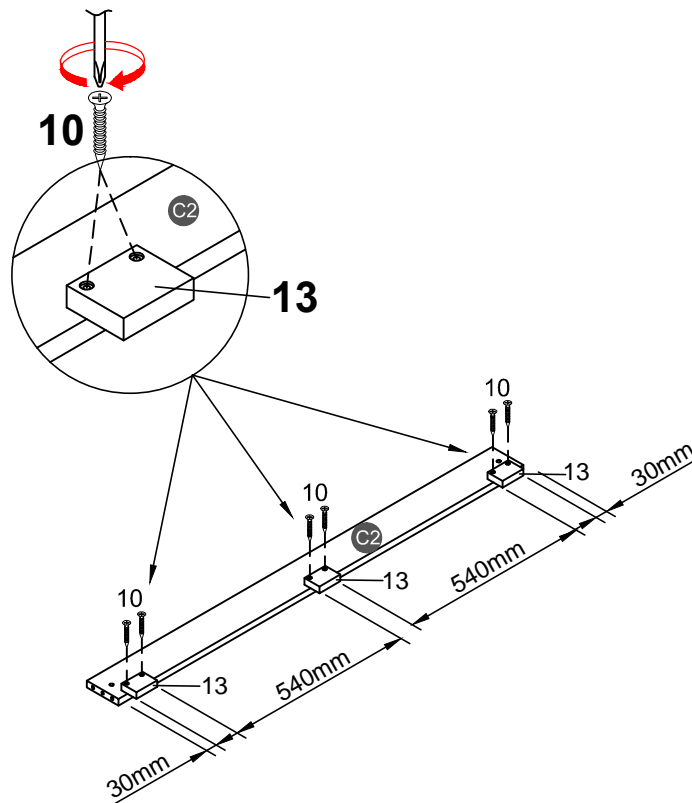


STEP 7:




10		13	
6PCS		3PCS	

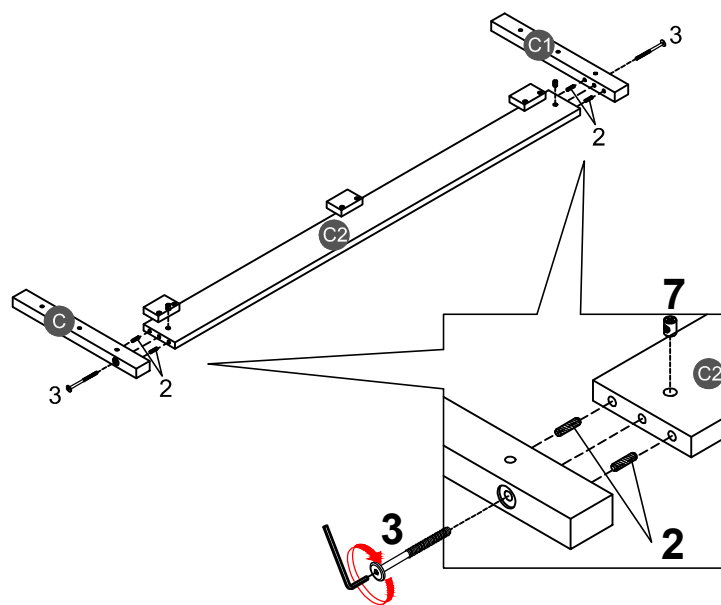STEP 8:




2		3		7	
4PCS		2PCS		2PCS	

STEP 9:

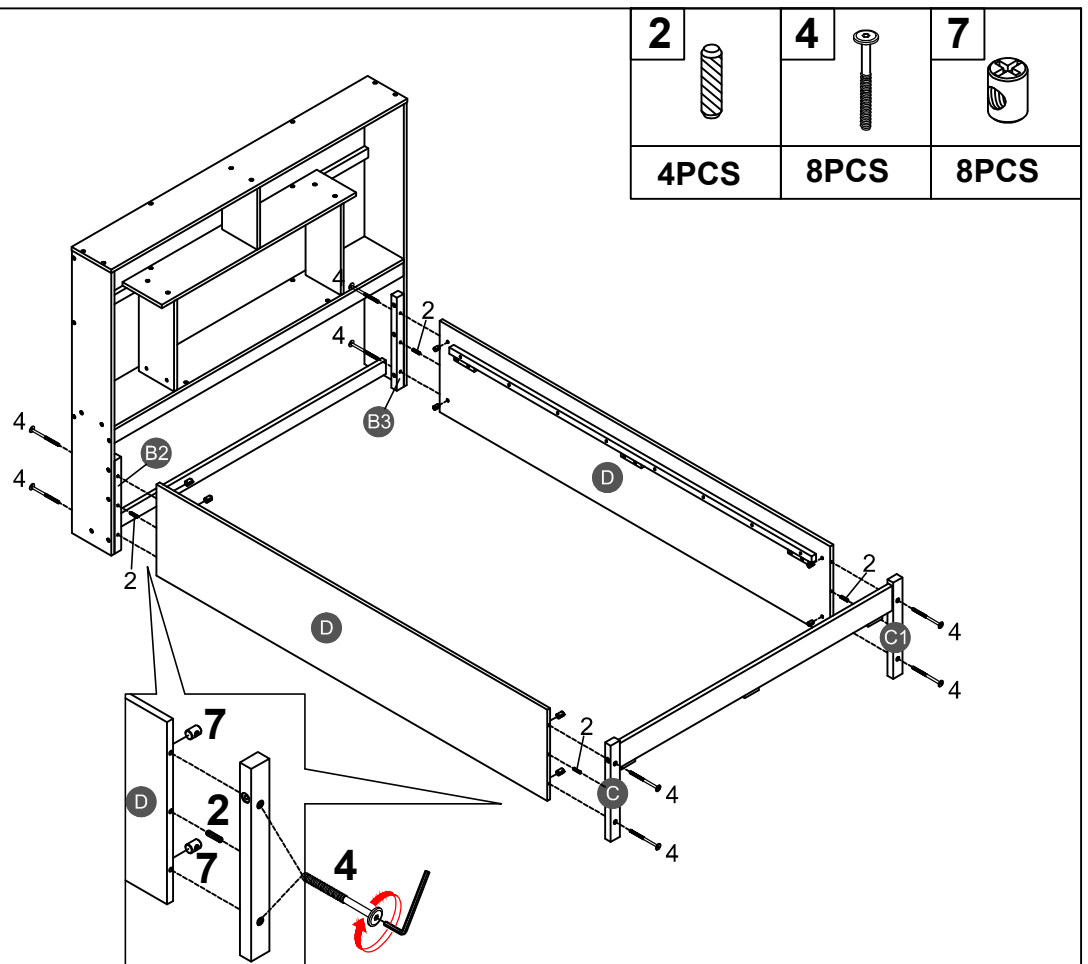


STEP 10:

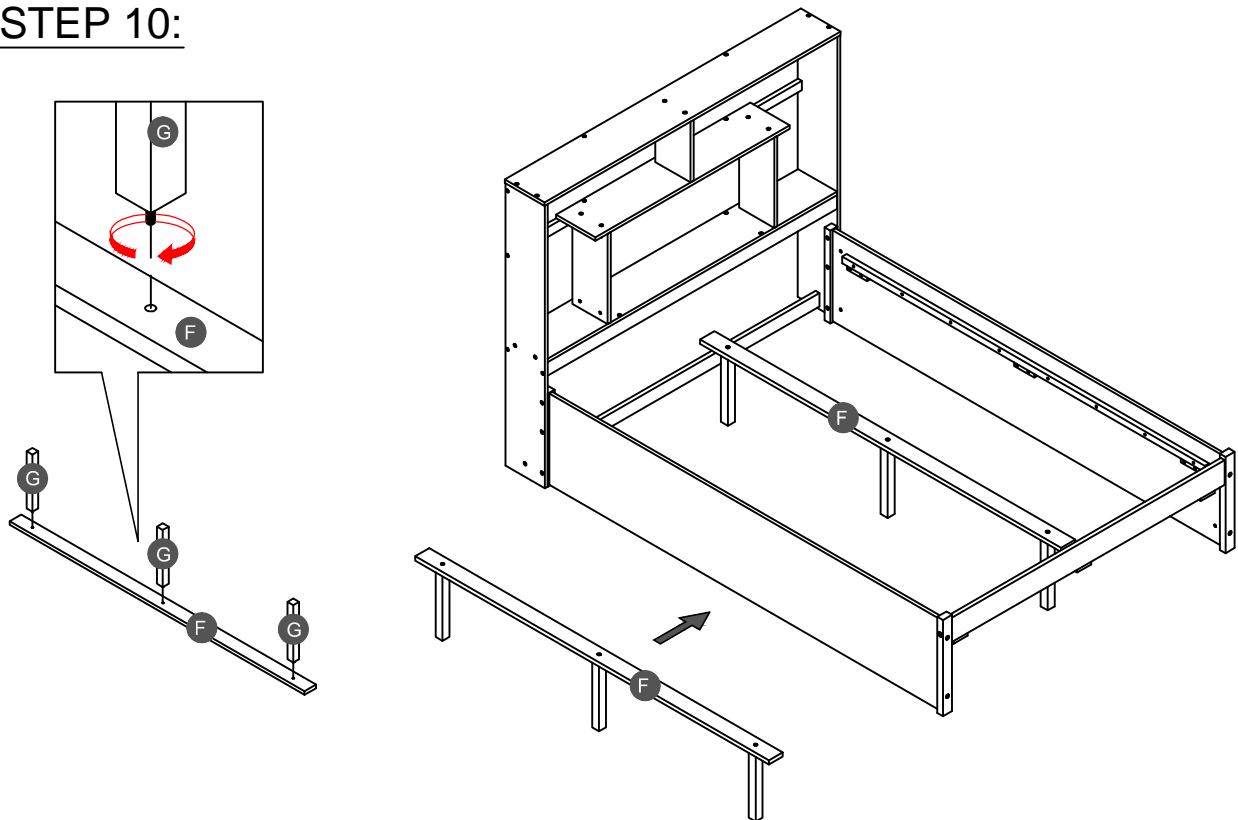


Assembling leg support (G) with lower support slat (F) later rotate, Move support slat inside Full bed.

STEP 11:

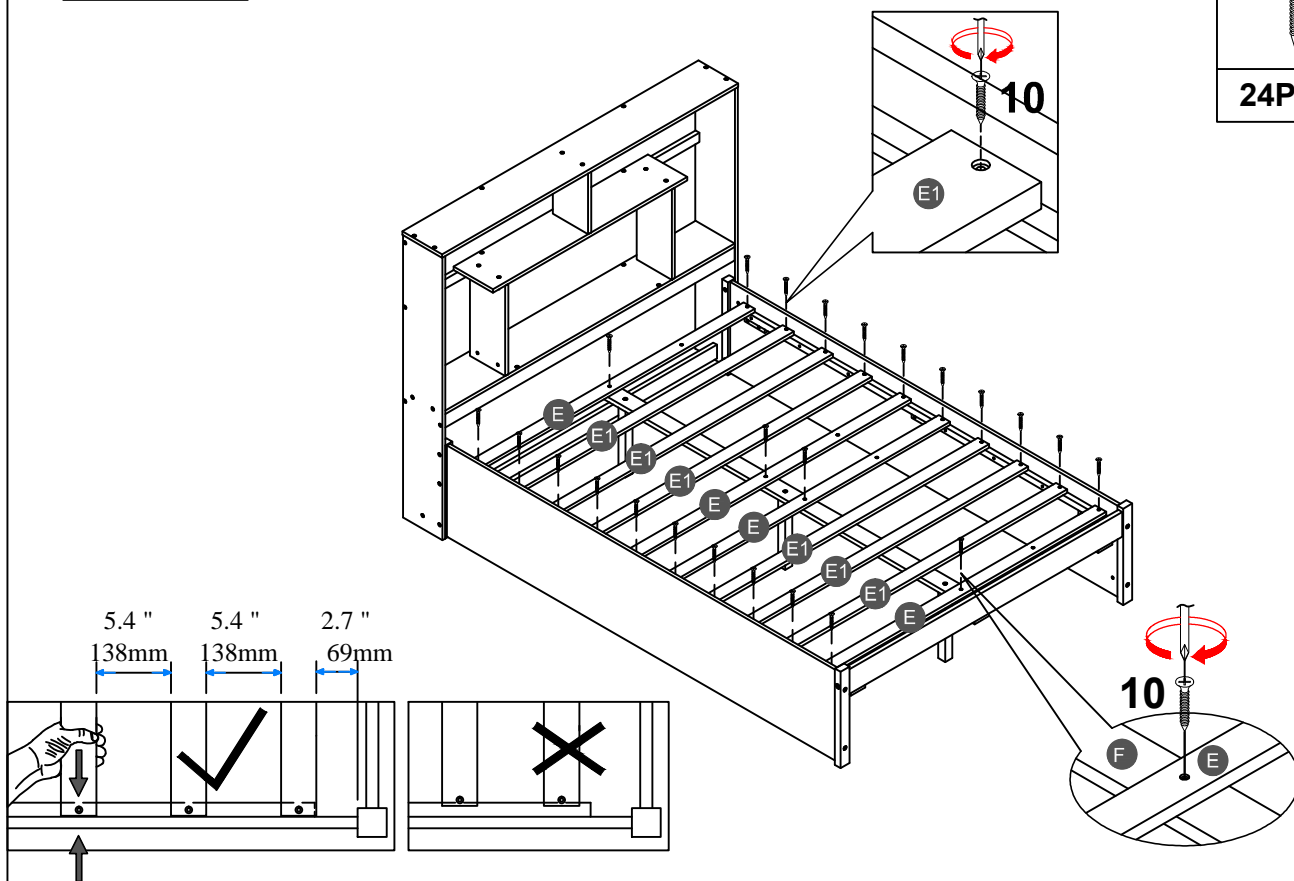




NOTE: Please make sure the bed slats close to the side rail before locking the screws to avoid breakage. This step is required for both the left and right sides. Moreover, please do not lock the screws of the bed slats at the outermost edge to avoid damaging.

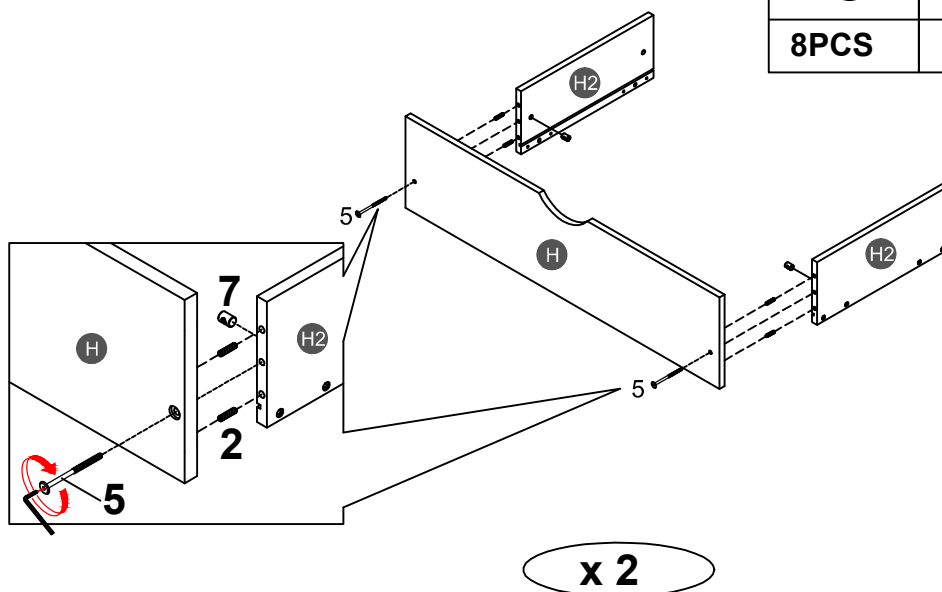


STEP 12:




x 2




2		5		7	
8PCS		4PCS		4PCS	


STEP 13:

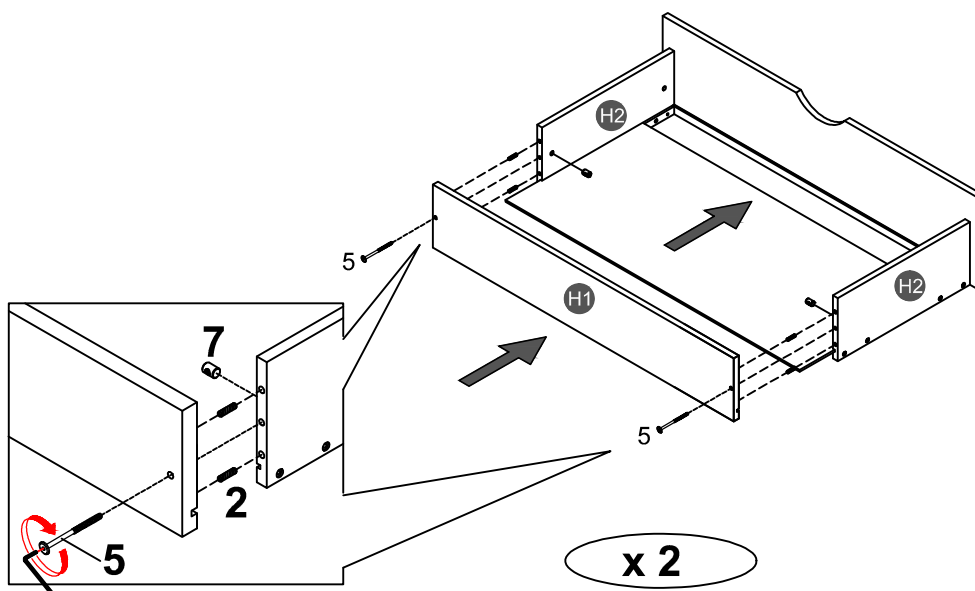2		5		7	
8PCS		4PCS		4PCS	




STEP 14:

1		10	
8PCS		16PCS	
		12	
		8PCS	

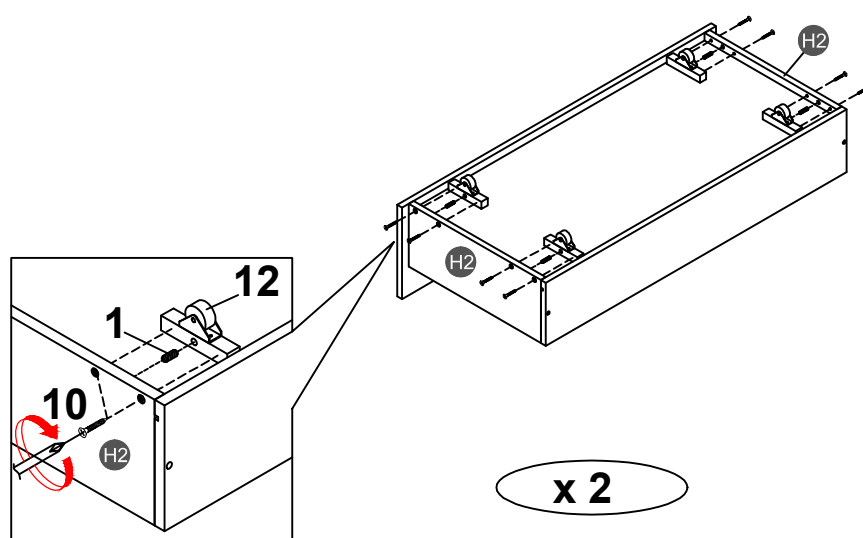

STEP 15:

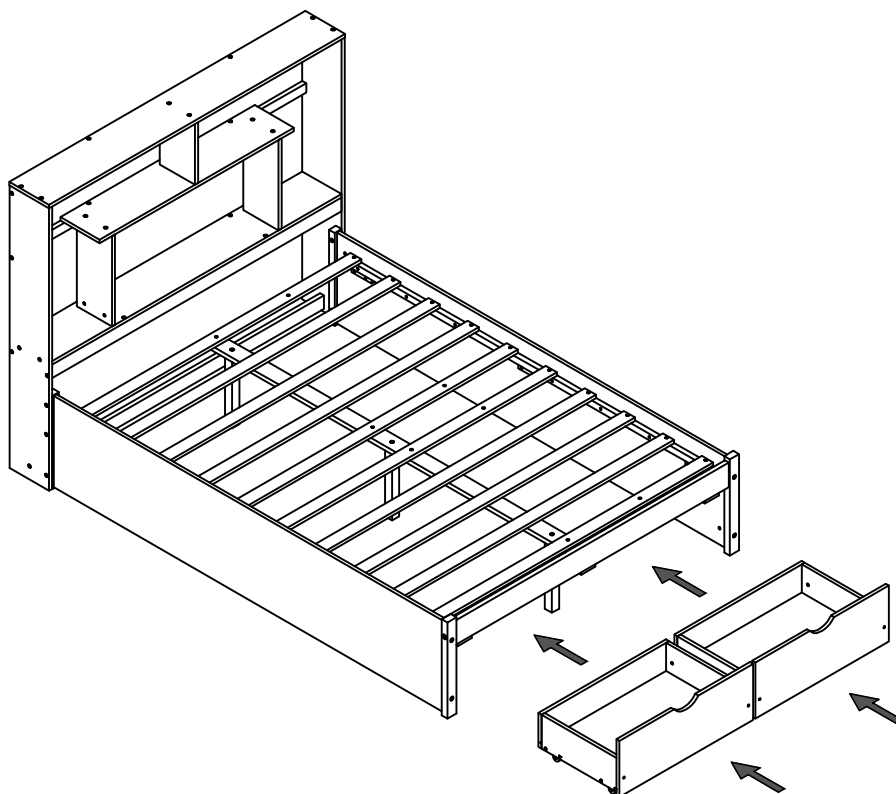

Push Drawers under the bottom of Full bed.

