



ASSEMBLY INSTRUCTIONS




<<Before assembling, read all instructions>>

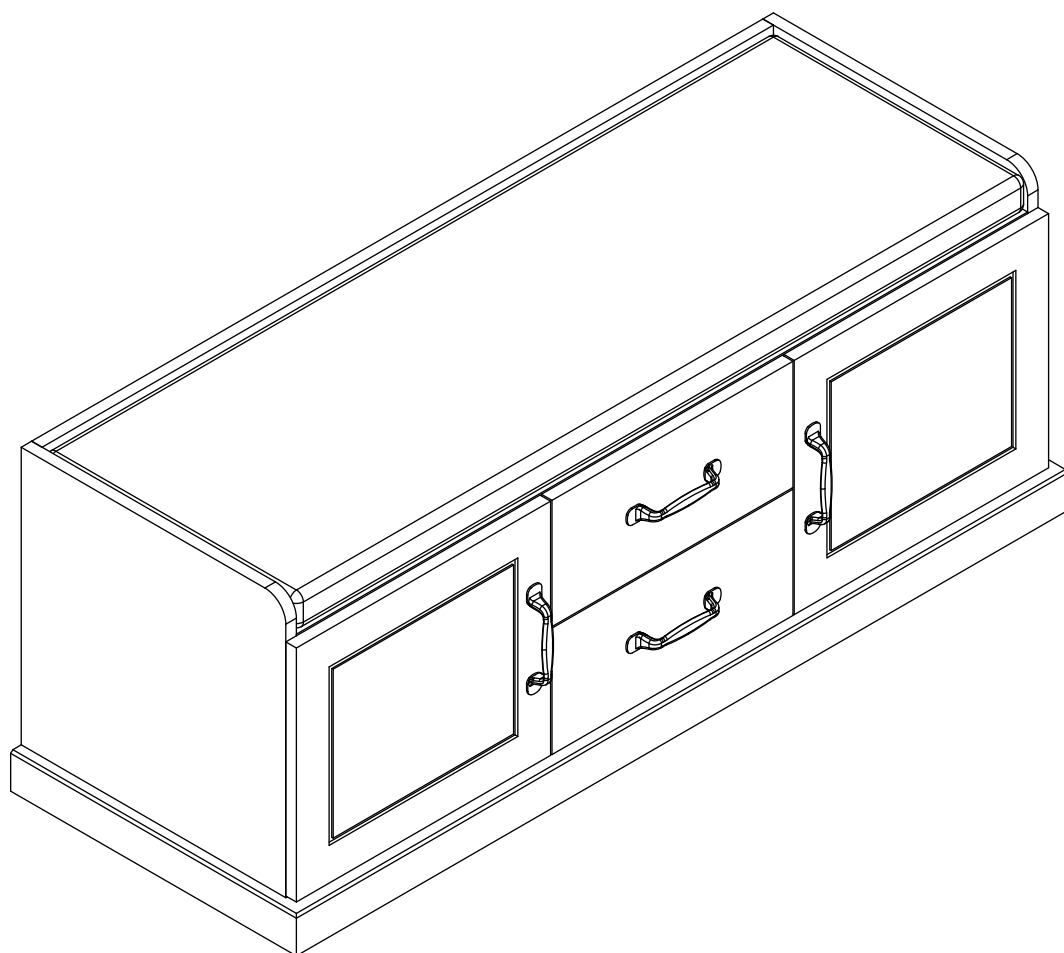



Exploded View

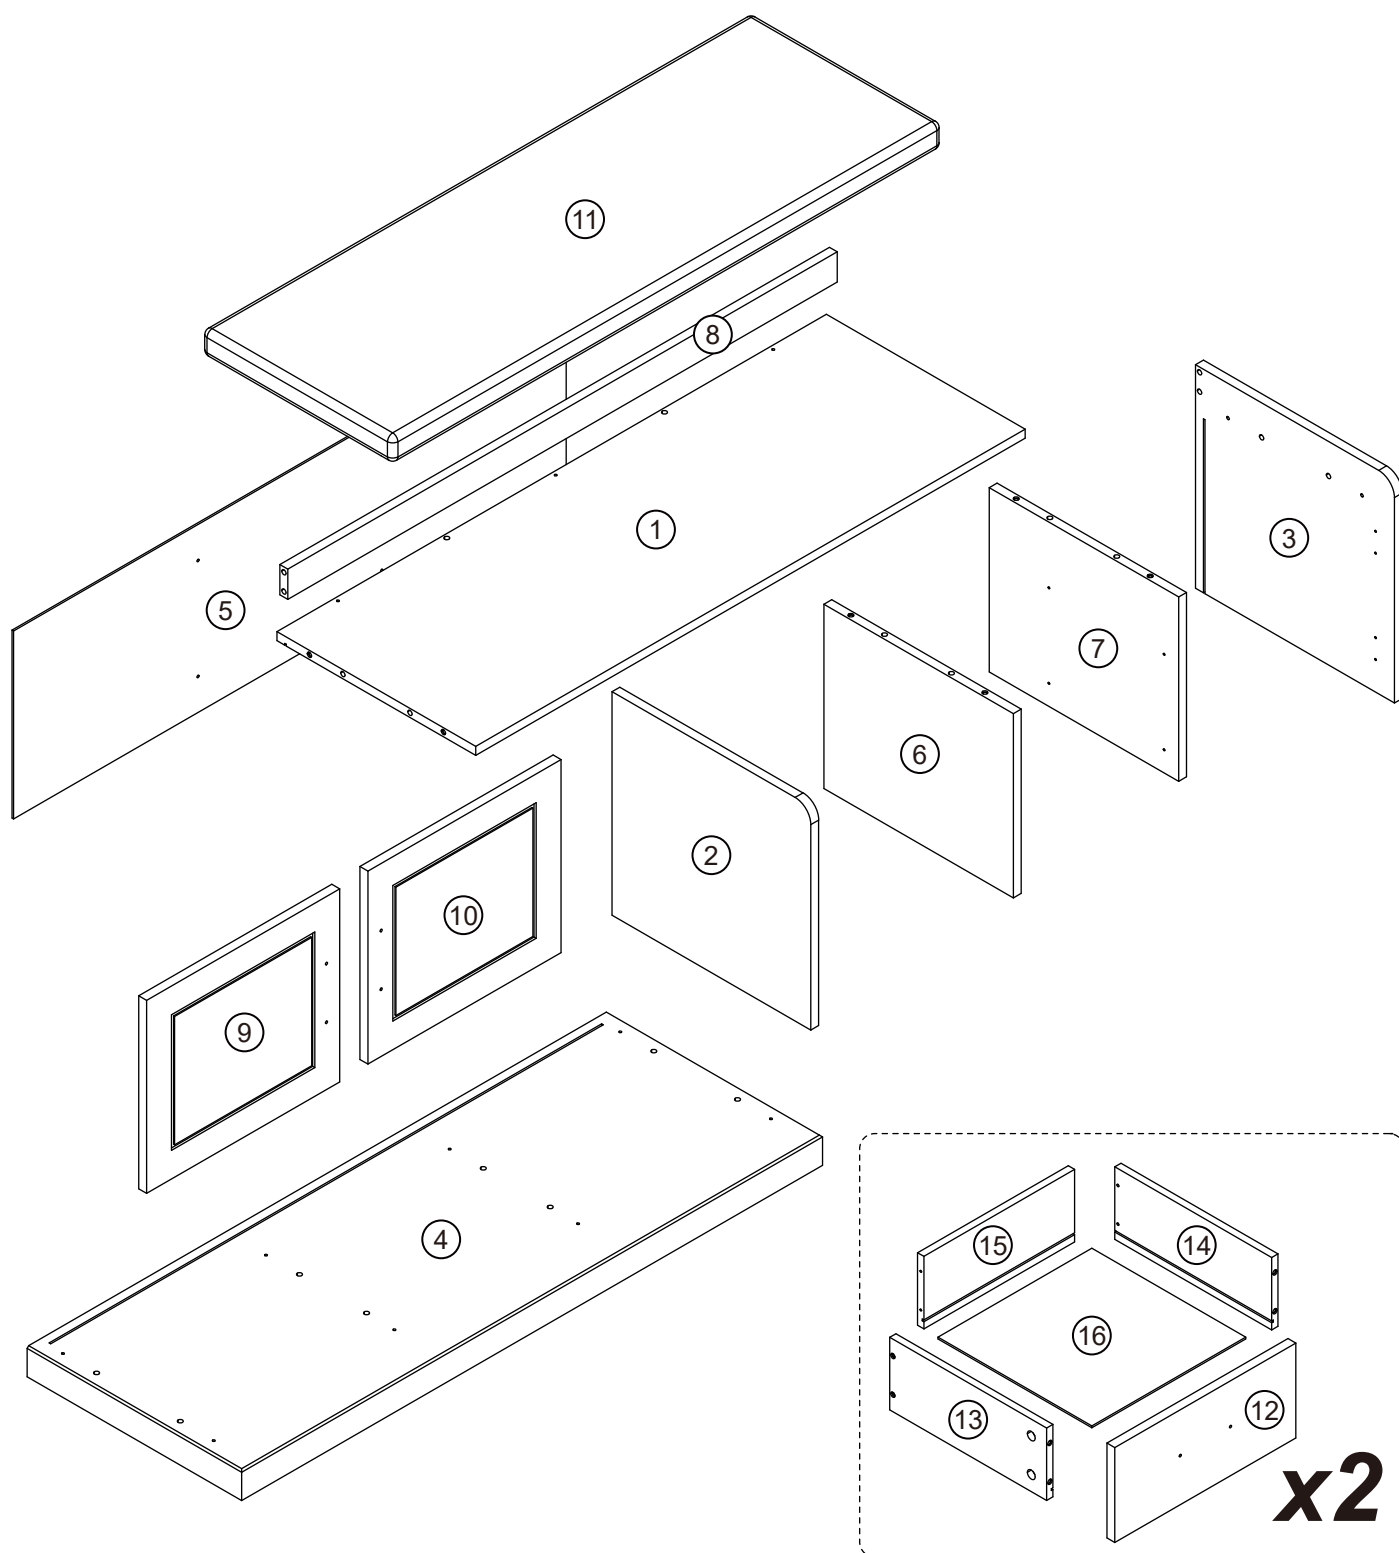




Fittings

 A x 16 M6 x 35 mm	 B x 16 φ15 x 9.5 mm	 C x 22 φ8 x 30 mm	 D x 19 φ4 x 35 mm	 E x 4
 F x 8 M4 x 12 mm	 G x 4	 H x 8 φ3.5 x 14 mm	 I x 4 φ3 x 12 mm	 J x 16 φ3.5 x 12 mm
 K x 8 M4 x 12 mm	 CL x 2 300 mm	 CR x 2 300 mm	 DL x 2 300 mm	 DR x 2 300 mm



Step 1

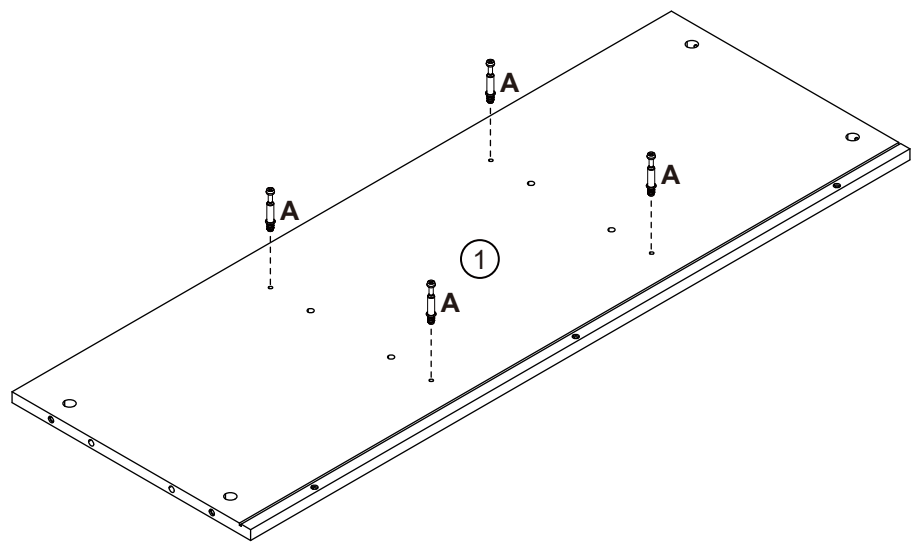






Step 2

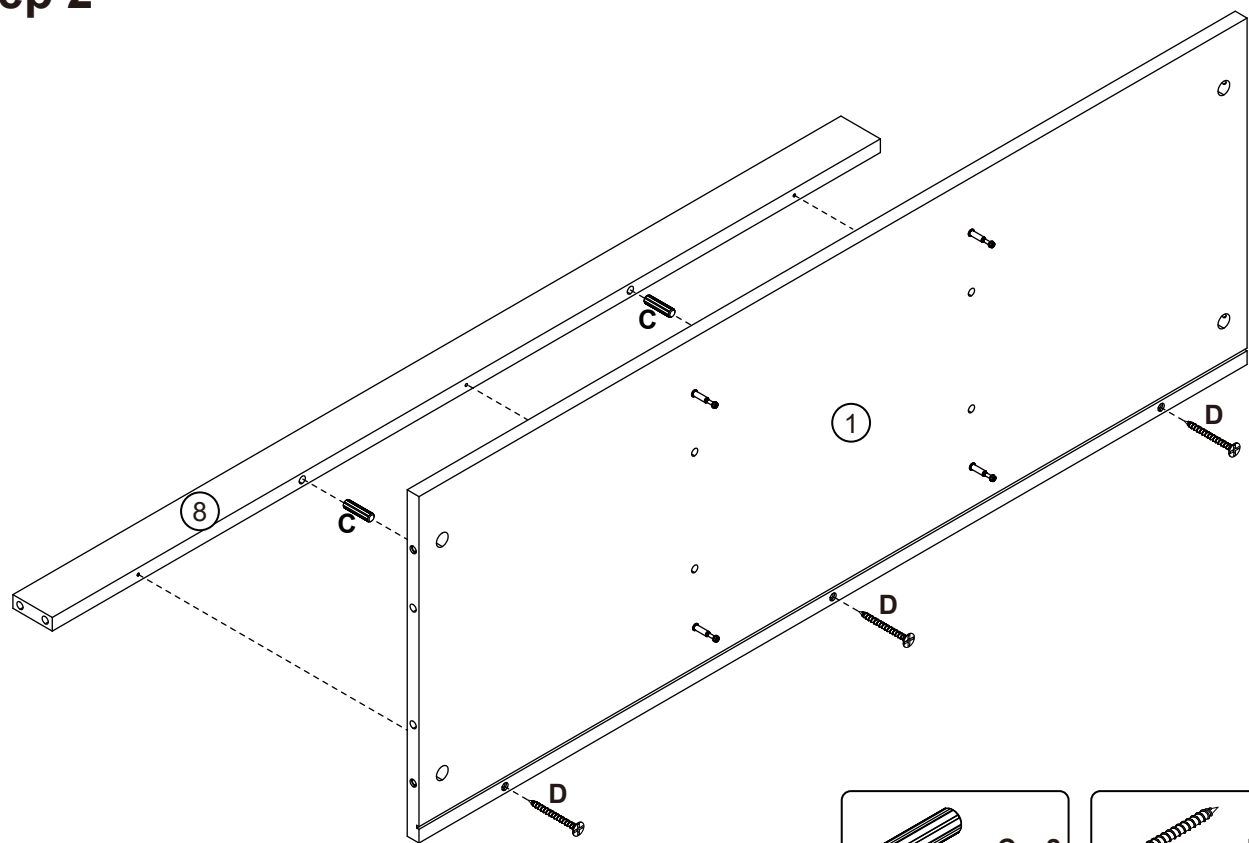




Step 3

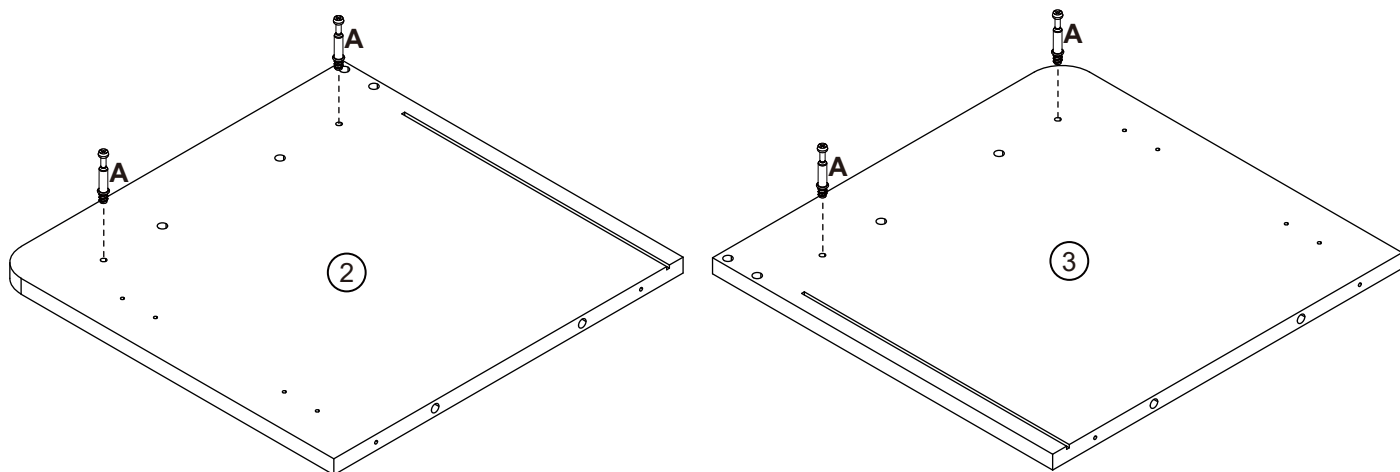







Step 4

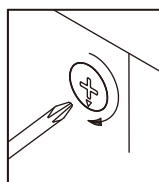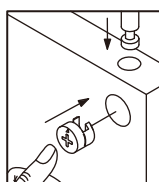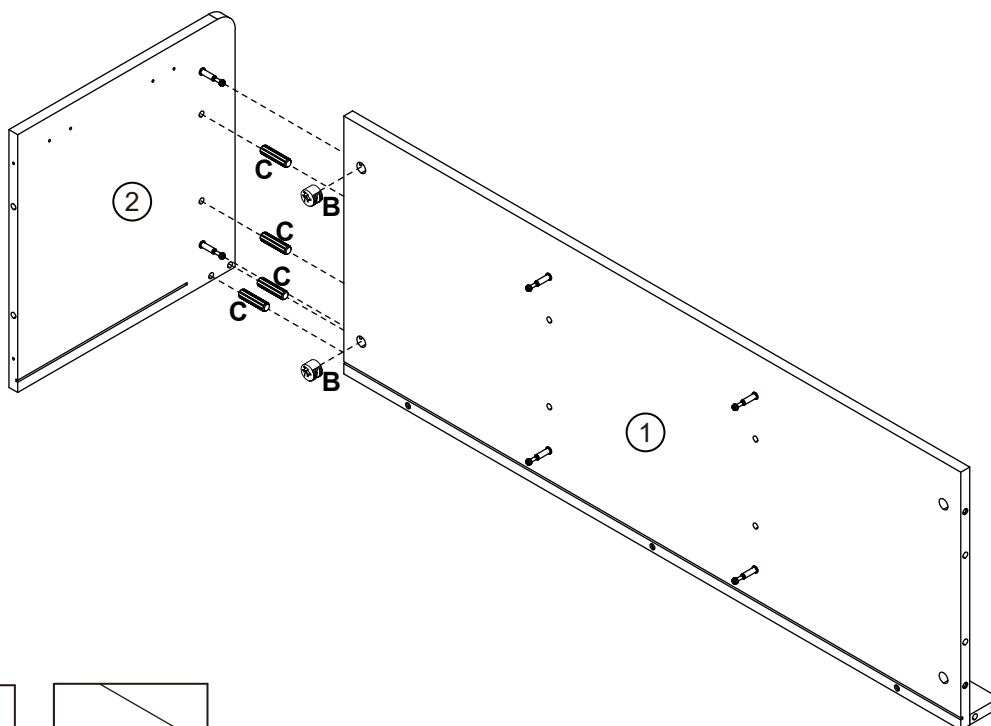



Step 5

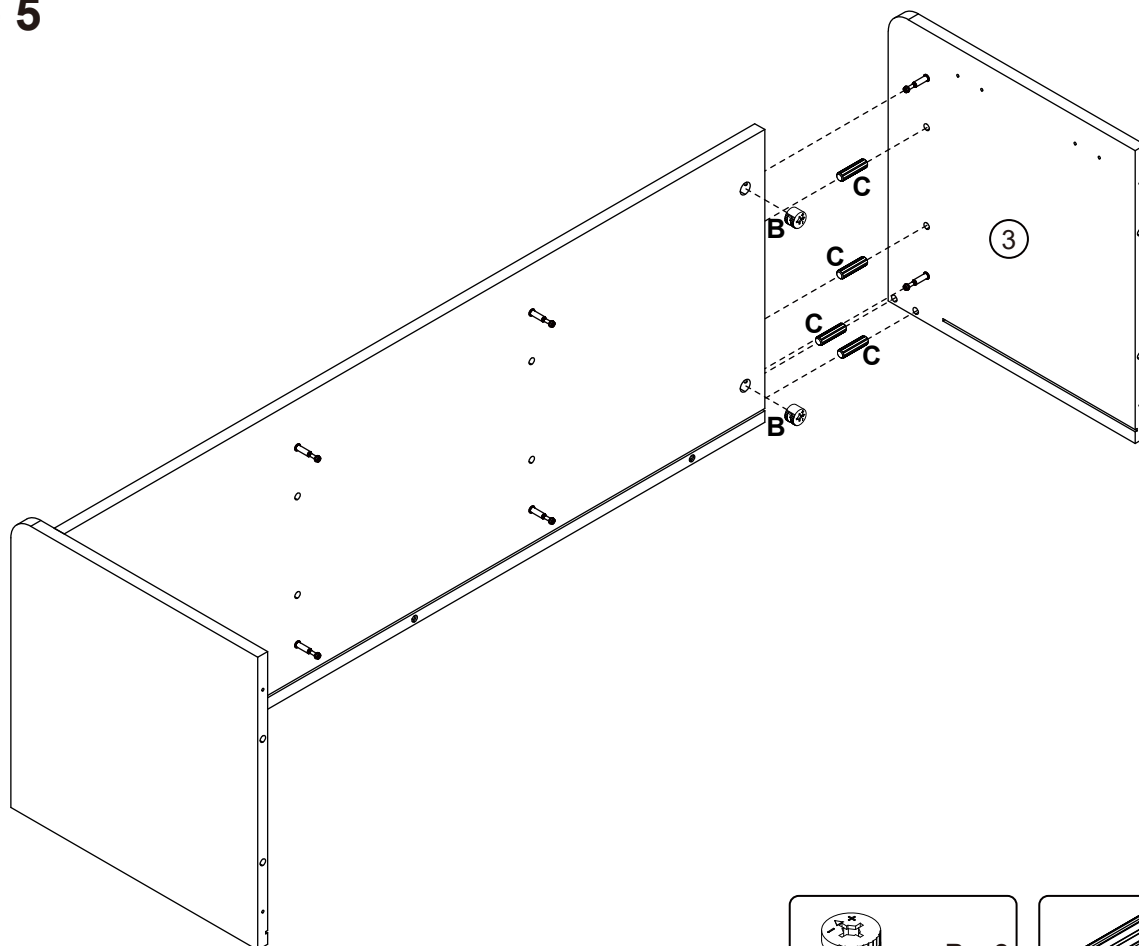


Step 6

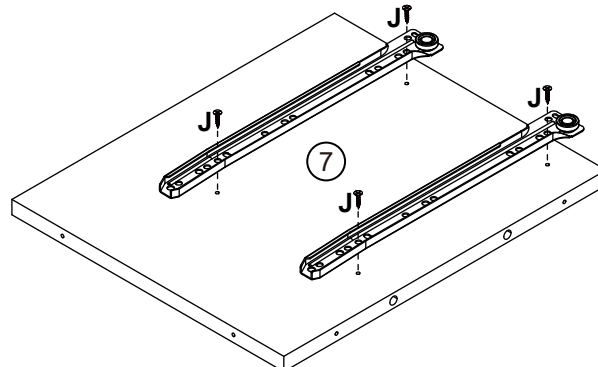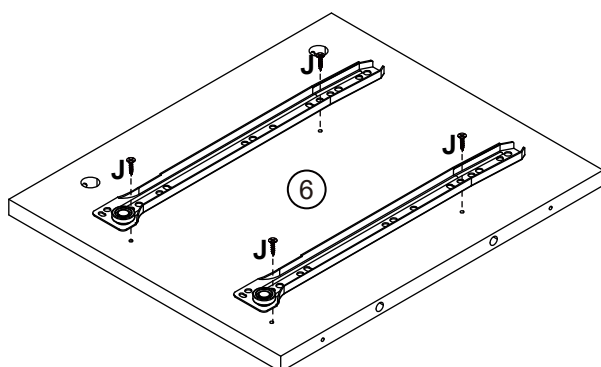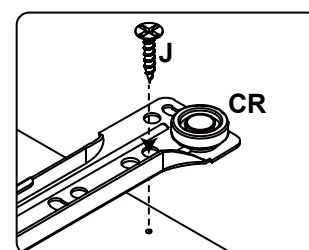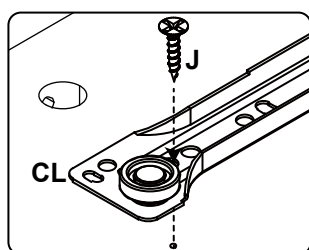


Step 7

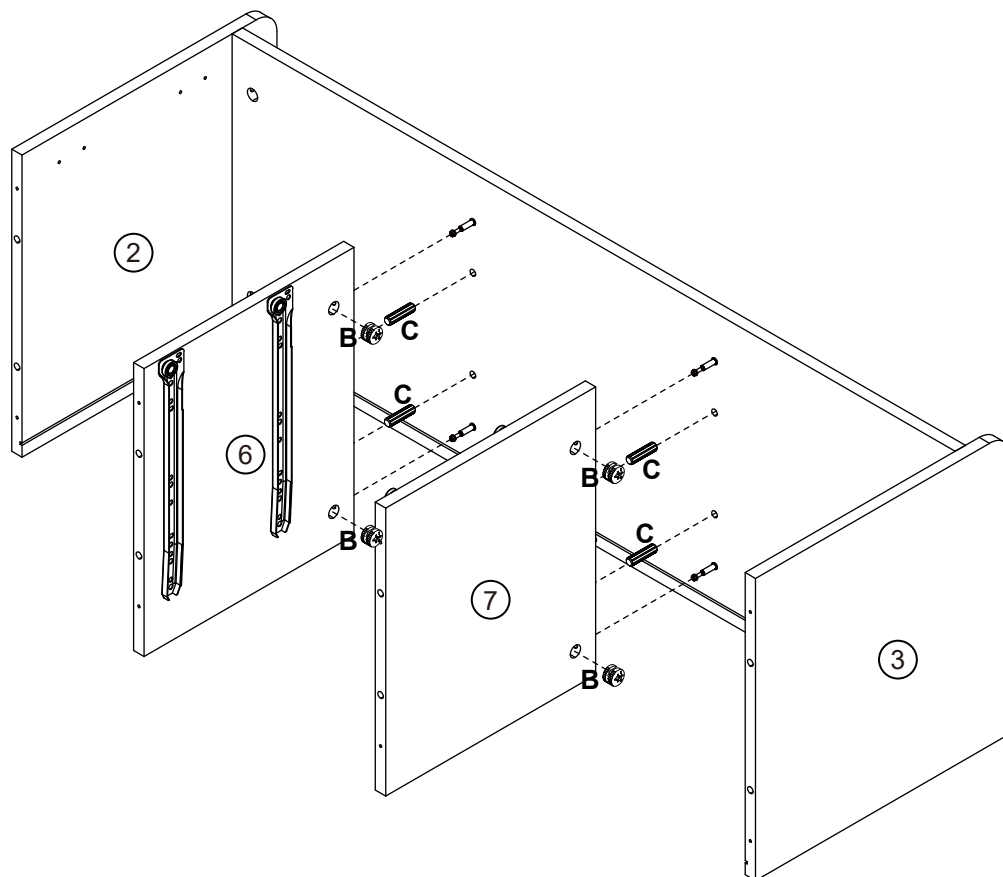


Step 8

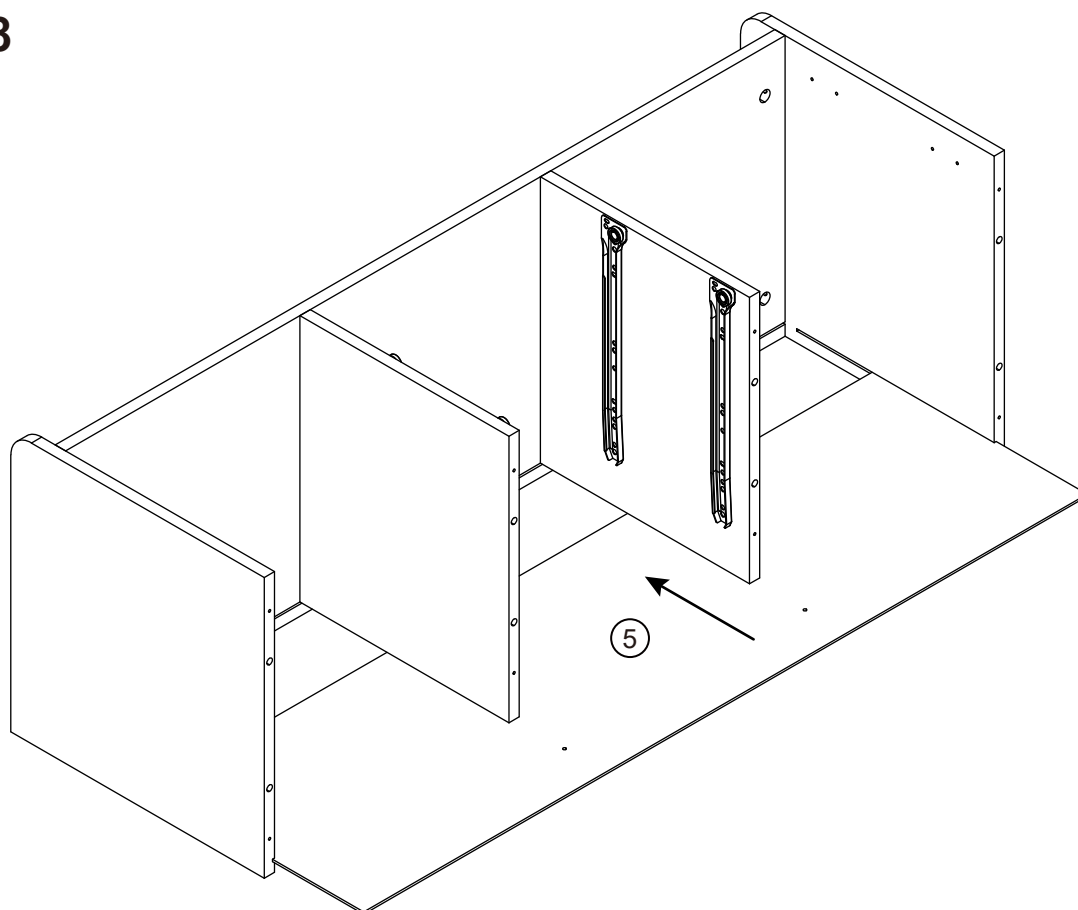






Step 9

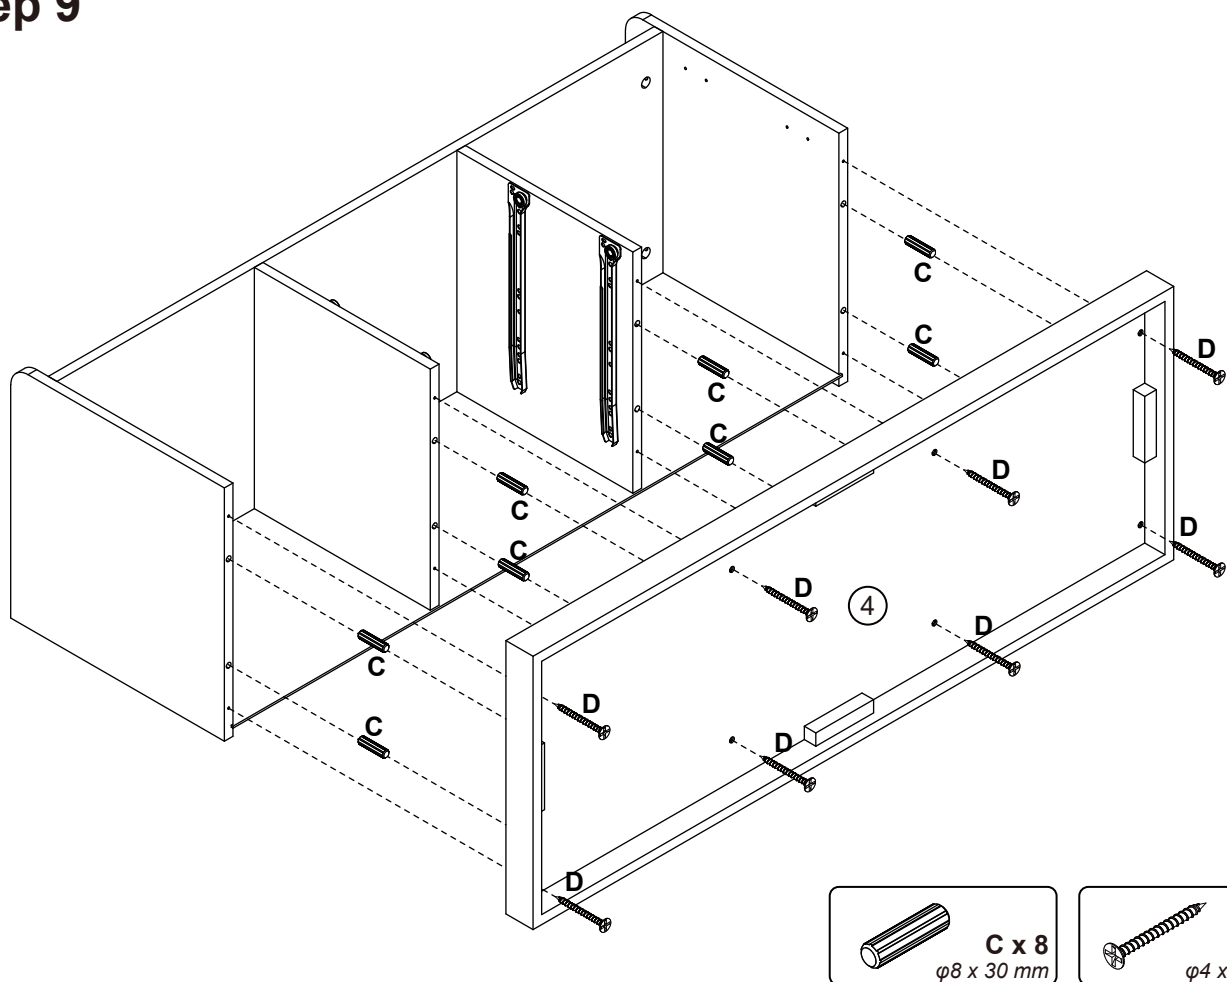



Step 10

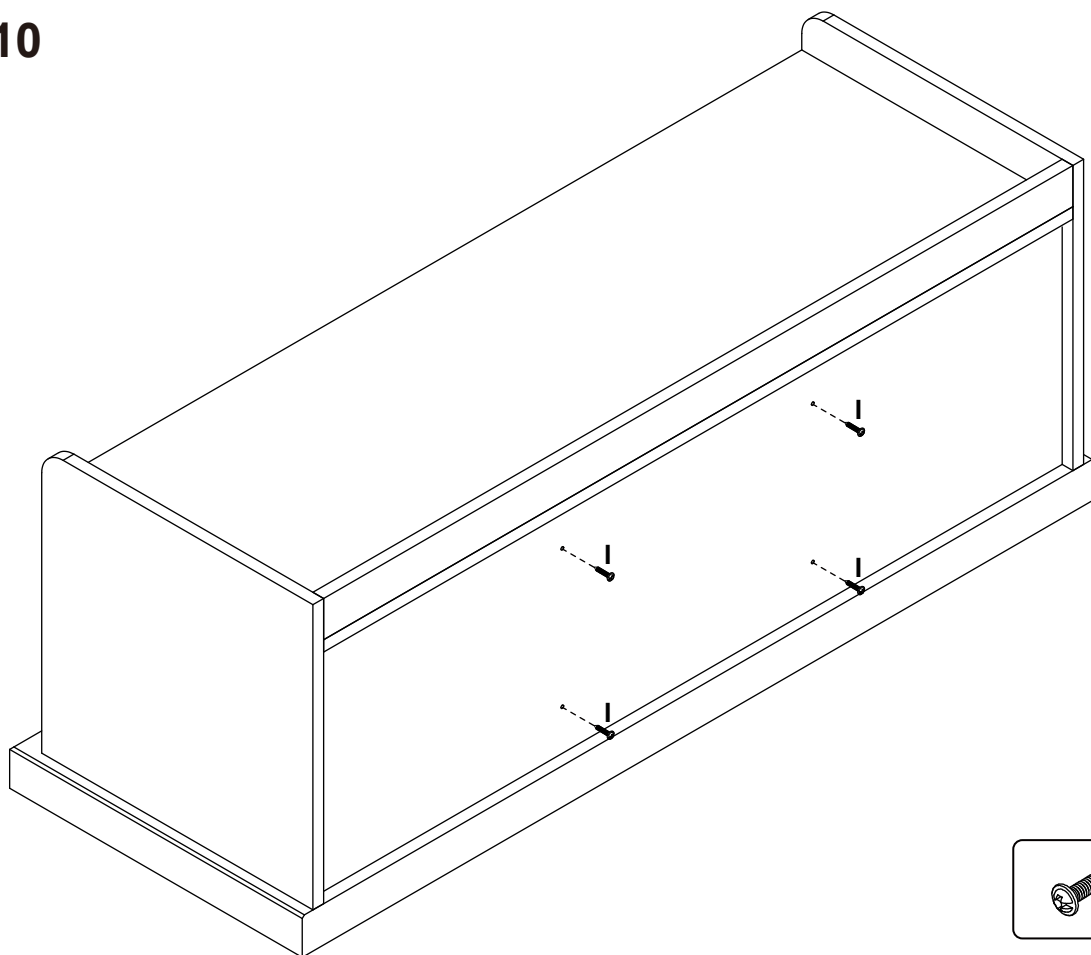


Step 11

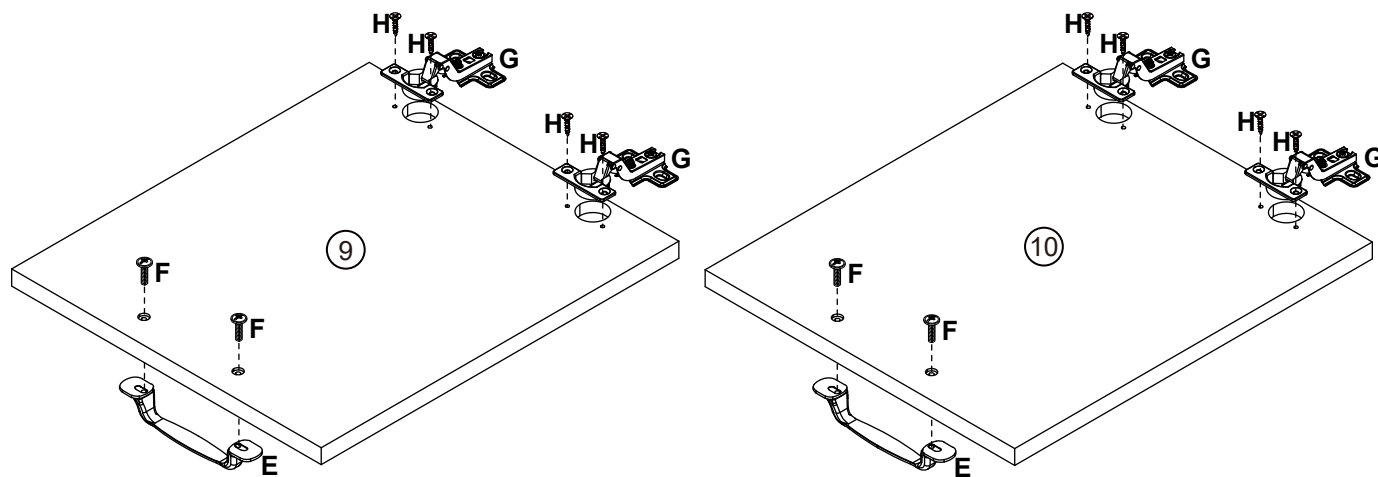

Step 12

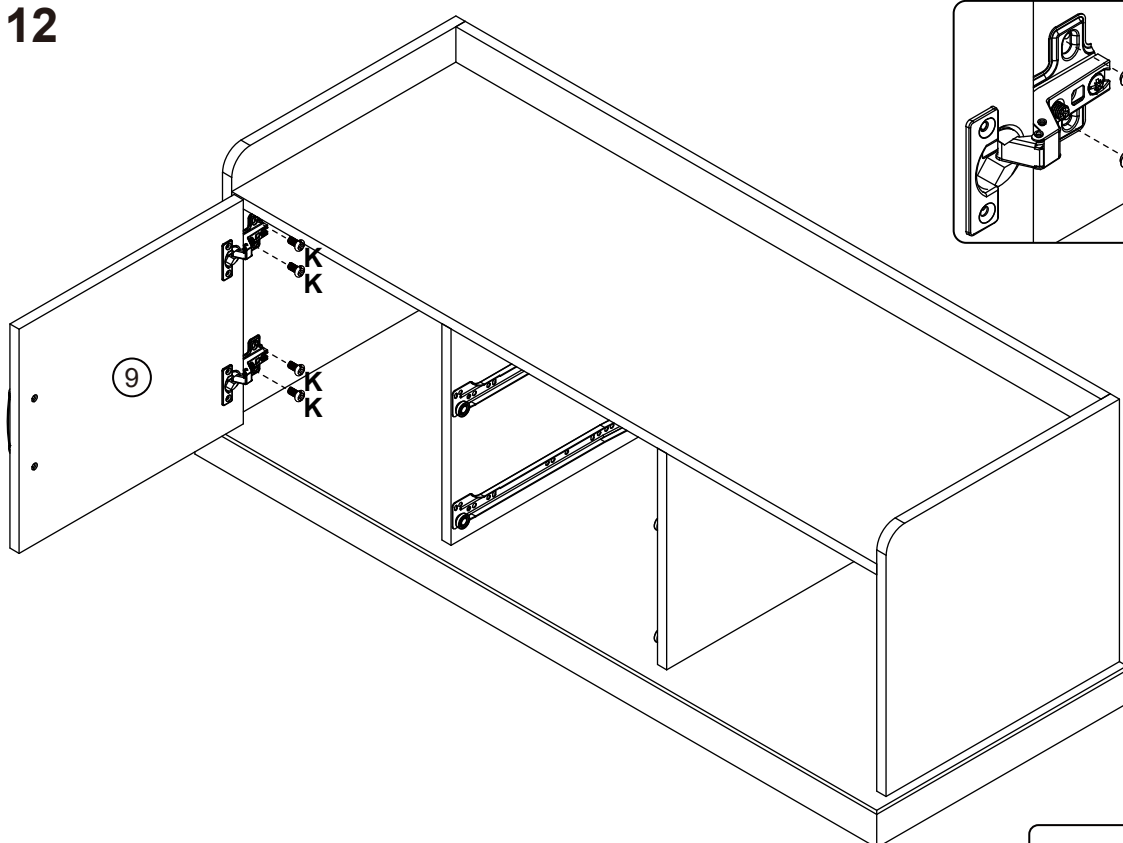


Step 13

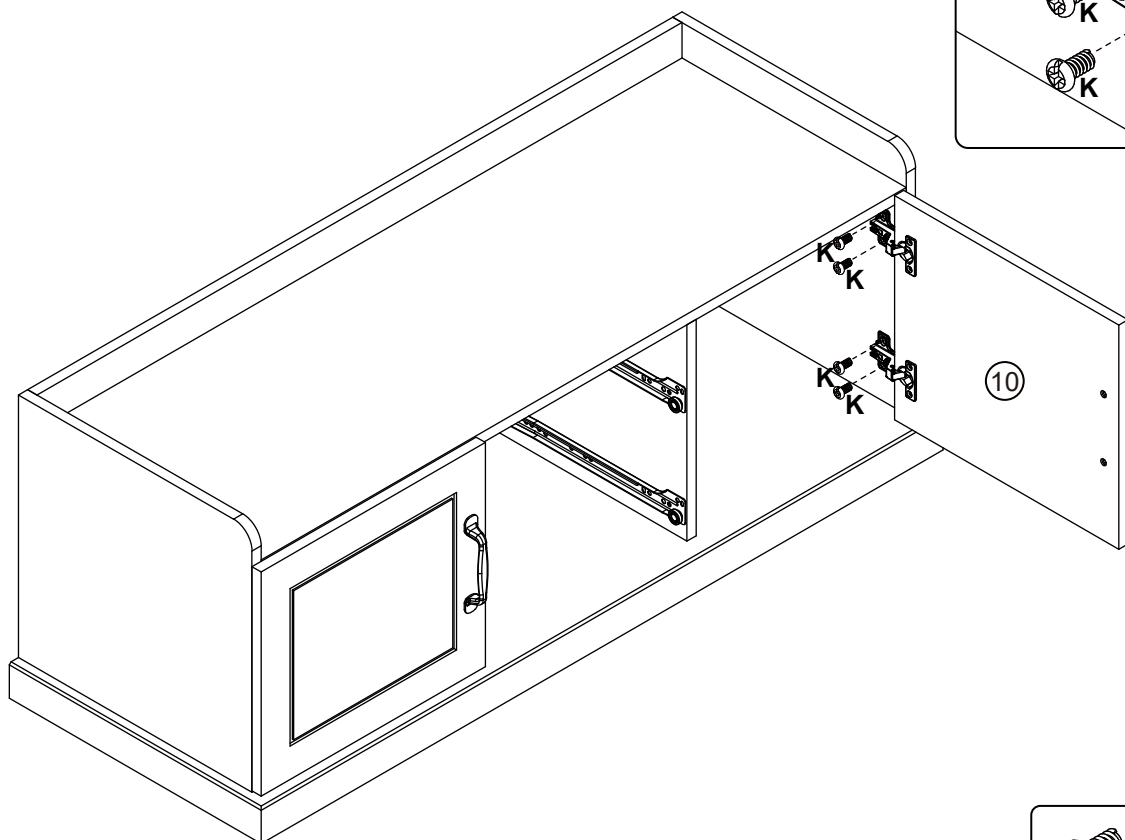

K x 4
M4 x 12 mm

Step 14

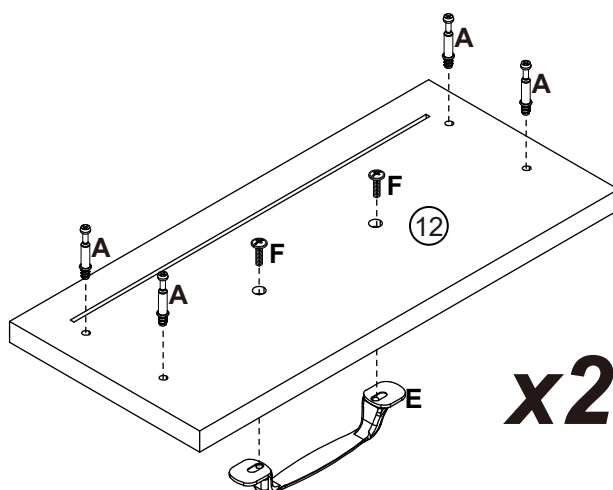

A x 8
M6 x 35 mm





F x 4
M4 x 12 mm




E x 2



Step 15

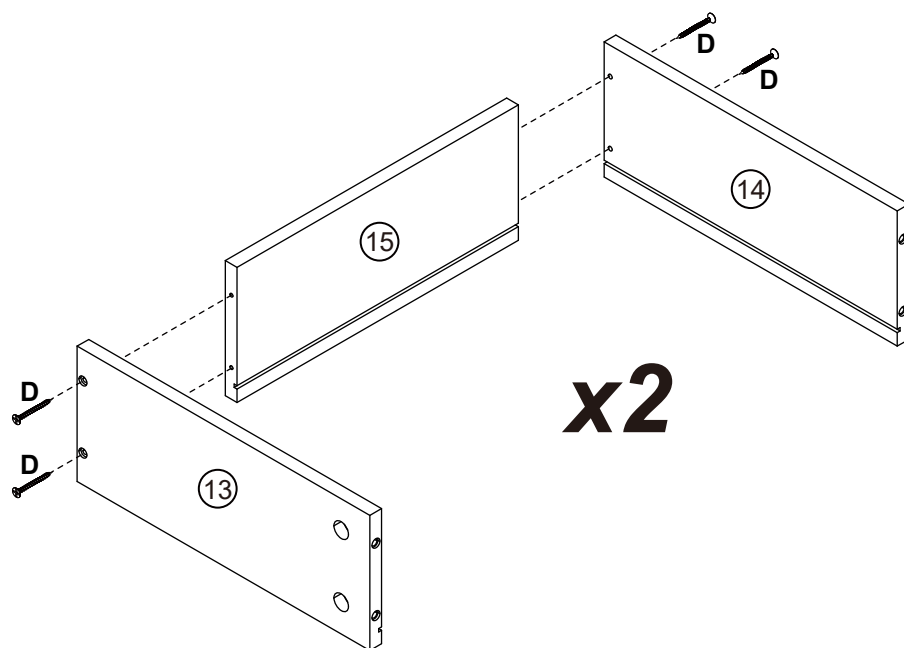






Step 16

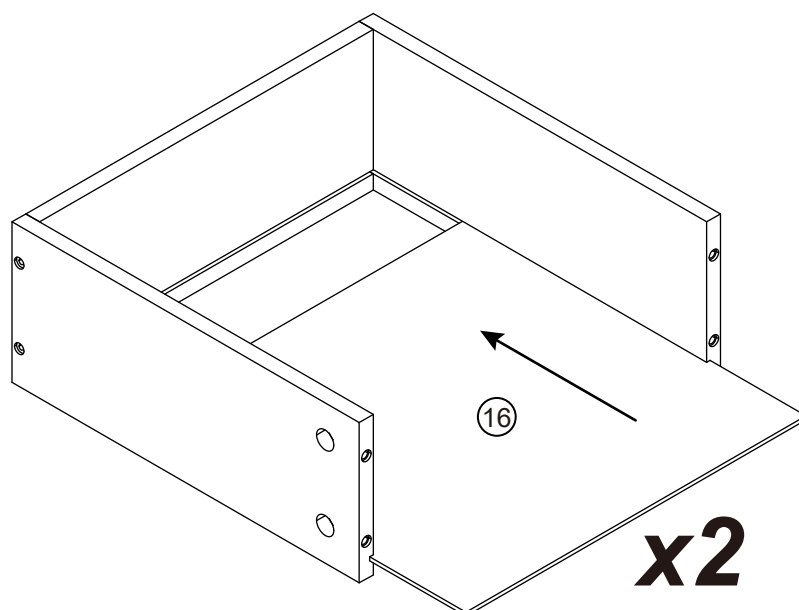


Step 17

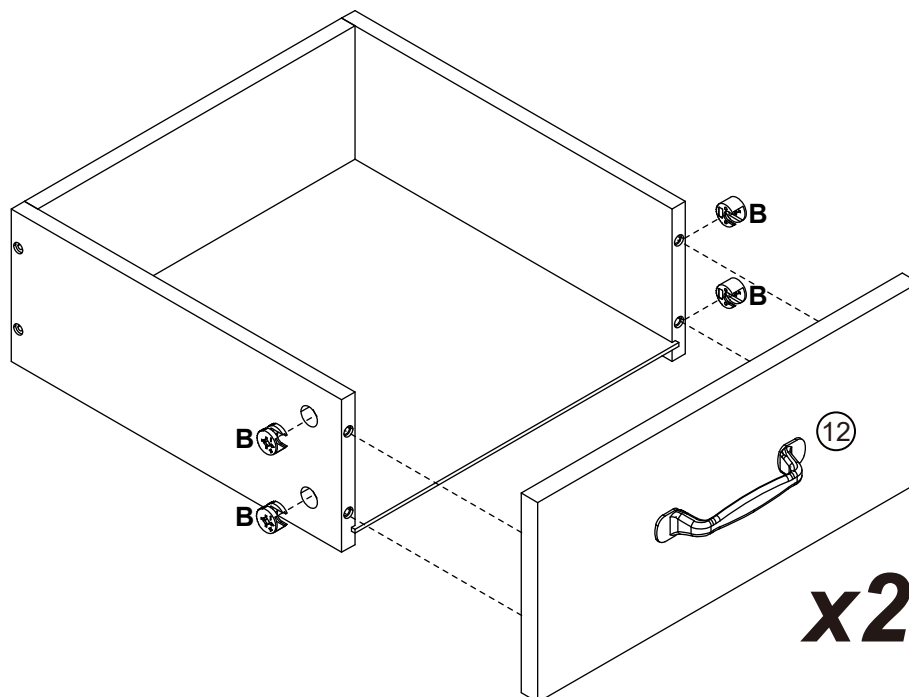

Step 18

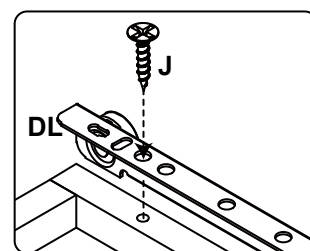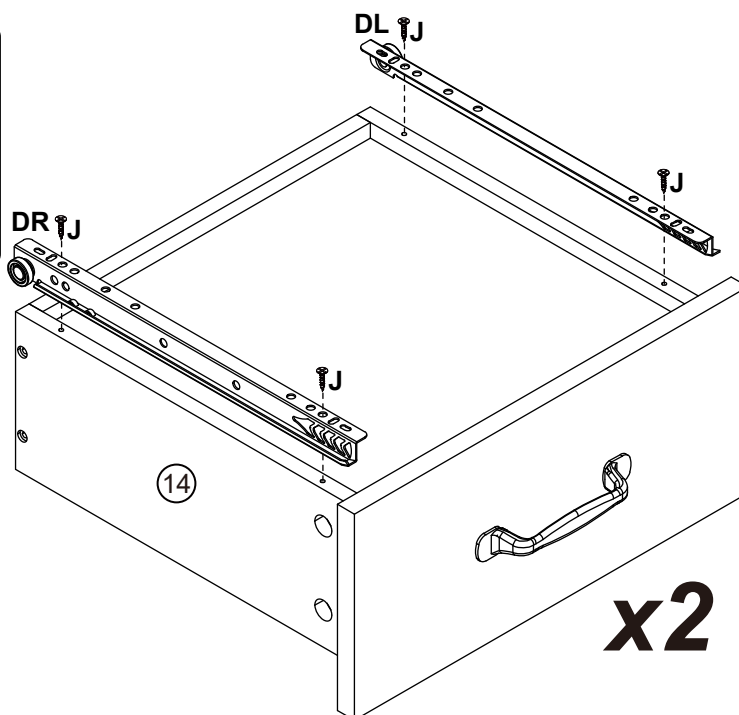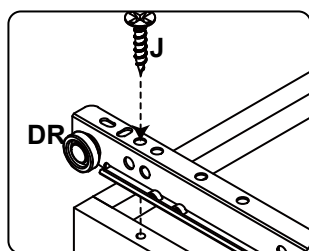

Step 19

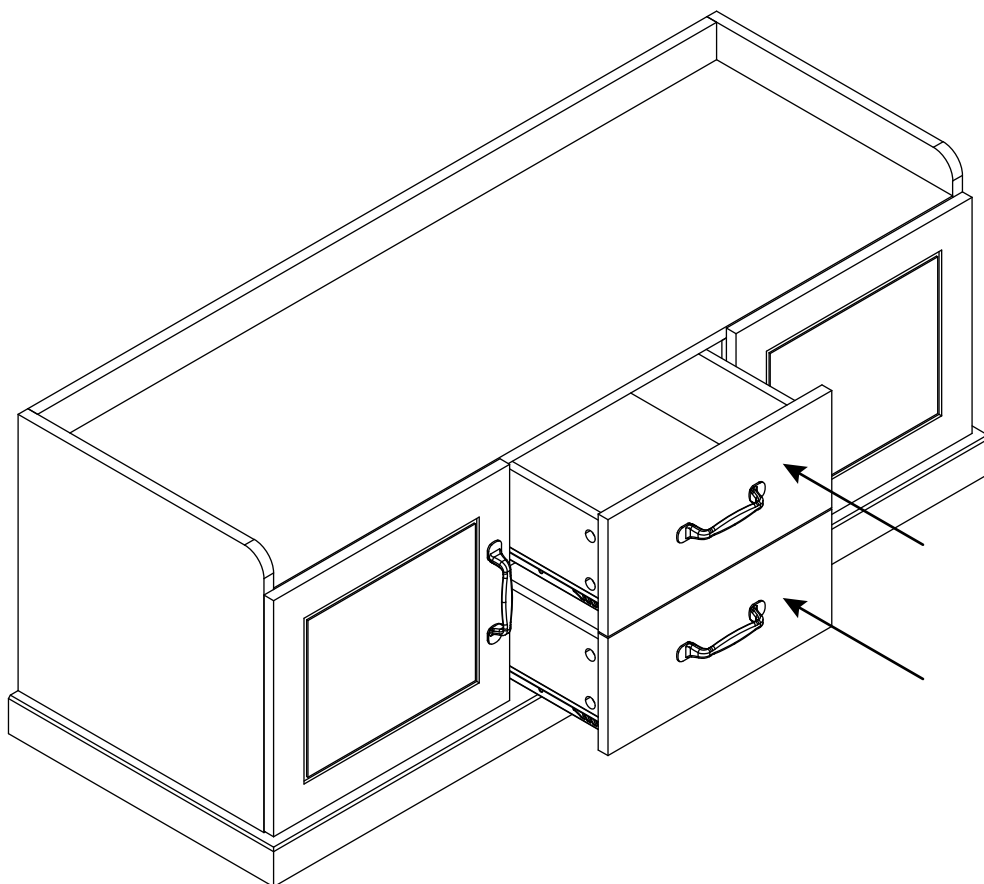

Step 20

