


ASSEMBLY INSTRUCTION

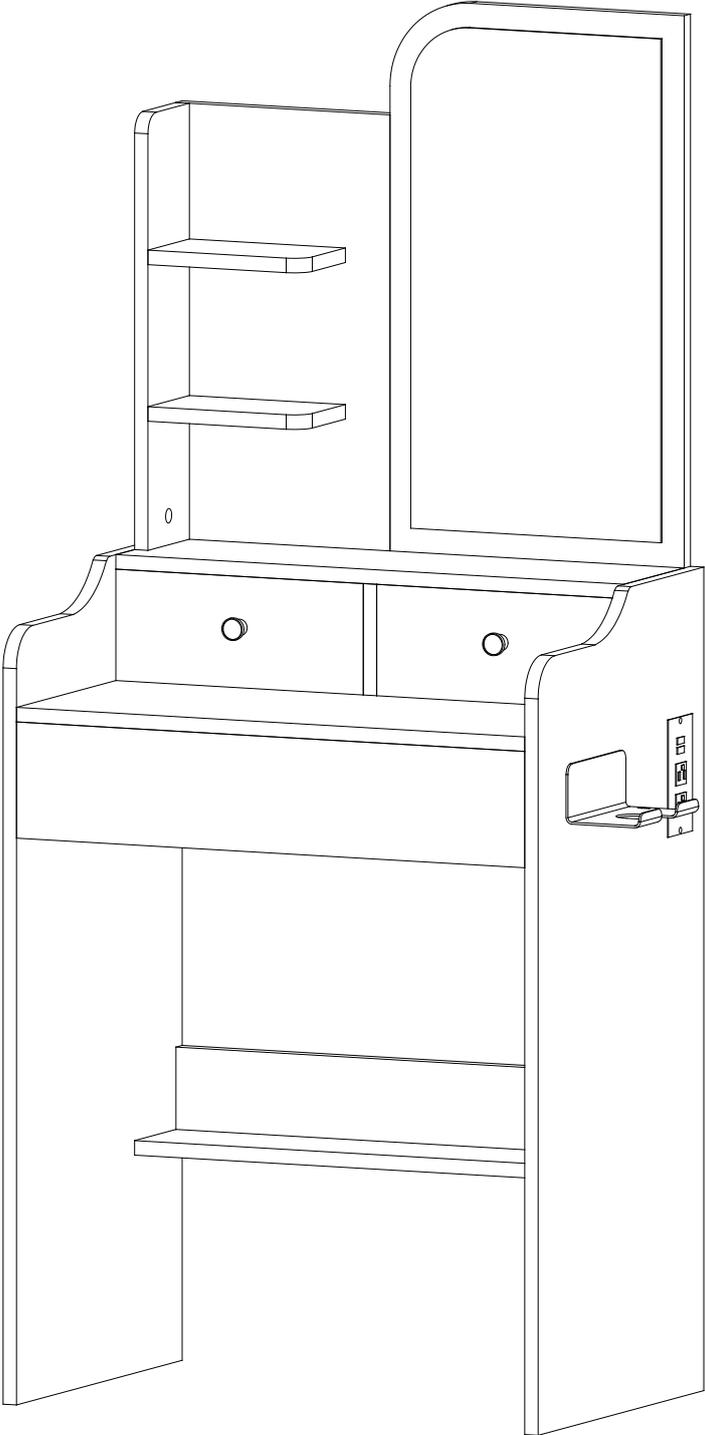



Ax48



Bx48



Cx12



Dx2



Ex2



Fx8



Gx8



Hx2



Jx5




Kx1









Lx1




M x1

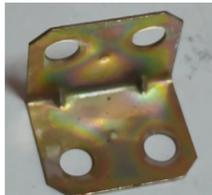


Nx2

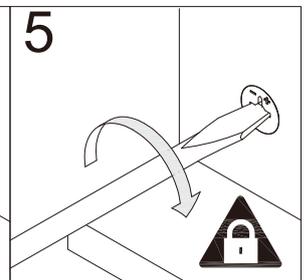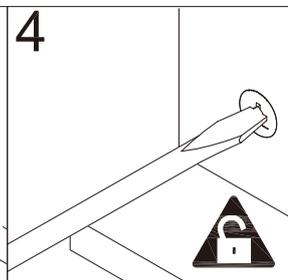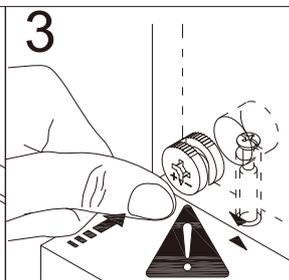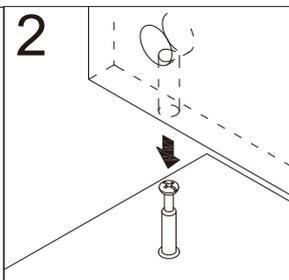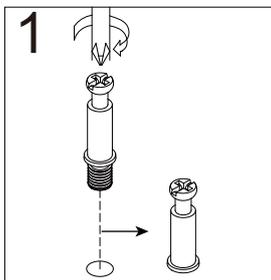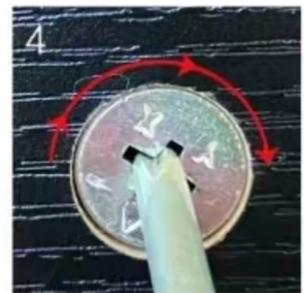

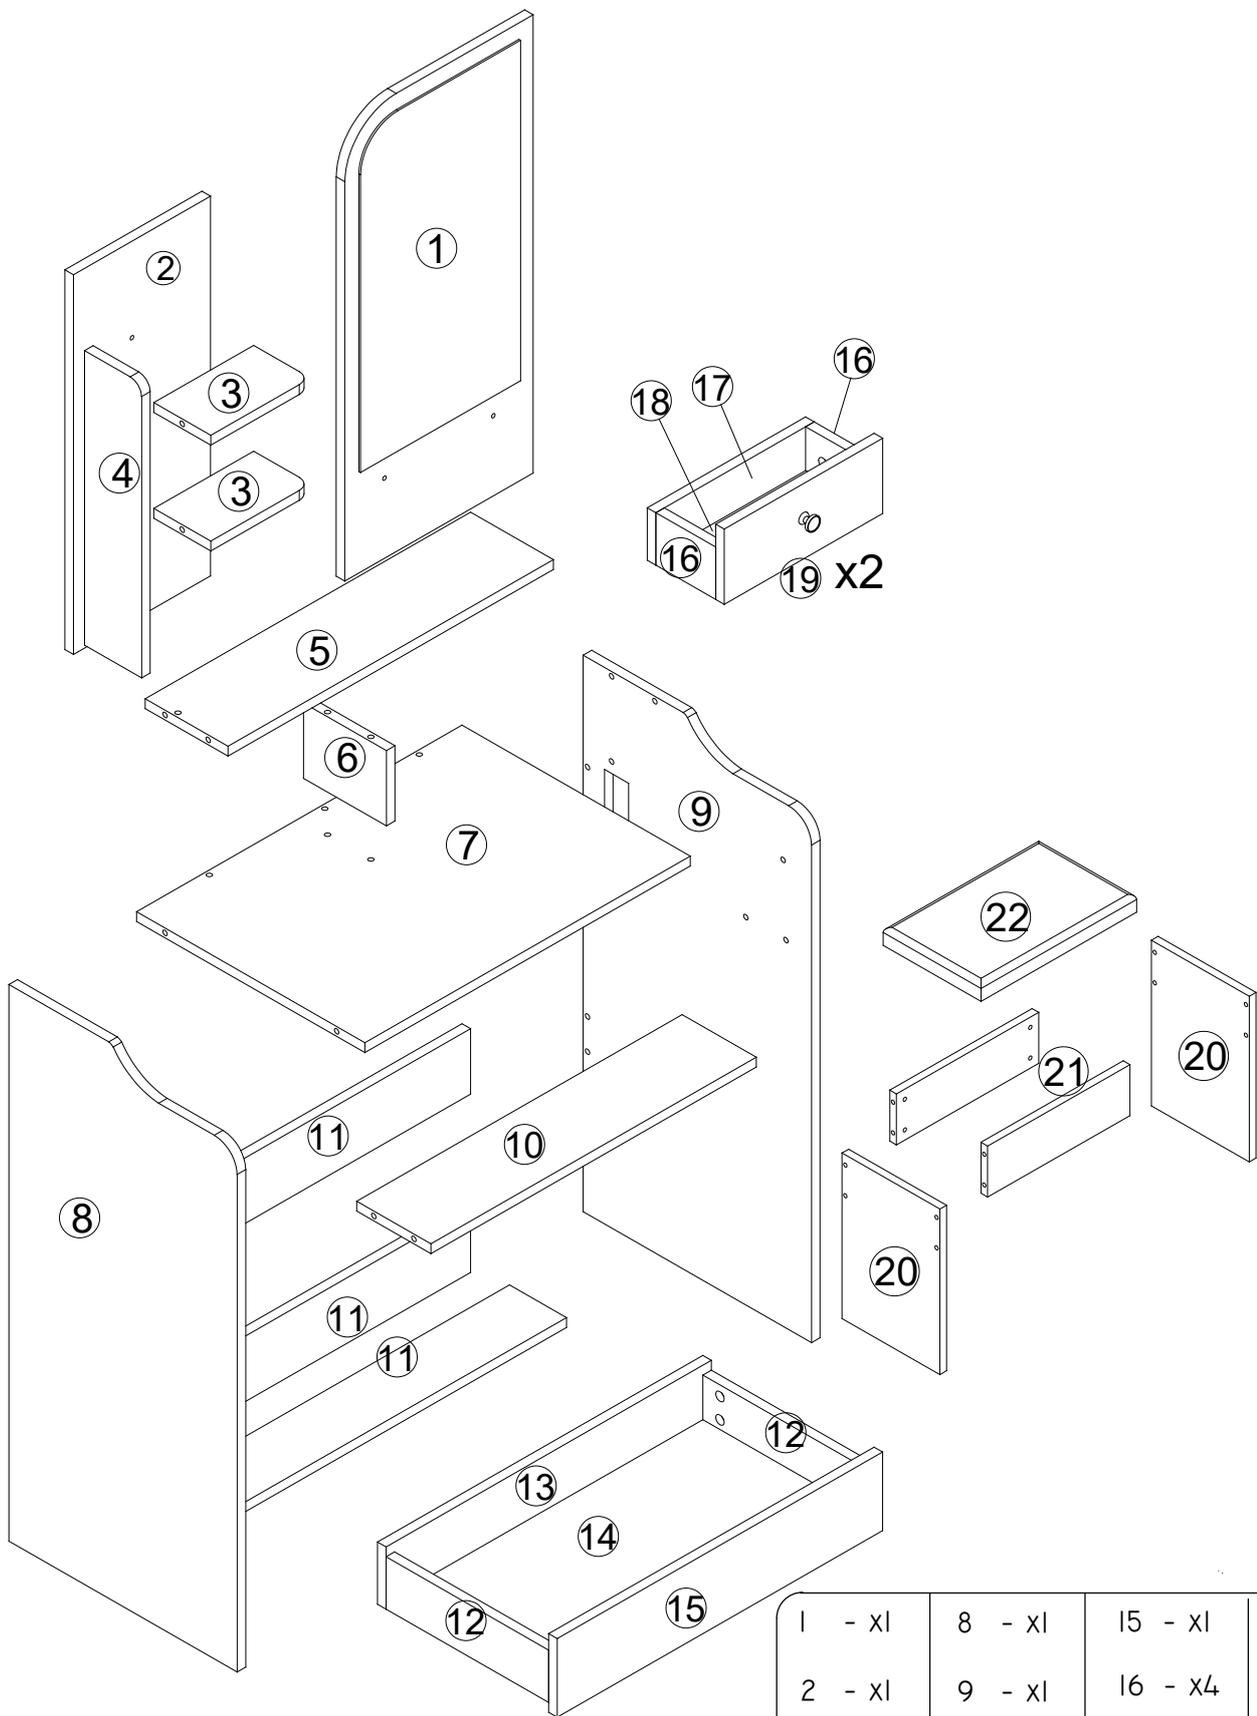


1 - x1	8 - x1	15 - x1	22 - x2
2 - x1	9 - x1	16 - x4	23 - x1
3 - x2	10 - x1	17 - x2	
4 - x1	11 - x3	18 - x2	
5 - x1	12 - x2	19 - x2	
6 - x1	13 - x1	20 - x2	
7 - x1	14 - x1	21 - x2	


STEP 1

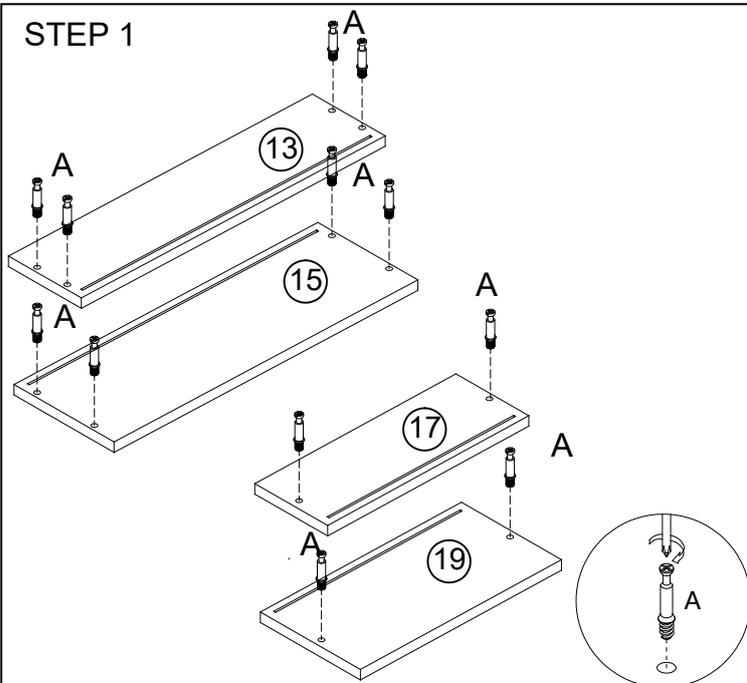


STEP 2

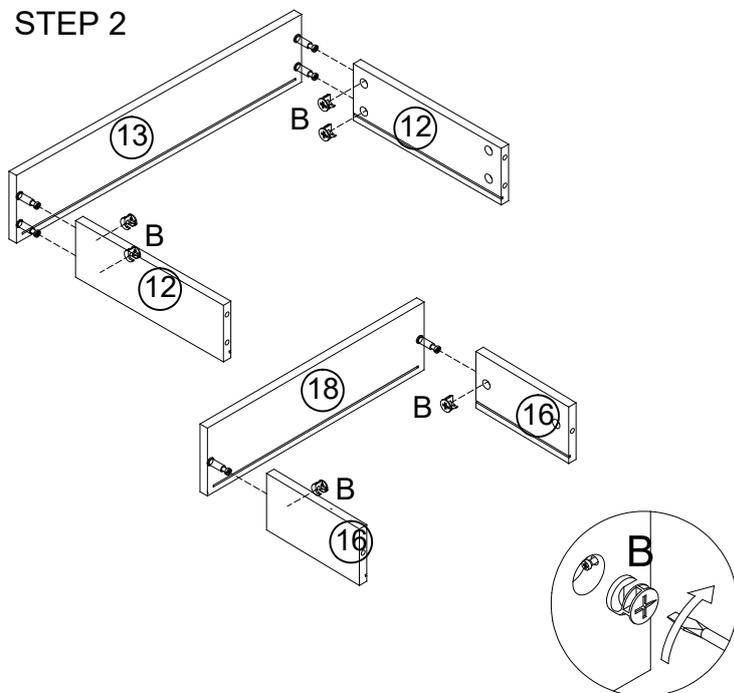

STEP 3

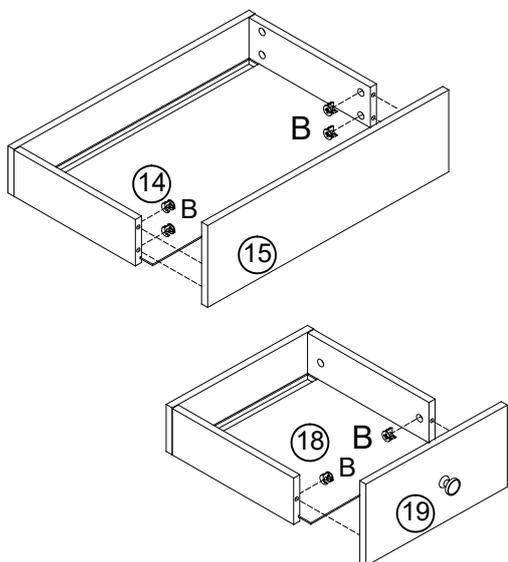


STEP 4

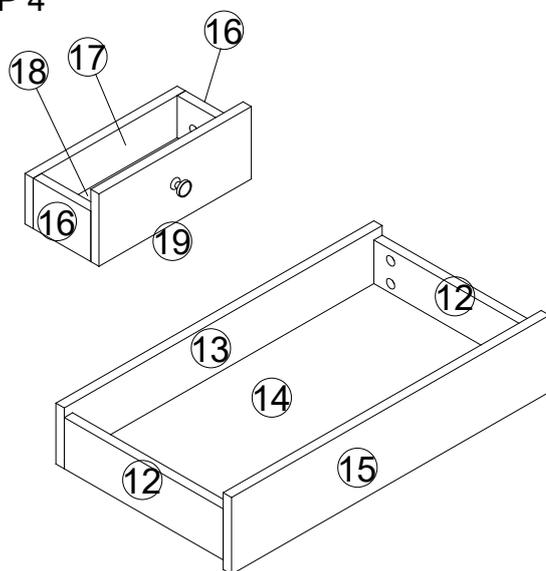


Three drawers are installed in the same way


STEP 5

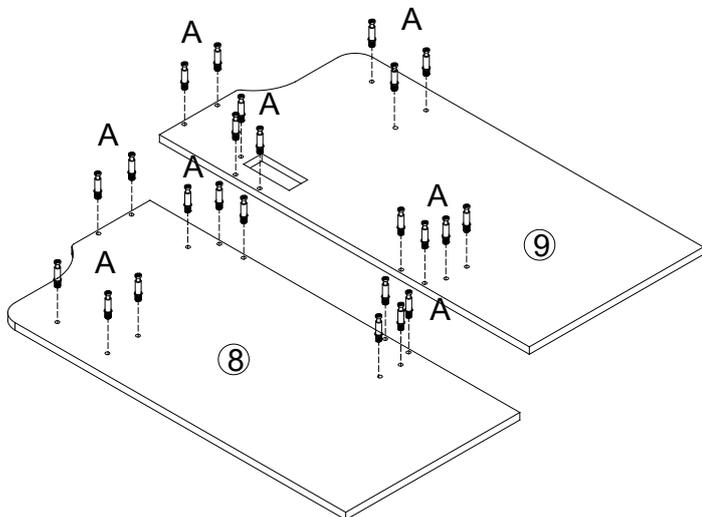


STEP 6

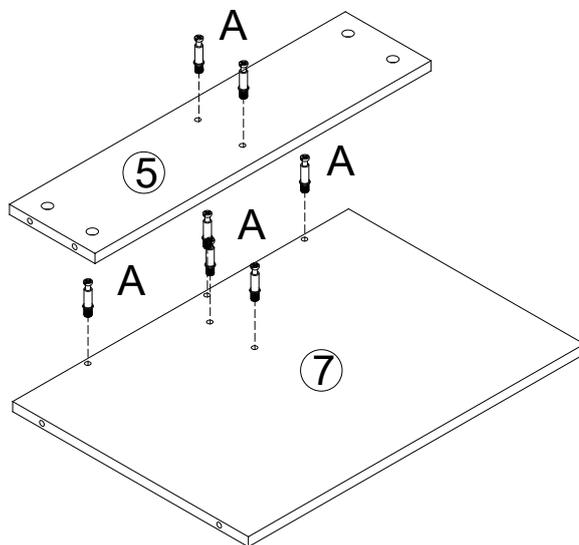


STEP 7

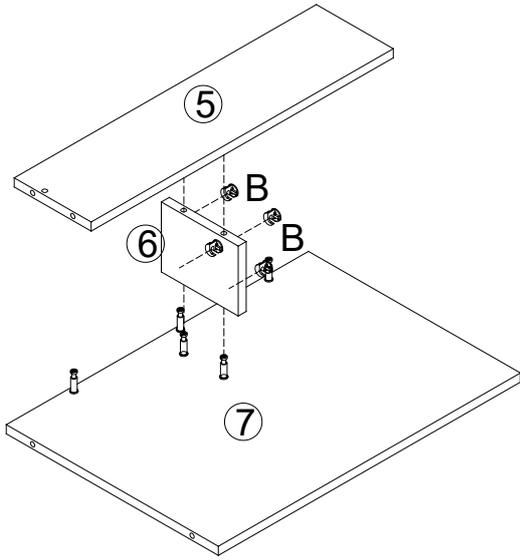


STEP 8

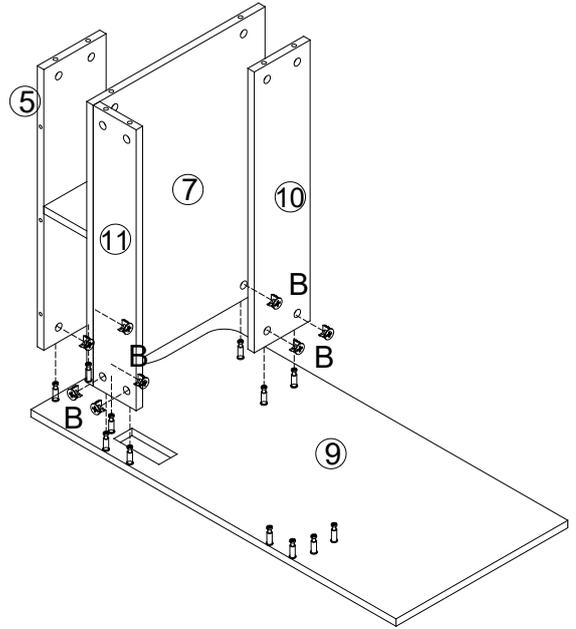


STEP 9

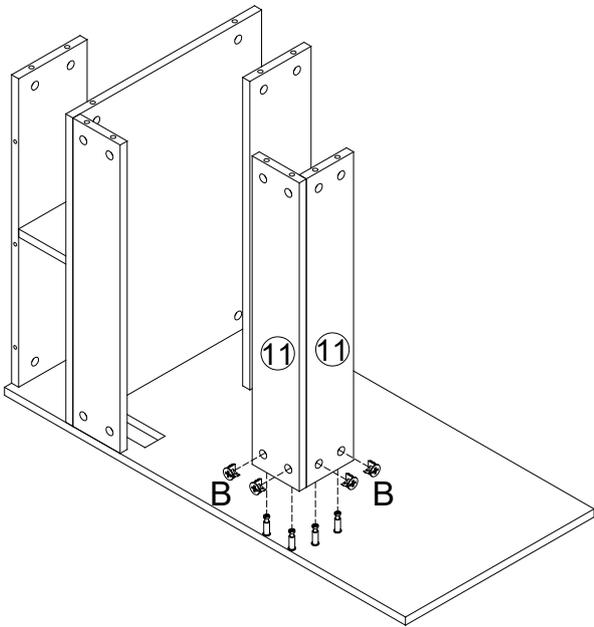


STEP 10

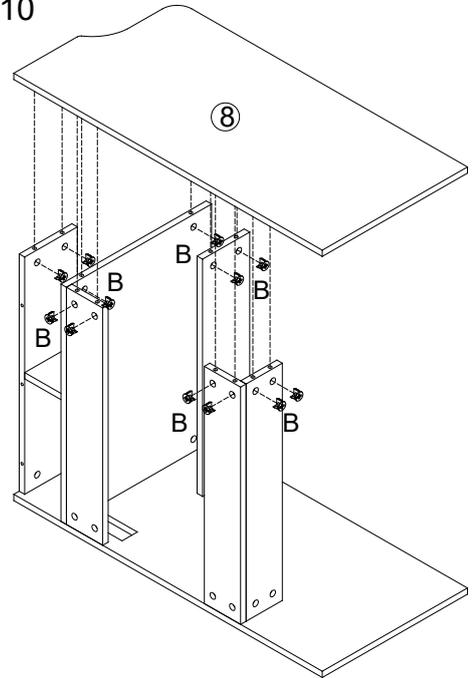


STEP 11

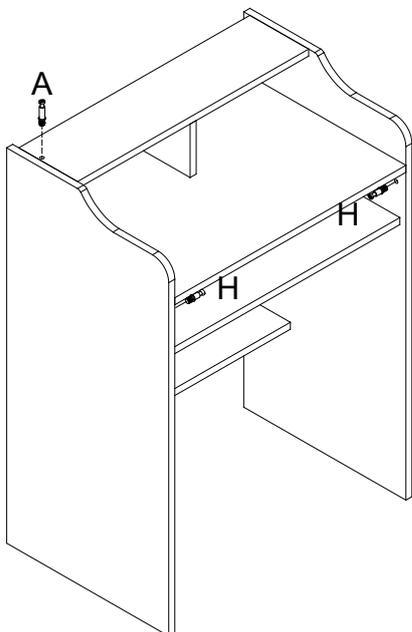


STEP 12

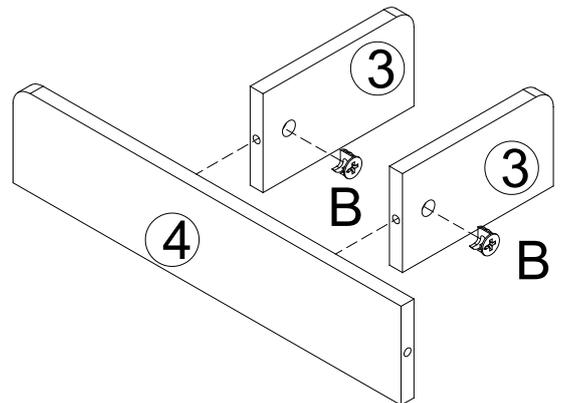


STEP 13

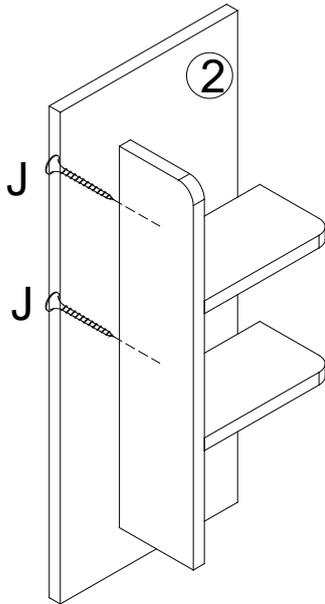


STEP 14

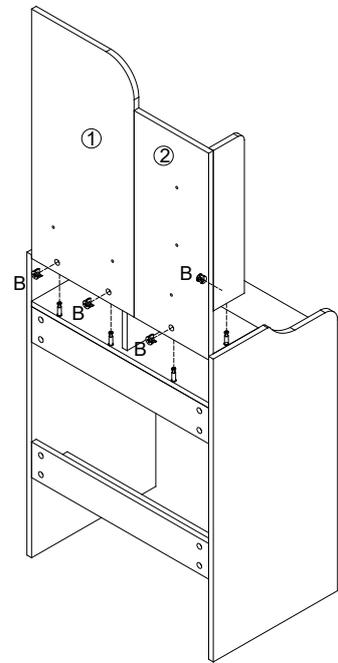


STEP 15

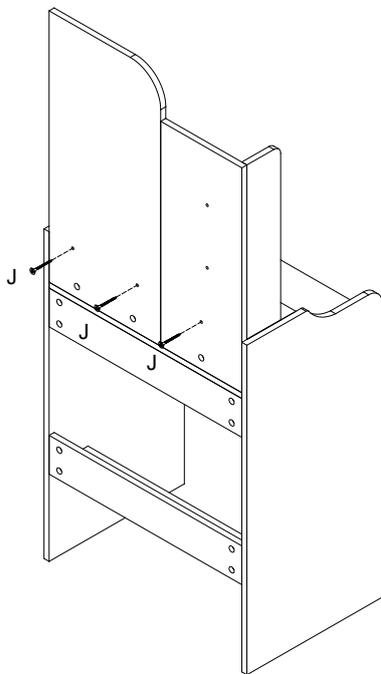


STEP 16

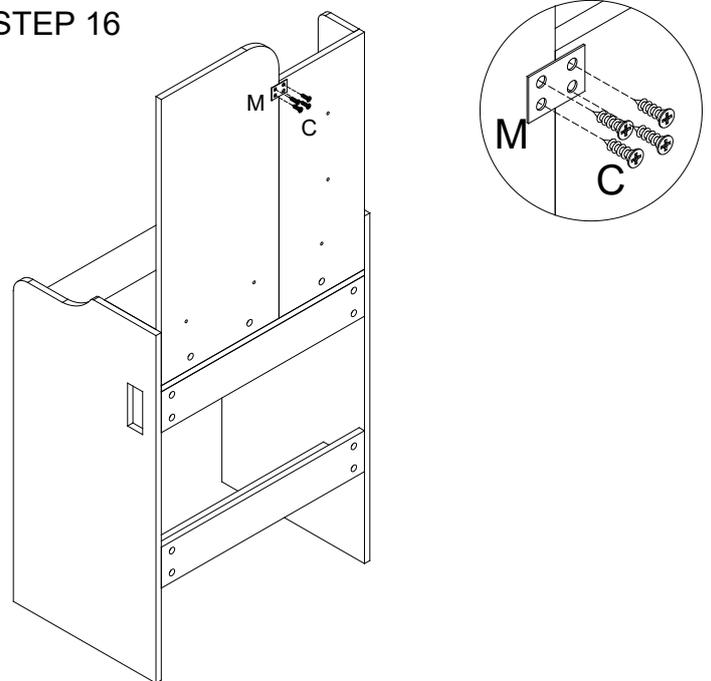

STEP 17

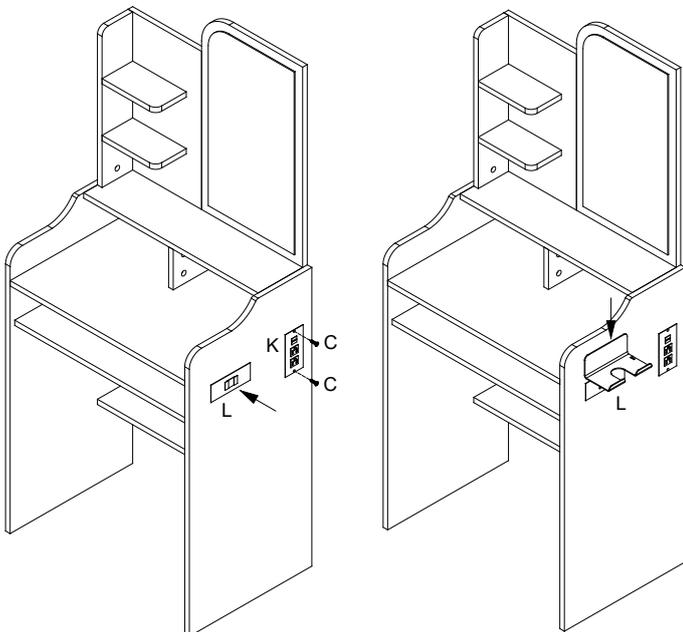

STEP 18

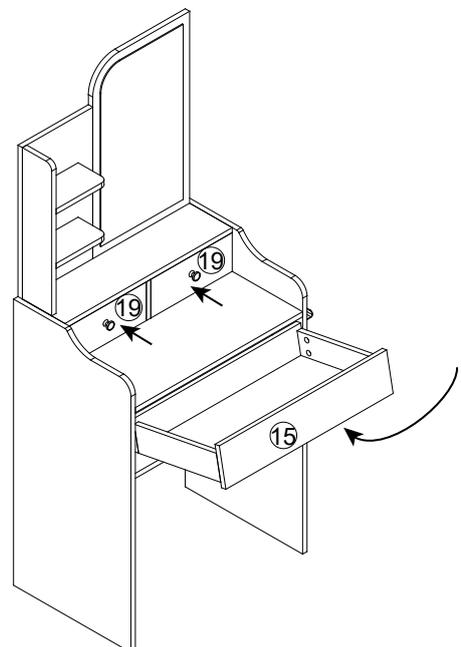

STEP 23

