## CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

## NOTICE

- \* Please make sure that you have all parts indicated before you begin assembly this item.
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- \* This item may require periodic tightening.

## Part List and Hardware List


PIECE	DESCRIPTION	PICTURE	QUANTITY
А	Top Frame		1X
В	Bottom Frame		1X
С	Leg Frame (L: 540mm)		4X
D	Glass		1X
HW1	Allen Key		1X
HW2	Hex Bolt 1/4" x 1.2mm x 12mm		8X
HW3	Hex Bolt 1/4" x 1.2mm x 21mm	( <del>0</del> ))))))))	4X
HW4	Cap 13mmSQ		4X
HW5	Rubber Mat		4X




Model# ACC8004A

Product Dimension: 22"DIA x 22"H

Weight Capacity: 22.05lbs

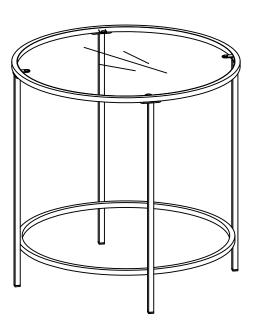


Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list. If any part is missing or damaged, do not attempt to assemble the product. Estimated Assembly Time: 20 minutes.

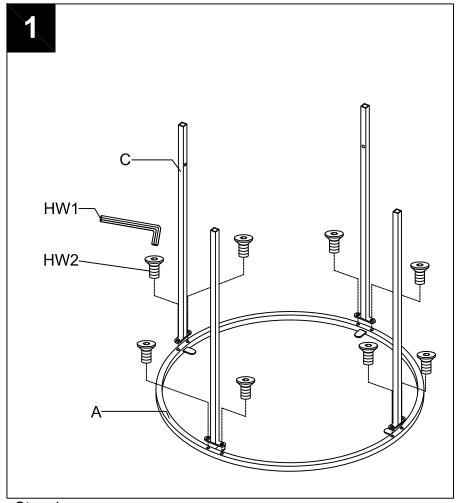




Assemble top frame (A) and leg frames (C) with hex bolt (HW2) and by use of Allen key (HW1) as shown in drawing.

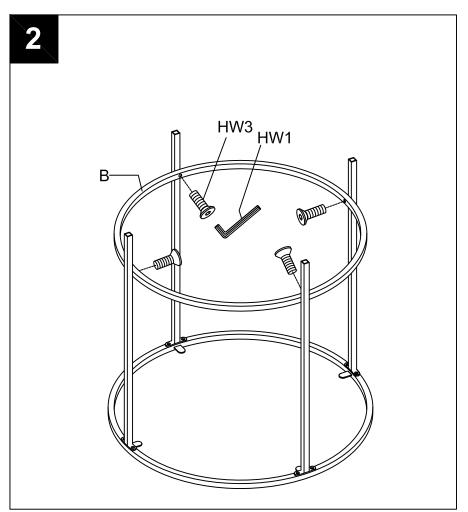

Step 2

Assemble bottom frame (B) with hex bolt (HW2) by use of Allen key (HW1) as shown in drawing.

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list. If any part is missing or damaged, do not attempt to assemble the product. Estimated Assembly Time: 20 minutes.

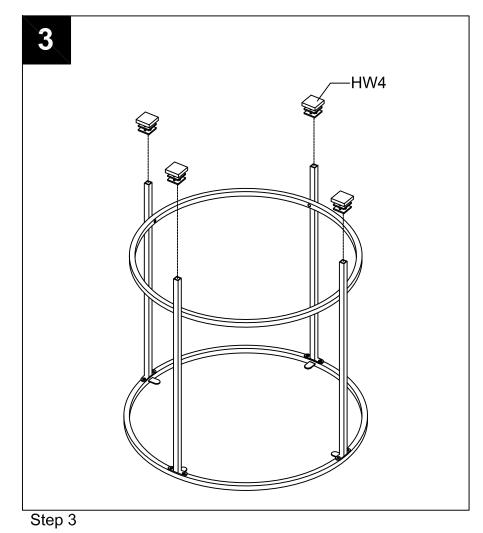



Insert cap (HW4) into the tube end of leg frame (C) as shown in drawing.

Stick rubber mat (HW5) onto the top frame (A), then put the glass (D) on as shown in drawing.

HW5

HW5