



ASSEMBLY INSTRUCTIONS

QUEEN BED WITH 4 DRAWERS AND CABINETS

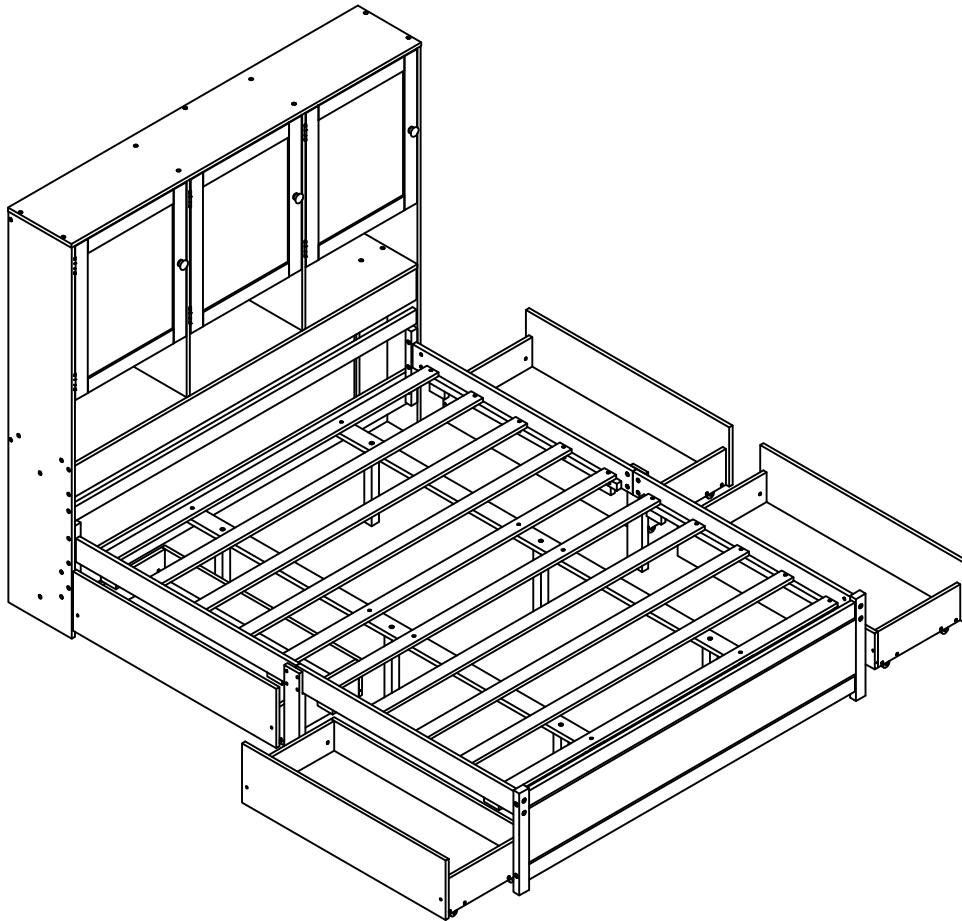







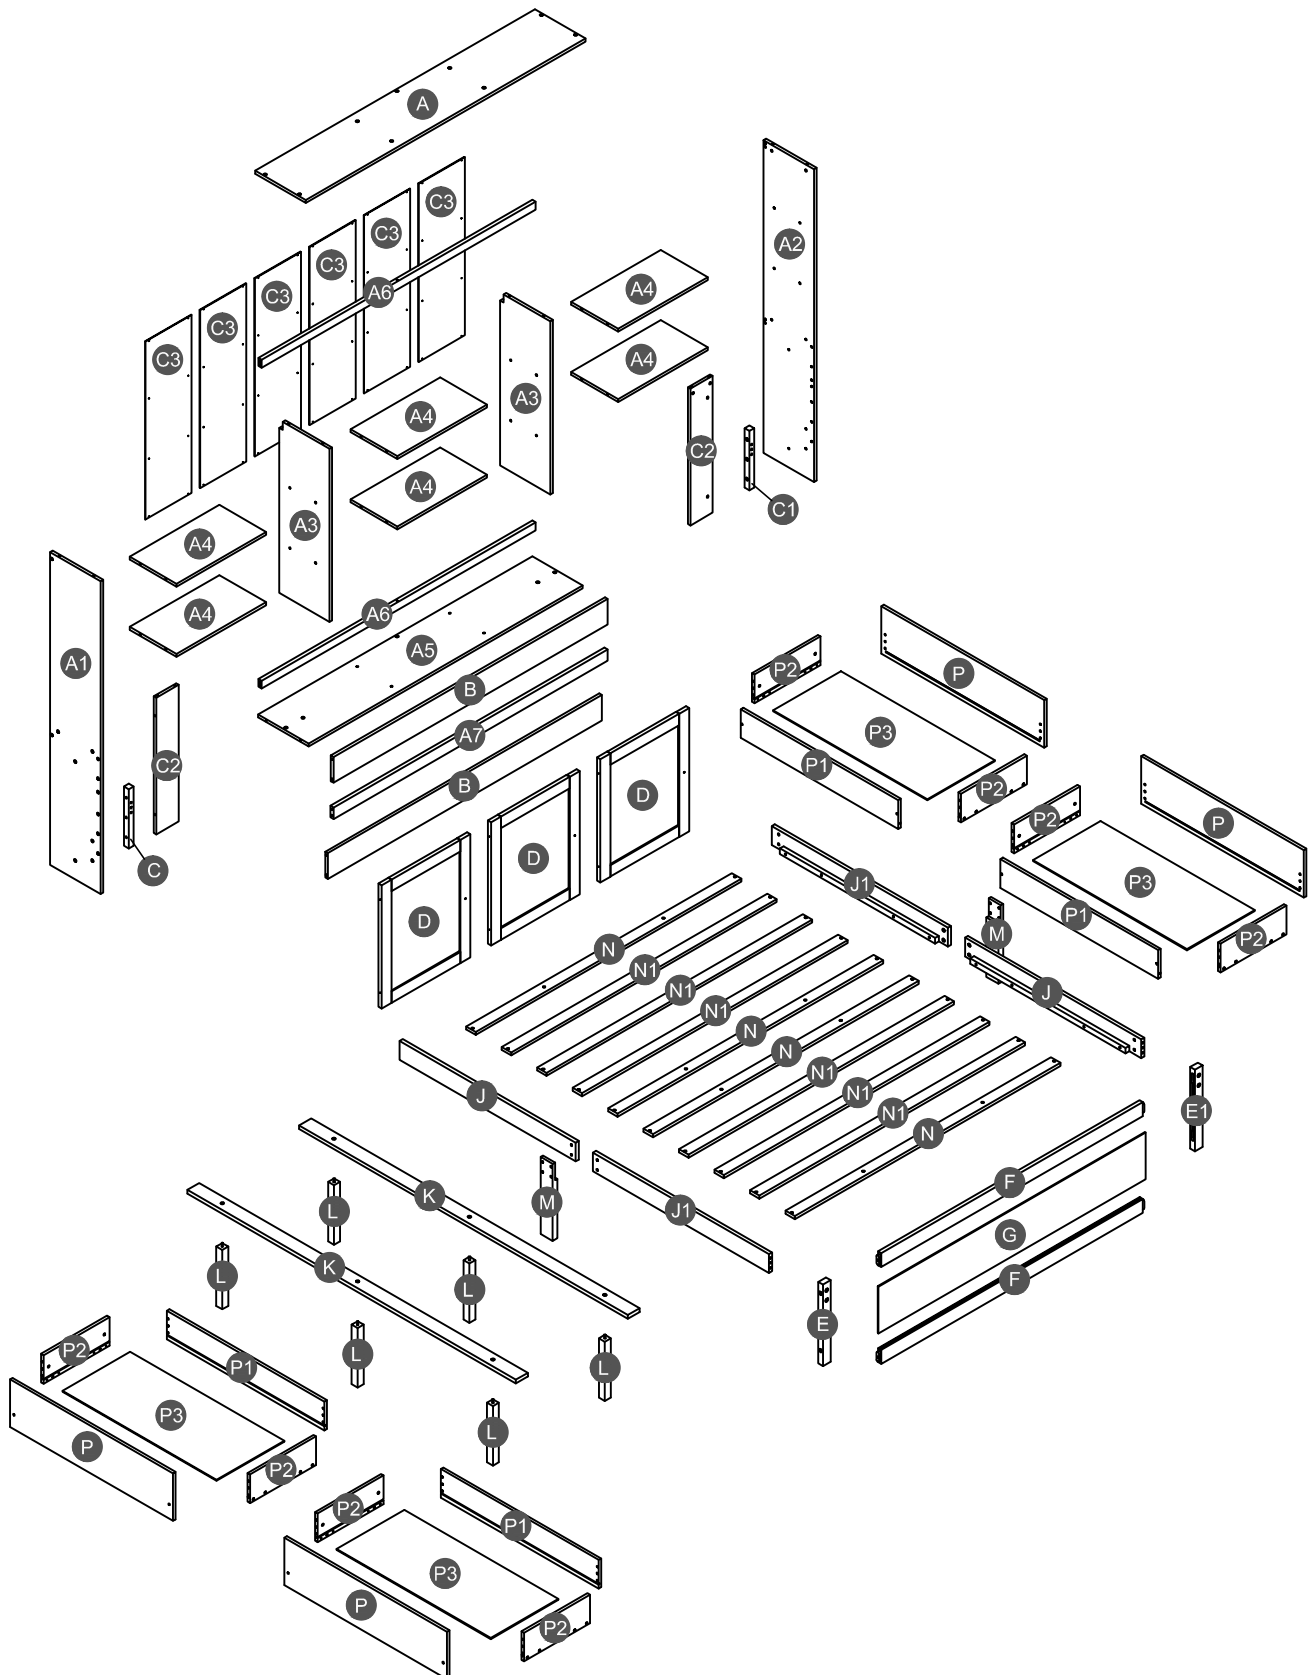








WF322505/WF322506

Detail View

















Part List

WF322505

A  <p>Top panel - 1pc</p>	A1  <p>Side panel (Left) - 1pc</p>	A2  <p>Side panel (Right) - 1pc</p>
A3  <p>Divider panel - 2pcs</p>	A5  <p>Shelf panel - 1pc</p>	A6  <p>Horizontal bar (Back) - 2pcs</p>
A7  <p>Lower horizontal bar (Front) - 1pc</p>	B  <p>Lower horizontal bar (Front) - 2pcs</p>	F  <p>Horizontal bar FB - 2pcs</p>
G  <p>Side panel FB - 1pc</p>	K  <p>Lower support slat - 2pcs</p>	L  <p>Leg support - 6pcs</p>
N  <p>Slats - 4pcs</p>	N1  <p>Slats - 6pcs</p>	P2  <p>Left / right drawer panel - 8pcs</p>


WF322506 + Hardware inside

A4  Shelf panel - 6pcs	C  Support HB (Left) - 1pc	C1  Support HB (Right) - 1pc
C2  Vertical bar support - 2pcs	C3  Back panel - 6pcs	D  Door - 3pcs
E  Leg FB (Left) - 1pc	E1  Leg FB (Right) - 1pc	J  Side rail - 2pcs
J1  Side rail - 2pcs	M  Support side rail - 2pcs	P  Front drawer panel - 4pcs
P1  Back drawer panel - 4pcs	P3  Drawer bottom - 4pcs	

Hardware List WF322506



1	 Ø10*20mm Wood dowel (16pcs)	2	 Ø8*30mm Wood dowel (66pcs)	3	 (Ø15)1/4"*80mm Hex-Head bolts (12pcs)
4	 (Ø12)1/4"*60mm Hex-Head bolts (54pcs)	5	 (Ø12)1/4"*40mm Hex-Head bolts (6pcs)	6	 (Ø12)1/4"*35mm Hex-Head bolts (8pcs)
7	 1/4"*15 (9.5mm) Horizontal-Hole bolts(66pcs)	8	 (Ø12)1/4"*40mm Hex-Head bolts (2pcs)	9	 Ø4*30mm Wood screws (76pcs)
10	 Ø3.5*15mm Wood screws (54pcs)	11	 Ø3.5*15mm Wood screws (62pcs)	12	 Ø38*31mm Pine Knob (3pcs)
13	 3/16"*25mm Ph zinc(Knob) (3pcs)	14	 42*12*1mm Metal magnet (3pcs)	15	 45*17*13mm Door catch (3pcs)
16	 70*37*28mm (135°) Metal bracket (6pcs)	17	 40*18*18*2mm Metal bracket (2pcs)	18	 100*52*20 mm Wheels (16pcs)
19	 70*35*19 mm Drawer stopper (8pcs)	20	 Ø9*32mm Plastic anchor (3pcs)	21	 58*16*16*1.5mm Metal bracket (3pcs)
22	 Ø4*38mm Wood screws (3pcs)	23	 (1/4")4.5*58mm Allen key (1pc)		


ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE
POSITION WHEN YOU USE POWER TOOLS !


STEP 1:

11		15	
6PCS		3PCS	

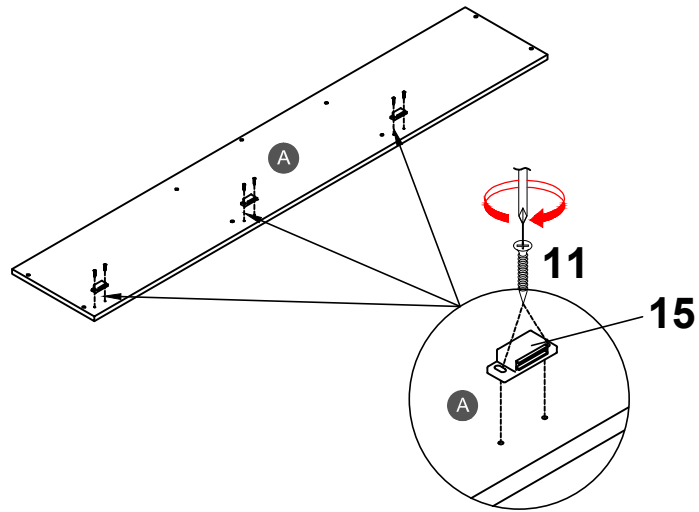


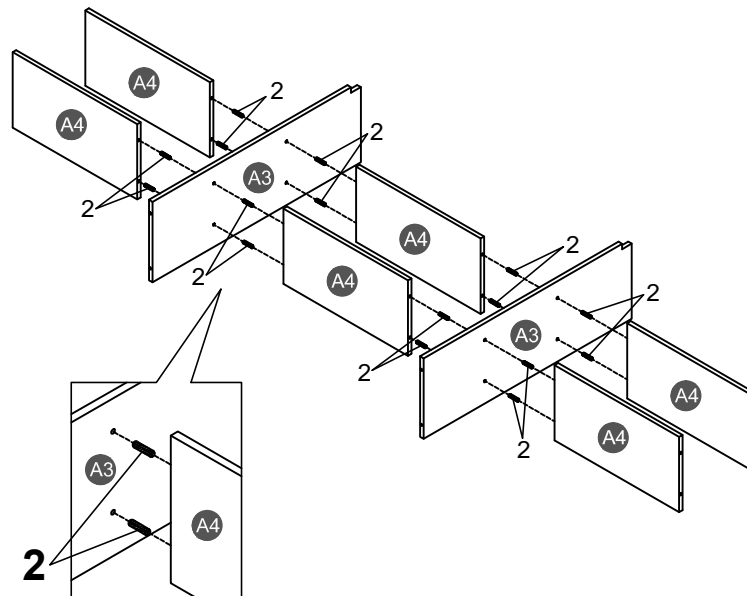
STEP 2:

5	
6PCS	

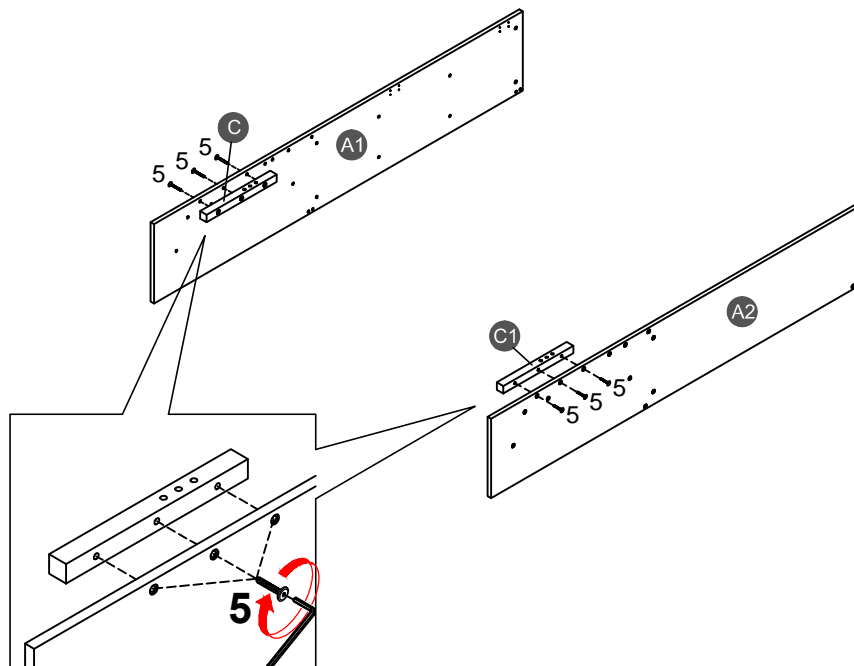





STEP 3:

2	
16PCS	







STEP 4:

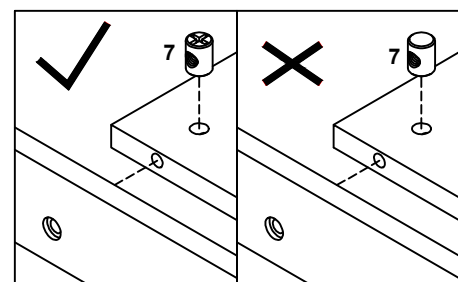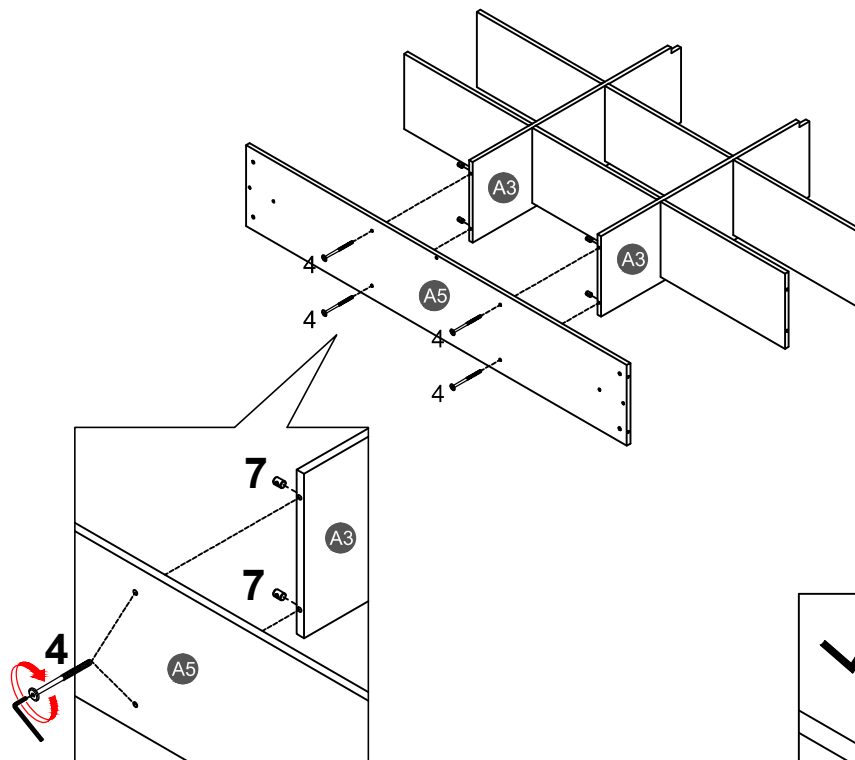4		7	
4PCS		4PCS	




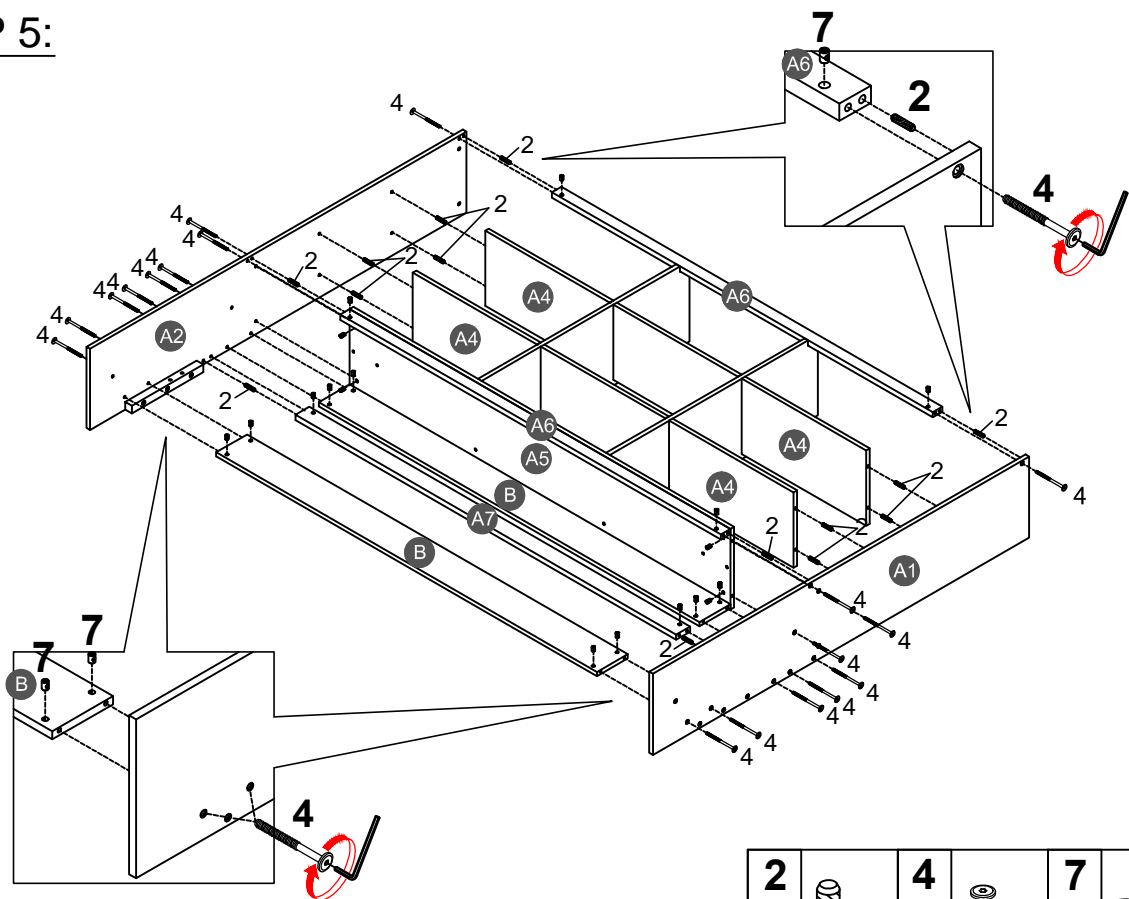

STEP 5:




2	4	7
		
14PCS	18PCS	18PCS

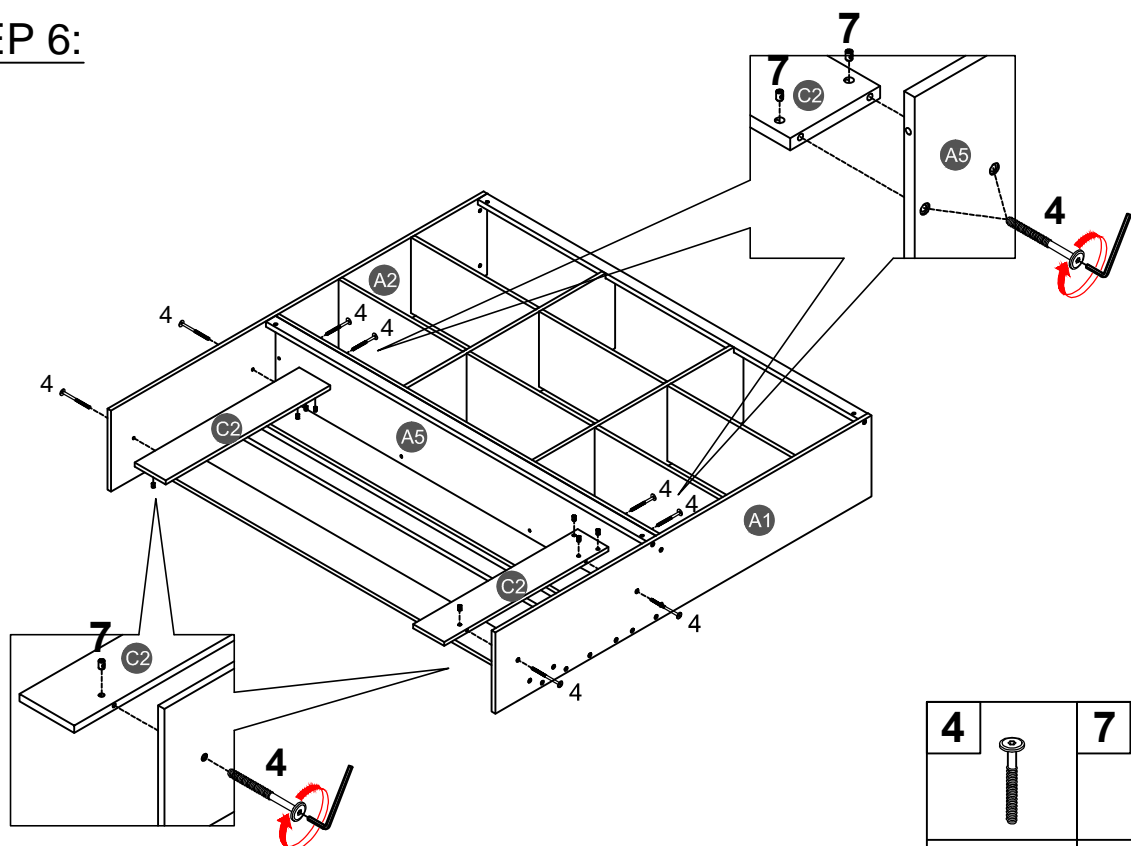STEP 6:




4	7
	
8PCS	8PCS


STEP 7:

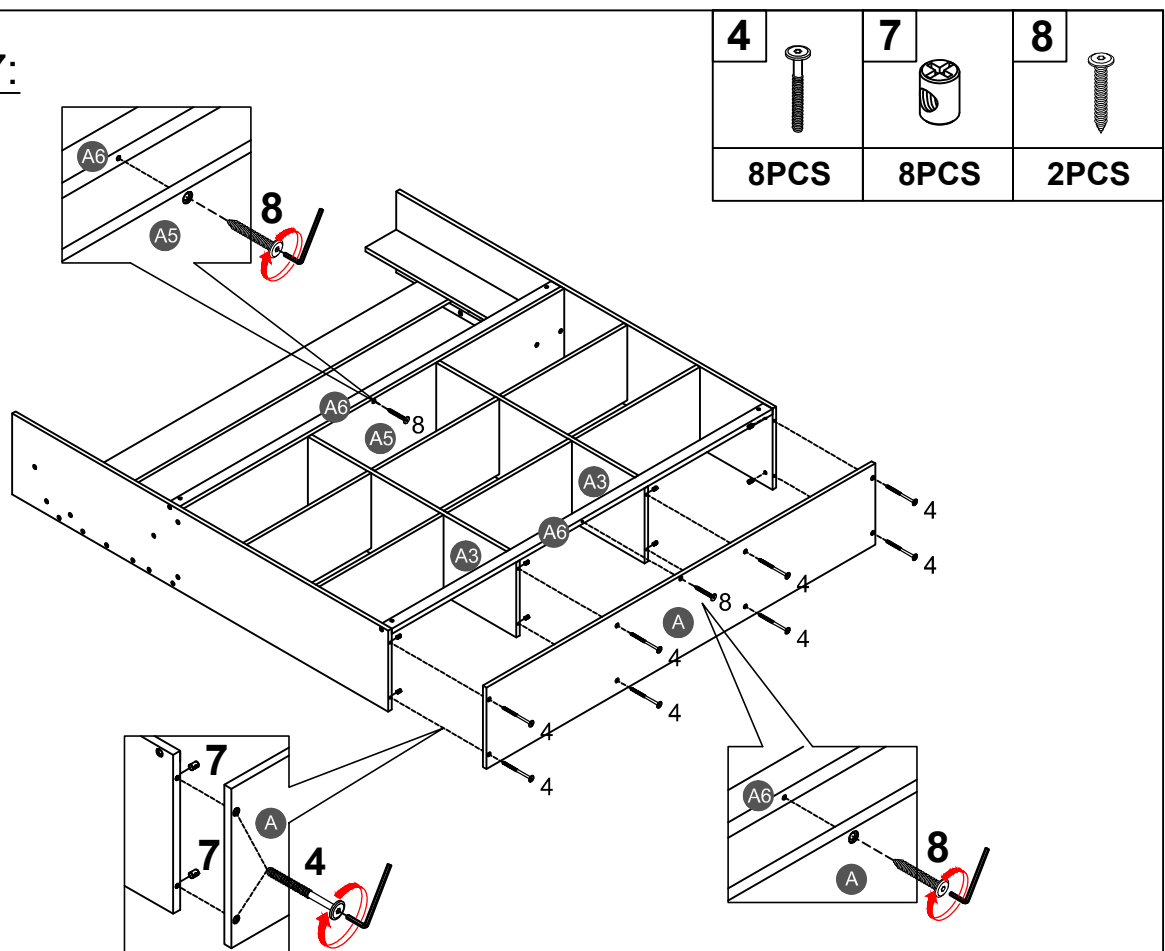

STEP 8:

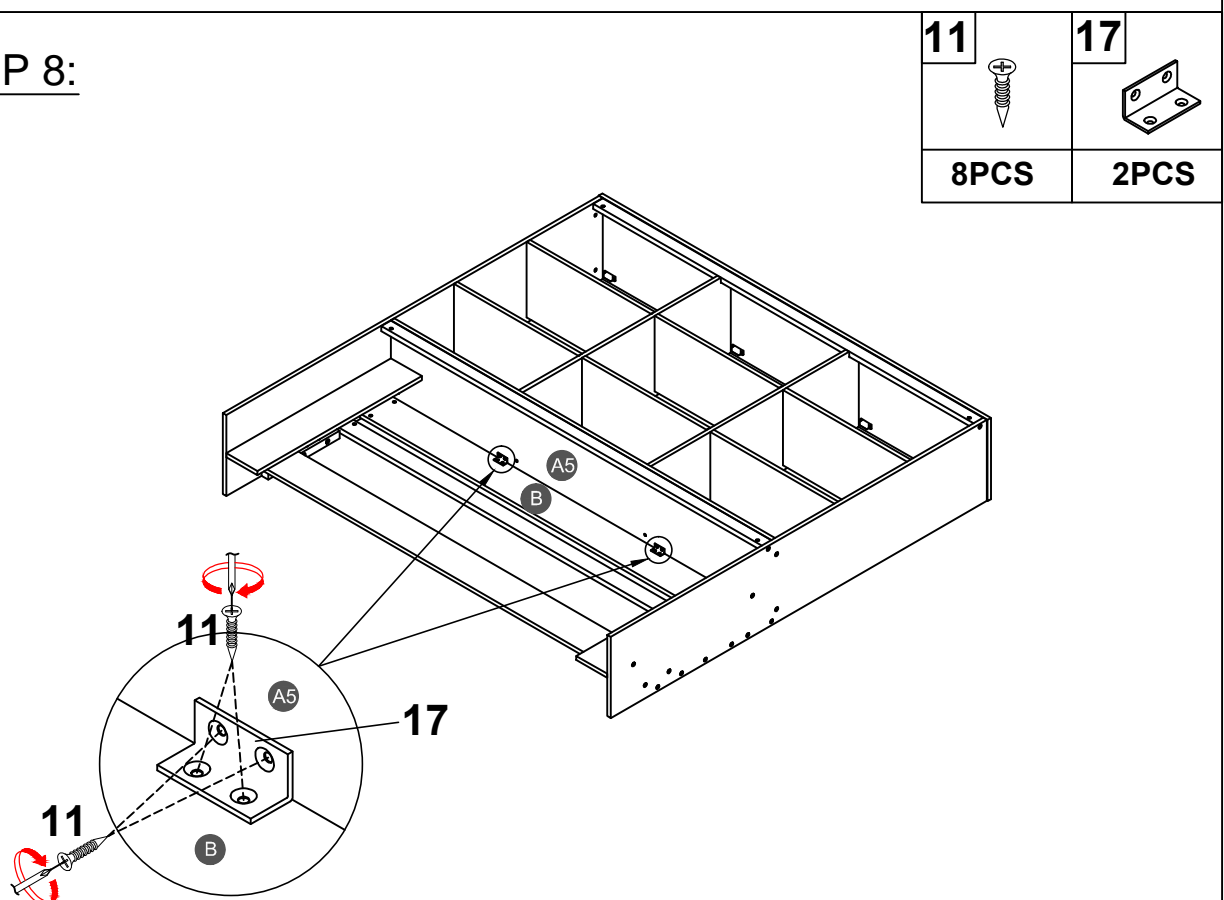

STEP 9:

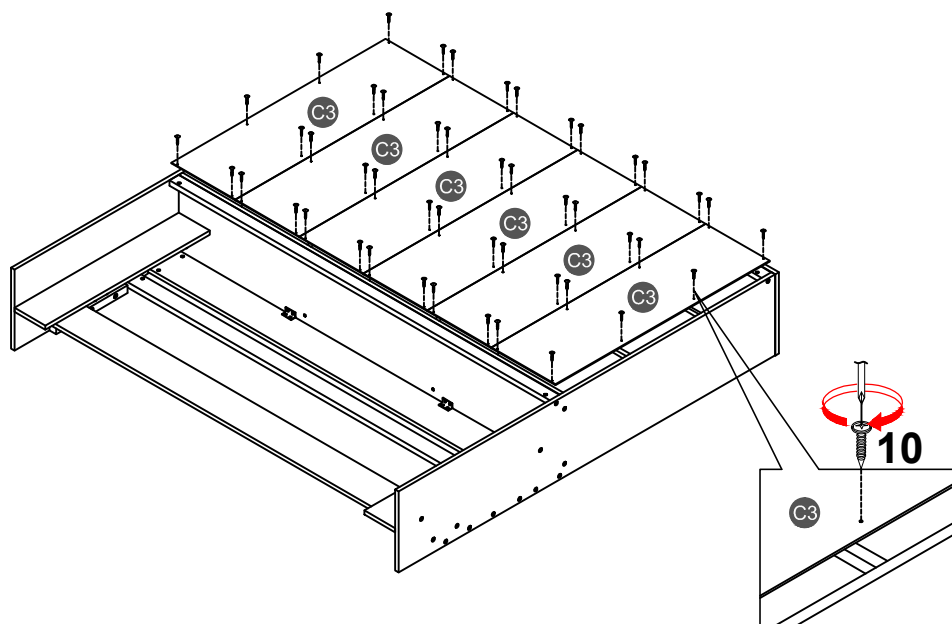


10



48PCS

STEP 10:

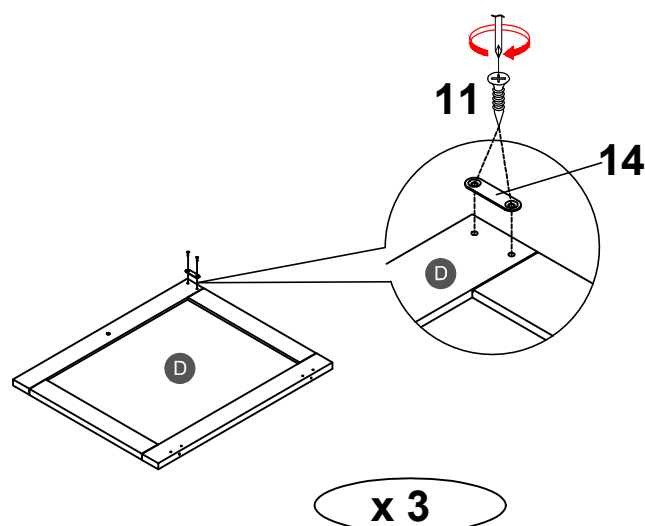

11




6PCS

14



3PCS

STEP 11:

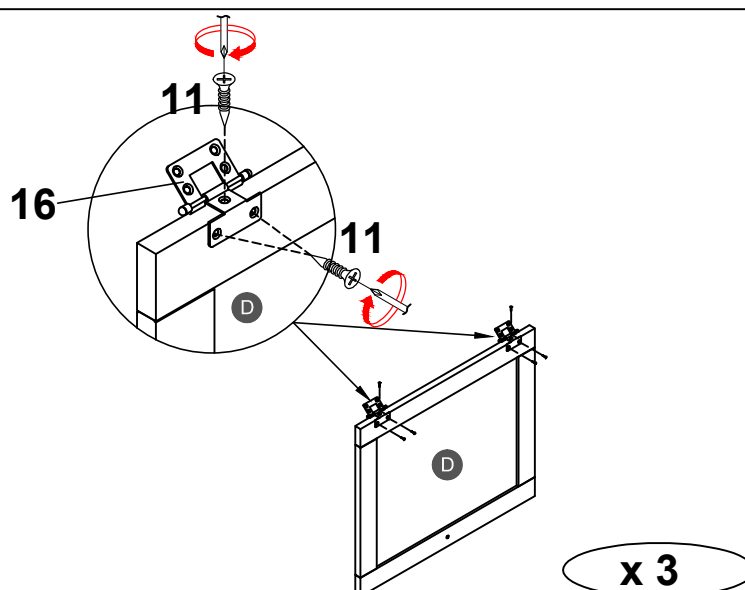

11





18PCS


16



6PCS


STEP 12:


12	13
	
3PCS	3PCS

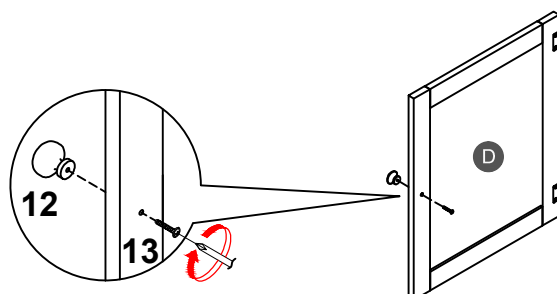


x 3

STEP 13:

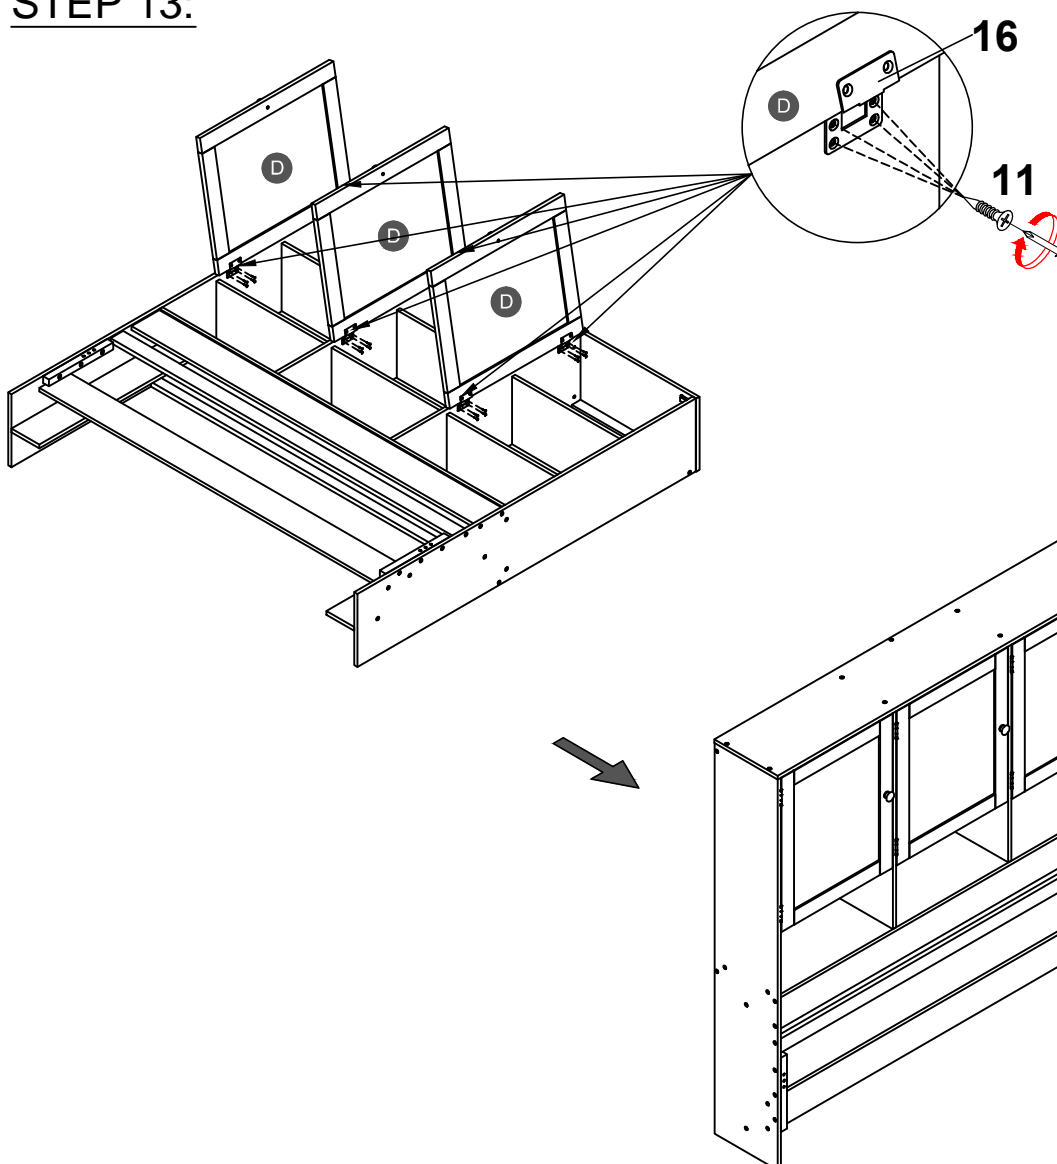

11	
24PCS	

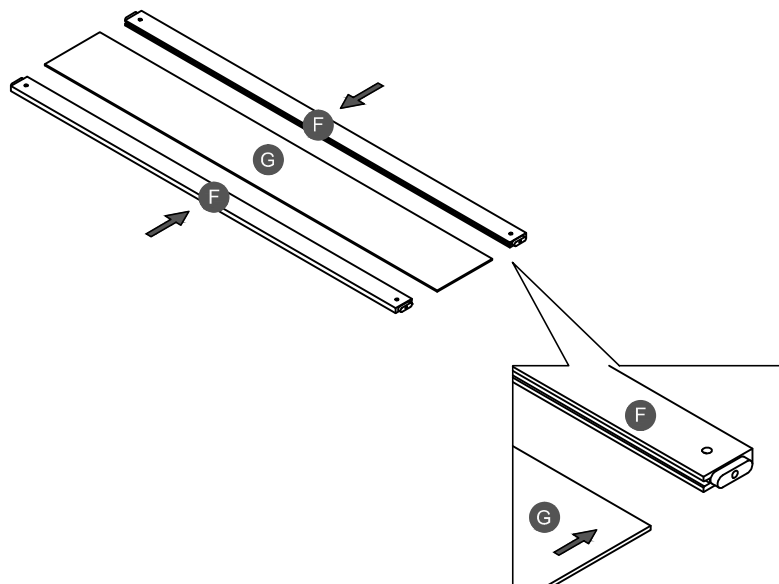


STEP 14:




STEP 15:


3		7	
4PCS		4PCS	

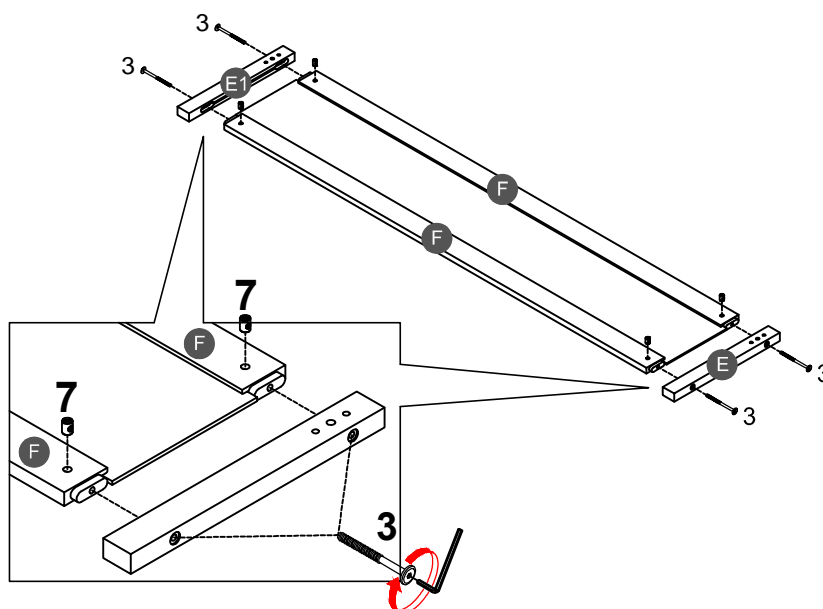

Note: Part 7 will face up with the "x" mark on it, otherwise it cannot be tightened

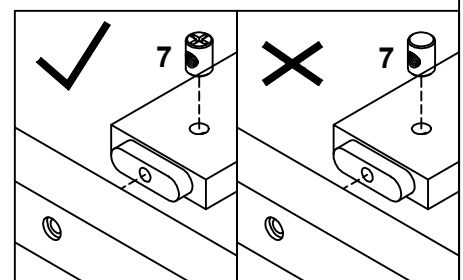


STEP 16:

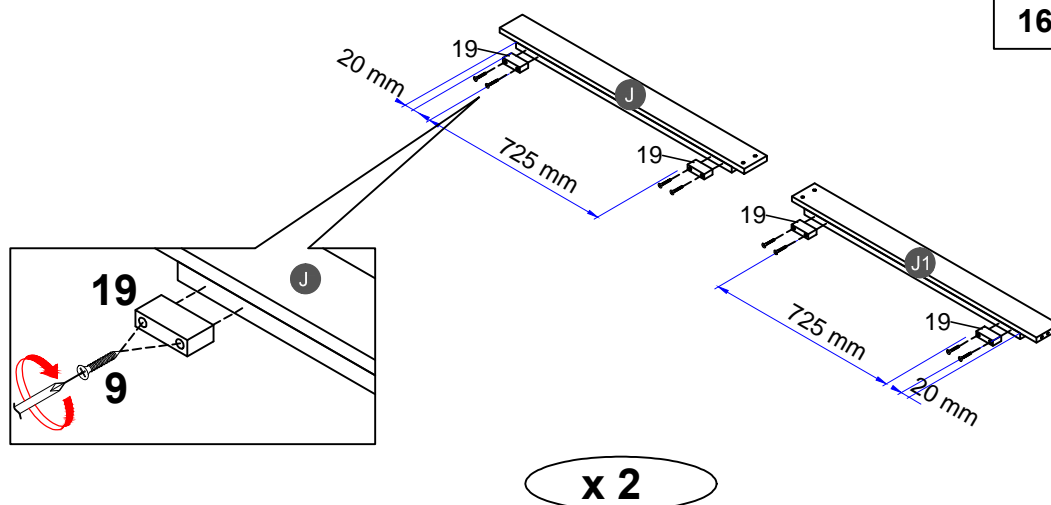


Drawer stopper (19) with lower side rail front (J)(J1) by using screw (9).


STEP 17:

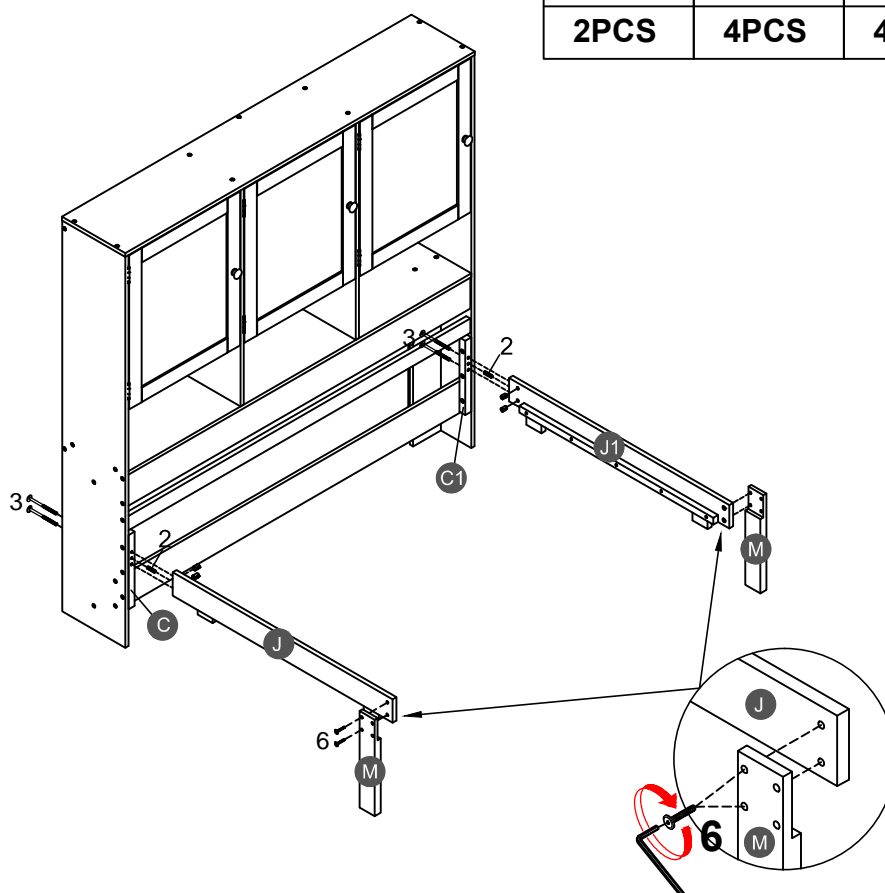

STEP 18:

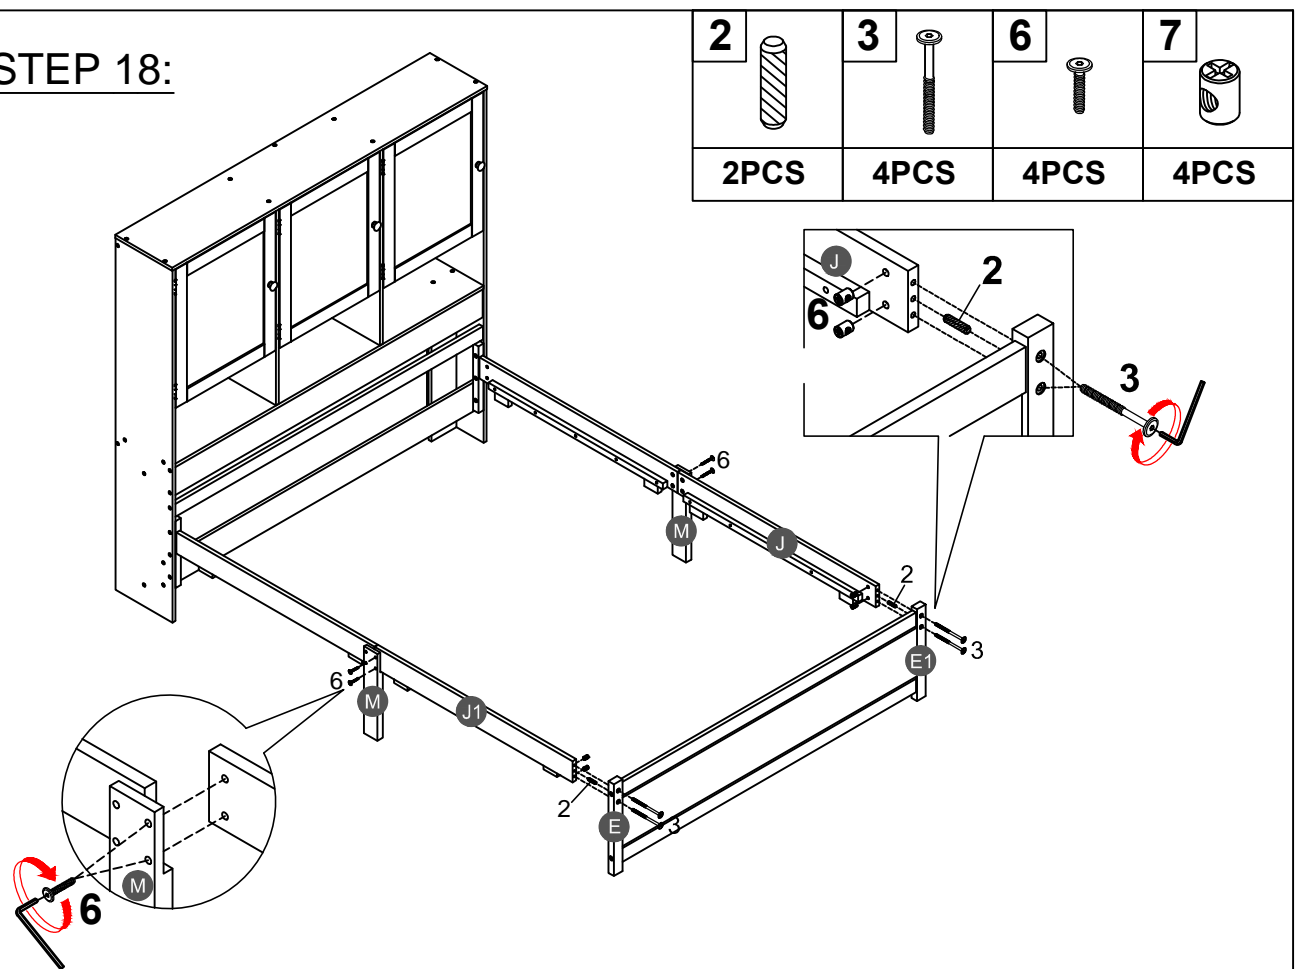

STEP 19:

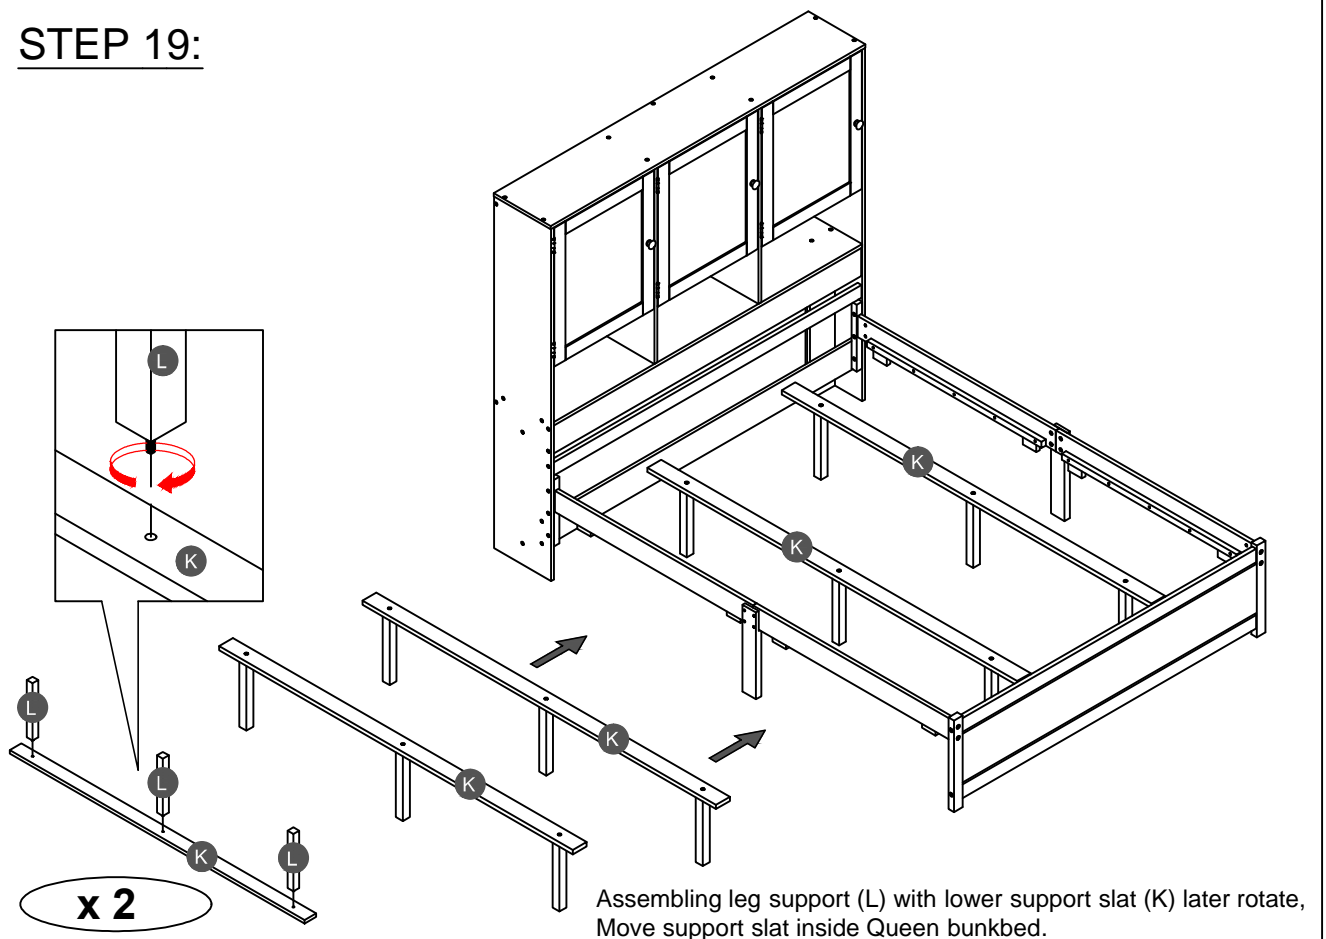


STEP 20:

9



28PCS

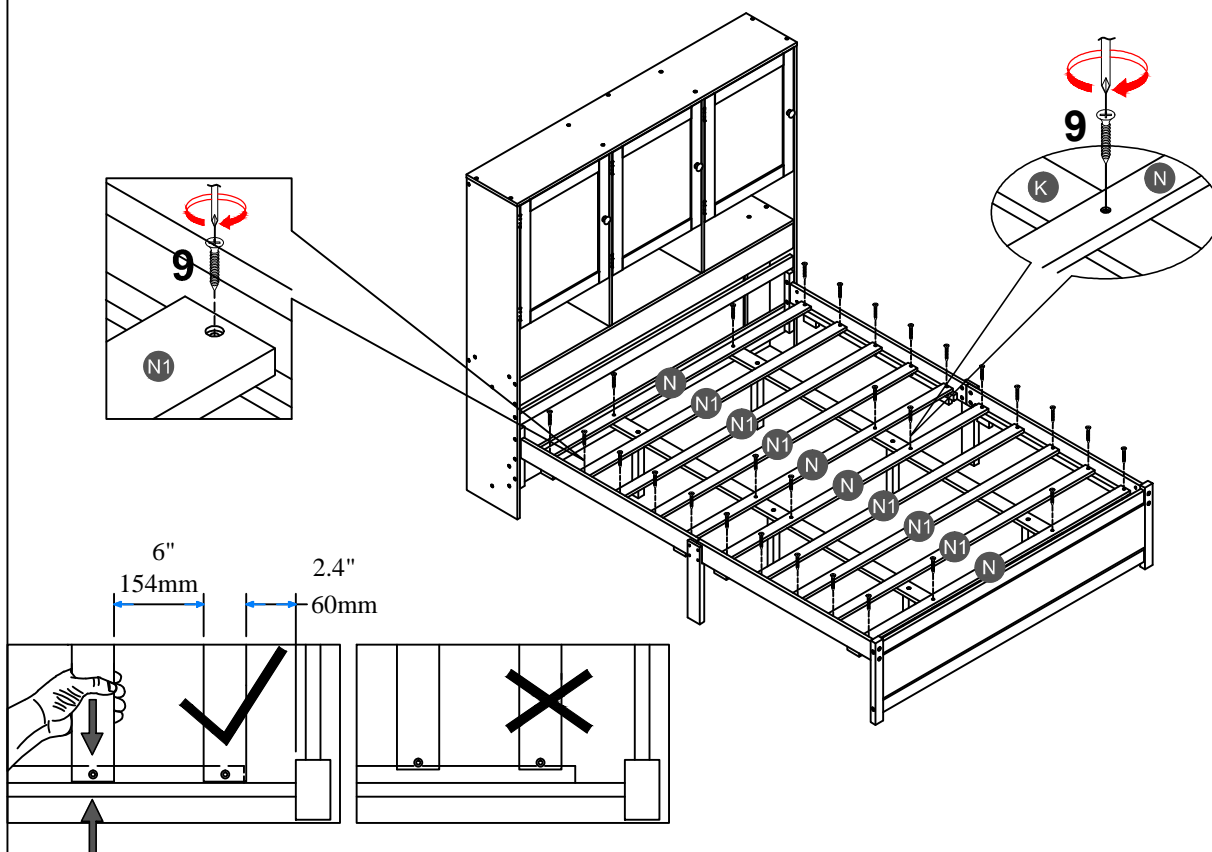

NOTE: Please make sure the bed slats close to the side rail before locking the screws to avoid breakage. This step is required for both the left and right sides. Moreover, please do not lock the screws of the bed slats at the outermost edge to avoid damaging.

STEP 21:

2



16PCS

4




8PCS




7

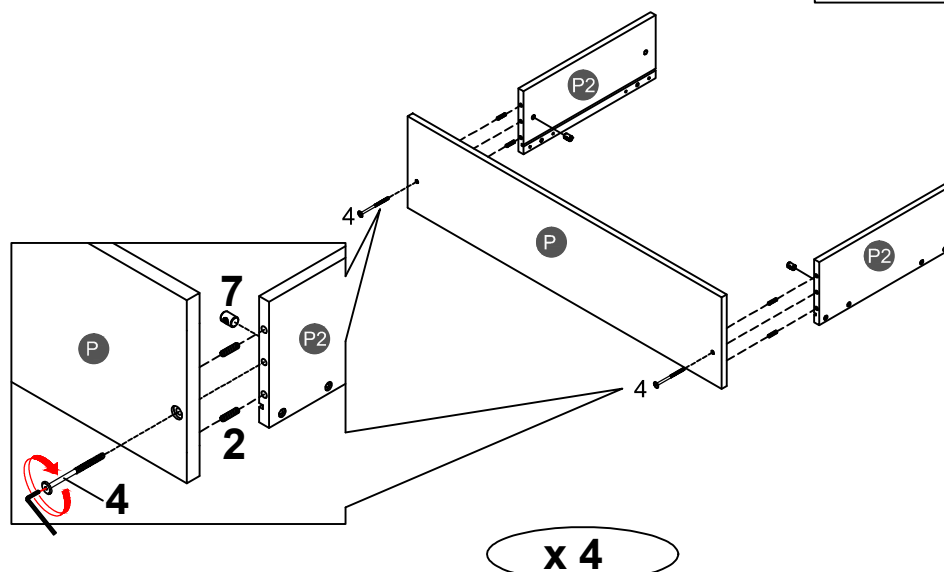


8PCS







STEP 22:

2		4		7	
16PCS		8PCS		8PCS	

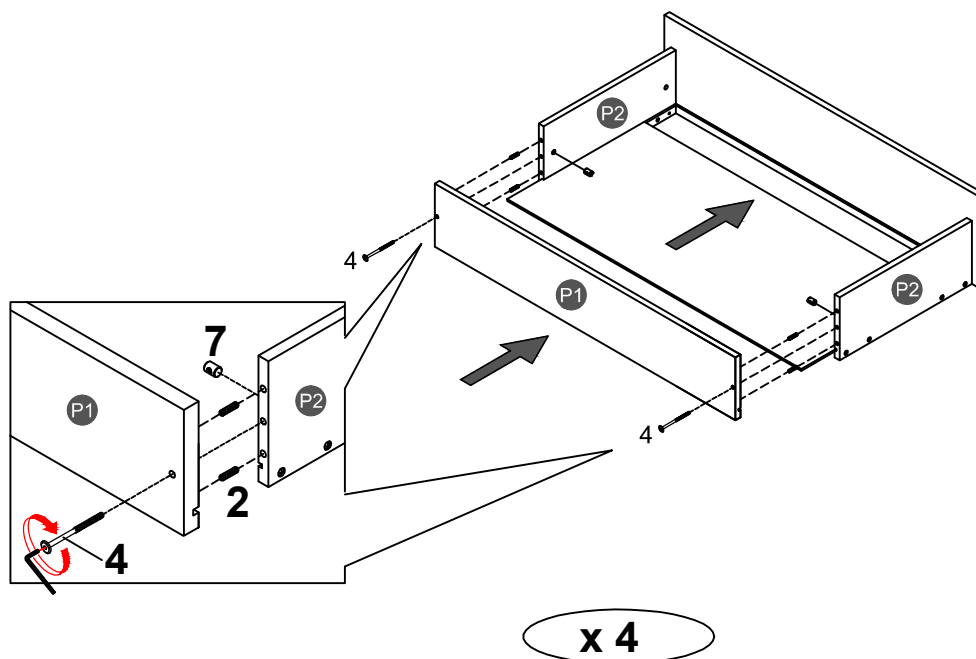


STEP 23:


1		9		18	
16PCS		32PCS		16PCS	

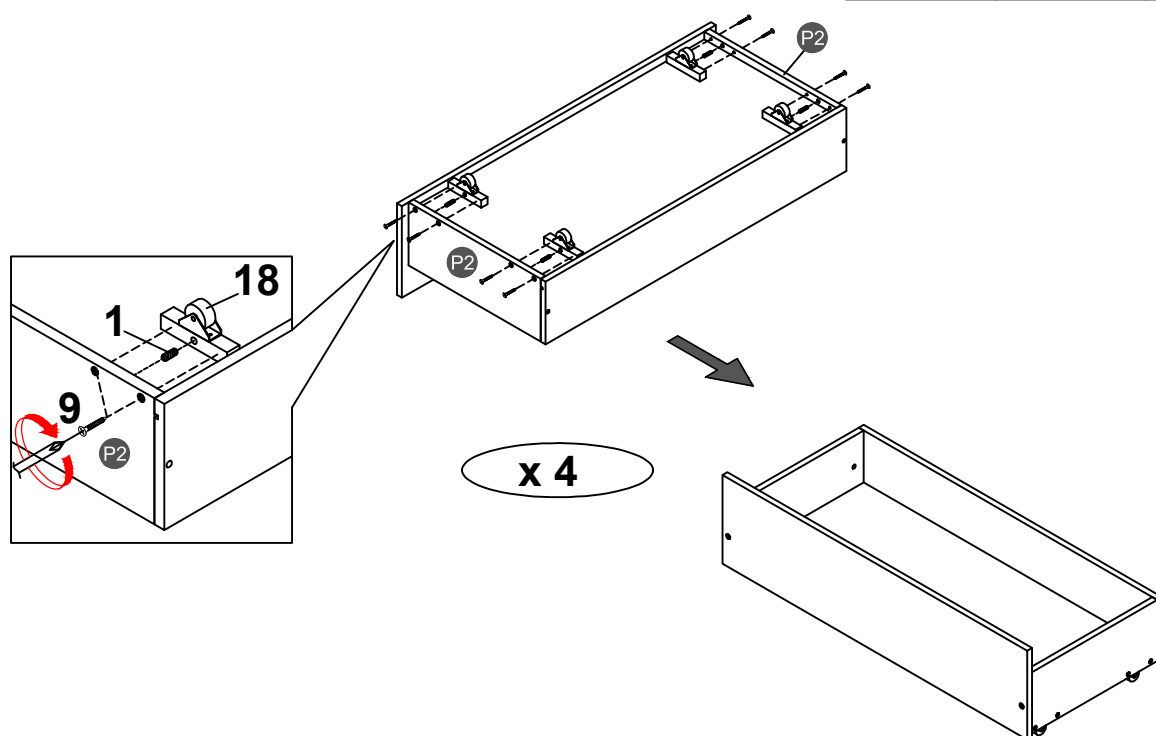

STEP 24:

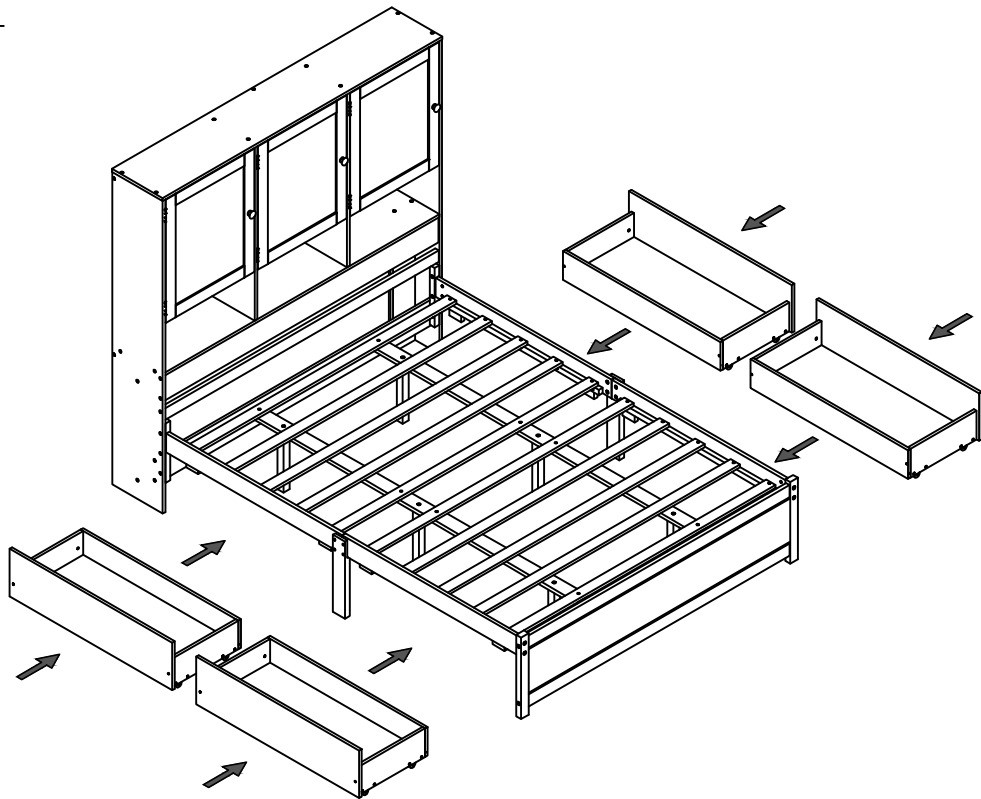


Push Drawer under the bottom of Queen Bed.

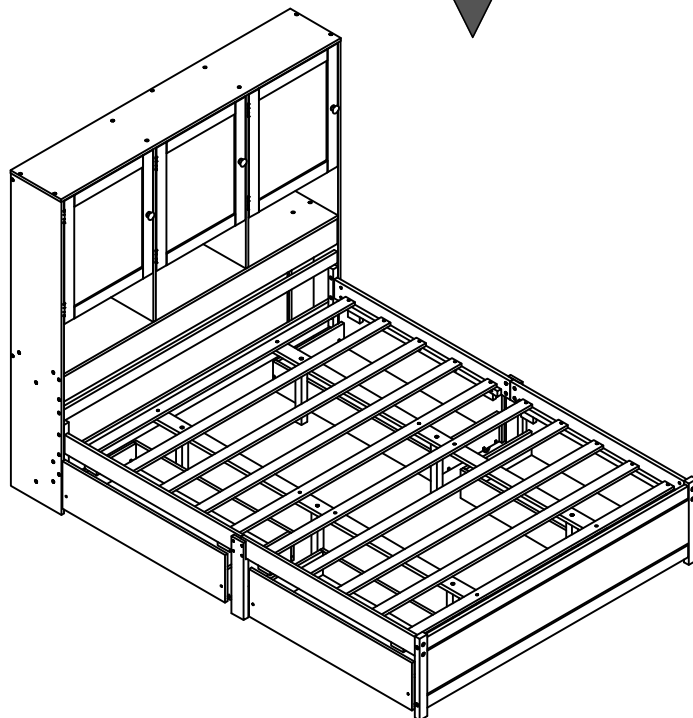


Make sure to tighten all the screws of the bed.

STEP A:

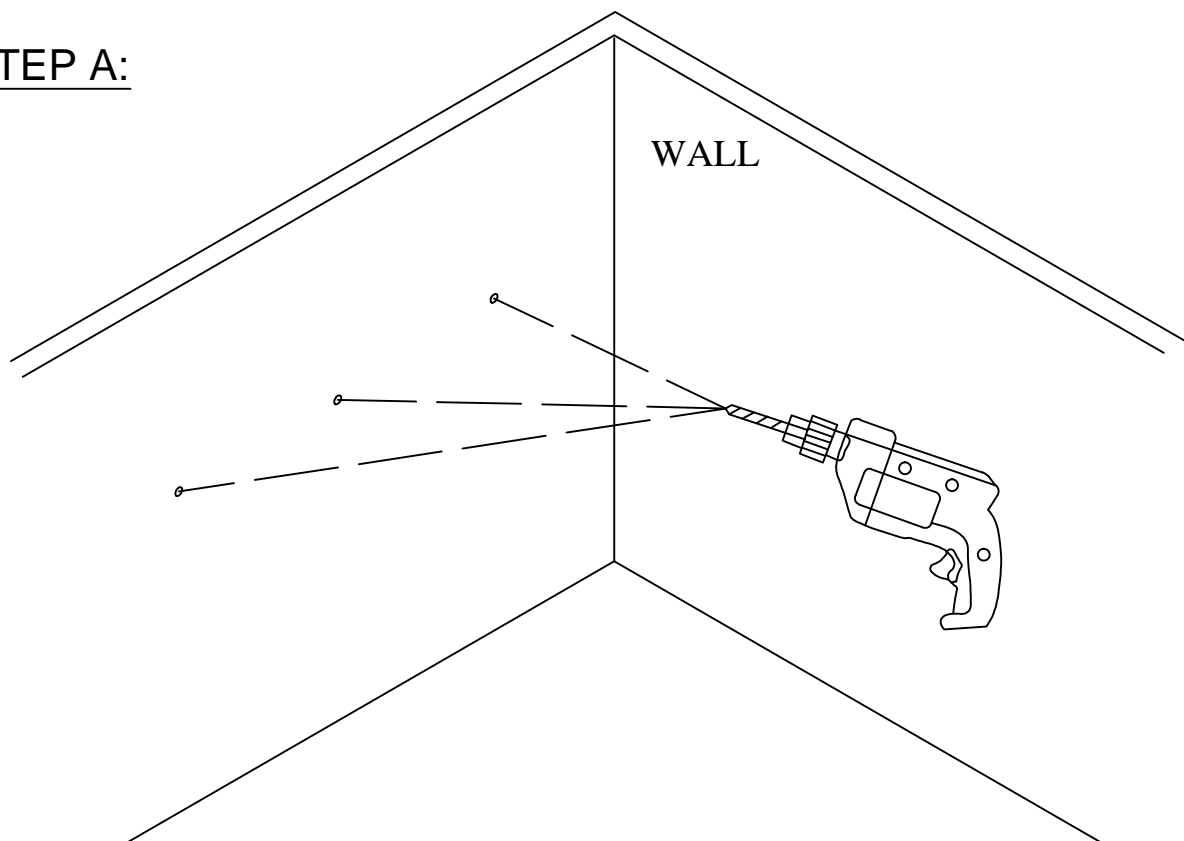

Drill holes in the wall.

STEP B:

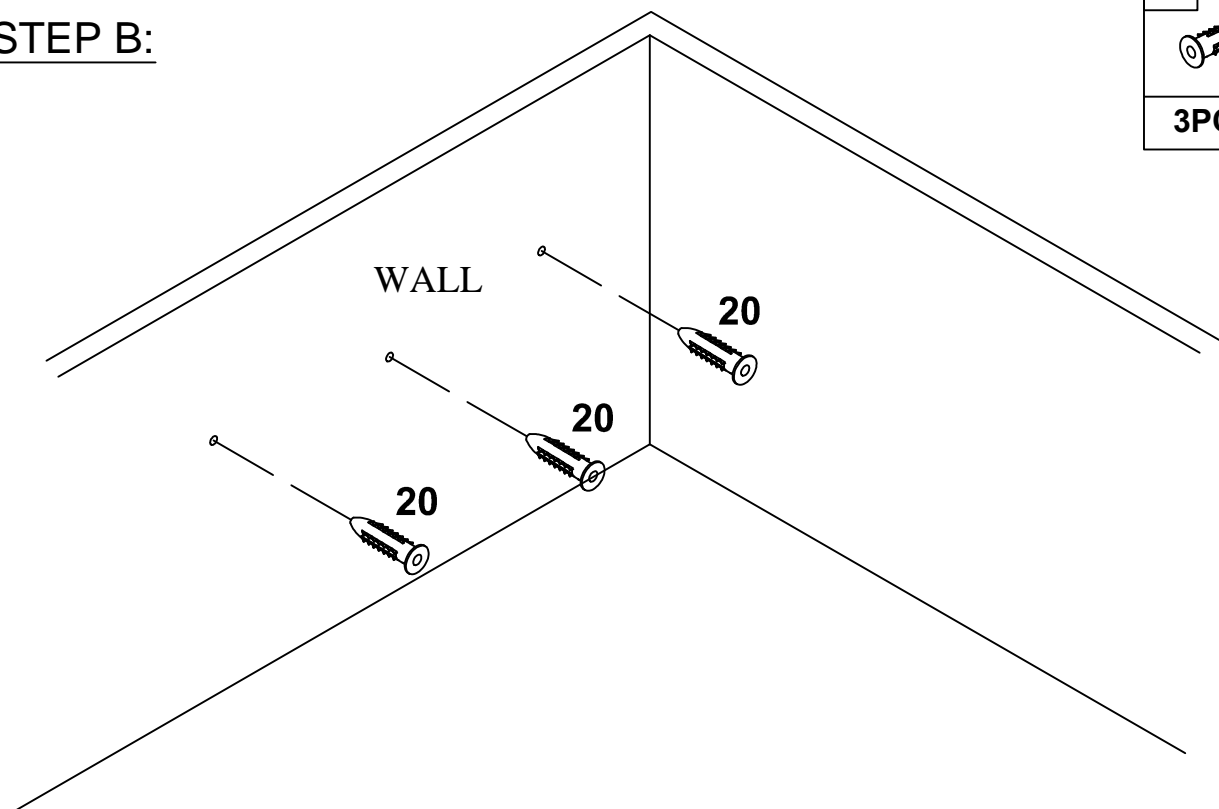




20




3PCS

To drive plastic anchor into the wall.

STEP C:

10	21	22
		
6PCS	3PCS	3PCS

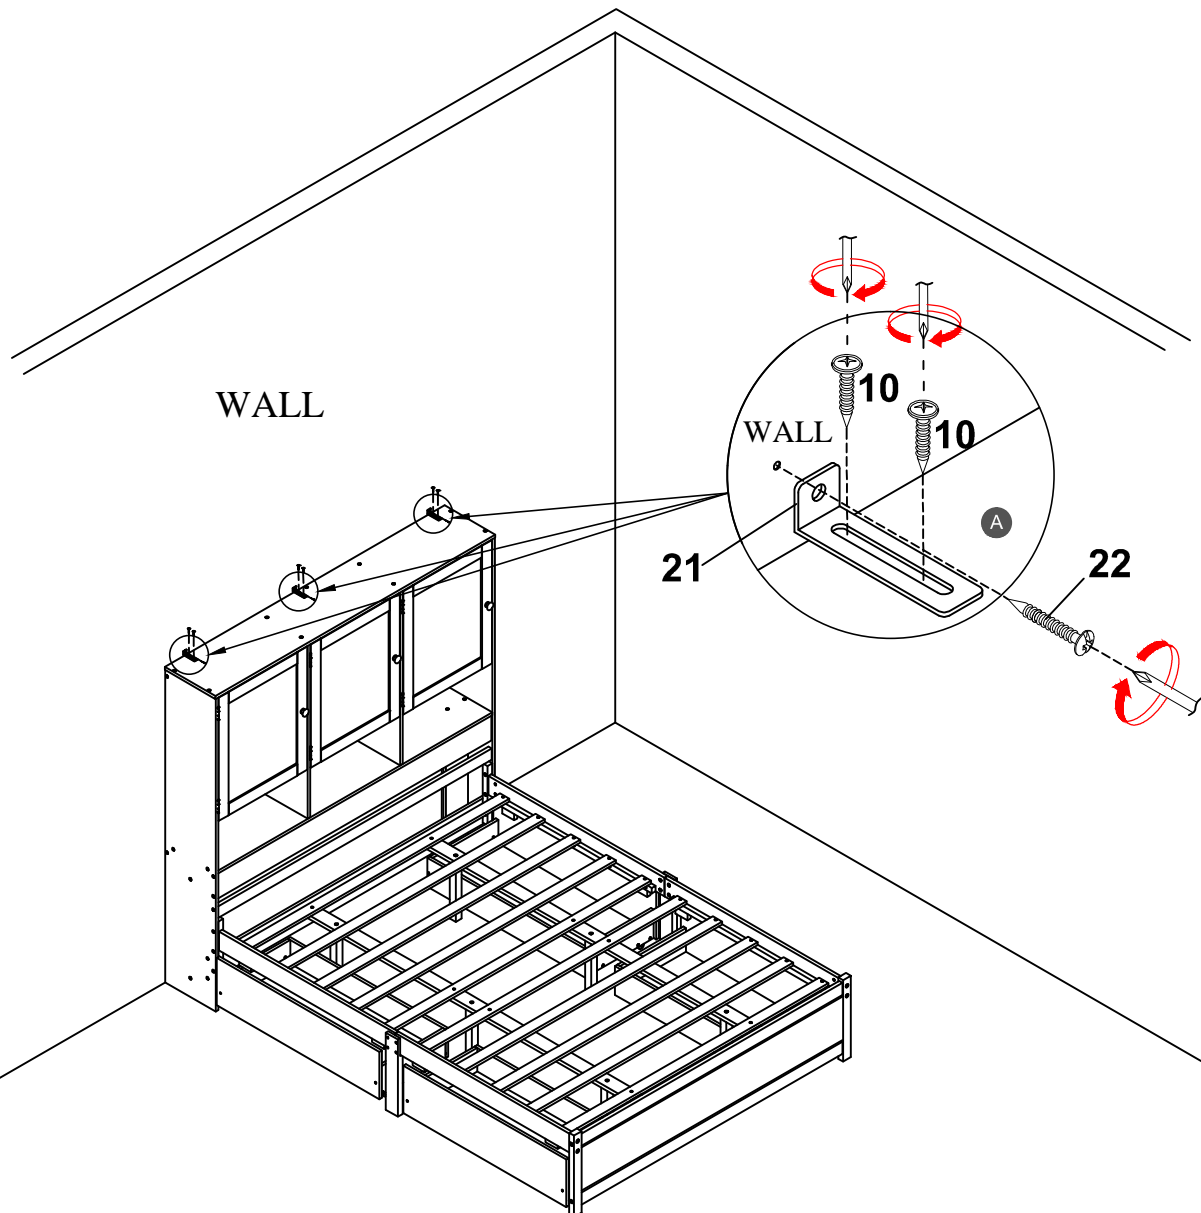

Fix the bracket to the wall with screw.