



TFHCQBW2DR

Assembly Instructions

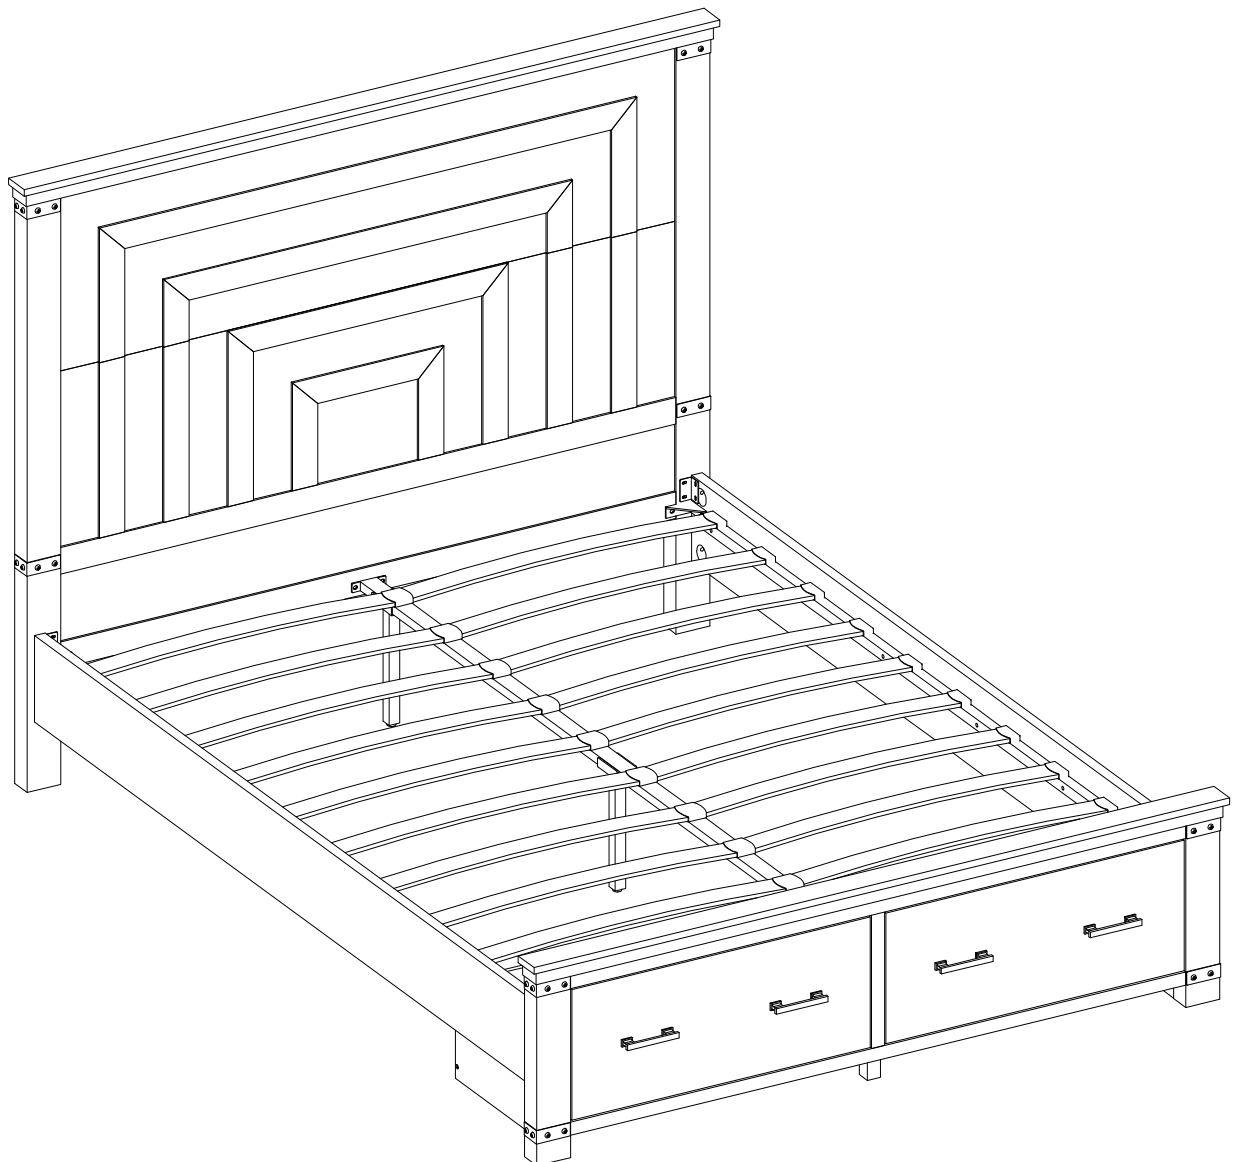


General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. A Phillips head screwdriver is required for the assembly of this product .

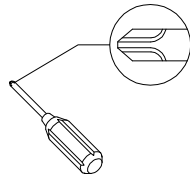

- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

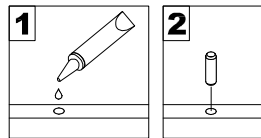


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

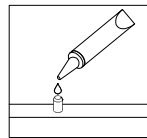


VI HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS


- 1.Screw the Cam Bolt into the pre-drilled hole on the panel. Make sure Cam Bolt goes into the pre-drilled hole on the end of panel for Cam Lock.
- 2.Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of Cam Lock points towards Cam Bolt.
- 3.Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt.
- 4.Use the sticker to conceal the Cam.

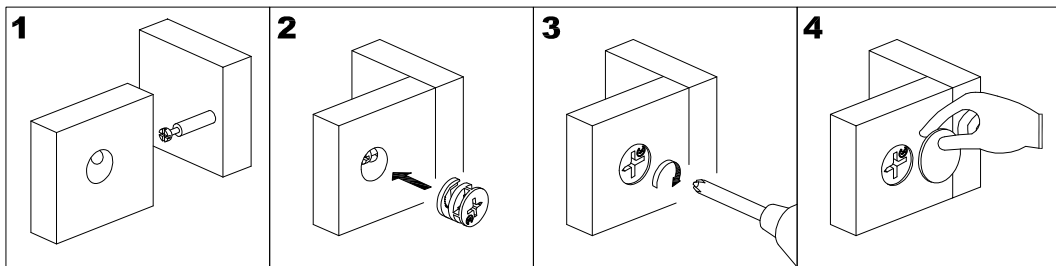










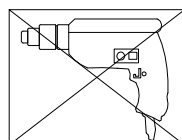





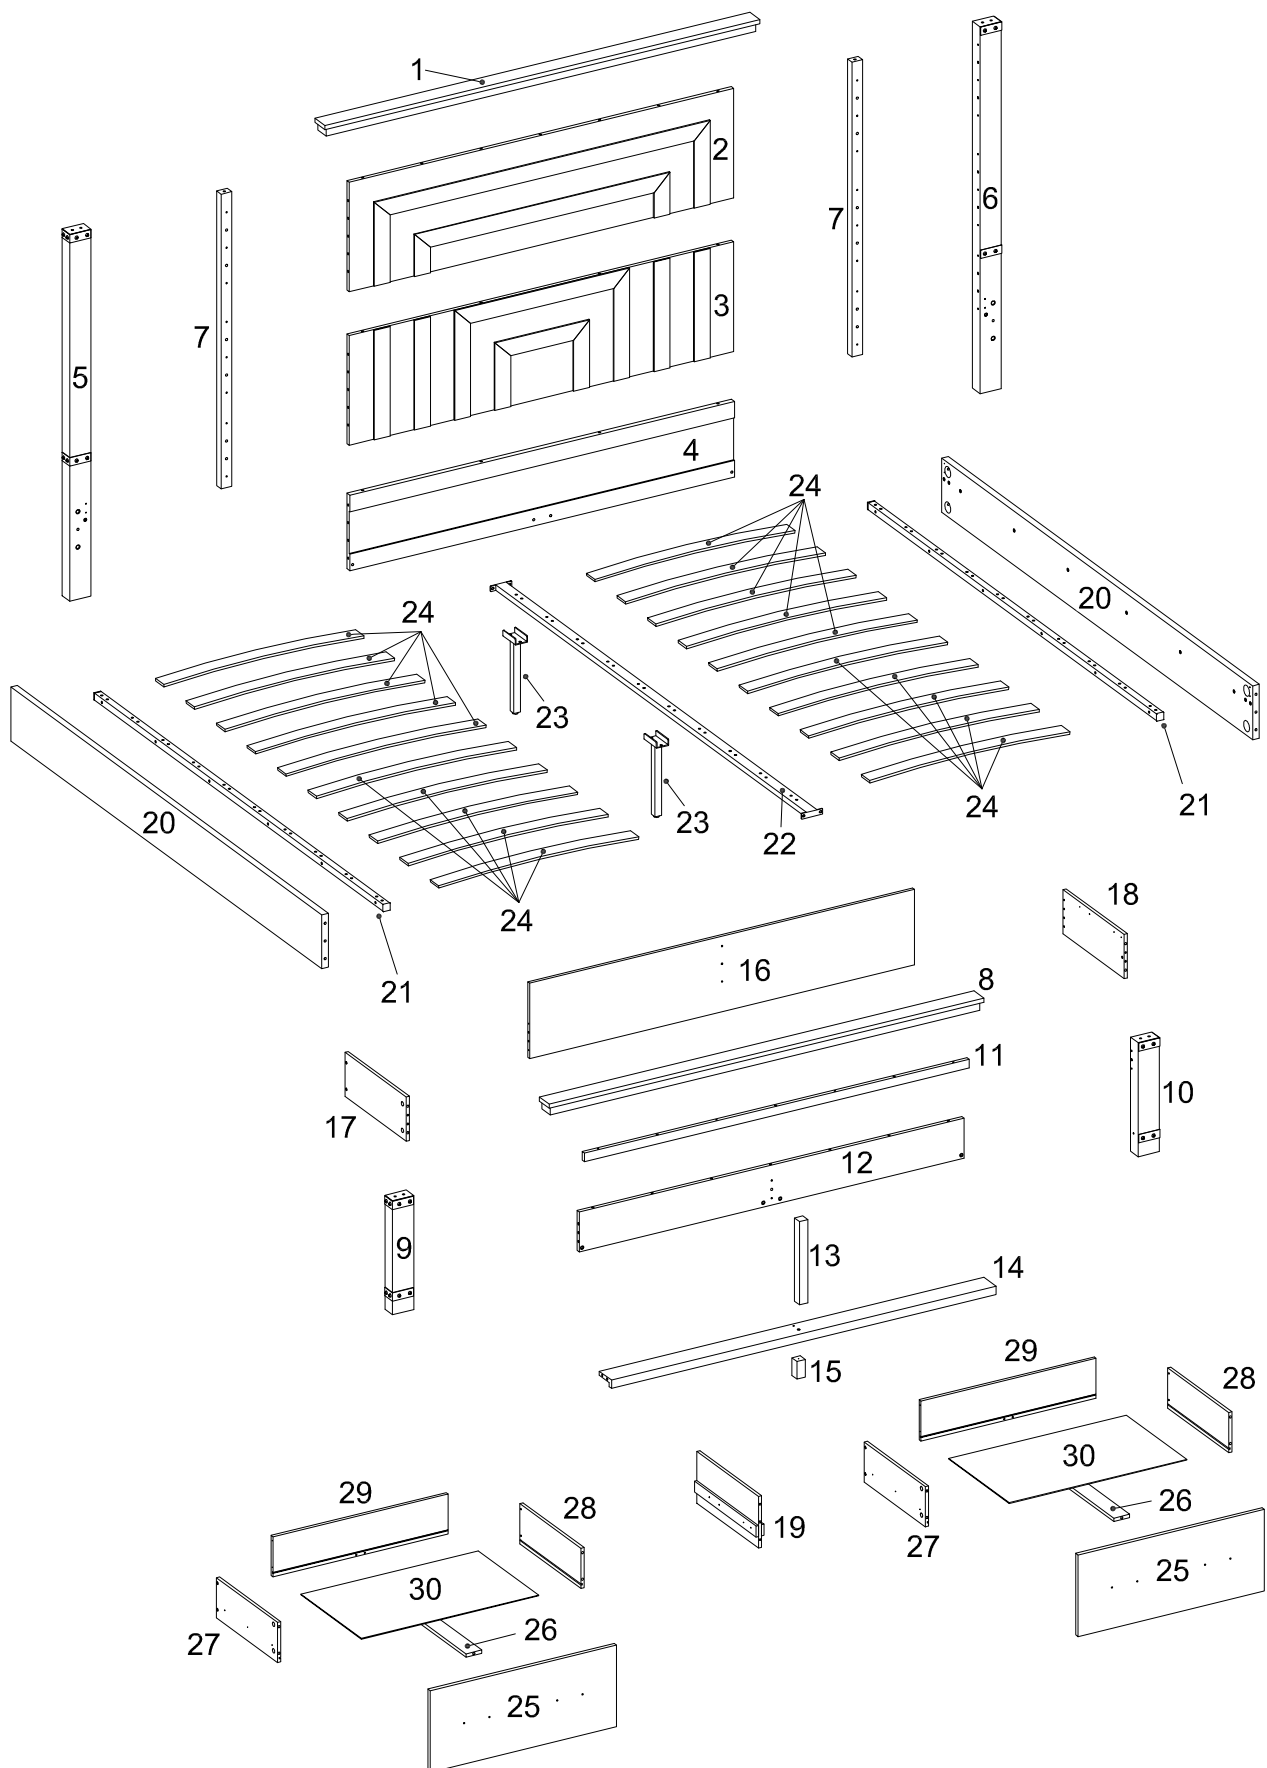


- VII. Power tools should not be used to assemble this product .




Parts List












Hardware List

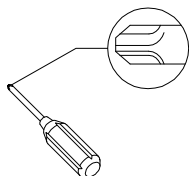
A		Ø8x30mm	Dowel	46 pcs
B		Ø6x35mm	Cam bolt	51 pcs
C		Ø15x11mm	Large Cam lock	36 pcs
D		Ø30mm	Cam cover	51 pcs
E		Ø4x50	Screw	8 pcs
F		Ø4x38	Screw	34 pcs
G			Glue Tube	3 pcs
H		Ø6x16mm	Bolt	24 pcs
J		Ø6x40mm	Bolt	12 pcs
K		Ø3.5x12mm	Screw	28 pcs
L		M 4	Allen wrench	1 pc
M		Ø8x60mm	Bolt	8 pcs
N			Washer	8 pcs
P			Nut	8 pcs
Q			Spanner wrench	1 pc
R		Ø8x40mm	Long dowel	8 pcs
S		Ø6x30mm	Small Dowel	11 pcs
T		Ø15x9mm	Small cam lock	15 pcs



Philips head screwdriver required for assembly
(not included)


Hardware List

U		Ø38mm	Plastic cap	6 pcs
V			Single end plastic parts	20 pcs
W			Double-ended plastic parts	10 pcs
X			Triangular iron sheet	4 pcs
Y		Ø4x12mm	Screw	8 pcs
Z			“L” Shaped Metal bracket	2 pcs
AA			Knob	4 pcs
BB		Ø4x22mm	Knob bolt	8 pcs
CC		16"	Drawer slider	2 sets


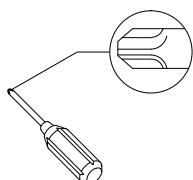


Philips head screwdriver required for assembly
(not included)

Step 1

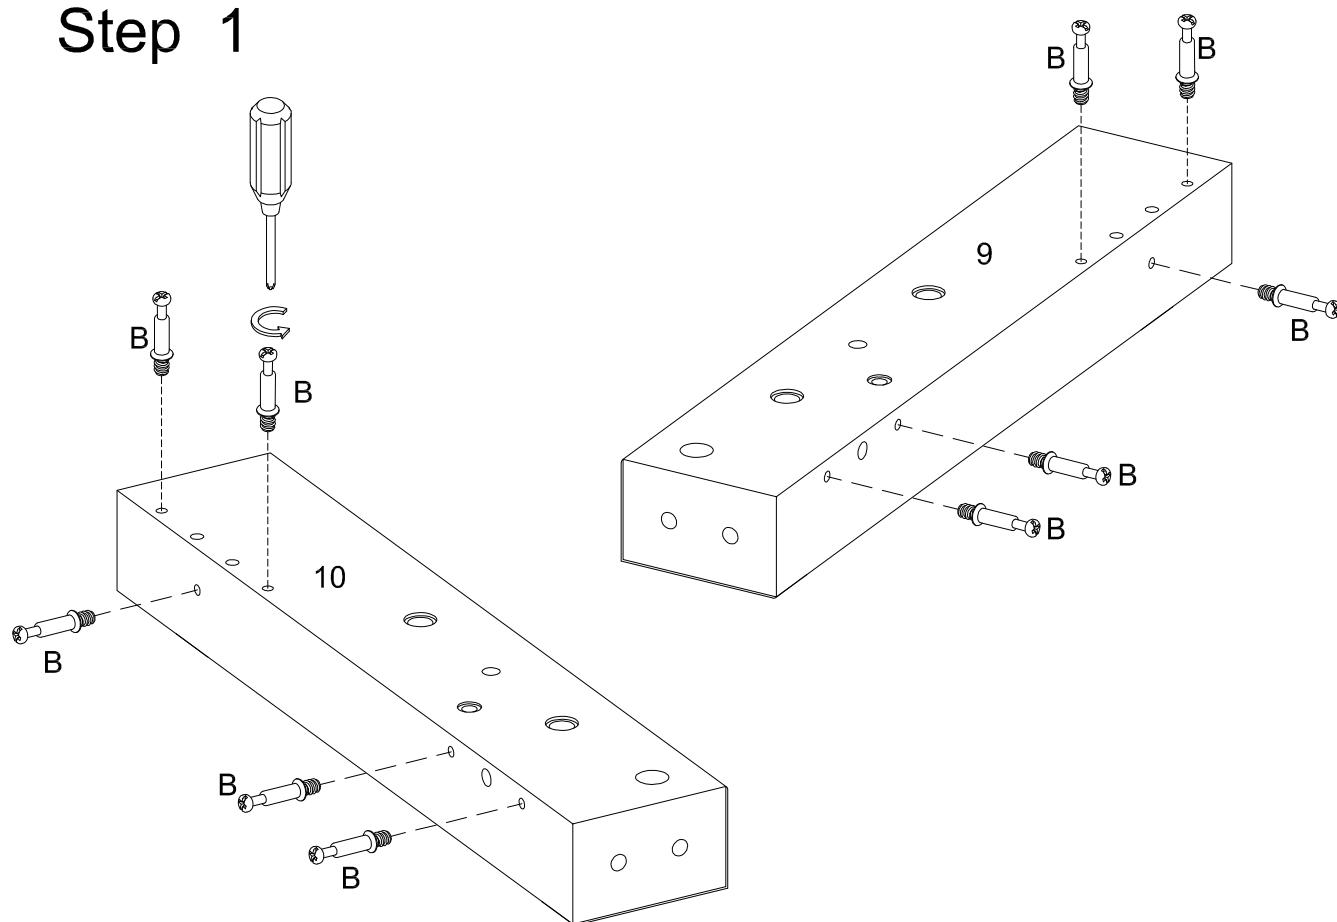


Step 2

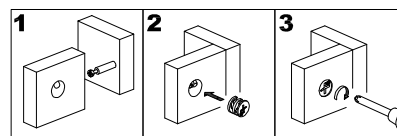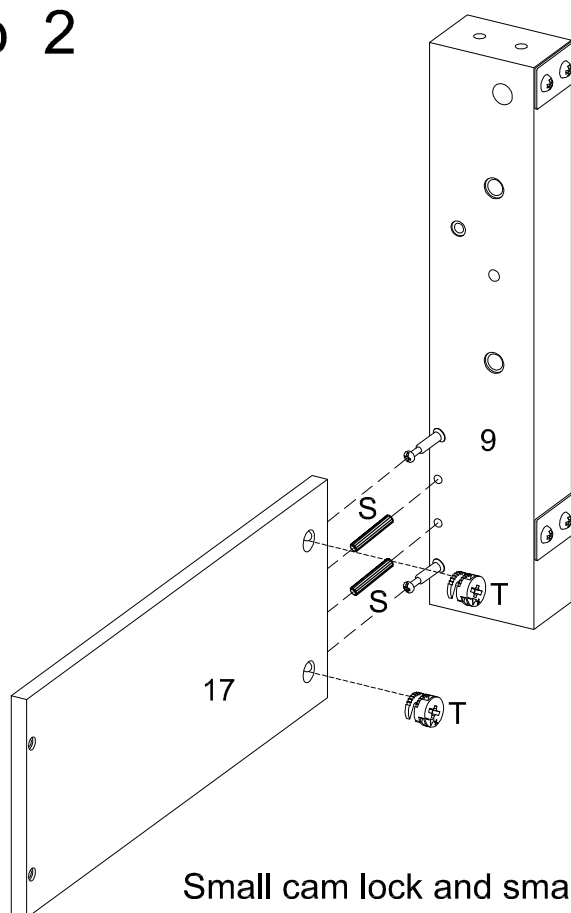


Small cam lock and small wooden dowel

Step 3

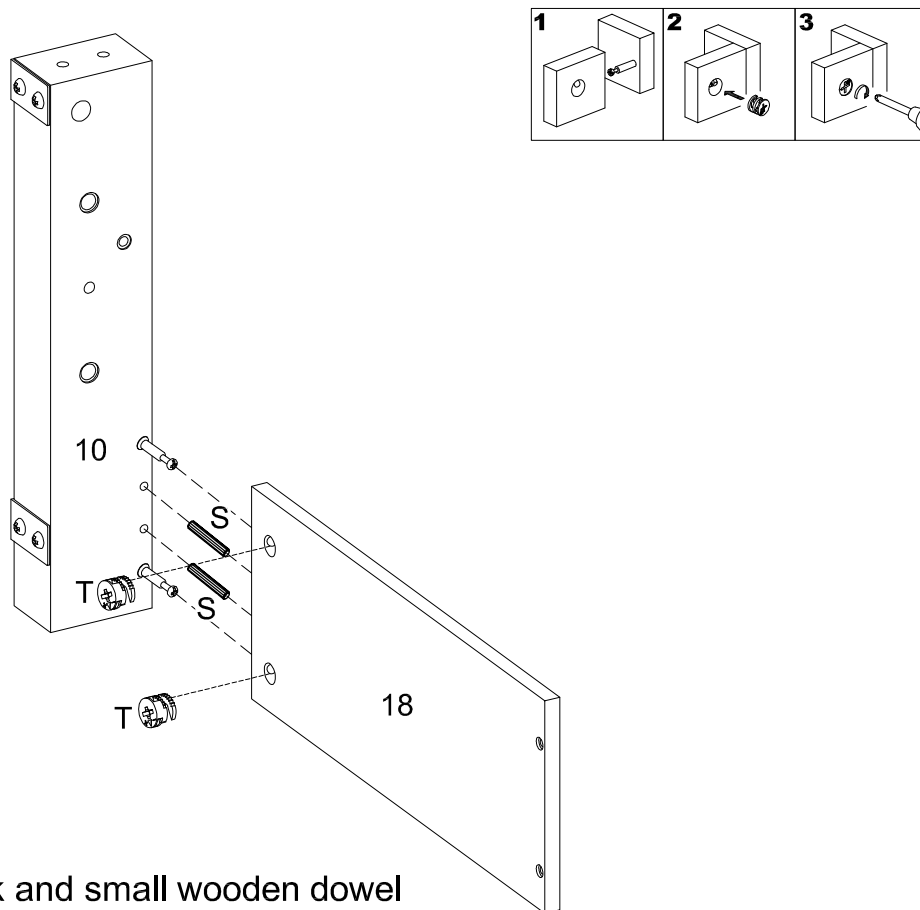


Small cam lock and small wooden dowel

Step 4

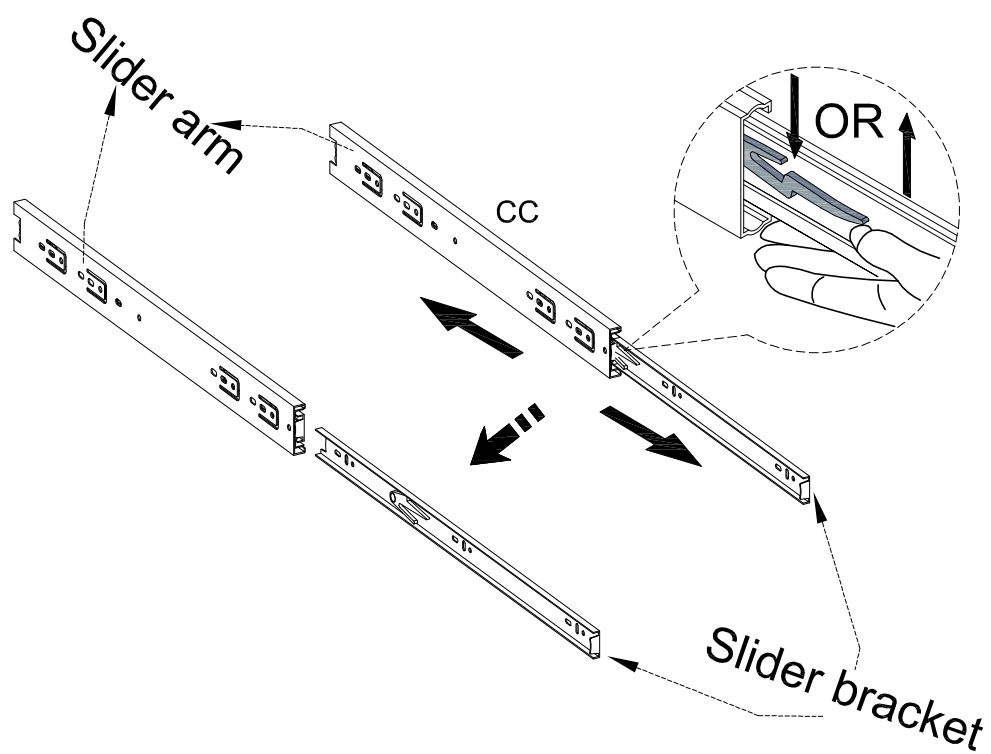


Step 5


OPEN →

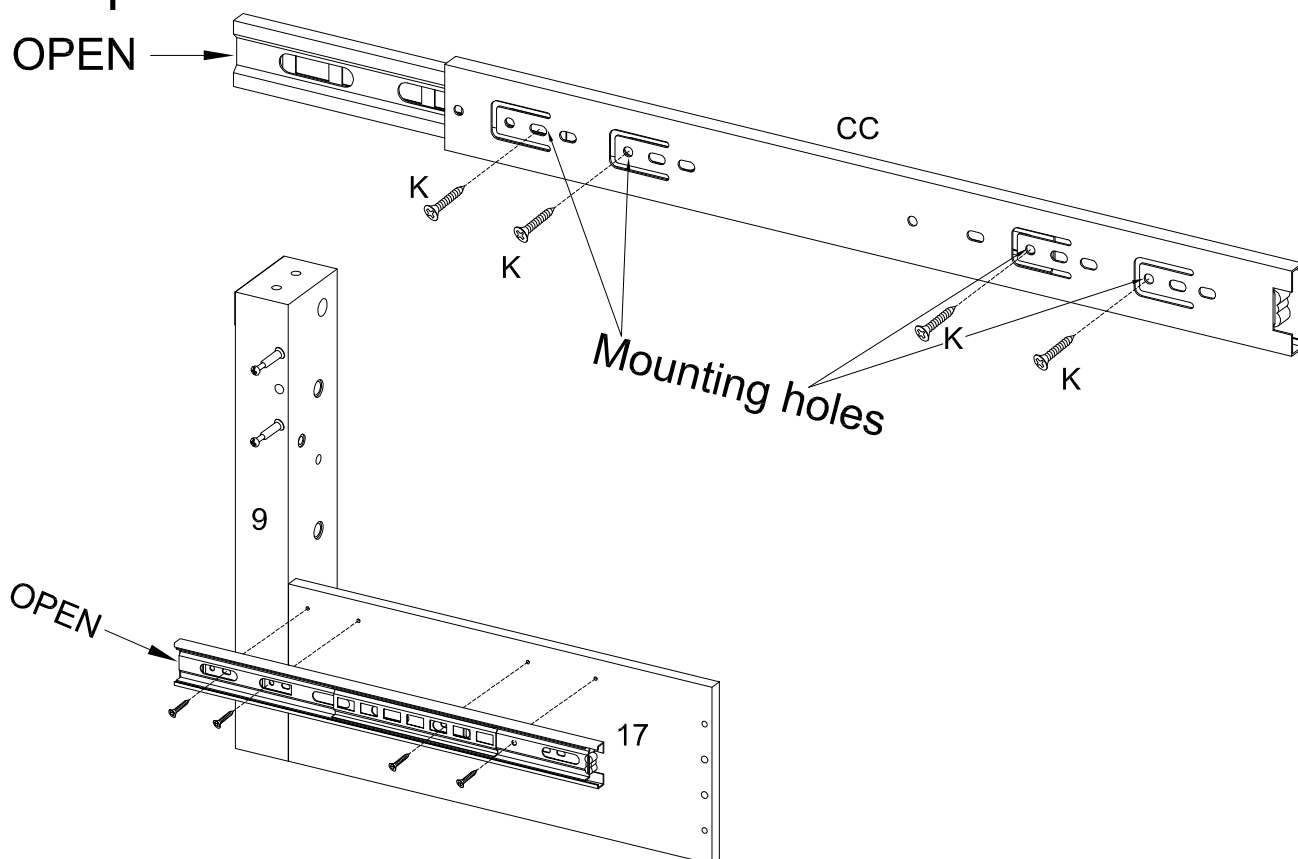


Step 6

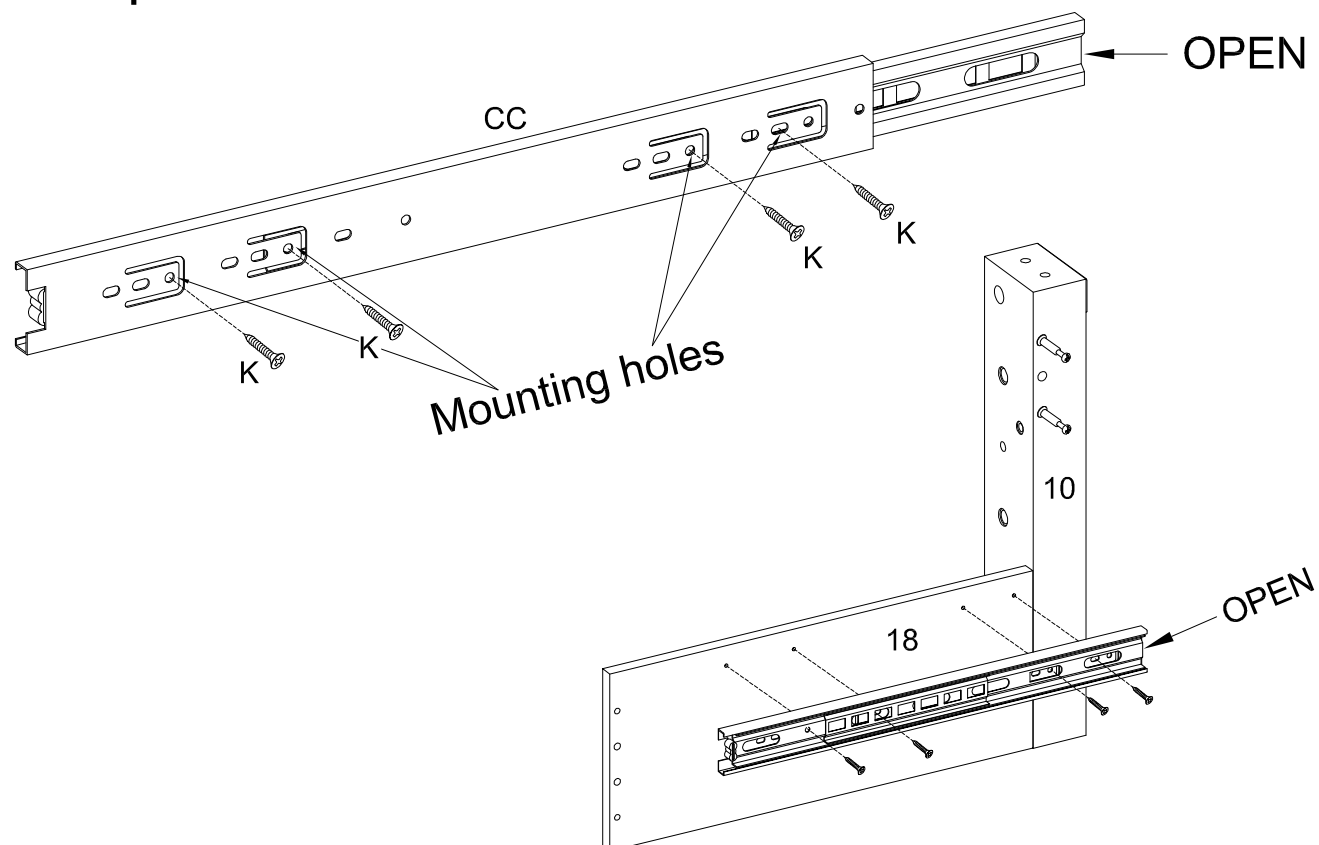


Step 7

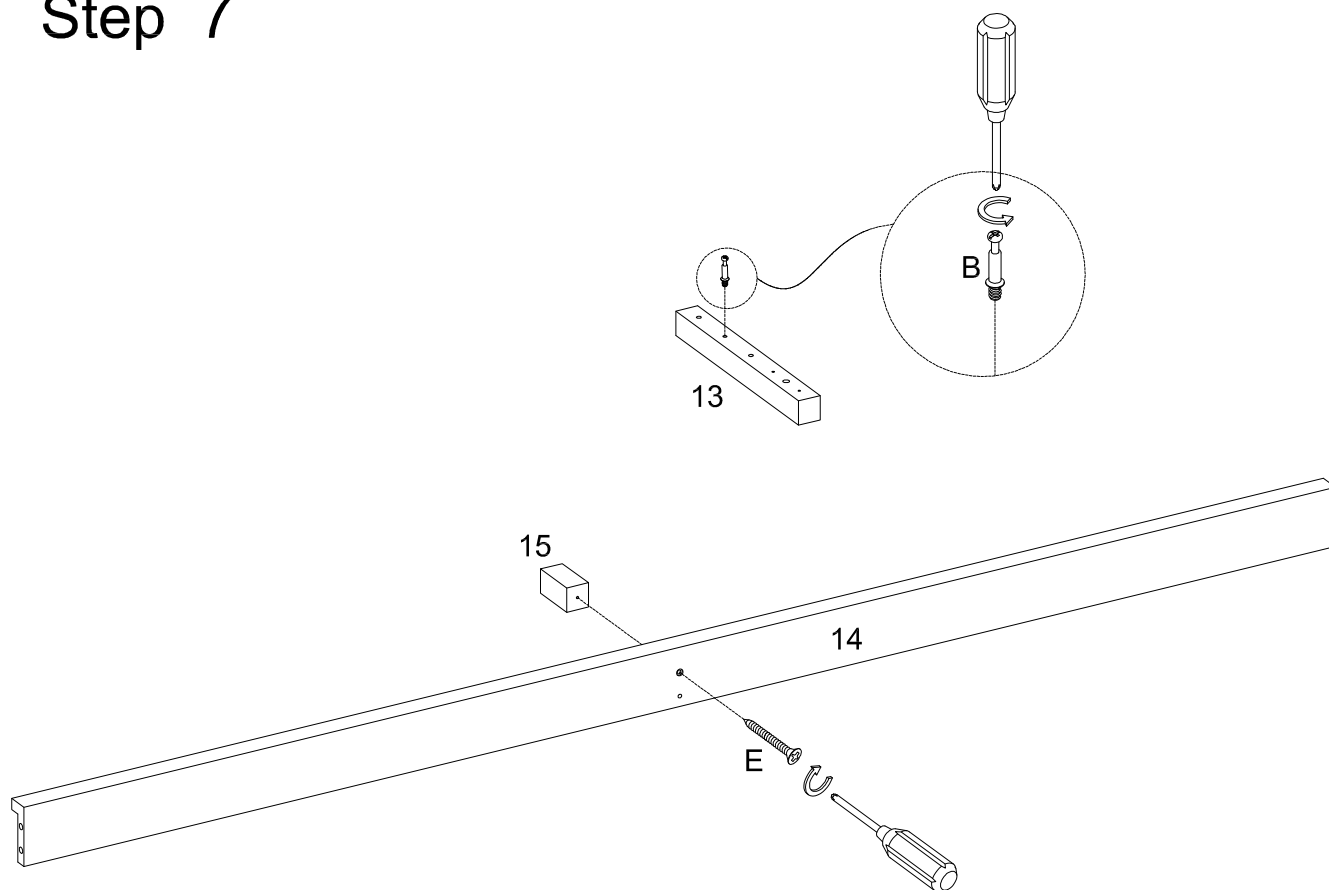


Step 8

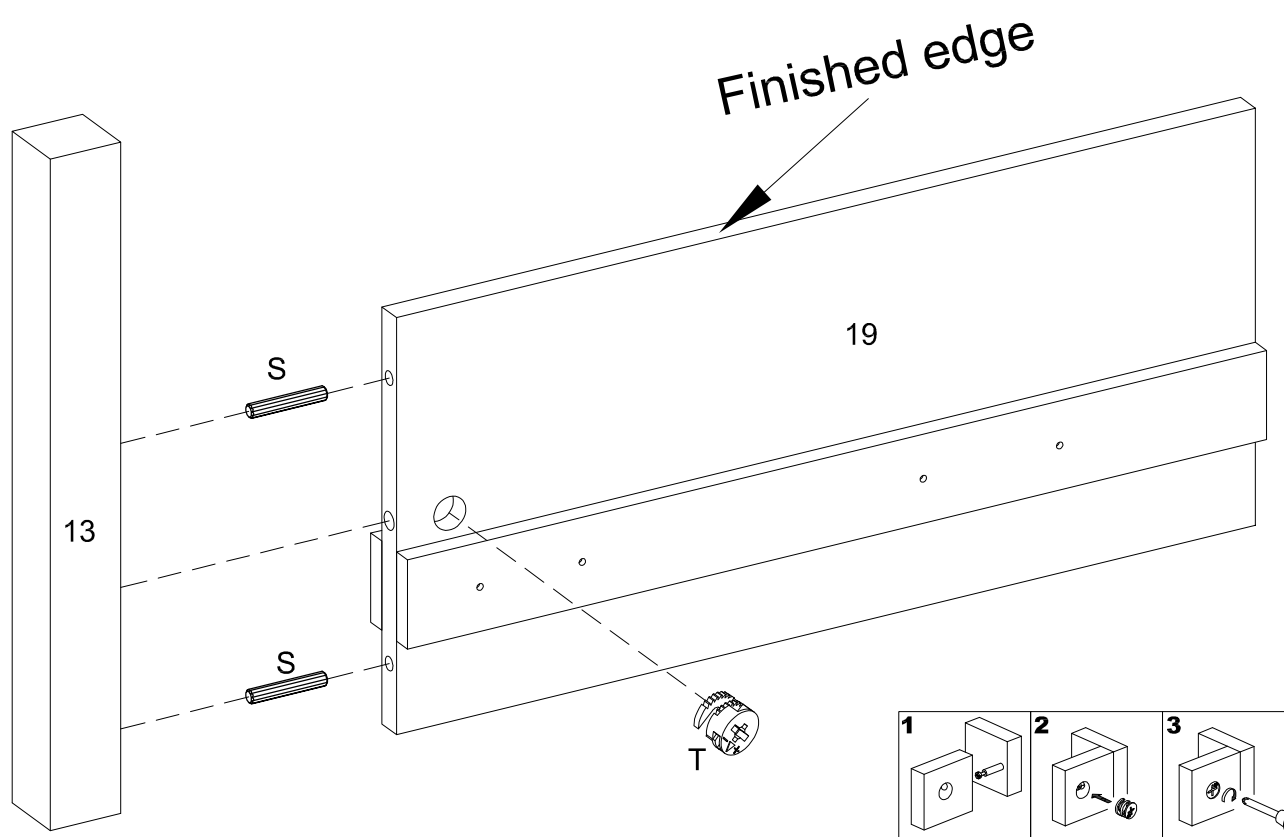


Step 9

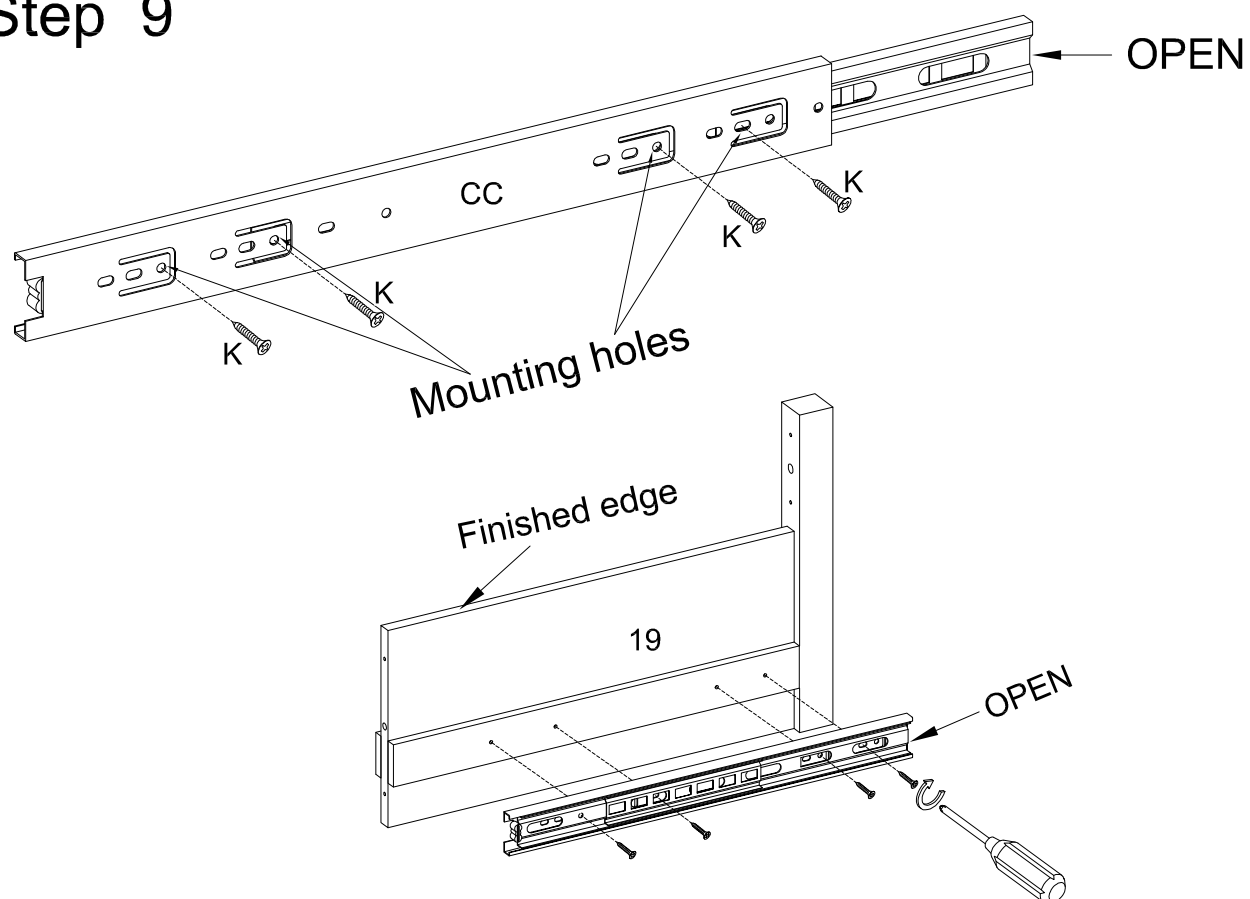


Step 10

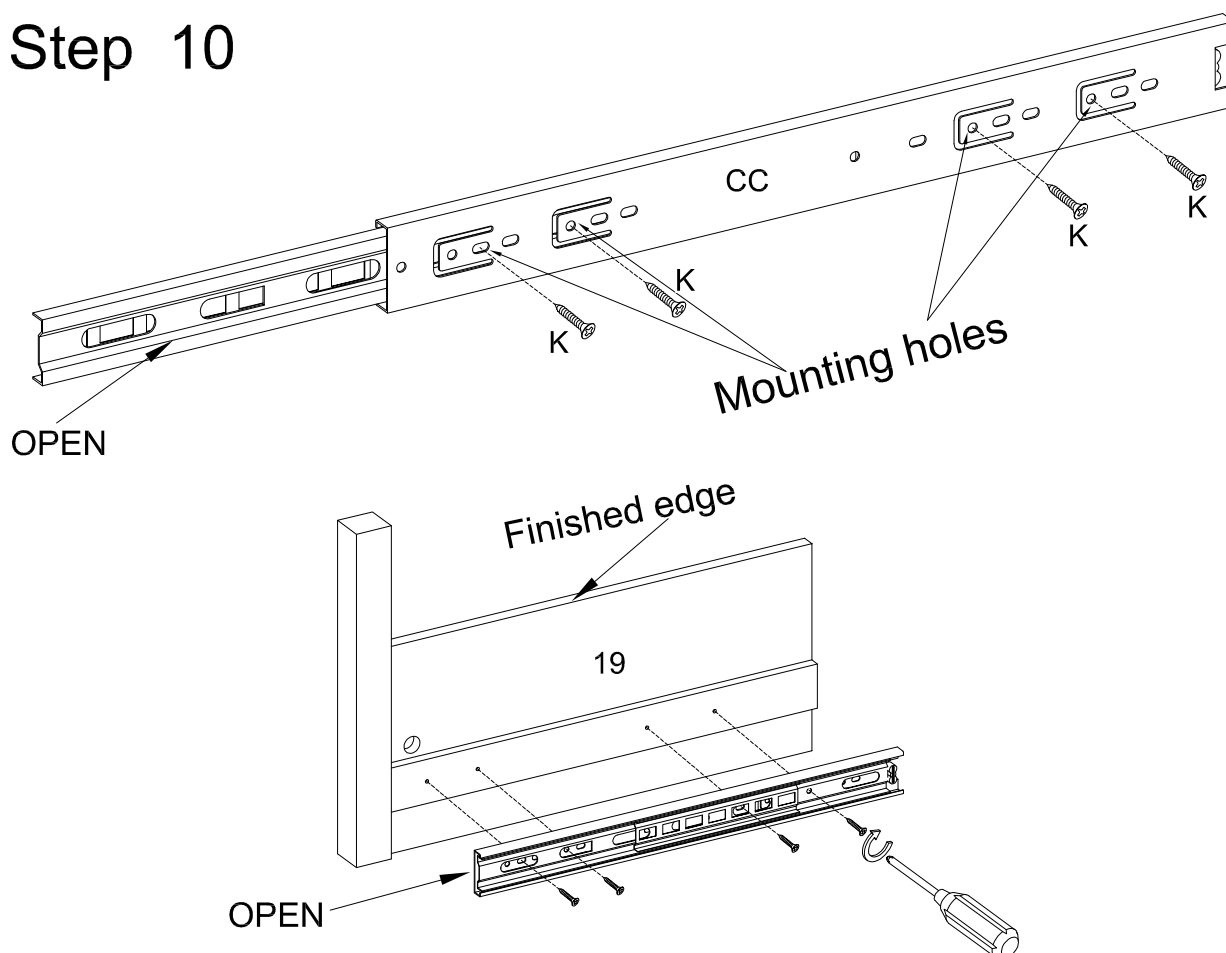


Step 11

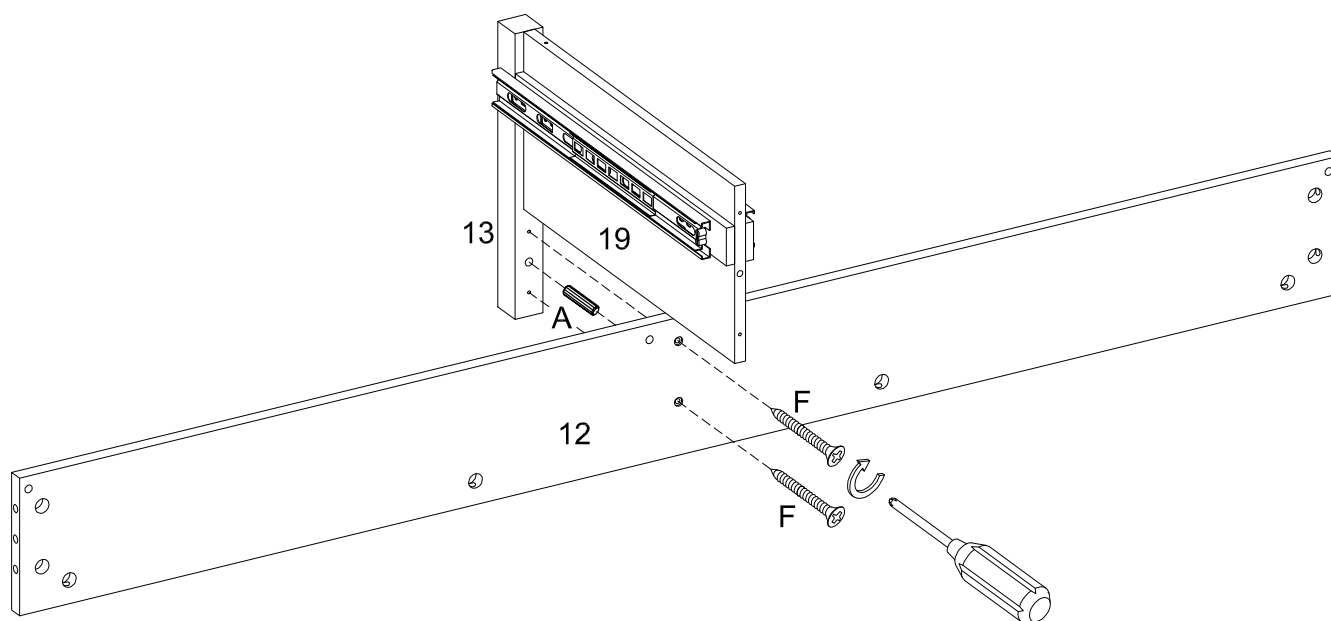



Step 12

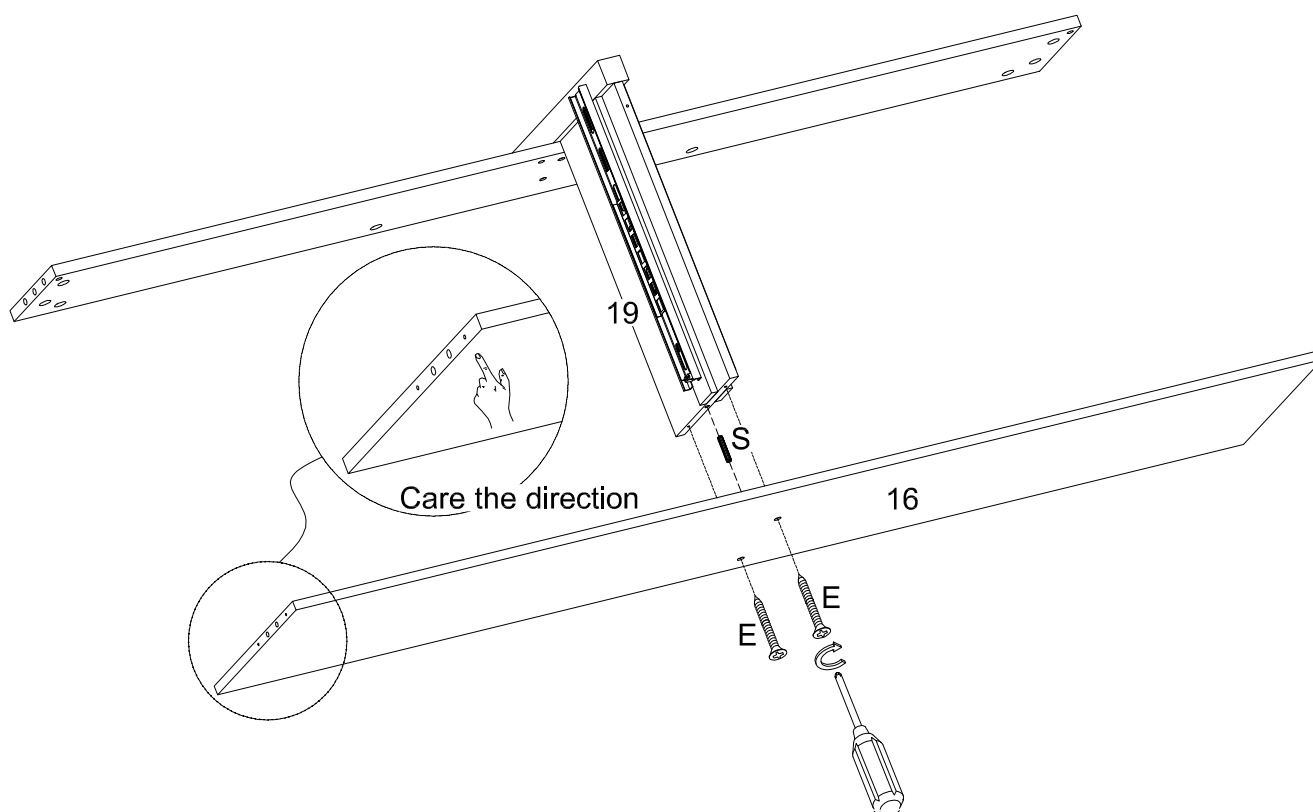


Step 13

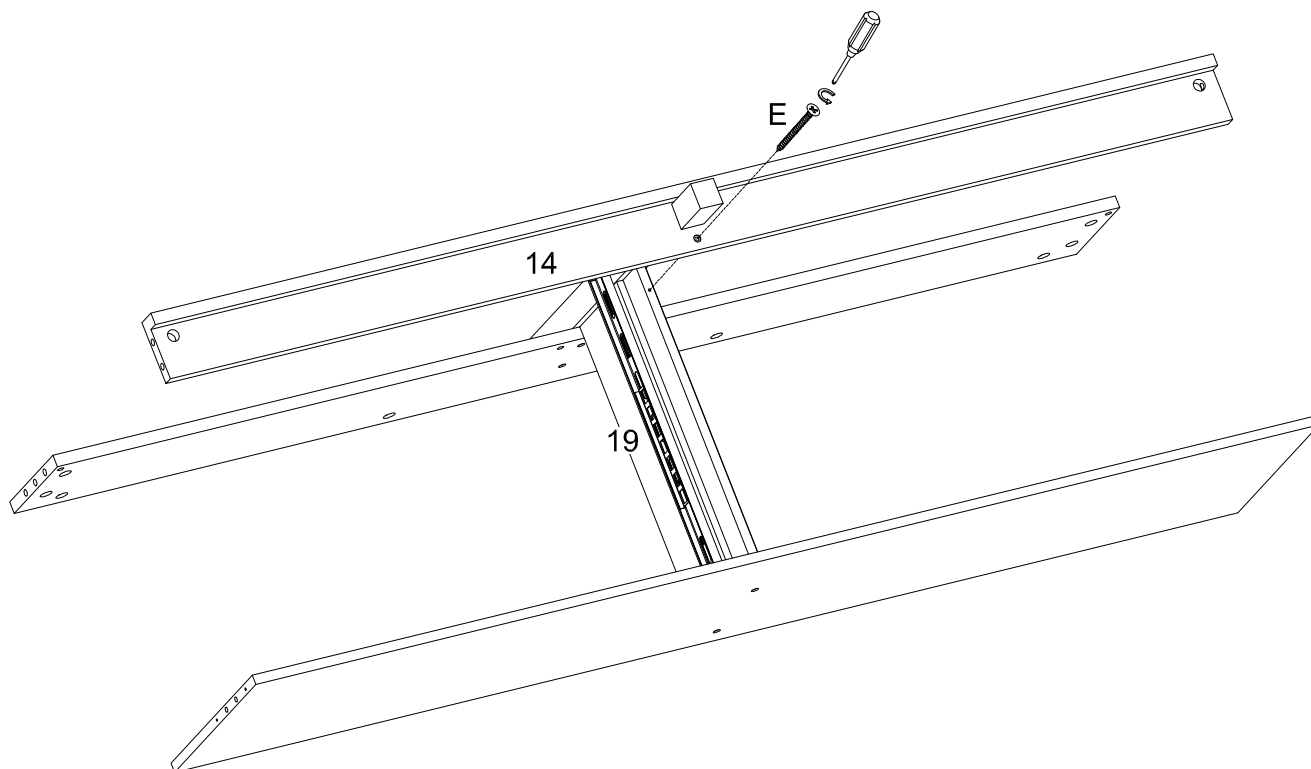


Step 14

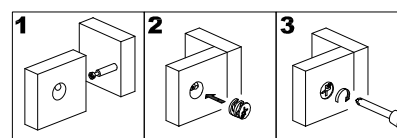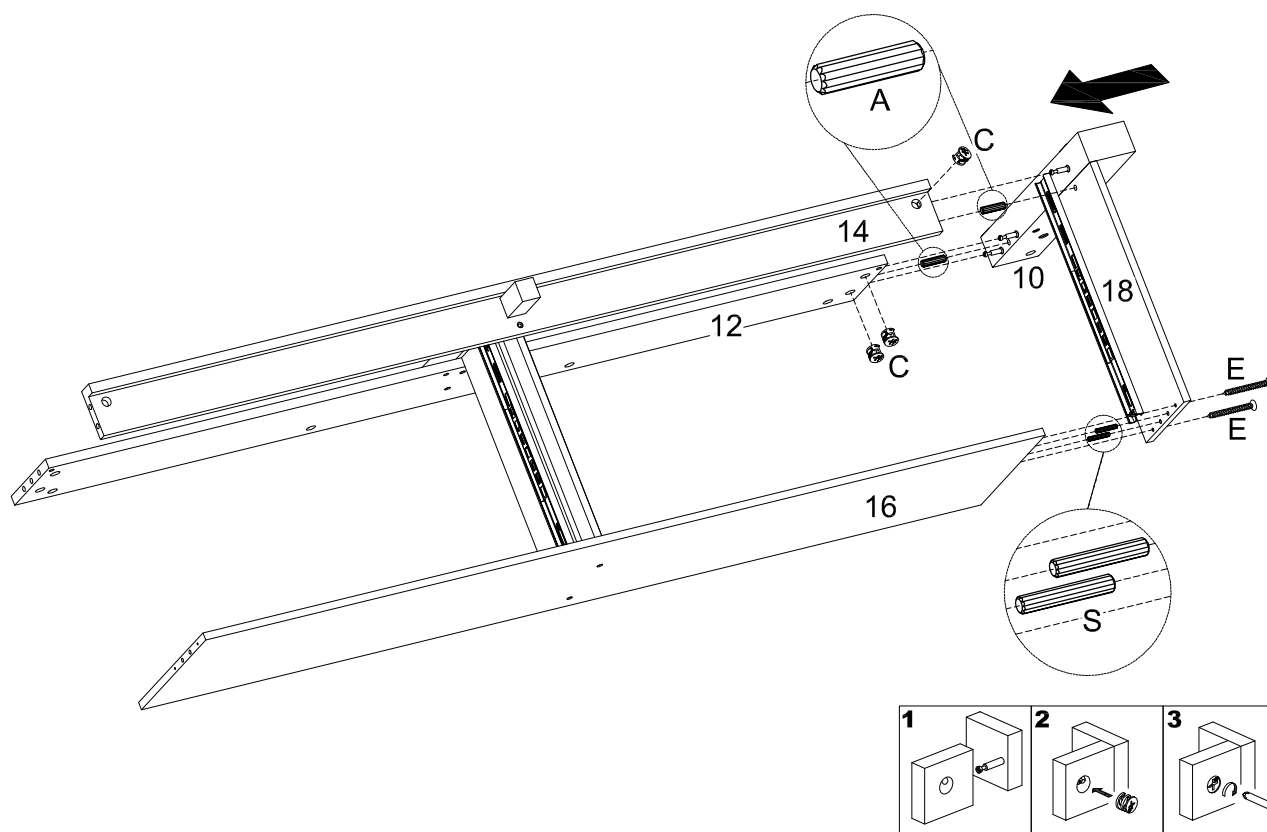


Step 15

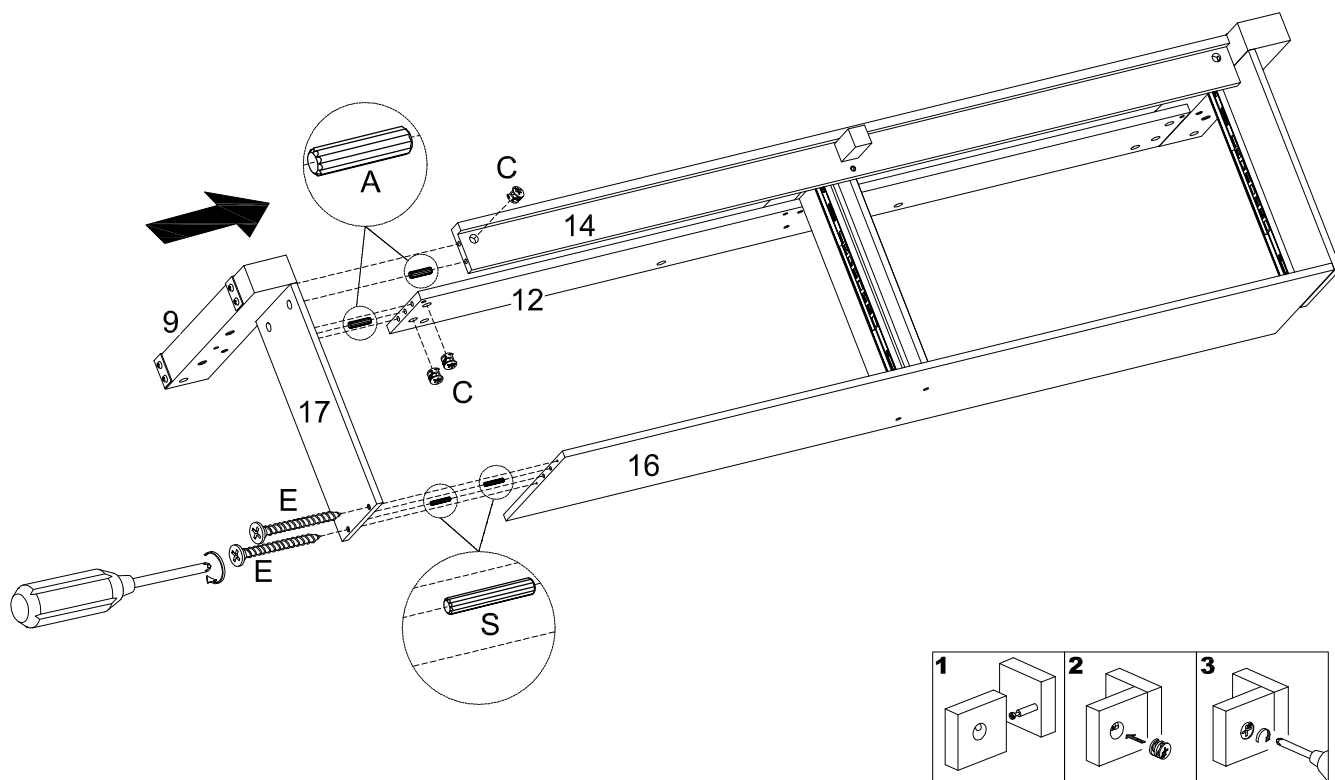



Step 16

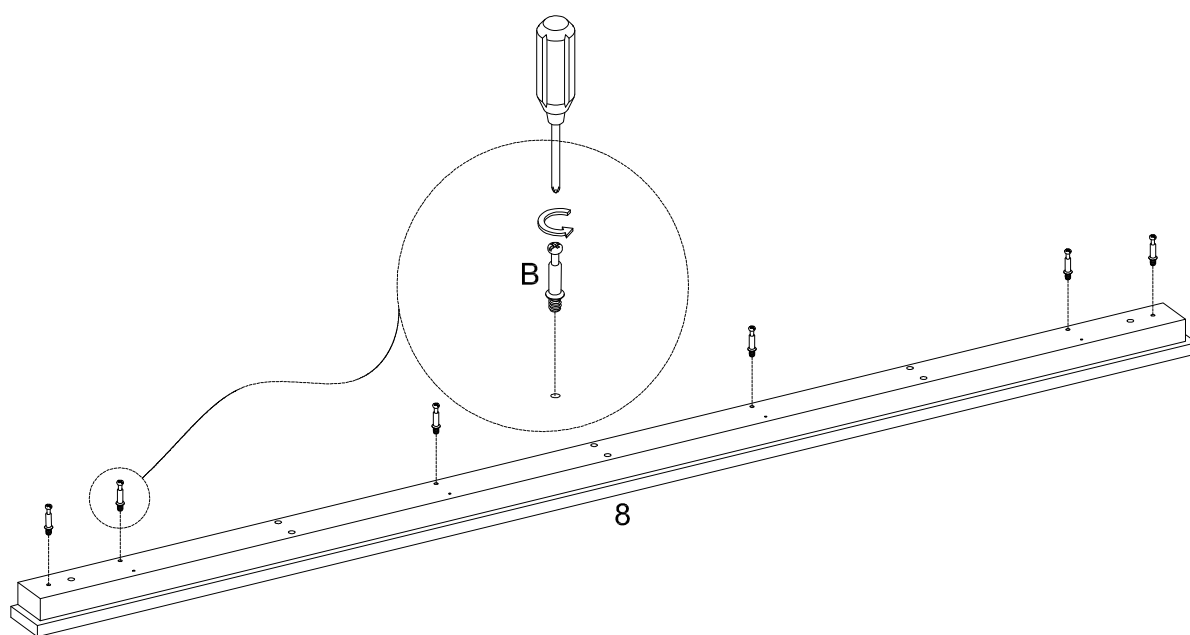


Step 17

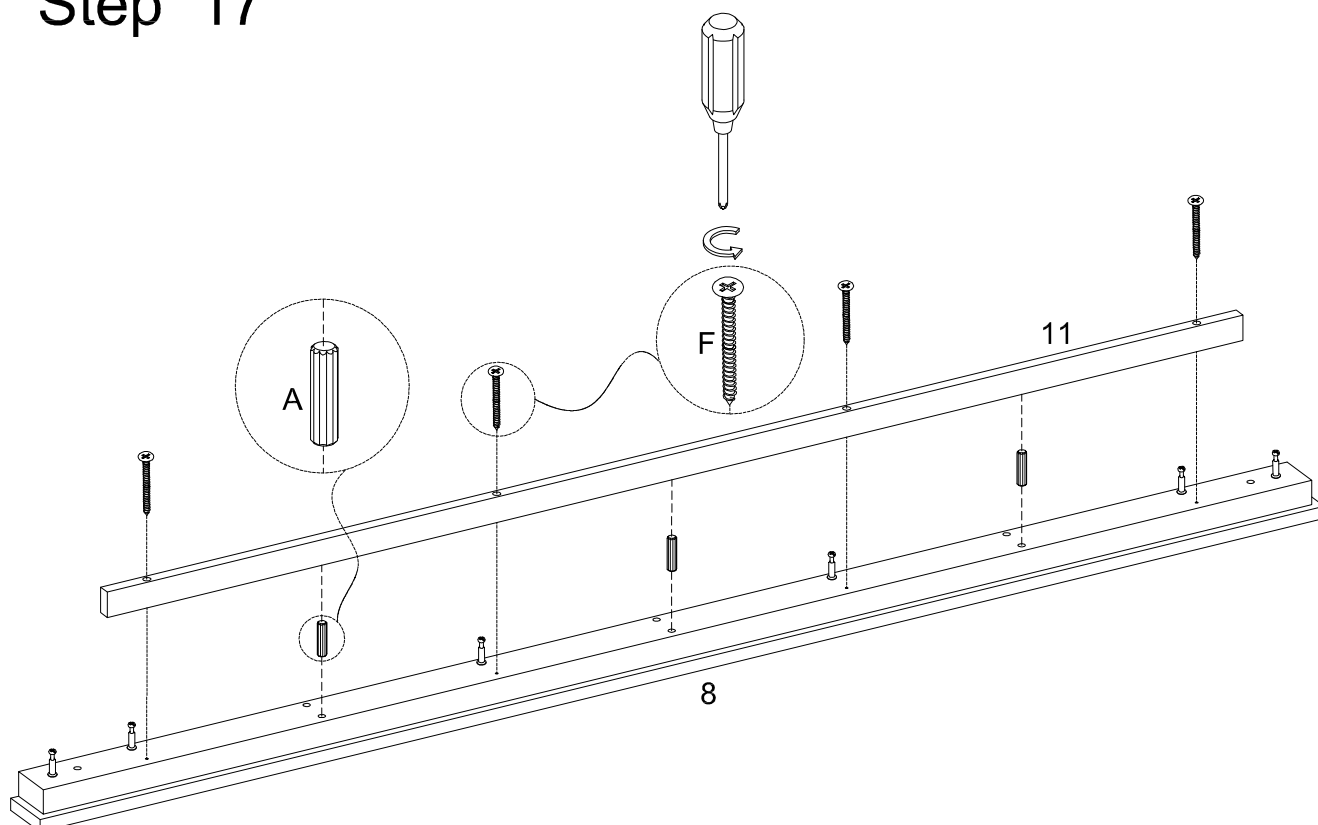


Step 18

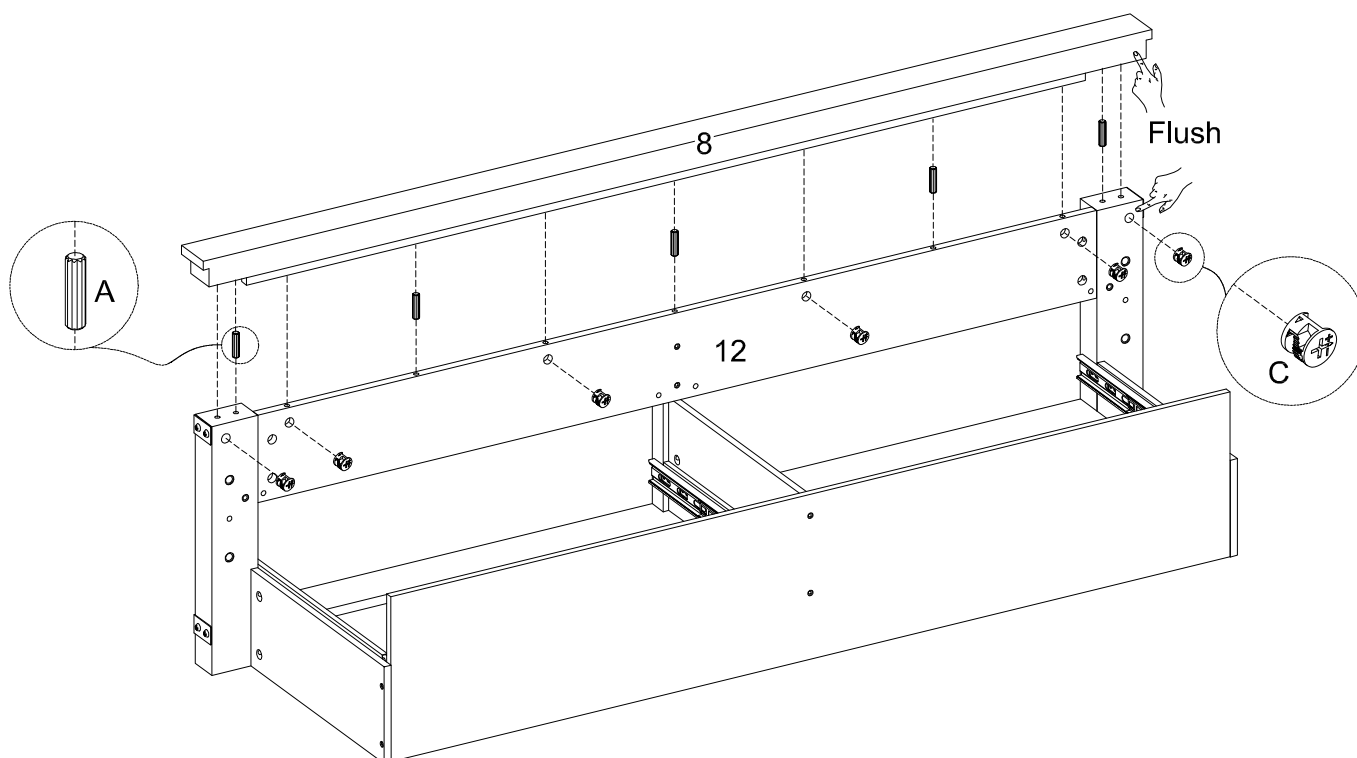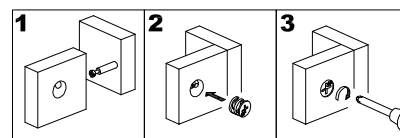


Step 19

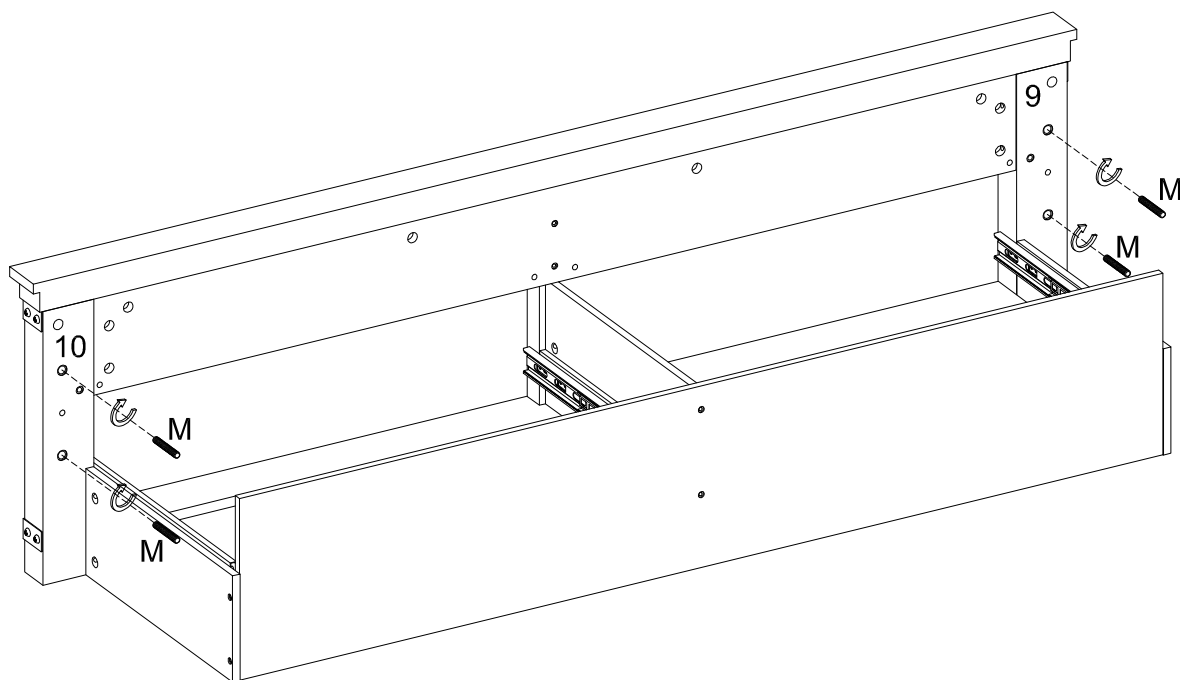


Step 20

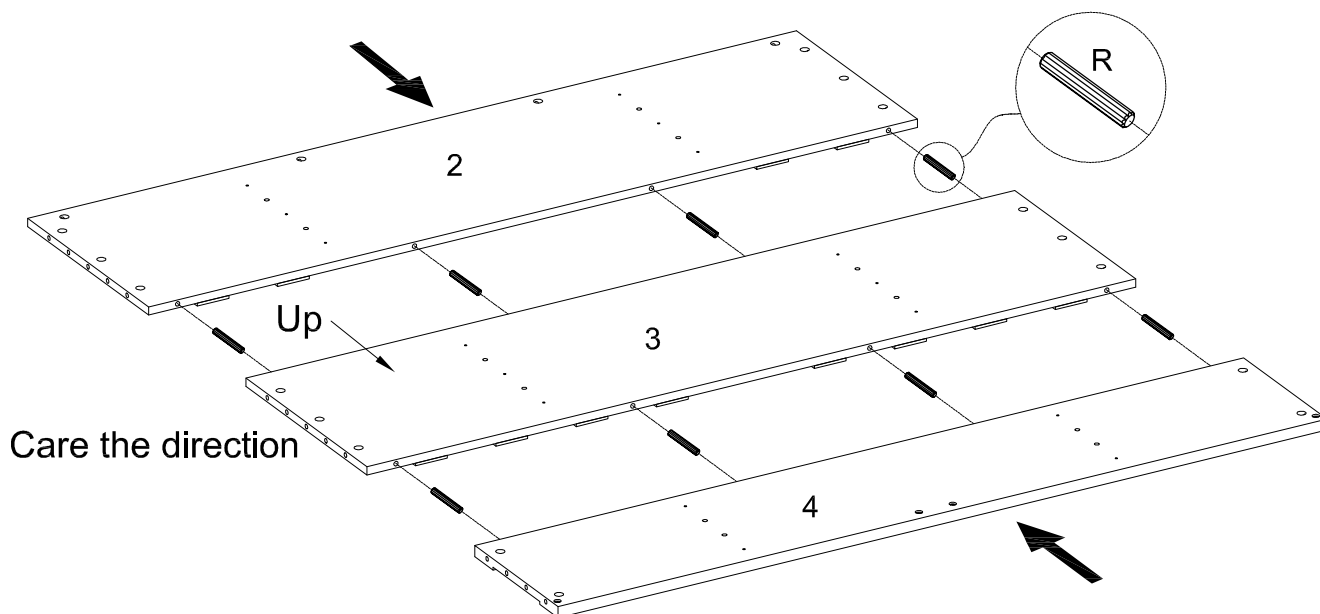



Step 21

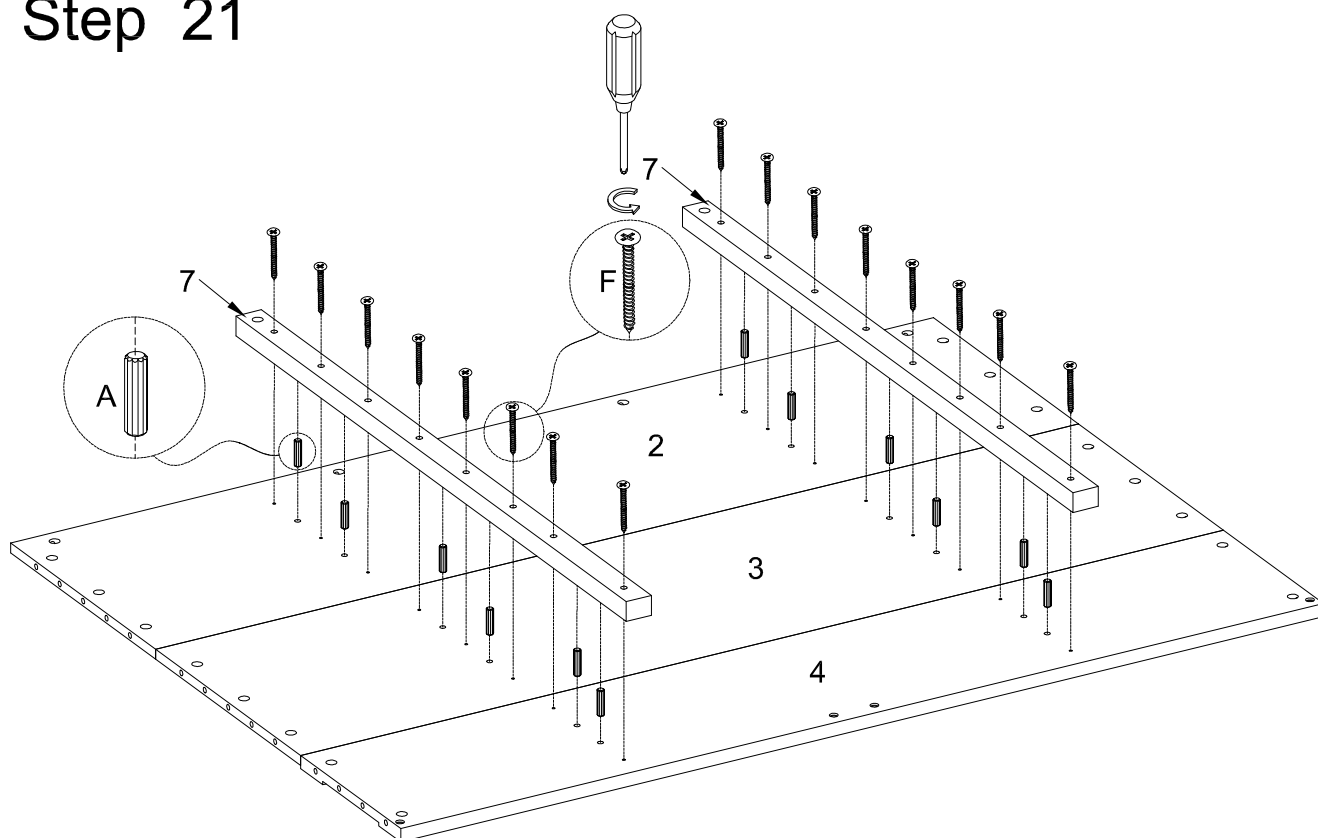


Step 22

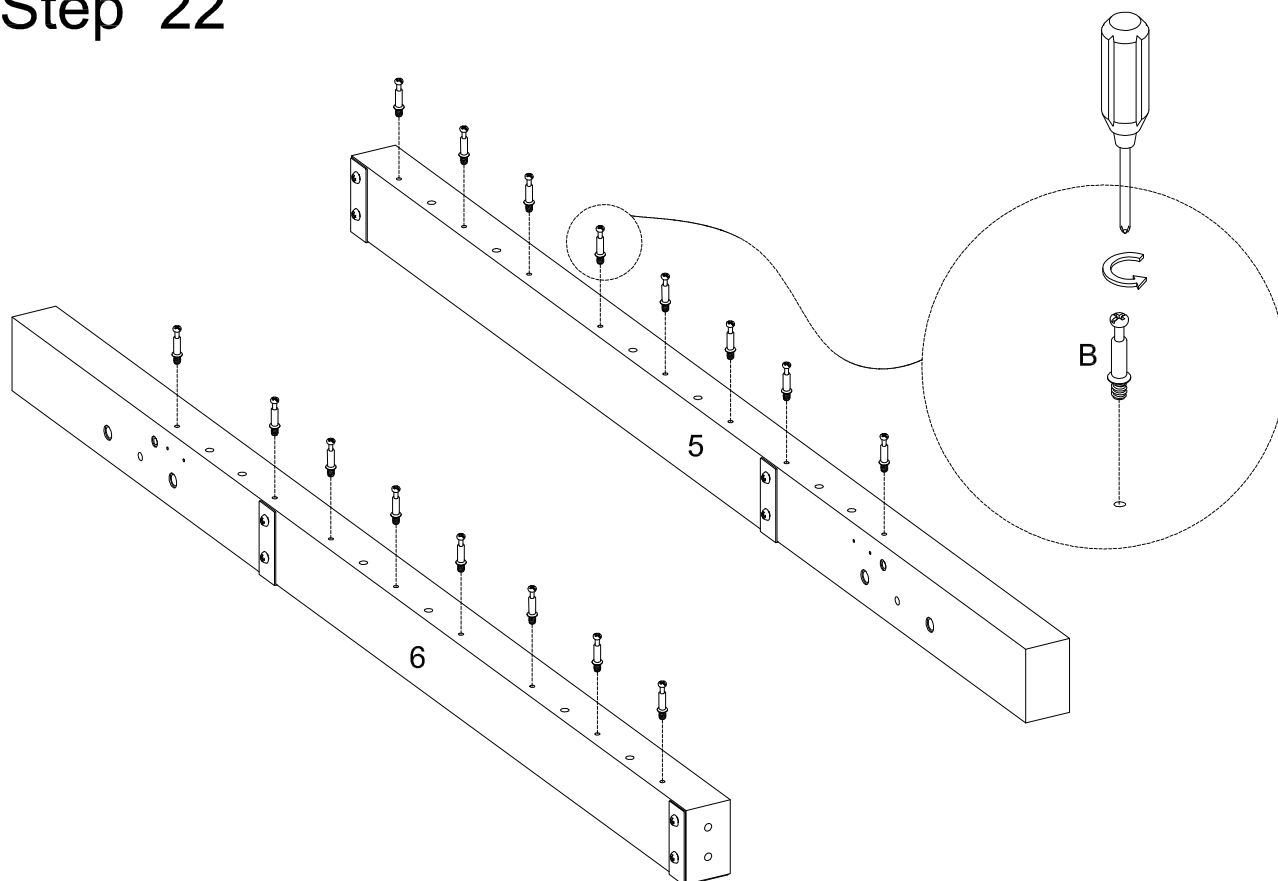



Step 23

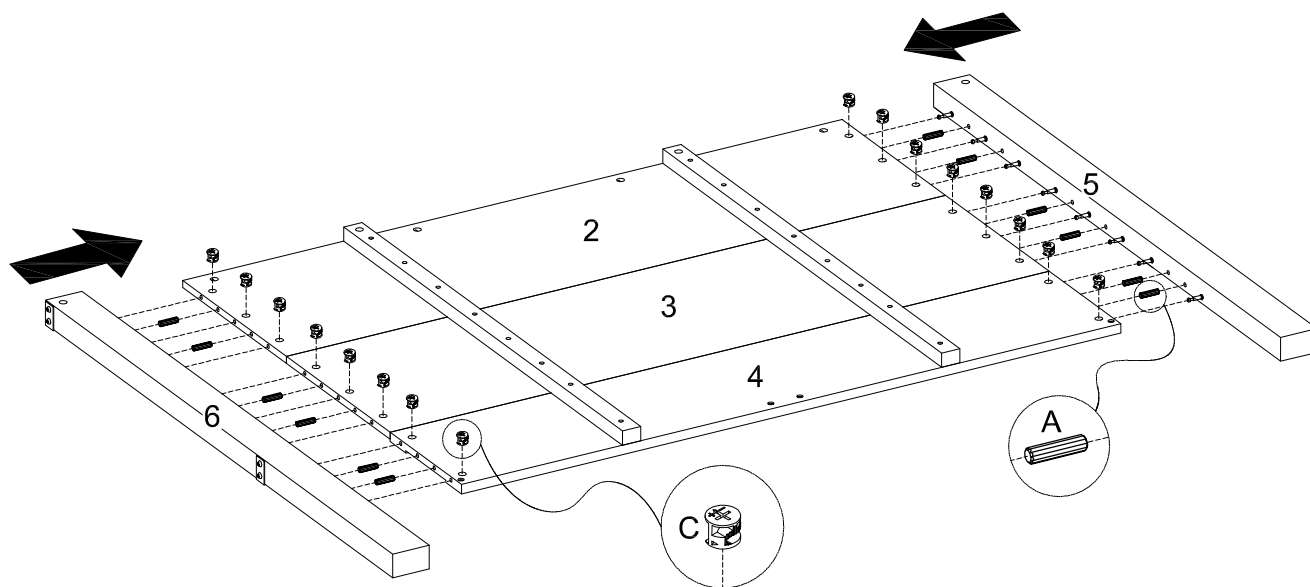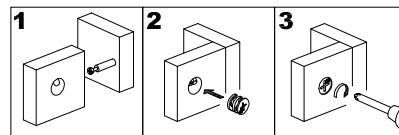


Step 24

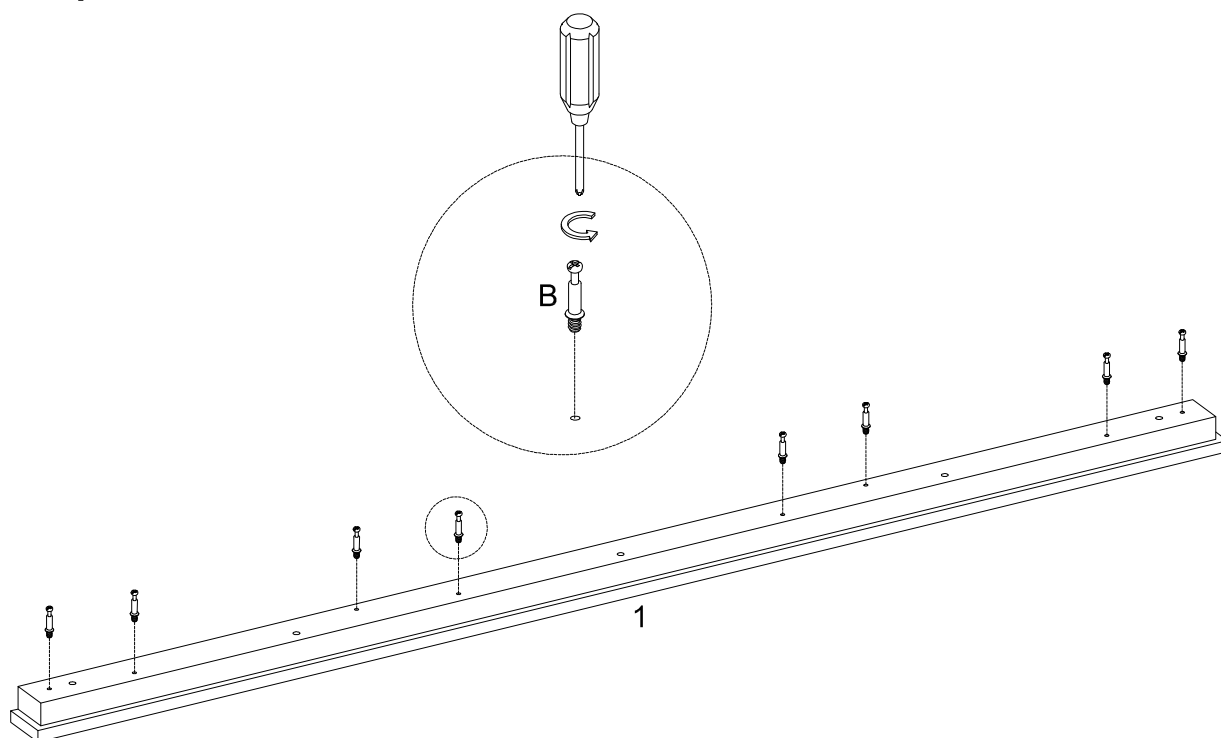


Step 25

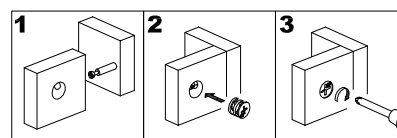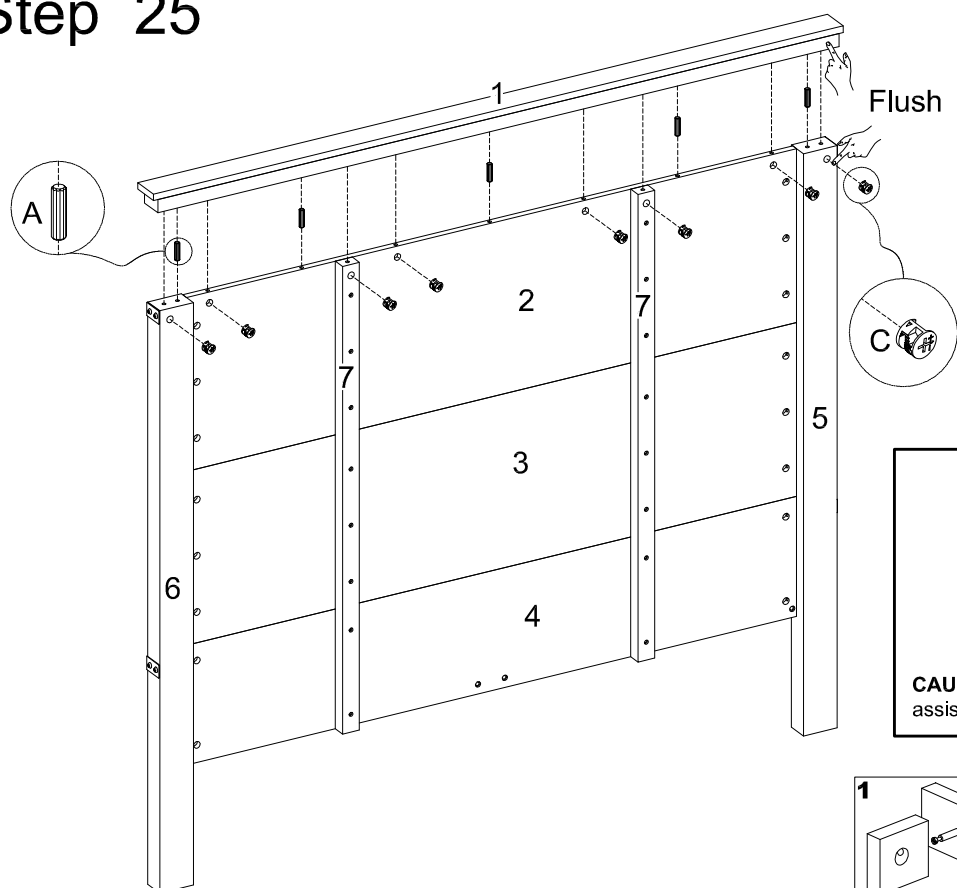


Step 26

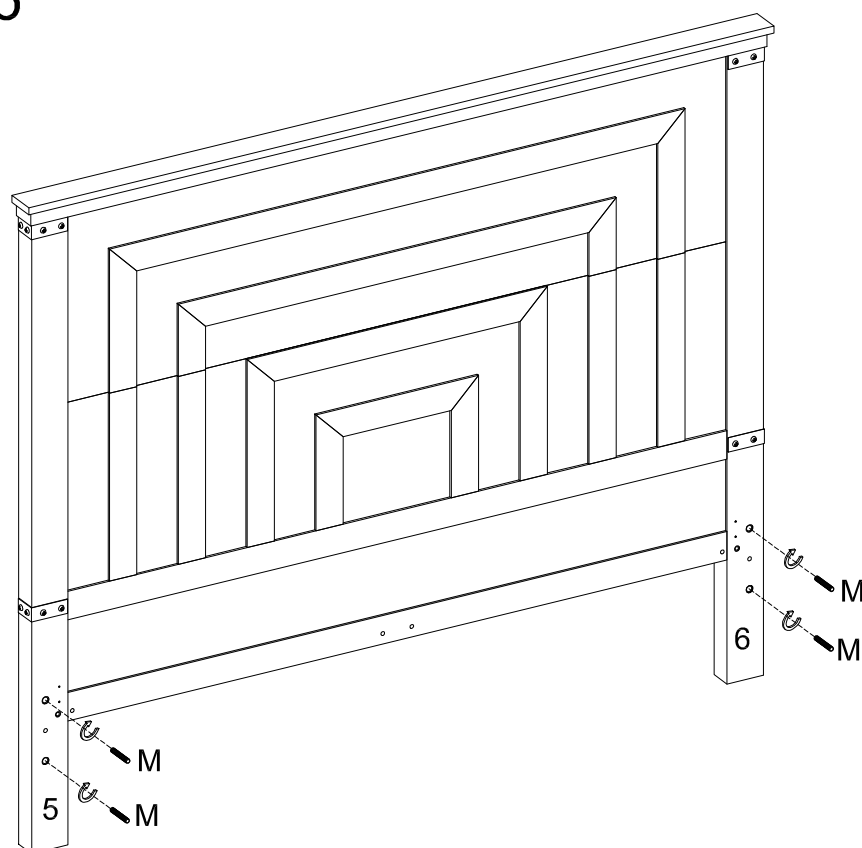


Step 27

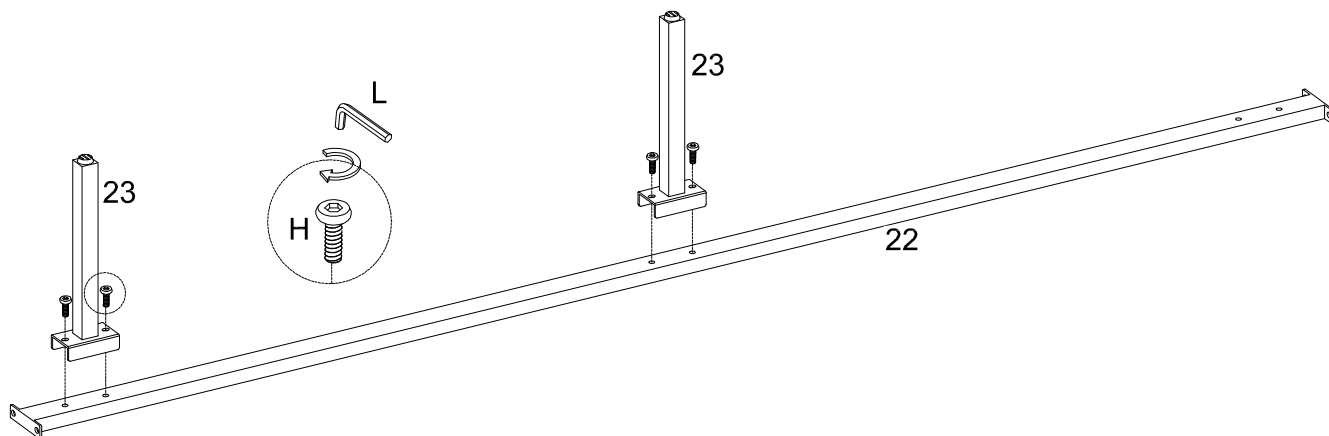


Step 28

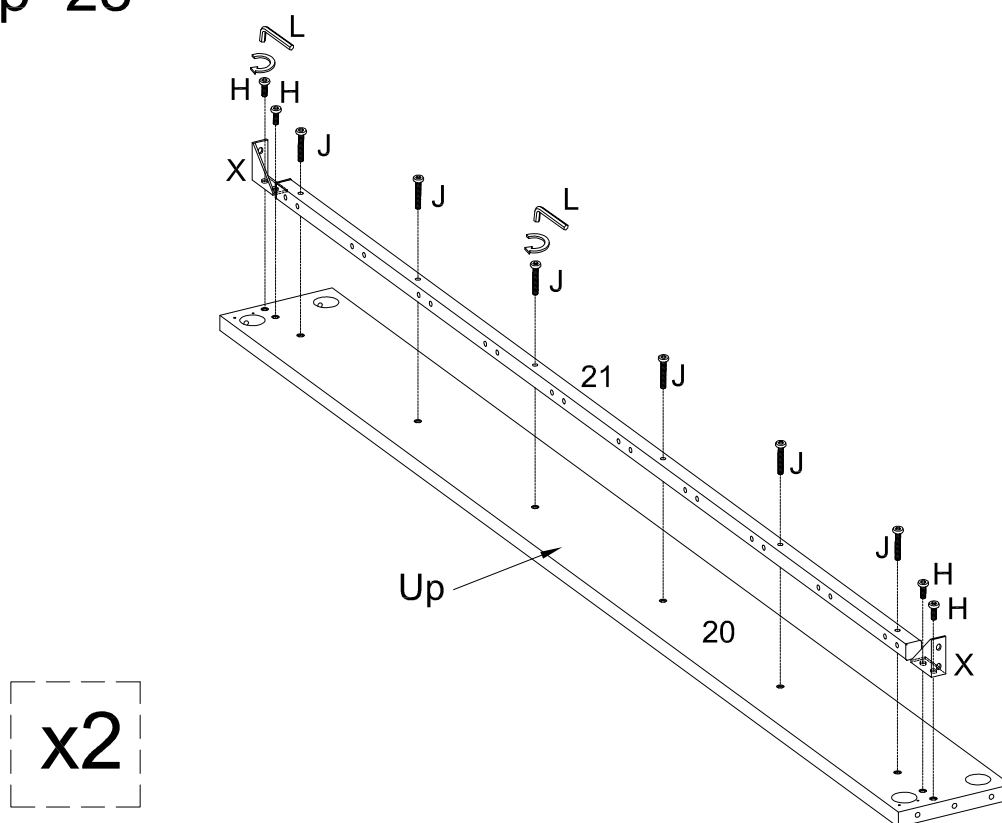


Step 29

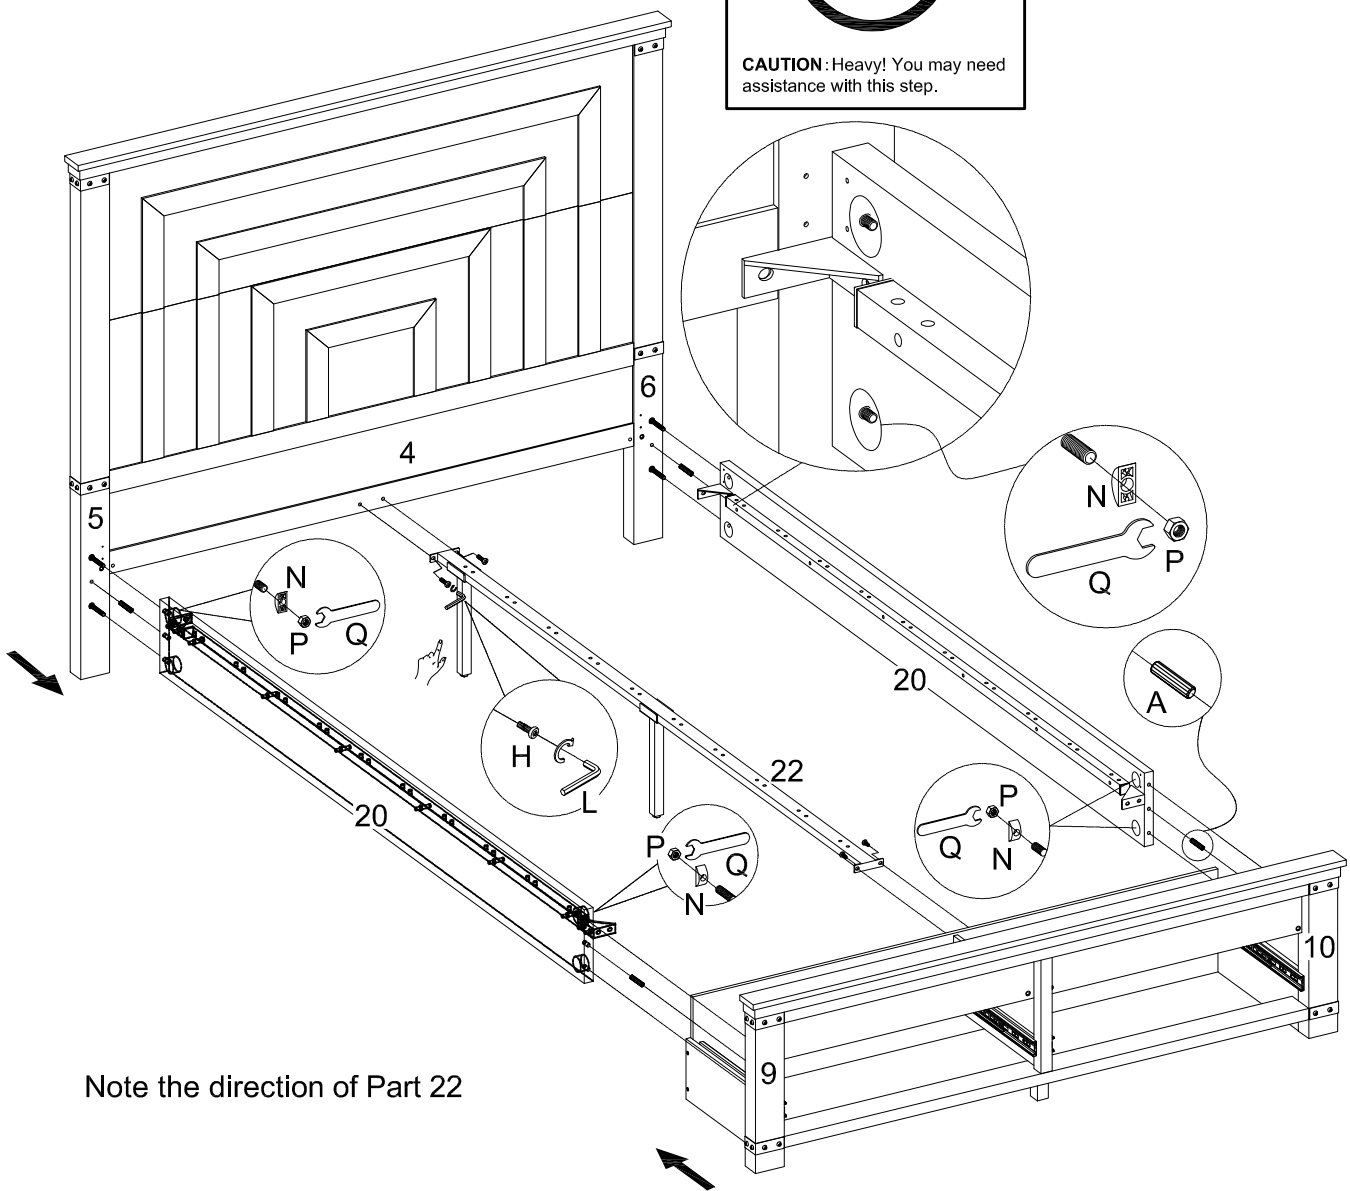


Step 30

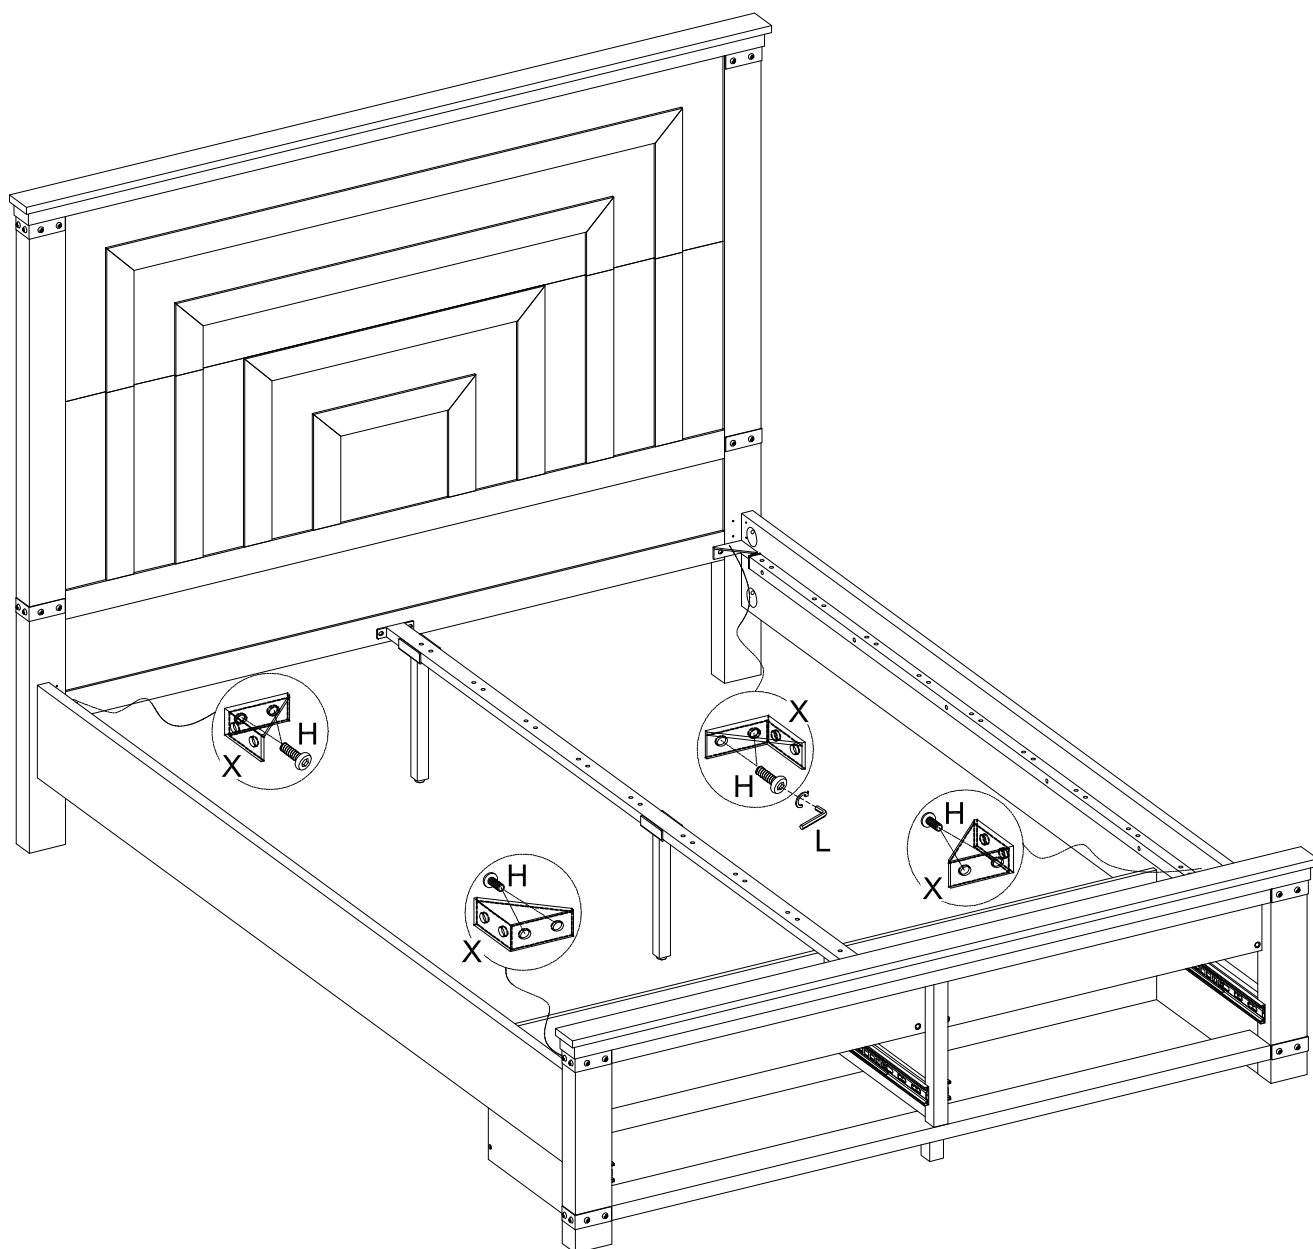


Step 31

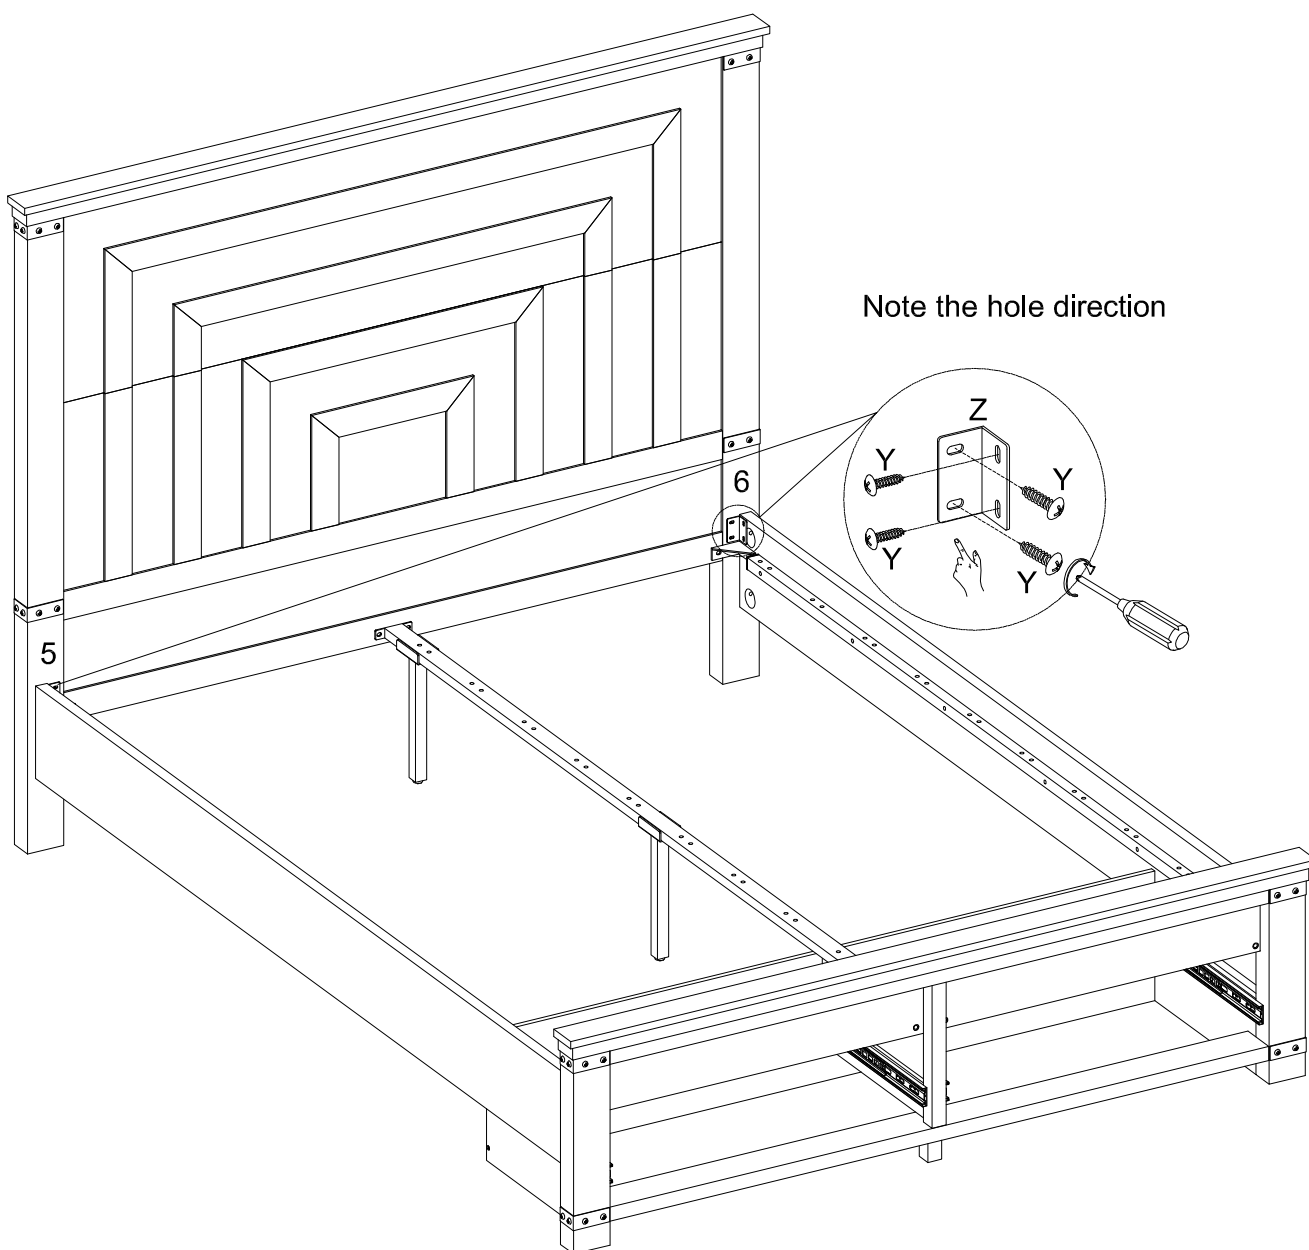


Step 32

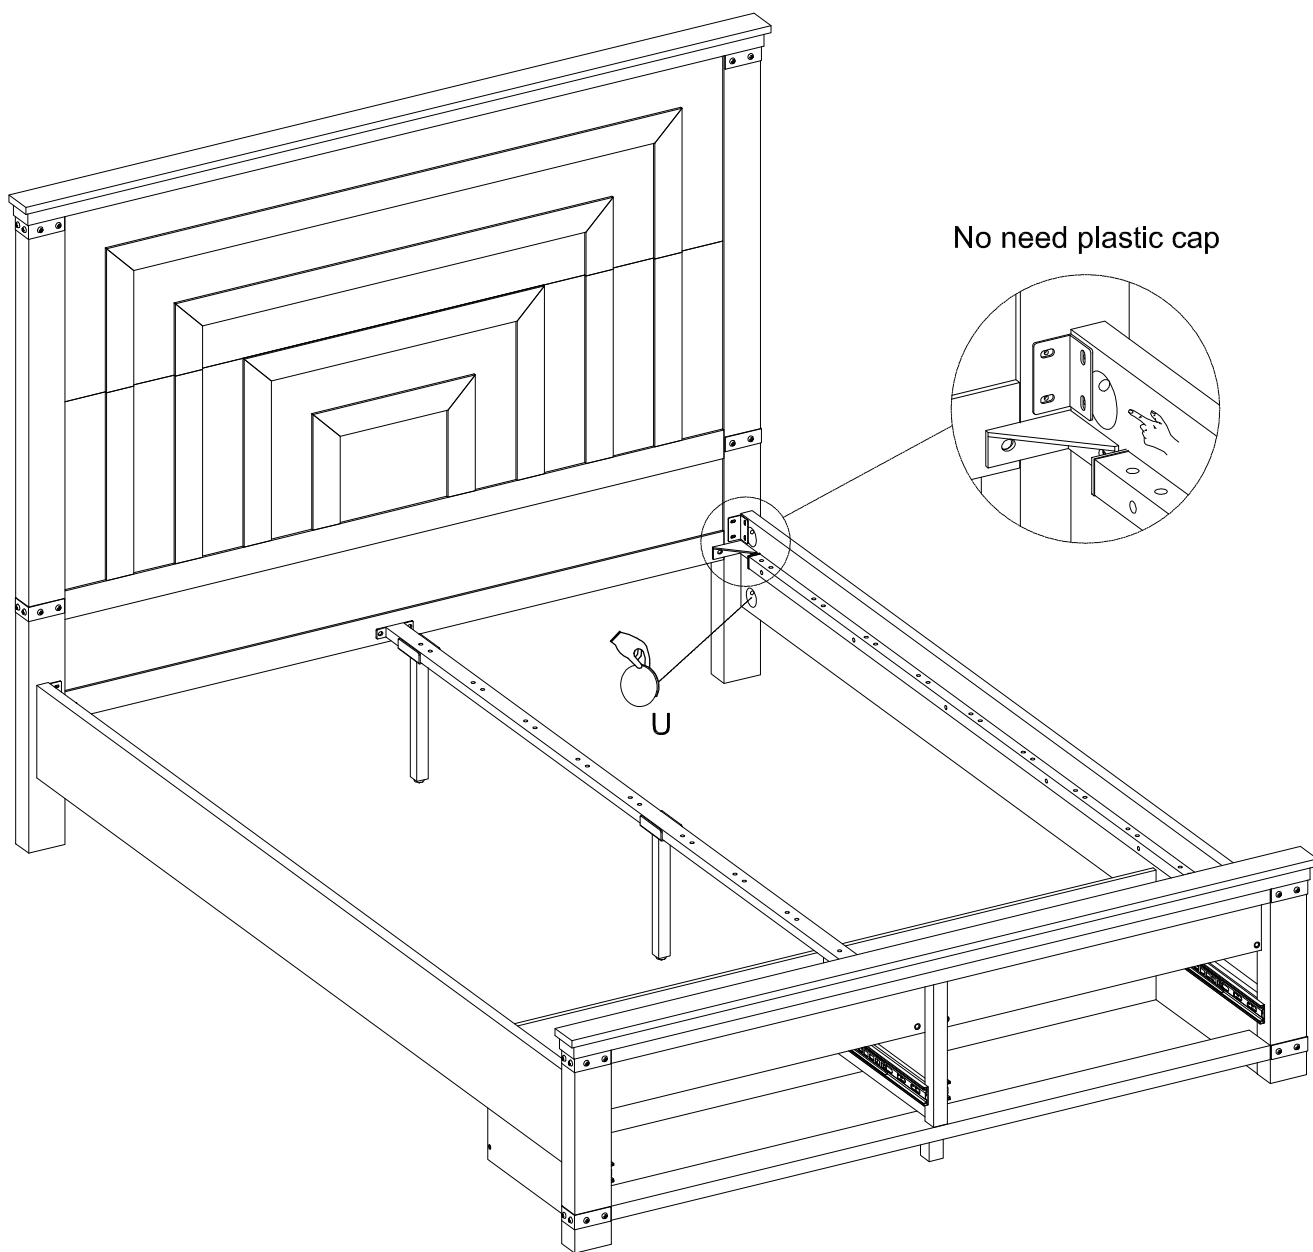


Step 33

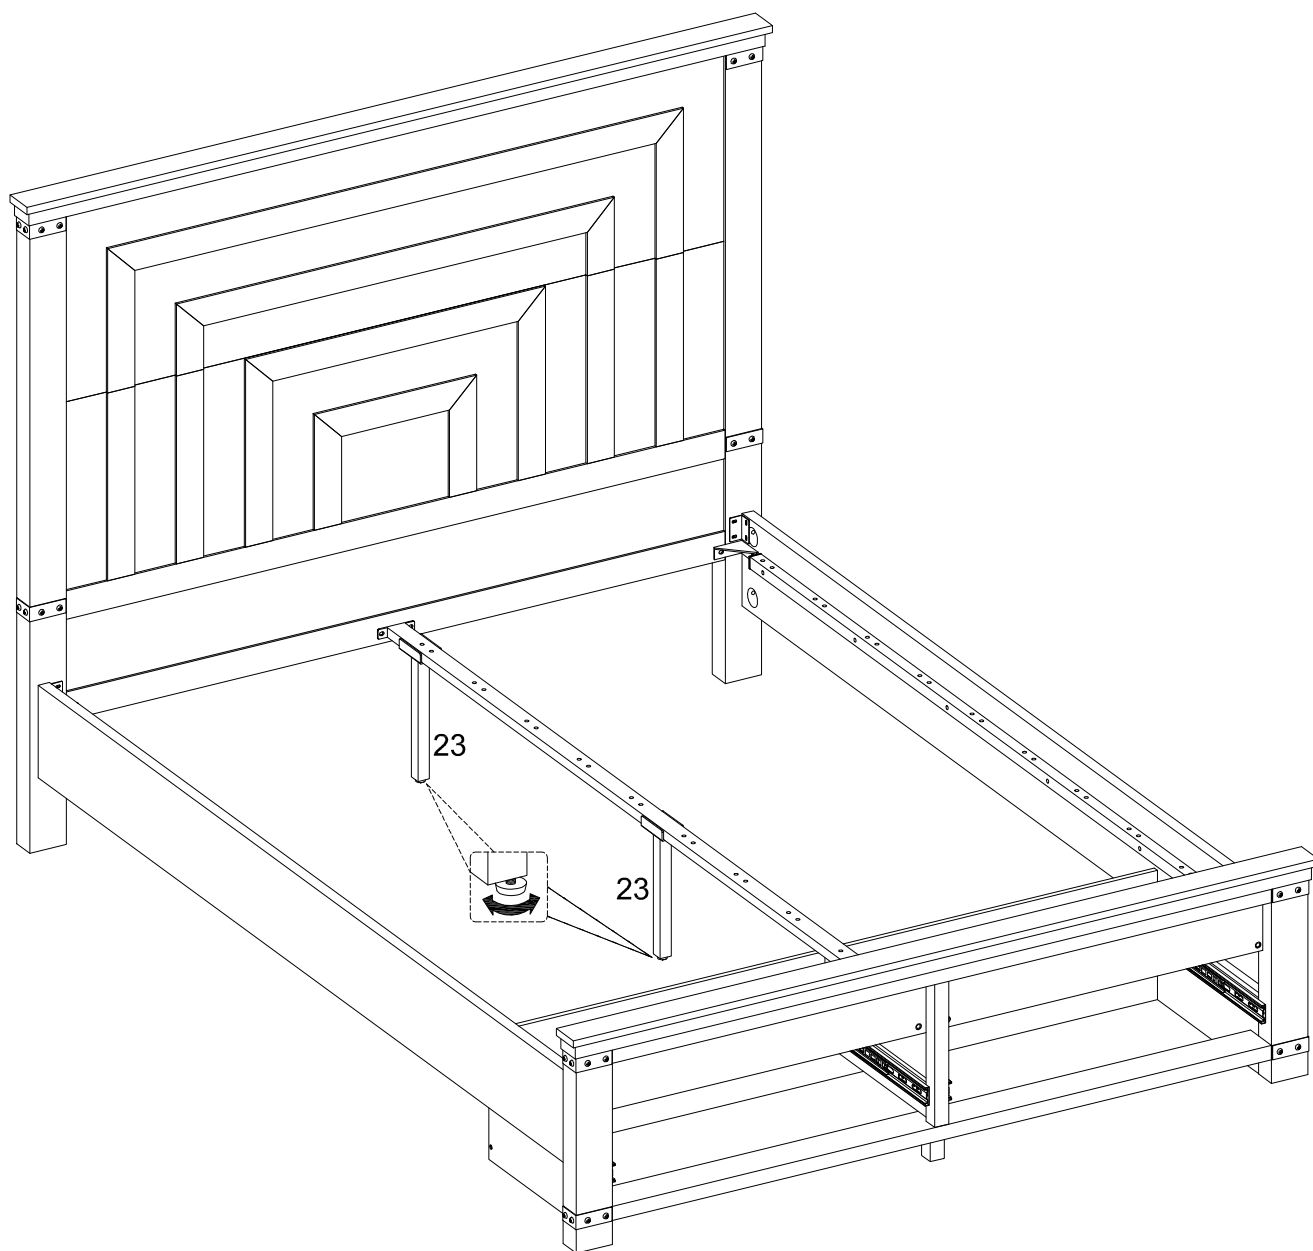



Step 34

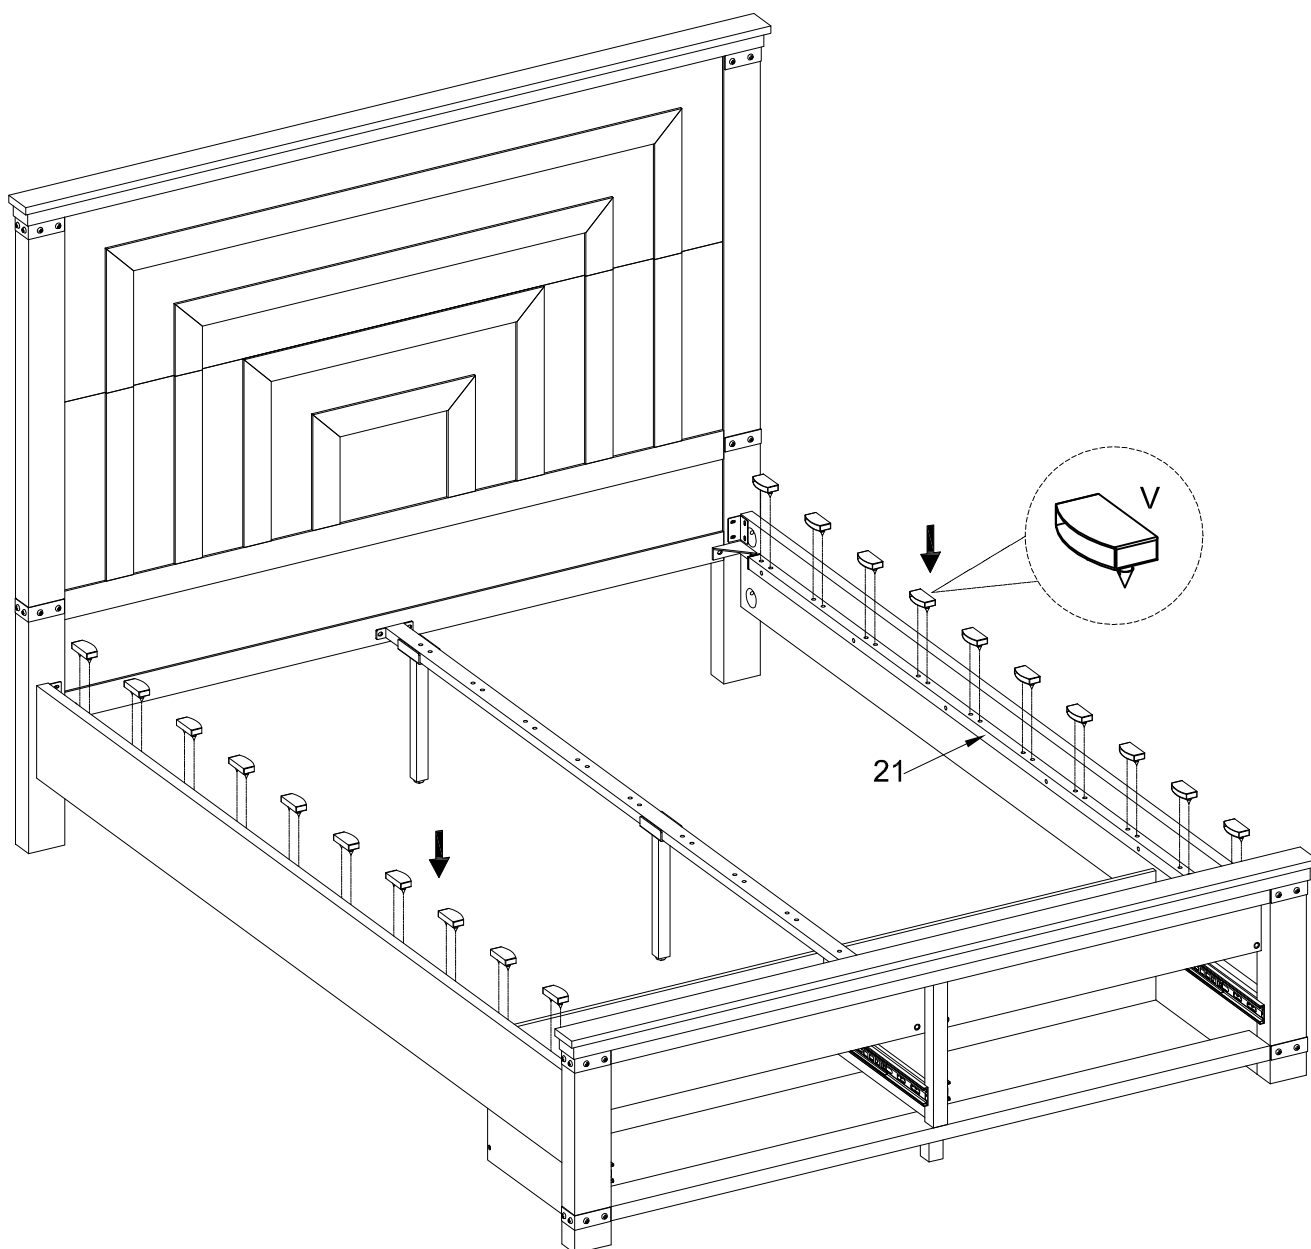

Step 35

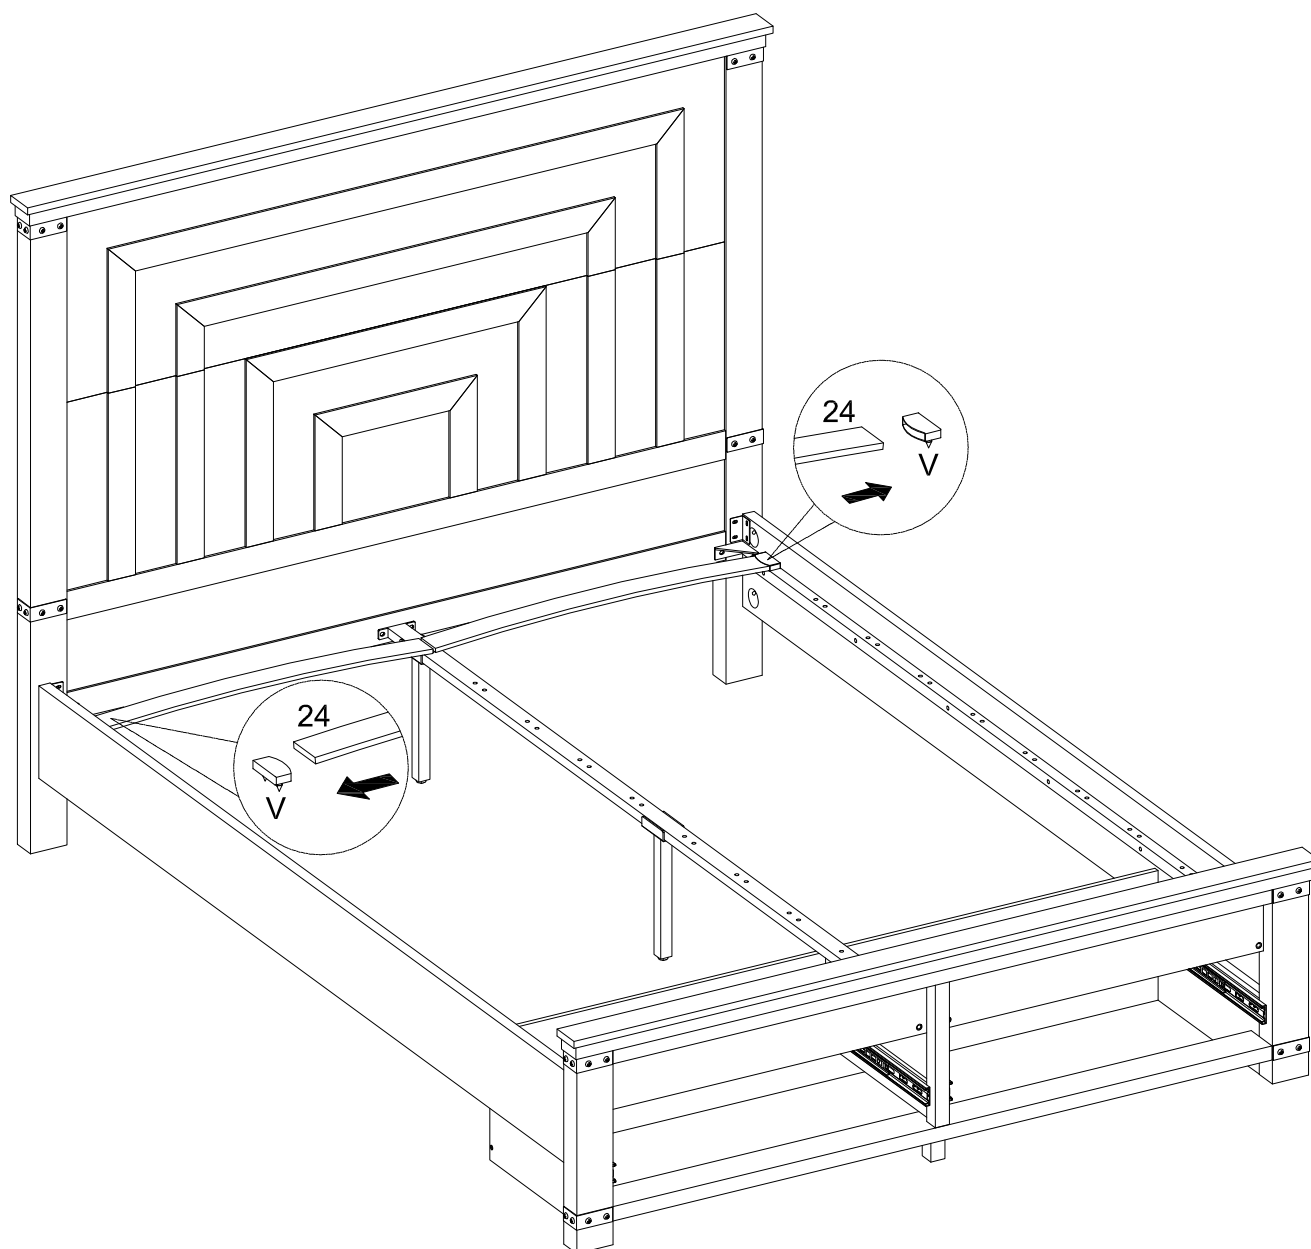


Step 36

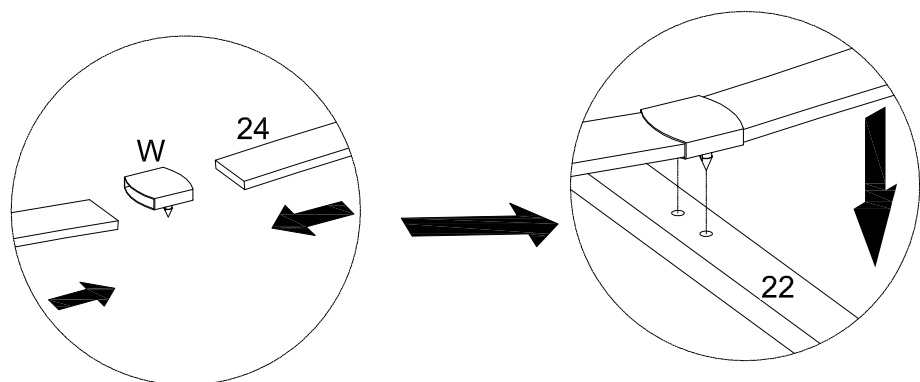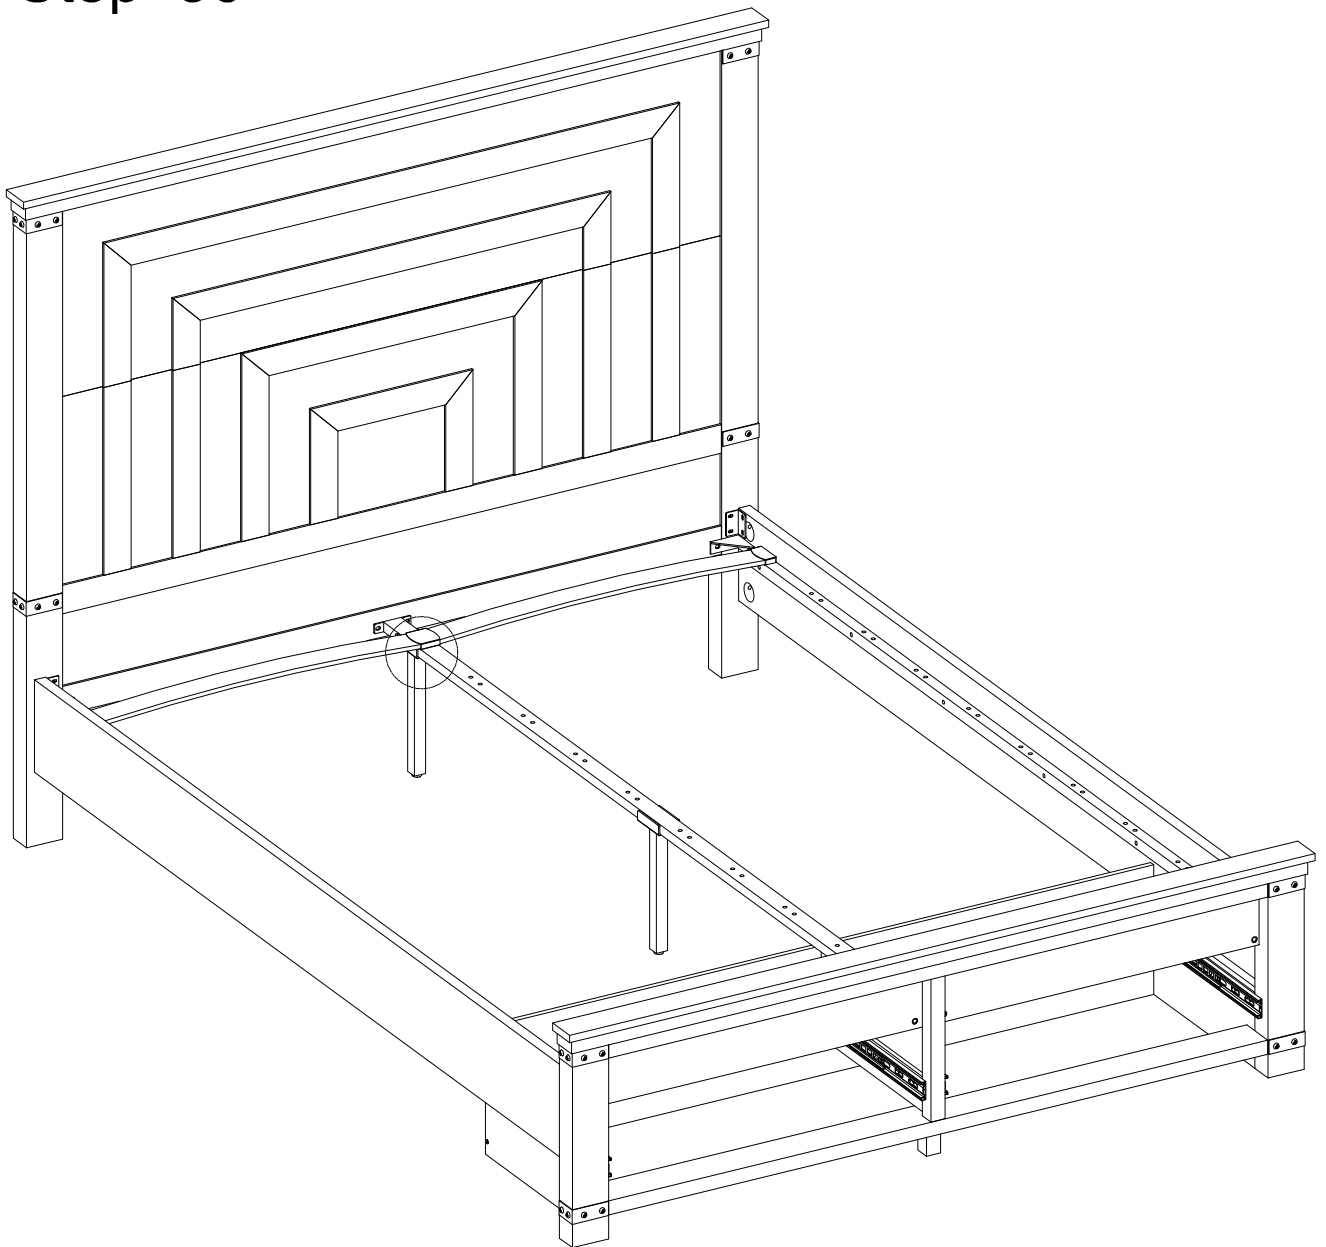


Note: repeat the step 35&36, make sure all wood slats of part 24 are installed.




Step 37

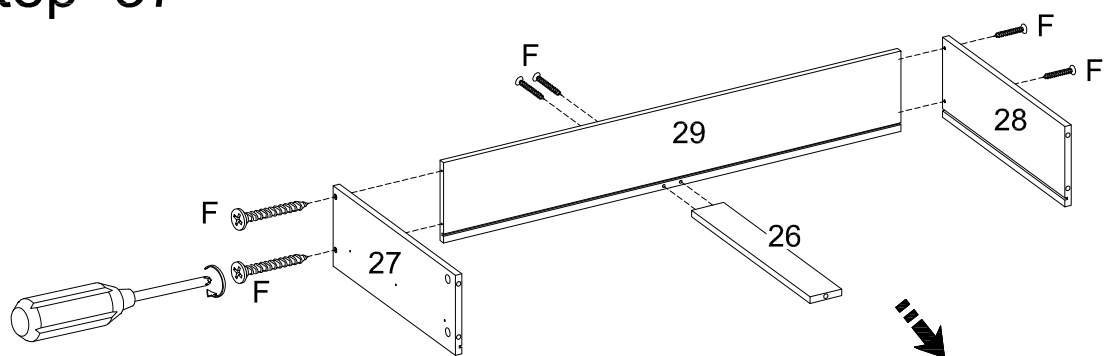

x2

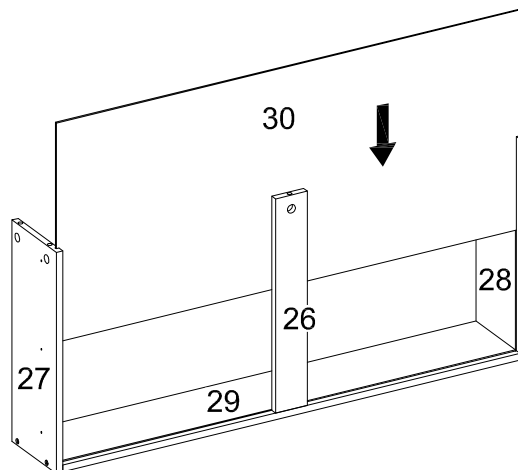


Step 38

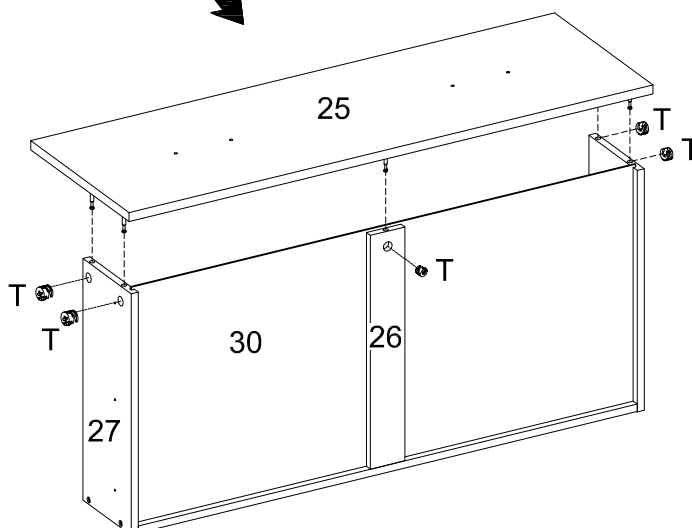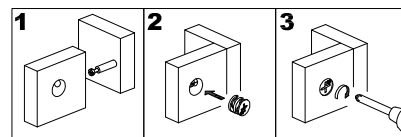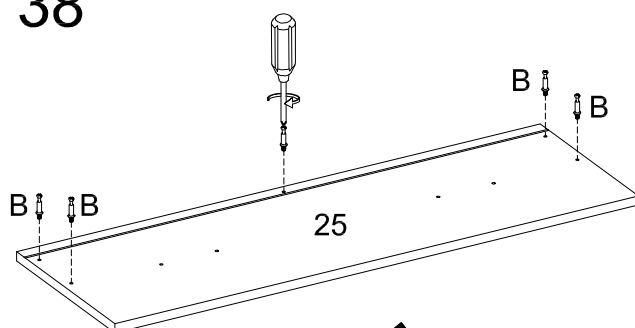


x2

Step 39



x2

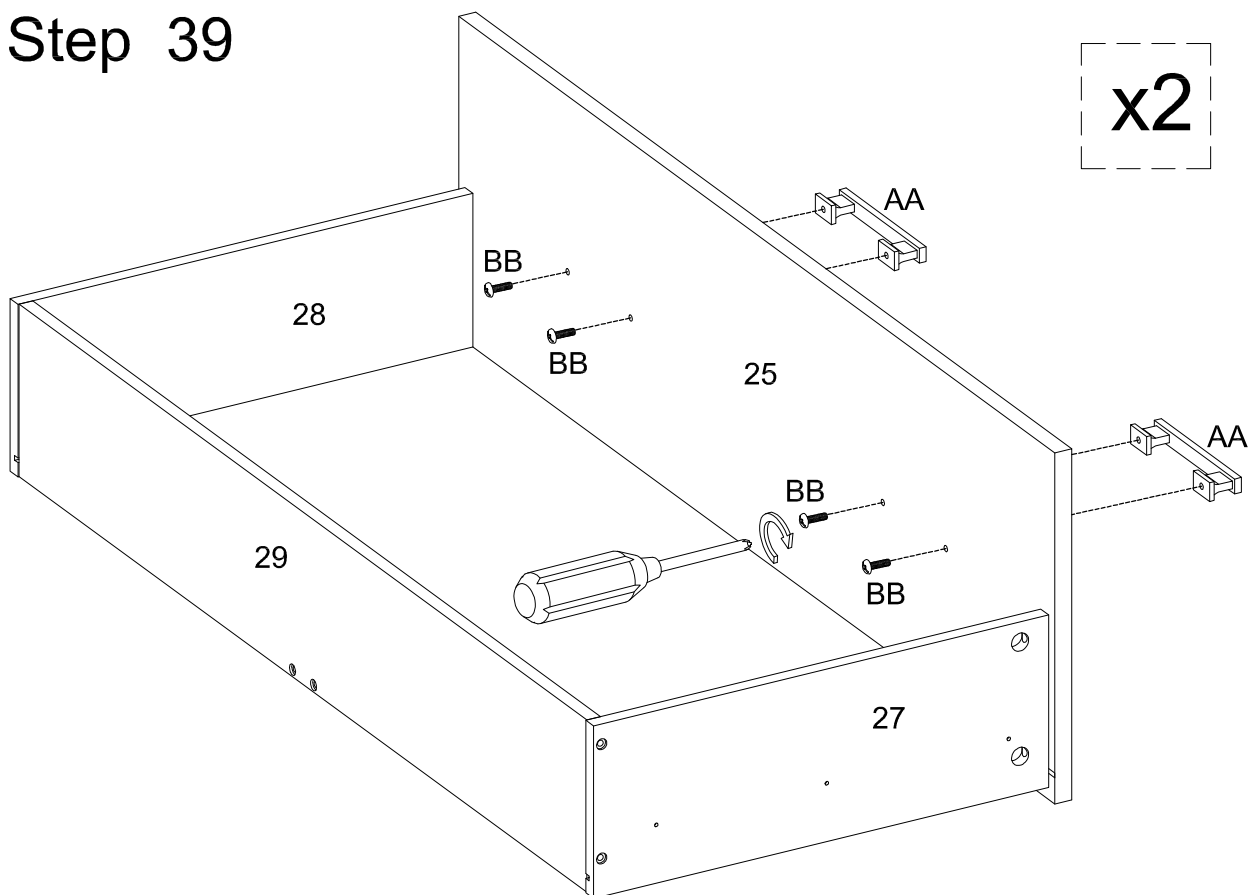

Step 40

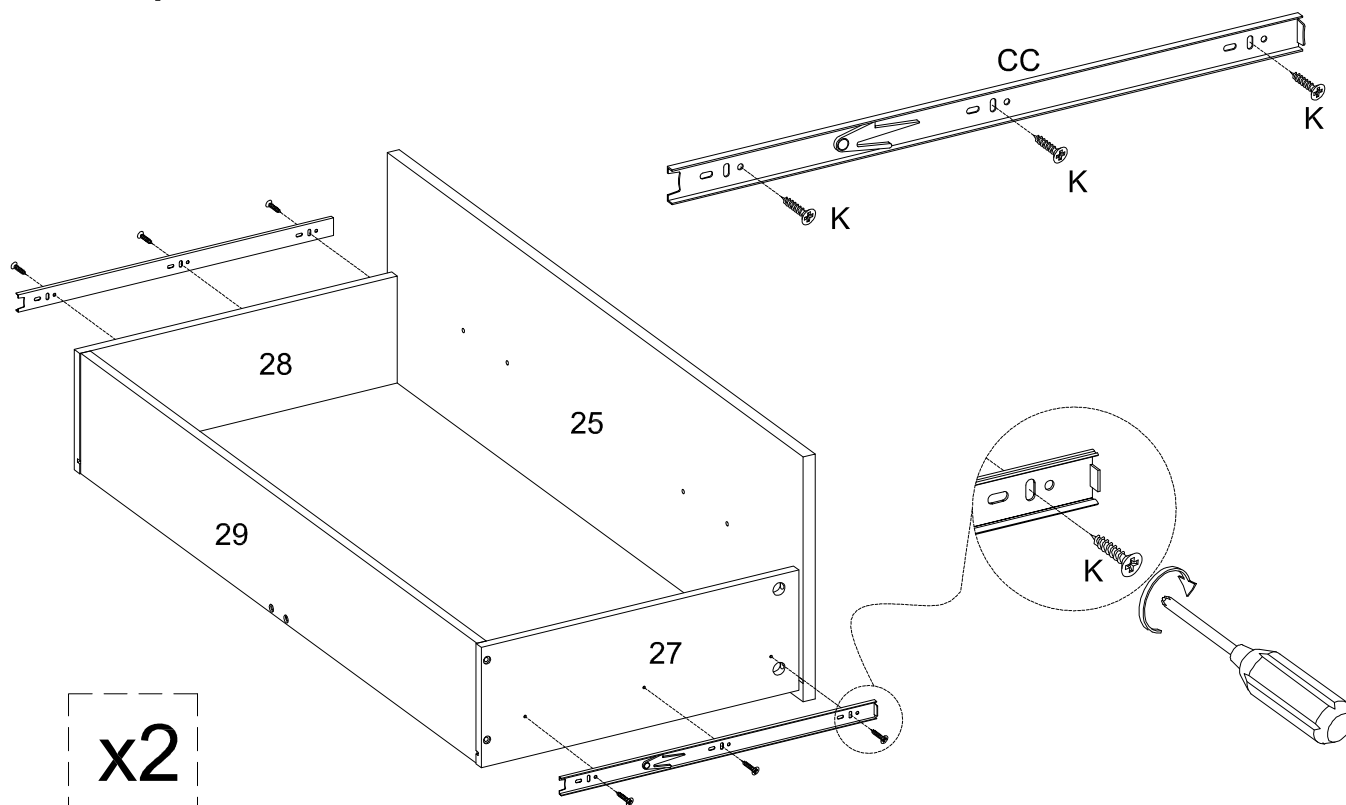


Step 41

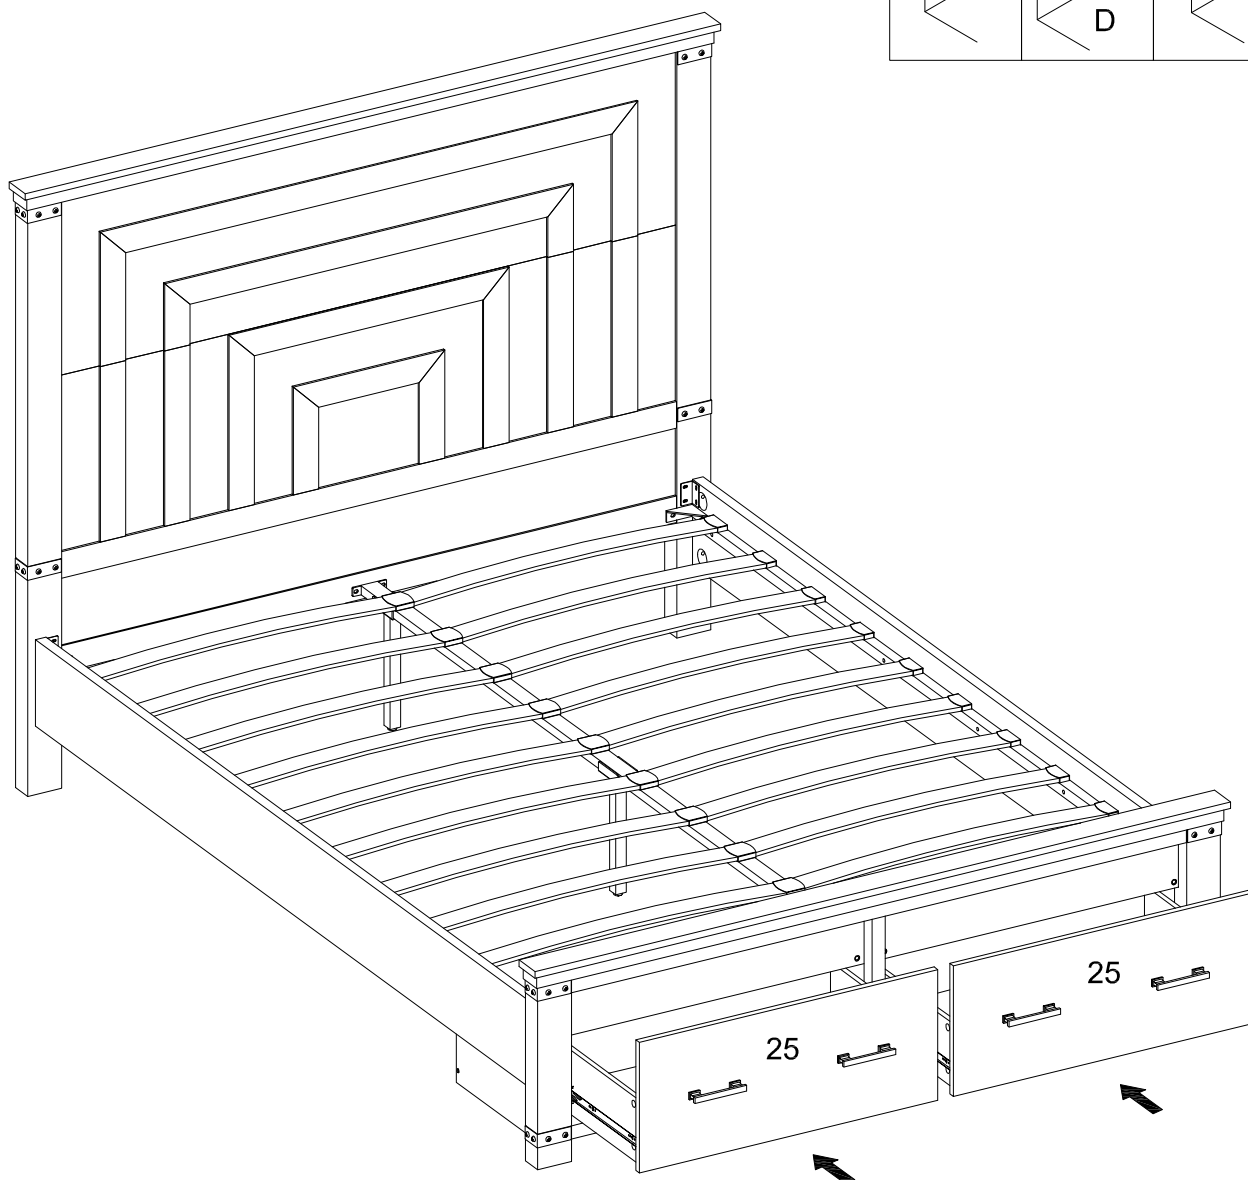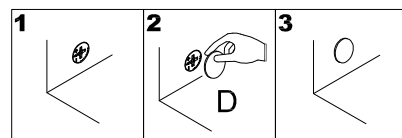


Note:

If the drawer does not go in smoothly. Press or lift the plastic release lever. Pull out the slider bracket from the slider arm. Loosen the screws(K) on slider brackets, You can adjust up or down by a few mm. Then tighten back up. Finally re-assembled the drawer until they were going in smoothly well.

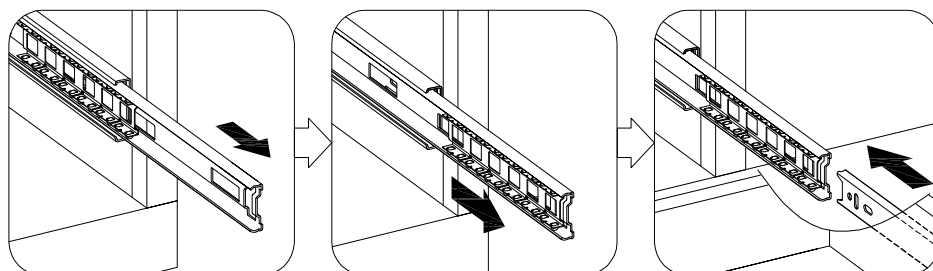

Step 42

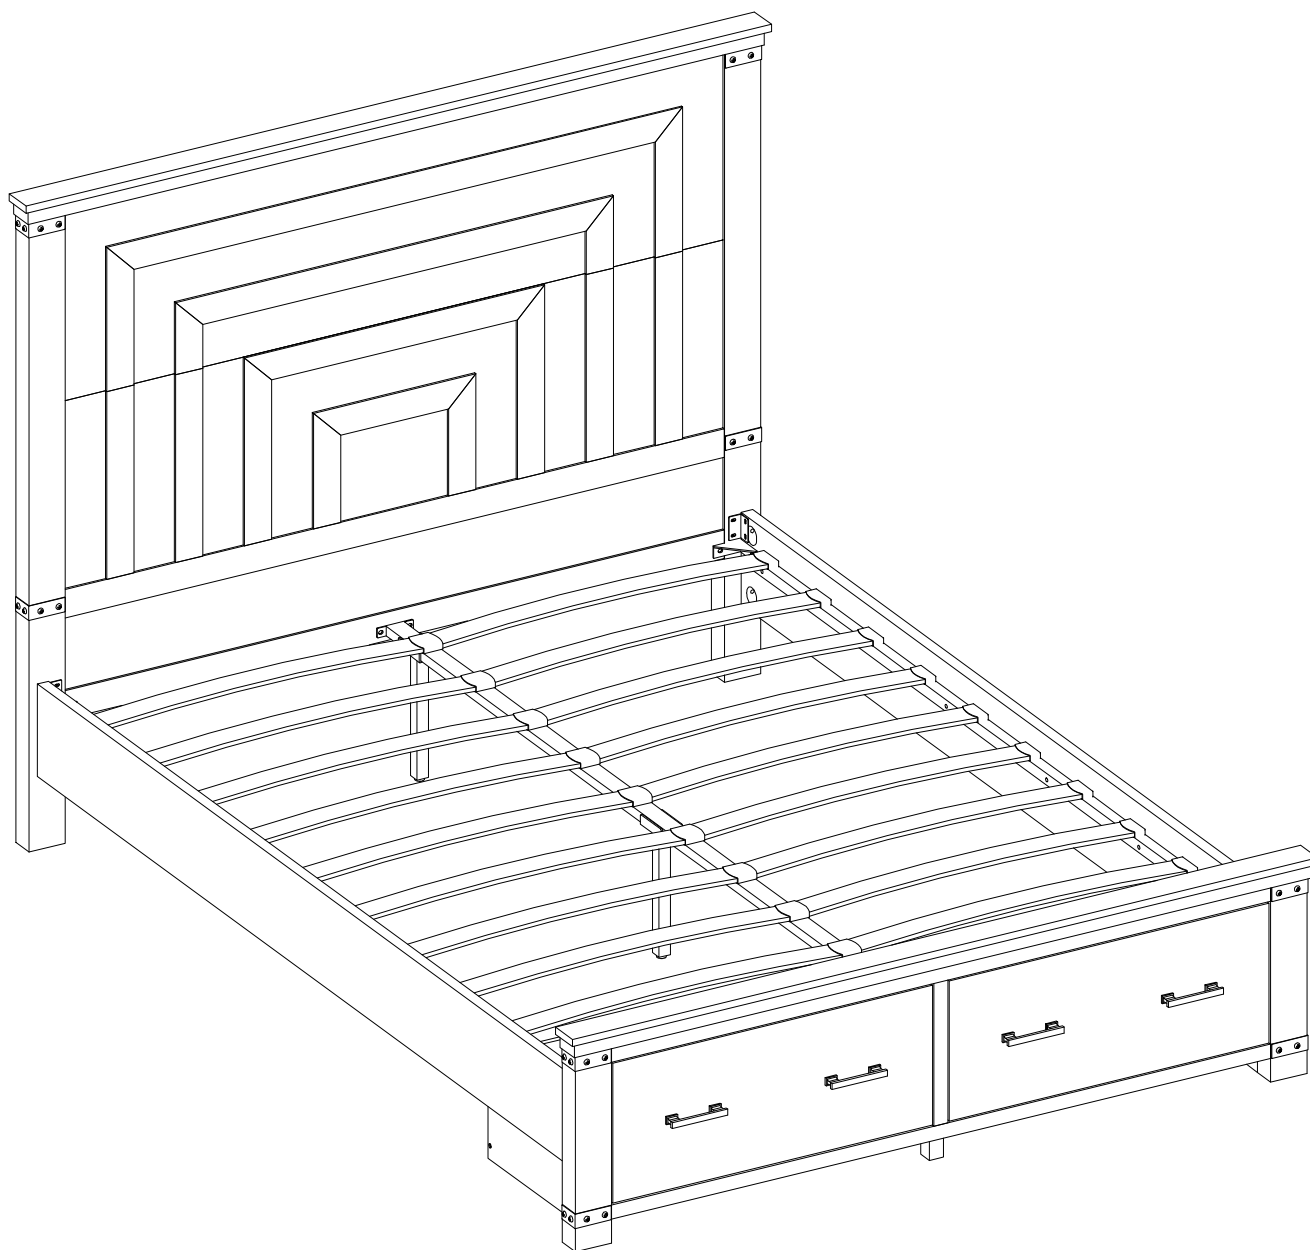

Final Assembly