


Tips!

Check all the components & screws before assembly.**Do not install in case part is missing,contact us to get.**Send email with your question to support@vecelo.com.We will resend within 24 hours.


Return Policy

We believe you will absolutely love your new item. But if for some reason you want to return, please contact us directly before you decide to return your product. Our customer service organization can answer most concerns and assist you with any questions you may have about your new item, please email us first at: support@vecelo.com.
The item must be returned within 30 days of delivery for a full refund. The item must be returned in good condition, in original box, with all original proof of purchase, parts and accessories.

Trouble shooting:

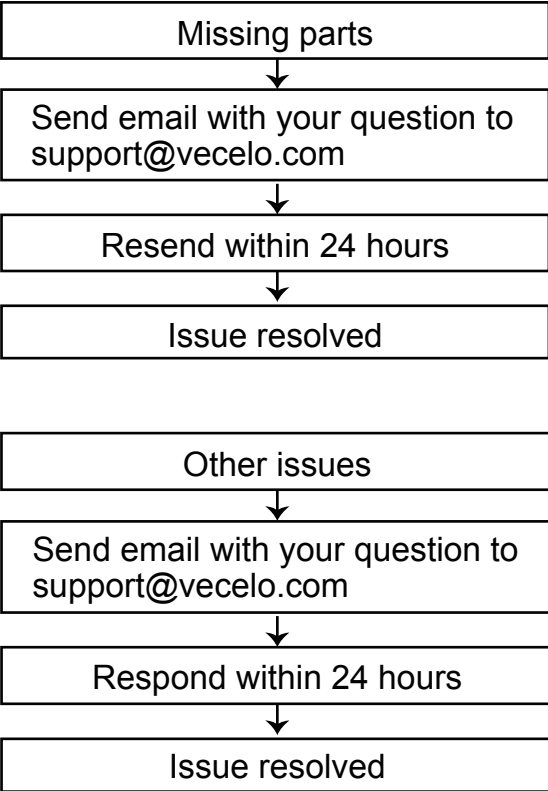

We control manufacturing and distribution ourselves, ensure the quality.

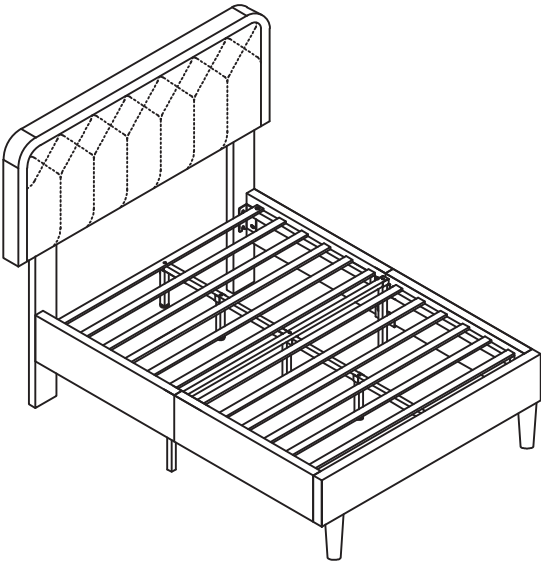



Item Description: Bed Frame

Dimension: TWIN:106*193*105cm

FULL:144*193*105cm


QUEEN:159.5*205*105cm

Model NO: CY-NO.1

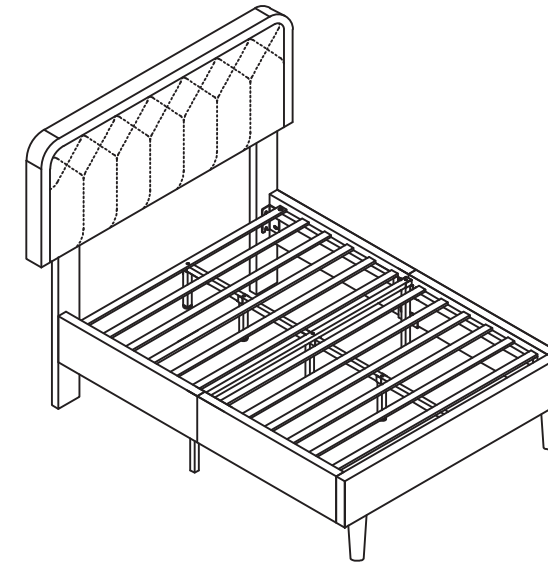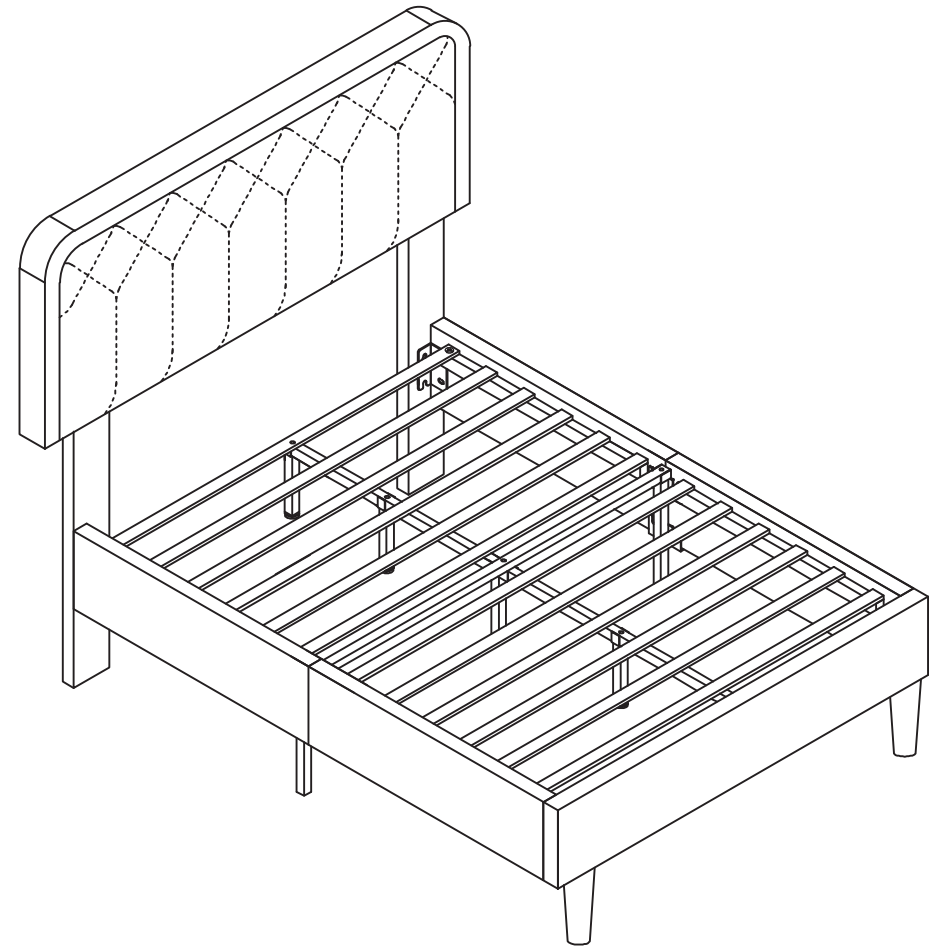

Bed Frame

Dimension: TWIN:106*193*105cm
FULL:144*193*105cm
QUEEN:159.5*205*105cm

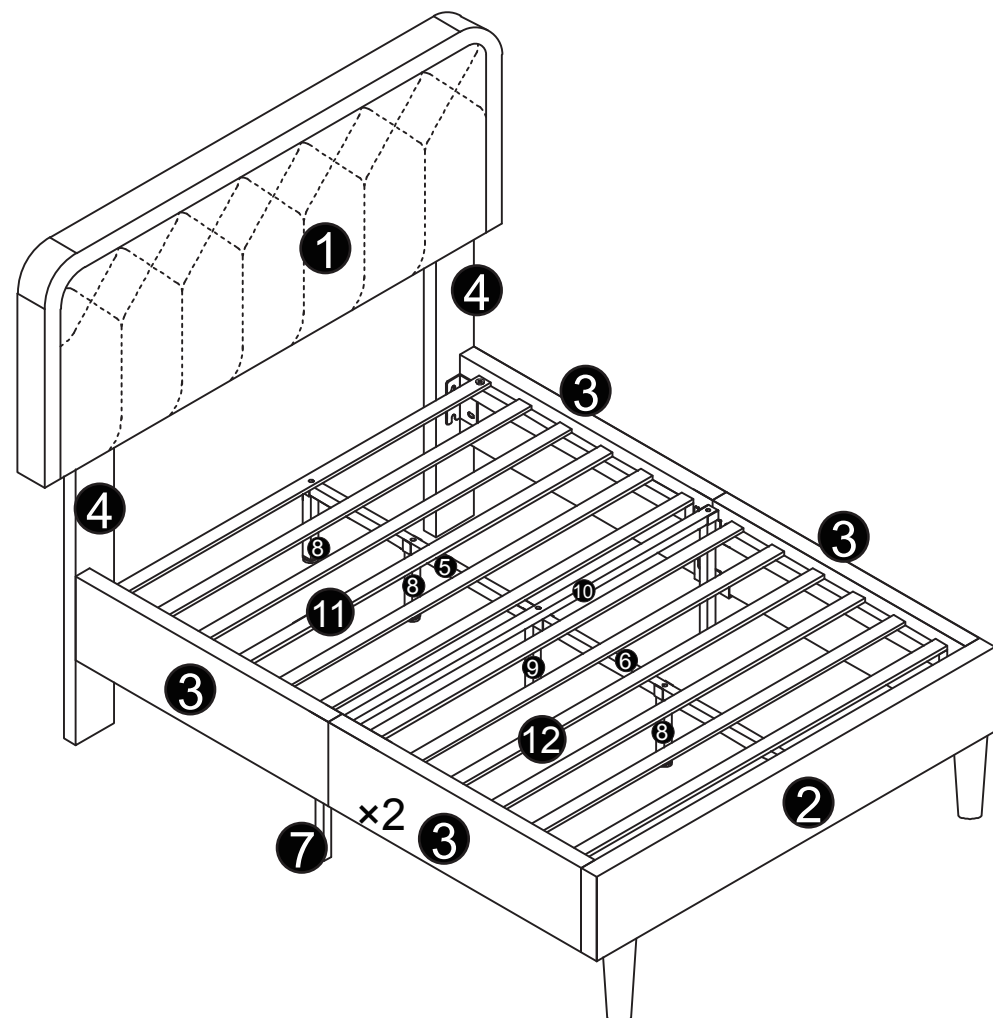

How to find us?

Email: support@vecelo.com


Website: www.vecelo.com

Step 9


 Cx1

 Jx2












 lx1

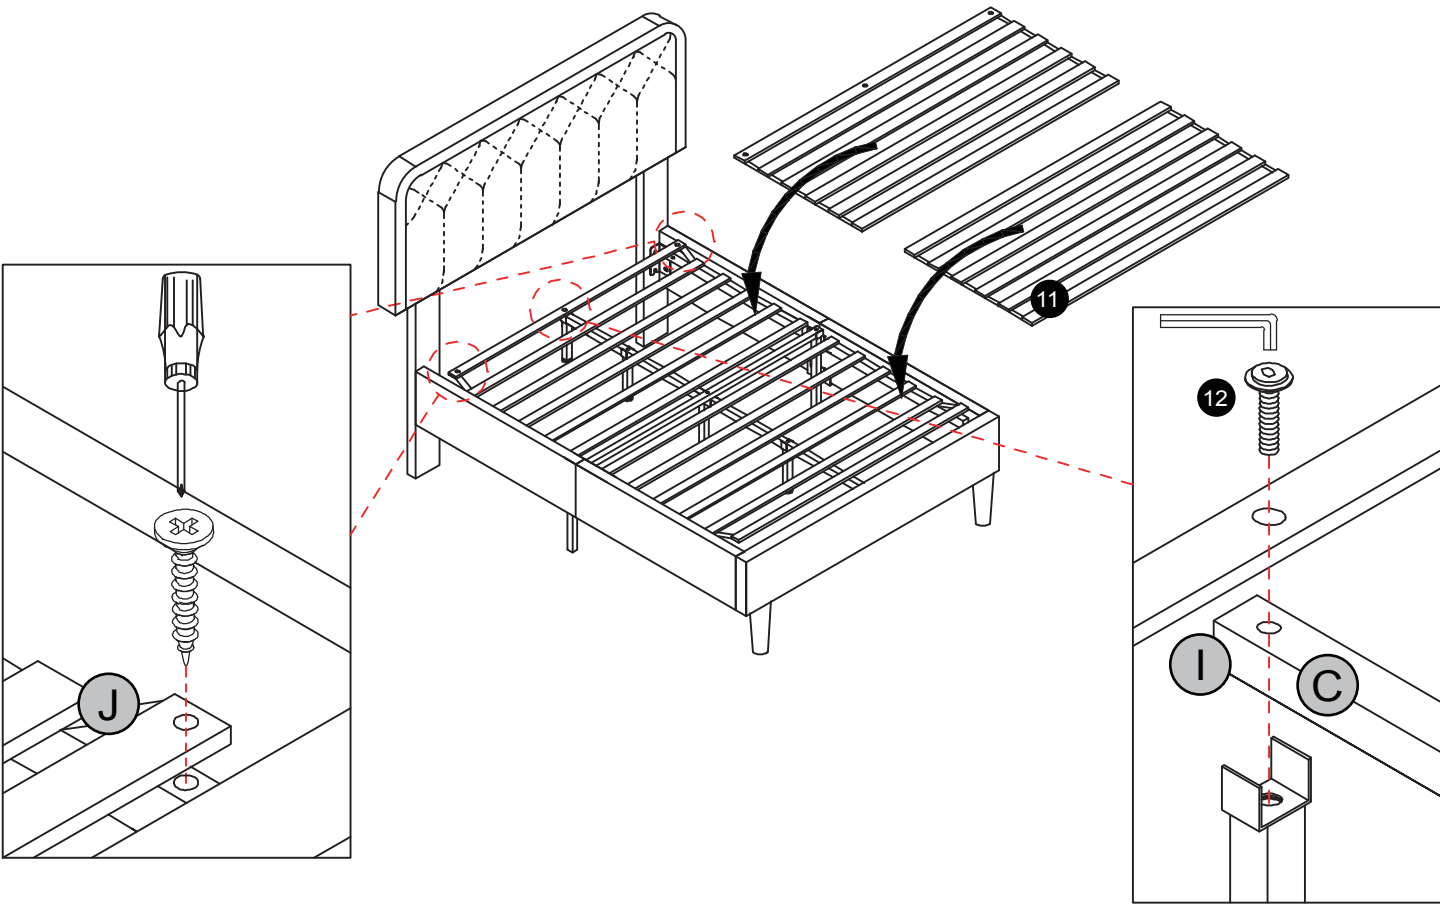


Step 10 Check and tighten all screws

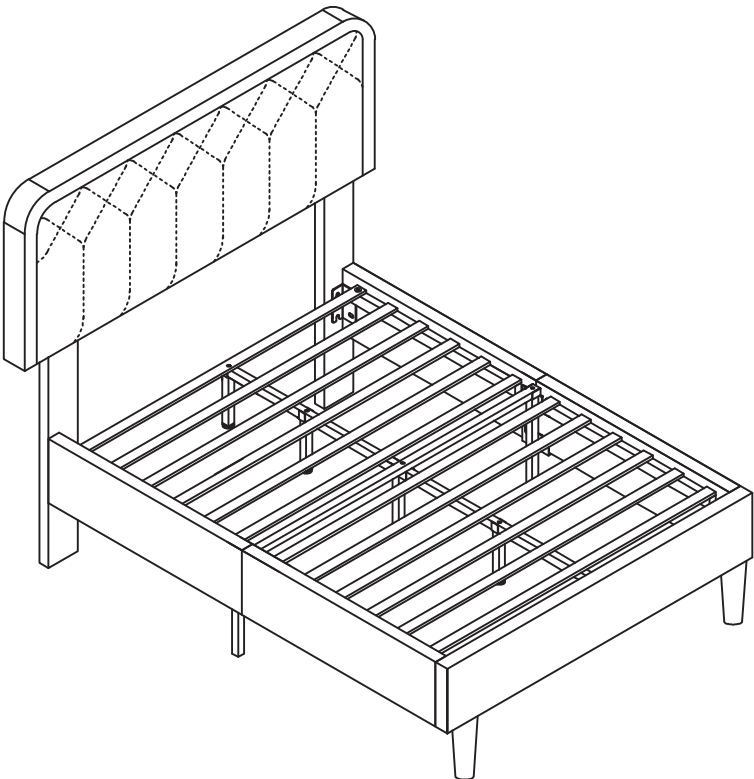


Components

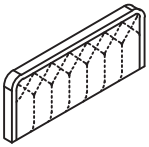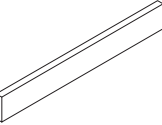1		1	5		1	9		1
	TWIN:106*55*7.2cm			TWIN:84.5*2.5*2.5cm			TWIN:32.4*2.5*2.5cm	
	FULL:144*55*7.2cm			FULL:84.5*2.5*2.5cm			FULL:32.4*2.5*2.5cm	
		1	6		1	10		1
	TWIN:100*15.2*2.5cm			TWIN:97.9*2.5*2.5cm			TWIN:95*2.4*1.2cm	
	FULL:138*15.2*2.5cm			FULL:97.9*2.5*2.5cm			FULL:133*2.4*1.2cm	
		4	7		2	11		1
	TWIN:95.3*15.2*2.5cm			TWIN:34.6*7.5*4.3cm			TWIN:95*5.2*1.2cm	
	FULL:95.3*15.2*2.5cm			FULL:34.6*7.5*4.3cm			FULL:133*5.2*1.2cm	
		2	8		3	12		1
	TWIN:83*7*2.5cm			TWIN:32.4*2.5*2.5cm			TWIN:95*5.2*1.2cm	
	FULL:83*7*2.5cm			FULL:32.4*2.5*2.5cm			FULL:133*5.2*1.2cm	
		2	8		3	12		1
	QUEEN:159*55*7.2cm			QUEEN:90.5*7*2.5cm			QUEEN:32.4*2.5*2.5cm	
	QUEEN:103.7*2.5*2.5cm			QUEEN:34.6*7.5*4.3cm			QUEEN:148.5*5.2*1.2cm	
		2	8		3	12		1
	QUEEN:153.5*15.2*2.5cm			QUEEN:103.7*2.5*2.5cm			QUEEN:148.5*2.4*1.2cm	
	QUEEN:103.7*2.5*2.5cm			QUEEN:34.6*7.5*4.3cm			QUEEN:148.5*5.2*1.2cm	

A	 Bolt M8 x 25	2	A-1	 Preinstalled on components Bolt M8 x 25	4
B	 Bolt M8 x 45	4	C	 Bolt M8 x 45	5
D	 Spacer	4	E	 Angle iron	2
F	 Foot	2	G	 Angle iron (Left)	1
H	 Angle iron (Right)	1	I	 Allen Key M5	1
J	 Screw M4 x 25	2	L-1	 Preinstalled on components Bolt M8 x 18	22


Step 1

 Bx4  Dx4  lx1

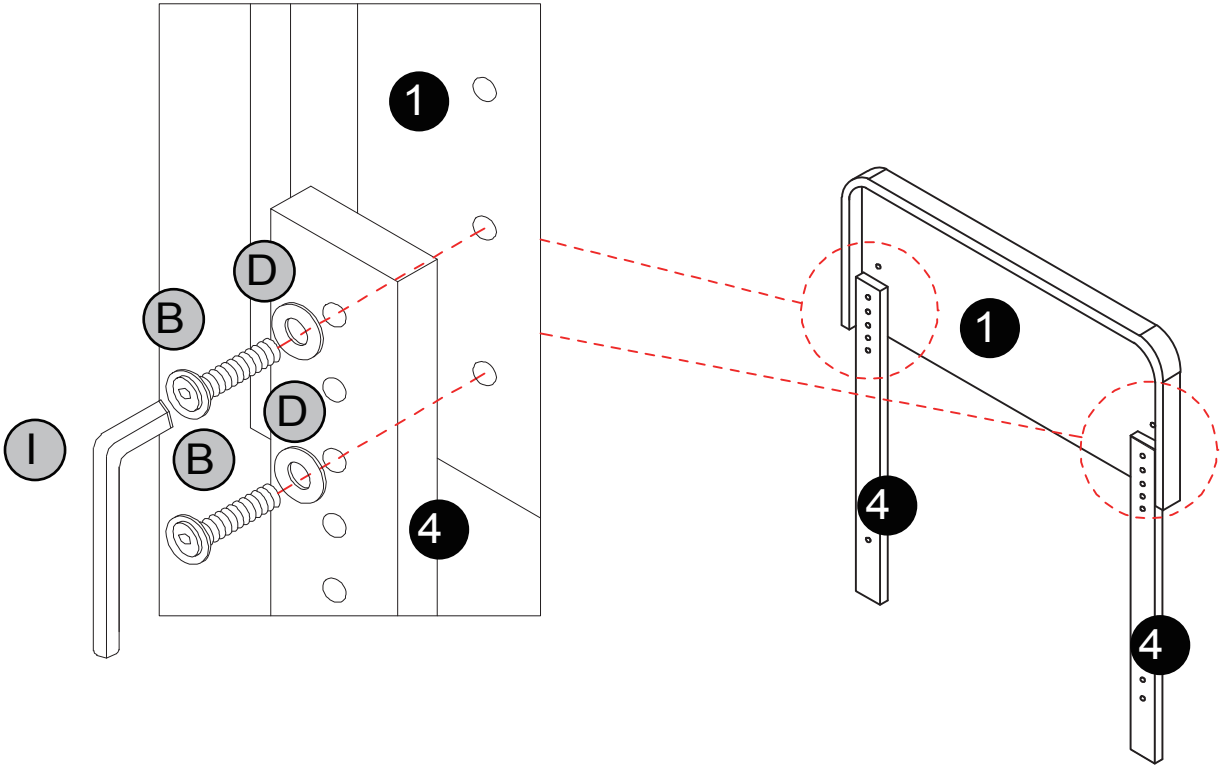

Step 8

 L-1 x 2  Cx2  lx1

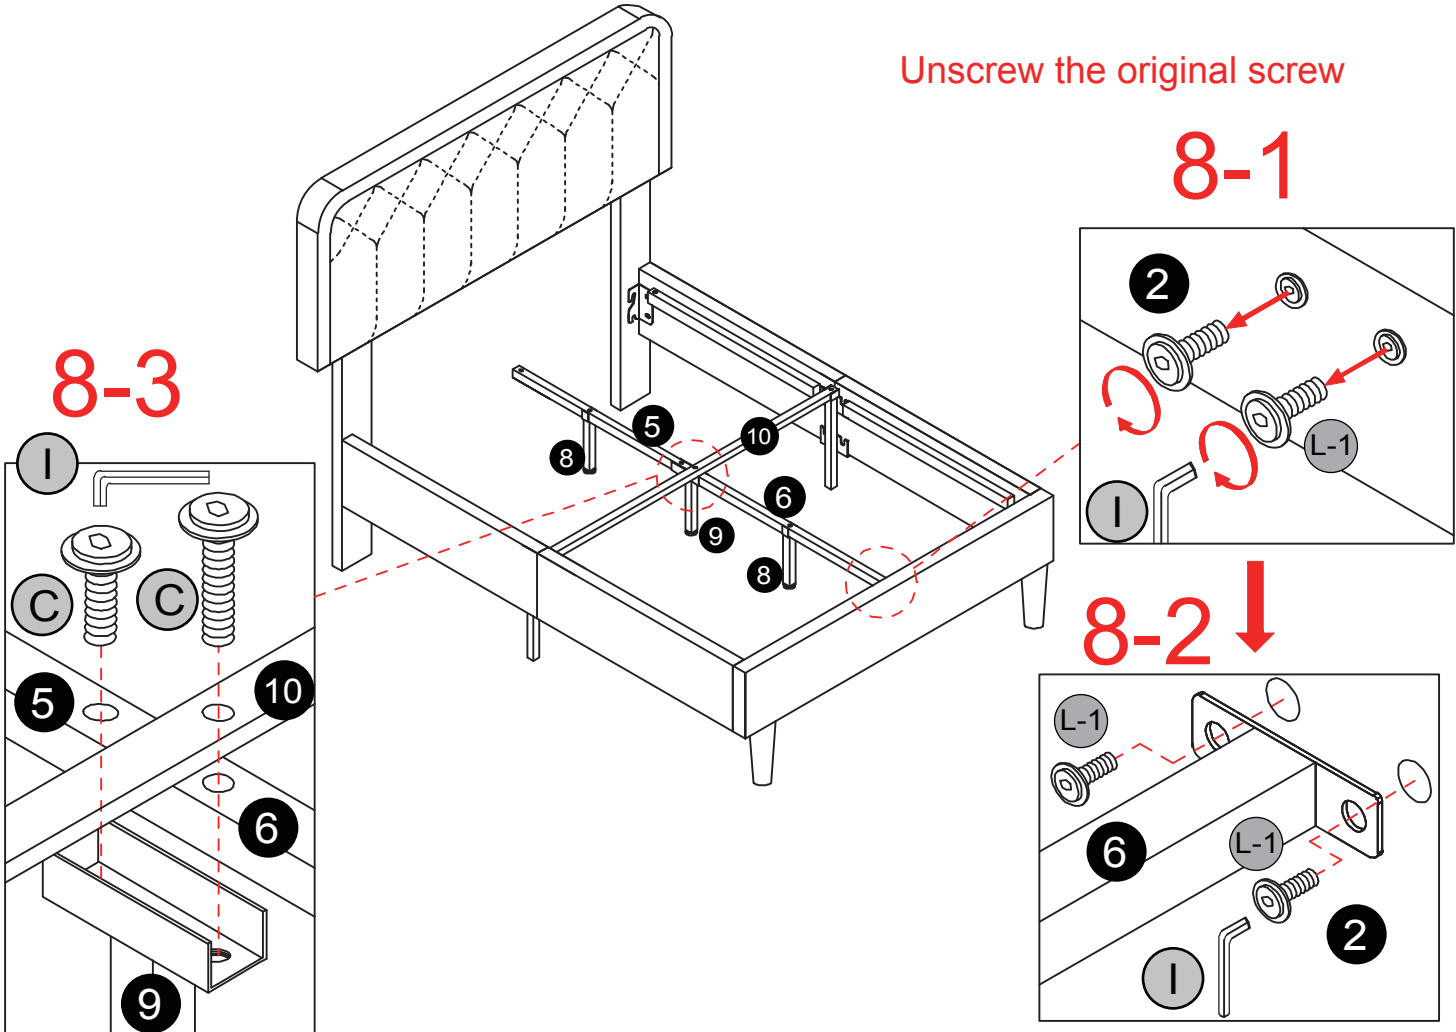

Unscrew the original screw

8-1



8-2 ↓

Tighten the original screw



Step 7

 Ax2
  Cx2
  lx1

7-1

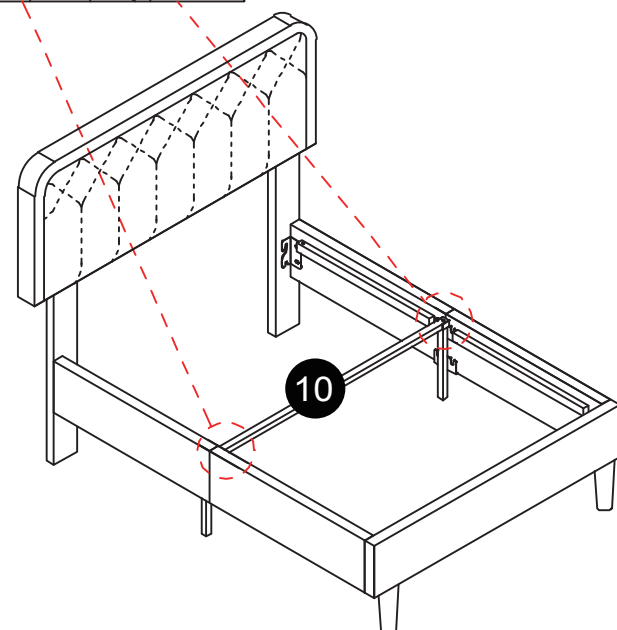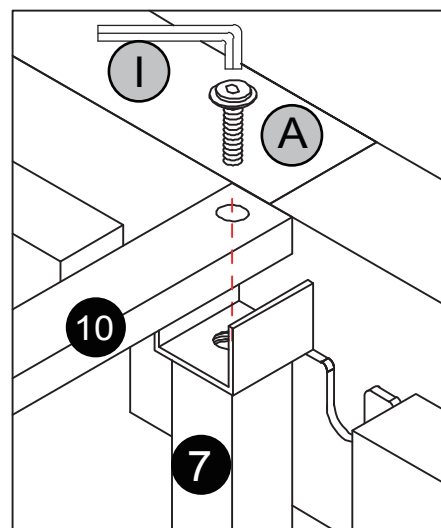




7-2

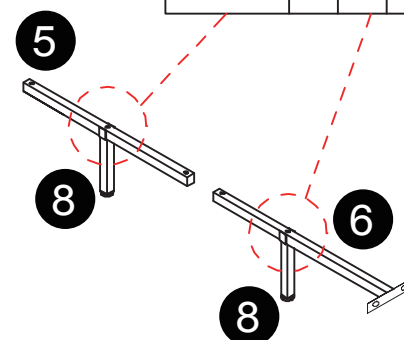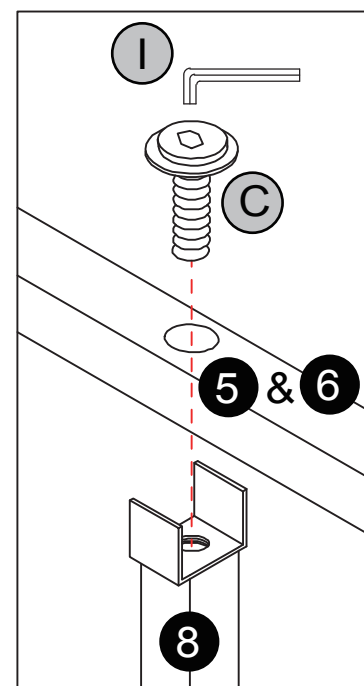

Step 2



 L-1 x 4
  Gx1
  Hx1
  lx1

Tips:
Must Keep the Brackets
Lay Toward the Ground

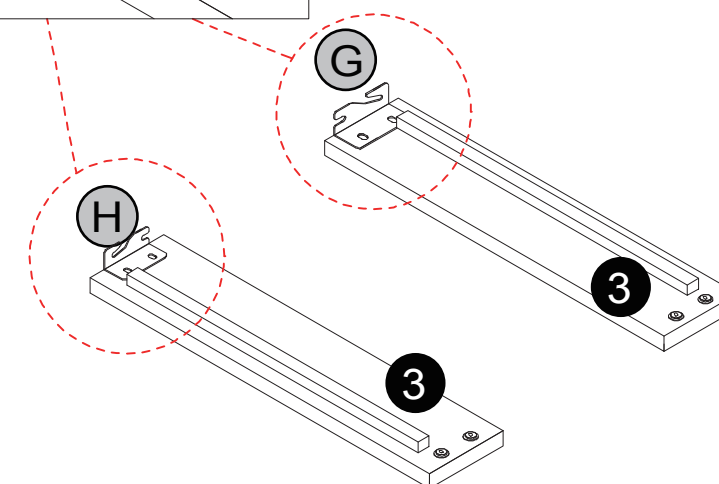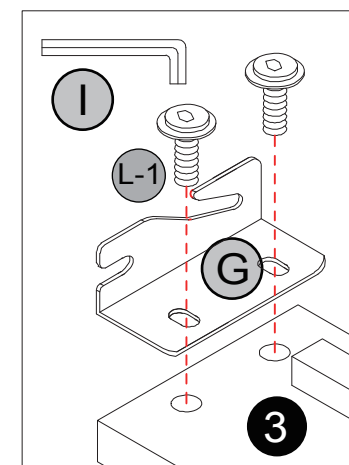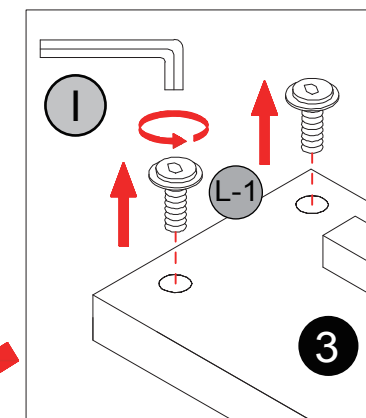


Step 3

 L-1 x 8
  7 x2
  lx1

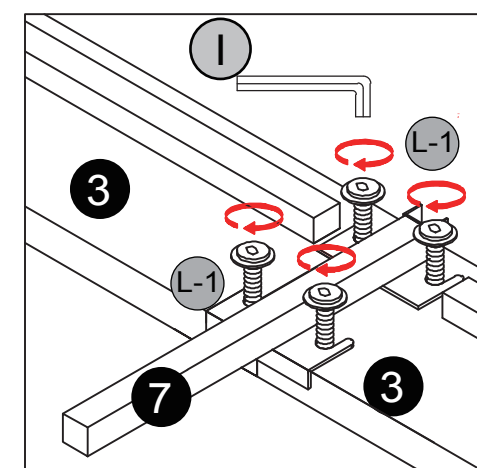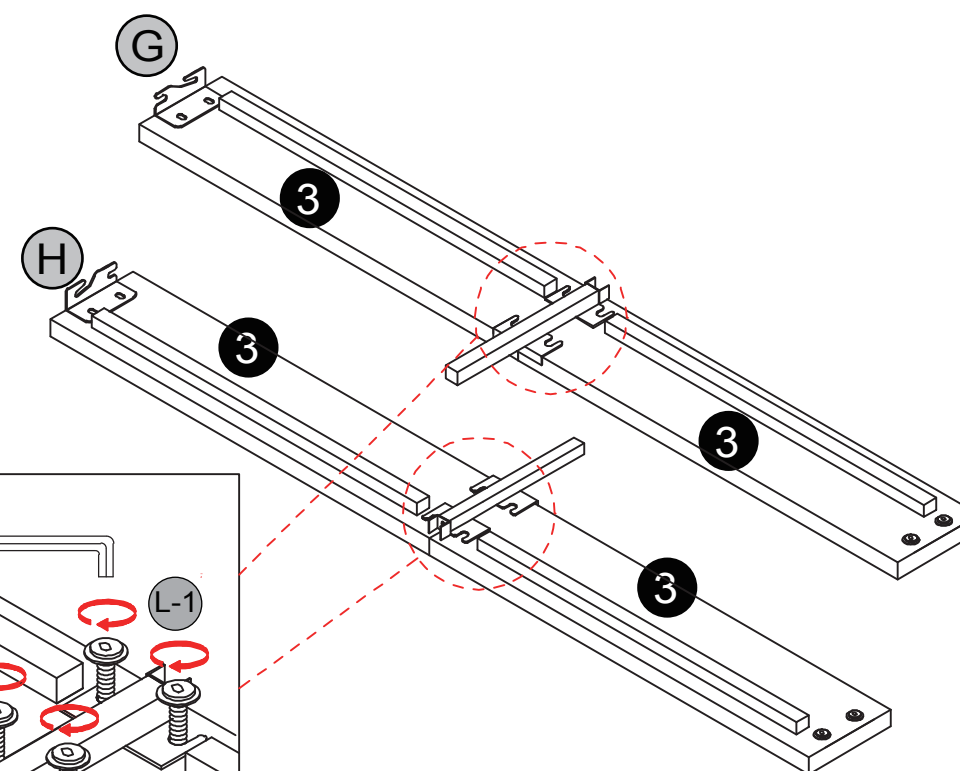


Step 4

 A-1 × 4  1x1

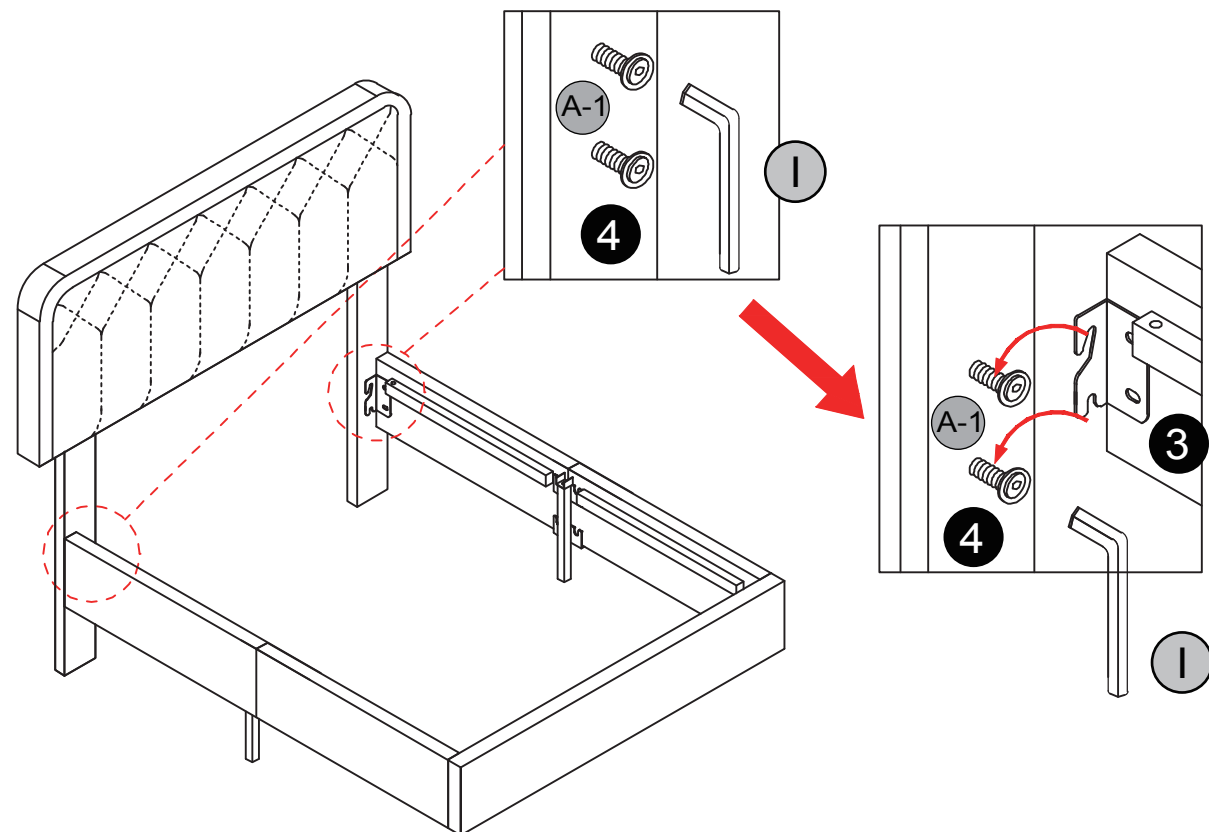

Step 5

 Ex2  Fx2

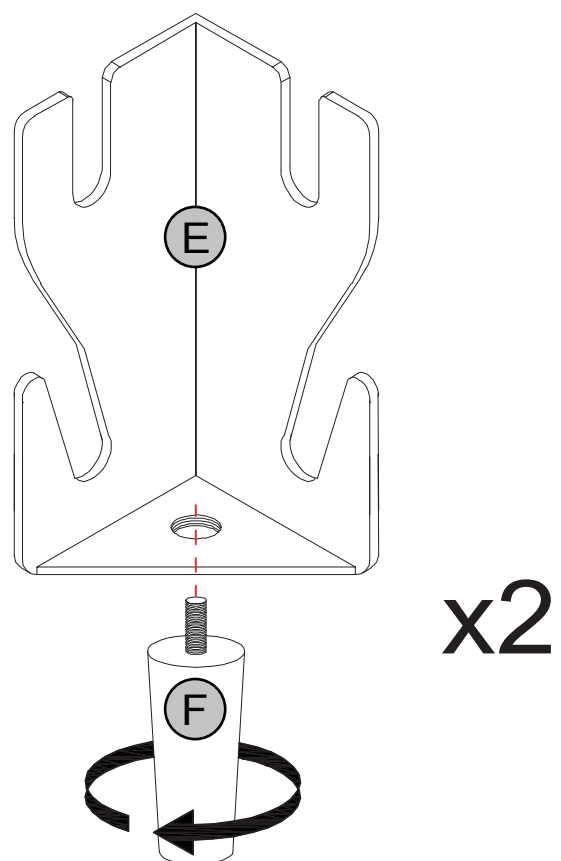

Step 6

 L-1 × 8  1x1

