
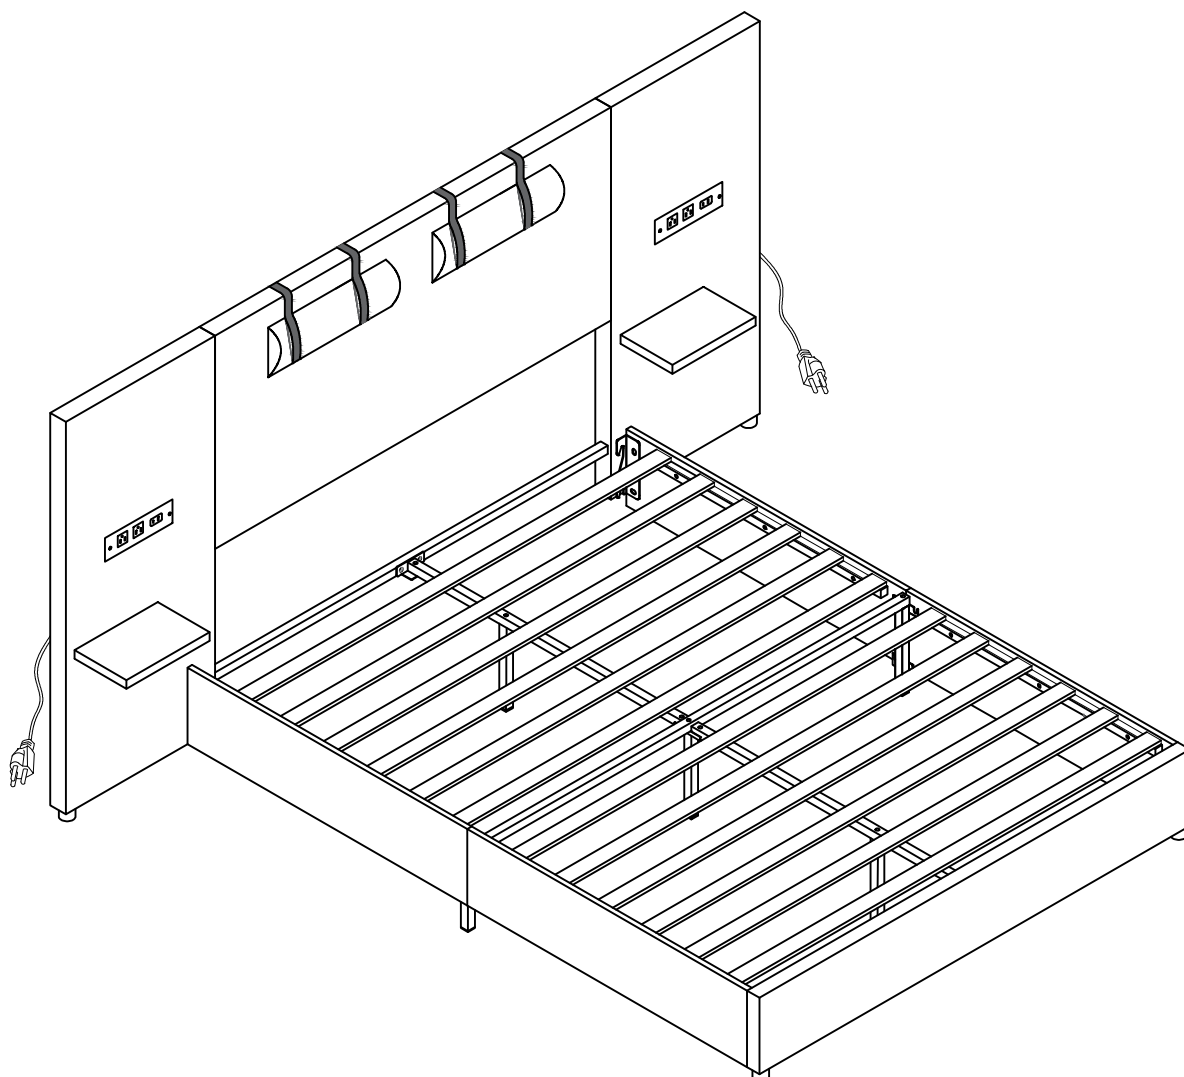


# ASSEMBLY INSTRUCTION

SKU:WF324746




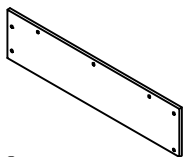
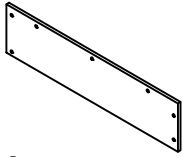
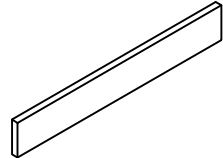
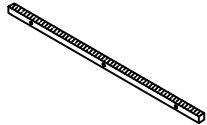

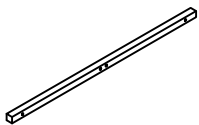



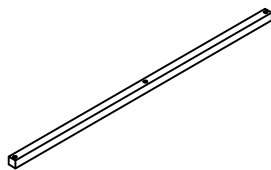


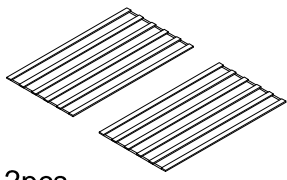


Detail View

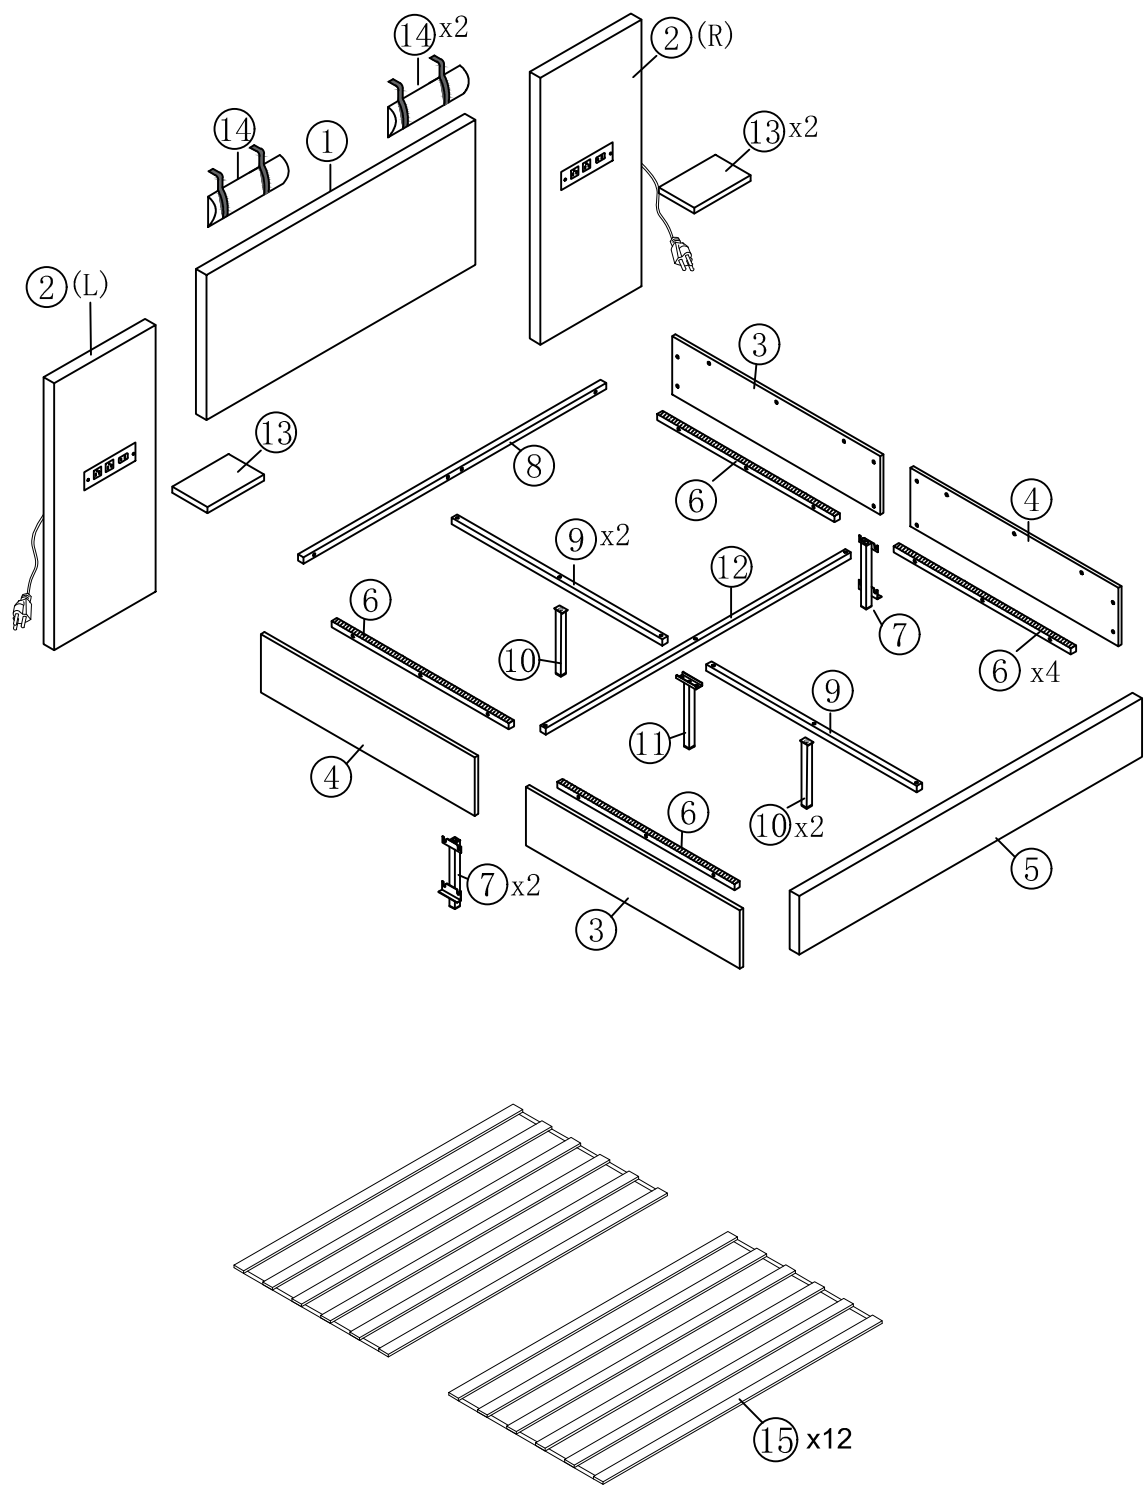










# Part List
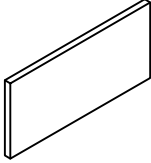
## Hardware List + WF324746

<b>1</b>  Head board-1pc	<b>2L</b>  Side headboard-1pc	<b>2R</b>  Side headboard-1pc
<b>3</b>  Siderails-2pcs	<b>4</b>  Siderails-2pcs	<b>5</b>  Foot board-1pc
<b>6</b>  Side rails support bar-4pcs	<b>7</b>  Side rails support legs-2pcs	<b>8</b>  Head board cross bar-1pc
<b>9</b>  Center support bar-2pcs	<b>10</b>  Middle support leg-2pcs	<b>11</b>  Connected support leg-1pc
<b>12</b>  Cross bar-1pc	<b>13</b>  Flat wooden board-2pcs	<b>14</b>  Head rest-2pcs
<b>15</b>  Slats-12pcs		

# Hardware List


WF324746




<b>A</b> 	<b>B</b>  Ø8*40mm	<b>C</b> 
Allen Key(1pc)	Bolts(25pcs)	Two hole iron(2pcs)
<b>D</b>  Ø8*16mm	<b>E</b>  77*33**33*2mm	<b>F</b> 
Bolts(48pcs)	"7" Connector(4pcs)	Hinge(4pcs)
<b>G</b>  H:50mm	<b>H</b>  86*32*28*2mm	<b>I</b>  Ø4*50mm
Bed legs(6pcs)	Center support bar fittings(2pcs)	Nails (6pcs)

Attention: Do not tighten the screws before completing the entire installation. If you have any difficulty with the installation process, please feel free to contact us.

Step 1 x2

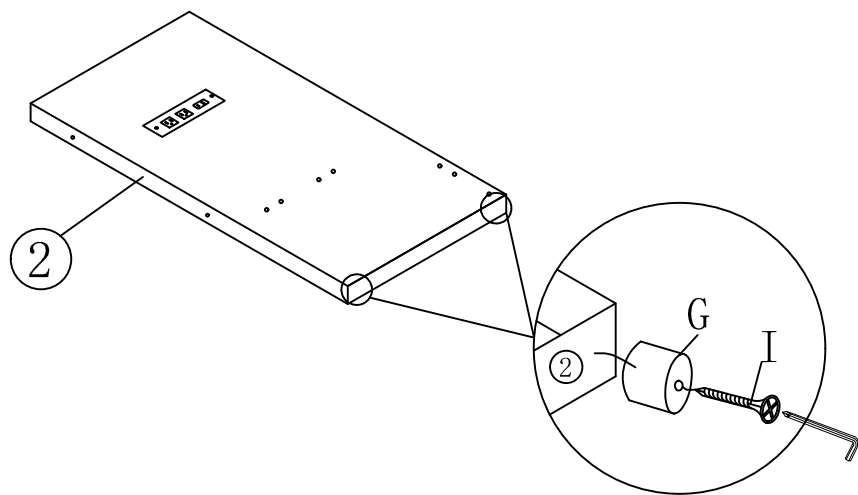
Fix the legs G to the bottom of the Side headboard ② with Nails I by using Allen key A or electric drill .






Allen Key 	G Bed legs x4 	I Nails x 4 M4X50mm 
--	--	---

Step 2 x2

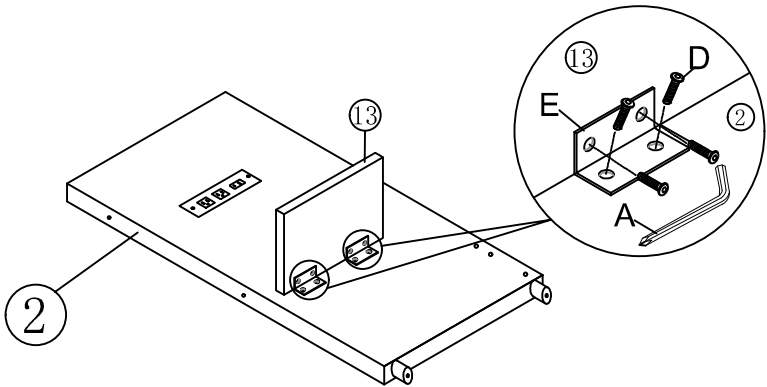
Fix the Flat wooden board ⑬ to the Side headboard ② with "7" connector E and Bolts D by using Allen key A.





Allen Key 	D Bolts x 16 M8X16mm 	E "7" Connector x 4 
--	--	--

Step 3

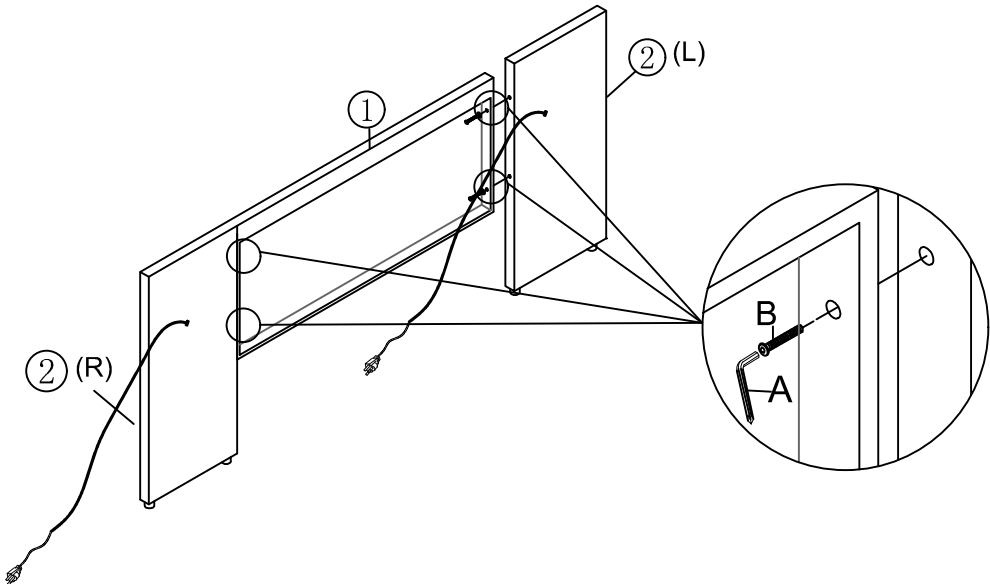
Fix the Side headboard ② to the Head board ① with Bolts B by using Allen key A.



Allen Key 	B Bolts x 4 M8X40mm 
--	---


## Step 4




Fix the Headrest ⑭ to the Head board ①.

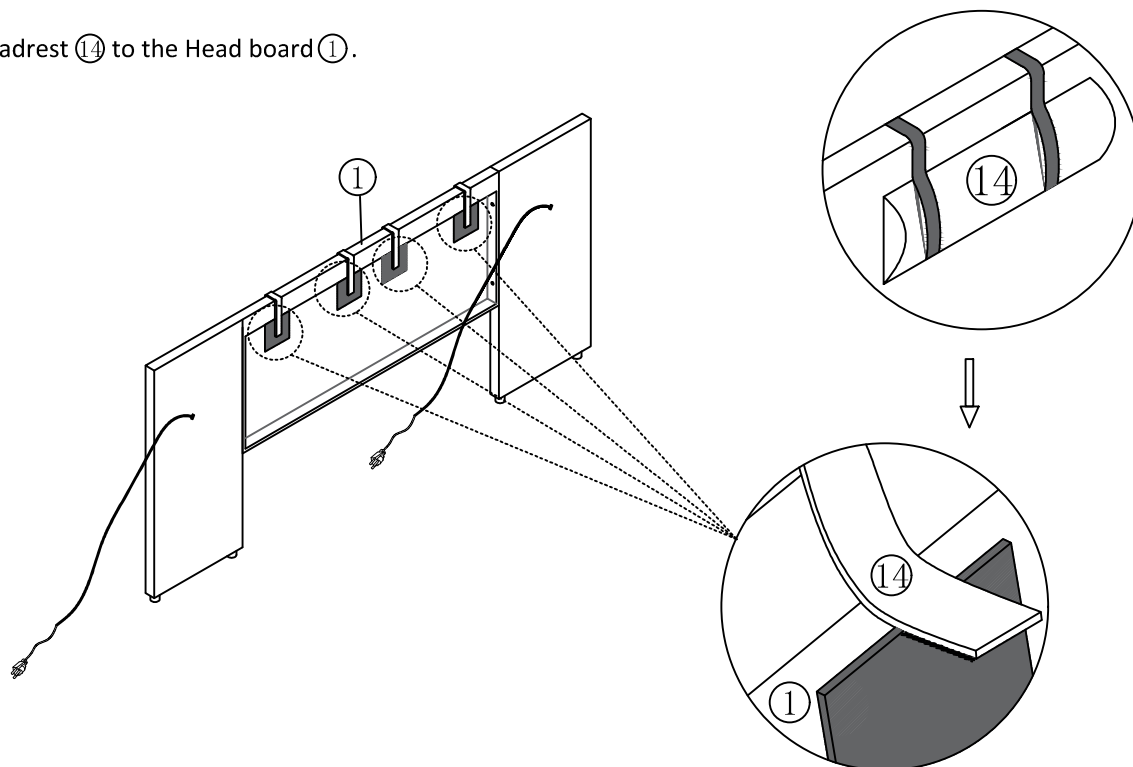

## Step 5


Fix the head board cross bar ⑧ to the side headboard ② with Two hole iron C and Bolts D by using Allen key A.

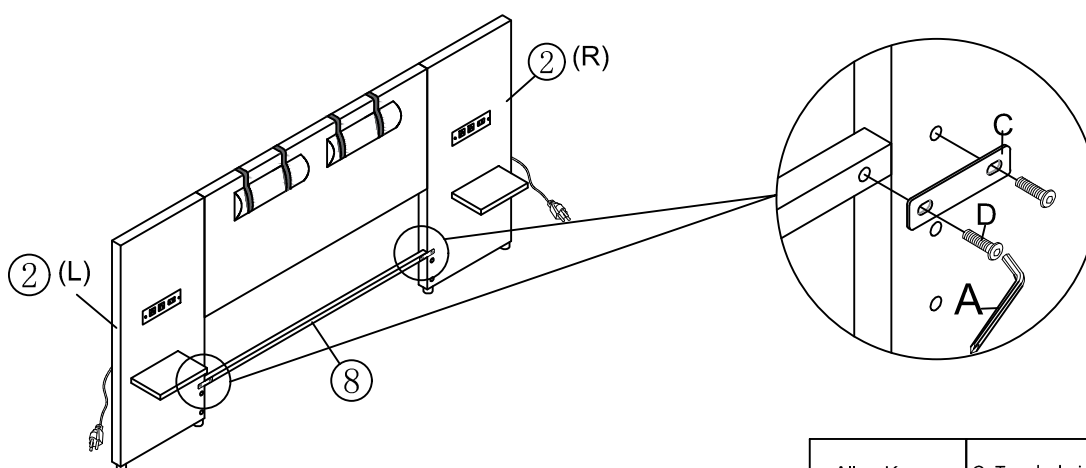



Allen Key 	C Two hole iron x 2 	D Bolts x 4  M8X16mm
--	--	---

## Step 6 x2

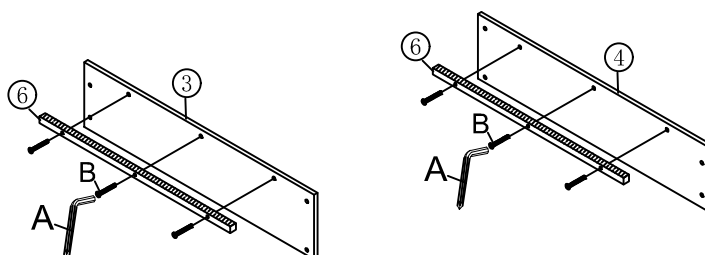
Connect Siderail support bar ⑥ to the Siderails ③ and ④ with Bolts B by using Allen key A.



Allen Key 	B Bolts x 12  M8X40mm
--	--


# Step 7 x2

Fix the side rails support leg ⑦ to the side rail ③ and ④ with Bolts D by using Allen key A.

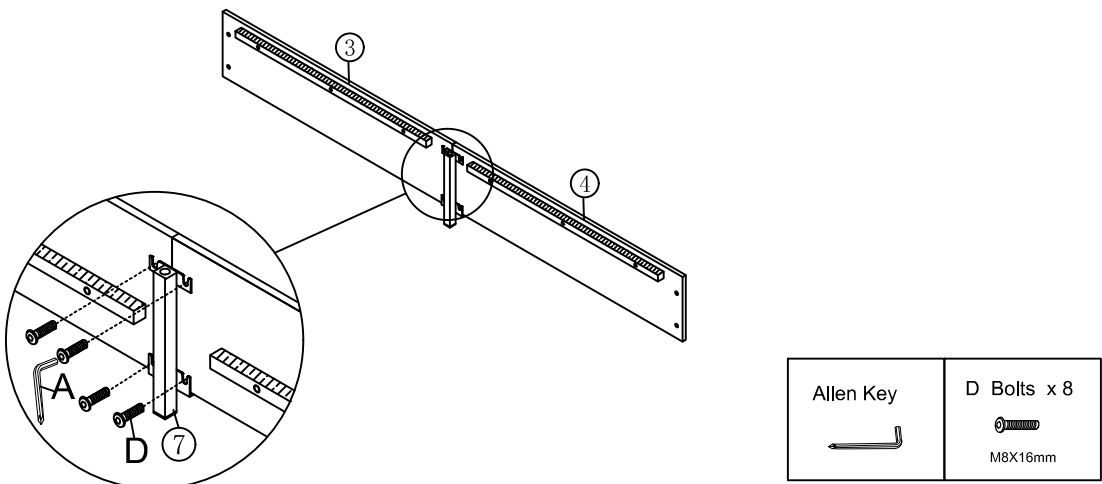


# Step 8

Fix the legs G to the foot board ⑤ with Nails I by using Allen key A or electric drill .

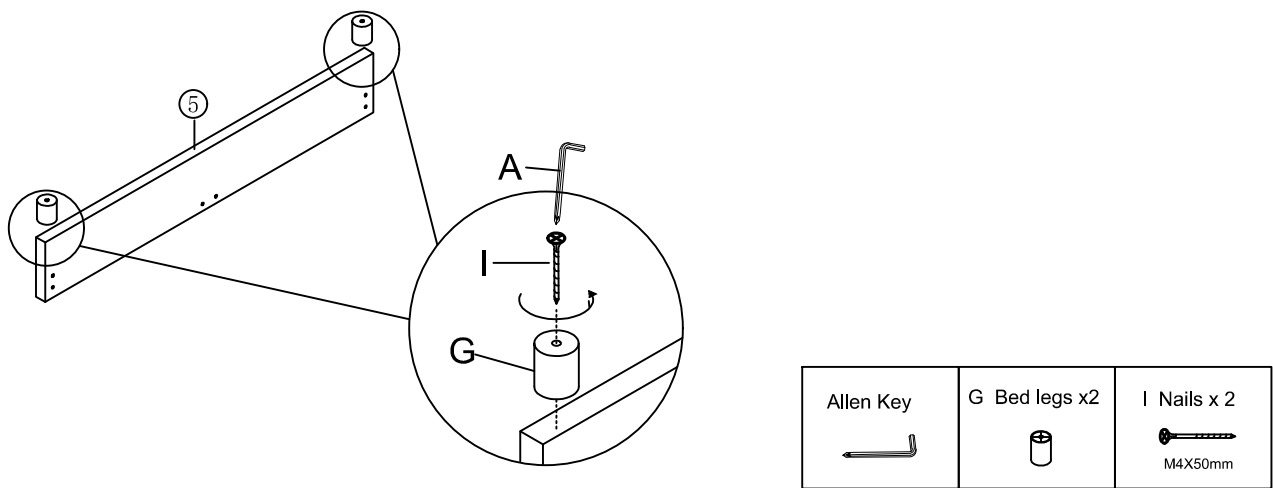


# Step 9

Fix the assembled side rail to the Side headboard ② and foot board ⑤ with Bolts D and Hinge F by using Allen key A.

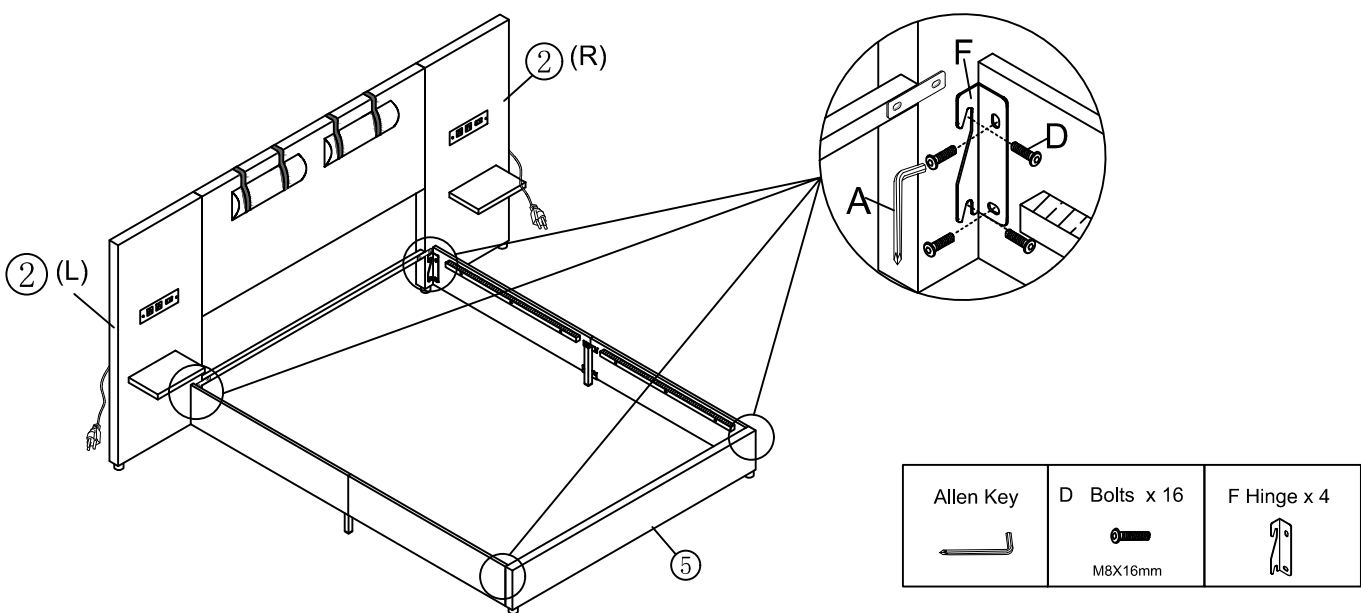


## Step 10

Fix the Center support bar fittings H to the Headboard cross bar ⑧ and foot board ⑤ with Bolts D by using Allen key A.

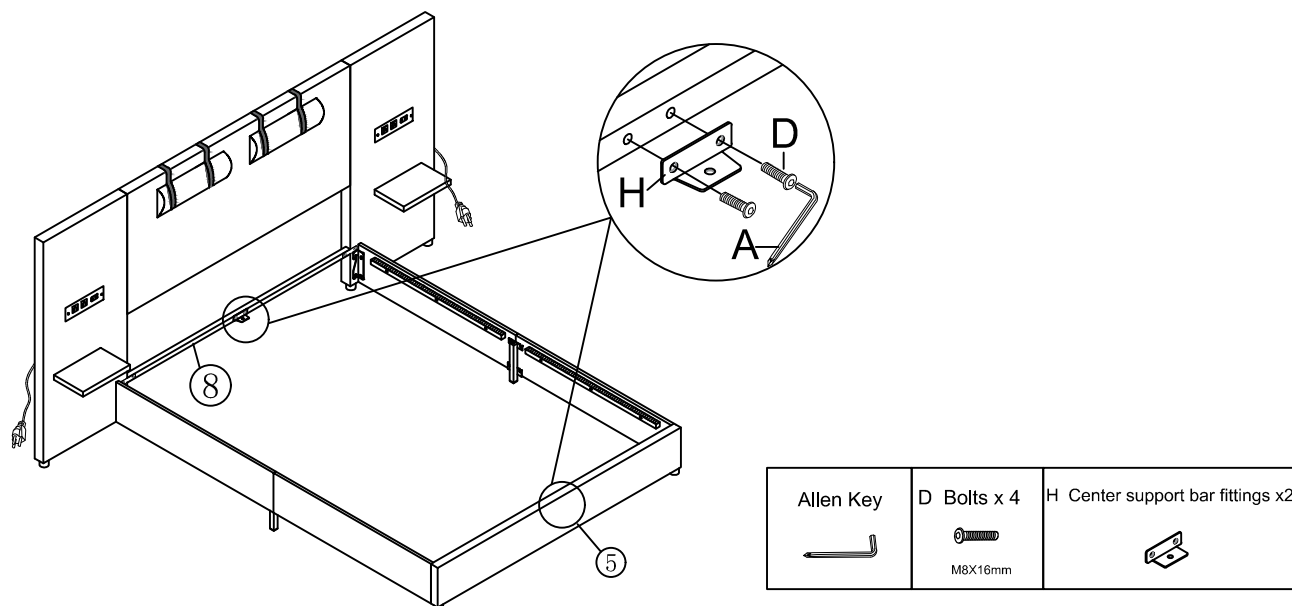


## Step 11

Fix the middle support leg ⑩ to the center support bar ⑨ with Bolts B by using Allen key A.  
Fix the connected support leg ⑪ to the center support bar ⑨ with Bolts B by using Allen key A.

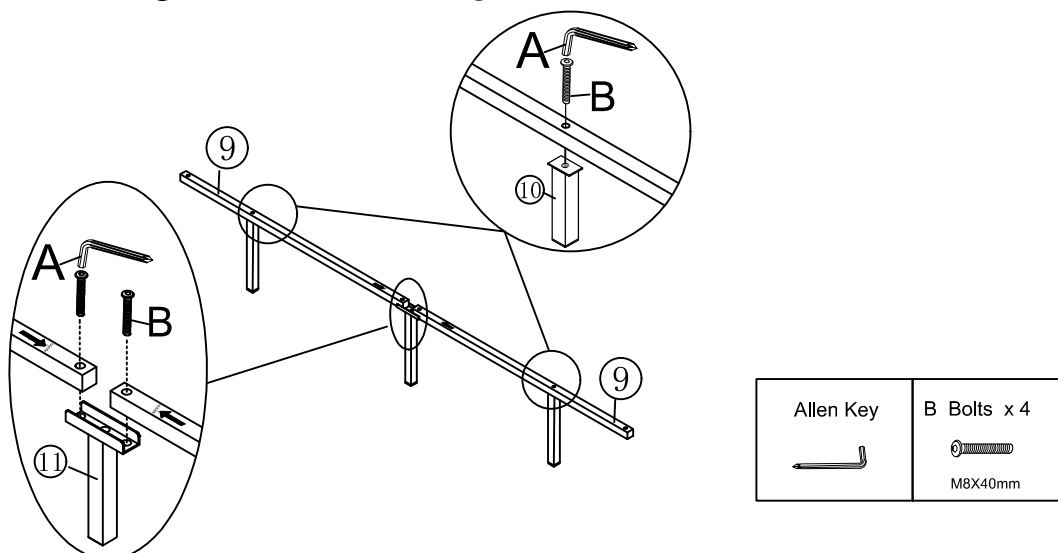

## Step 12


Fix the Center support bar ⑨ to the headboard cross bar ⑧ and foot board ⑤ with Bolts B by using Allen key A.

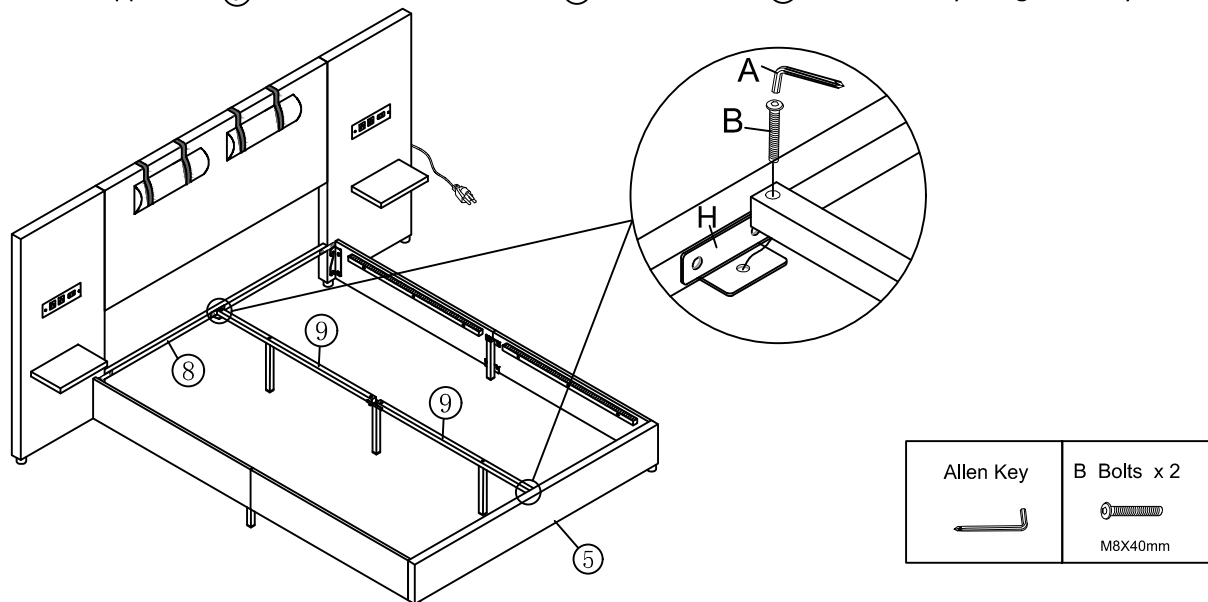





## Step 13

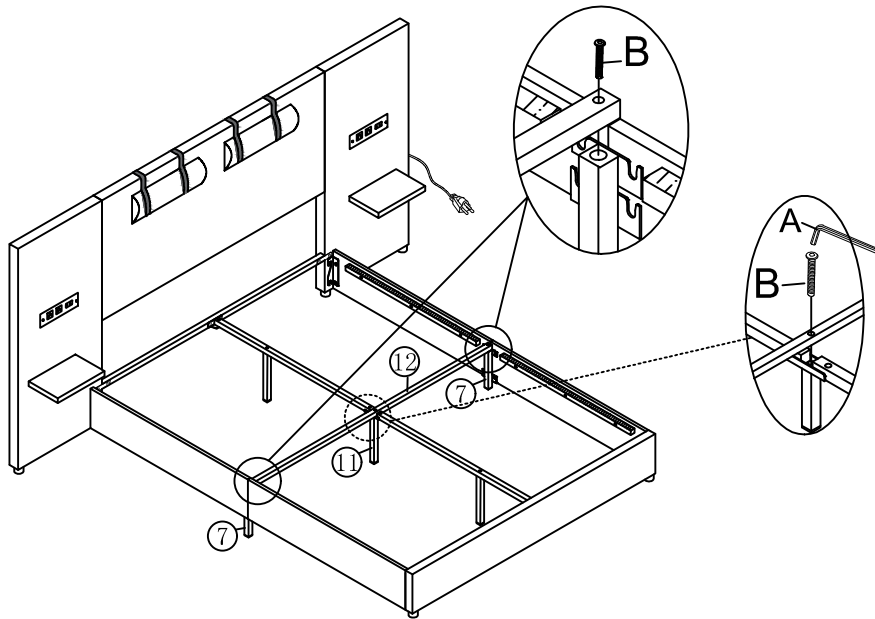Fix the cross bar ⑫ to the side rails support legs ⑦ and Connected support legs ⑪ with Bolts B by using Allen key A.



Allen Key	B Bolts x 3
	
	M8X40mm

## Step 14

Fix the slats ⑮ to the side support bar ⑥, then assemble is finished, now please tighten all hardware and enjoy the bed.

