



ASSEMBLY INSTRUCTION

SKU:WF324744











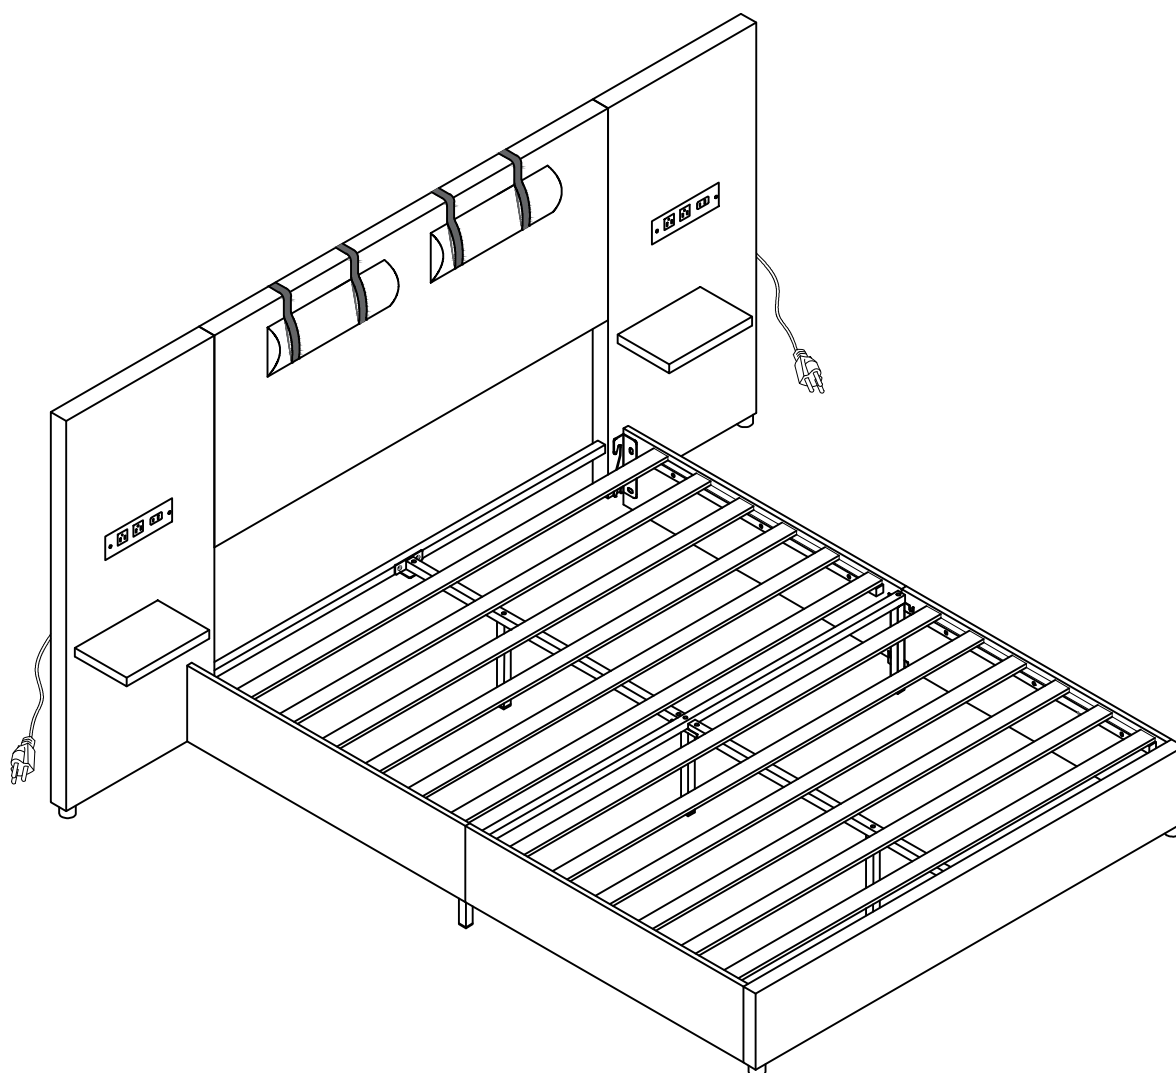


Detail View

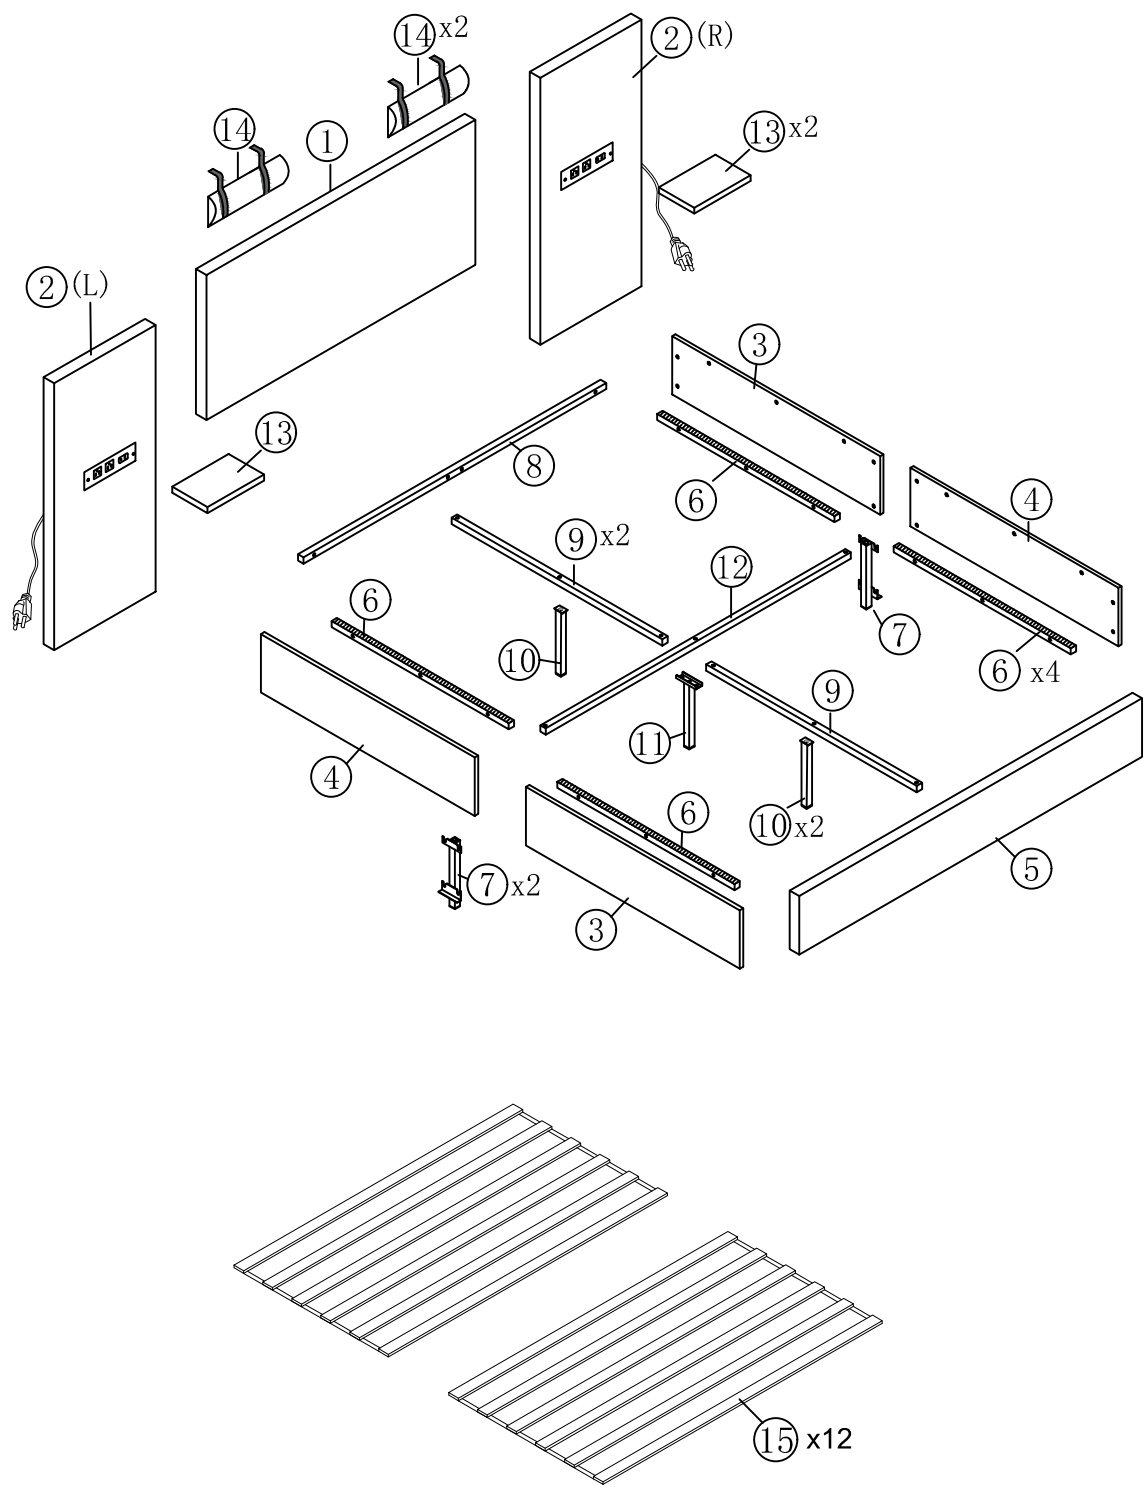



Part List

Hardware List + WF324744

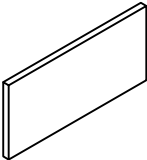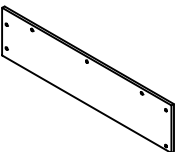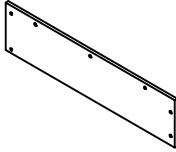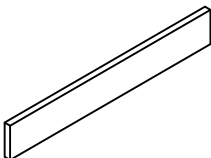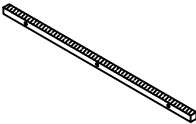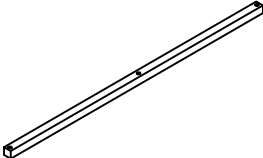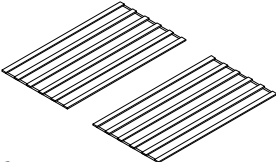1  Head board-1pc	2L  Side headboard-1pc	2R  Side headboard-1pc
3  Siderails-2pcs	4  Siderails-2pcs	5  Foot board-1pc
6  Side rails support bar-4pcs	7  Side rails support legs-2pcs	8  Head board cross bar-1pc
9  Center support bar-2pcs	10  Middle support leg-2pcs	11  Connected support leg-1pc
12  Cross bar-1pc	13  Flat wooden board-2pcs	14  Head rest-2pcs
15  Slats-12pcs		

Hardware List


WF324744

A		B	 Ø8*40mm	C	
Allen Key(1pc)		Bolts(25pcs)		Two hole iron(2pcs)	
D	 Ø8*16mm	E	 77*33**33*2mm	F	
Bolts(48pcs)		"7" Connector(4pcs)		Hinge(4pcs)	
G	 H:50mm	H	 86*32*28*2mm	I	 Ø4*50mm
Bed legs(6pcs)		Center support bar fittings(2pcs)		Nails (6pcs)	

Attention: Do not tighten the screws before completing the entire installation. If you have any difficulty with the installation process, please feel free to contact us.

Step 1 x2


Fix the legs G to the bottom of the Side headboard ② with Nails I by using Allen key A or electric drill .

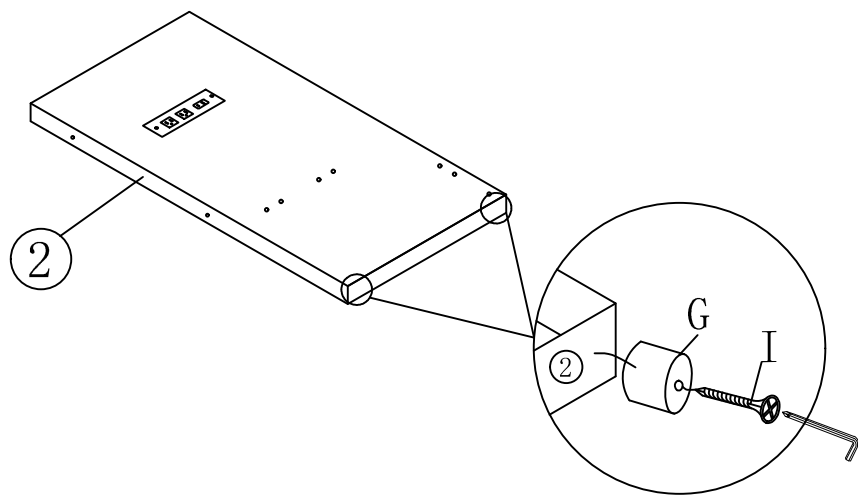

Allen Key	G Bed legs x4	I Nails x 4 M4X50mm
		

Step 2 x2


Fix the Flat wooden board ⑬ to the Side headboard ② with "7" connector E and Bolts D by using Allen key A.

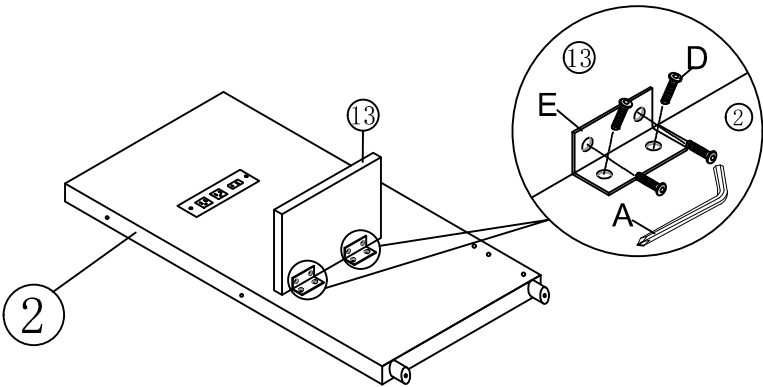

Allen Key	D Bolts x 16 M8X16mm	E "7" Connector x 4
		

Step 3


Fix the Side headboard ② to the Head board ① with Bolts B by using Allen key A.

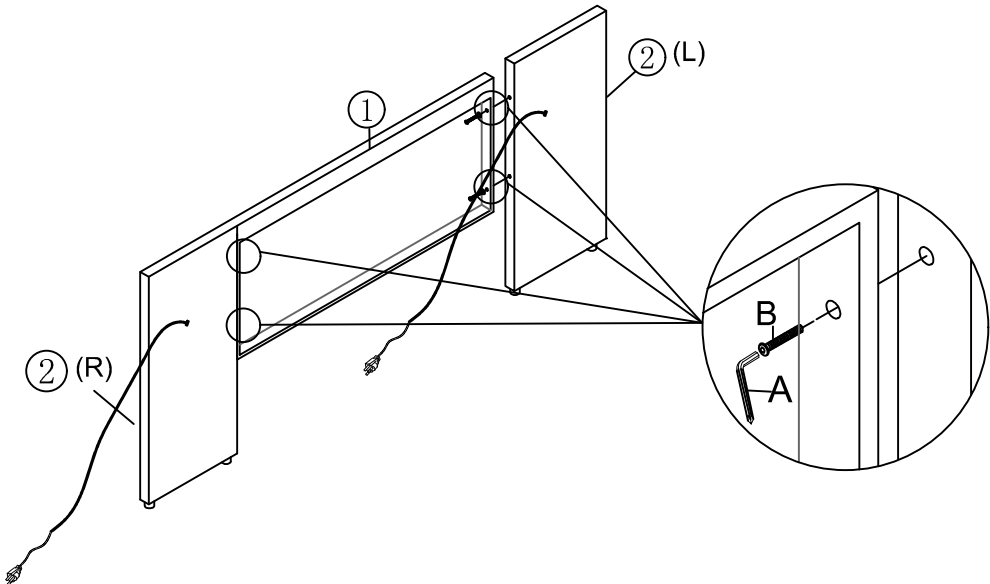

Allen Key	B Bolts x 4 M8X40mm
	


Step 4

Fix the Headrest ⑭ to the Head board ①.

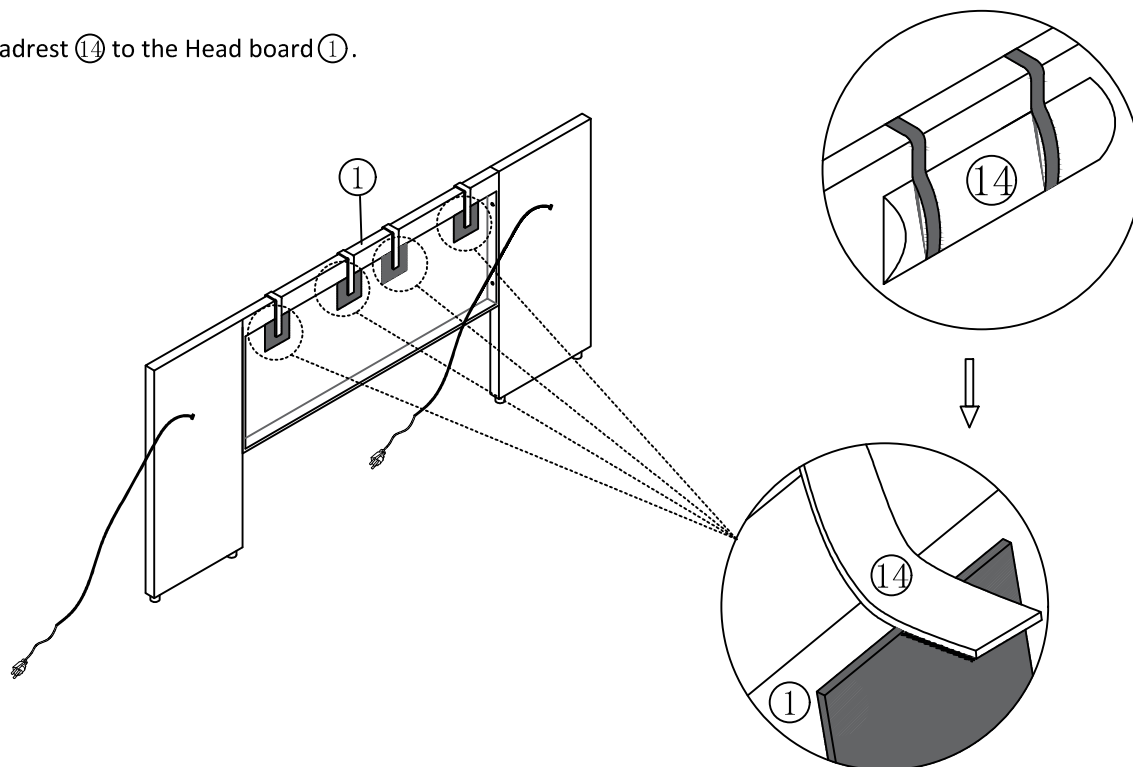

Step 5


Fix the head board cross bar ⑧ to the side headboard ② with Two hole iron C and Bolts D by using Allen key A.

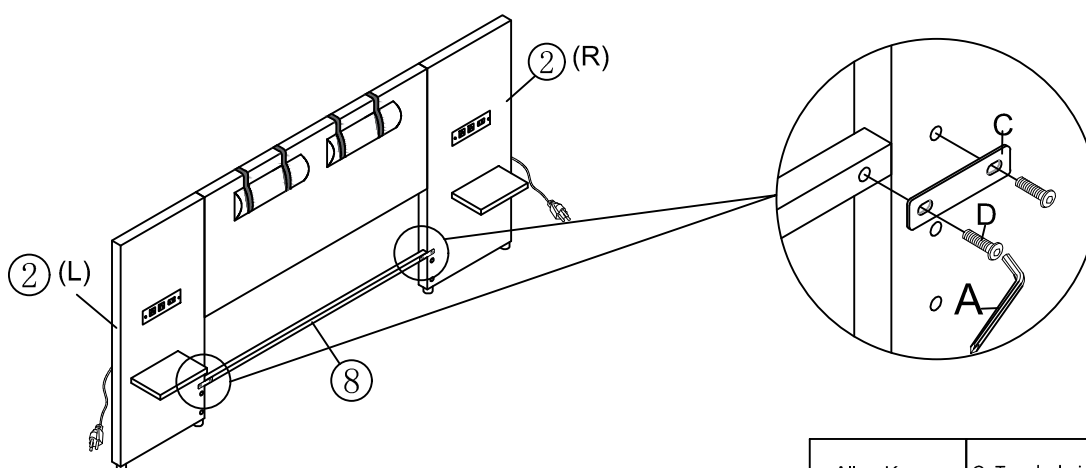

Allen Key 	C Two hole iron x 2 	D Bolts x 4  M8X16mm
--	--	---

Step 6 x2


Connect Siderail support bar ⑥ to the Siderails ③ and ④ with Bolts B by using Allen key A.

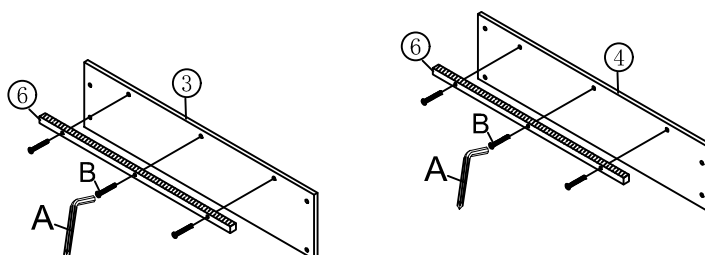

Allen Key 	B Bolts x 12  M8X40mm
--	--


Step 7 x2

Fix the side rails support leg ⑦ to the side rail ③ and ④ with Bolts D by using Allen key A.

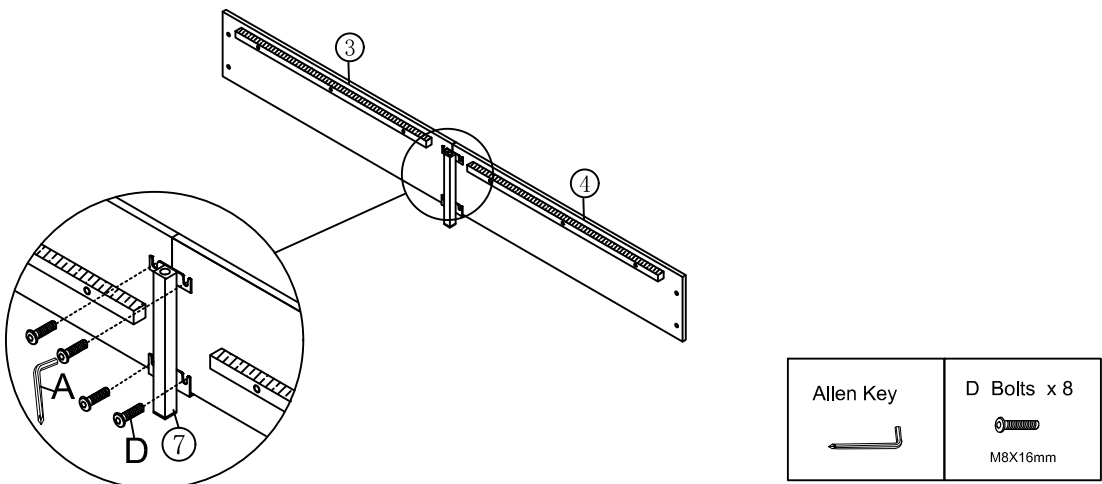


Step 8

Fix the legs G to the foot board ⑤ with Nails I by using Allen key A or electric drill .

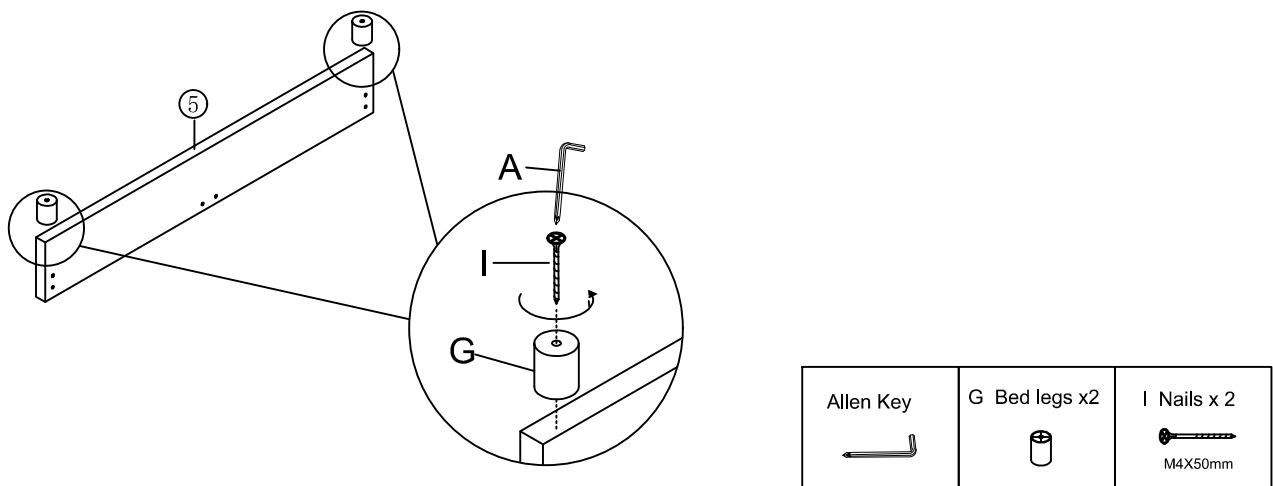


Step 9

Fix the assembled side rail to the Side headboard ② and foot board ⑤ with Bolts D and Hinge F by using Allen key A.

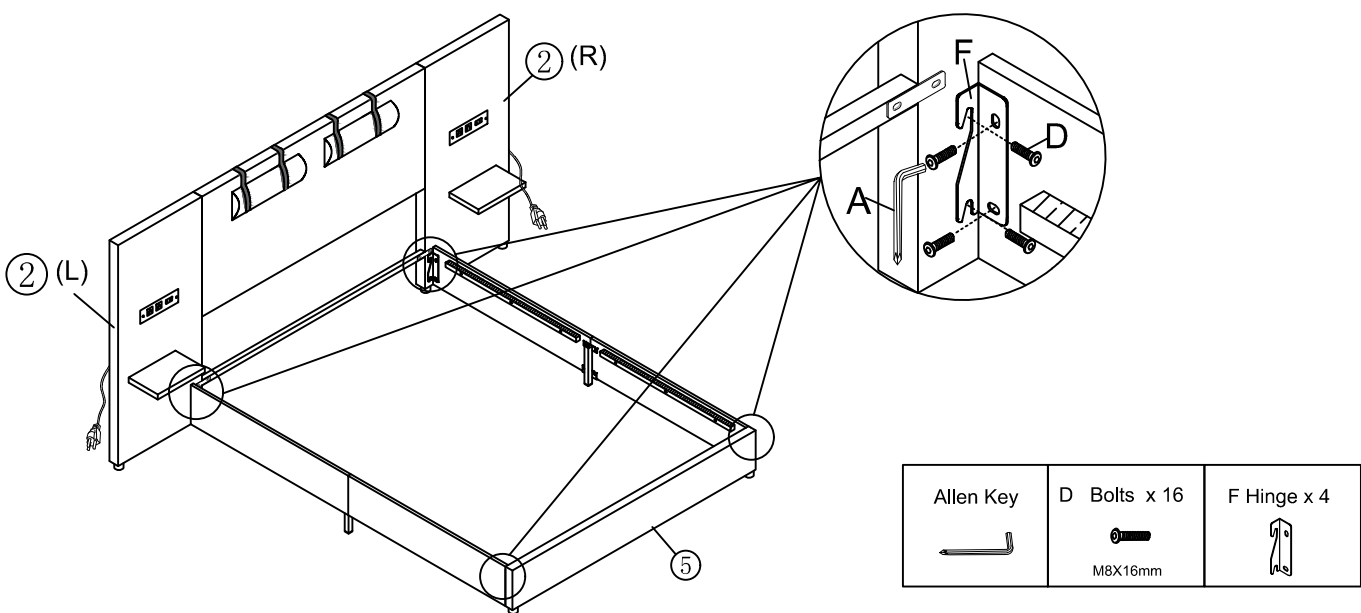


Step 10

Fix the Center support bar fittings H to the Headboard cross bar ⑧ and foot board ⑤ with Bolts D by using Allen key A.

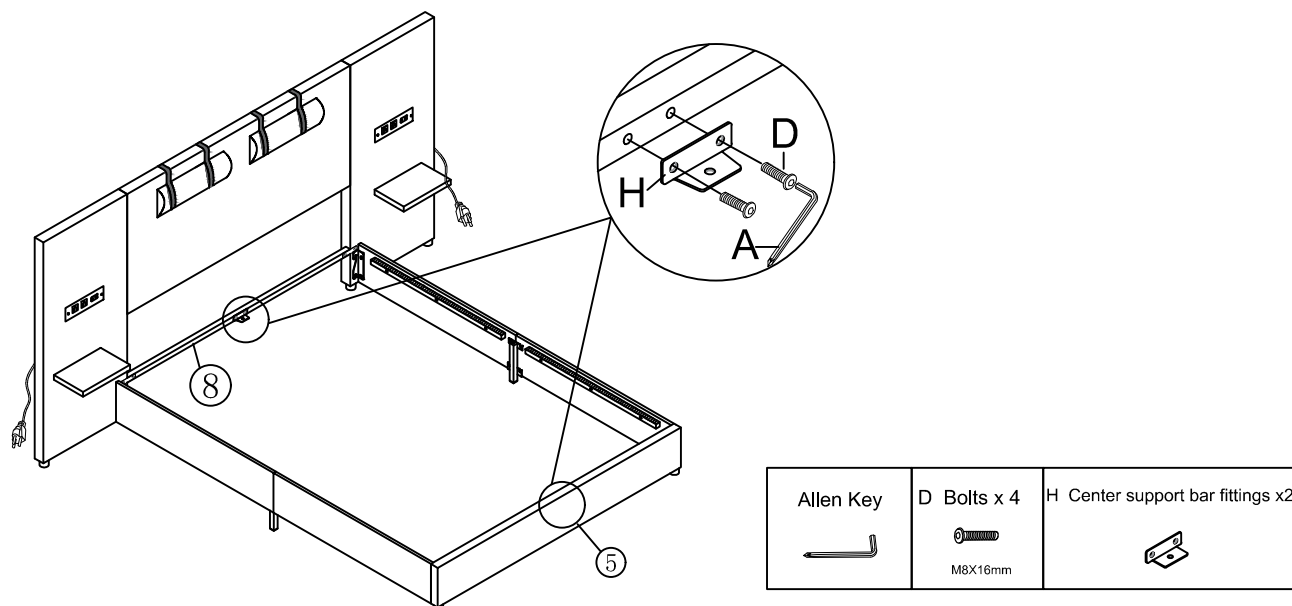


Step 11

Fix the middle support leg ⑩ to the center support bar ⑨ with Bolts B by using Allen key A.
Fix the connected support leg ⑪ to the center support bar ⑨ with Bolts B by using Allen key A.

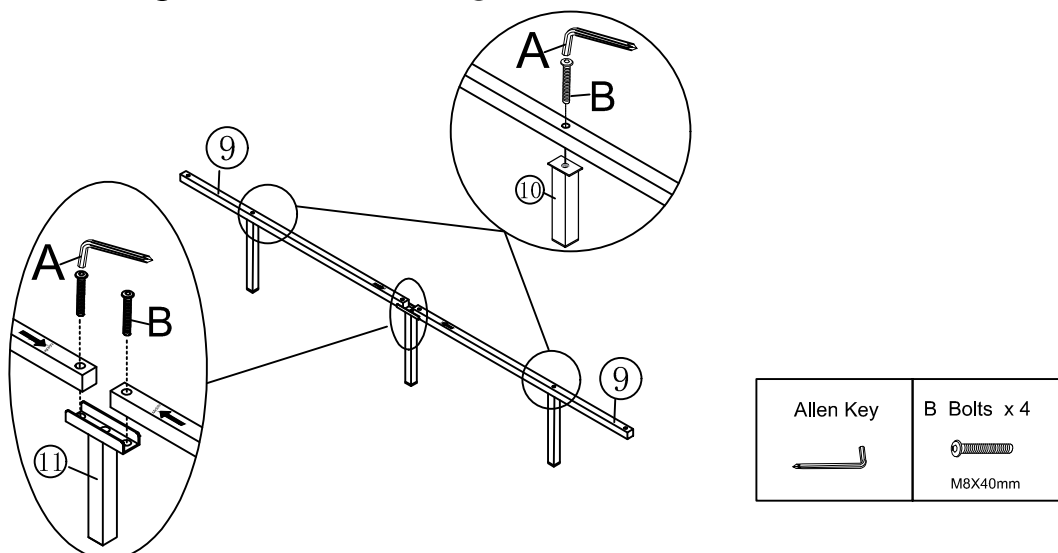


Step 12

Fix the Center support bar ⑨ to the headboard cross bar ⑧ and foot board ⑤ with Bolts B by using Allen key A.

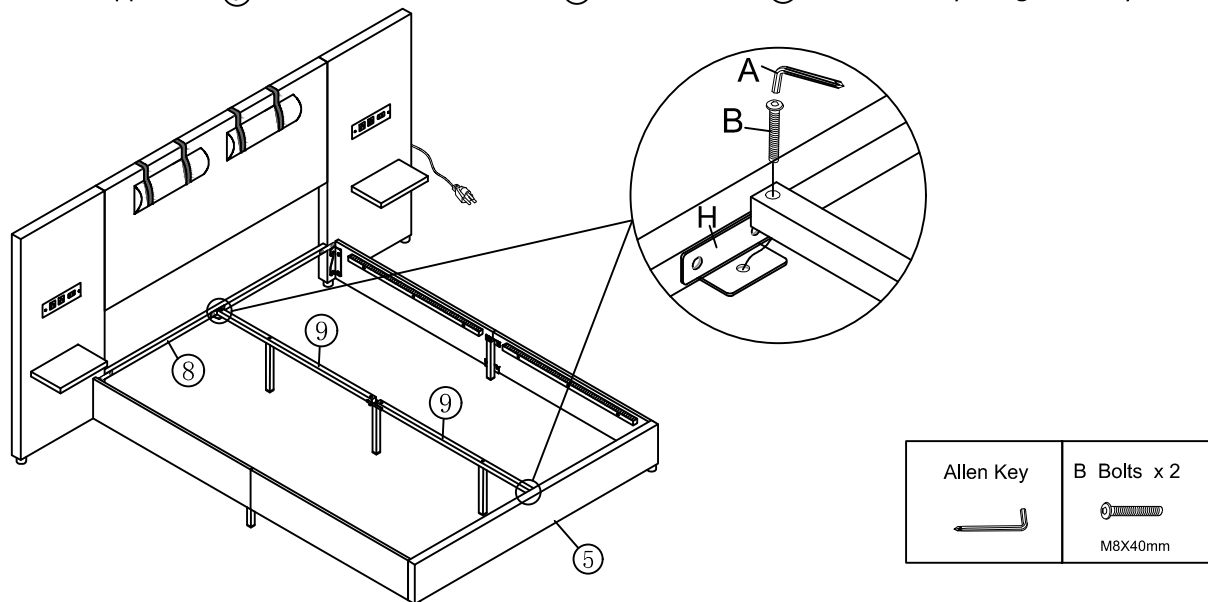

Step 13

Fix the cross bar ⑫ to the side rails support legs ⑦ and Connected support legs ⑪ with Bolts B by using Allen key A.

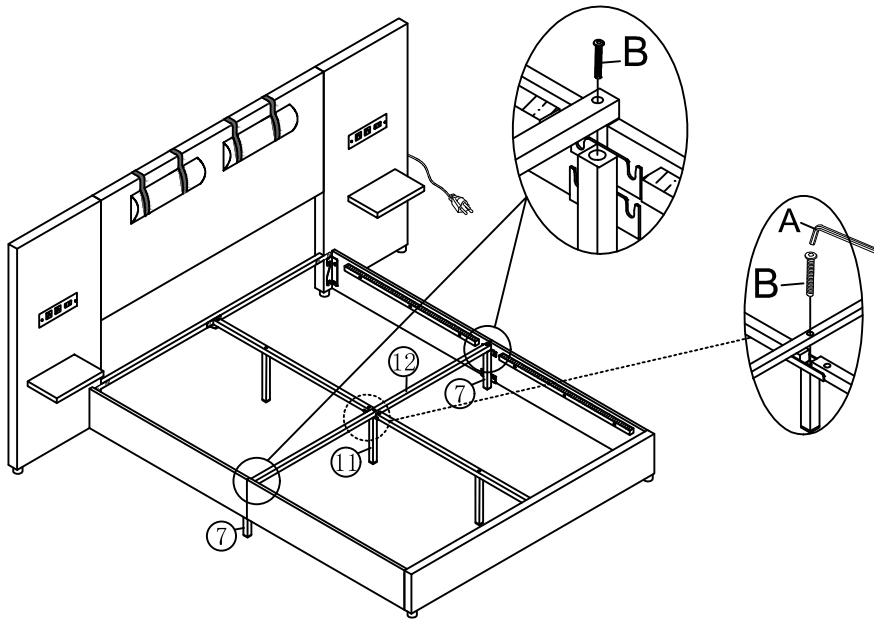

Allen Key	B Bolts x 3
	
	M8X40mm

Step 14

Fix the slats ⑮ to the side support bar ⑥, then assemble is finished, now please tighten all hardware and enjoy the bed.

