

ASSEMBLY INSTRUCTIONS

TOOLS REQUIRED



Allen Wrench

(Included)




Phillips
Screwdriver

(Not Included)



2 - Persons
Recommended

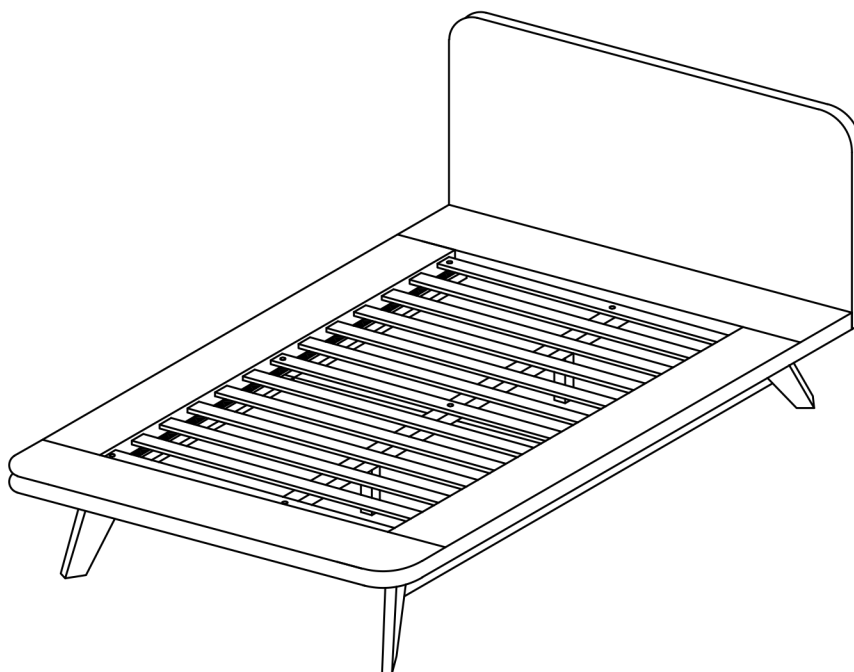

ASSEMBLY RATING



EASY ————— DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.



CHECK BEFORE STARTING

☐

Are you missing anything?

Double-check all parts, hardware and accessories listed on Page 6 are accounted for.

☐

Check out our Quick Tips!

We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!

☐

Should we send any replacements?

Are there any irregularities or flaws in the parts? We can send replacements!

☐

Prep Time!

Please review the assembly instructions and all diagrams prior to assembling. Set up your workspace by laying the parts and hardware out separately, then begin!



PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.



Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.

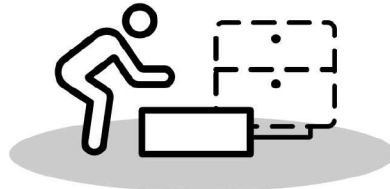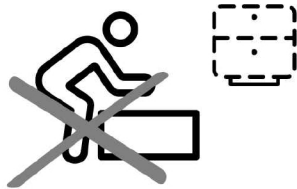

Suitable Location

Assembling near the area of the intended location is highly recommended.





Sufficient Space

Make sure you have enough space to move around during the assembly.



Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.

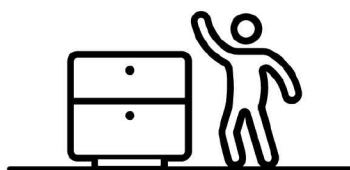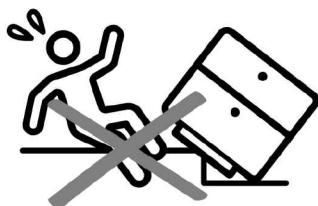

Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.


ASSEMBLY AND CARE ADVICE



**FAILURE TO FOLLOW THE GUIDELINES BELOW MAY
RESULT IN INJURY AND/OR PROPERTY DAMAGE.**




Position each part correctly
and insert screws or bolts into
their respective holes.

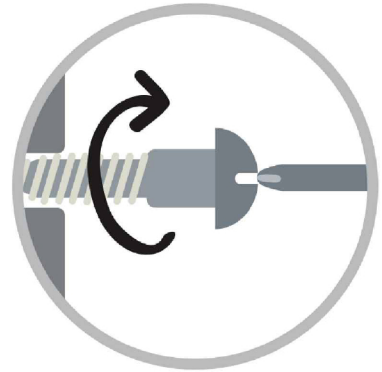

Turn clockwise to tighten and
only tighten when step is
completed or when instructed
to do so.



Use the appropriate hand tools
or power tools for assembly.
Select steps, such as tightening
screws and/or bolts, may require
hand tools to avoid causing
damage during assembly.


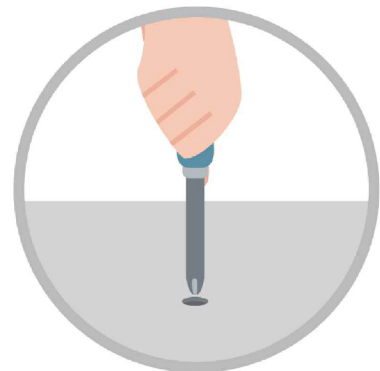


Save the instructions and store
any supplied tools for later
maintenance.

After two weeks, check and
tighten any loose hardware and
repeat again every six months
thereafter.


IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.

FULL BED

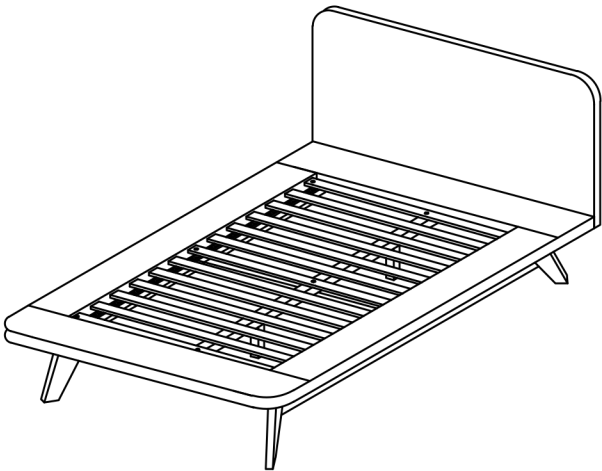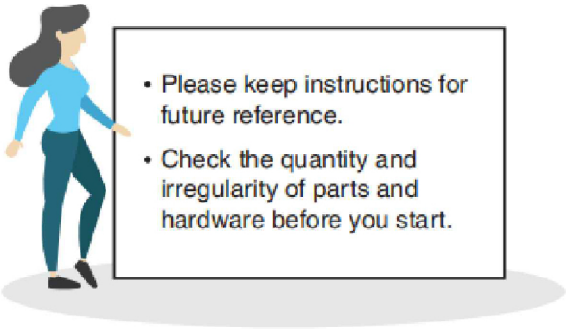

PARTS

#1 1pc

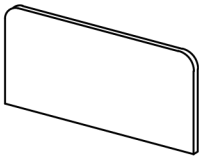

Headboard

#2 1pc




Headboard Panel

#3 1pc




Footboard Panel

#4 2pcs

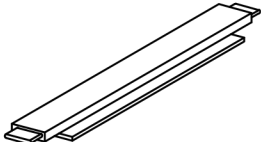


Side Rail Panel

#5 1pc




HB Support Wood

#6 1pc




FB Support Wood

#7 2pcs

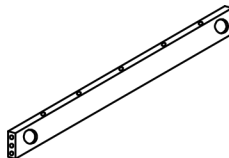

SR Support Wood

#8 1pc

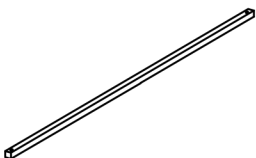


Center Rail

#9 2pcs




Center Support Leg

#10 1pc

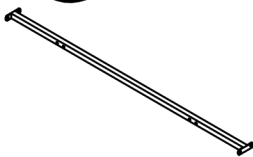

Metal Rail

#11 2pcs



Metal Support Leg

#12 4pcs




Corner Block

#13 4pcs



Bed Leg

#14 1set

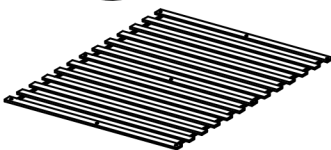

Slat


#15 3pcs



Metal


HARDWARE

#A 4pcs



Jcbc Bolt M6 x 20mm

#D 12pcs




Jcbb Bolt M8 x 30mm

#G 6pcs



M6 Spring Washer

#J 45pcs




Wood Screw M4 x 32mm

#M 4pcs




M8 Hex Nut (Black)

#P 1pc




Spanner (10mm)

#S 1pc




M5 Allen Wrench

#B 4pcs



Jcbc Bolt M6 x 40mm (Black)

#E 8pcs




Jcbb Bolt M8 x 50mm

#H 20pcs




M8 Flat Washer

#K 12pcs




Wood Dowel M8 x 30mm

#N 4pcs



Stud Screw M8 x 95 MS

#Q 1pc




Combination Spanner (13mm)

#T 2pcs



6 Hole Metal Bracket

#C 2pcs




Jcbc Bolt M6 x 50mm

#F 6pcs




M6 Flat Washer

#I 20pcs



M8 Spring Washer

#L 4pcs




M6 Hex Nut (Black)

#O 4pcs



Trub Nut M8

#R 1pc


















M4 Allen Wrench

#U 12pcs



Wood Screw M3.5 x 16mm


POINT 3 CARTONS

Carton	Designation	Part		
	Headboard (1pc)	#1		
	Headboard Panel (1pc)	#2		
	Footboard Panel (1pc)	#3		
	Side Rail Panel (2pcs)	#4		
	SR Support Wood (2pcs)	#7		
	Center Rail (1pc)	#8		
	Center Support Leg (2pcs)	#9		
	Metal Support Leg (2pcs)	#11		
	HB Support Wood (1pc)	#5		<ul style="list-style-type: none"> #A 4pcs #B 4pcs #C 2pcs #D 12pcs #E 8pcs #F 6pcs #G 6pcs #H 20pcs #I 20pcs #J 45pcs #K 12pcs #L 4pcs #M 4pcs #N 4pcs #O 4pcs #P 1pc #Q 1pc #R 1pc #S 1pc #T 2pcs #U 12pcs
	FB Support Wood (1pc)	#6		
	Metal Rail (1pc)	#10		
	Corner Block (4pcs)	#12		
	Bed Leg (4pcs)	#13		
	Bed Slat (1set)	#14		
	Metal (3pcs)	#15		

ASSEMBLY INSTRUCTIONS


Part ⑧ x1pc
Part ⑨ x2pcs

Attach the center support leg (#9) to the center rail (#8) as shown in the diagram.

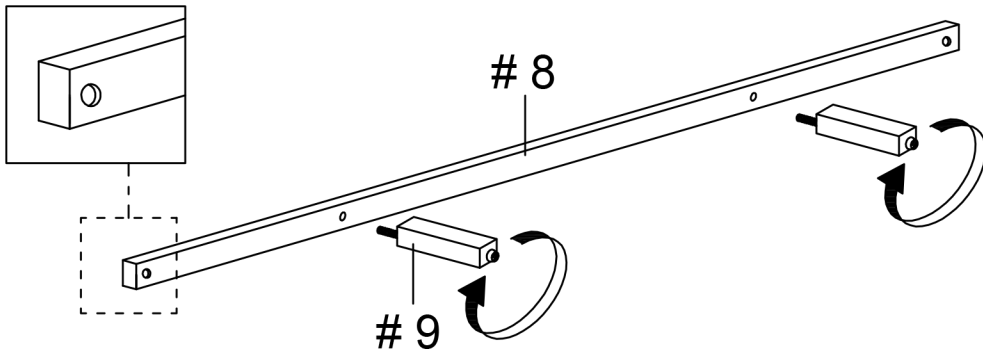

Part #10 x1pc
Part #11 x 2pcs
Hardware #B x4pcs
Hardware #L x4pcs
Hardware #P x1pc
Hardware #R x1pc

Attach to metal support leg (#11) to the metal rail (#10) by using Bolt (#B) and securing the end of the bolt with hex nut (#L).

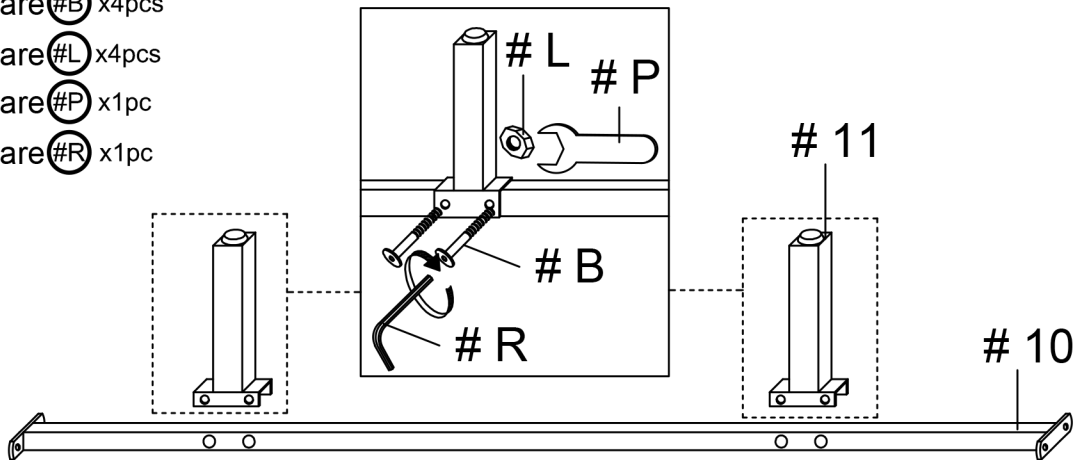


ASSEMBLY INSTRUCTIONS

3

Part #5 x1pc
 Part #6 x1pc
 Part #7 x2pcs
 Hardware #K x12pcs
 Hardware #N x4pcs

I. Attach wood dowel (#K) to the SR support wood (#7) as shown in the diagram.

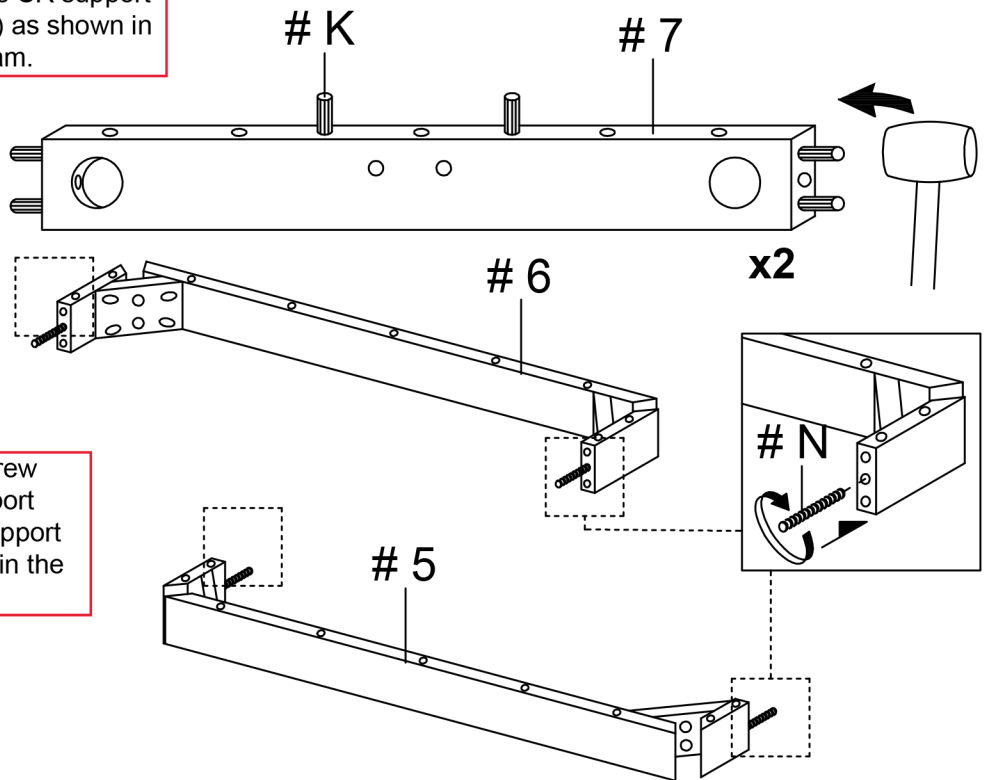


II. Attach the stud screw (#N) to both HB support wood (#5) and FB support wood (#6) as shown in the diagram.

4

Part #2 x1pc
 Part #3 x1pc
 Part #4 x2pcs

Interlock the side rail (#4) to the footboard panel (#3) and the headboard panel (#1).

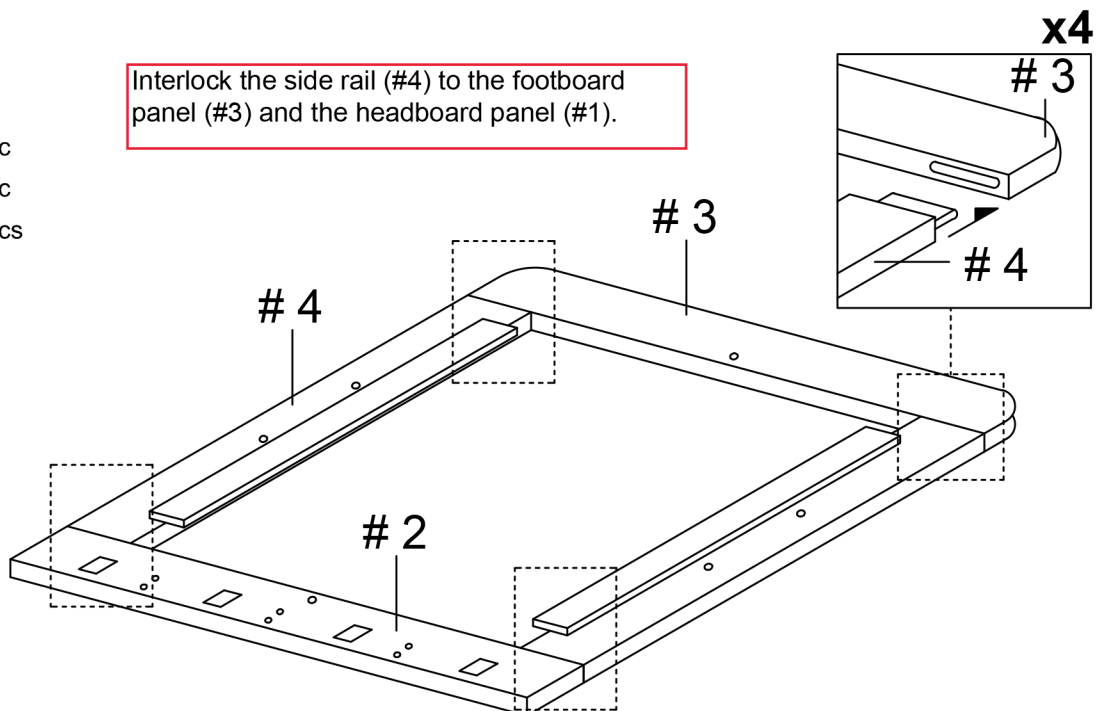


ASSEMBLY INSTRUCTIONS

Align the SR support wood (#7) to the side rail panel (#4).

5

Part #4 x2pcs

Part #7 x2pcs

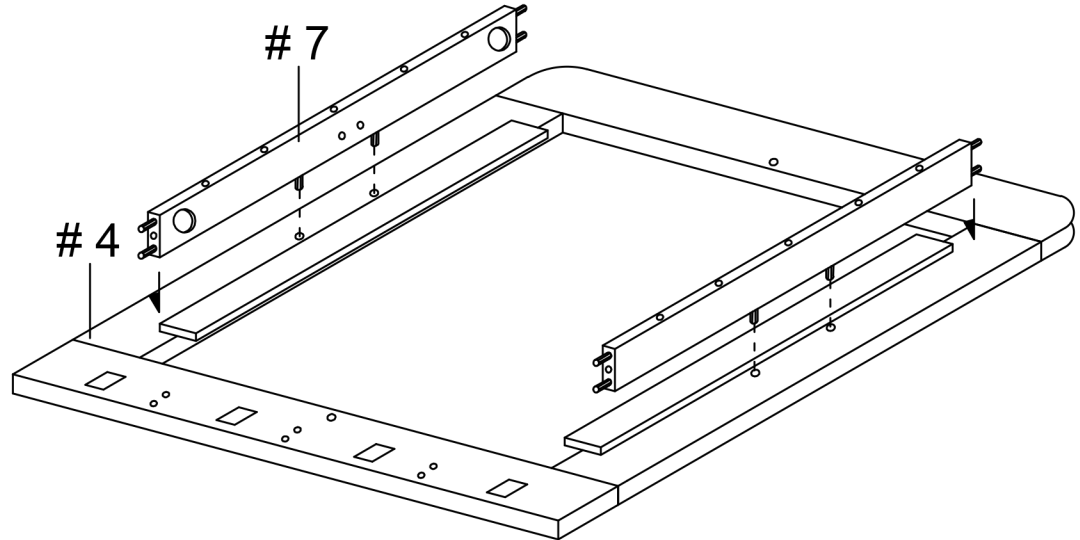

I. Align the FB support wood (#6) to the SR support wood (#7). Secure by using the trub nut (#O) and hex nut (#M).
II. Align the HB support wood (#5) to the SR support wood (#7). Secure by using the trub nut (#O) and hex nut (#M).

6

Part #5 x1pc


Part #6 x1pc

Part #7 x2pcs

Hardware #M x4pcs

Hardware #O x4pcs

Hardware #Q x1pc

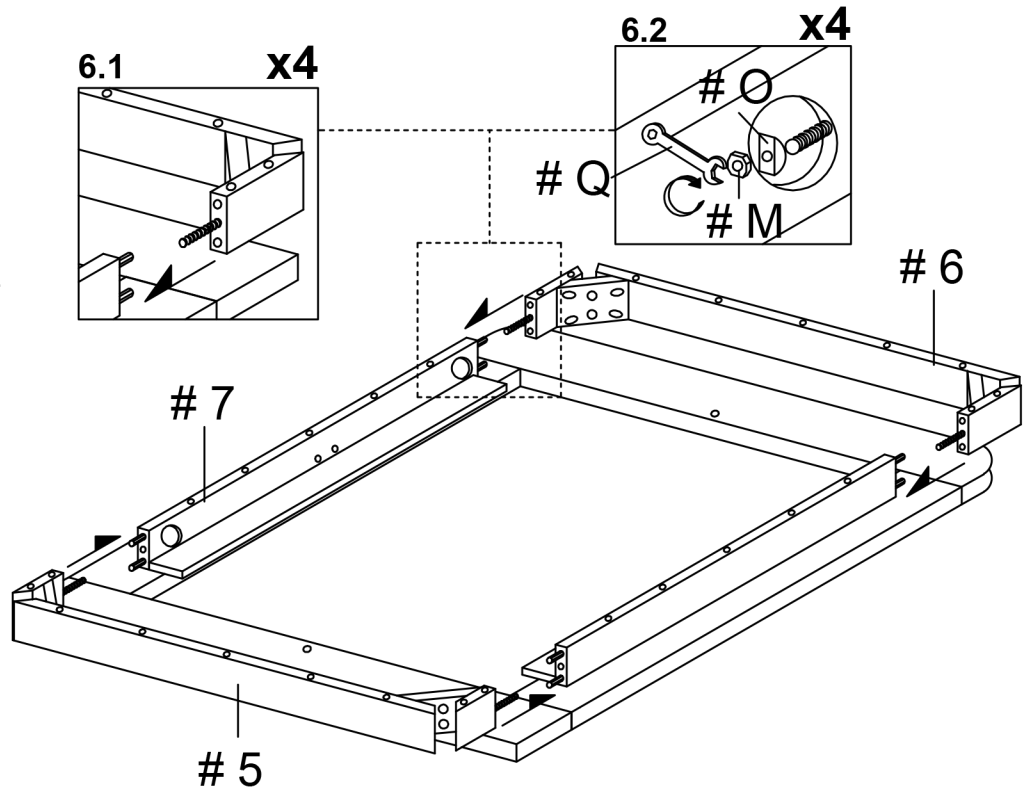


ASSEMBLY INSTRUCTIONS

Use screw (#J) to secure frame to the side rail panels (#4) and the headboard panel (#2) and footboard panel (#3).

7


- Part #5 x1pc
- Part #6 x1pc
- Part #7 x2pcs
- Hardware #J x28pcs

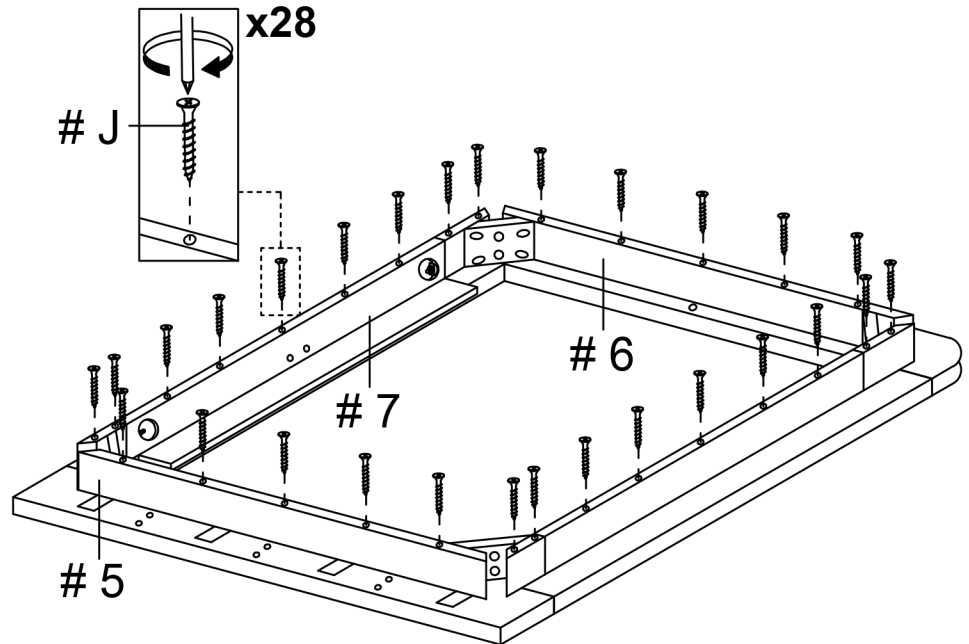

Align the bed leg (#13) to corner and secure by using bolt assembly of bolt (#E) with spring washer (#I) and flat washer (#H).

8

- Part #5 x1pc
- Part #6 x1pc
- Part #7 x2pcs
- Part #13 x 4pcs
- Hardware #E x8pcs
- Hardware #H x8pcs
- Hardware #I x8pcs
- Hardware #S x1pc

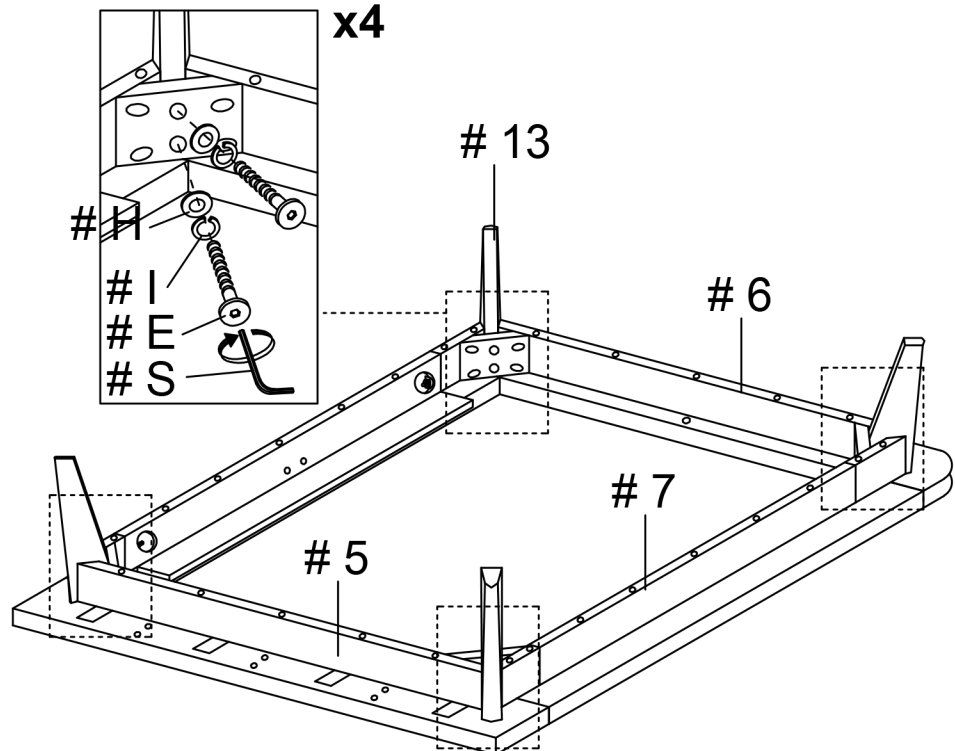


ASSEMBLY INSTRUCTIONS

9

- Part #2 x1pc
- Part #3 x1pc
- Part #8 x1pc
- Hardware #C x2pcs
- Hardware #F x2pcs
- Hardware #G x2pcs
- Hardware #R x1pc


Attach the center rail (#8) to the headboard (#2) panel and footboard panel(#3) by using Bolt assembly of bolt (#C) with lock washer (#G) and Flat washer (#F).

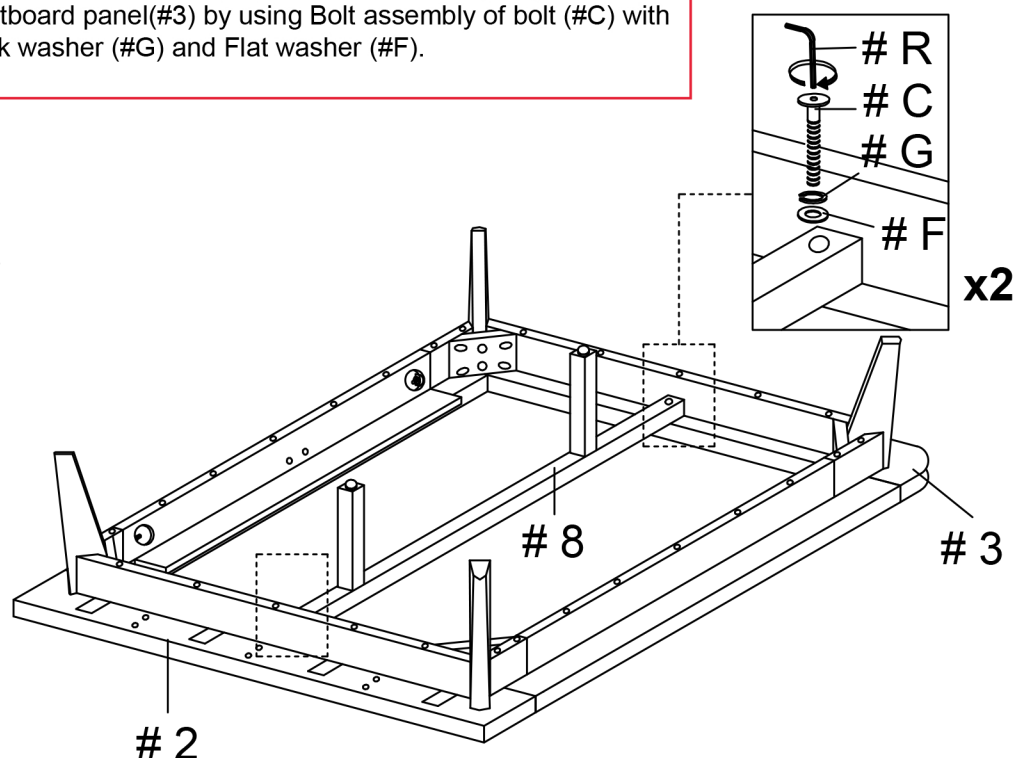

10

- Part #7 x2pcs
- Part #10 x1pc
- Hardware #A x4pcs
- Hardware #F x4pcs
- Hardware #G x4pcs
- Hardware #R x1pc

Attach the metal rail (#10) to the SR support wood (#7) by using Bolt assembly of bolt (#A) with spring washer (#G) and flat washer (#F).

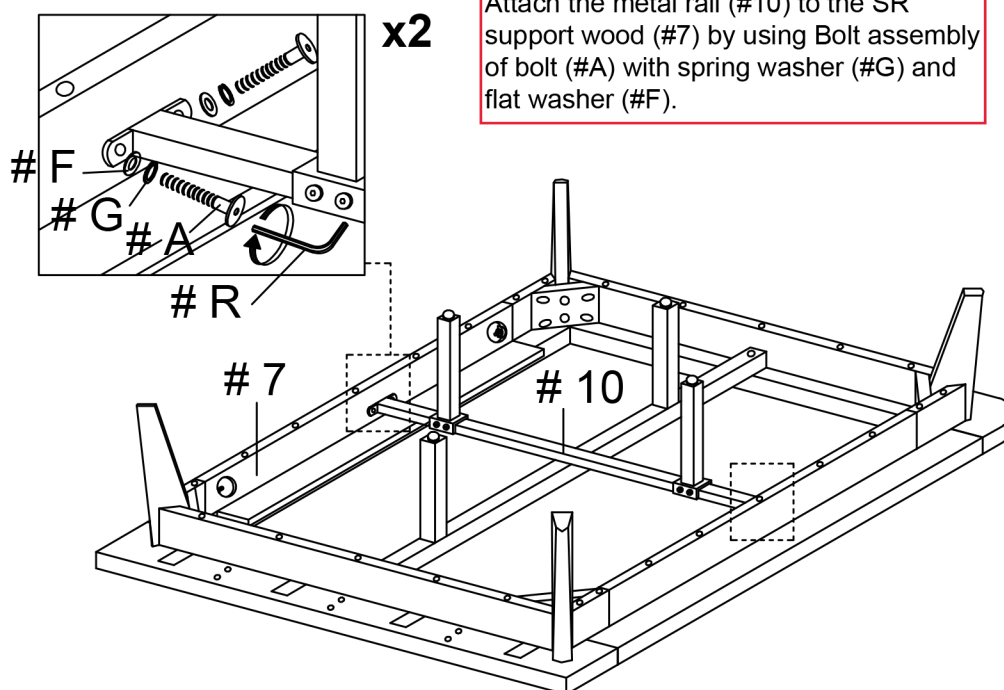


ASSEMBLY INSTRUCTIONS

11

Attach the corner block (#12) to the headboard panel (#2) and HB support wood (#5) by using screw (#J).


- Part #2 x1pc
- Part #5 x1pc
- Part #12 x4pcs
- Hardware #J x8pcs

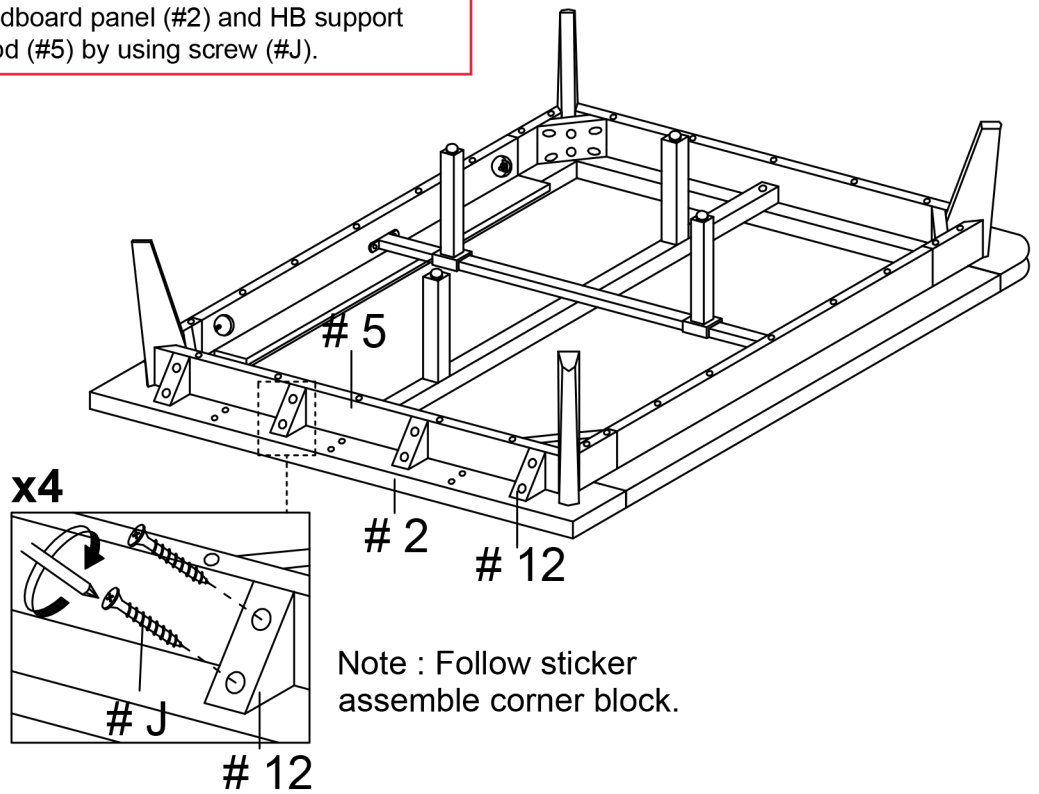

12

Use bracket (#T) with screws (#U) to secure headboard panel (#2) and side rail panel (#4).

- Part #2 x1pc
- Part #4 x2pcs
- Hardware #T x2pcs
- Hardware #U x12pcs

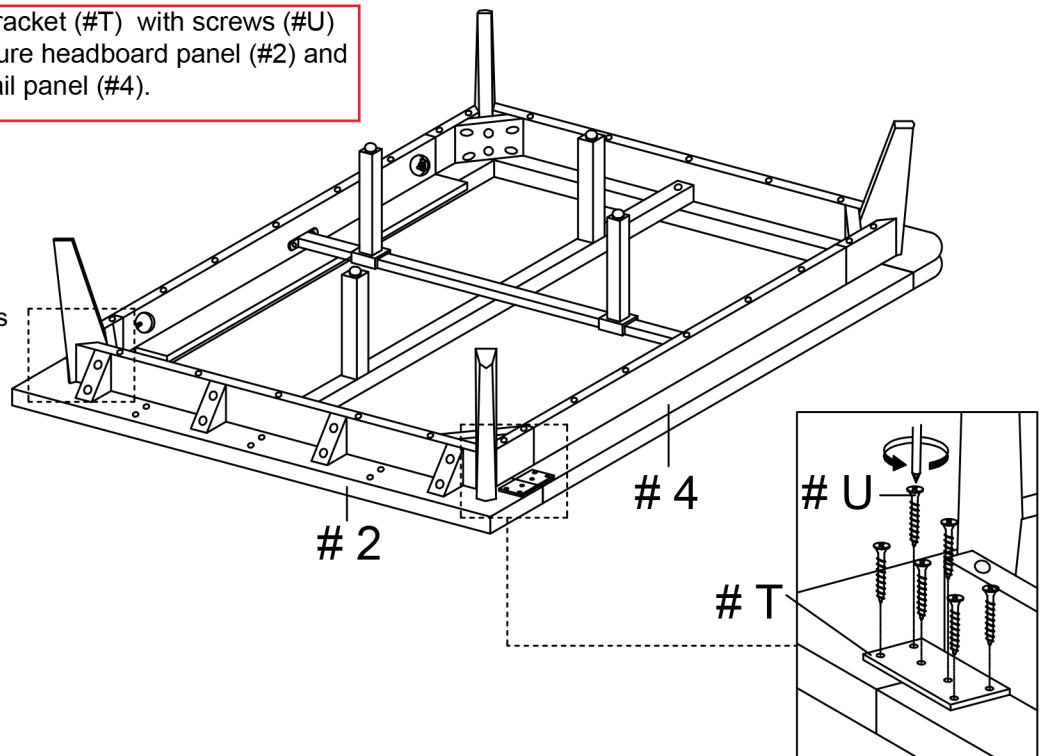


ASSEMBLY INSTRUCTIONS

13

Turn bedframe over upright and attach metal (#15) to the headboard panel (#2) by using bolt (#D) with lock washer (#I) and Flat washer (#H).


- Part #2 x1pc
- Part #15 x3pcs
- Hardware #D x6pcs
- Hardware #H x6pcs
- Hardware #I x6pcs
- Hardware #S x1pc

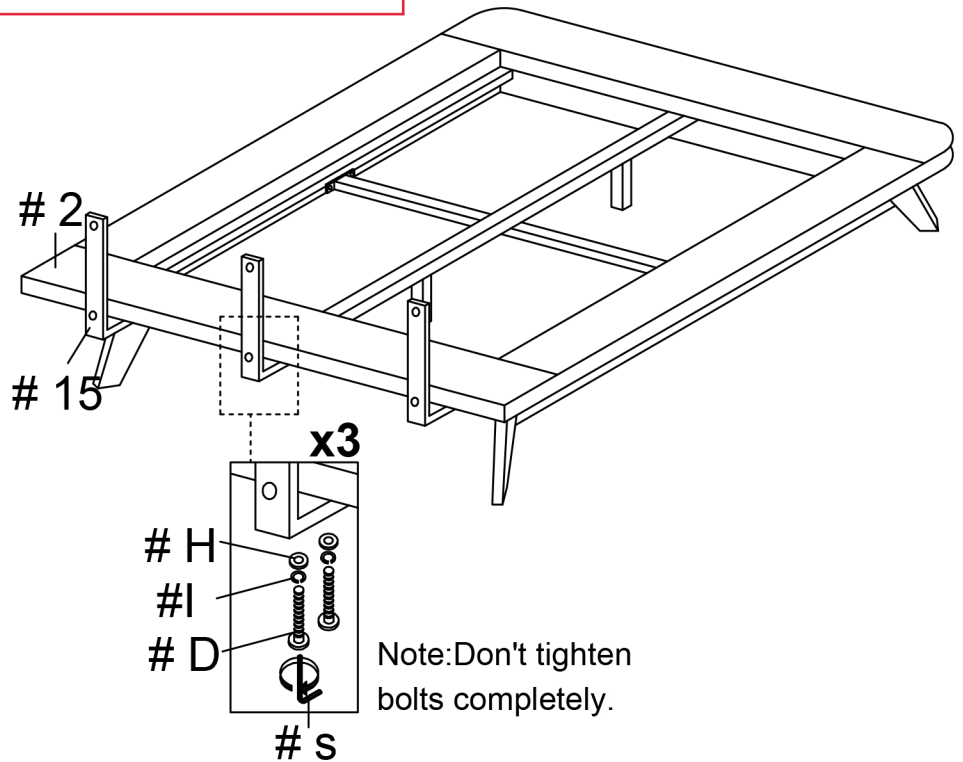

14

Align headboard (#1) by using bolt (#D) with spring washer (#I) and flat washer (#H).

- Part #1 x1pc
- Part #15 x3pcs
- Hardware #D x6pcs
- Hardware #H x6pcs
- Hardware #I x6pcs
- Hardware #S x1pc

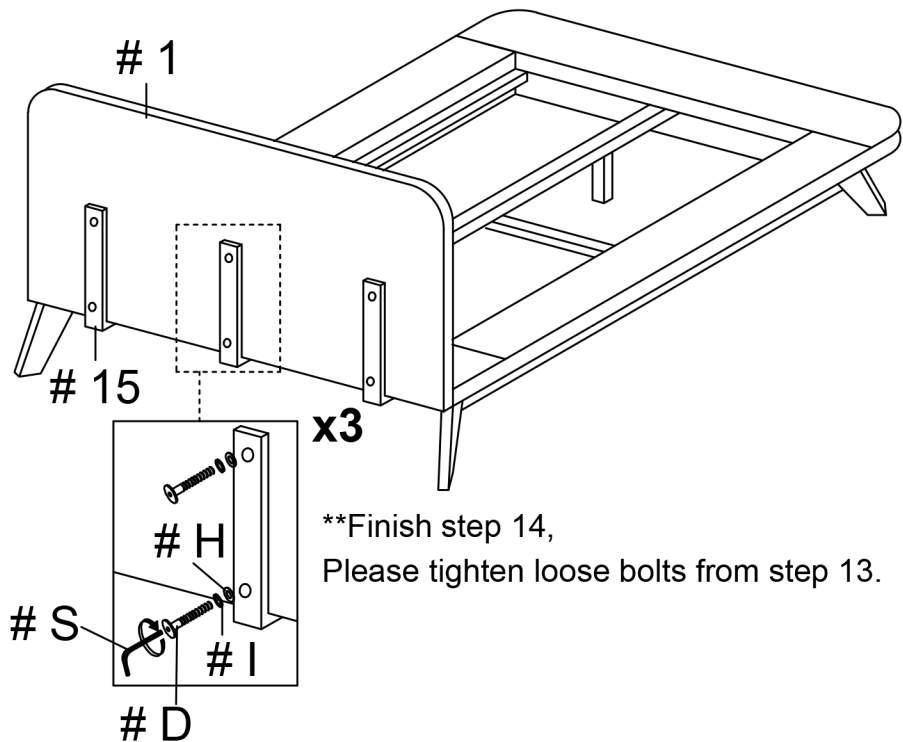


ASSEMBLY INSTRUCTIONS


15

Part **#14** x1set
Hardware **#J** x9pcs

Extend slat (**#14**) evenly over side rails and secure by using screw (**#J**).

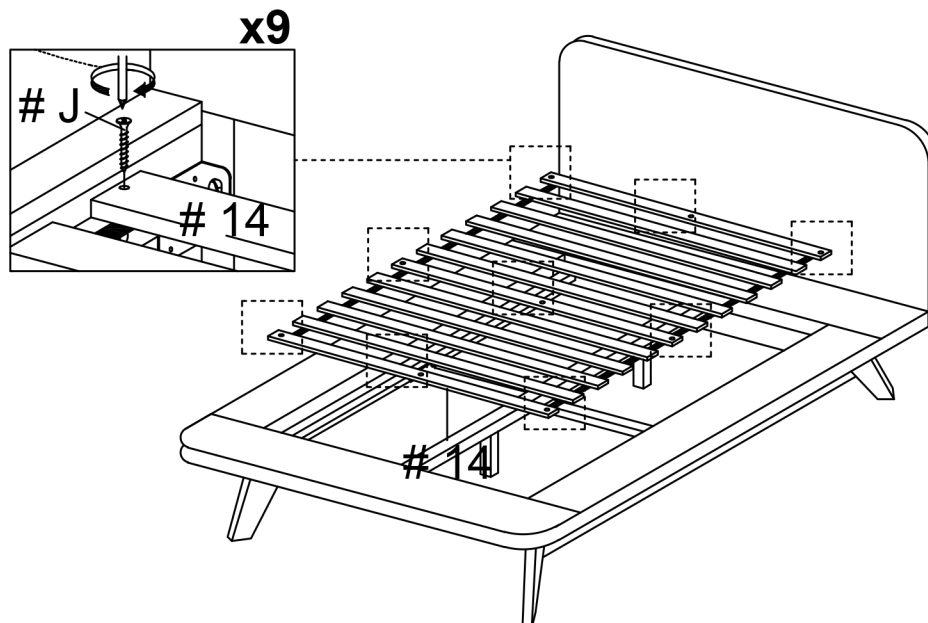

16

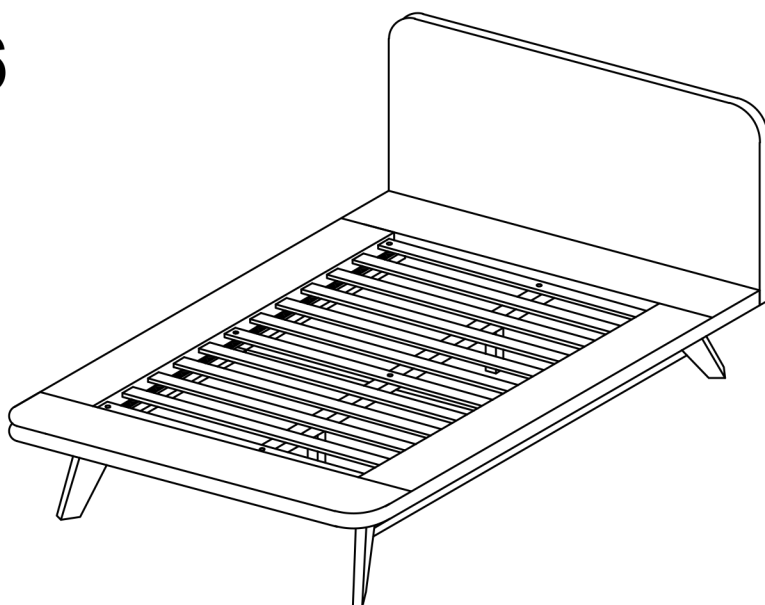

ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.



Keep this handy!

Please retain this instruction manual and any order-related information for future reference.

This product is intended for RESIDENTIAL USE ONLY and not for commercial use.