


# ASSEMBLY INSTRUCTIONS

---

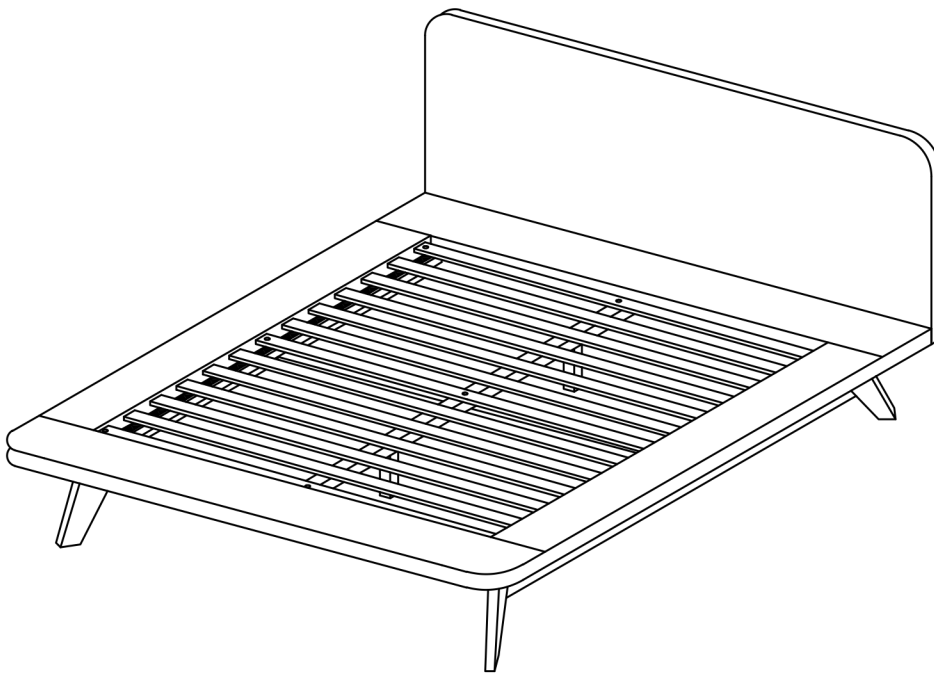

## TOOLS REQUIRED




Allen Wrench

(Included)



Phillips  
Screwdriver

(Not Included)

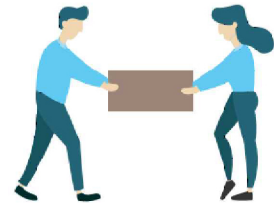

2 - Persons  
Recommended

## ASSEMBLY RATING



EASY ————— DIFFICULT

The Assembly Rating is a 5-point system showing the level of effort needed to assemble a specific product.



## **CHECK BEFORE STARTING**

☐

### **Are you missing anything?**

Double-check all parts, hardware and accessories listed on Page 6 are accounted for.

☐

### **Check out our Quick Tips!**

We recommend reviewing the pre-assembly handouts. Even experts need a refresher now and then!

☐

### **Should we send any replacements?**

Are there any irregularities or flaws in the parts? We can send replacements!


☐

### **Prep Time!**

Please review the assembly instructions and all diagrams prior to assembling. Set up your workspace by laying the parts and hardware out separately, then begin!


# PRE ASSEMBLY INTRODUCTION

We understand building ready-to-assemble furniture can be a challenging experience for some. To help avoid confusion, we have provided some helpful tips that may speed up the process.

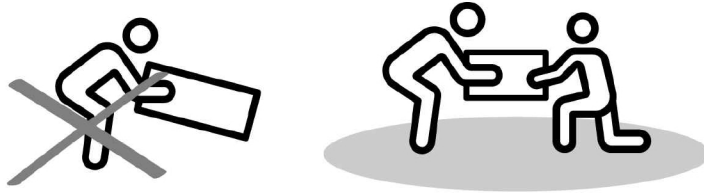

## Teamwork

ALWAYS have at least two people to help with transporting and assembling the product to avoid potential injury and/or damage.

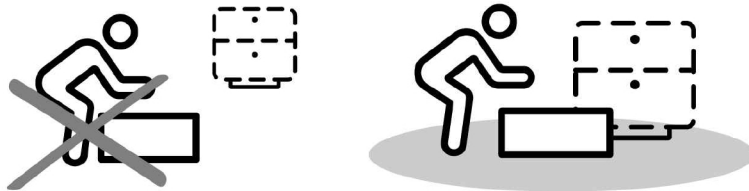


## Suitable Location

Assembling near the area of the intended location is highly recommended.




## Sufficient Space

Make sure you have enough space to move around during the assembly.

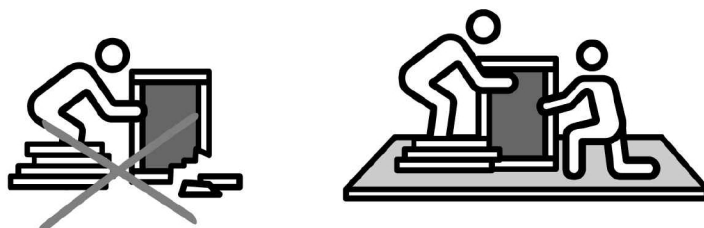

## Avoid Scratches

Use cardboard, blankets or a carpeted area while assembling furniture to prevent scratches.

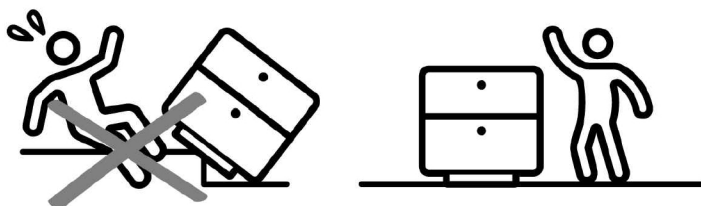

## Flat Surface

Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.


# ASSEMBLY AND CARE ADVICE



**FAILURE TO FOLLOW THE GUIDELINES BELOW MAY  
RESULT IN INJURY AND/OR PROPERTY DAMAGE.**



Position each part correctly  
and insert screws or bolts into  
their respective holes.

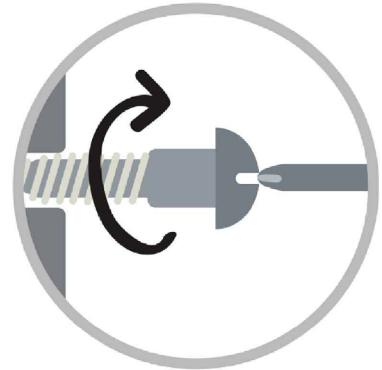


Turn clockwise to tighten and  
only tighten when step is  
completed or when instructed  
to do so.



Use the appropriate hand tools  
or power tools for assembly.  
Select steps, such as tightening  
screws and/or bolts, may require  
hand tools to avoid causing  
damage during assembly.



Save the instructions and store  
any supplied tools for later  
maintenance.


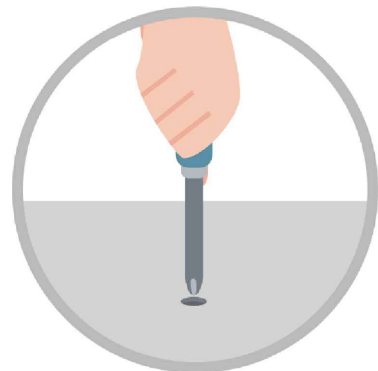


After two weeks, check and  
tighten any loose hardware and  
repeat again every six months  
thereafter.

**IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.**




# KING BED

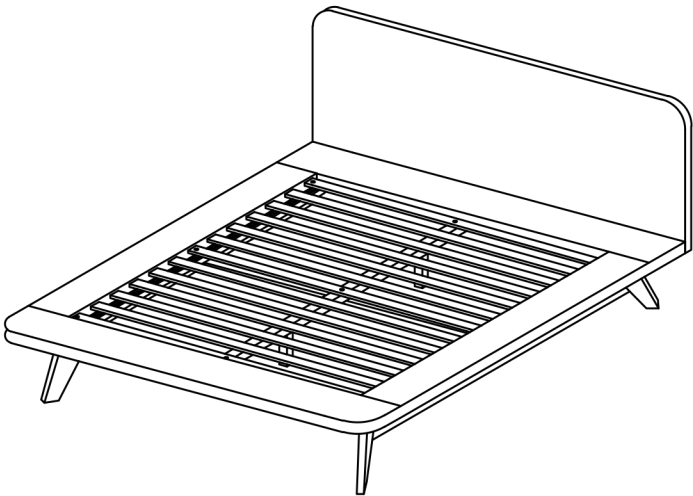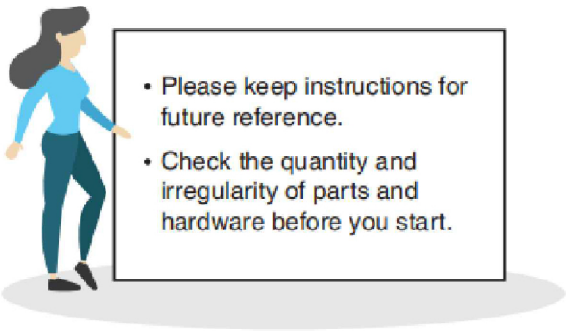

## PARTS

#1 1pc

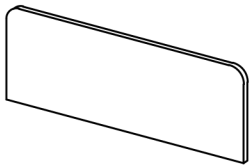


Headboard

#2 1pc




Headboard Panel

#3 1pc




Footboard Panel

#4 2pcs

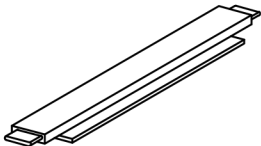


Side Rail Panel

#5 1pc




HB Support Wood

#6 1pc




FB Support Wood

#7 2pcs

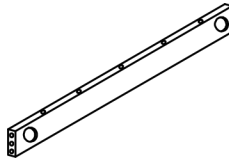

SR Support Wood

#8 1pc

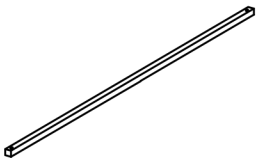


Center Rail

#9 2pcs




Center Support Leg

#10 1pc

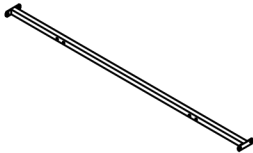

Metal Rail

#11 2pcs



Metal Support Leg

#12 4pcs




Corner Block

#13 4pcs



Bed Leg

#14 1set

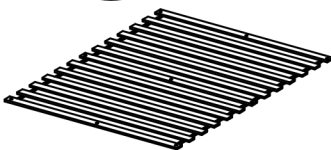

Slat


#15 3pcs



Metal


## HARDWARE

#A 4pcs



Jcbc Bolt M6 x 20mm

#D 12pcs




Jcbb Bolt M8 x 30mm

#G 6pcs



M6 Spring Washer

#J 45pcs




Wood Screw M4 x 32mm

#M 4pcs




M8 Hex Nut

#P 1pc




Spanner (10mm)

#S 1pc




M5 Allen Wrench

#B 4pcs



Jcbc Bolt M6 x 40mm (Black)

#E 8pcs




Jcbb Bolt M8 x 50mm

#H 20pcs




M8 Flat Washer

#K 12pcs




Wood Dowel M8 x 30mm

#N 4pcs



Stud Screw M8 x 95 MS

#Q 1pc




Combination Spanner (13mm)

#T 2pcs



6 Hole Metal Bracket

#C 2pcs




Jcbc Bolt M6 x 50mm

#F 6pcs




M6 Flat Washer

#I 20pcs



M8 Spring Washer

#L 4pcs




M6 Hex Nut (Black)

#O 4pcs



Trub Nut M8

#R 1pc















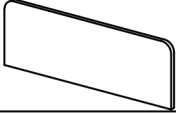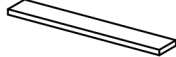























M4 Allen Wrench

#U 12pcs



Wood Screw M3.5 x 16mm

# POINT 3 CARTONS

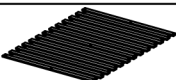
Carton	Designation	Part		
	Headboard (1pc)	#1		
	Headboard Panel (1pc)	#2		
	Footboard Panel (1pc)	#3		
	Side Rail Panel (2pcs)	#4		
	SR Support Wood (2pcs)	#7		
	Center Rail (1pc)	#8		
	Center Support Leg (2pcs)	#9		
	Metal Support Leg (2pcs)	#11		
	HB Support Wood (1pc)	#5		 #A 4pcs  #B 4pcs  #C 2pcs  #D 12pcs  #E 8pcs  #F 6pcs  #G 6pcs  #H 20pcs  #I 20pcs  #J 45pcs  #K 12pcs  #L 4pcs  #M 4pcs  #N 4pcs  #O 4pcs  #P 1pc  #Q 1pc  #R 1pc  #S 1pc  #T 2pcs  #U 12pcs
	FB Support Wood (1pc)	#6		
	Metal Rail (1pc)	#10		
	Corner Block (4pcs)	#12		
	Bed Leg (4pcs)	#13		
	Bed Slat (1set)	#14		
	Metal (3pcs)	#15		

# ASSEMBLY INSTRUCTIONS

1

Part #8 x1pc  
Part #9 x2pcs


Attach the center support leg (#9) to the center rail (#8) as shown in the diagram.

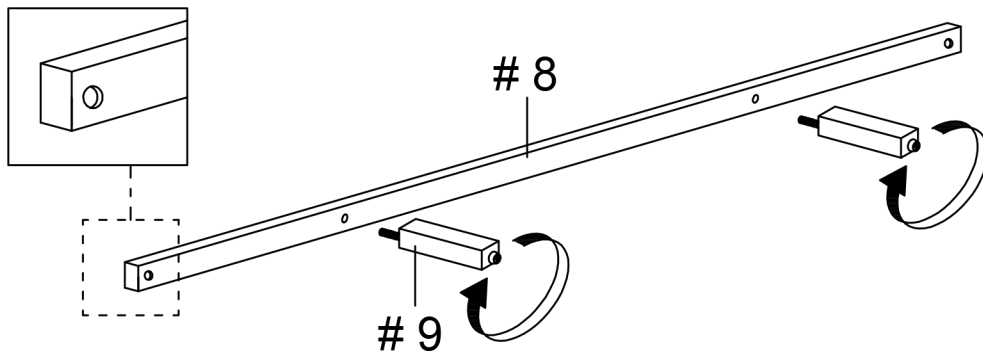

2

Part #10 x1pc  
Part #11 x 2pcs  
Hardware #B x4pcs  
Hardware #L x4pcs  
Hardware #P x1pc  
Hardware #R x1pc

Attach to metal support leg (#11) to the metal rail (#10) by using Bolt (#B) and securing the end of the bolt with hex nut (#L).

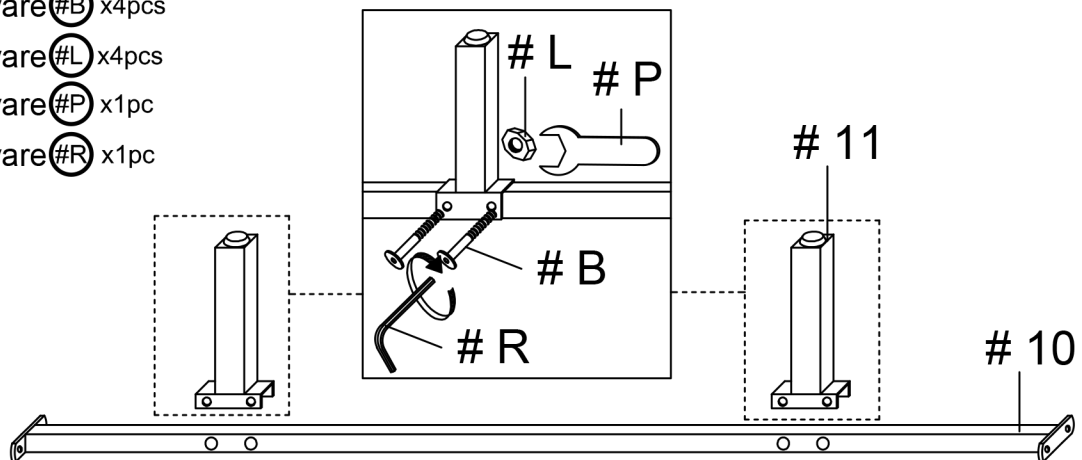


# ASSEMBLY INSTRUCTIONS

I. Attach wood dowel (#K) to the SR support wood (#7) as shown in the diagram.

## 3

Part #5 x1pc  
Part #6 x1pc  
Part #7 x2pcs  
Hardware #K x12pcs  
Hardware #N x4pcs

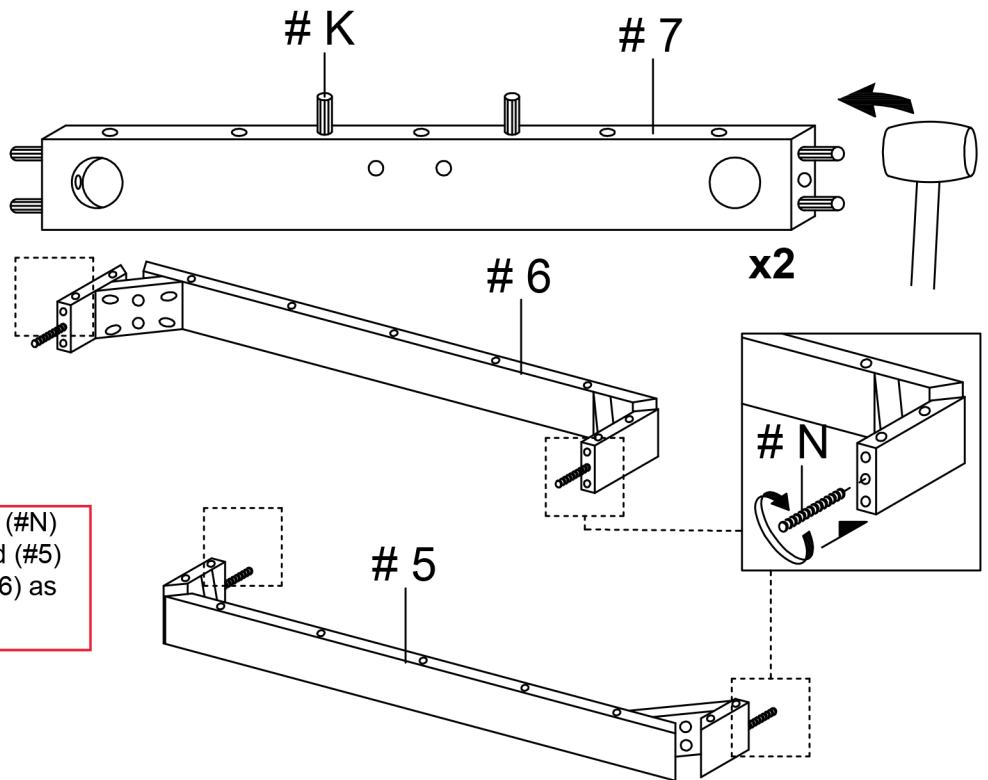


II. Attach the stud screw (#N) to both HB support wood (#5) and FB support wood (#6) as shown in the diagram.

## 4

Part #2 x1pc  
Part #3 x1pc  
Part #4 x2pcs

Interlock the side rail (#4) to the footboard panel (#3) and the headboard panel (#1).

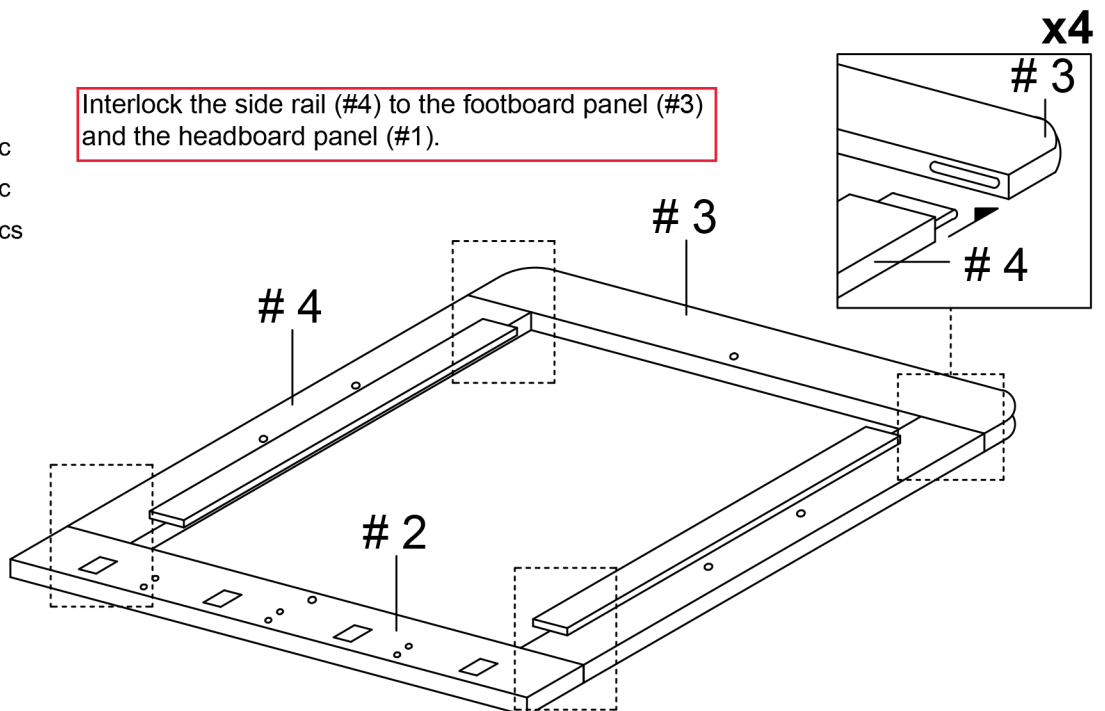


# ASSEMBLY INSTRUCTIONS

5

Part #4 x2pcs

Part #7 x2pcs

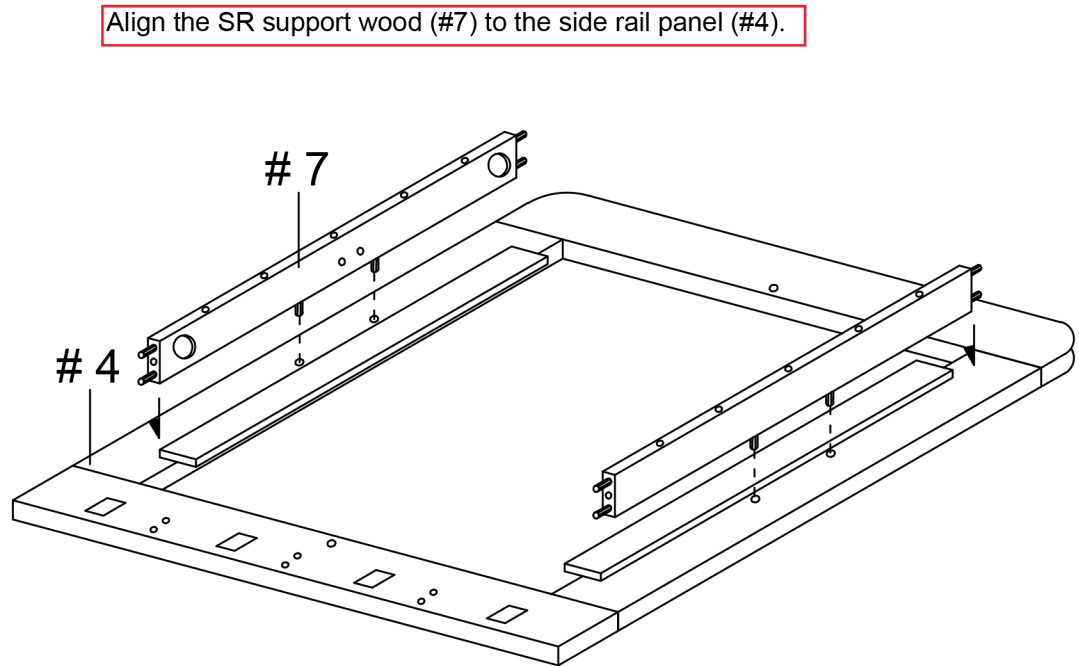

I. Align the FB support wood (#6) to the SR support wood (#7).  
Secure by using the trub nut (#O) and hex nut (#M).  
II. Align the HB support wood (#5) to the SR support wood (#7).  
Secure by using the trub nut (#O) and hex nut (#M).

6

Part #5 x1pc


Part #6 x1pc

Part #7 x2pcs

Hardware #M x4pcs

Hardware #O x4pcs

Hardware #Q x1pc

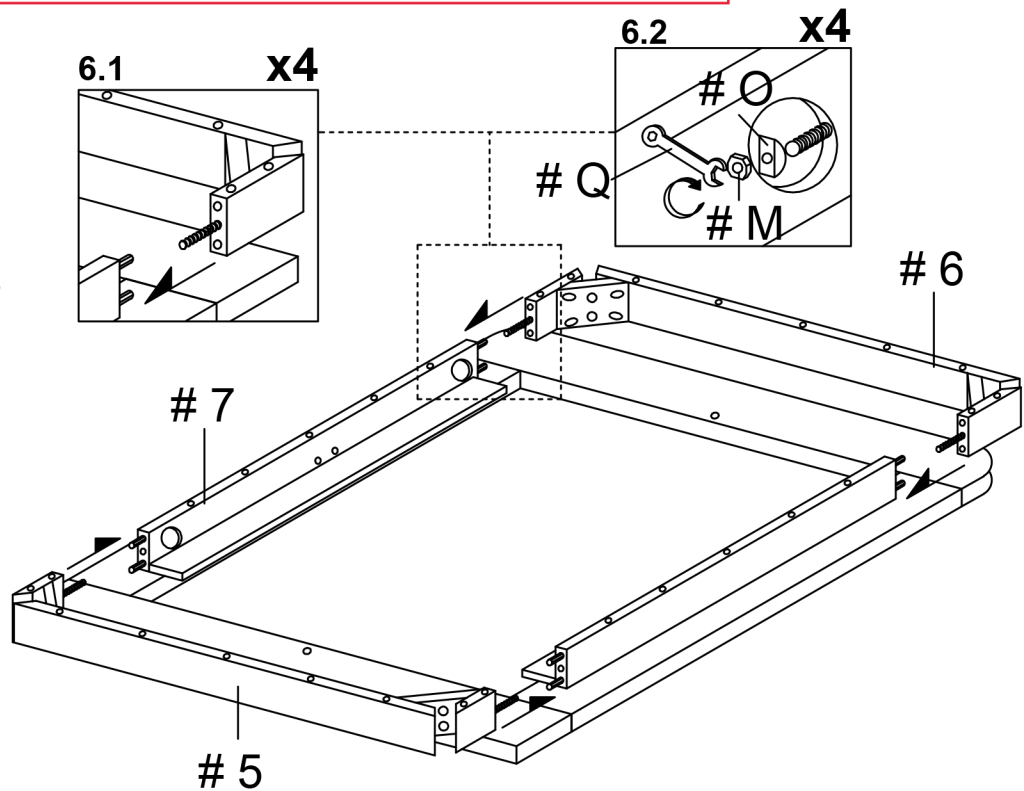


# ASSEMBLY INSTRUCTIONS

## 7

Use screw (#J) to secure frame to the side rail panels (#4) and the headboard panel (#2) and footboard panel (#3).


- Part #5 x1pc
- Part #6 x1pc
- Part #7 x2pcs
- Hardware #J x28pcs

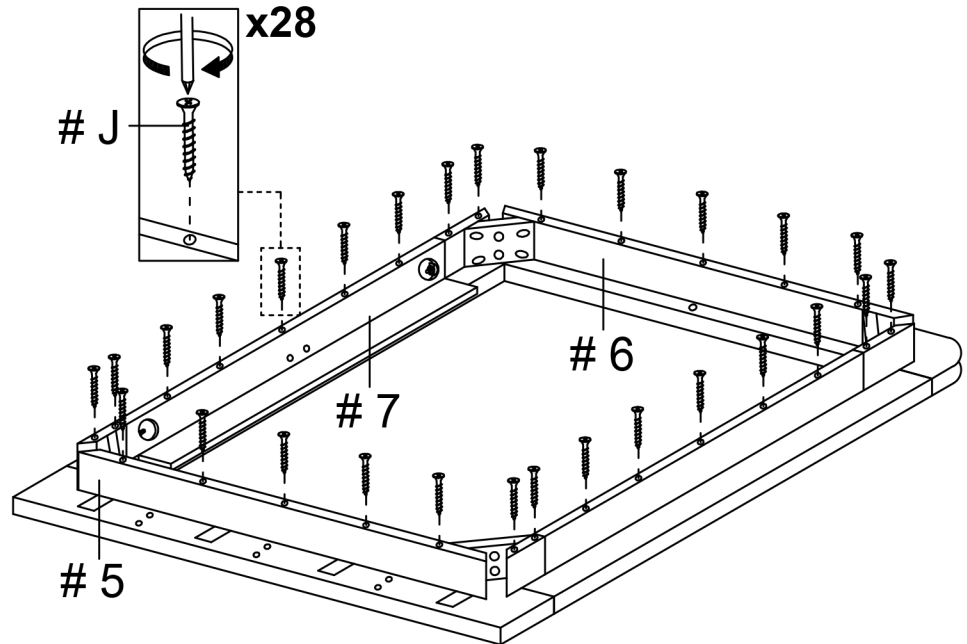

Align the bed leg (#13) to corner and secure by using bolt assembly of bolt (#E) with spring washer (#I) and flat washer (#H).

## 8

- Part #5 x1pc
- Part #6 x1pc
- Part #7 x2pcs
- Part #13 x 4pcs
- Hardware #E x8pcs
- Hardware #H x8pcs
- Hardware #I x8pcs
- Hardware #S x1pc

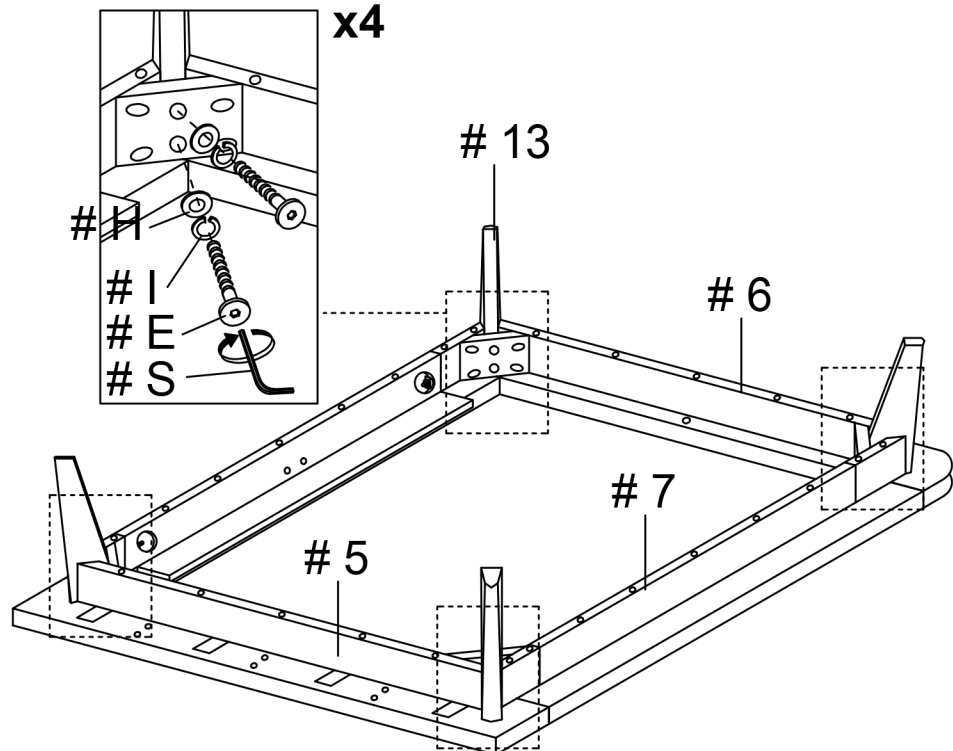


# ASSEMBLY INSTRUCTIONS

9

- Part #2 x1pc
- Part #3 x1pc
- Part #8 x1pc
- Hardware #C x2pcs
- Hardware #F x2pcs
- Hardware #G x2pcs
- Hardware #R x1pc


Attach the center rail (#8) to the headboard (#2) panel and footboard panel (#3) by using Bolt assembly of bolt (#C) with lock washer (#G) and Flat washer (#F).

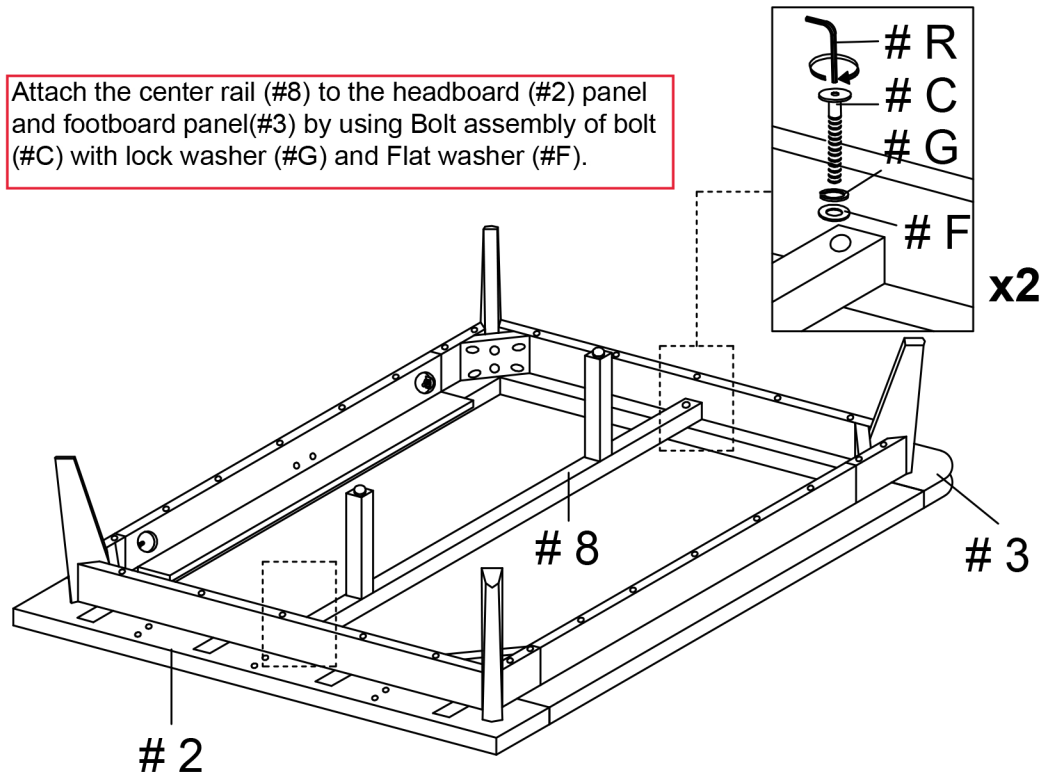

10

- Part #7 x2pcs
- Part #10 x1pc
- Hardware #A x4pcs
- Hardware #F x4pcs
- Hardware #G x4pcs
- Hardware #R x1pc

Attach the metal rail (#10) to the SR support wood (#7) by using Bolt assembly of bolt (#A) with spring washer (#G) and flat washer (#F).

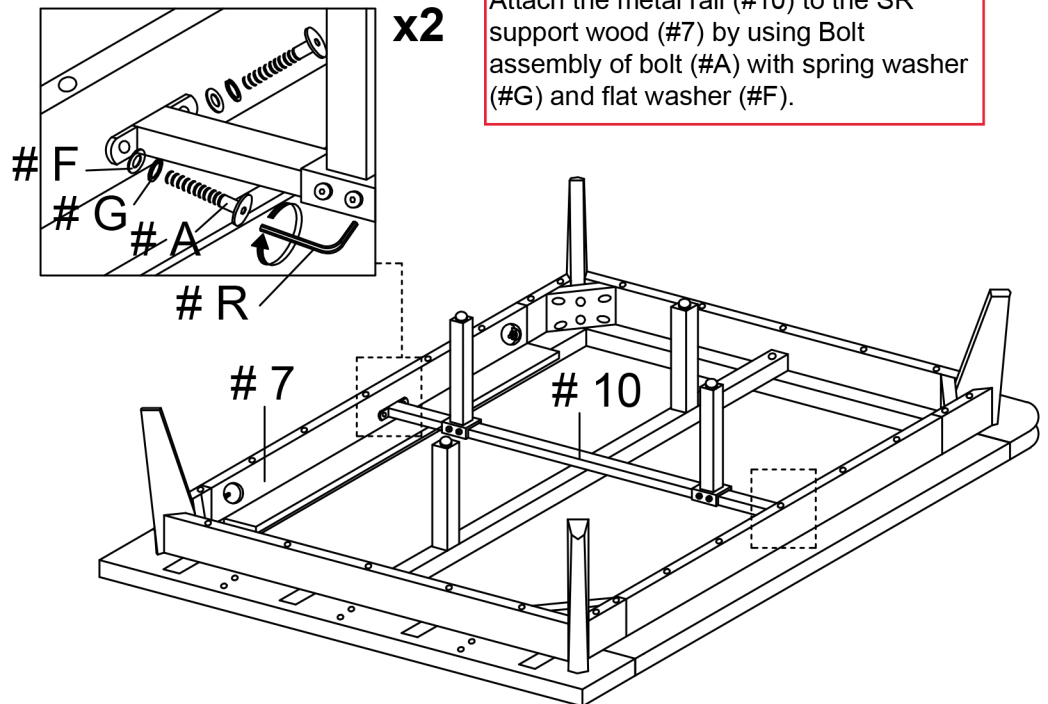




# ASSEMBLY INSTRUCTIONS

## 11

Attach the corner block (#12) to the headboard panel (#2) and HB support wood (#5) by using screw (#J).

- Part #2 x1pc
- Part #5 x1pc
- Part #12 x4pcs
- Hardware #J x8pcs


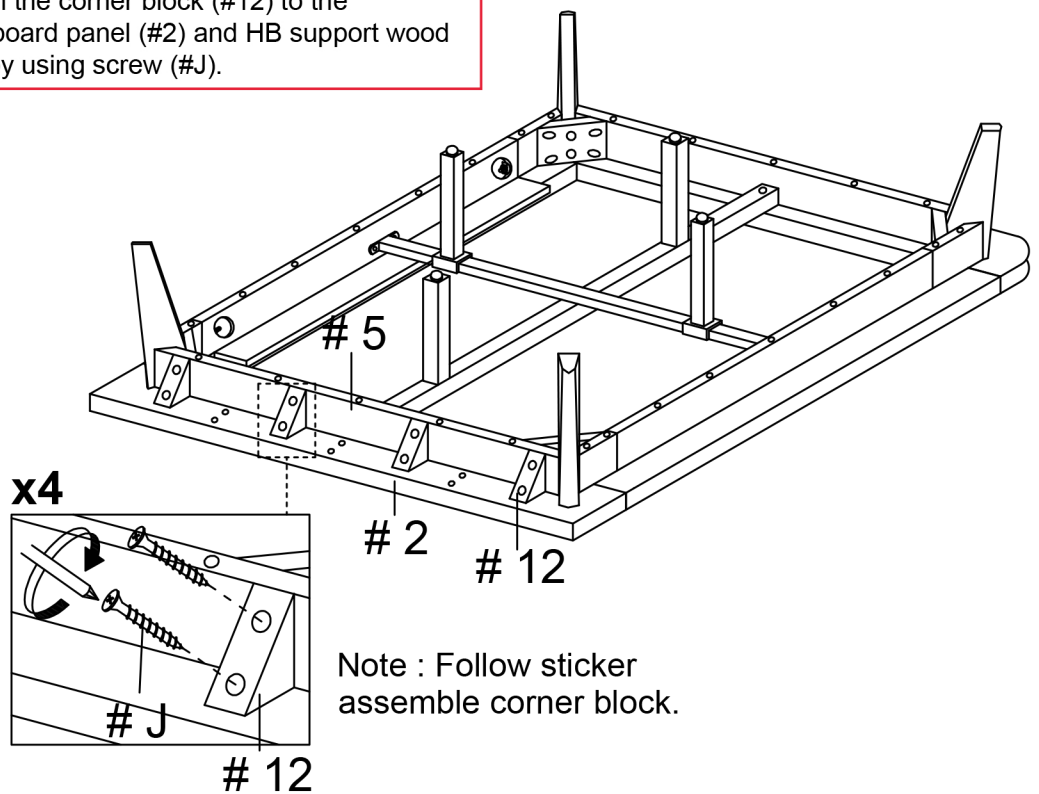


## 12

- Part #2 x1pc
- Part #4 x2pcs
- Hardware #T x2pcs
- Hardware #U x12pcs

Use bracket (#T) with screws (#U) to secure headboard panel (#2) and side rail panel (#4).

Note : Follow line assemble Hardware T.

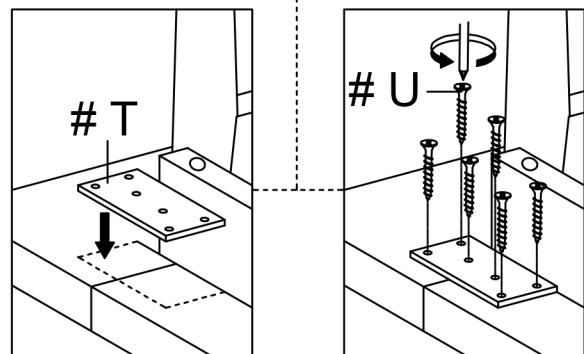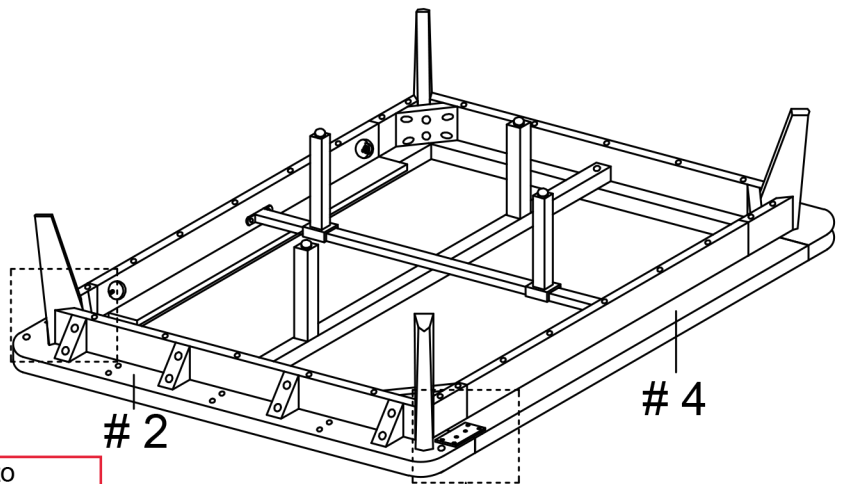


# ASSEMBLY INSTRUCTIONS

Turn bedframe over upright and attach metal (#15) to the headboard panel (#2) by using bolt (#D) with lock washer (#I) and Flat washer (#H).

## 13


- Part #2 x1pc
- Part #15 x3pcs
- Hardware #D x6pcs
- Hardware #H x6pcs
- Hardware #I x6pcs
- Hardware #S x1pc

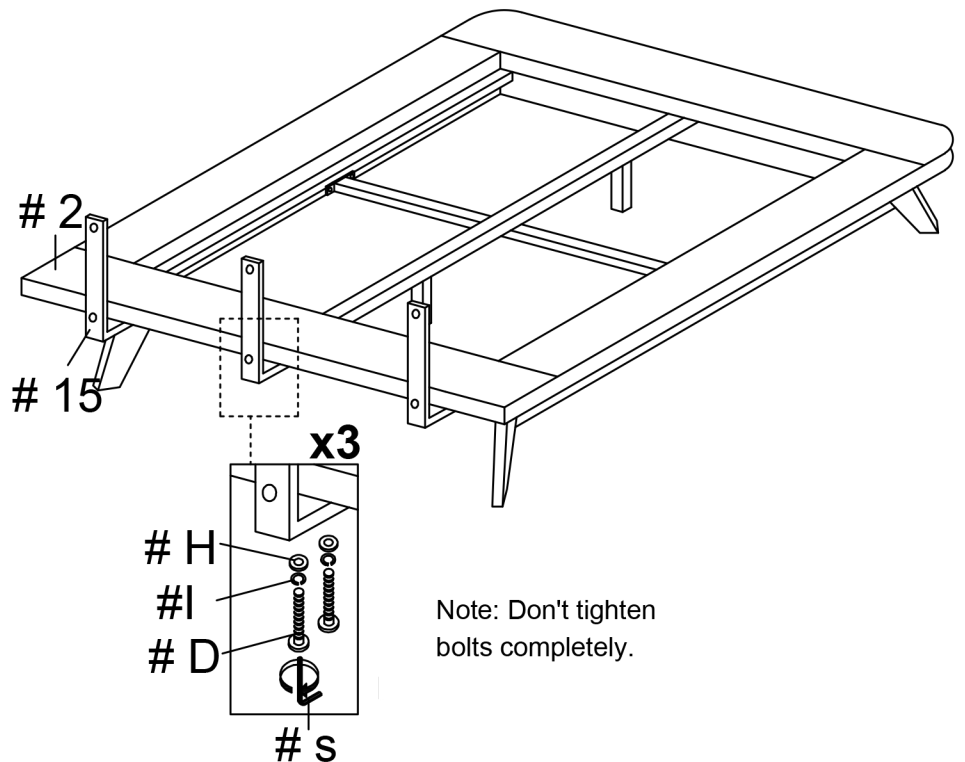

Align headboard (#1) by using bolt (#D) with spring washer (#I) and flat washer (#H).

## 14

- Part #1 x1pc
- Part #15 x3pcs
- Hardware #D x6pcs
- Hardware #H x6pcs
- Hardware #I x6pcs
- Hardware #S x1pc

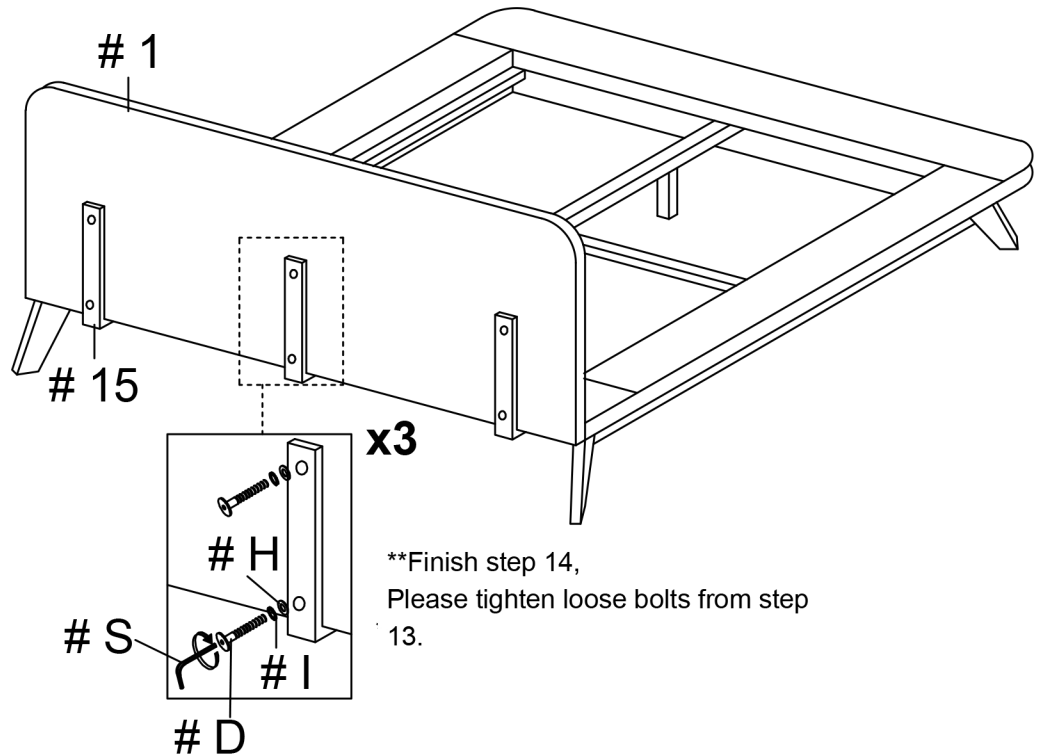


# ASSEMBLY INSTRUCTIONS


## 15

Extend slat (#14) evenly over side rails and secure by using screw (#J).

Part **#14** x1set  
Hardware **#J** x9pcs

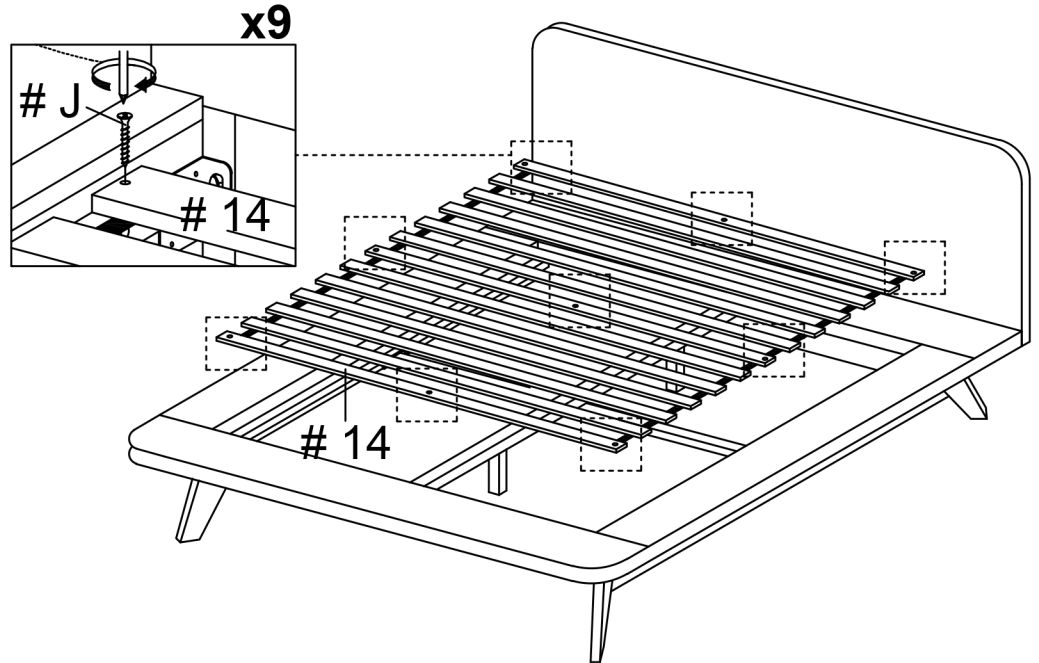

## 16

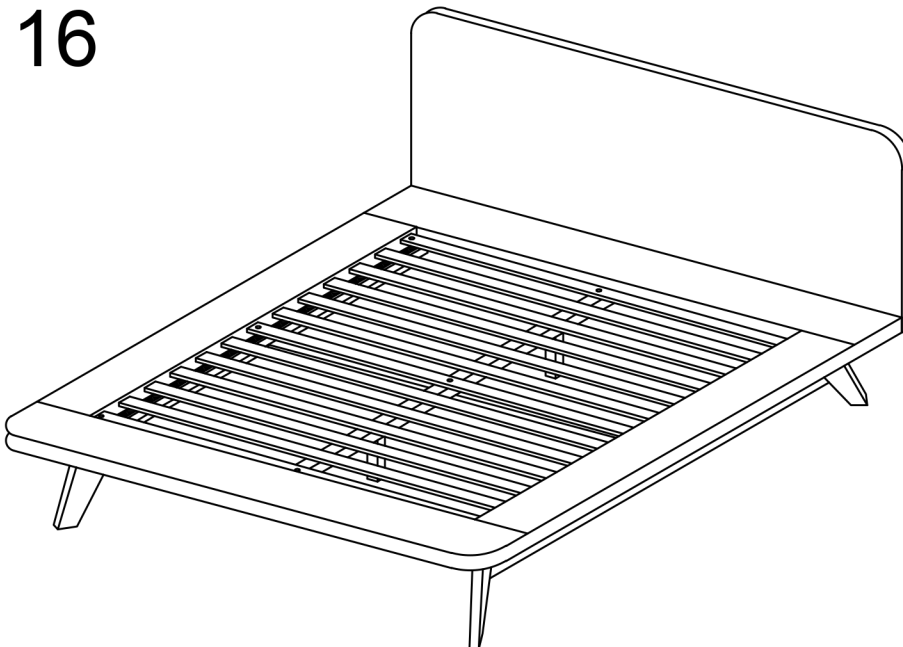

### ASSEMBLY COMPLETED



Please ensure the furniture rests on an even and flat surface. If the product wobbles or feels loose, double-check all bolts and/or screws are properly tightened and secured.



#### Keep this handy!

Please retain this instruction manual and any order-related information for future reference.

This product is intended for RESIDENTIAL USE ONLY and not for commercial use.