


SW 8609-K


1.

Attach the Headboard Panel (P2) Headboard Bottom Rail(P3) and HB&FB Support Rail(P6) to the Headboard post (P1). You will need to
C = 10pcs
E = 10pc
F = 1pc
J = 10pcs

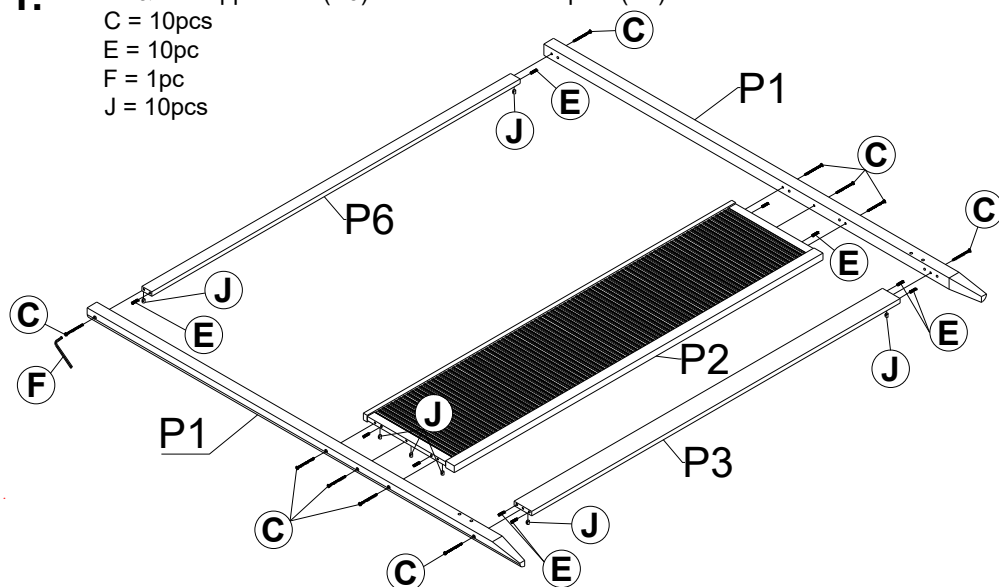



2.

Attach the Footboard Panel (P5) and HB&FB Support Rail(P6) to the Footboard post (P4). You will need to
C = 6pcs
E = 6pcs
F = 1pc
J = 6pcs

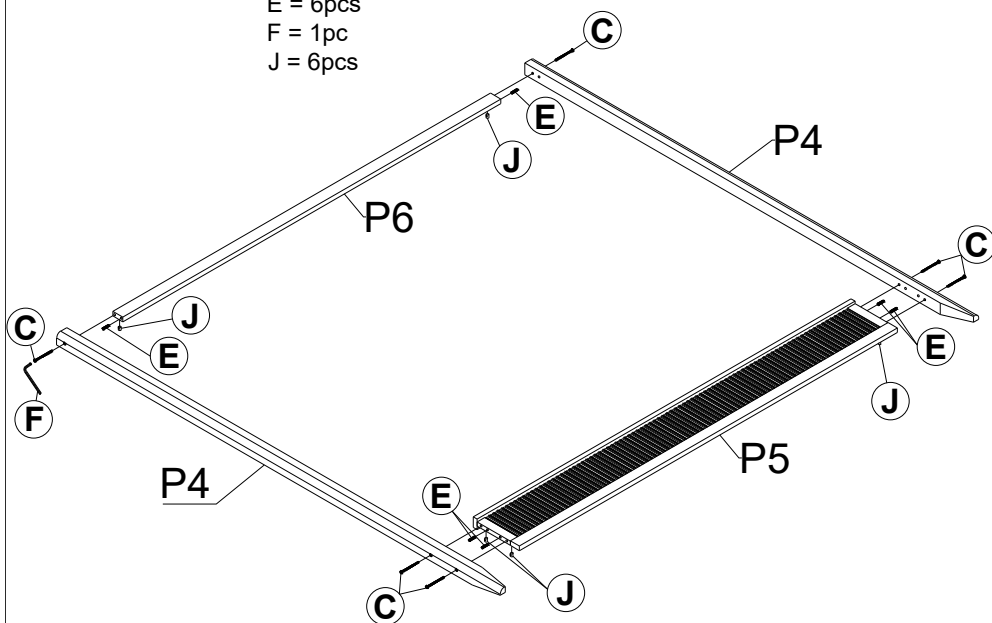

3.












Attach the Side Rail (P8) to the Footboard Post(P4) and Headboard Post (P1) using hardware:
D = 8pcs
G = 1pc

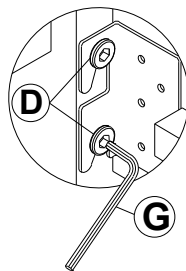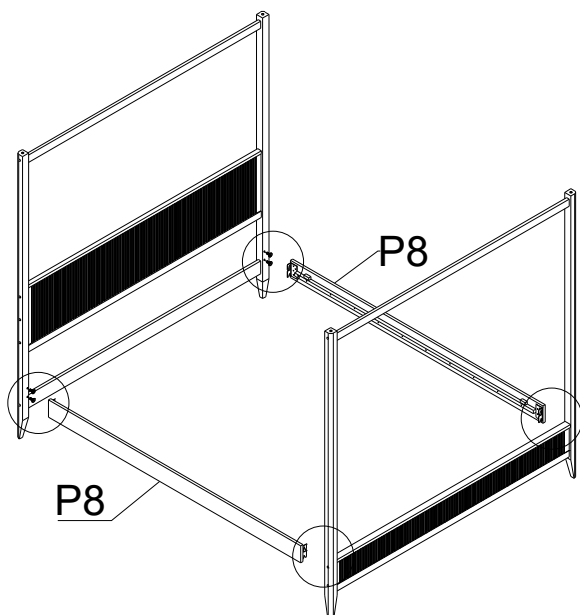

WARNING!!

- Remove hardware from box and sort by size.
- Please check to see that hardware and parts are present prior start of assembly.
- Please follow attached instruction in the same sequence numbered to ensure fast and easy assembly.
- Do not use this bed if any part is broken, torn or missing.
- The assembly of this product requires two people.
- Do not use any power tools as this may damage the frame and will invalidate any claim.

PART LIST

P1		Headboard Post = L-1pc = R-1pc
P2		Headboard Panel = 1pc
P3		Headboard Bottom Rail = 1pc
P4		Footboard Post = L-1pc = R-1pc
P5		Footboard Panel = 1pc
P6		HB&FB Support Rail = 2pcs
P7		Upper Side Support Rail = 2pcs
P8		Side Rail = 2pcs
P9		Center Rail = 2pcs
P10		Bed Slats = 14pcs
P11		Support Leg = 4pcs


HARDWARE LIST

A		M6 X 40MM JCBC = 4pcs
B		M6 X 50MM JCBC = 4pcs
C		M6 X 85MM JCBC = 16pcs
D		M8 X 20MM JCBB = 8pcs
E		WOOD DOWEL M8 X 30MM = 16pcs
F		ALLEN KEY M4 = 1pc
G		ALLEN KEY M5 = 1pc
H		M4 X 25MM SCREW = 8pcs
I		ADJUSTER = 4pcs
J		BARREL NUT = 16pcs




SW 8609-K

4.

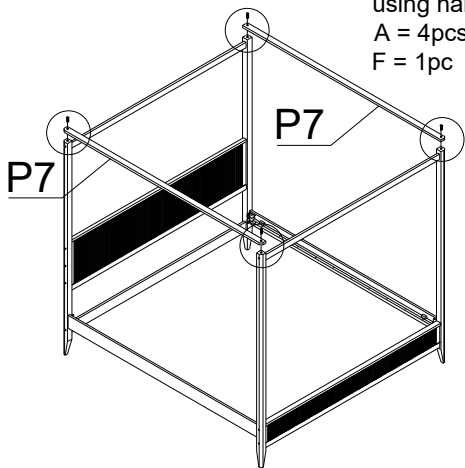

Attach the Upper Side Support Rail(P7) to the Footboard Post(P4) and Headboard Post (P1) using hardware:

A = 4pcs
F = 1pc

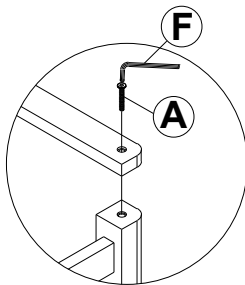


WARNING!!

- Remove hardware from box and sort by size.
- Please check to see that hardware and parts are present prior start of assembly.
- Please follow attached instruction in the same sequence numbered to ensure fast and easy assembly.
- Do not use this bed if any part is broken, torn or missing.
- The assembly of this product requires two people.
- Do not use any power tools as this may damage the frame and will invalidate any claim.

PART LIST

P1		Headboard Post	=	L-1pc R-1pc
P2		Headboard Panel	=	1pc
P3		Headboard Bottom Rail	=	1pc
P4		Footboard Post	=	L-1pc R-1pc
P5		Footboard Panel	=	1pc
P6		HB&FB Support Rail	=	2pcs
P7		Upper Side Support Rail	=	2pcs
P8		Side Rail	=	2pcs
P9		Center Rail	=	2pcs
P10		Bed Slats	=	14pcs
P11		Support Leg	=	4pcs

5.

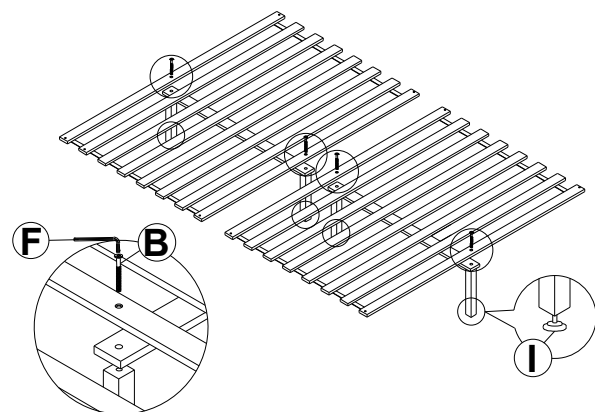


Fix the adjuster (I) to the support leg (P11) using hardware:

I = 4pcs

Attach the support leg (P11) to the center rail (P9) and bed slats (P10) using hardware:


B = 4pcs
F = 1pc

6.

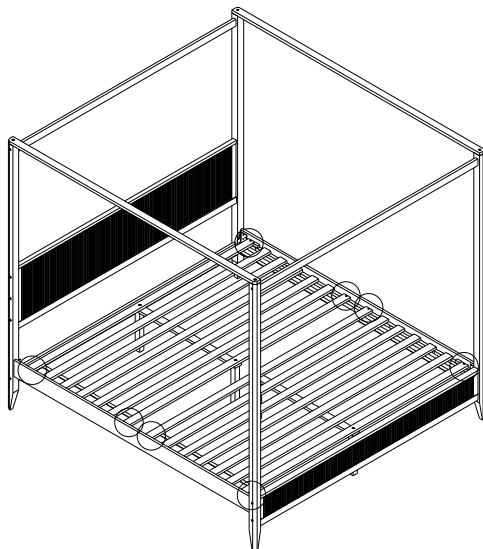

Lay the bed slats (P10) between the side rail (P8) using hardware:

H = 8pcs

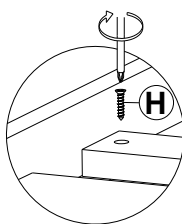


****Apply pressure with your knee to the side rail whilst attaching the slats to ensure that the slats are flush against the inside of side rail****

HARDWARE LIST

A		M6 X 40MM JCBC	=	4pcs
B		M6 X 50MM JCBC	=	4pcs
C		M6 X 85MM JCBC	=	16pcs
D		M8 X 20MM JCBB	=	8pcs
E		WOOD DOWEL M8 X 30MM	=	16pcs
F		ALLEN KEY M4	=	1pc
G		ALLEN KEY M5	=	1pc
H		M4 X 25MM SCREW	=	8pcs
I		ADJUSTER	=	4pcs
J		BARREL NUT	=	16pcs


ASSEMBLY COMPLETE

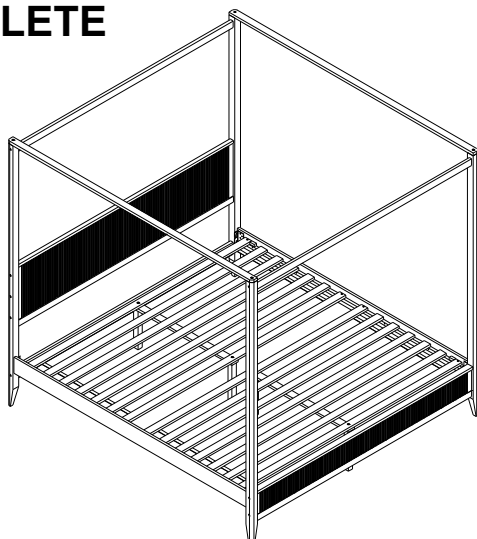

ASSEMBLY INSTRUCTION

SW 8000-66NS












REAR

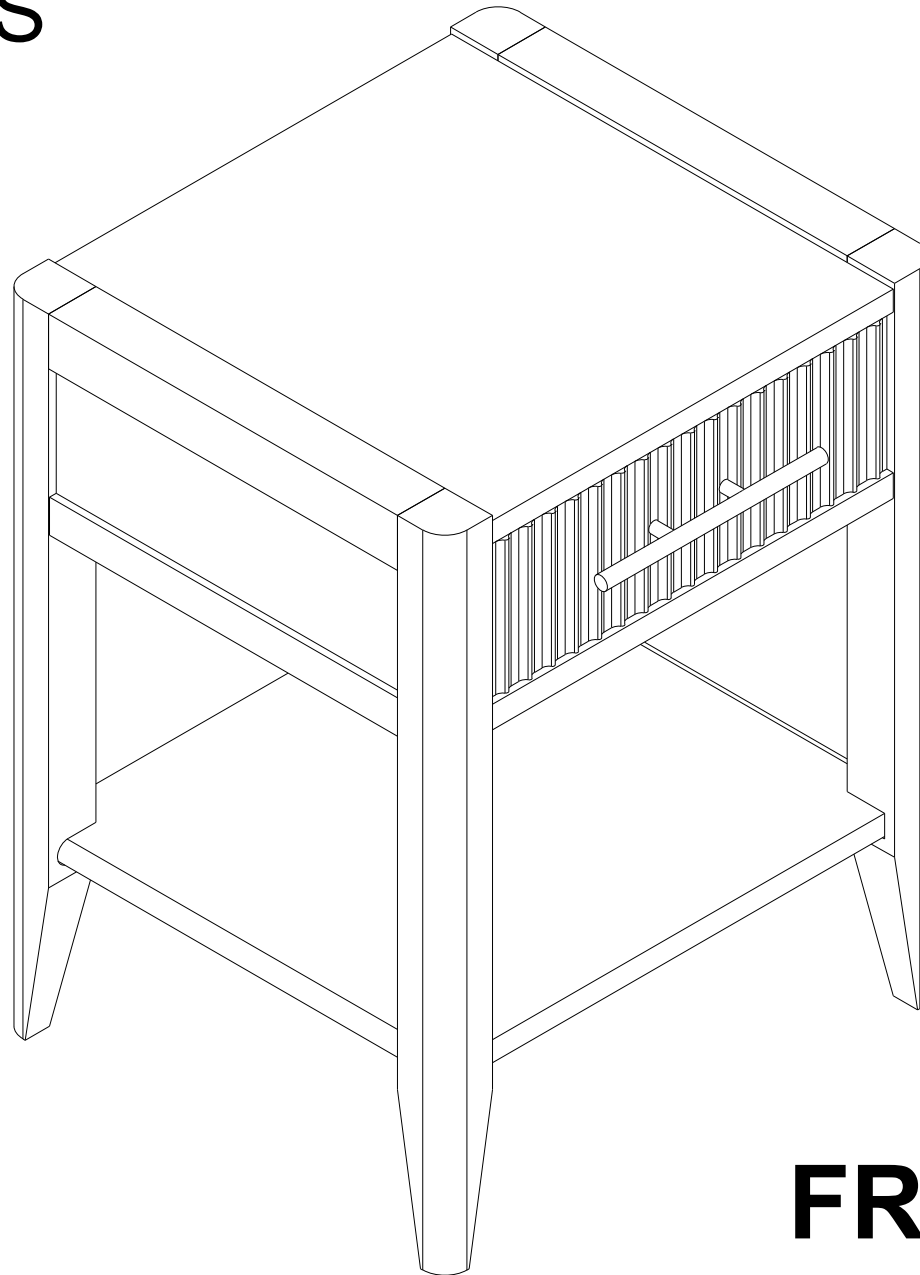







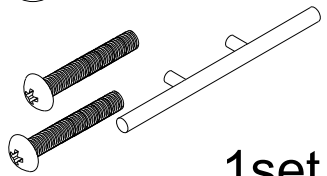
FRONT

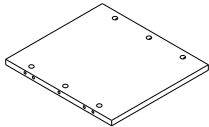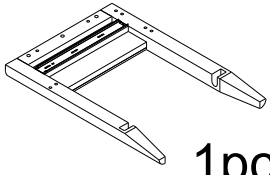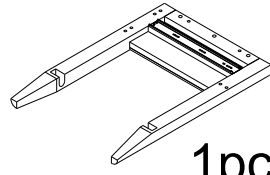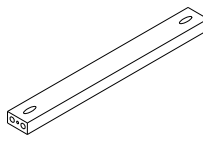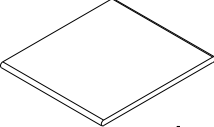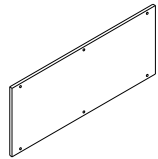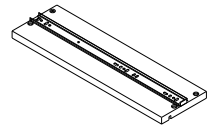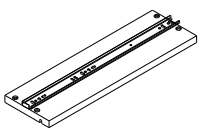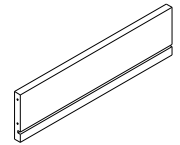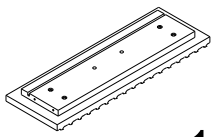


PART LIST

1 Top Panel  1pc	2 Handle(left)  1pc	3 Handle(right)  1pc	4 Support Rail  3pcs	5 Bottom Panel  1pc	6 Back Panel  1pc
7 Drawer Side Panel(left)  1pc	8 Drawer Side Panel(right)  1pc	9 Drawer Rear Panel  1pc	10 Drawer Base Panel  1pc	11 Drawer Front Panel  1pc	


HARDWARE LIST







A MINI FIX SPREADING BOLT 24MM  6pcs	B MINIFIX HOUSING Ø15*12MM  6pcs	C WOOD DOWEL M8*30MM  16pcs	D CSK SCREW M4*30MM  6pcs	E CSK SCREW M4*25MM  8pcs	F PAN HEAD M3.5*16MM  6pcs
G HANDLE  1set					

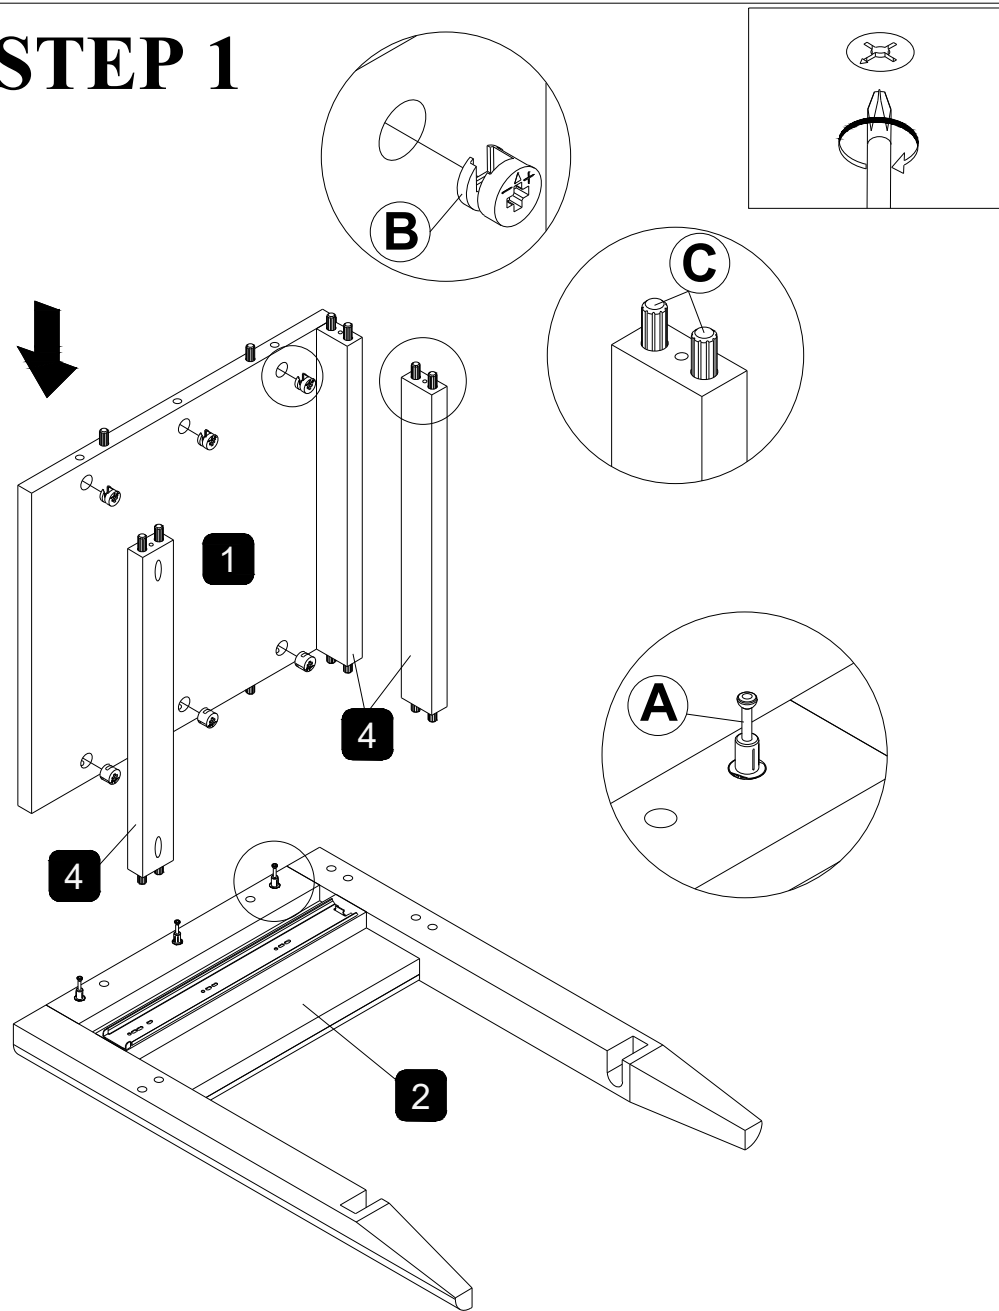STEP 1

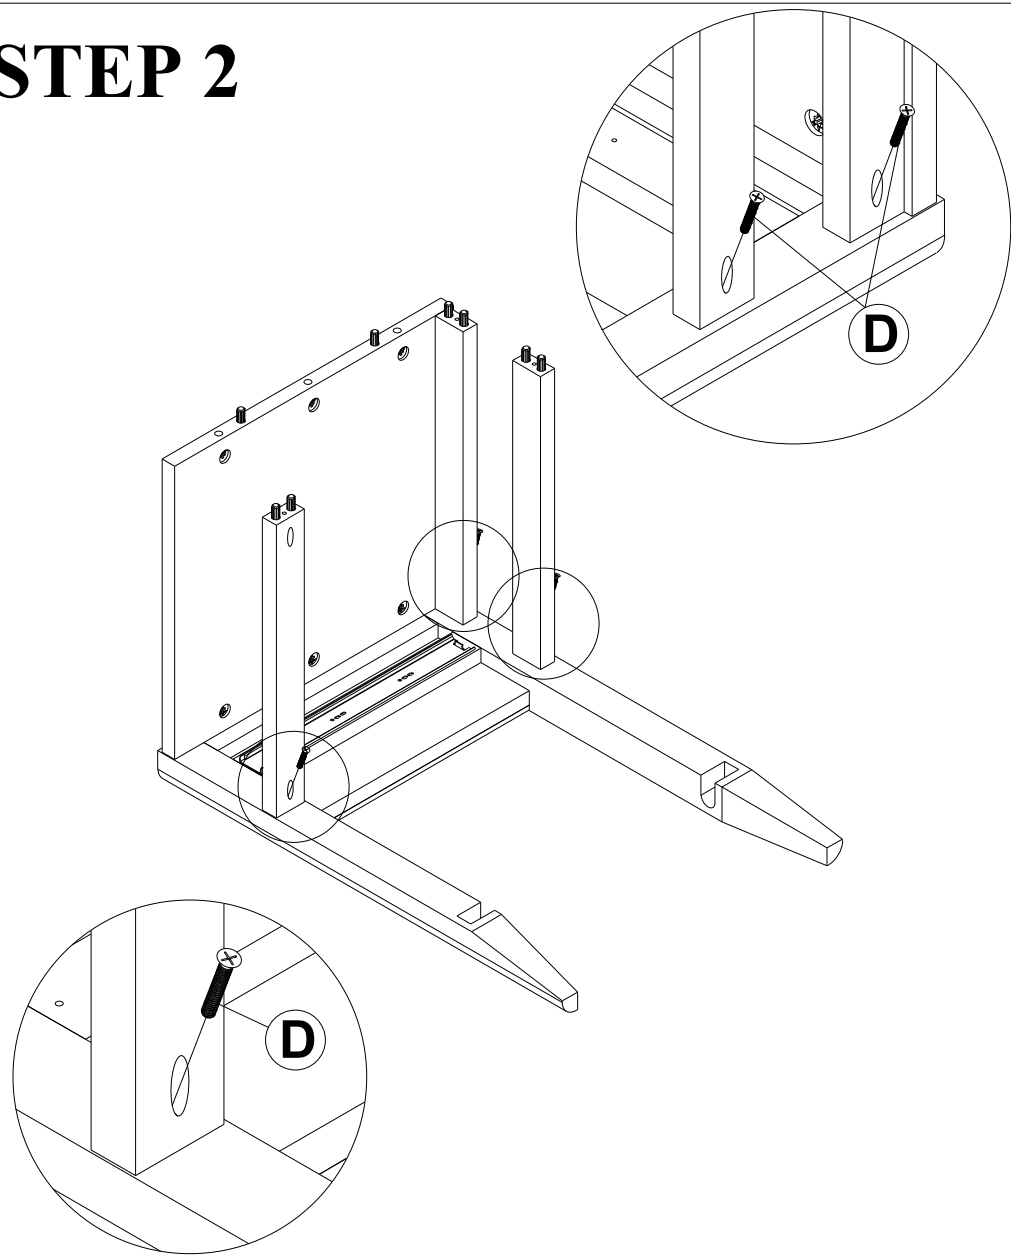


STEP 2





 A X 3pcs	 B X 6pcs	 C X 16pcs		 D X 3pcs			
---	---	--	--	---	---	--	--

STEP 3

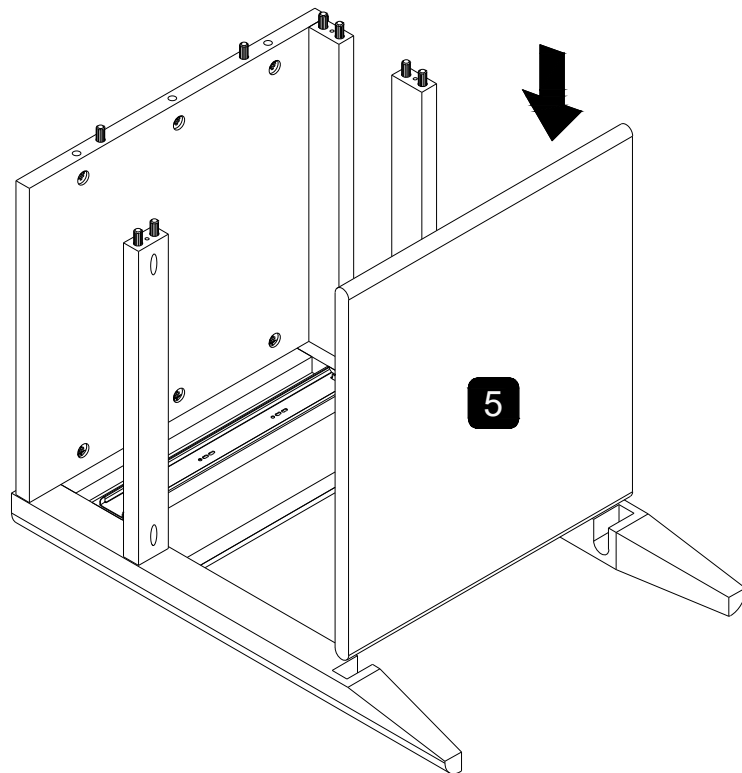


STEP 4

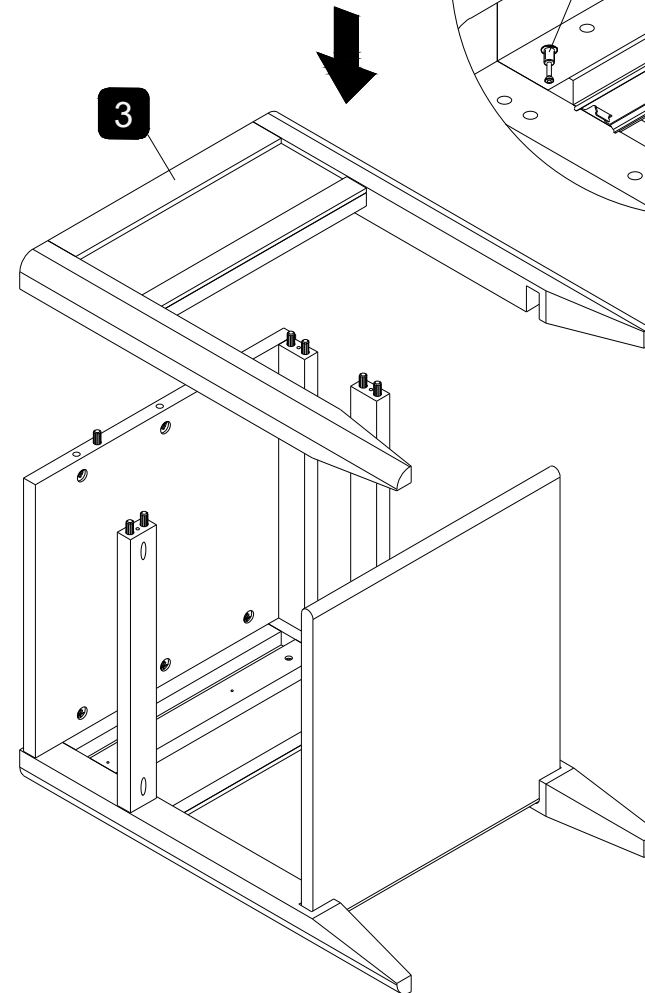


A X 3pcs





STEP 5

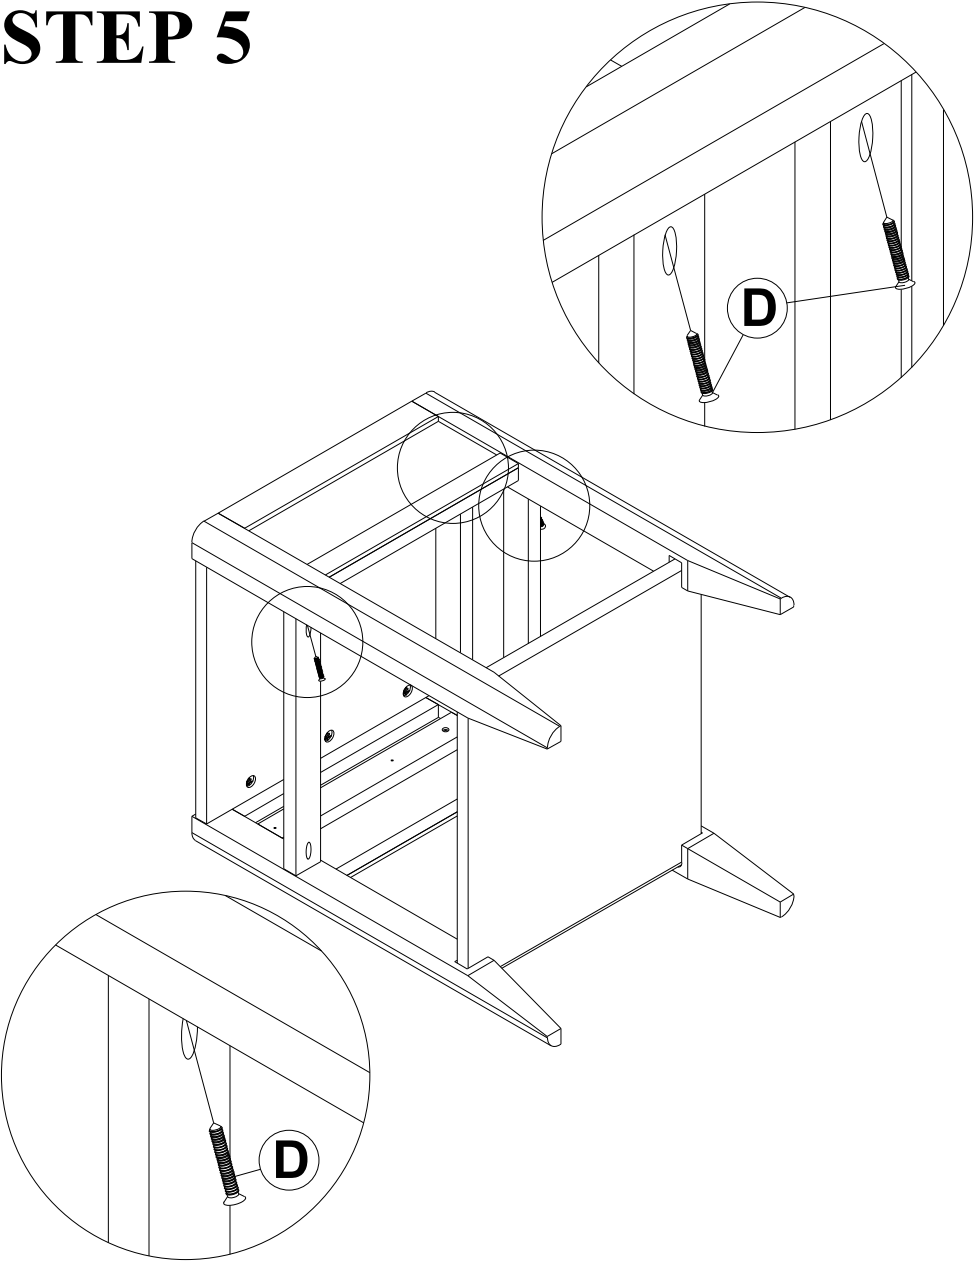



D X 3pcs

STEP 6


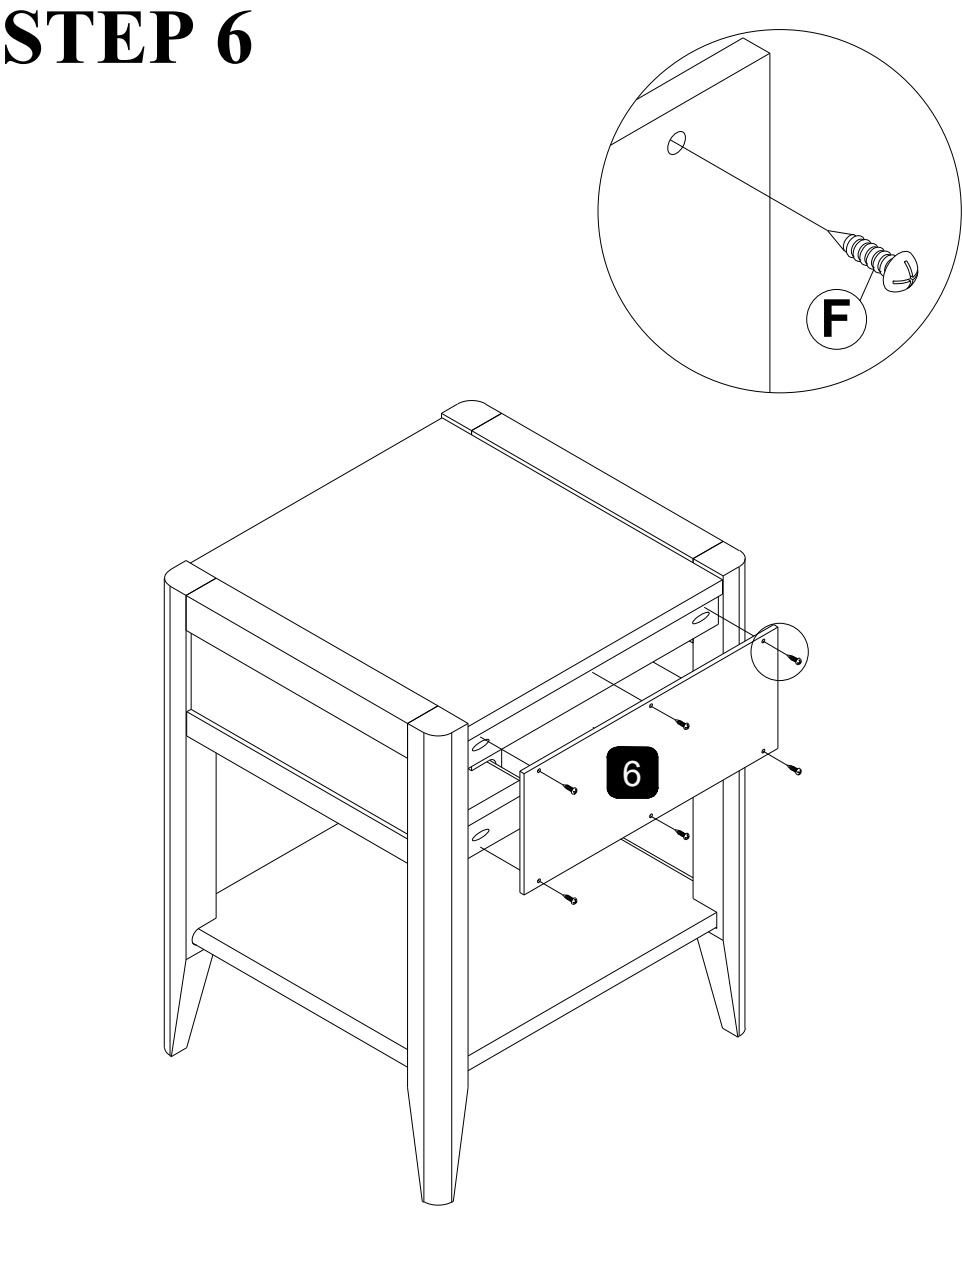



F X 6pcs

STEP 7

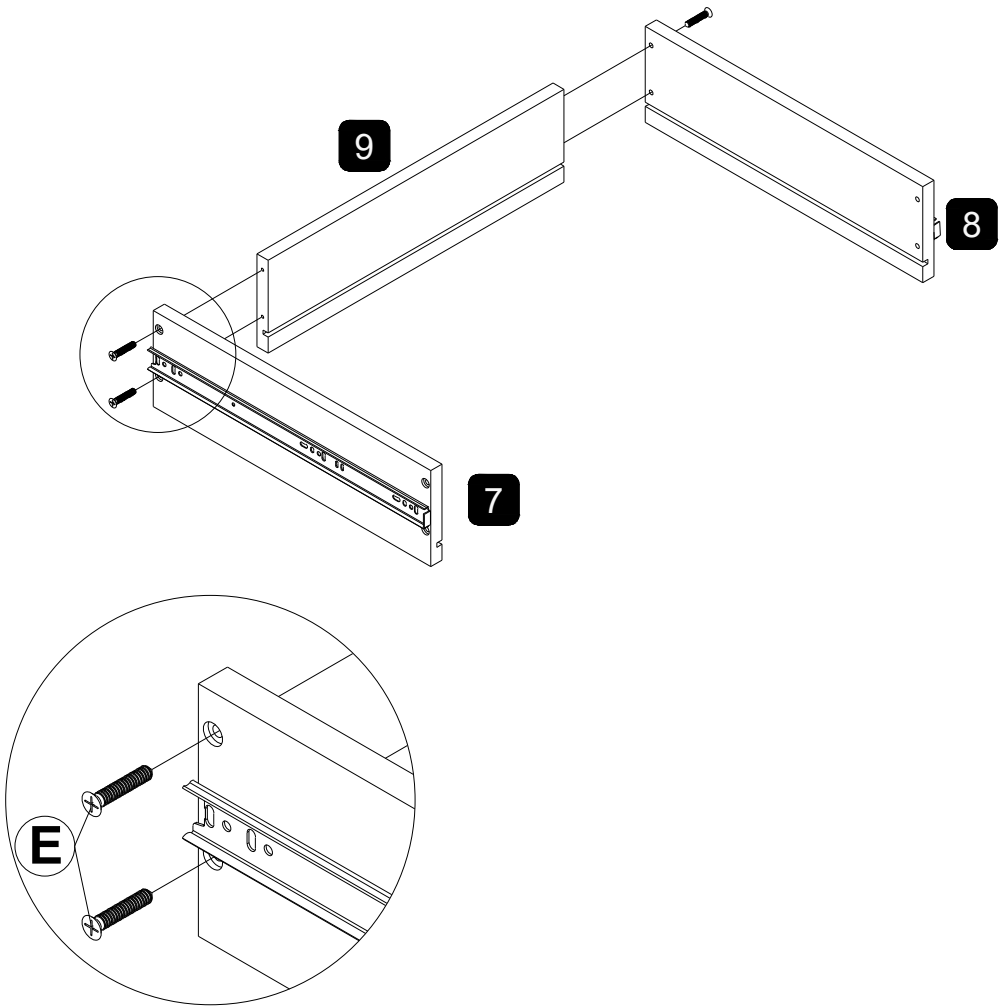


STEP 8

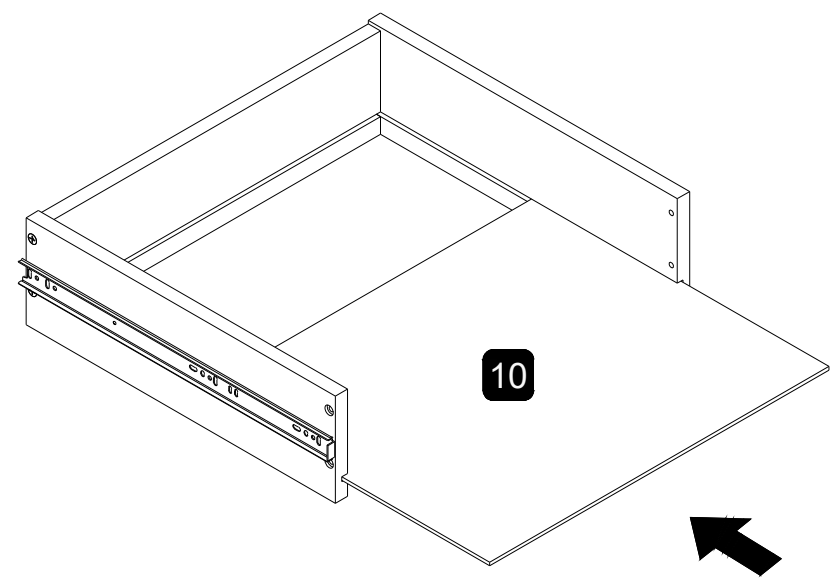



E X 4pcs

STEP 9

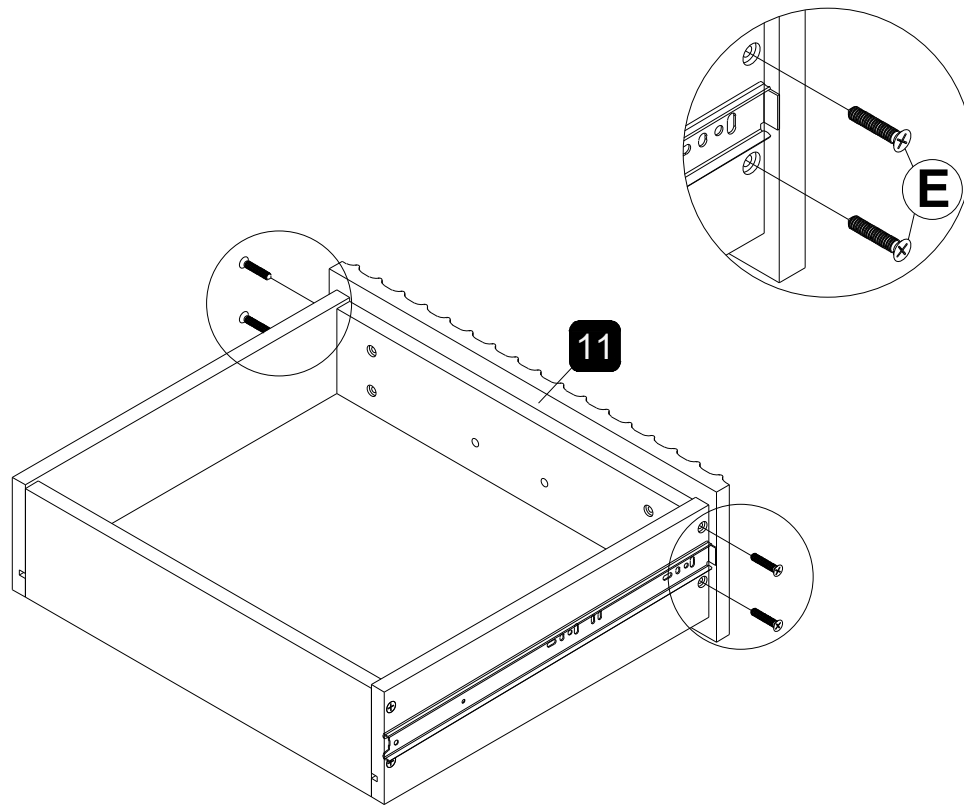


E X 4pcs

STEP 10

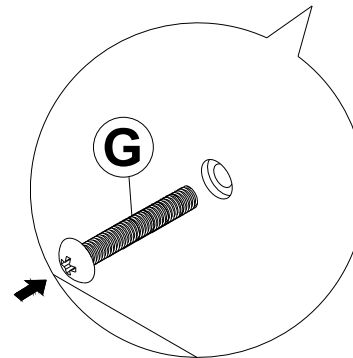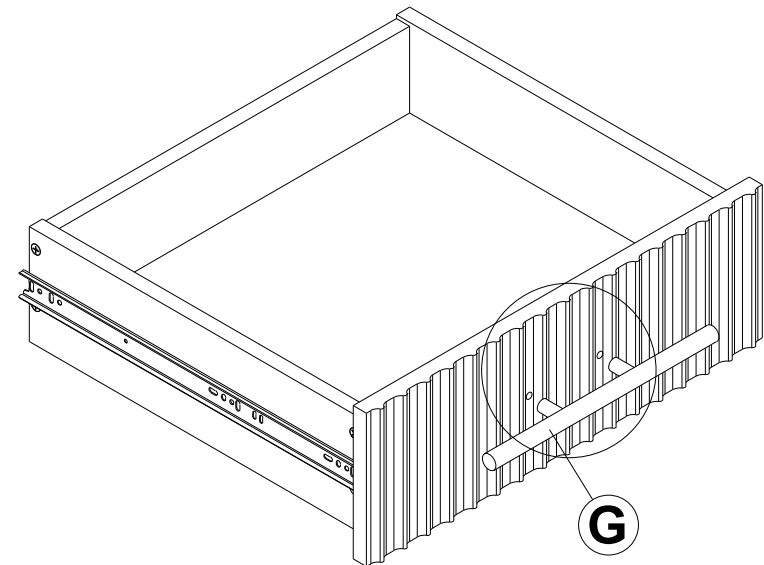


G X 1set

STEP 11

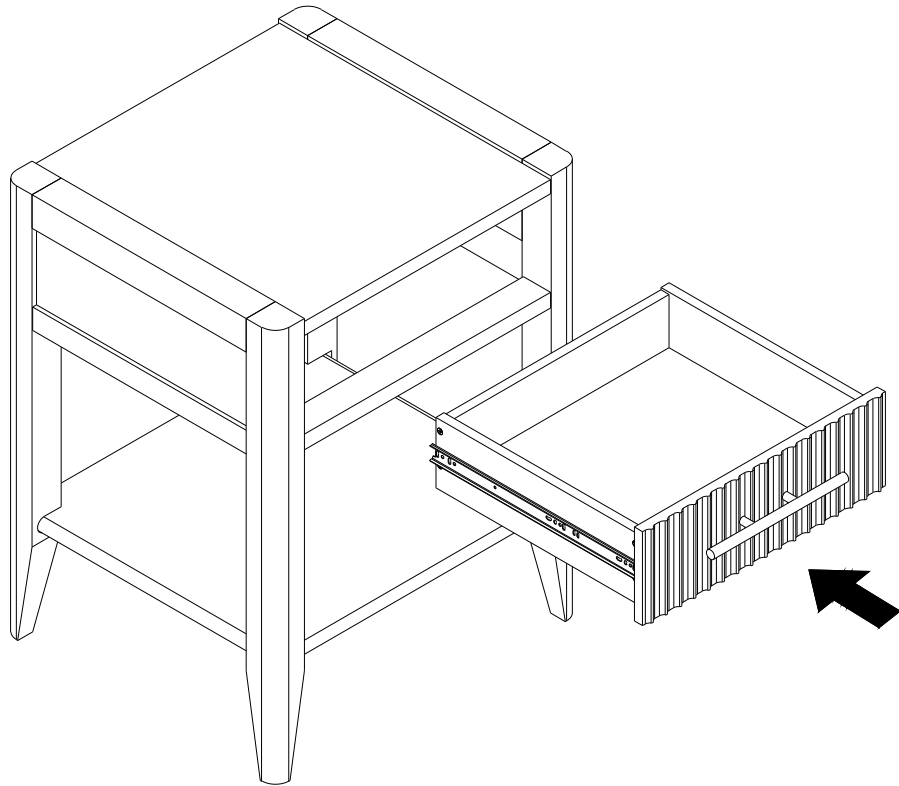


ASSEMBLY COMPLETE

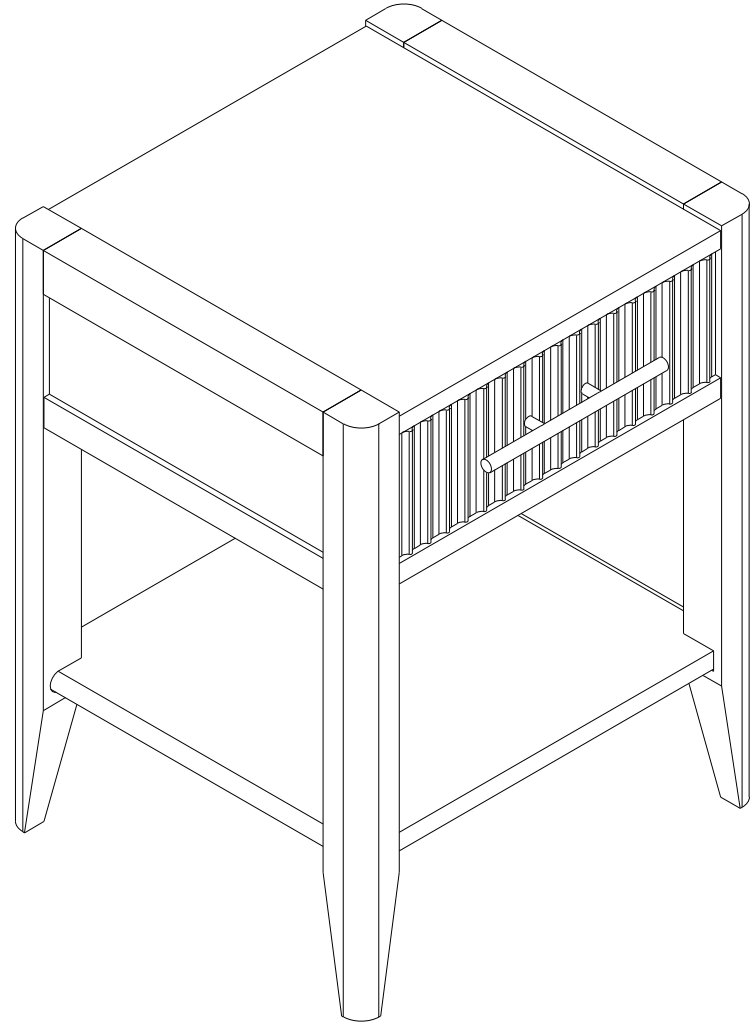

ASSEMBLY INSTRUCTION

SW 8000-66D6D















REAR

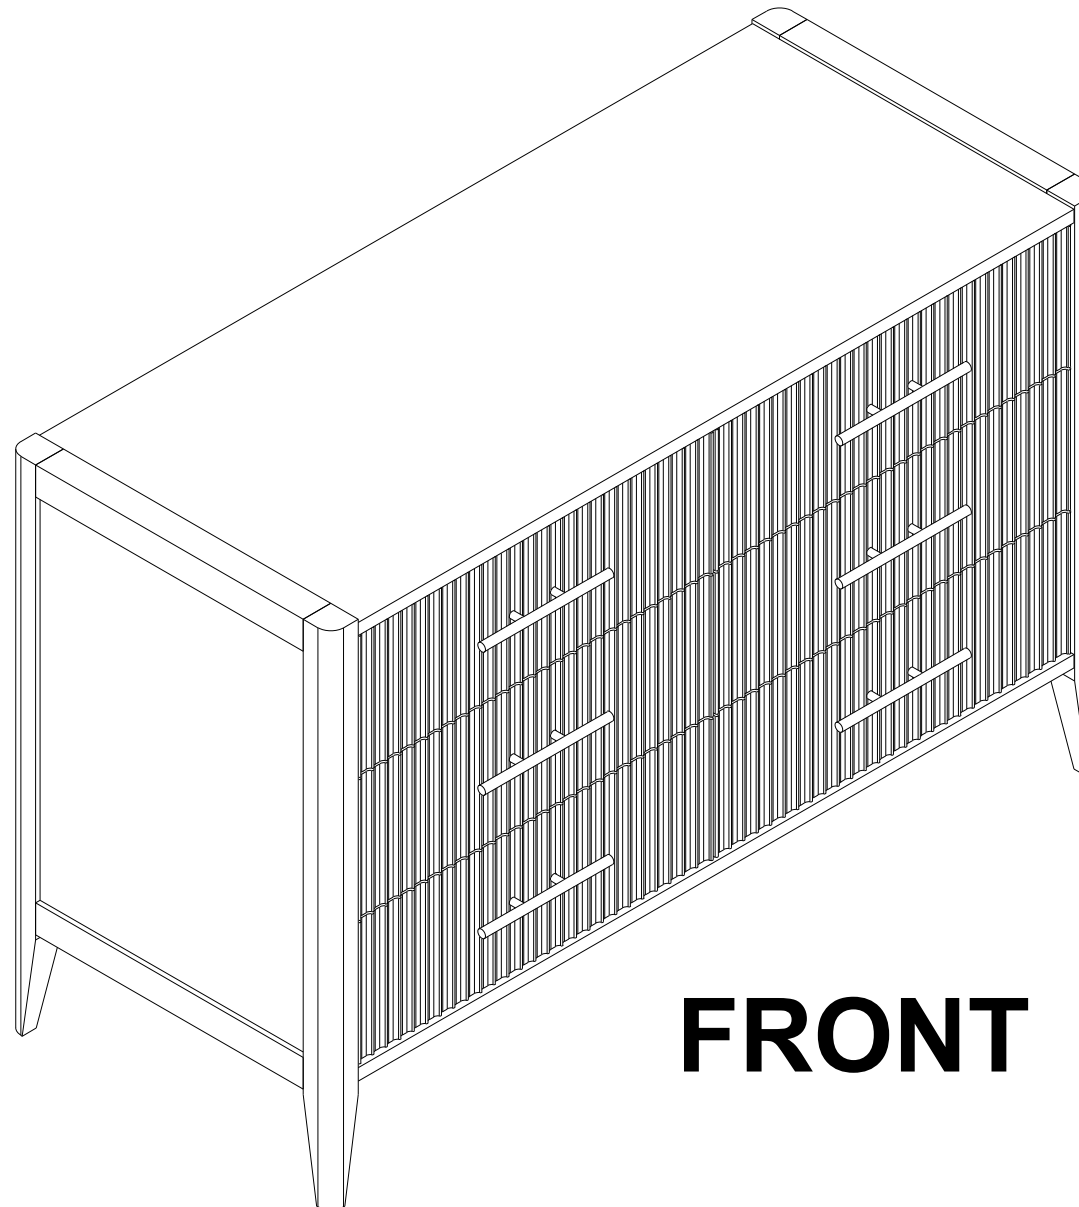






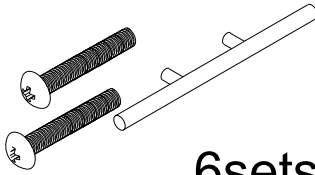

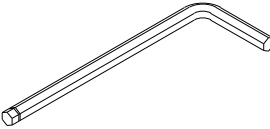
FRONT




PART LIST

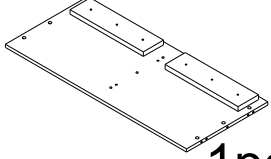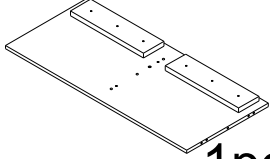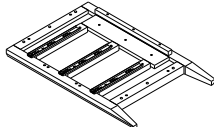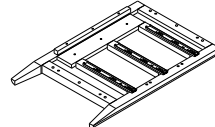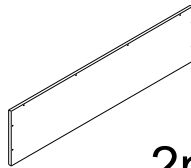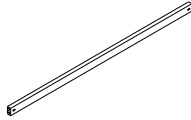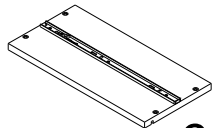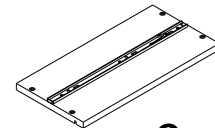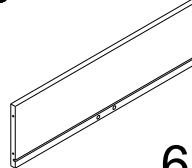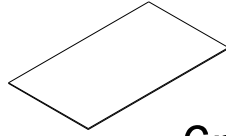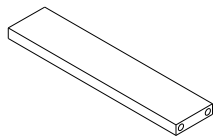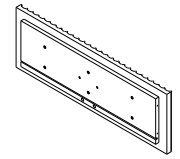



1 Top Panel  1pc	2 Bottom Panel  1pc	3 Side Panel(left)  1pc	4 Side Panel(right)  1pc	5 Division  1pc	6 Support Leg  1pc
7 Back Panel  2pcs	8 Support Rail  2pcs	9 Drawer Side Panel(left)  6pcs	10 Drawer Side Panel(right)  6pcs	11 Drawer Rear Panel  6pcs	12 Drawer Base Panel  6pcs
13 Drawer Support Rail  6pcs	14 Drawer Front Panel  6pcs				

HARDWARE LIST


A MINI FIX SPREADING BOLT 24MM  18pcs	B MINIFIX HOUSING Ø15*12MM  18pcs	C WOOD DOWEL M8*30MM  44pcs	D CSK SCREW M4*30MM  20pcs	E CSK SCREW M4*25MM  48pcs	F HANDLE  6sets
G JCBC M6 X 40MM  1pc	H M4 ALLEN KEY  1pc				

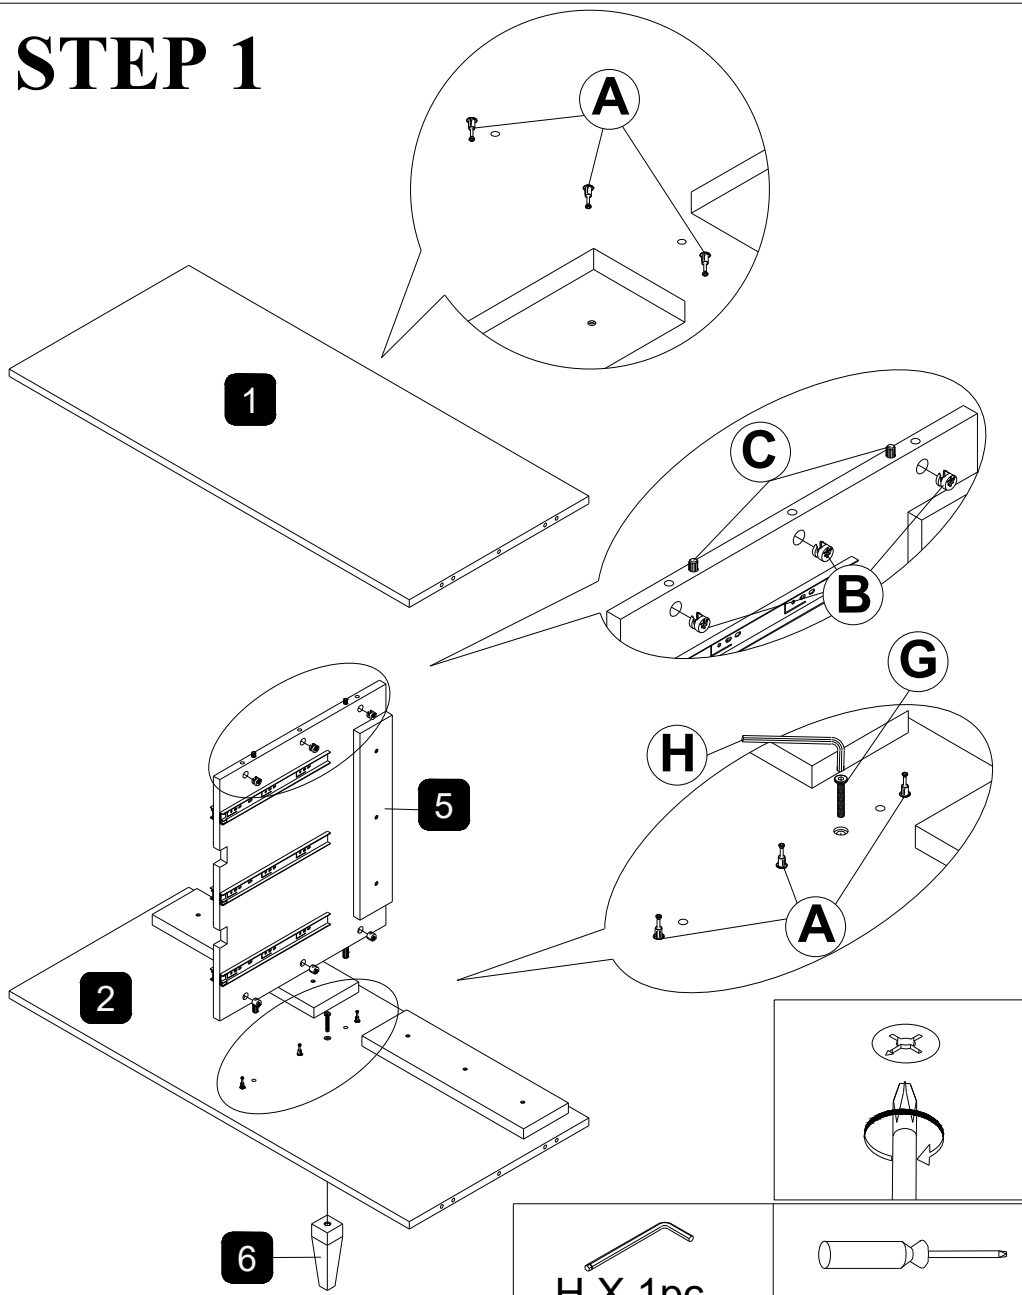



STEP 1





			
A X 6pcs	B X 6pcs	C X 4pcs	G X 1pc

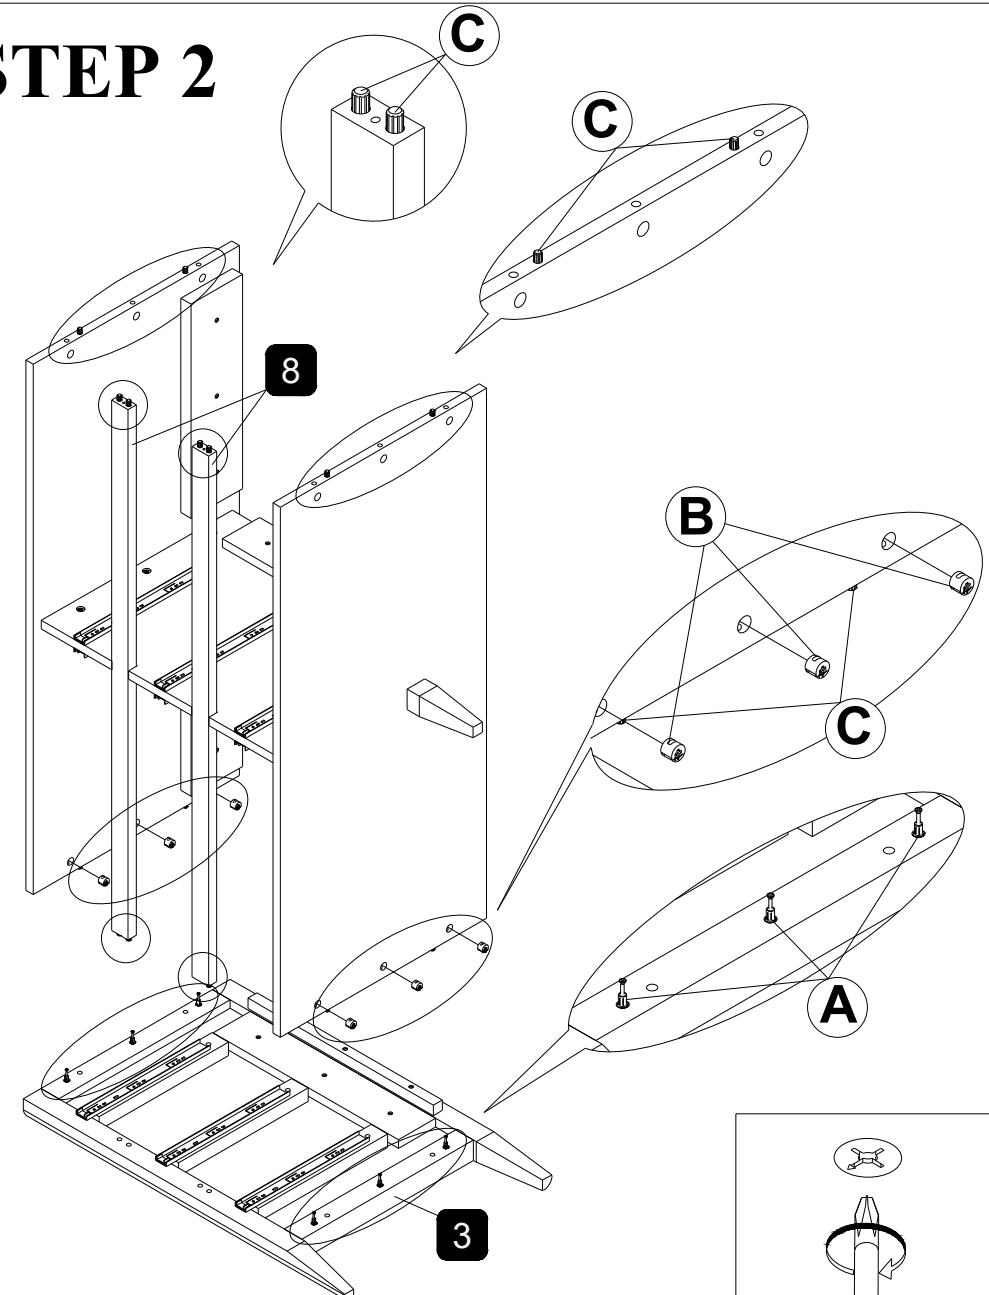STEP 2



			
A X 6pcs	B X 6pcs	C X 16pcs	

STEP 3


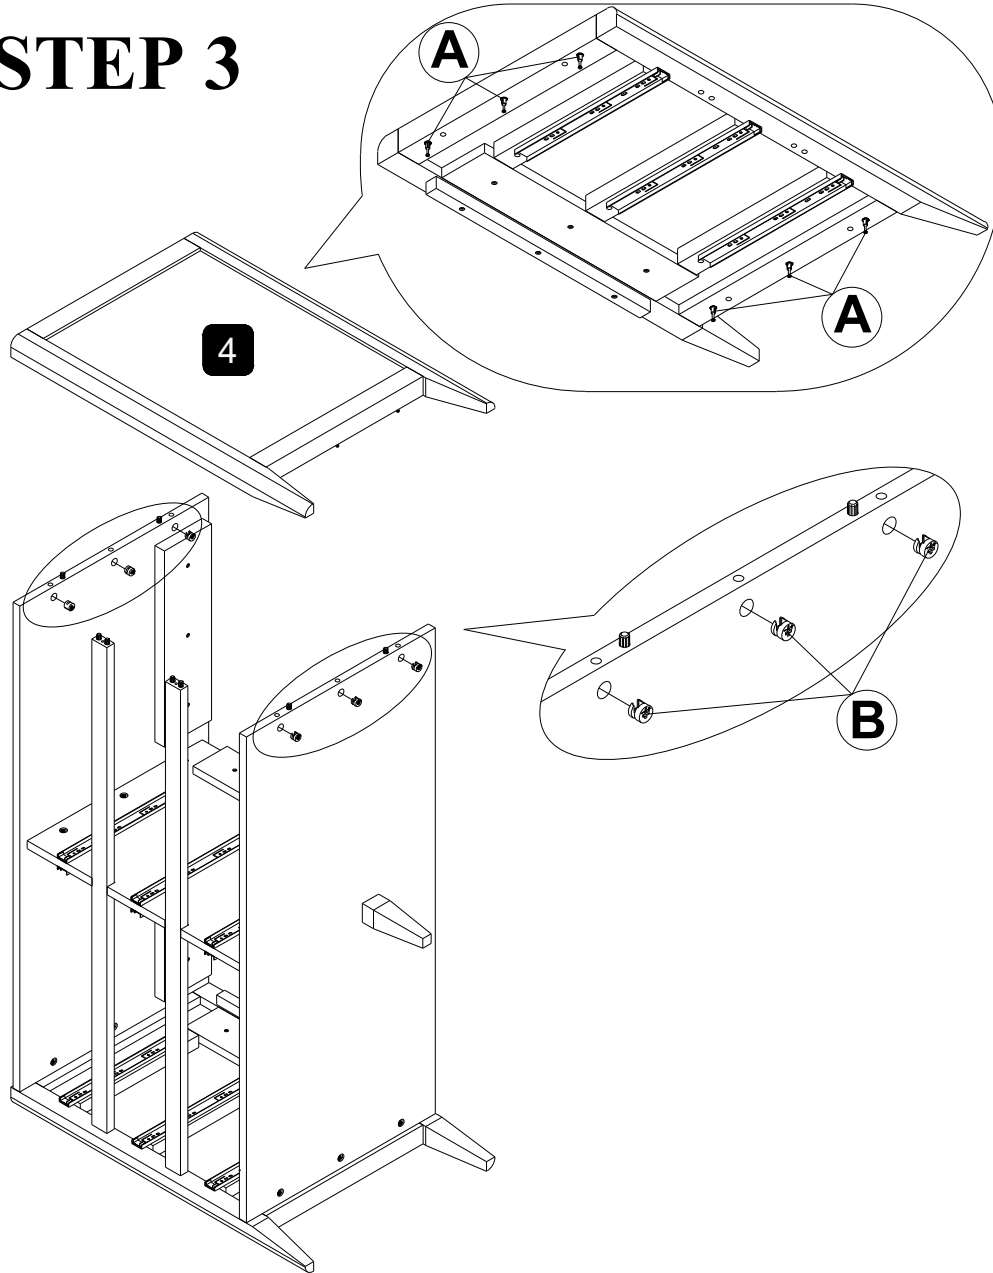


A X 6pcs





B X 6pcs

STEP 4

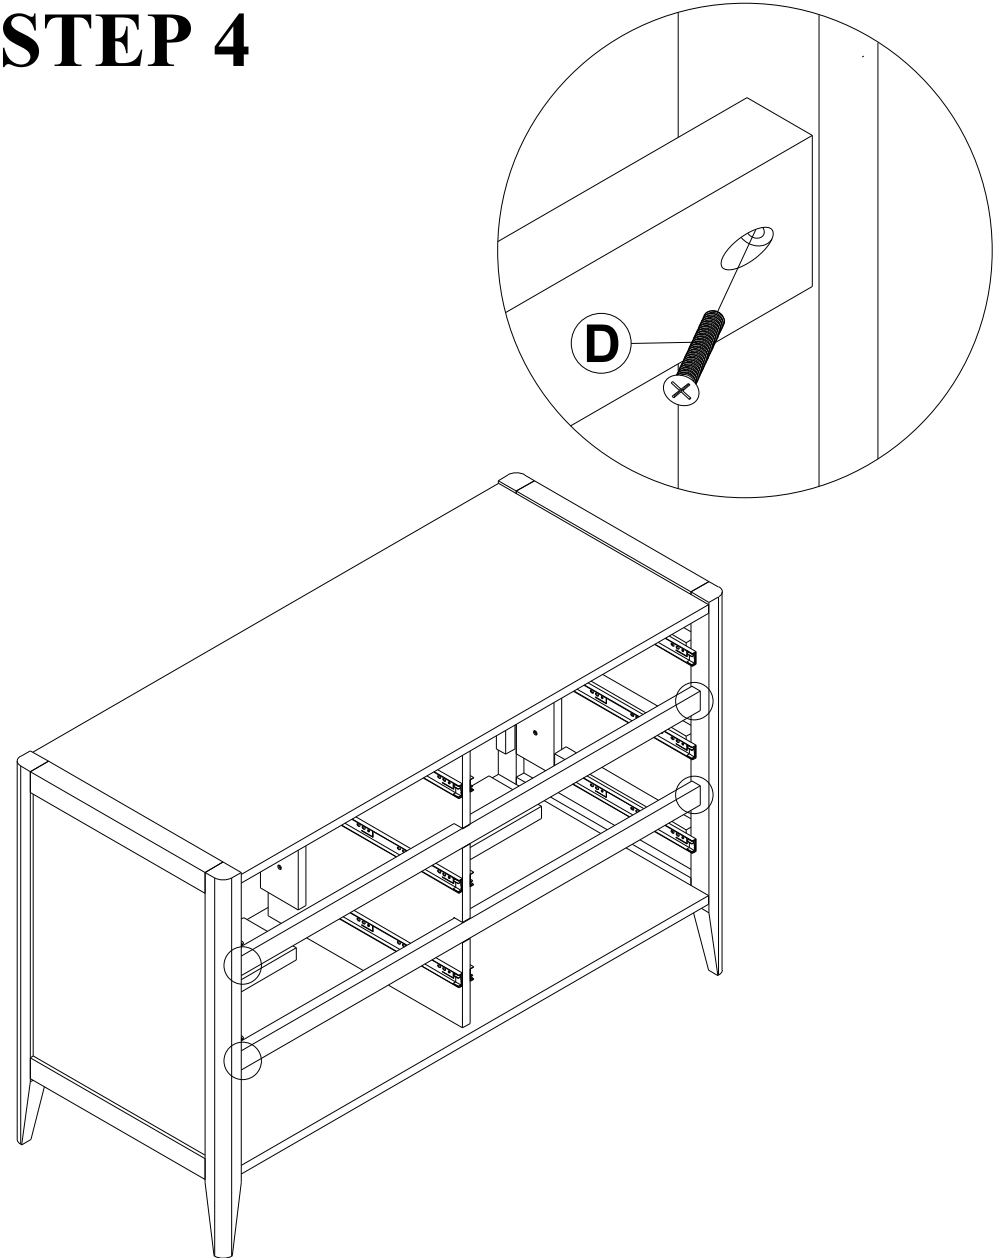


D X 4pcs

STEP 5

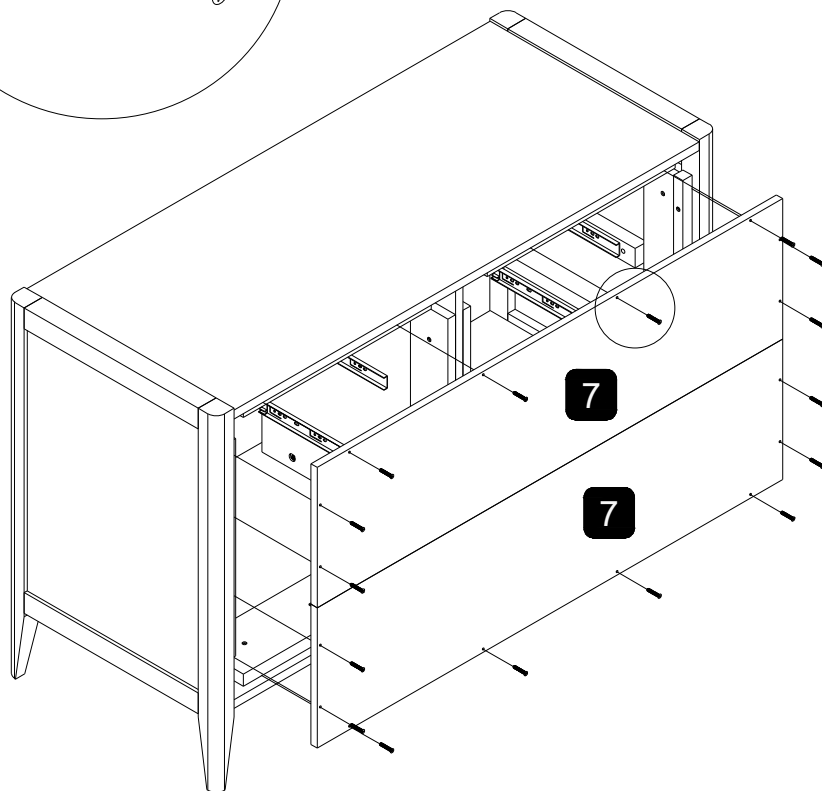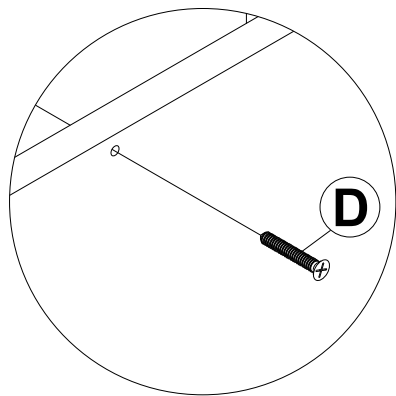


D X 16pcs

STEP 6

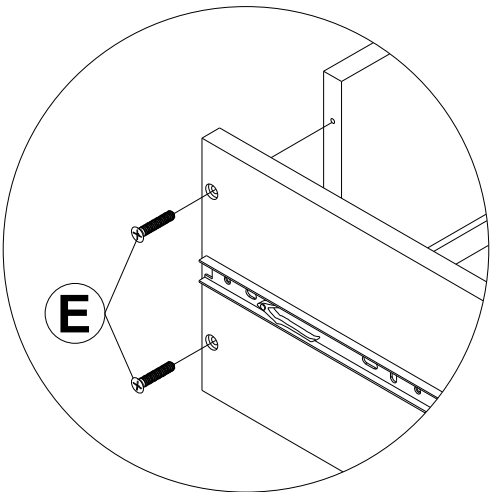


X 6

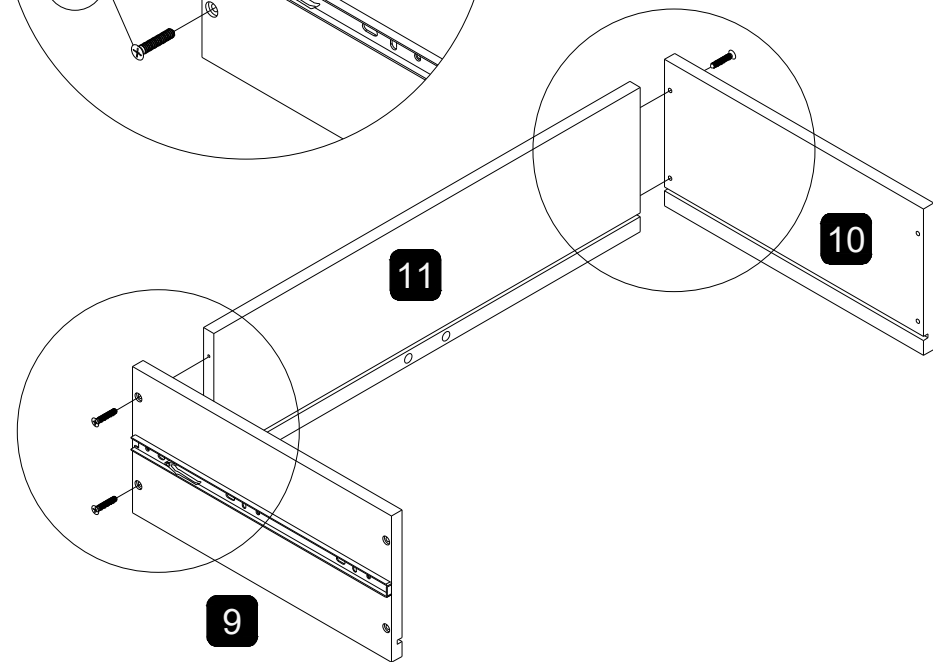


E X 24pcs

STEP 7


X 6

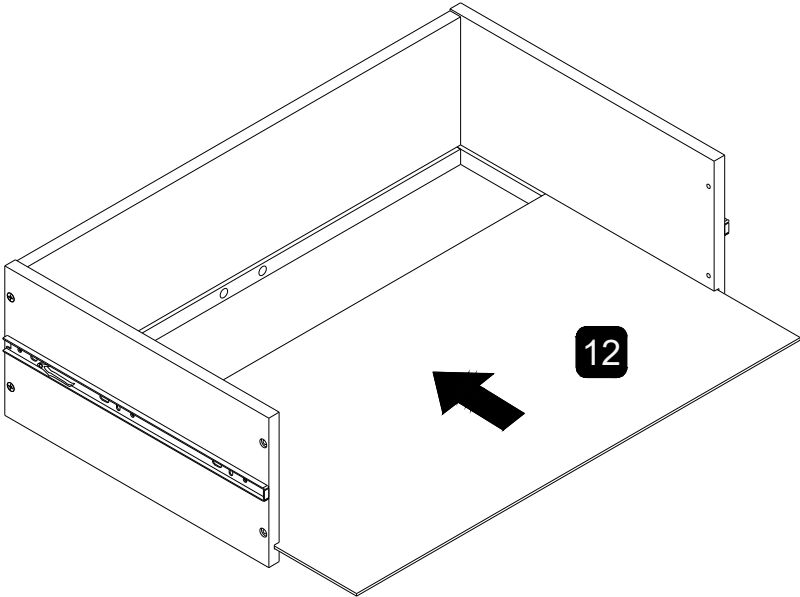

STEP 8

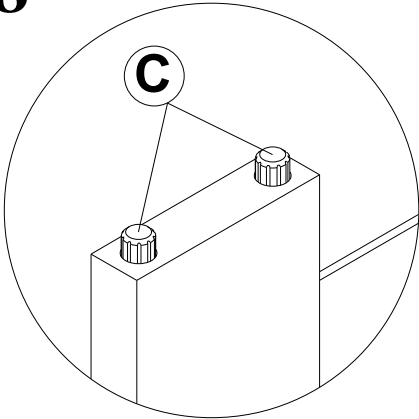


X 6

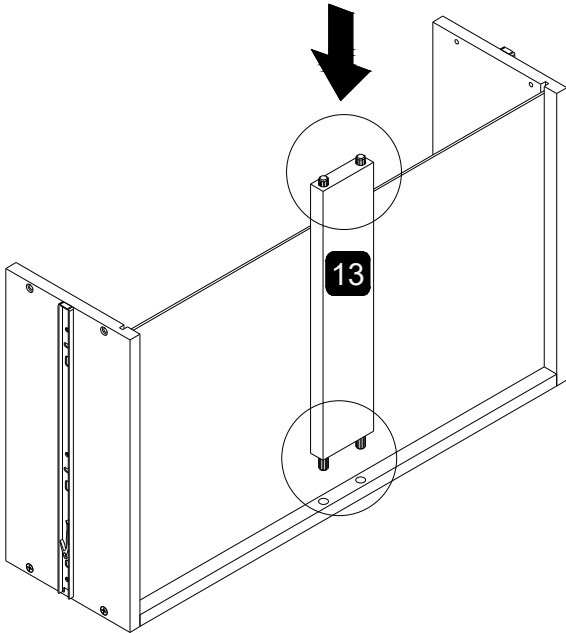

C X 24pcs

STEP 9


X 6

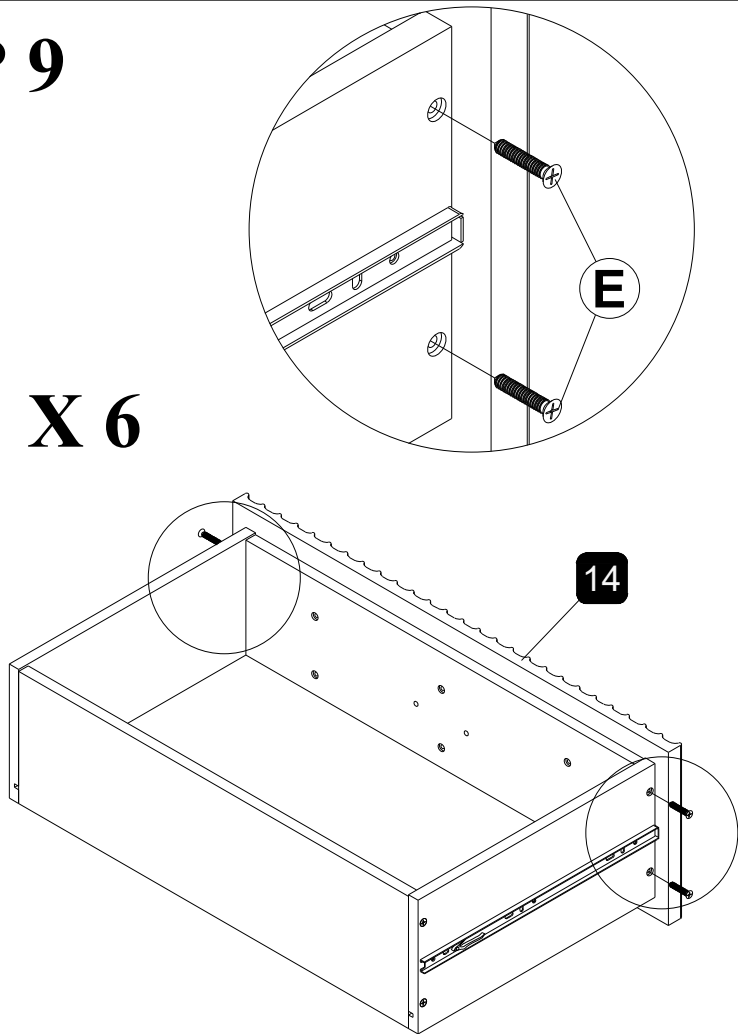


E X 24pcs


STEP 10

X 6

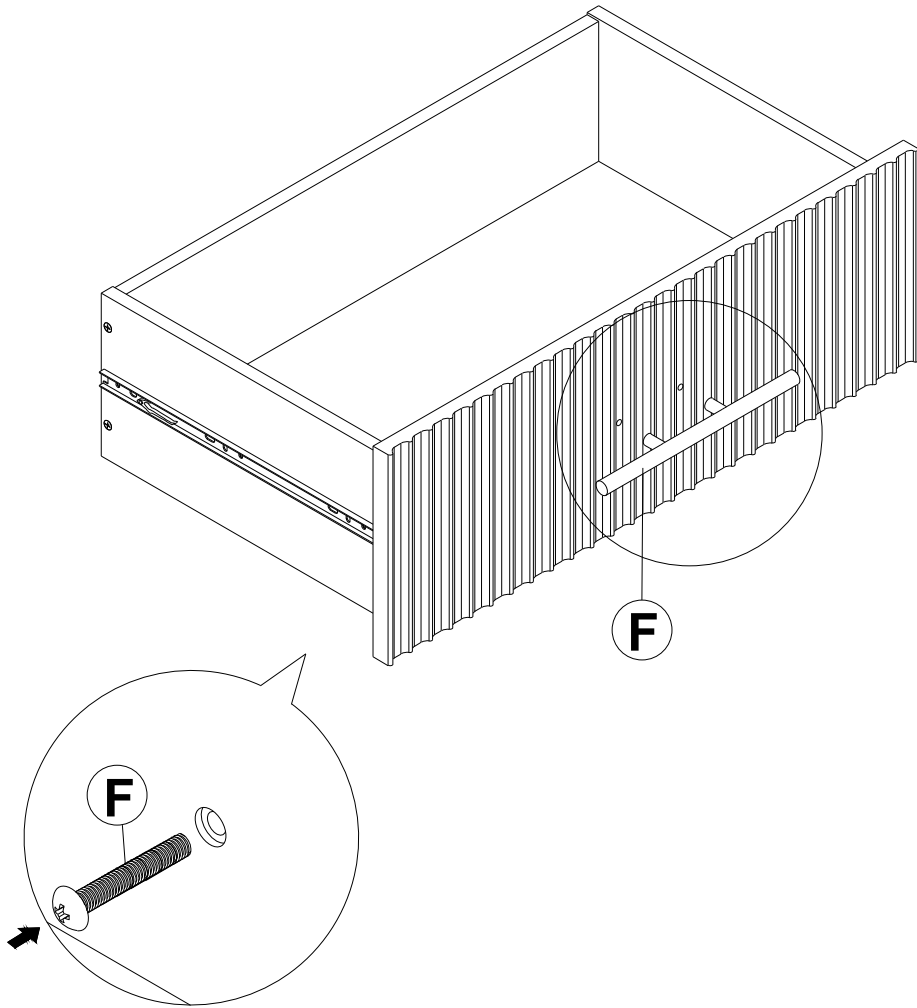


F X 6sets

STEP 11

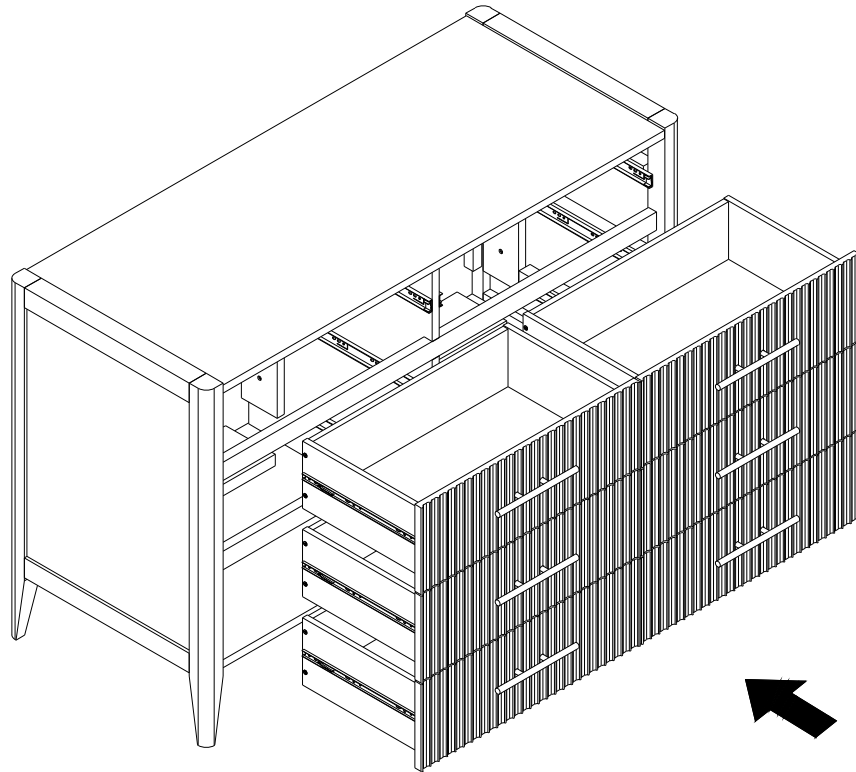

ASSEMBLY COMPLETE

CONTINUE TO ASSEMBLY
ANTI TIPPING KITS

