


11' x 20' ALUMINUM RETRACTABLE PERGOLA

ASSEMBLY MANUAL

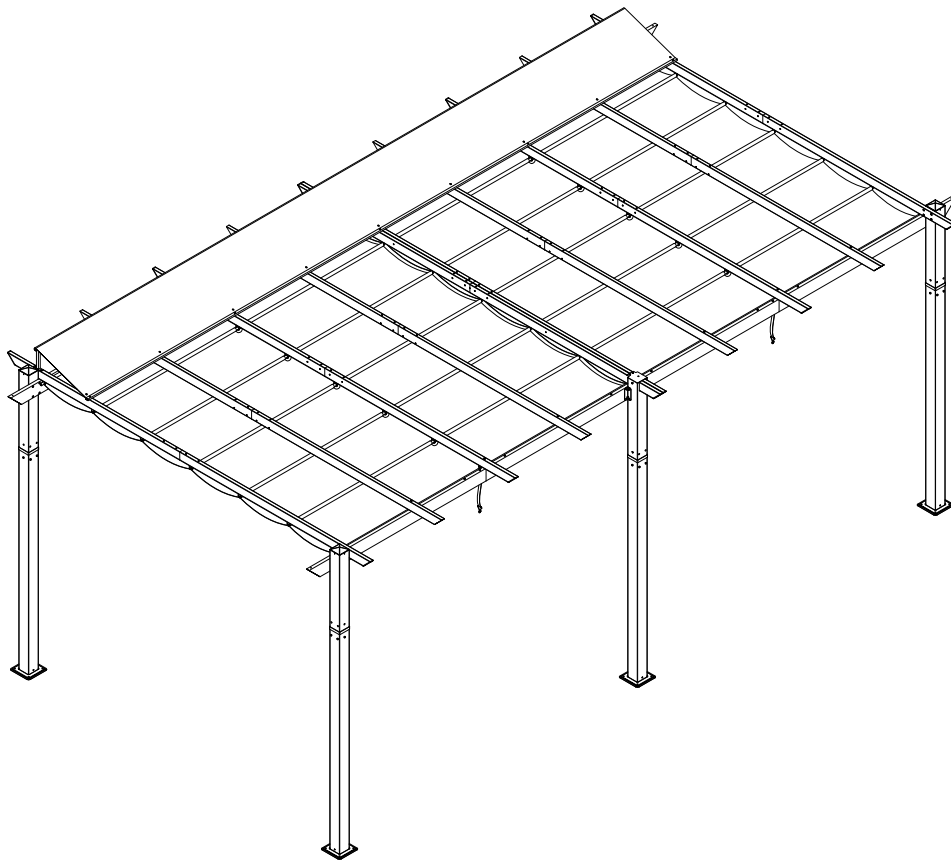

MODEL#: LGMD1616

Missing part? Damaged? Contact us via email at

service@domioutdoorliving.com

www.domioutdoorliving.com

Pre-assembly



1. Two or more people are required for assembly.




2. You will need one or more stepladders.



3. Wearing protective gloves is recommended.



4. You may need a safety hat.

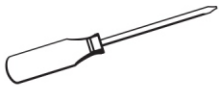

5. Please use a Phillips screw driver.



6. For ease of construction, you may need a drill.



7. You may need a safety goggle.



8. Do not fully tighten screws prior to complete assembly.




Warning & Attention

-Try to assemble this product on the flat ground, otherwise it is difficult to carry out;



-It would be much easier to assemble the product with three or more people;

-After assembly, please check whether all screws are tightened, to prevent parts from falling apart.



▲ Use bolts to secure the frame to the ground to against the strong wind.

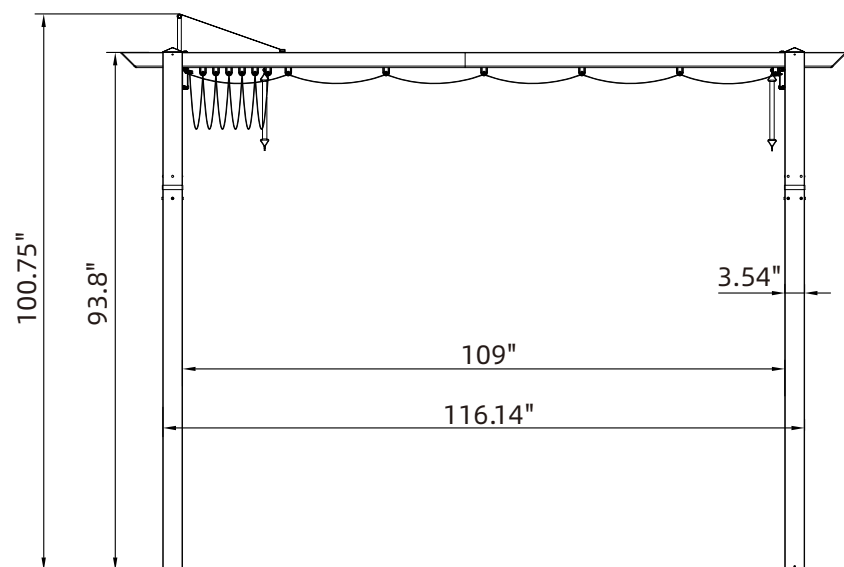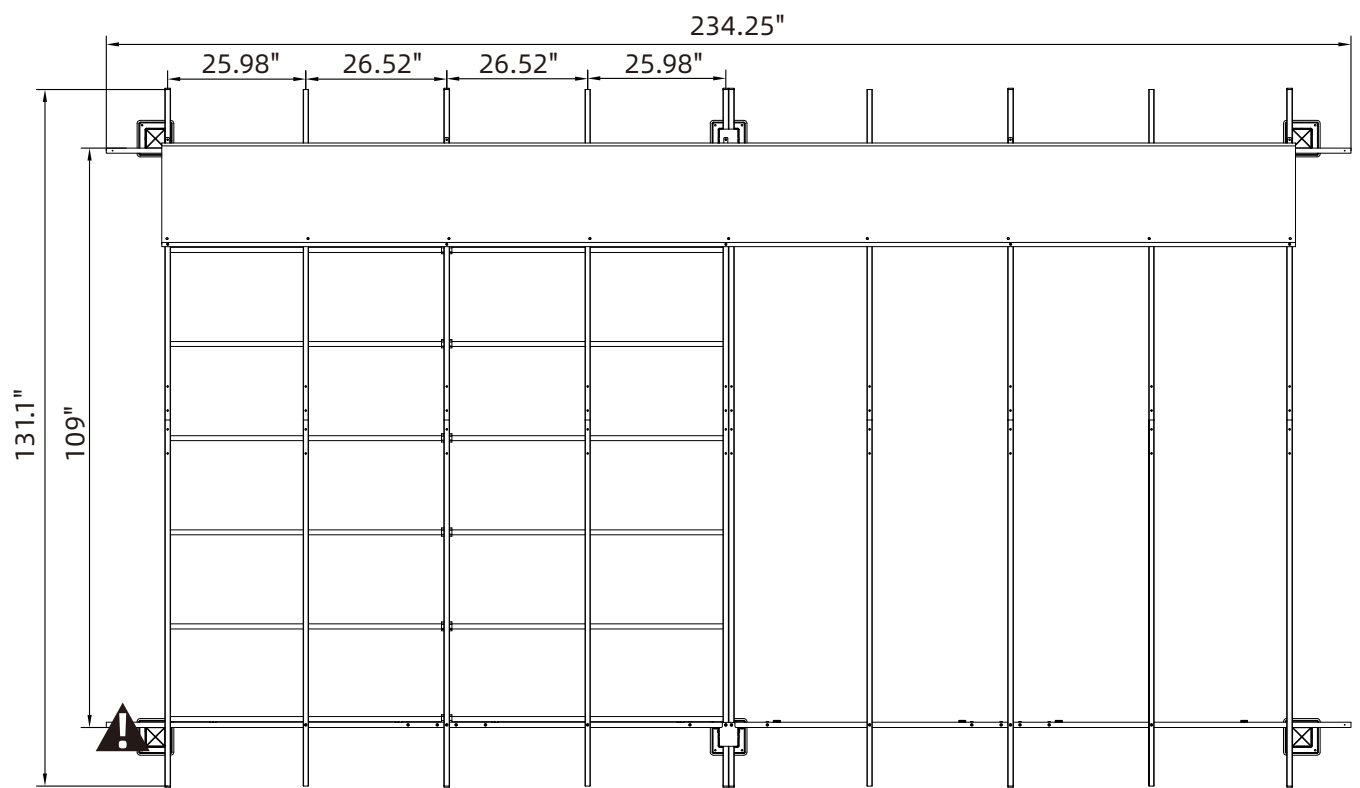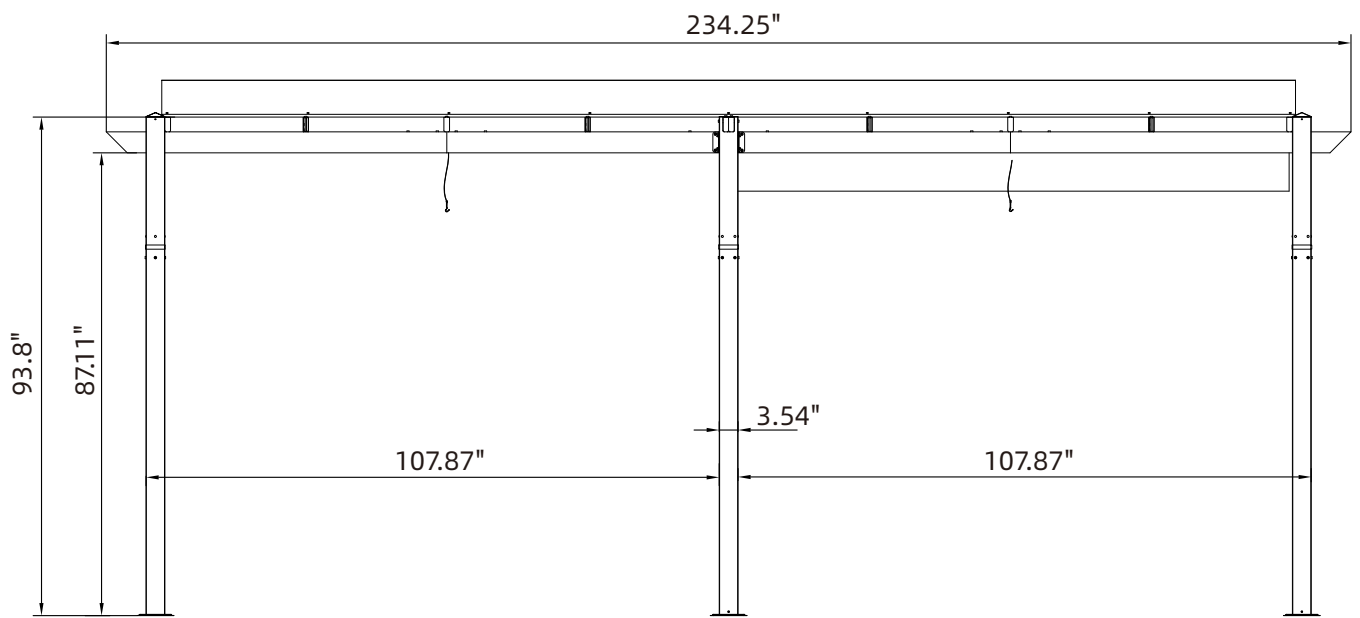



1

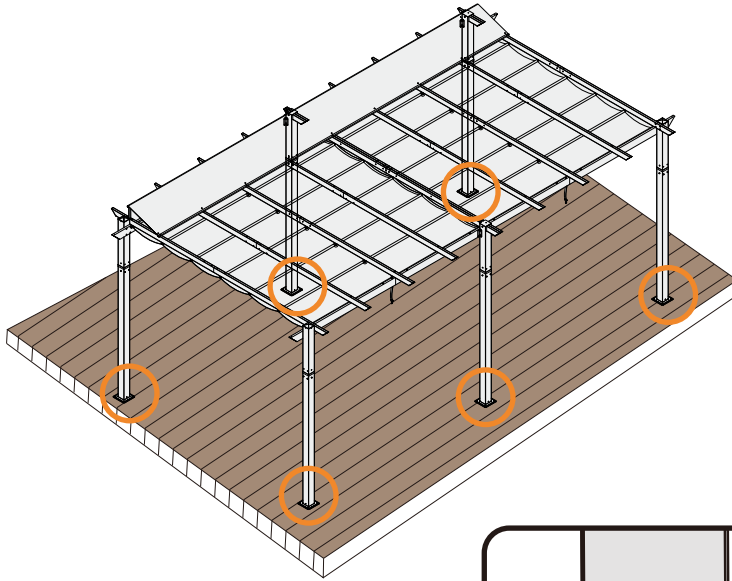

If the deck is hard wood and the depth of it is over 3 inch, you can use **5/16 in. x4 in. Structural Wood Screw** to mount the gazebo.

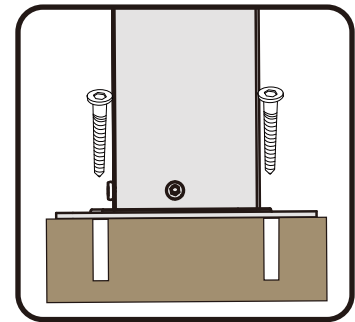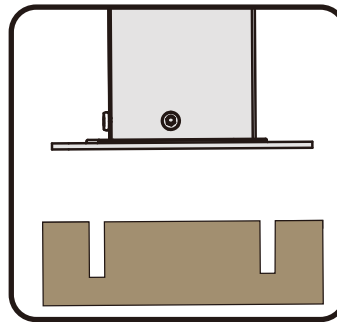


2

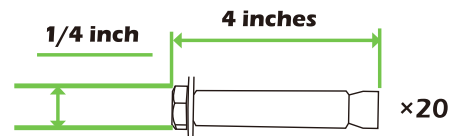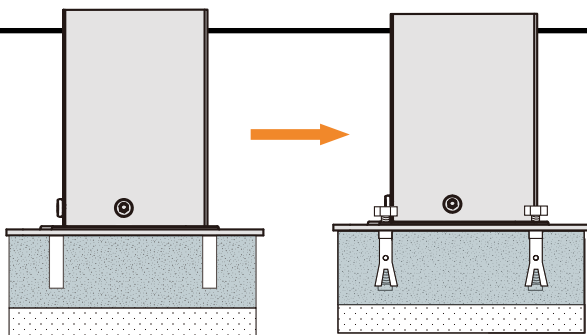

If the ground is concreted and the depth of it is over 3 inch, you can use 1/4 inch expansion bolts to mount the gazebo


3



















Or you can make a concrete footing for gazebo, **15x15x15 inches** is recommended. use expansion bolts to mount the gazebo like ② shows.




IMPORTANT:
Anchor is not recommended

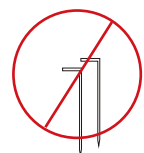


	<p>L=90x90x1760mm</p>  <p>(A) 6x Pole</p>	<p>L=90x90x720mm</p>  <p>(A1) 2x Pole Connector</p>
	<p>L=90x90x720mm</p>  <p>(A2) 2x Pole Connector</p>	<p>L=90x90x722mm</p>  <p>(A3) 2x Pole Connector</p>
	<p>L=100x25x1630mm</p>  <p>(C) 1x Beam</p>	<p>L=100x25x1350mm</p>  <p>(C1) 1x Beam</p>
	<p>L=100x25x1350mm</p>  <p>(C2) 1x Beam</p>	<p>L=100x25x1630mm</p>  <p>(C3) 1x Beam</p>
	<p>L=100x25x1630mm</p>  <p>(D) 1x Beam</p>	<p>L=100x25x1350mm</p>  <p>(D1) 1x Beam</p>
	<p>L=100x25x1350mm</p>  <p>(D2) 1x Beam</p>	<p>L=100x25x1630mm</p>  <p>(D3) 1x Beam</p>
	<p>L=70x27x1755mm</p>  <p>(E) 1x Crossbeam</p>	<p>L=70x27x1750mm</p>  <p>(E1) 1x Crossbeam</p>
	<p>L=70x27x1755mm</p>  <p>(E2) 1x Crossbeam</p>	<p>L=70x27x1750mm</p>  <p>(E3) 1x Crossbeam</p>
2		

L=70x27x1755mm




(F) 1x Crossbeam

L=70x27x1750mm




(F1) 1x Crossbeam

L=70x27x1755mm




(F2) 1x Crossbeam

L=70x27x1750mm




(F3) 1x Crossbeam

L=70x27x1755mm




(G) 2x Crossbeam

L=70x27x1750mm




(G1) 2x Crossbeam

L=70x25x1755mm



(H) 4x Crossbeam

L=70x25x1750mm




(H1) 4x Crossbeam

L=Ø16x1385mm




(J) 2x Canopy Bar

L=Ø16x1400mm




(J1) 1x Canopy Bar

L=Ø16x1400mm



(J2) 1x Canopy Bar

L=Ø16x1400mm



(J3) 1x Canopy Bar

L=Ø16x1400mm



(J4) 1x Canopy Bar

L=Ø16x1385mm



(J5) 2x Canopy Bar

L=20x10x1390mm




























(K) 2x Canopy Bar


L=20x10x1390mm










(K1) 1x Canopy Bar

Part list
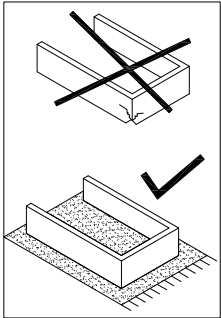
<div>L=20x10x1410mm</div> <div></div> <div>(K2) 1x Canopy Bar</div>	<div>L=Ø19x1360mm</div> <div></div> <div>(L) 12x Canopy Bar</div>		
<div>L=Ø19x1360mm</div> <div></div> <div>(L1) 12x Canopy Bar</div>	<div></div> <div>(B) 6x Plate</div>	<div></div> <div>(M) 4x Solidifying Bar</div>	
<div></div> <div>(M1) 2x Solidifying Bar</div>	<div></div> <div>(N) 1x Joint Cover</div>	<div></div> <div>(N1) 1x Joint Cover</div>	<div></div> <div>(P) 5x Canopy support stand</div>
<div></div> <div>(Q) 4x Bracket</div>	<div></div> <div>(R) 2x Rope</div>	<div></div> <div>(S) 2x Pulley Hook</div>	<div></div> <div>(S1) 10x Pulley Hook</div>
<div></div> <div>(S2) 24x Pulley Hook</div>	<div></div> <div>(T) 32x Screw Cap</div>	<div></div> <div>(U) 2x Canopy</div>	<div></div> <div>(U1) 1x Small canopy</div>
<div></div> <div>(V) 12x Anchor Stakes</div>	<div></div> <div>M6x16</div> <div>(1) 175x</div>	<div></div> <div>M6x20</div> <div>(2) 32x</div>	<div></div> <div>M6x28</div> <div>(3) 14x</div>
<div></div> <div>M6x35</div> <div>(4) 8x</div>	<div></div> <div>M6x65</div> <div>(5) 3x</div>	<div></div> <div>M6x85</div> <div>(6) 16x</div>	<div></div> <div>S4</div> <div>(7) 1x</div>

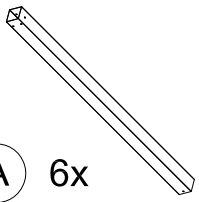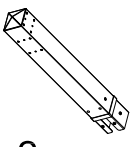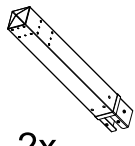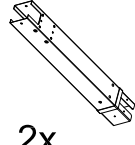


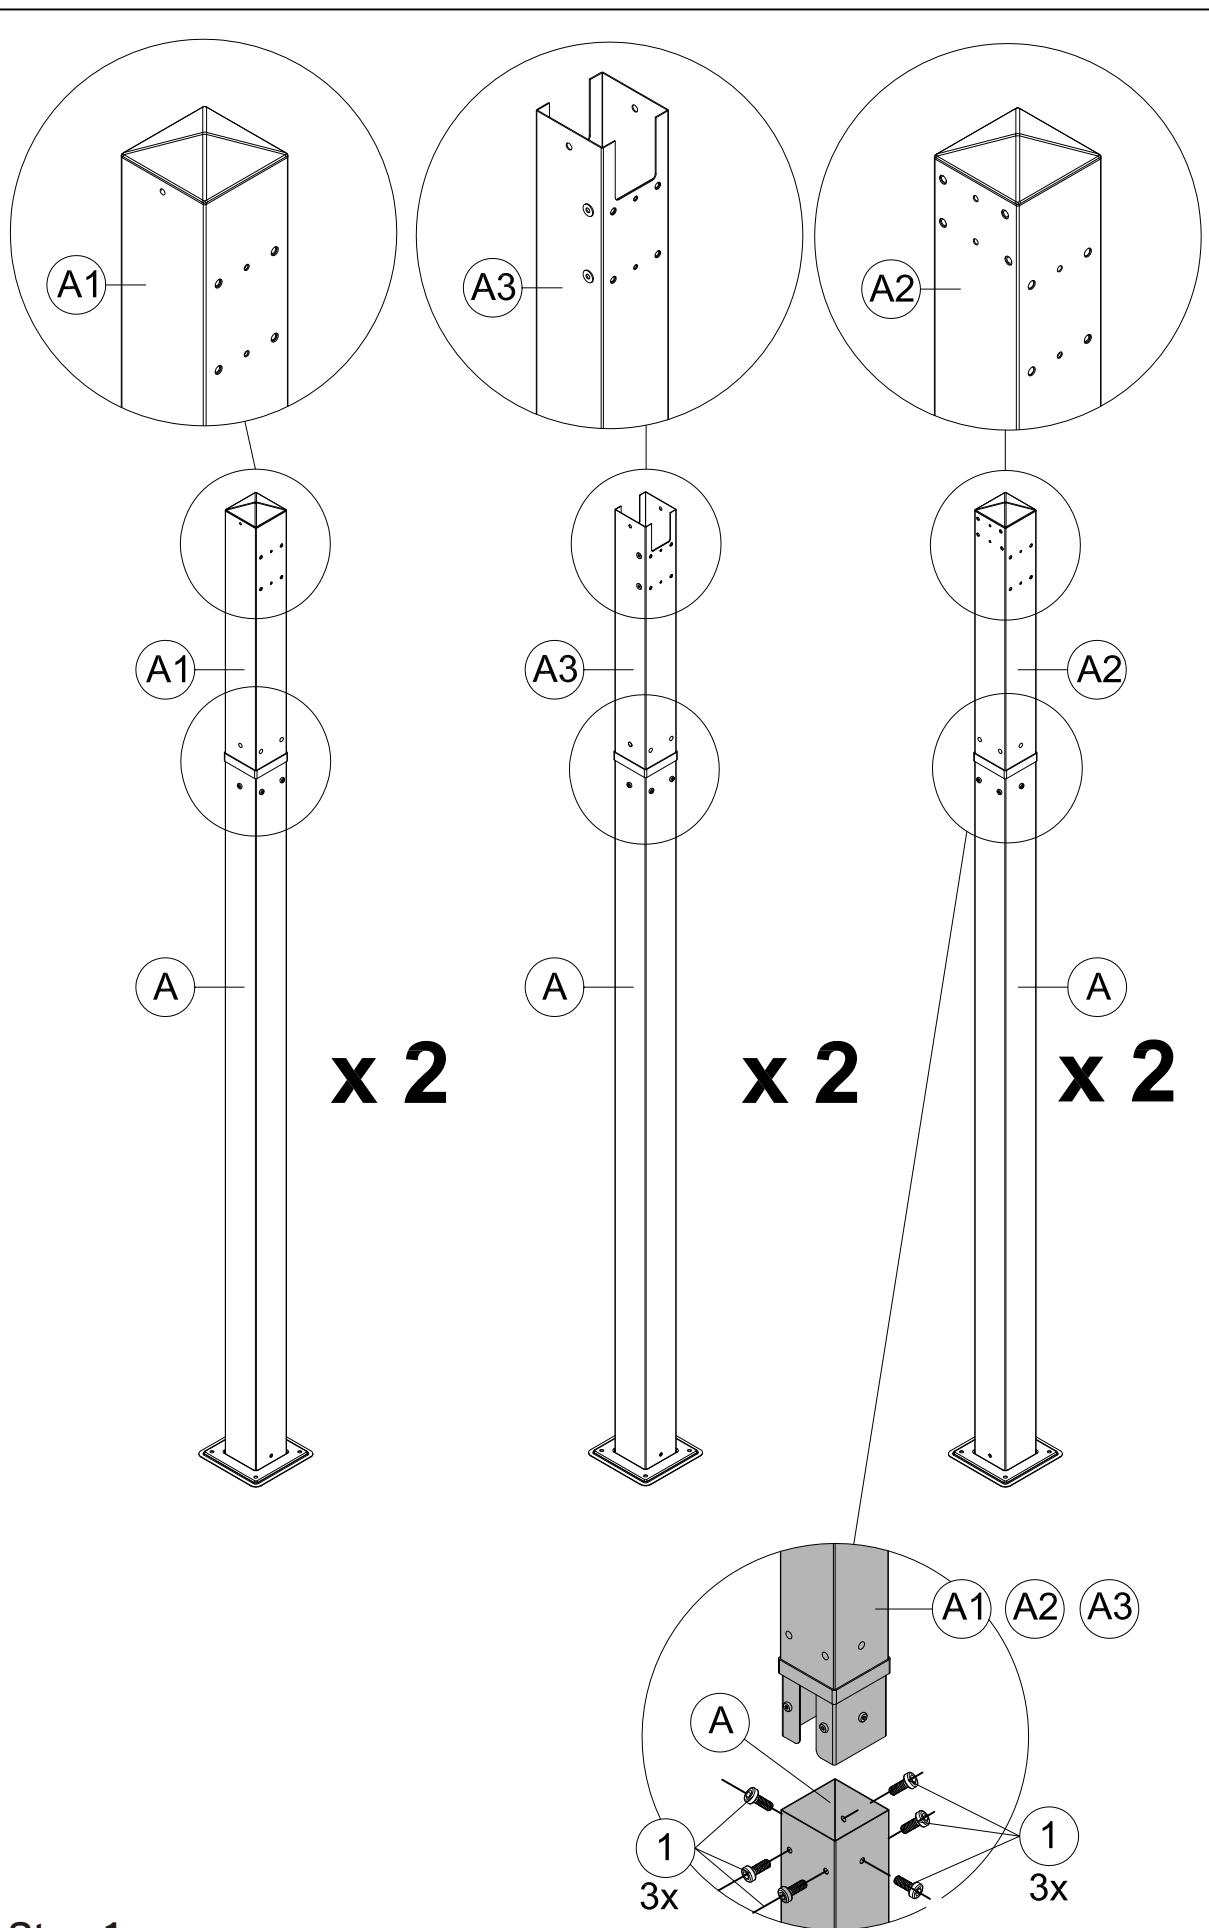


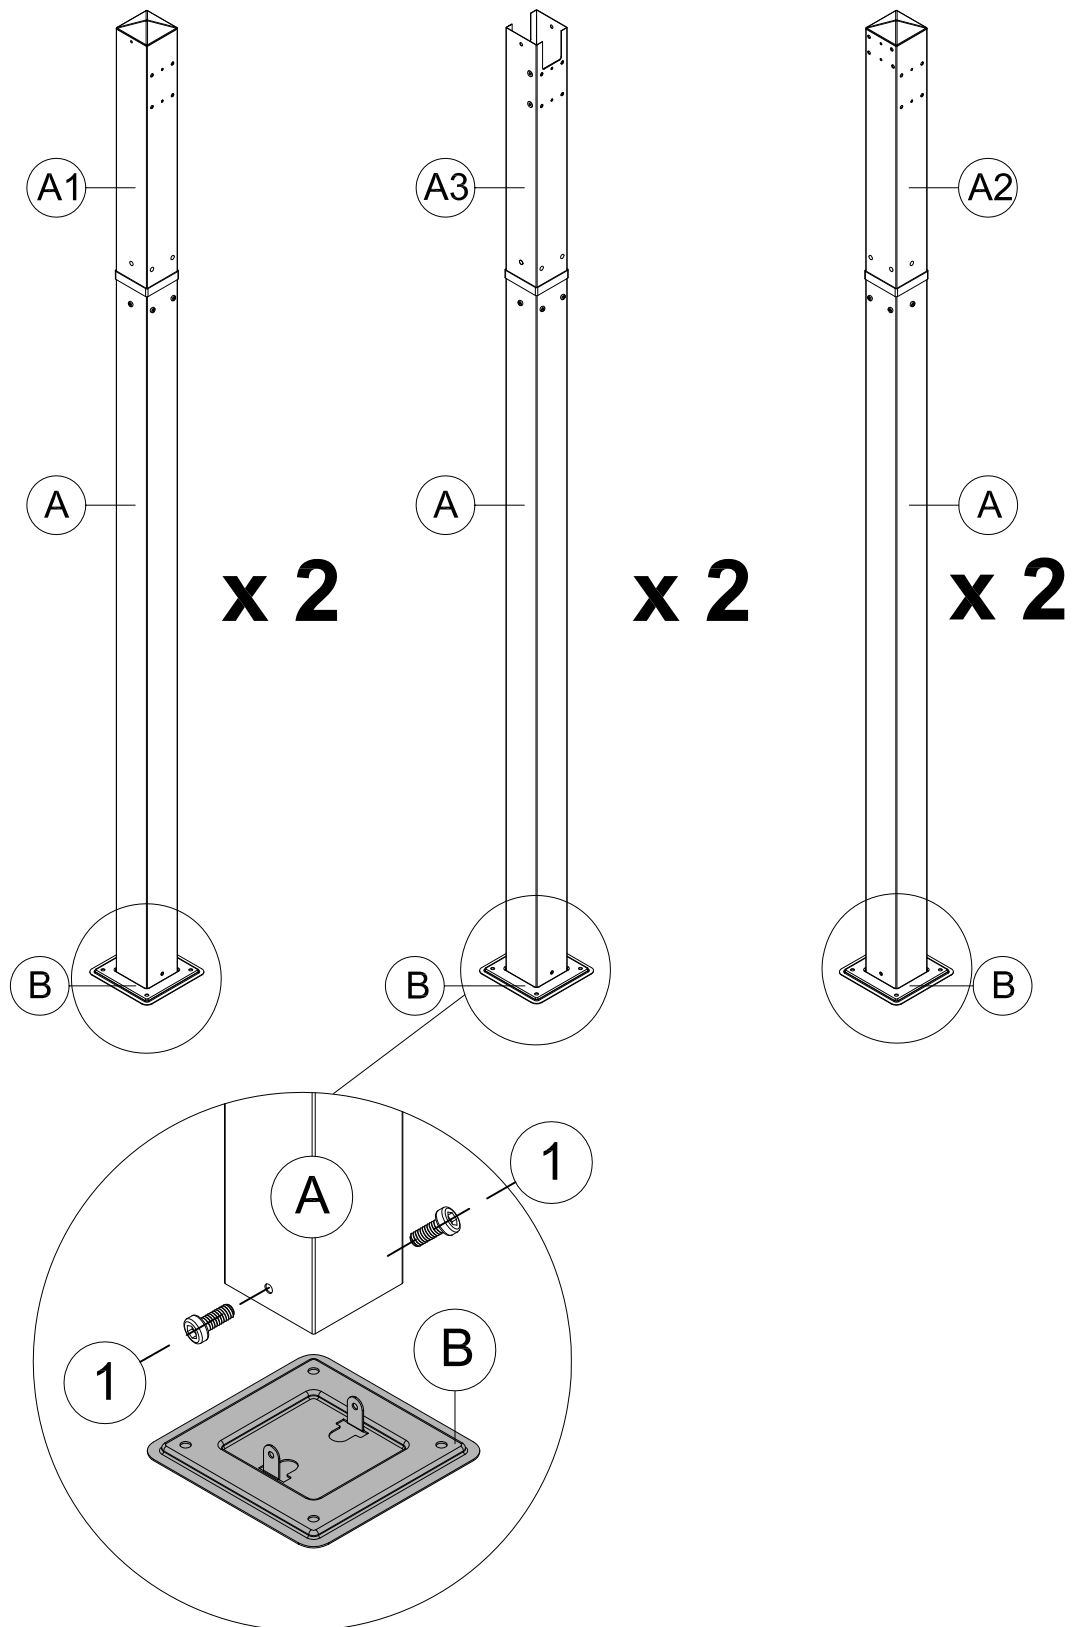
	
A 6x	
	
A1 2x	
	
A2 2x	
	
A3 2x	
	
1 36x M6x16	
	
7 1x S4	
5	



Step 1:

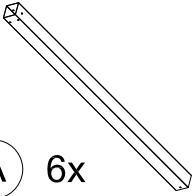
- ① Connect Part #A and Part #A1 (#A2, #A3) with 6 Bolts 1# as shown.
- ② Repeat the above procedures to assemble the other 3 posts.


A 6x

B 6x

1 12x M6x16

7 1x S4

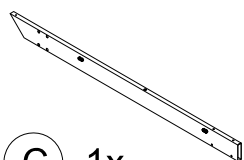


Step 2:


- ① Connect Part #A and Part #B with 2 Bolts 1# as shown.
- ② Repeat the above procedures to assemble the other 5 Plates.



(C) 1x

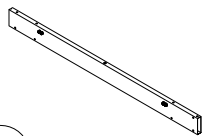

(C1) 1x



(M) 1x




M6x16

(1) 8x








S4

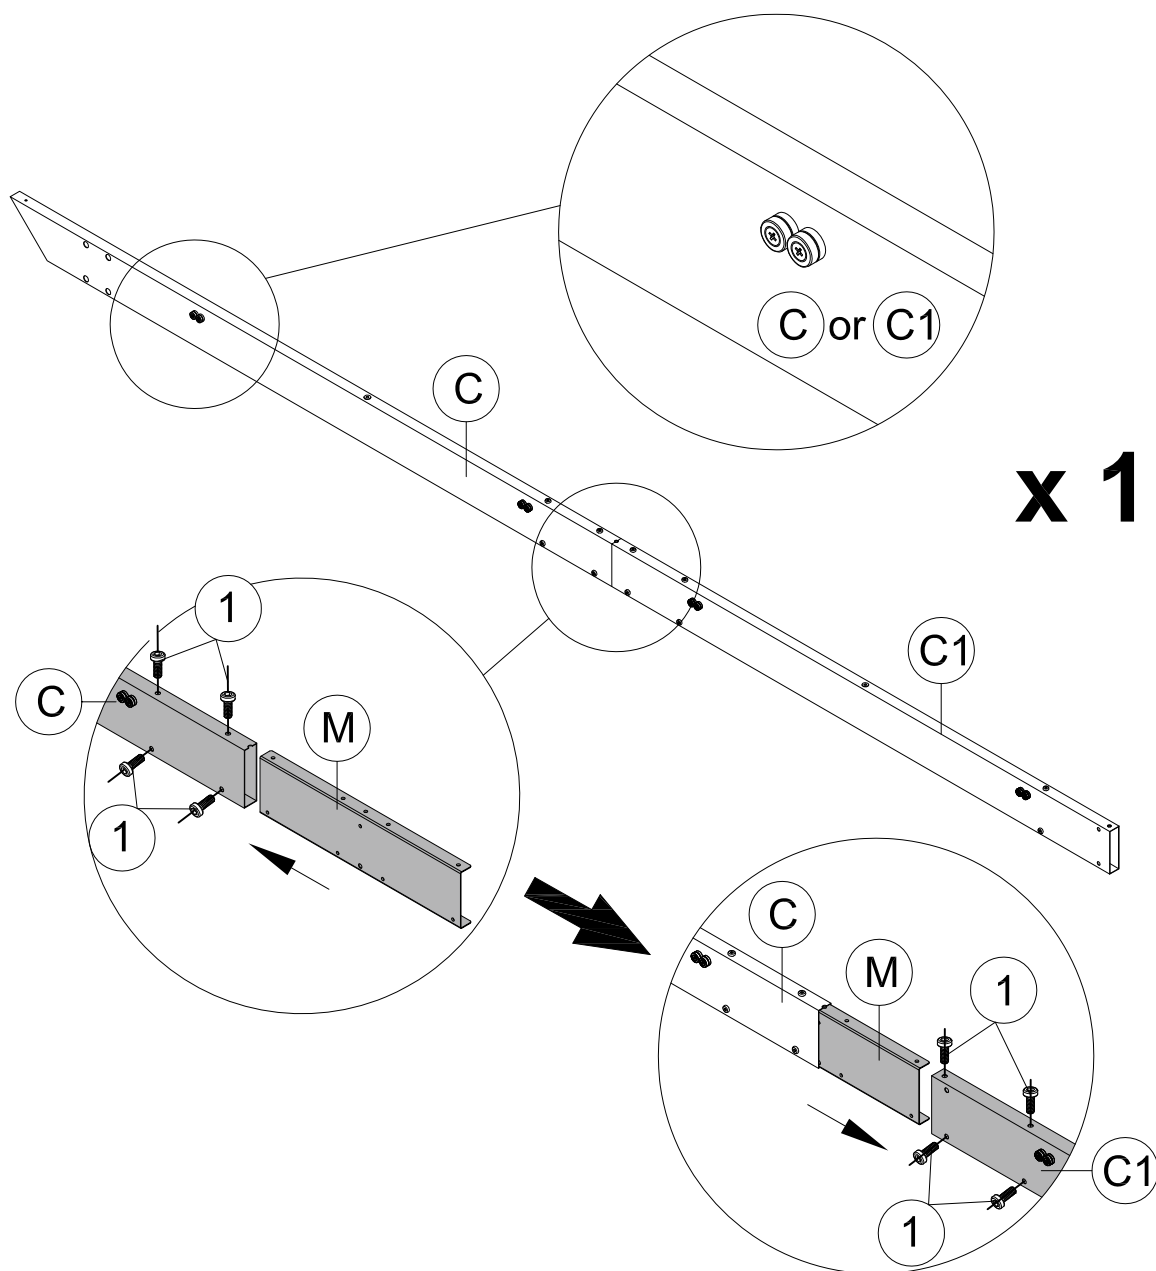
(7) 1x



Step 3:

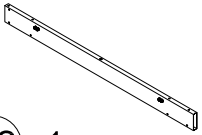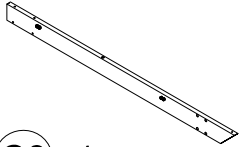
- ① Push #M into Part #C in the direction indicated by the arrow, then Connect Part #M and Part #C with 4 Bolts 1# as shown.
- ② Push M connected with C into C1 in the direction indicated by the arrow, then Connect Part #M and Part #C1 with 4 Bolts 1# as shown.


C2 1x

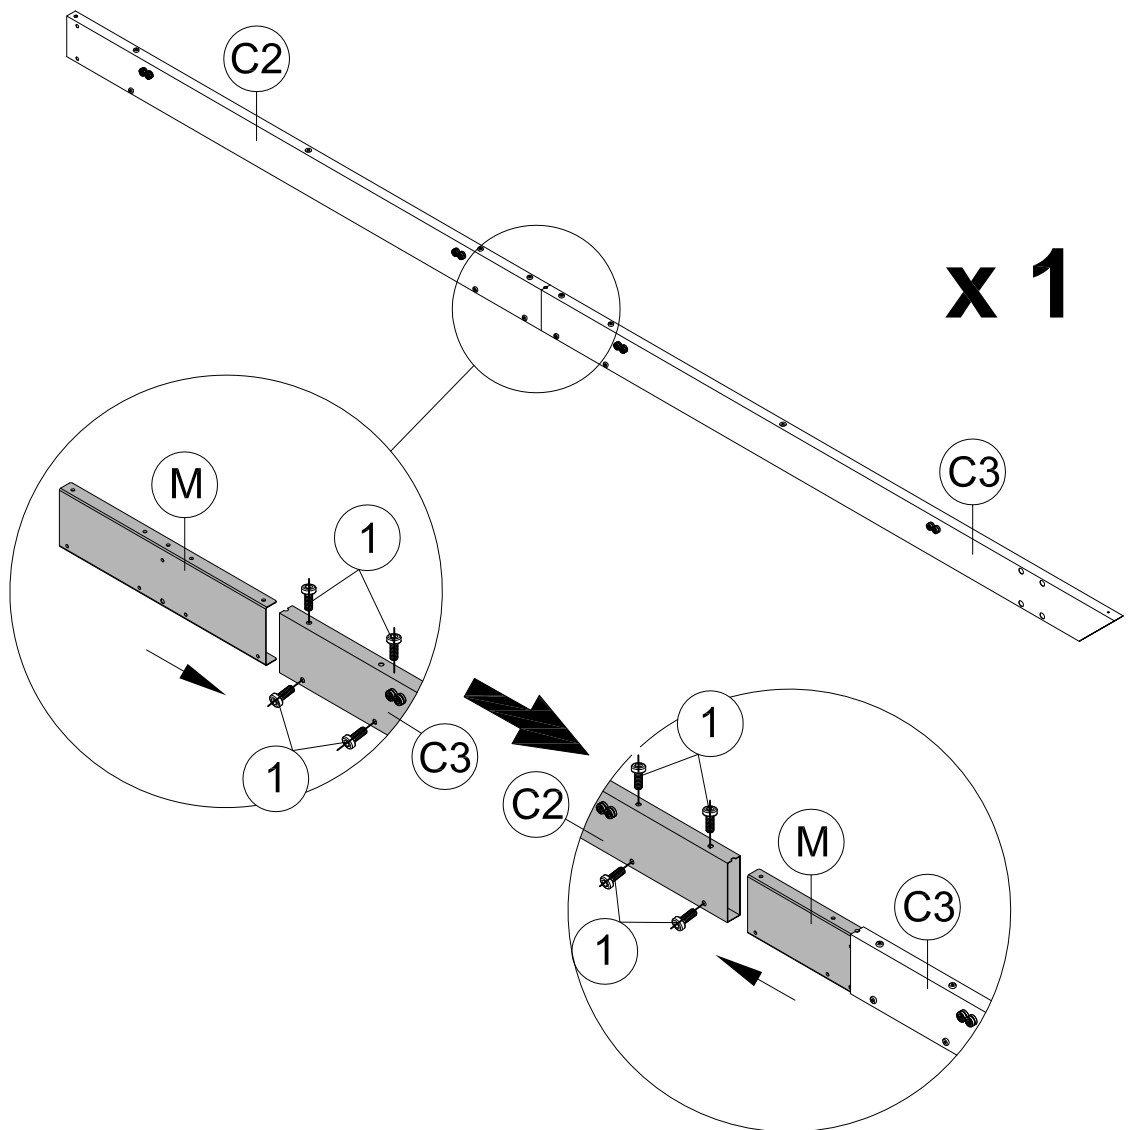C3 1x

M 1x

1 8x M6x16

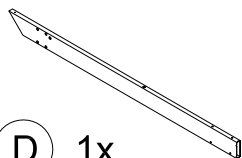7 1x S4




Step 4:


- ① Push #M into Part #C3 in the direction indicated by the arrow, then Connect Part #M and Part #C3 with 4 Bolts 1# as shown.
- ② Push M connected with C3 into C2 in the direction indicated by the arrow, then Connect Part #M and Part #C2 with 4 Bolts 1# as shown.



D 1x

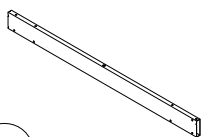

D1 1x



M 1x




M6x16

1 8x








S4

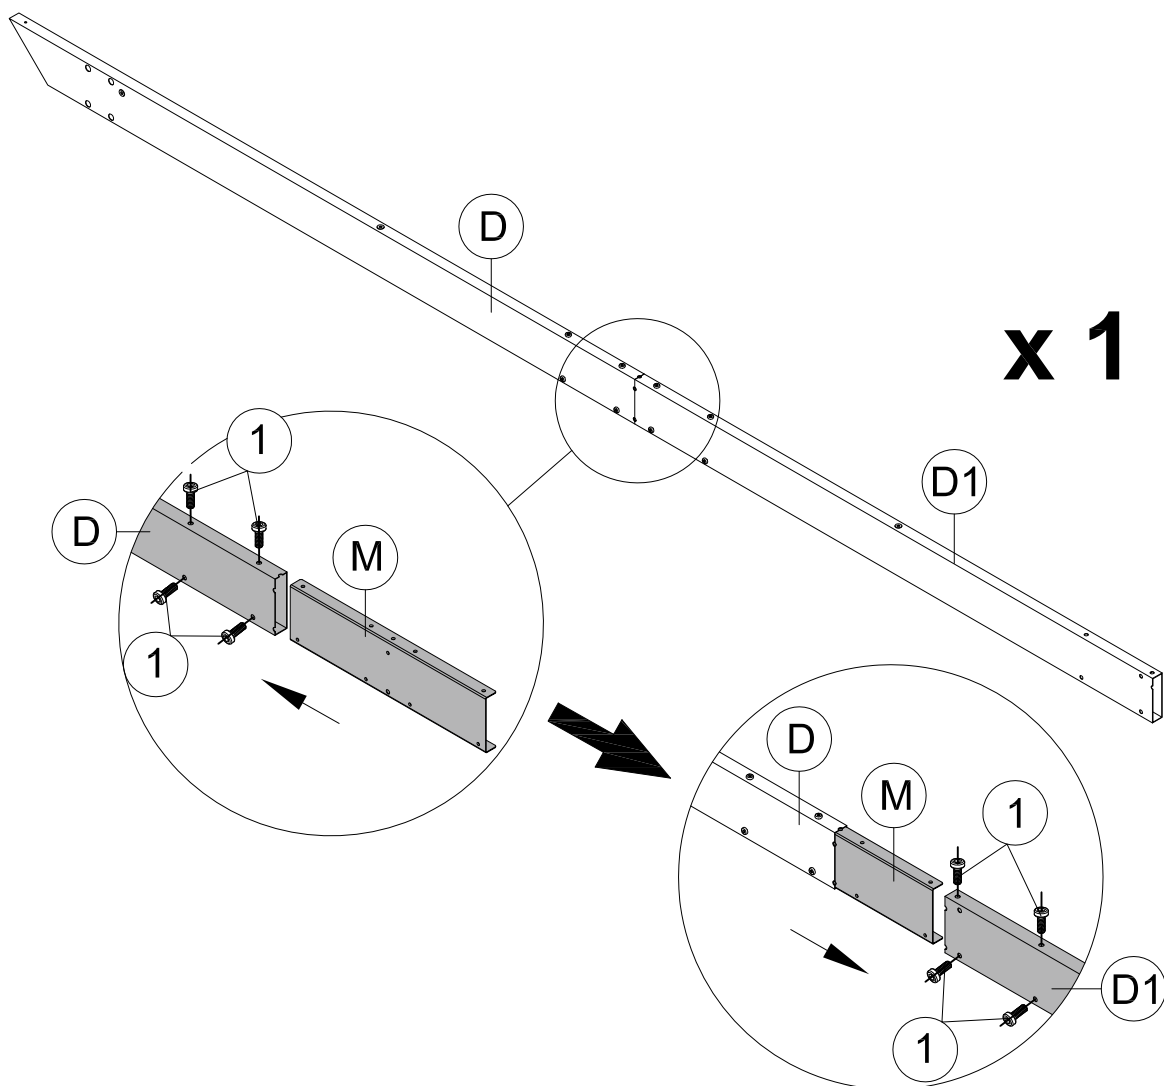
7 1x



Step 5:

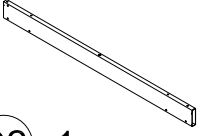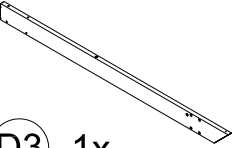
- ① Push #M into Part #D in the direction indicated by the arrow, then Connect Part #M and Part #D with 4 Bolts 1# as shown.
- ② Push M connected with D into D1 in the direction indicated by the arrow, then Connect Part #M and Part #D1 with 4 Bolts 1# as shown.


D2 1x

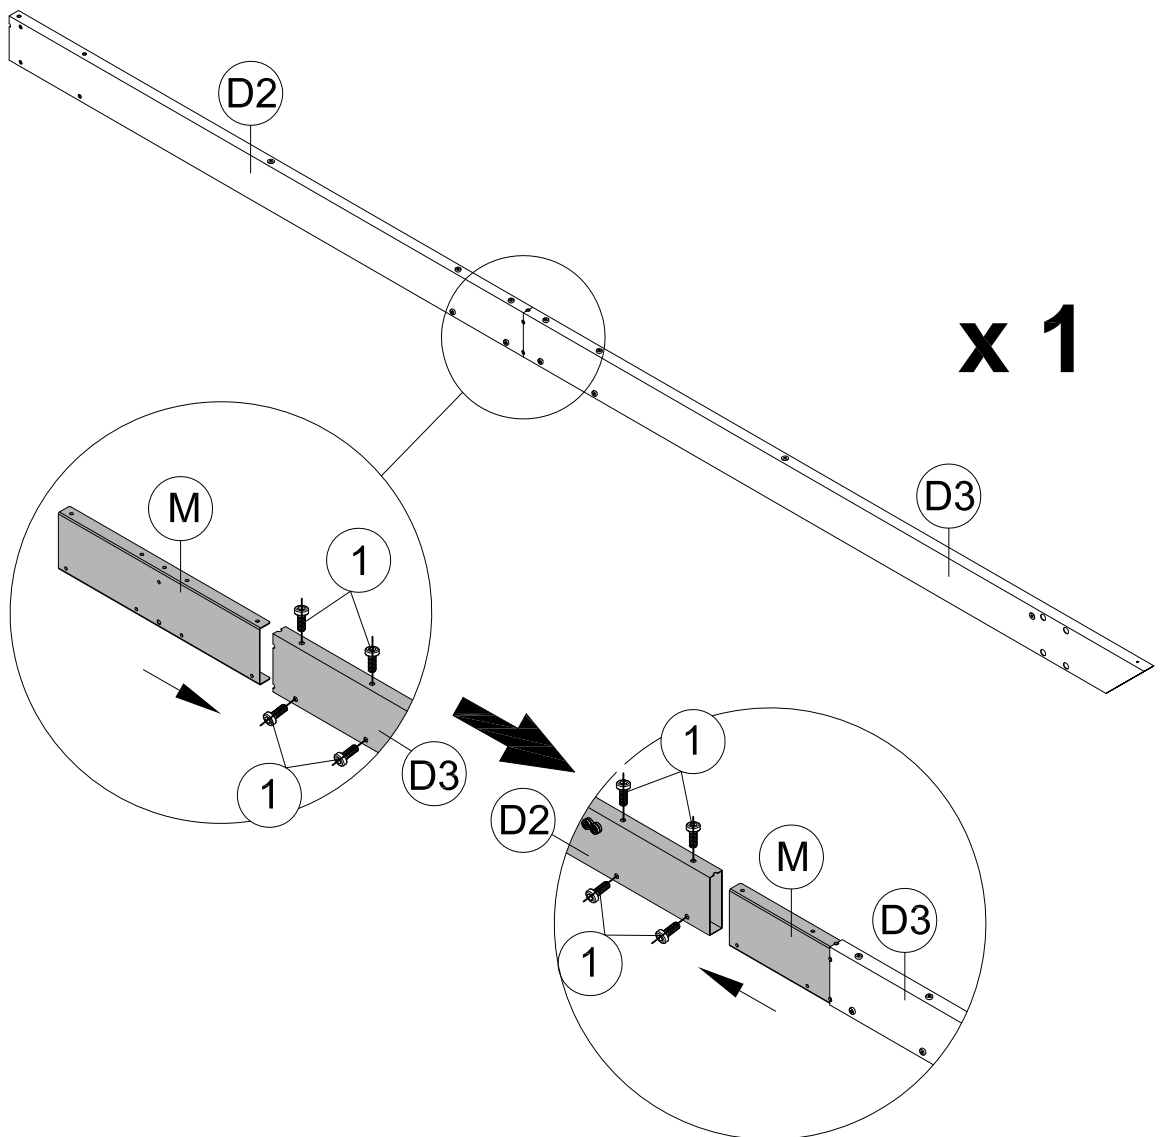D3 1x

M 1x

1 8x M6x16

7 1x S4



Step 6:

- ① Push #M into Part #D3 in the direction indicated by the arrow, then Connect Part #M and Part #D3 with 4 Bolts 1# as shown.
- ② Push M connected with D3 into D2 in the direction indicated by the arrow, then Connect Part #M and Part #D2 with 4 Bolts 1# as shown.



(M1) 1x




M6x16

(1) 4x




S4

(7) 1x

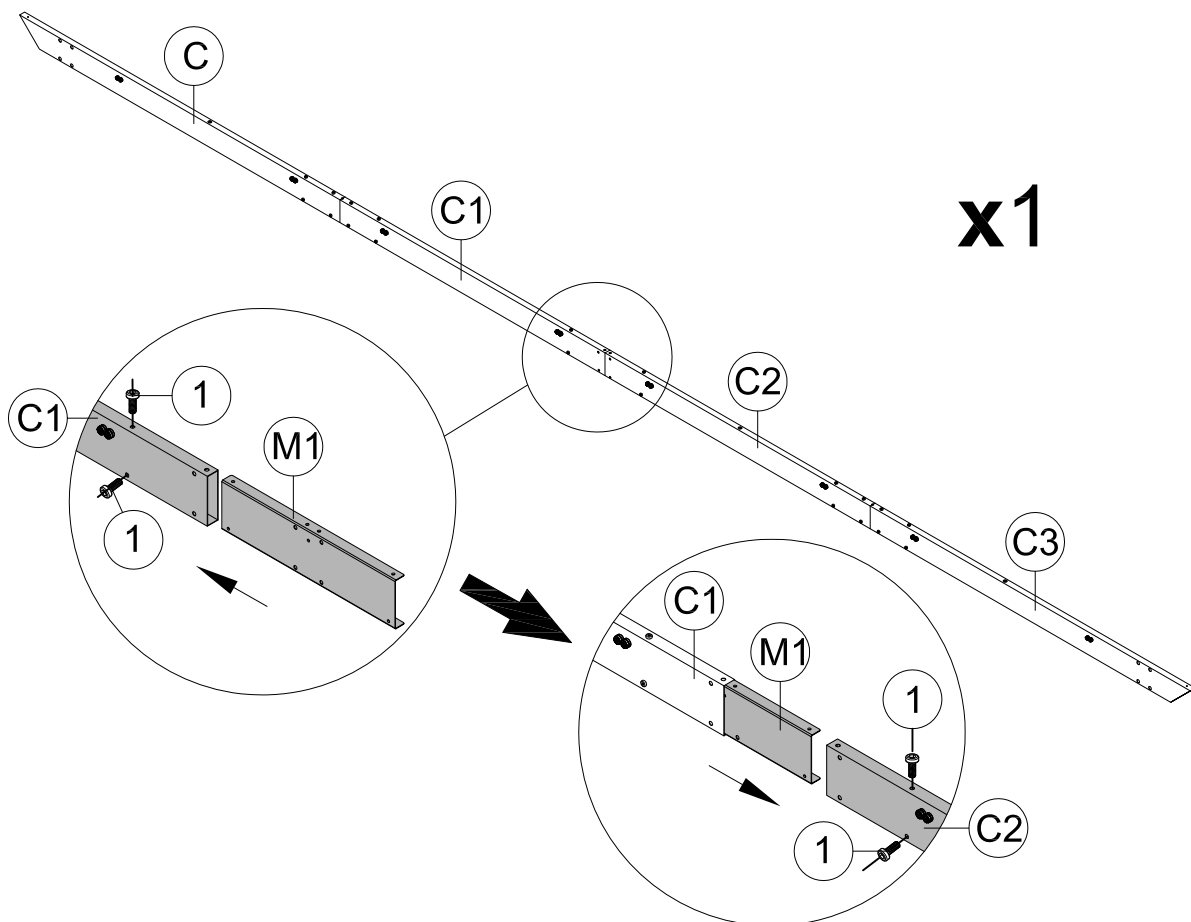

Step 7:

- ① Push #M1 into Part #C1 in the direction indicated by the arrow, then Connect Part #M1 and Part #C1 with 2 Bolts 1# as shown.
- ② Push M1 connected with C1 into C2 in the direction indicated by the arrow, then Connect Part #M1 and Part #C2 with 2 Bolts 1# as shown.



(M1) 1x




M6x16

(1) 4x



S4

(7) 1x

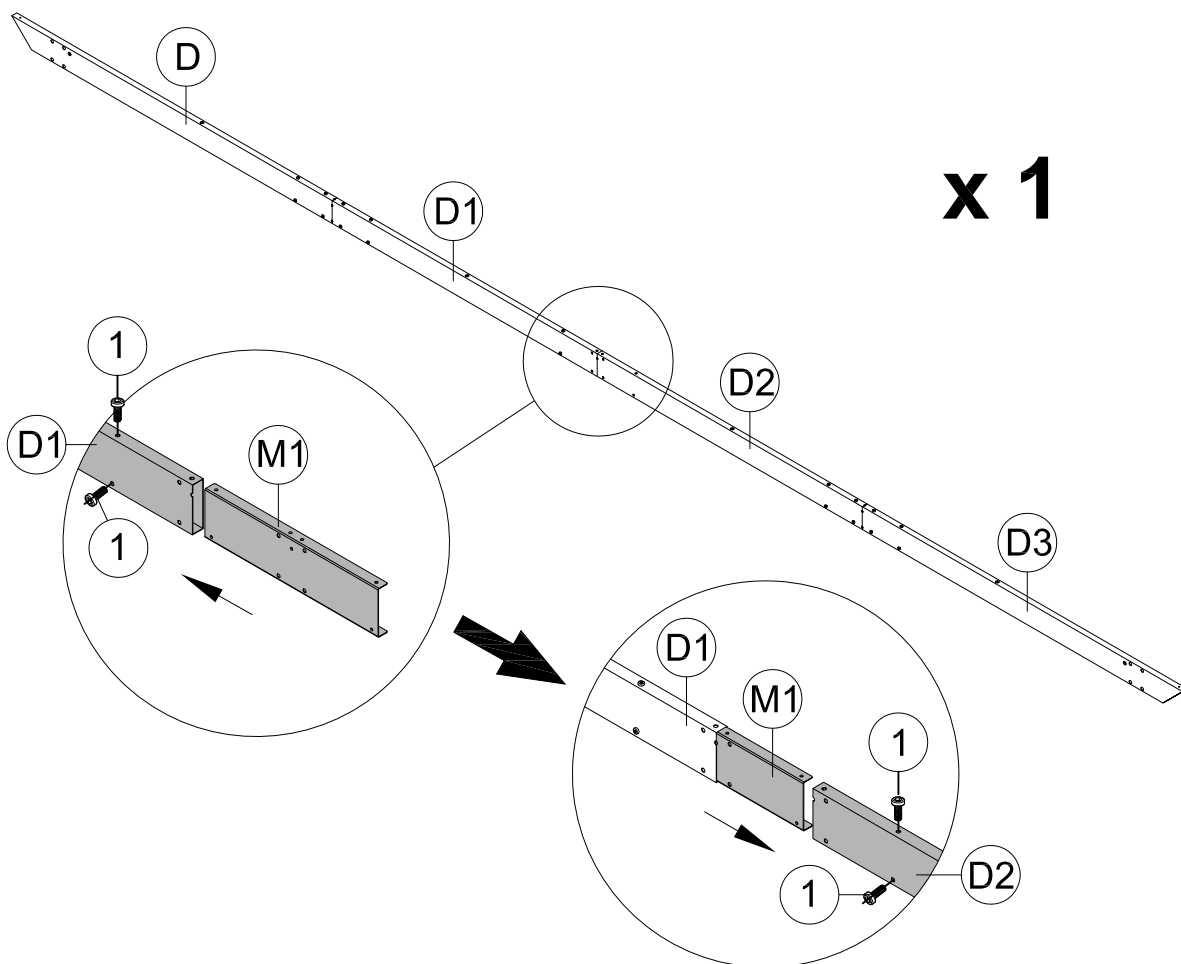


Step 8:

- ① Push #M1 into Part #D1 in the direction indicated by the arrow, then Connect Part #M1 and Part #D1 with 2 Bolts 1# as shown.
- ② Push M1 connected with D1 into D2 in the direction indicated by the arrow, then Connect Part #M1 and Part #D2 with 2 Bolts 1# as shown.



T 16x




M6x20

2 16x



S4


7 1x

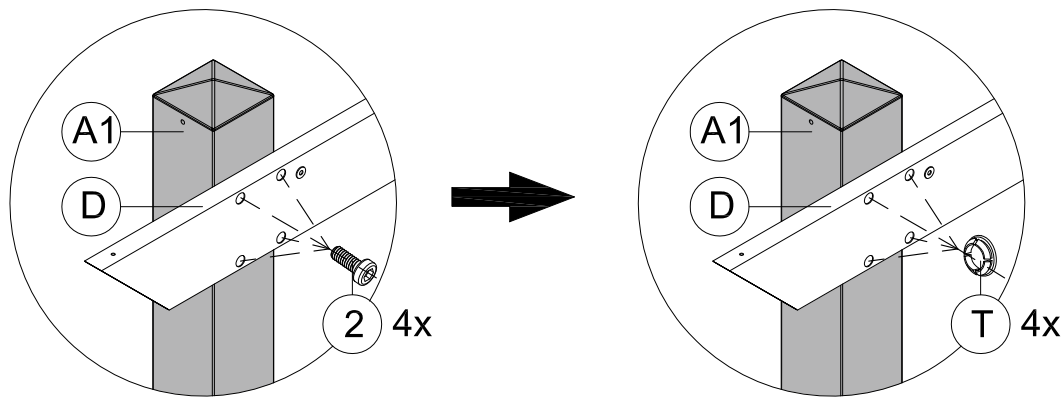

Step 9:

- ① Connect Part #A1(A2) and Part #D(D3/ C/ C3) with 4 Bolt #2 as shown.
- ② Put 4 plastic covers #T on the Bolt #2 as shown.

⚠ Be aware of the connecting position of the poles and beams.

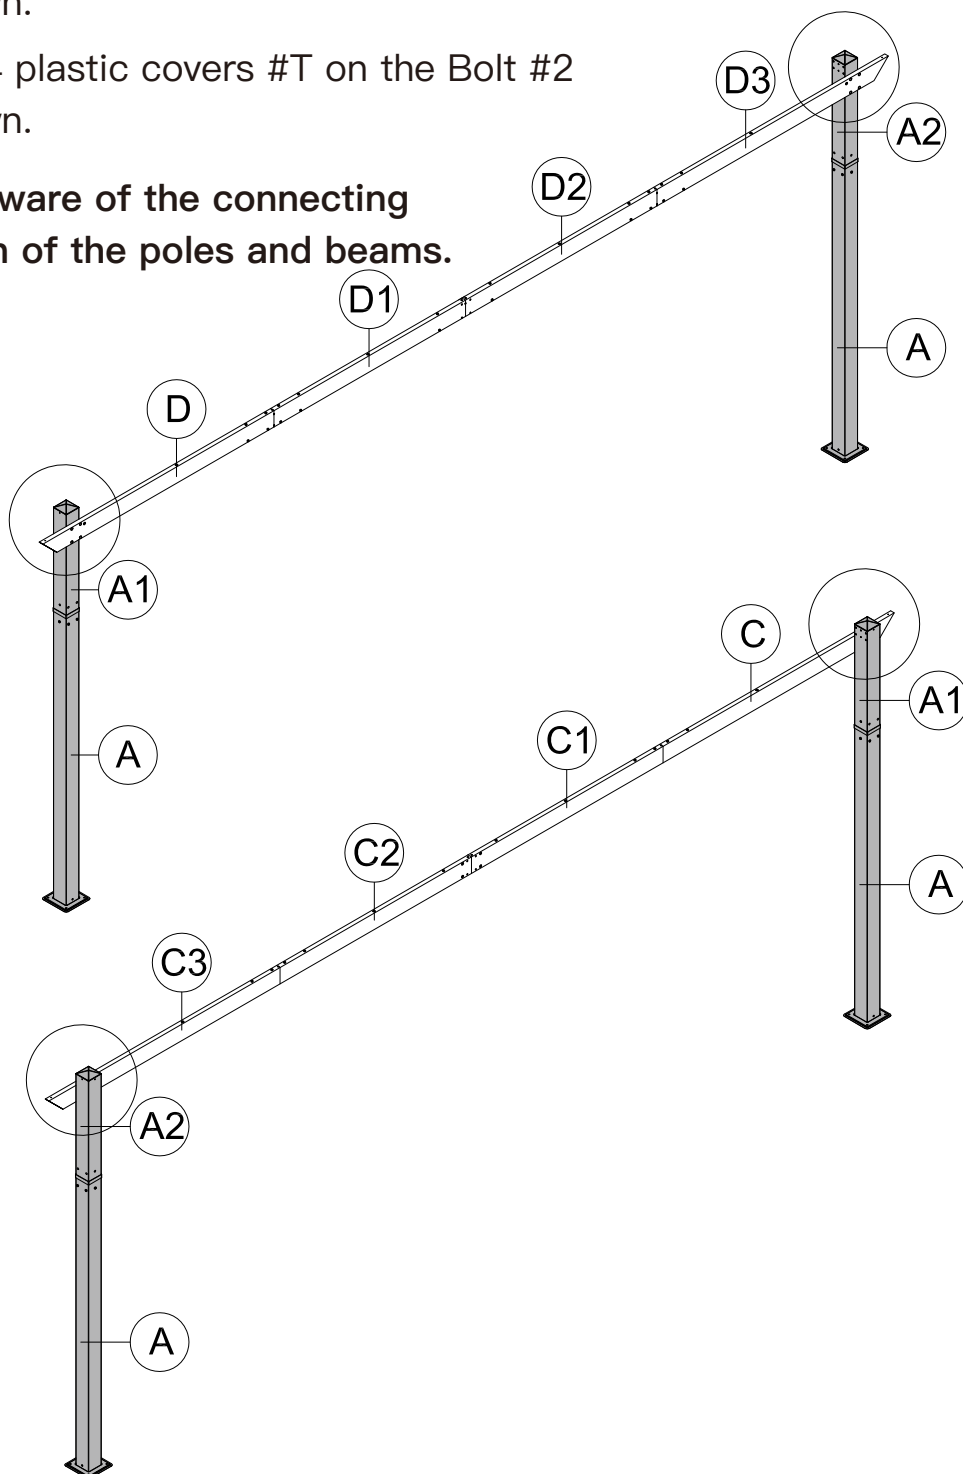




Q 4x



M6x16

1 16x



M6x35

4 8x




S4


7 1x

Step 10:




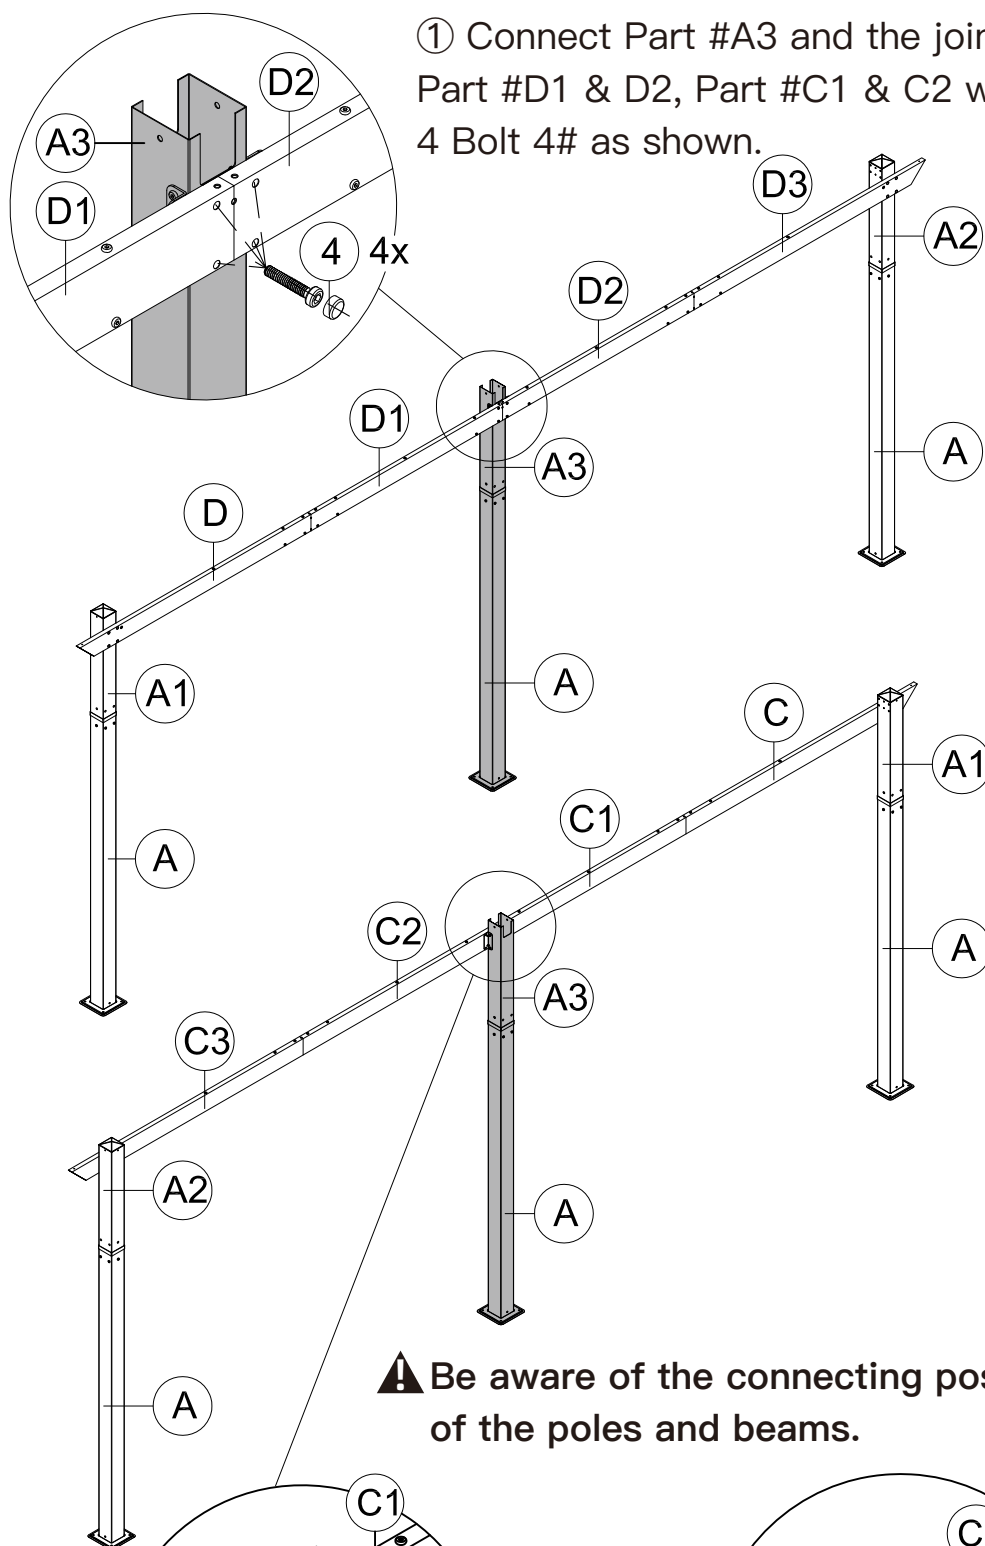



① Connect Part #A3 and the joint of Part #D1 & D2, Part #C1 & C2 with 4 Bolt 4# as shown.

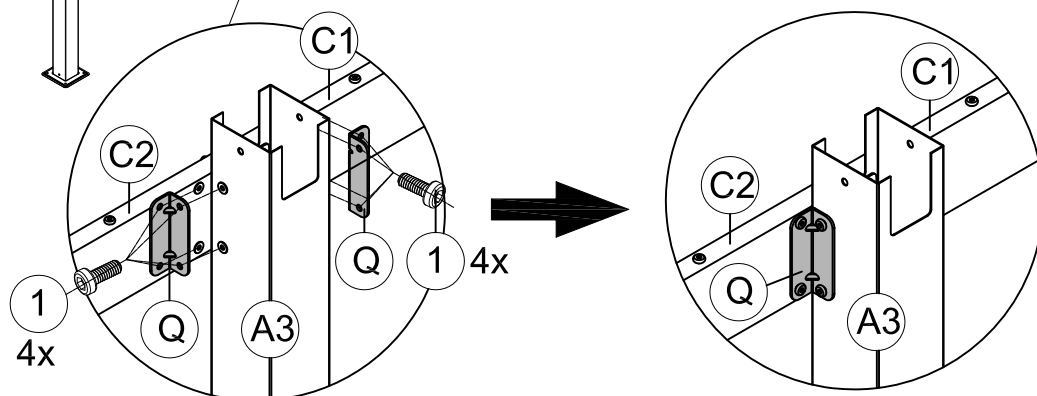

⚠ Be aware of the connecting position of the poles and beams.

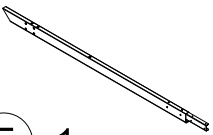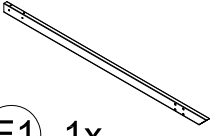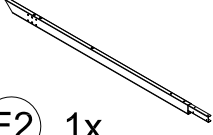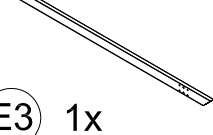


② Place Part Q on Part A3 and Part C2/ C1/ D1/ D2. Secure with 4 Bolt #1 as shown.


E 1x

E1 1x

E2 1x

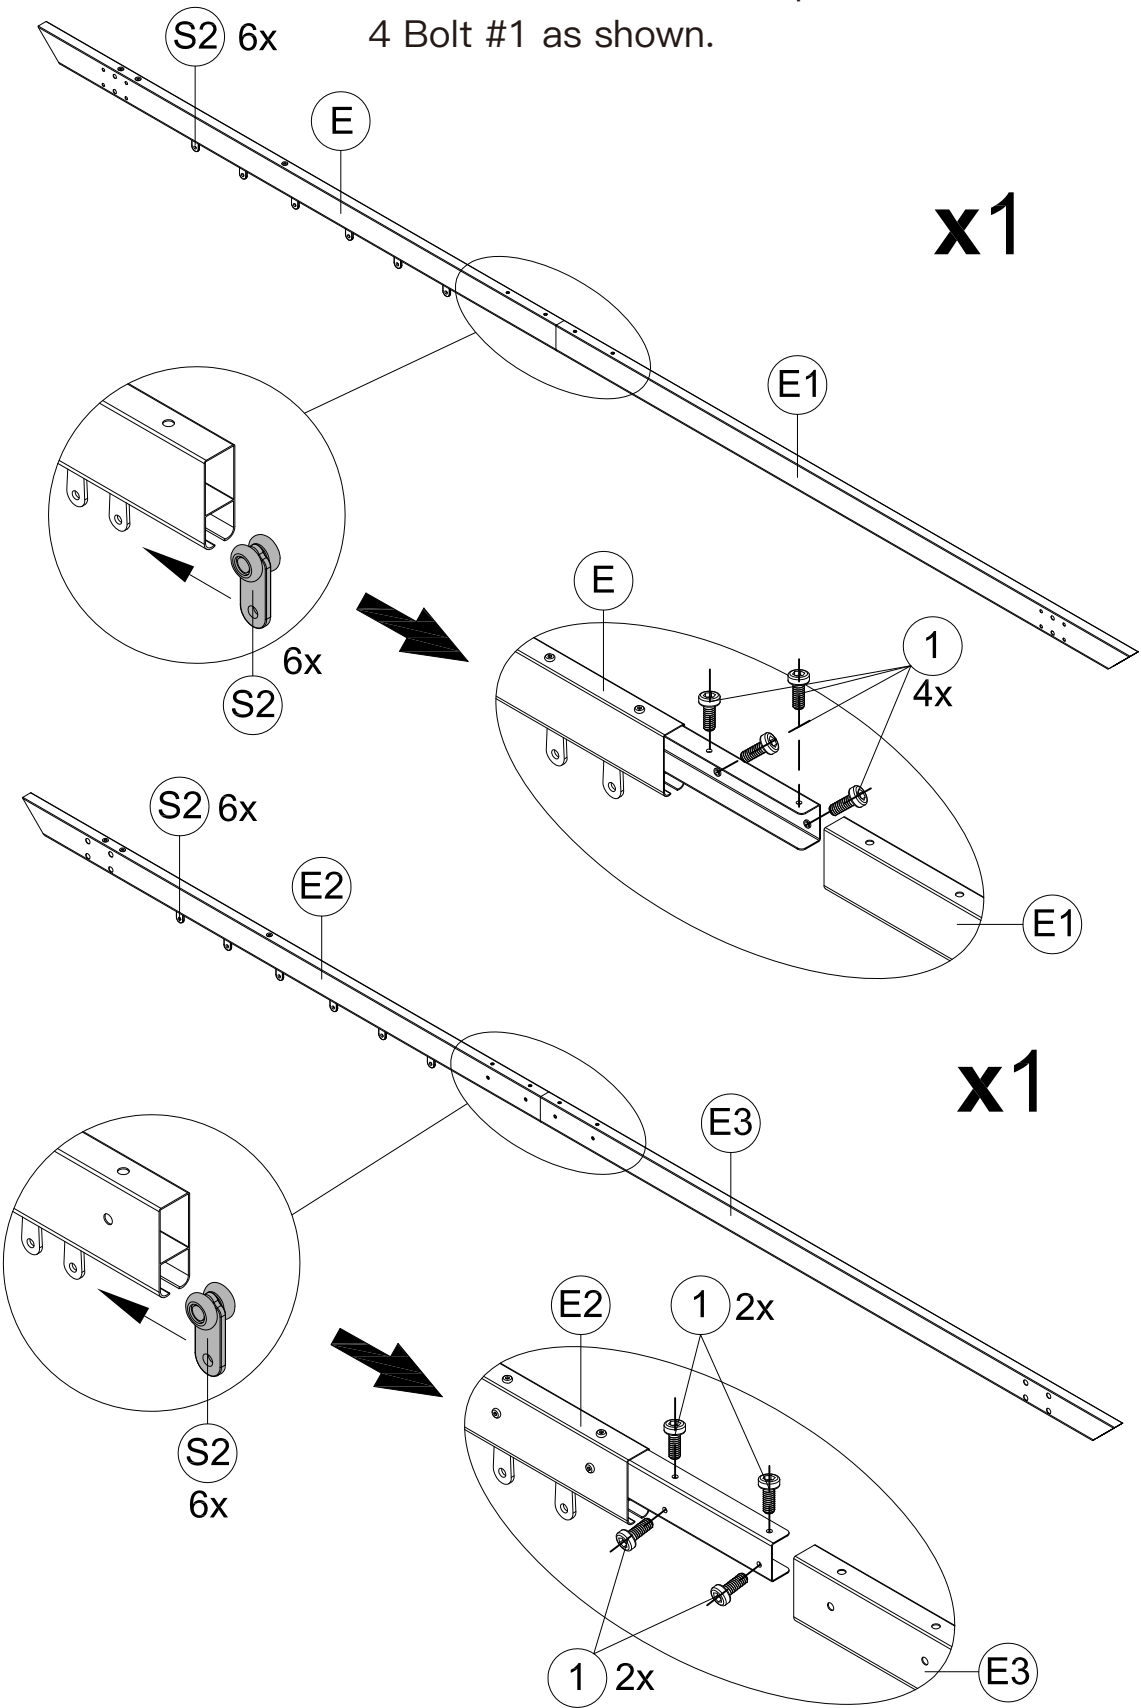E3 1x

S2 12x

1 8x M6x16

7 1x S4
15

Step 11:


- ① Slide 6 Pulleys #S2 into Part #E as shown.
- ② Connect Part #E and part #E1 with 4 Bolt #1 as shown.



- ③ Slide 6 Pulleys #S2 into Part #E2 as shown.
- ④ Connect Part #E2 and Part #E3 with 4 Bolt #1 as shown.



T 16x



M6x20

2 16x




S4








7 1x

Step 12:

① Connect Part #E2(E3/ E/ E1) and Part A2(A1) with 4 Bolt #2 as shown.


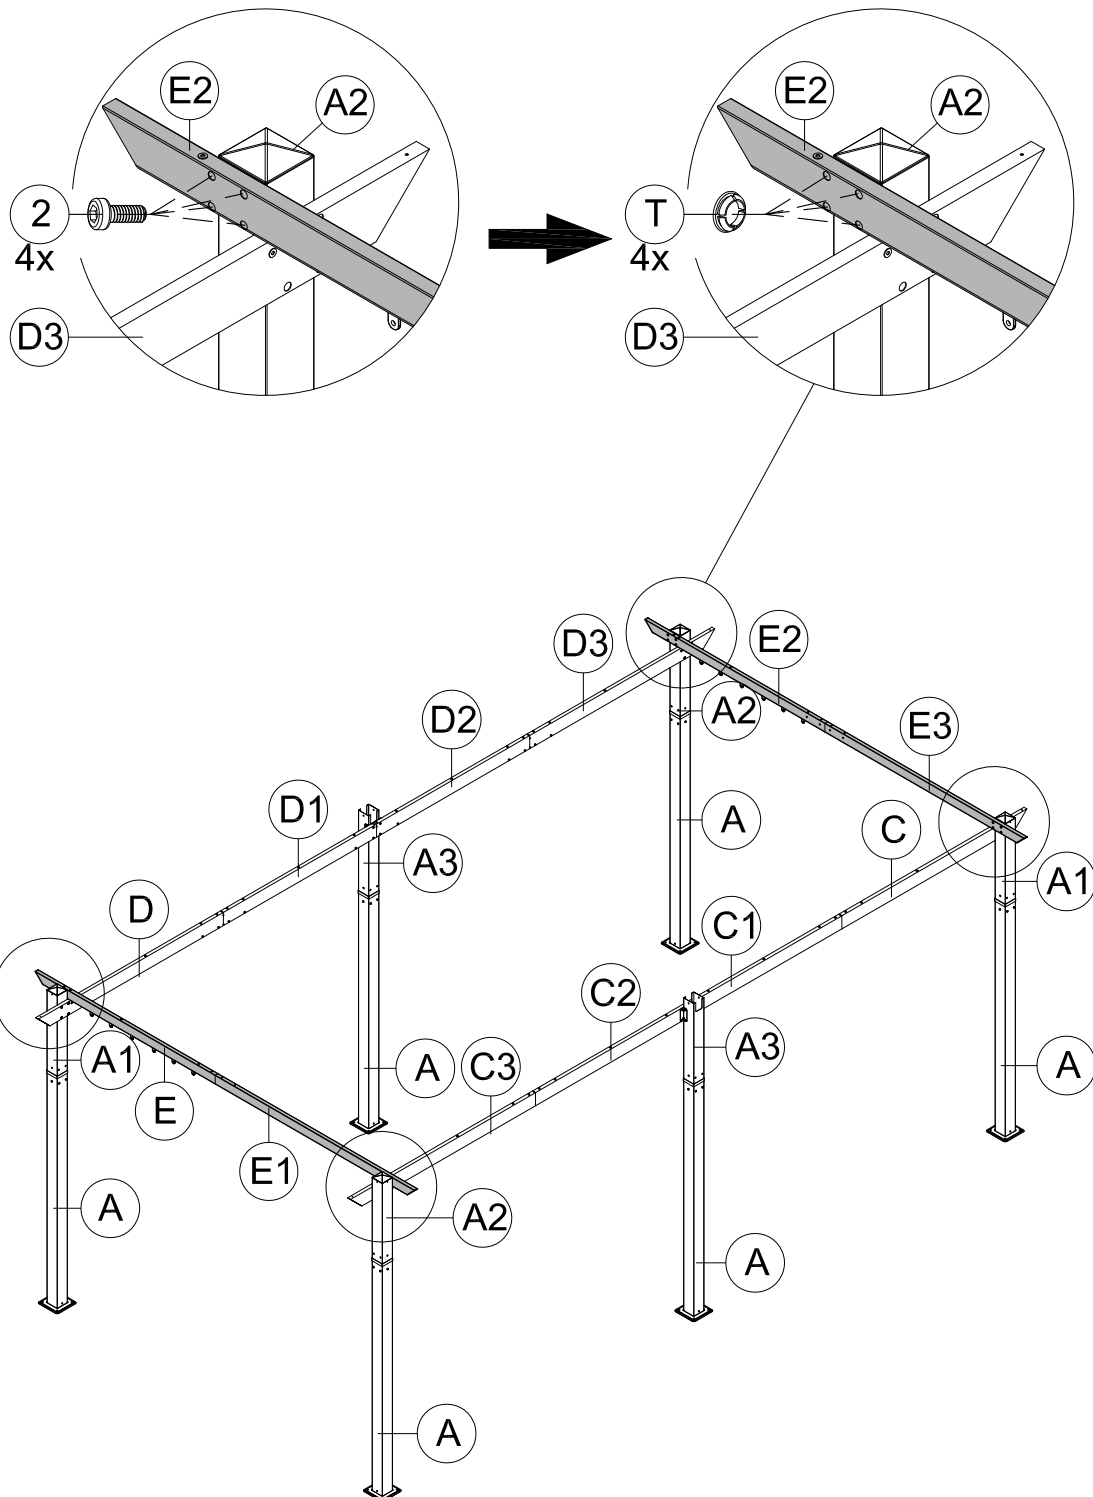
② Put 4 plastic covers #T on the Bolt #2 as shown.

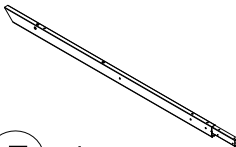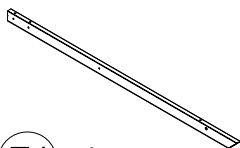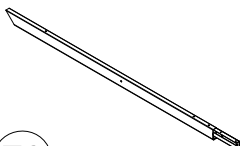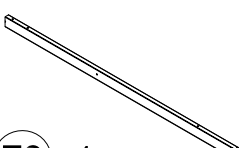


	
F 1x	
	
F1 1x	
	
F2 1x	
	
F3 1x	
	
S2 12x	
 M6x16	
1 8x	
 S4	
7 1x	
17	

Step 13:

- ① Slide 6 Pulleys #S2 into Part #F as shown.
- ② Connect Part #F and part #F1 with 4 Bolt #1 as shown.

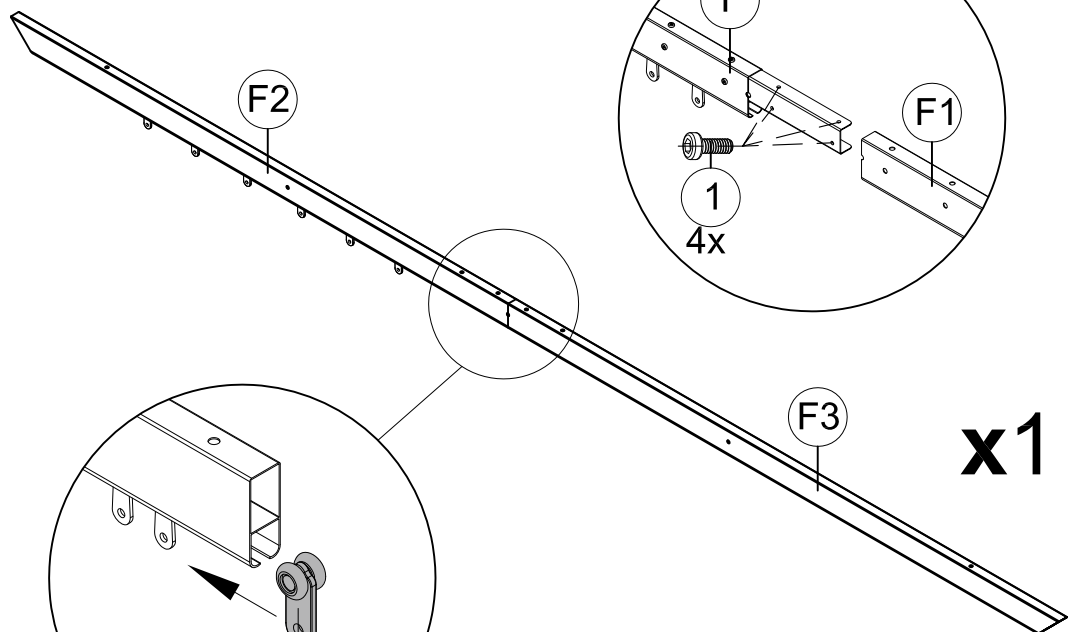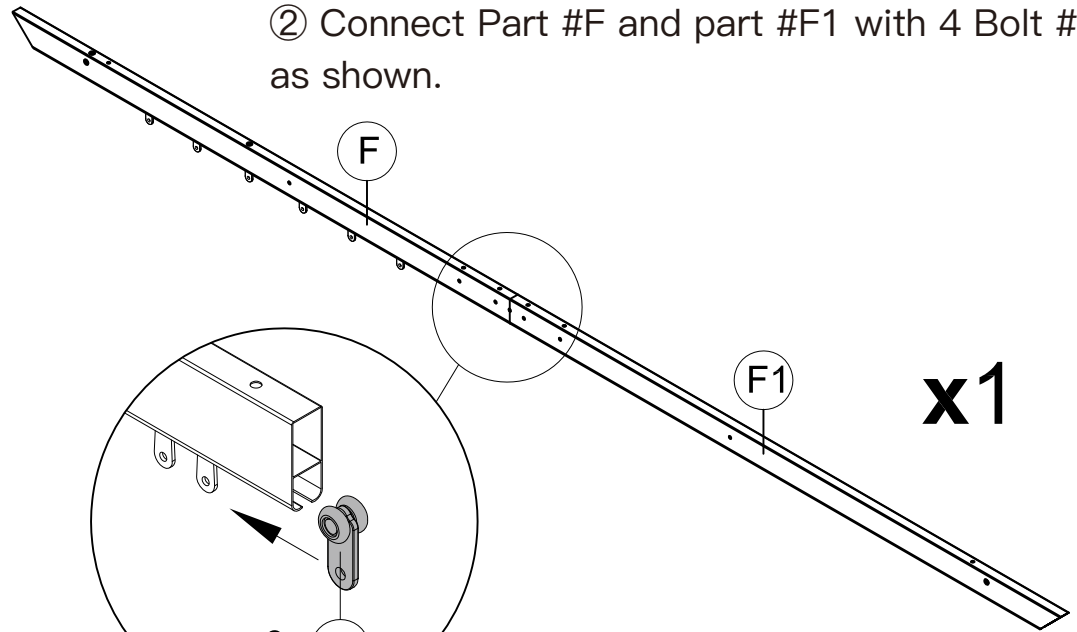

- ③ Slide 6 Pulleys #S2 into Part #F2 as shown.
- ④ Connect Part #F2 and Part #F3 with 4 Bolt #1 as shown.



M6x65


5 3x




7 1x

Step 14:

① Connect the assembled crossbeam #F & F1, #F2 & F3 with 3 Bolts and Nuts #5 as shown.

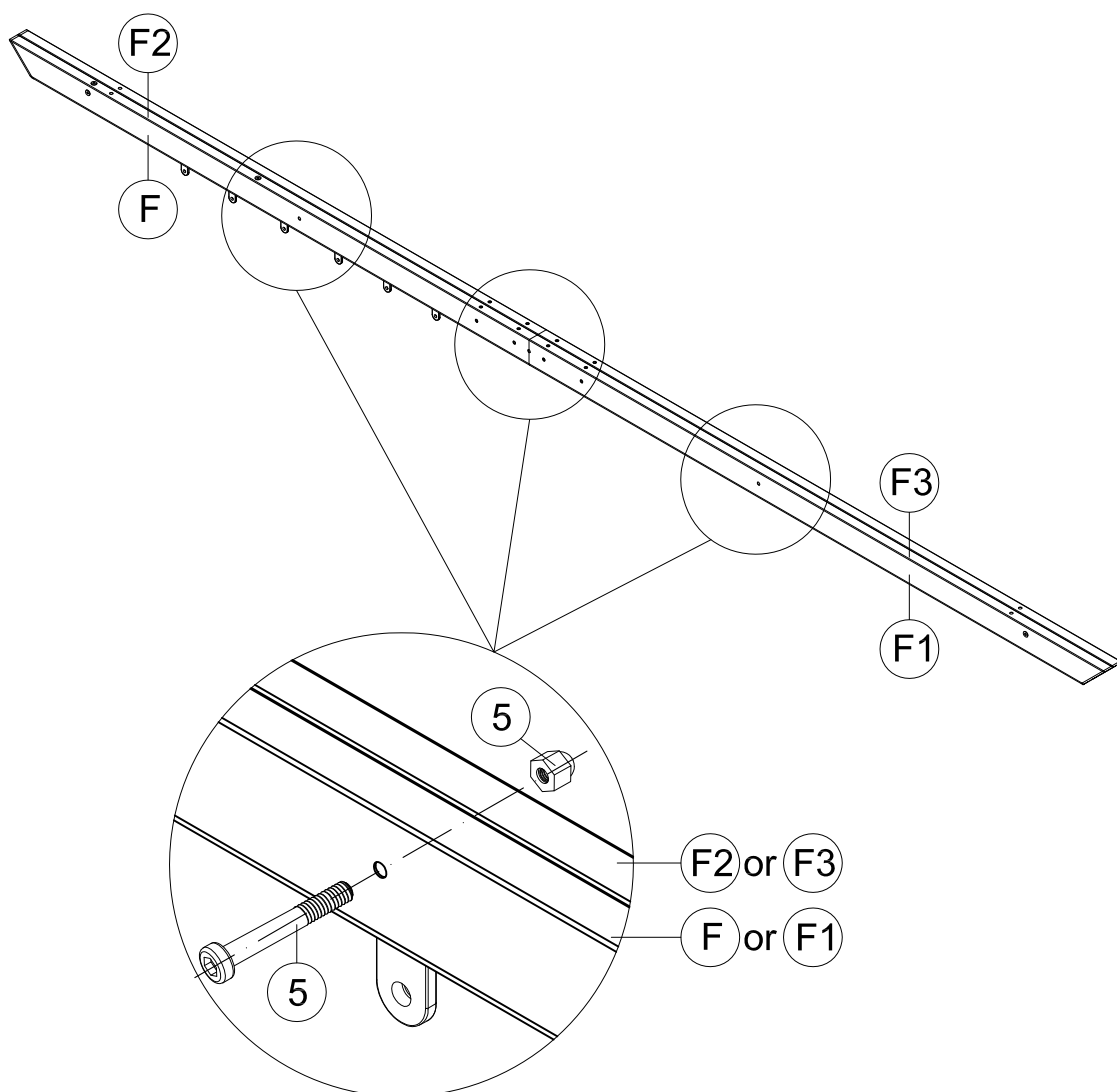



(N) 1x



M6x28

(3) 2x





S4

(7) 1x


Step 15:

- ① Place Part #F & F2 on Part #A3 as shown.
- ② Put Joint Cover #N on Part #F & Part #F2 as shown.
- ③ Connect Part #F & F2 and Part #A3 with 2 Bolt #3 as shown.

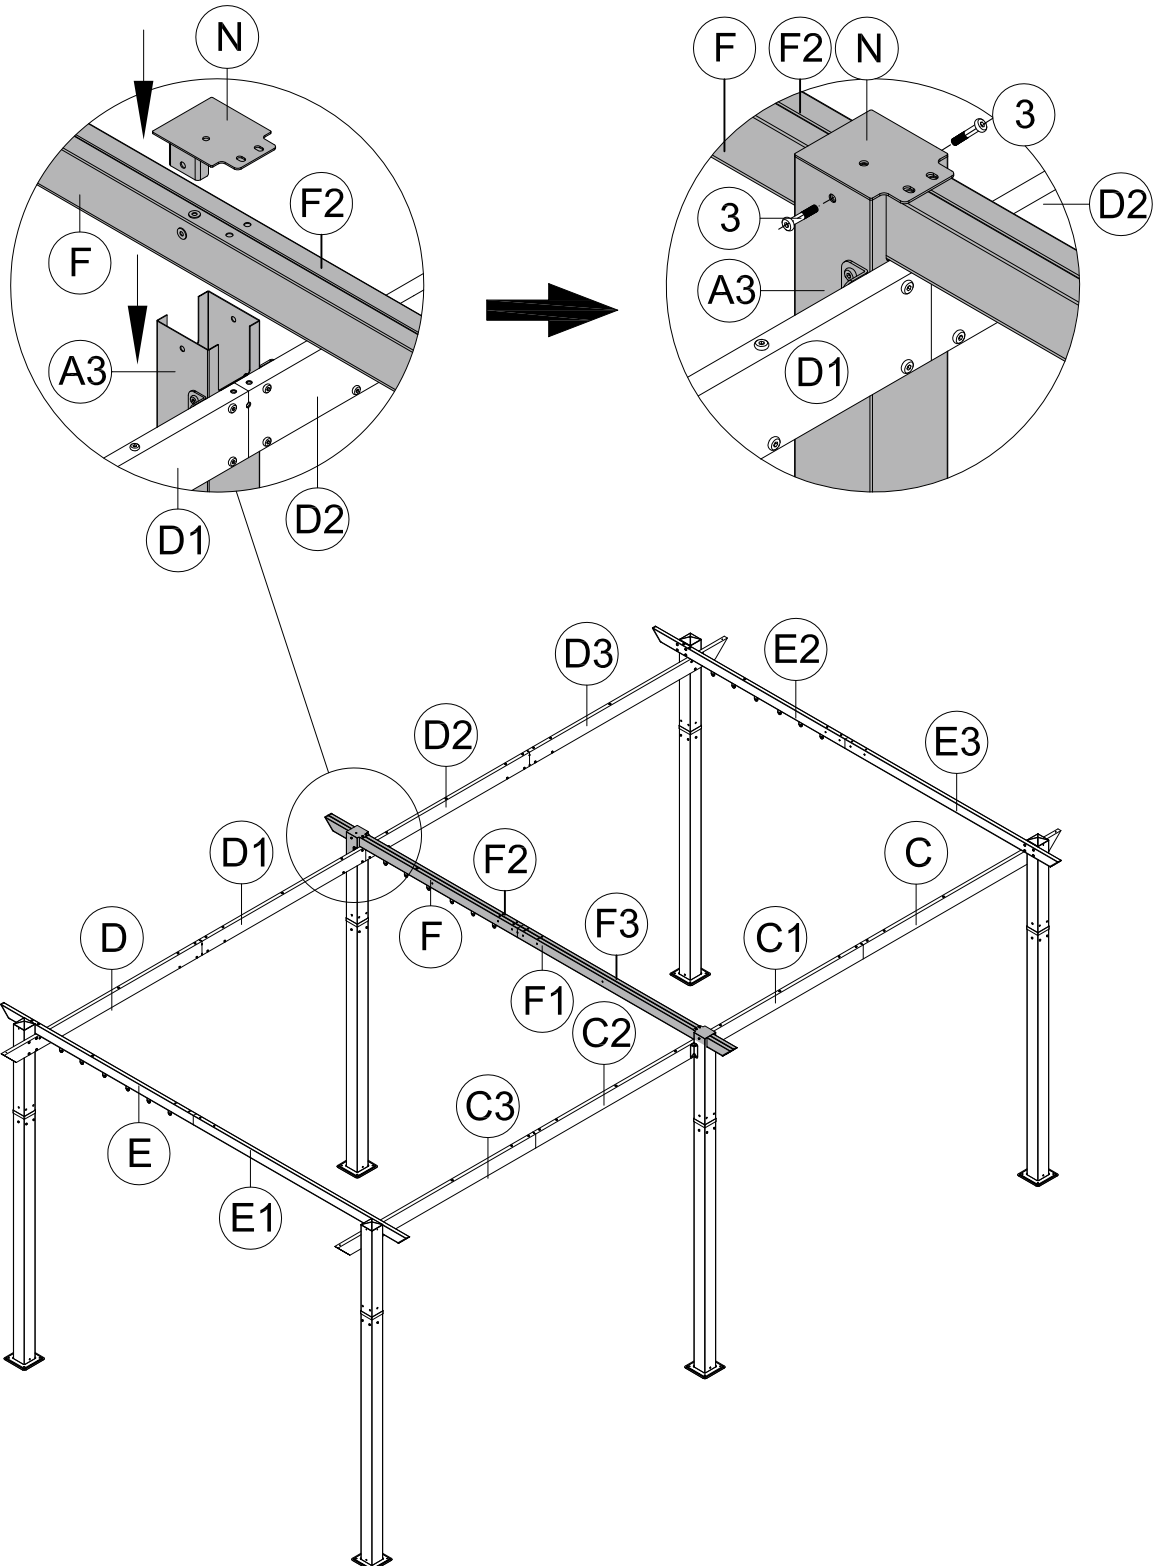




(N1) 1x



M6x28

(3) 2x






M6x85

(6) 2x









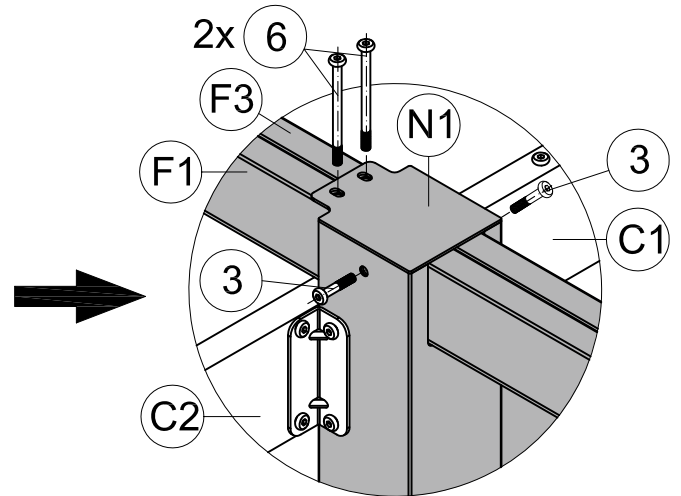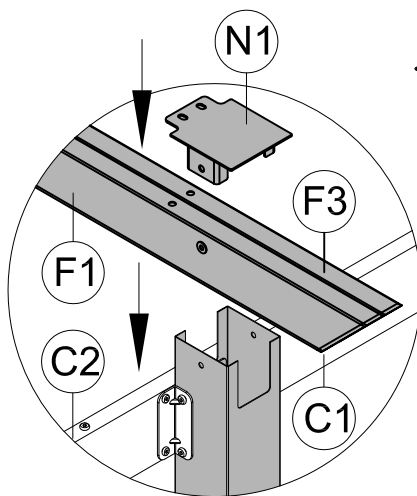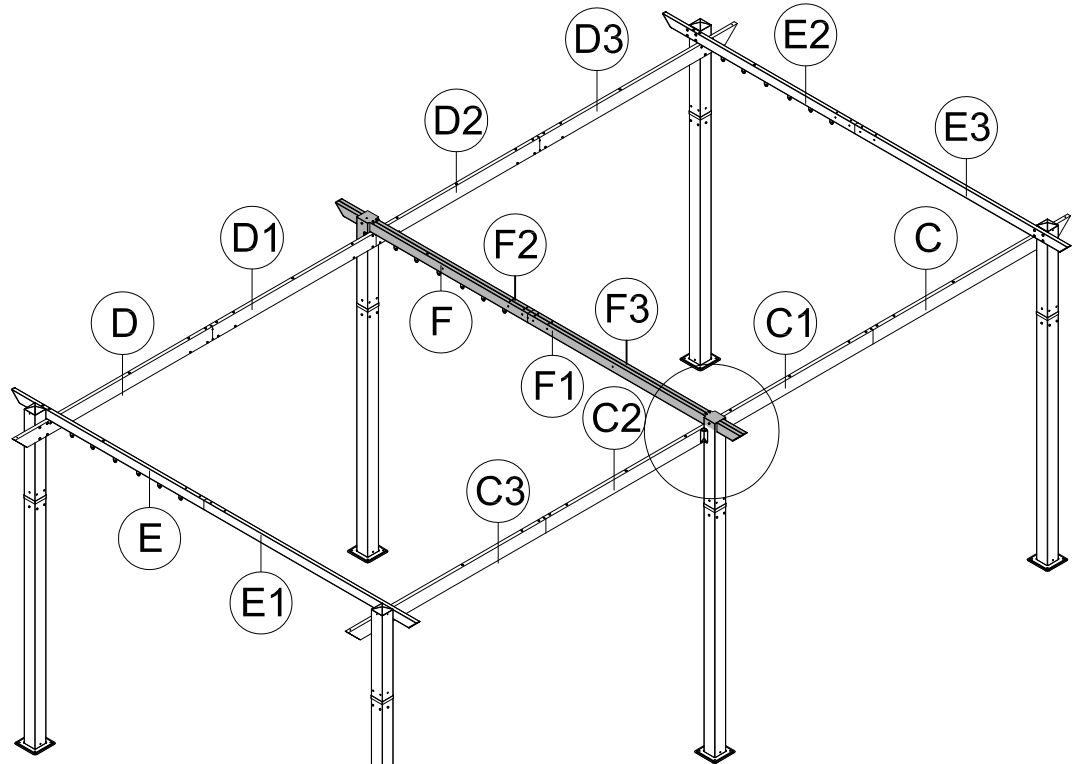

S4


(7) 1x

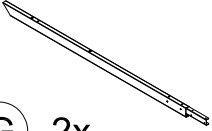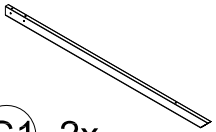

Step 16:


- ① Place Part #F1 & F3 on Part #A3 as shown.
- ② Put Joint Cover #N1 on Part #F1 & Part #F3 as shown.
- ③ Connect Part #F1 & F3 and Part #A3 with 2 Bolt #3 as shown.
- ④ Connect Part #F1 & #F3 and Part N1 with 2 Bolt #6 as shown.


G 2x

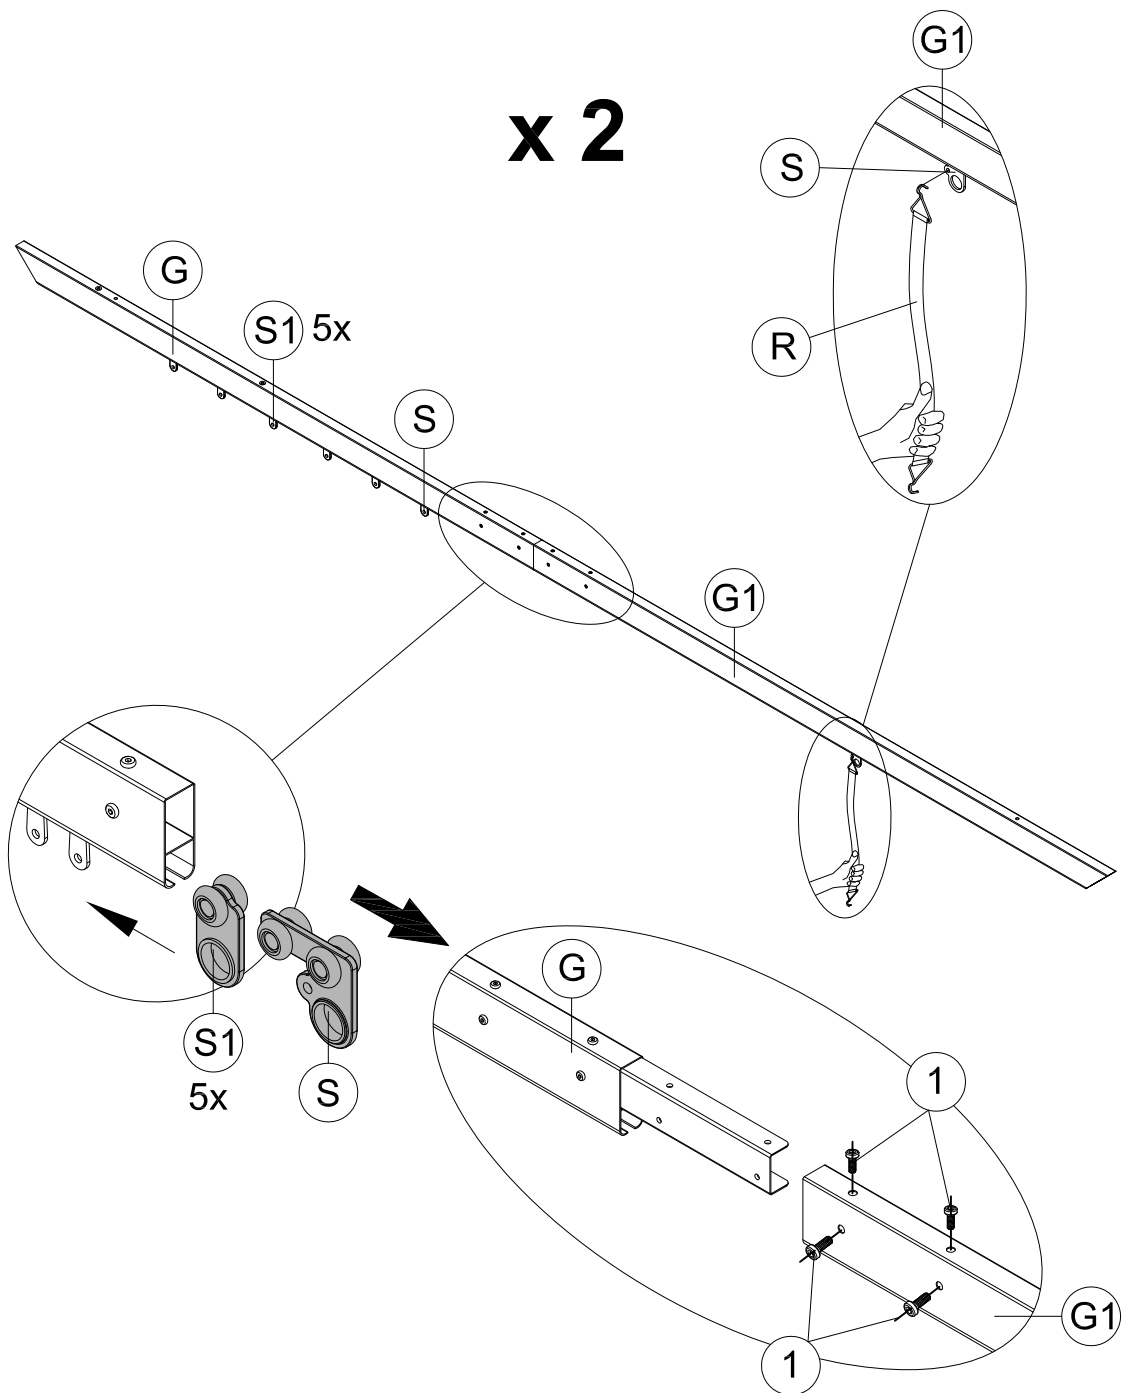G1 2x

R 2x

S 2x

S1 10x

1 8x M6x16

S4

7 1x
21



Step 17:

- ① First of all, slide 5 Pulleys #3 and 1 Pulley #S in turn into part G as shown in diagram.
- ② Connect part #G and part #G1 with 4 Bolts #1 as shown. Hang Part #R on Pulley #S.
- ③ Repeat the above procedures to assemble the second Beam #G & #G1.





M6x85

6 2x



S4


7 1x

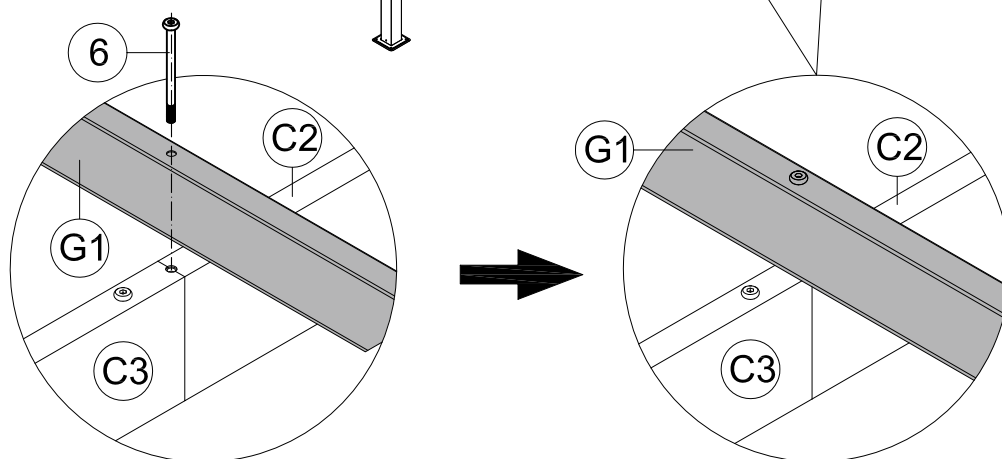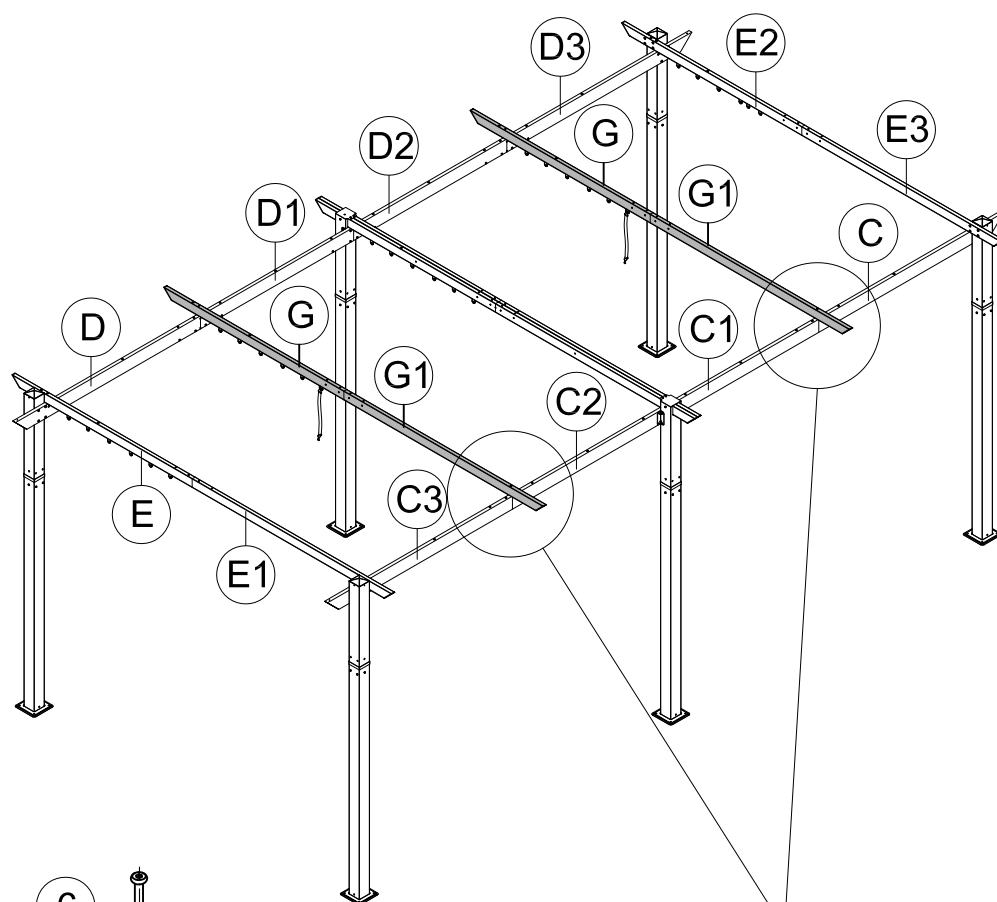

Step 18:

- ① Connect Part #G1 and Part #C2 C3 with Bolt #6 as shown.
- ② Connect Part #G1 and Part #C C1 with Bolt #6 as shown.

⚠ Don't need to assemble the opposite side in this step.

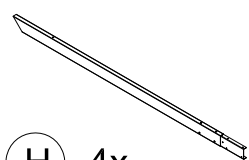

(H) 4x



(H1) 4x




M6x16

(1) 16x




S4

(7) 1x

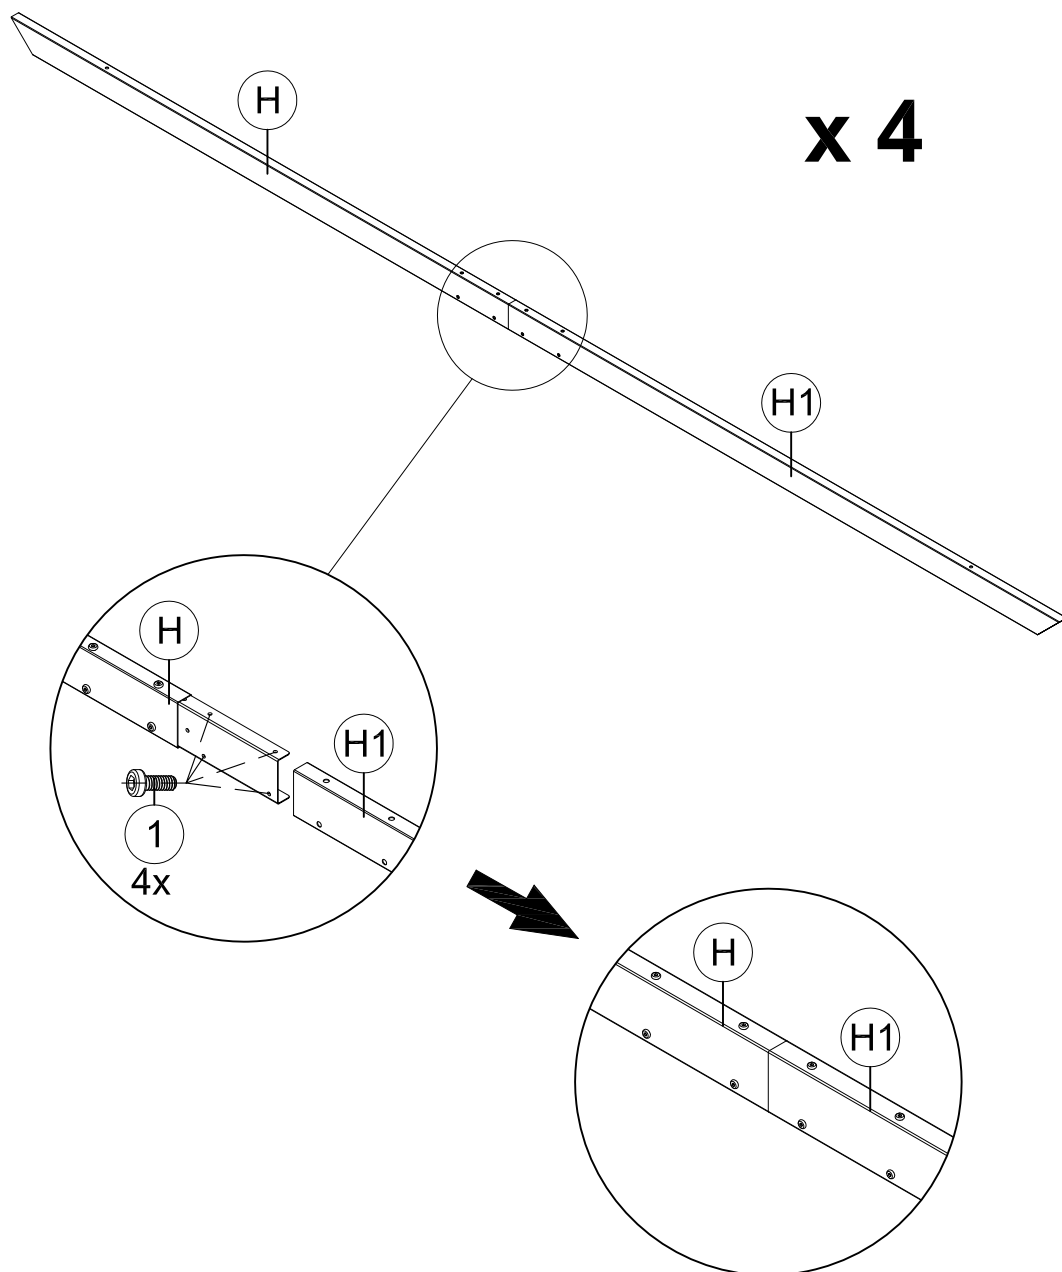

Step 19:

- ① Connect Part #H and Part #H1 with 4 Bolts 1# as shown.
- ② Repeat the above procedures to assemble the other 3 Crossbeams.





M6x85

6 8x











S4

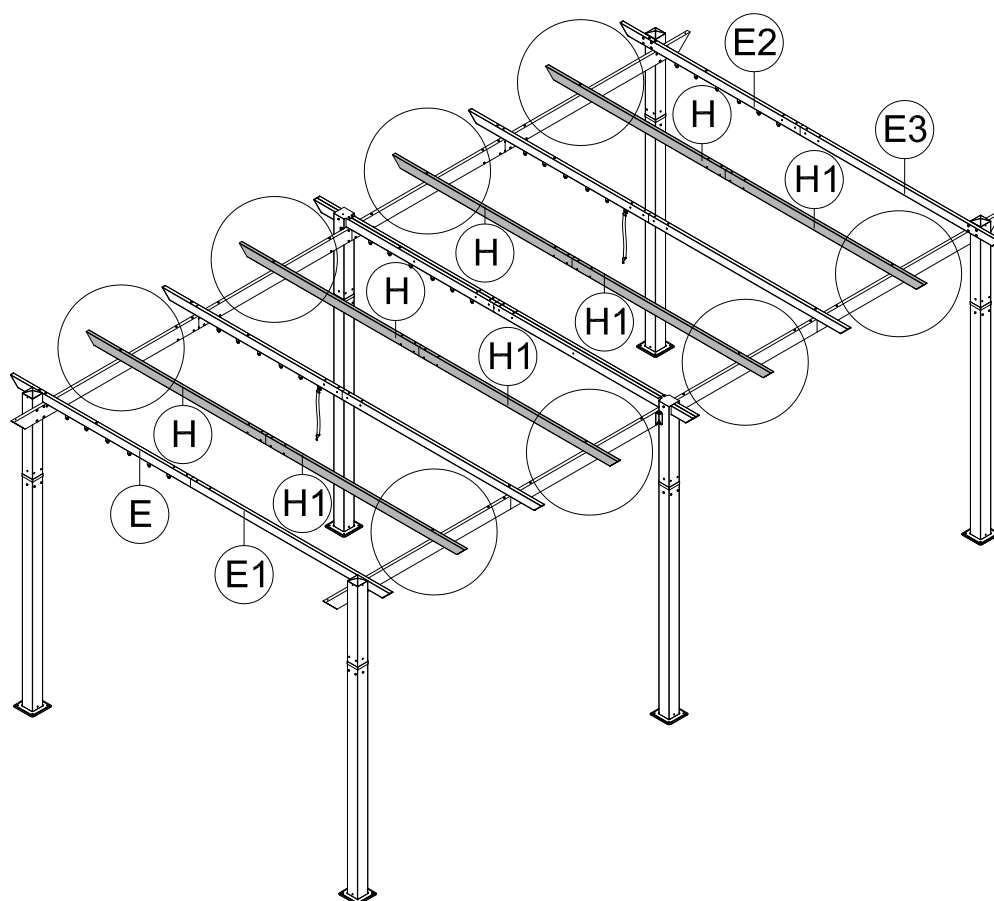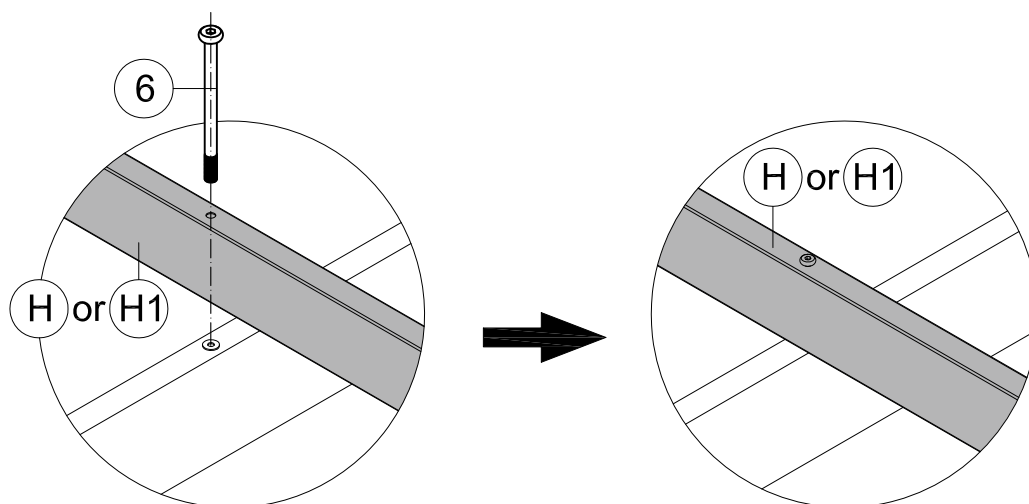7 1x




Step 20:

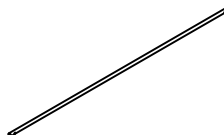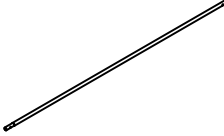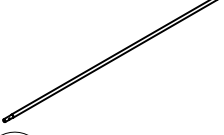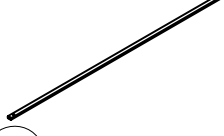- ① Connect Part #H or Part #H1 to beam with 8 Bolts 6# as shown.


J 2x

J1 1x

J2 1x

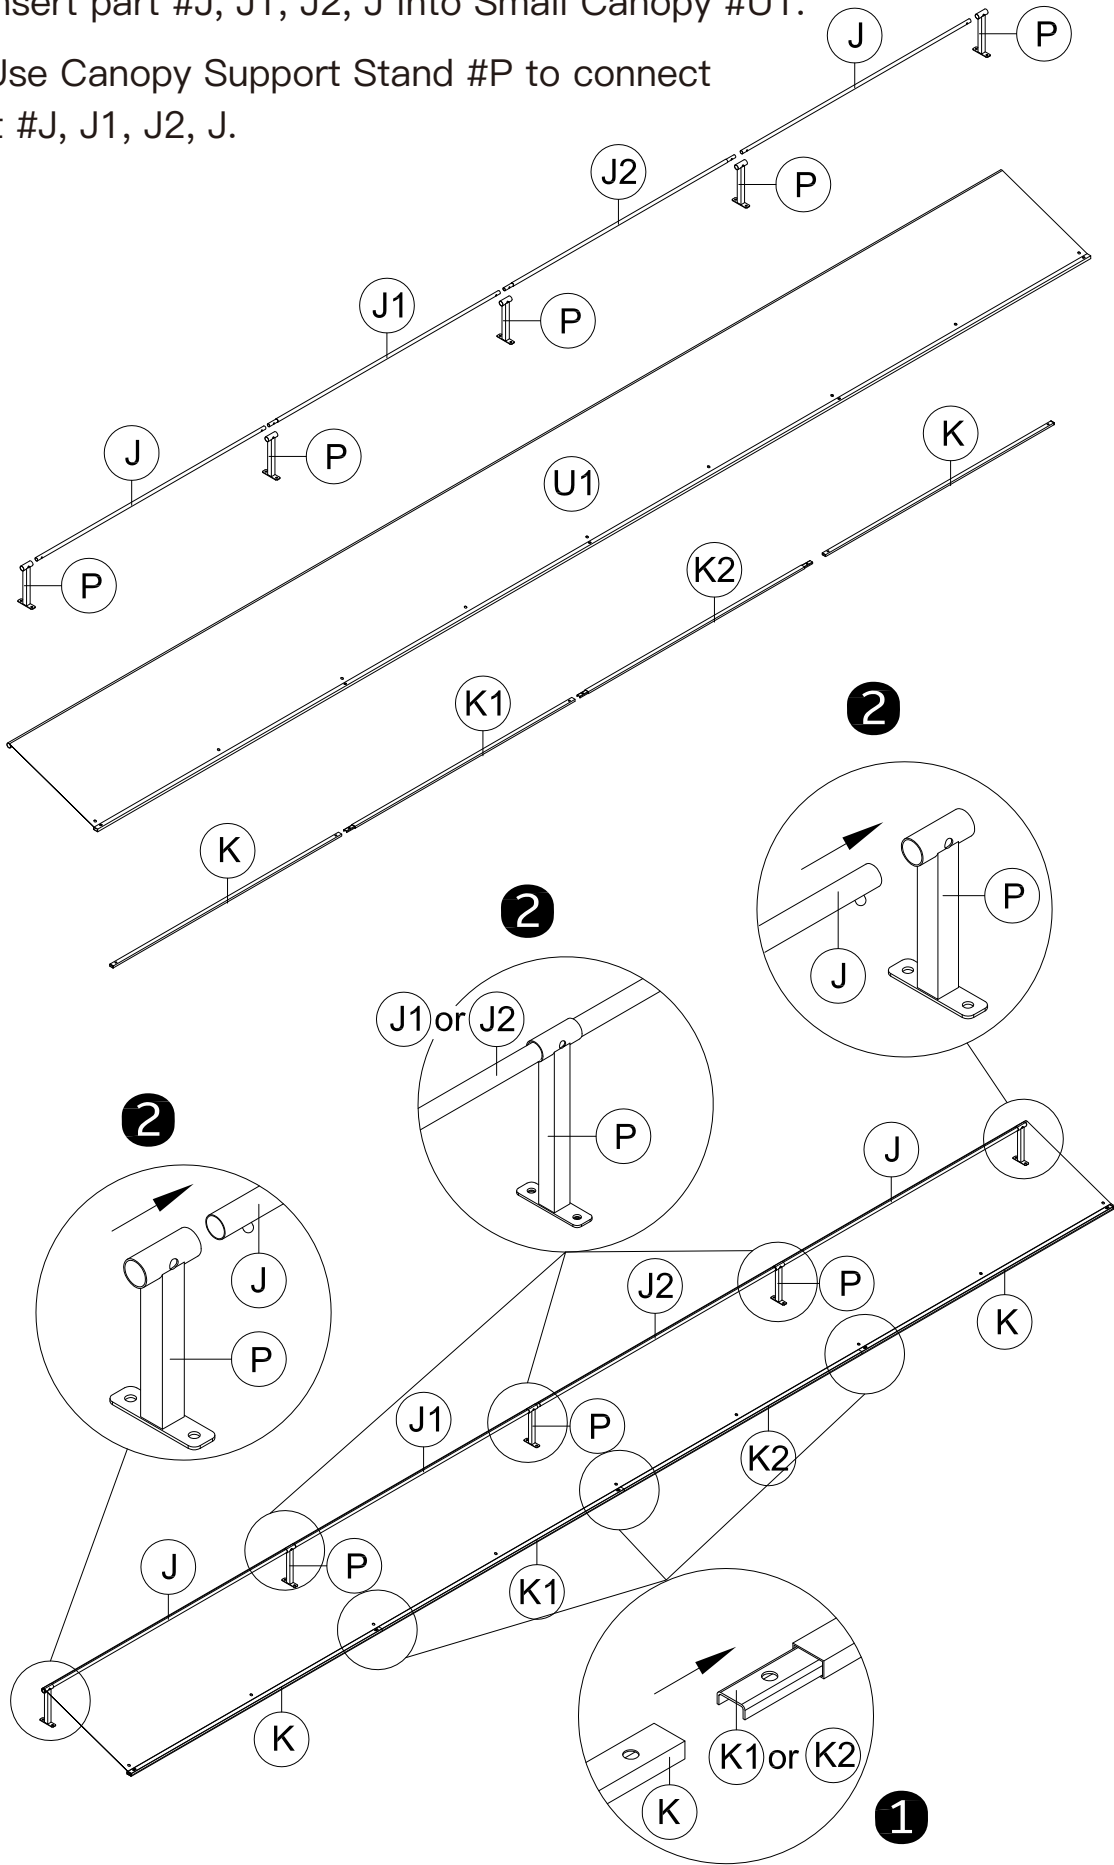K 2x

K1 1x

K2 1x

P 5x

U1 1x
25

Step 21:


- ① Insert 4 sections (#K, K1, K2 ,K) into Small Canopy #U1.
- ② Insert part #J, J1, J2, J into Small Canopy #U1.
- ③ Use Canopy Support Stand #P to connect Part #J, J1, J2, J.





M6x16

① 7x




M6x85

⑥ 4x



S4

⑦ 1x

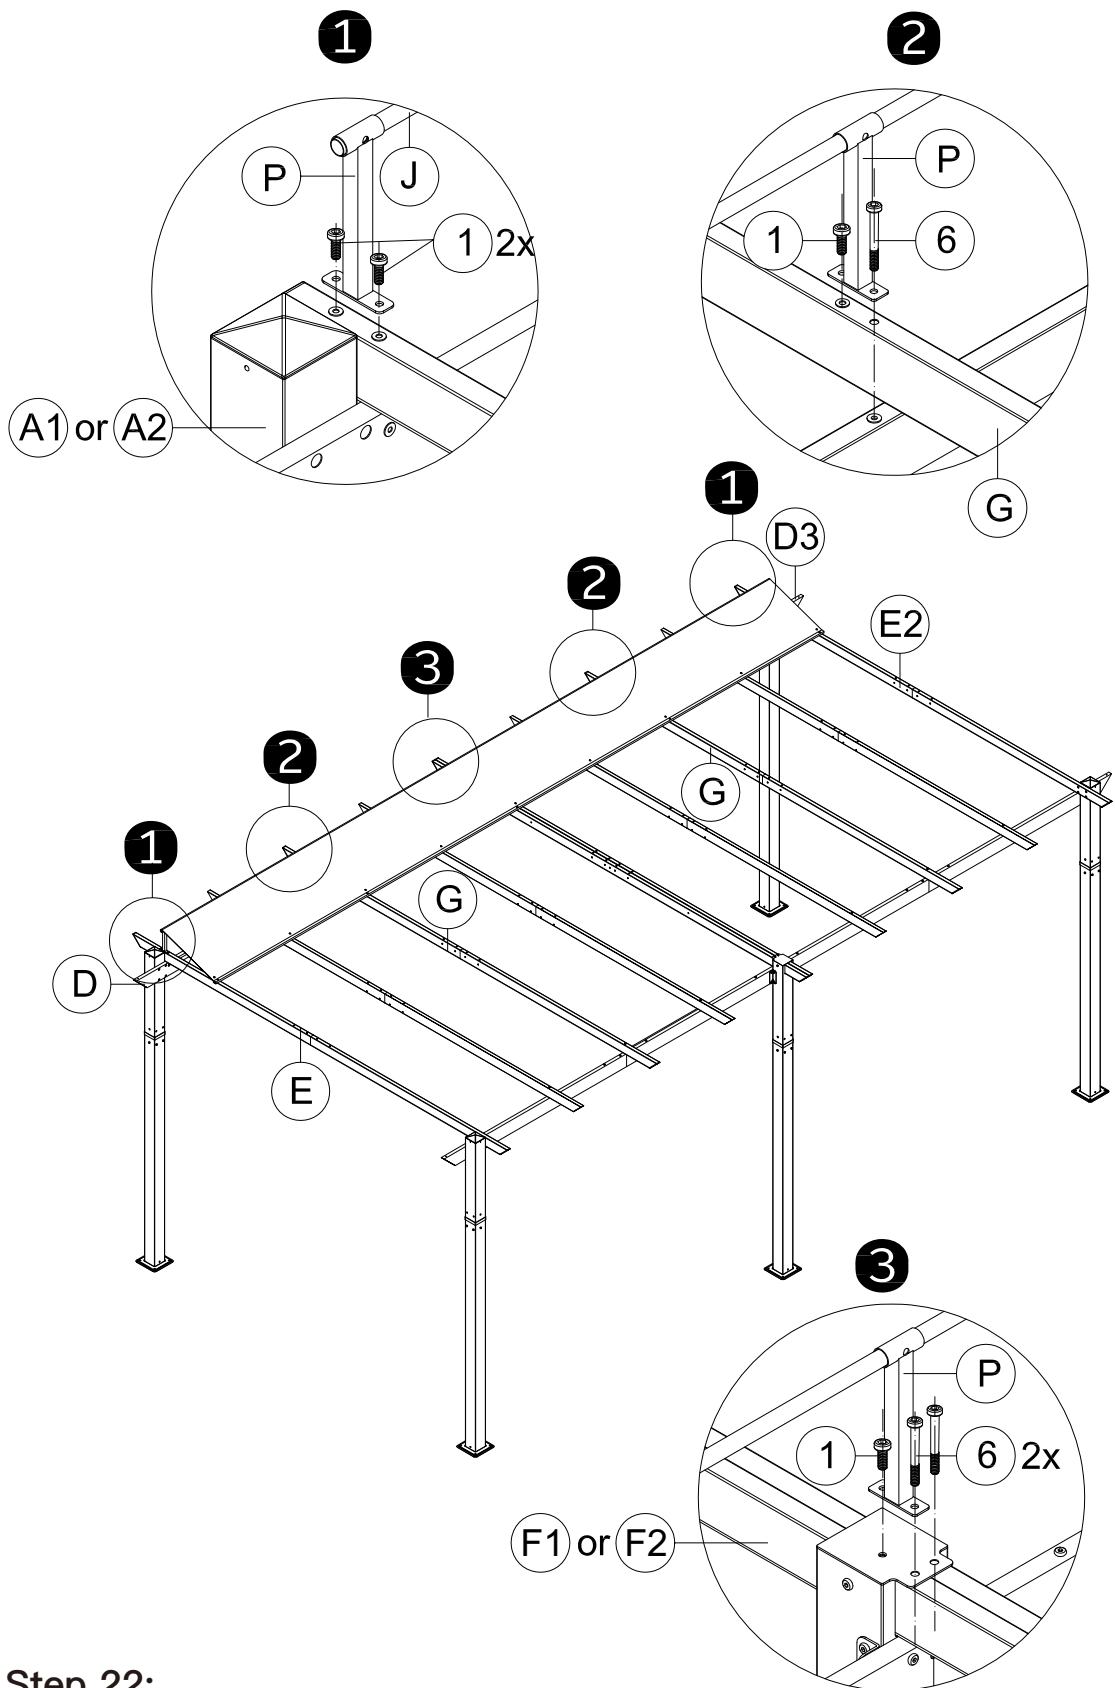

Step 22:

- ① Connect part #P and part #A1(A2) with 2 Bolt #1 as shown.
- ② Connect part #P and part #G with screw 1# and Bolts #6 as shown.
- ③ Connect part #P and part #F F2 with 1 Bolt #1 and 2 Bolts #6 as shown.




M6x28

3 5x



S4

7 1x



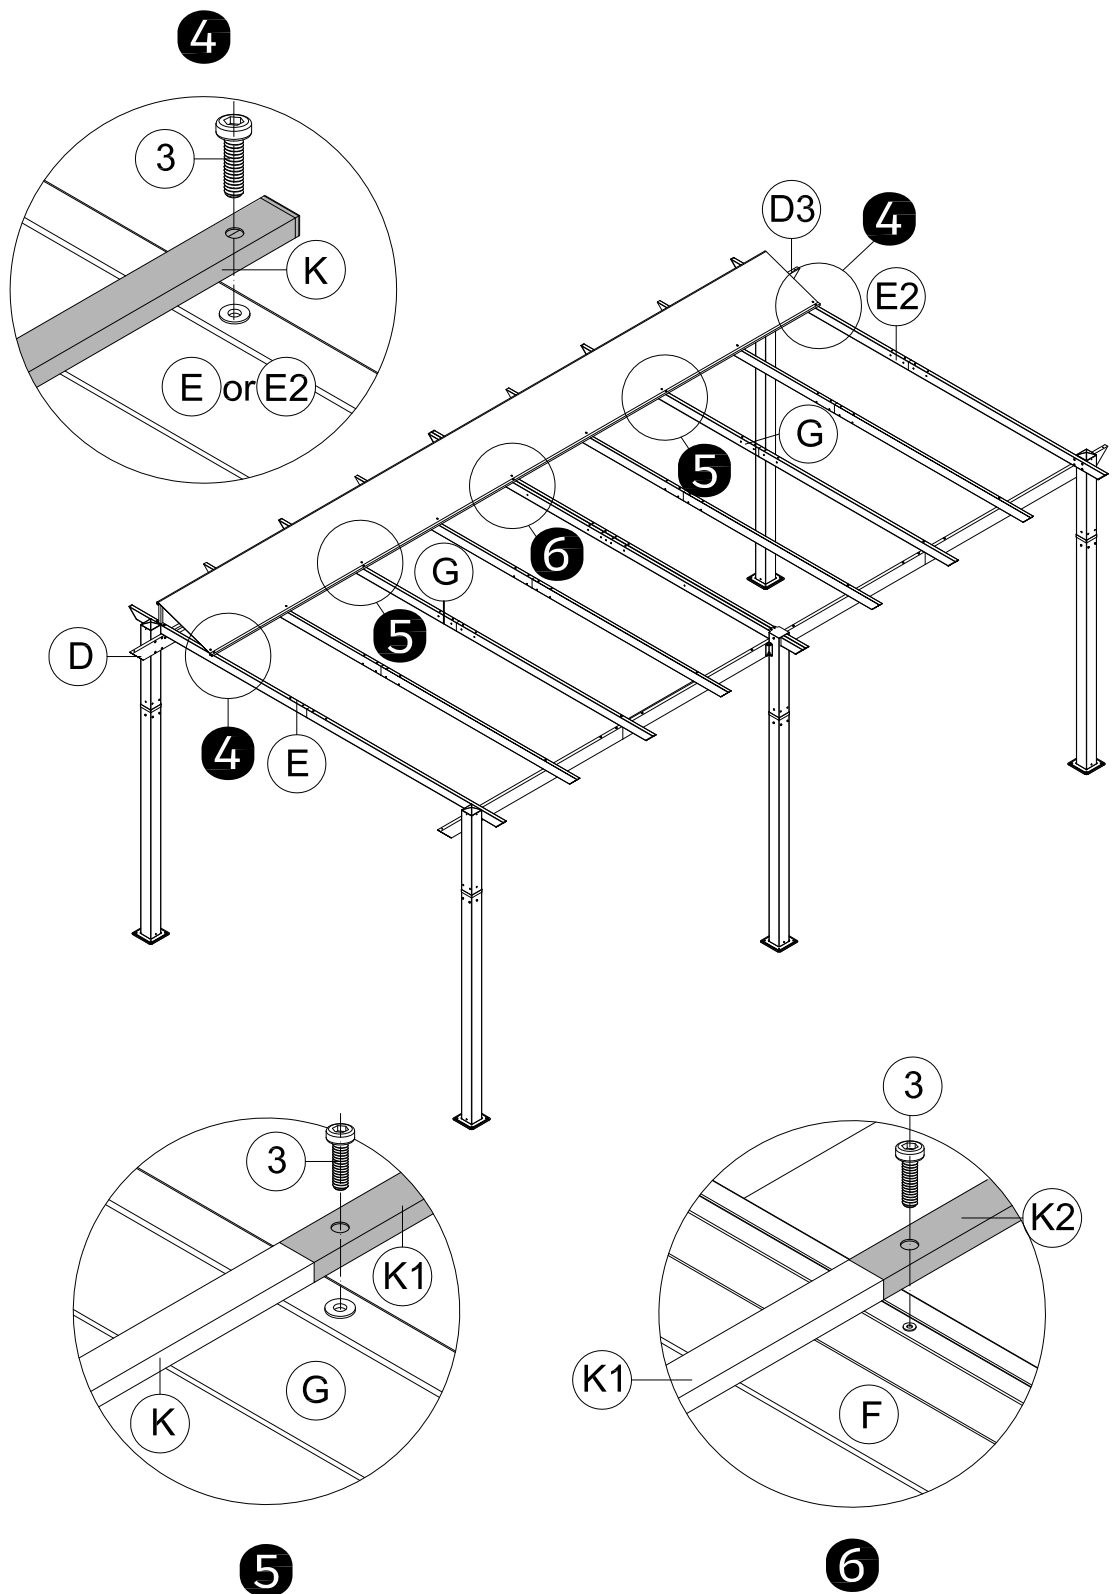


Step 23:

④ Use Bolts 3# to affix Part K with Cross Beam (Part #E or E2) as shown.

⑤ Use Bolts 3# to affix Part K1 with Cross Beam (Part #G) as shown.

⑥ Use Bolts 3# to affix Part K2 with Cross Beam (Part #F) as shown.

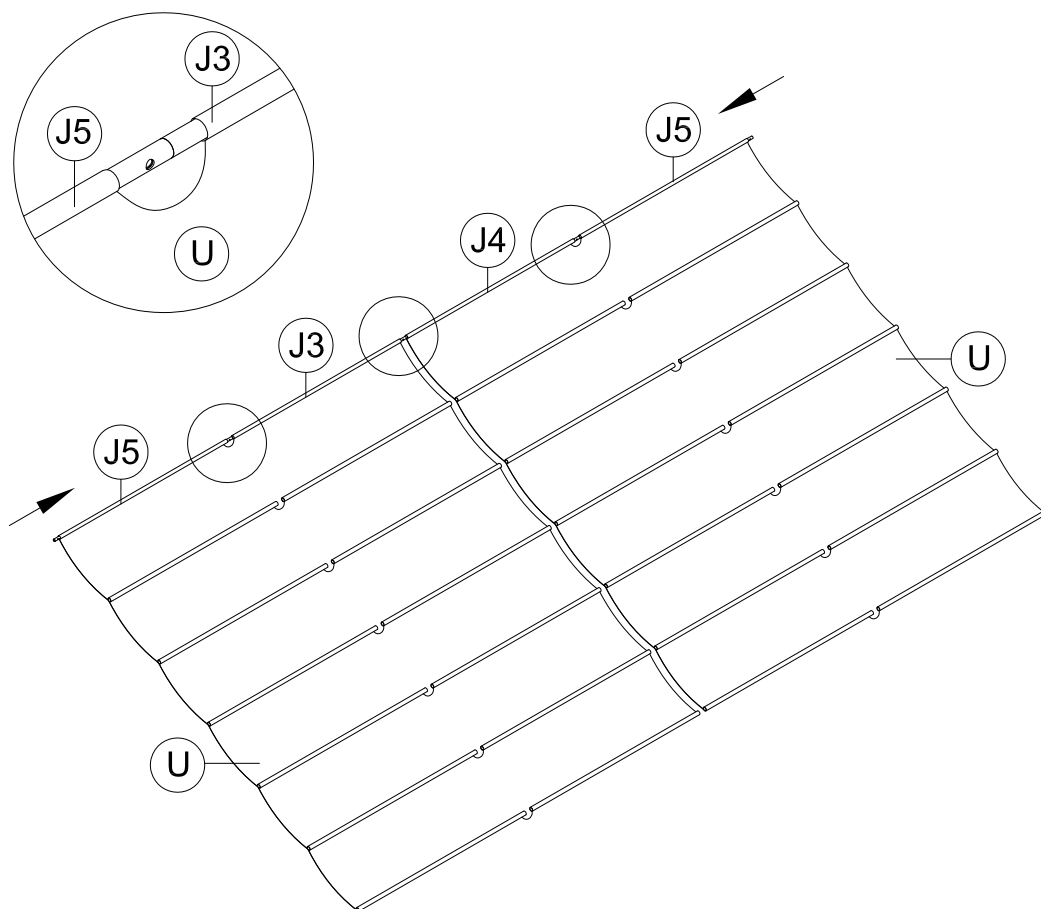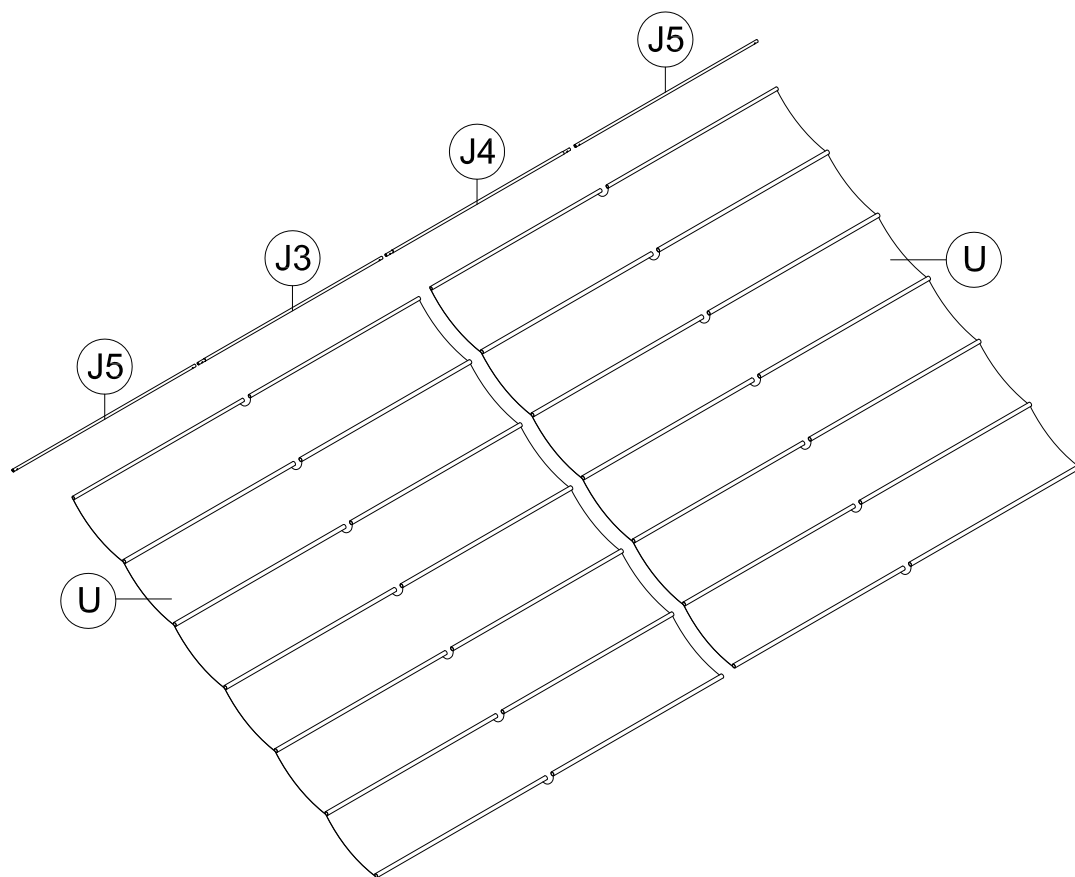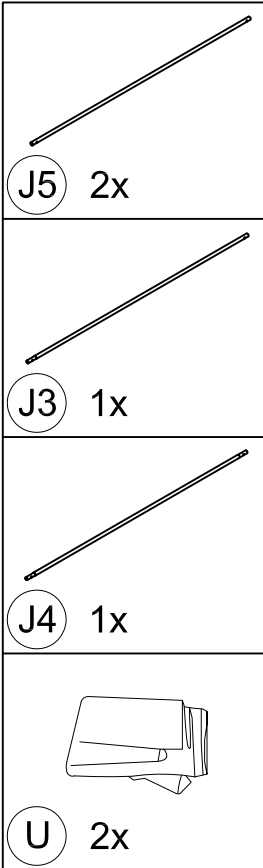

Step 24:

- ① Insert Part #J5, J3, J4, J5 into the pocket of top roof (Part U) and connect them as shown.



M6x28

3

5x




S4



7

1x

1






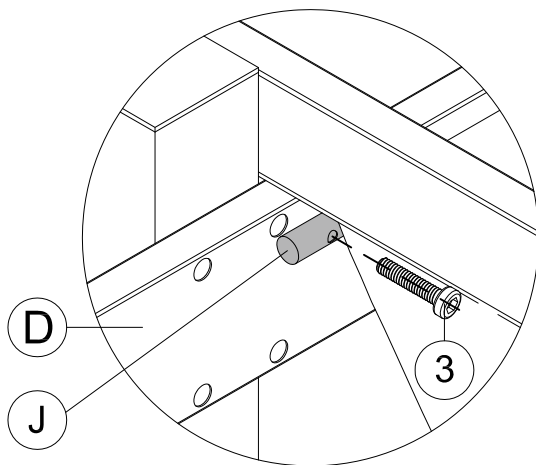


2

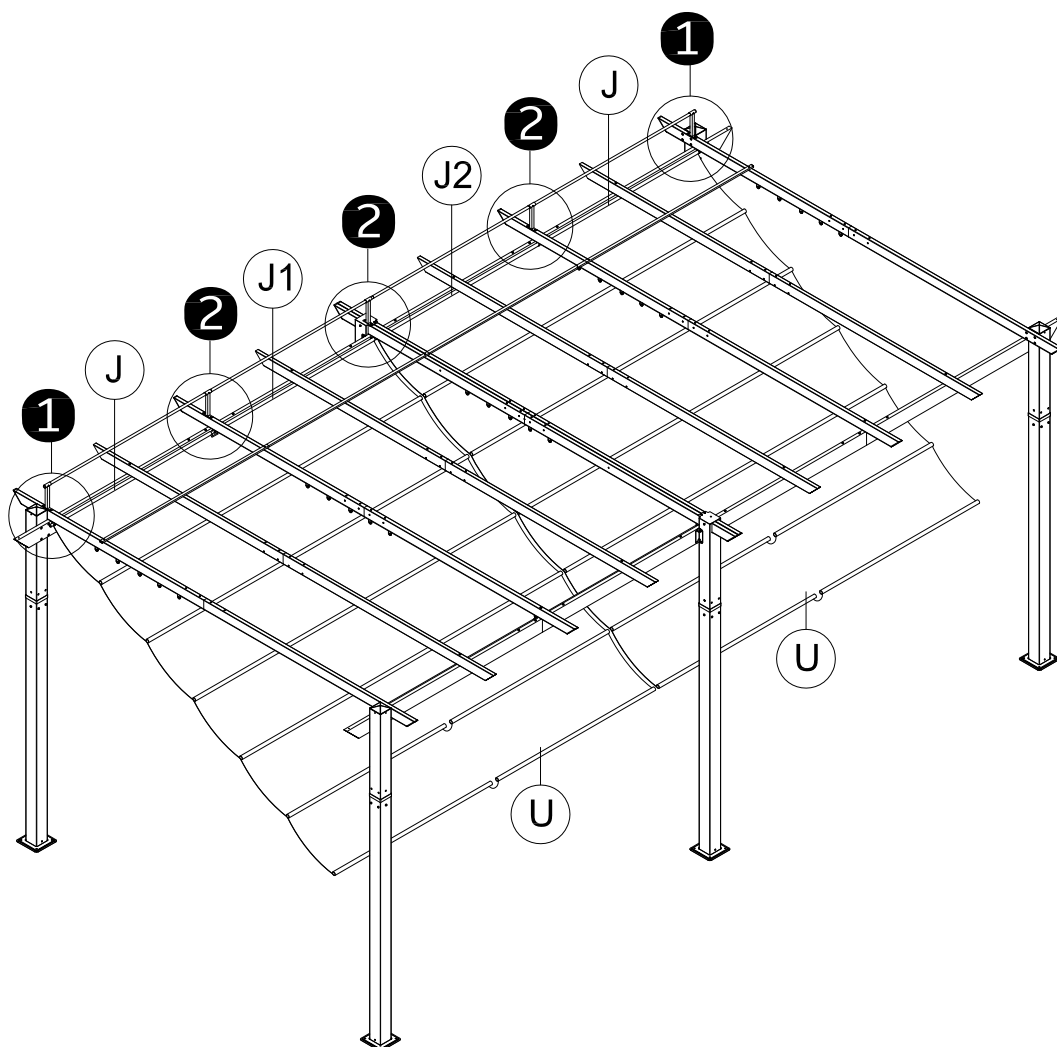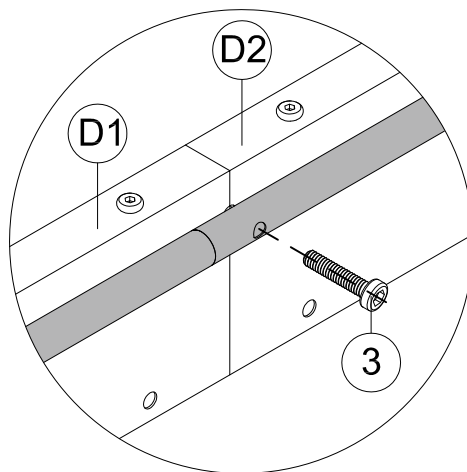


Step 25:

① Use 5 Bolts #5 to secure canopy Bar #J, J1, J2, J to the assembled Beam as shown.

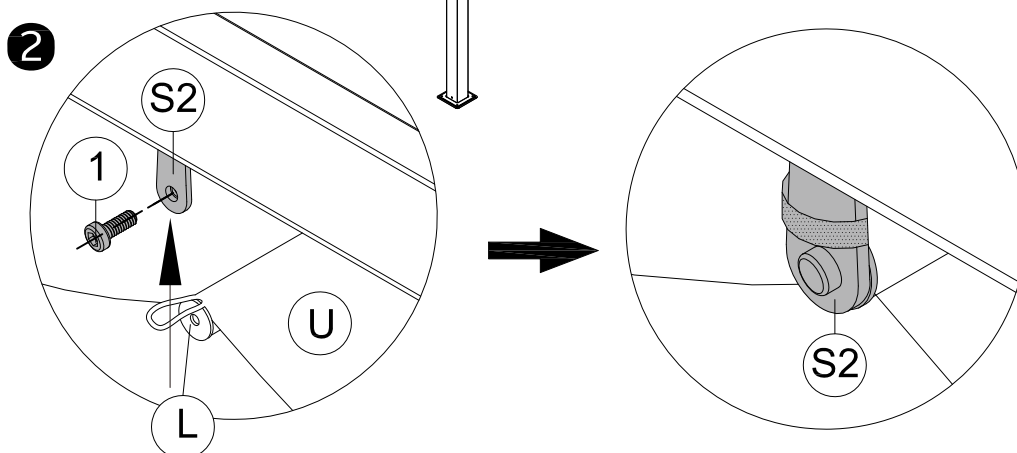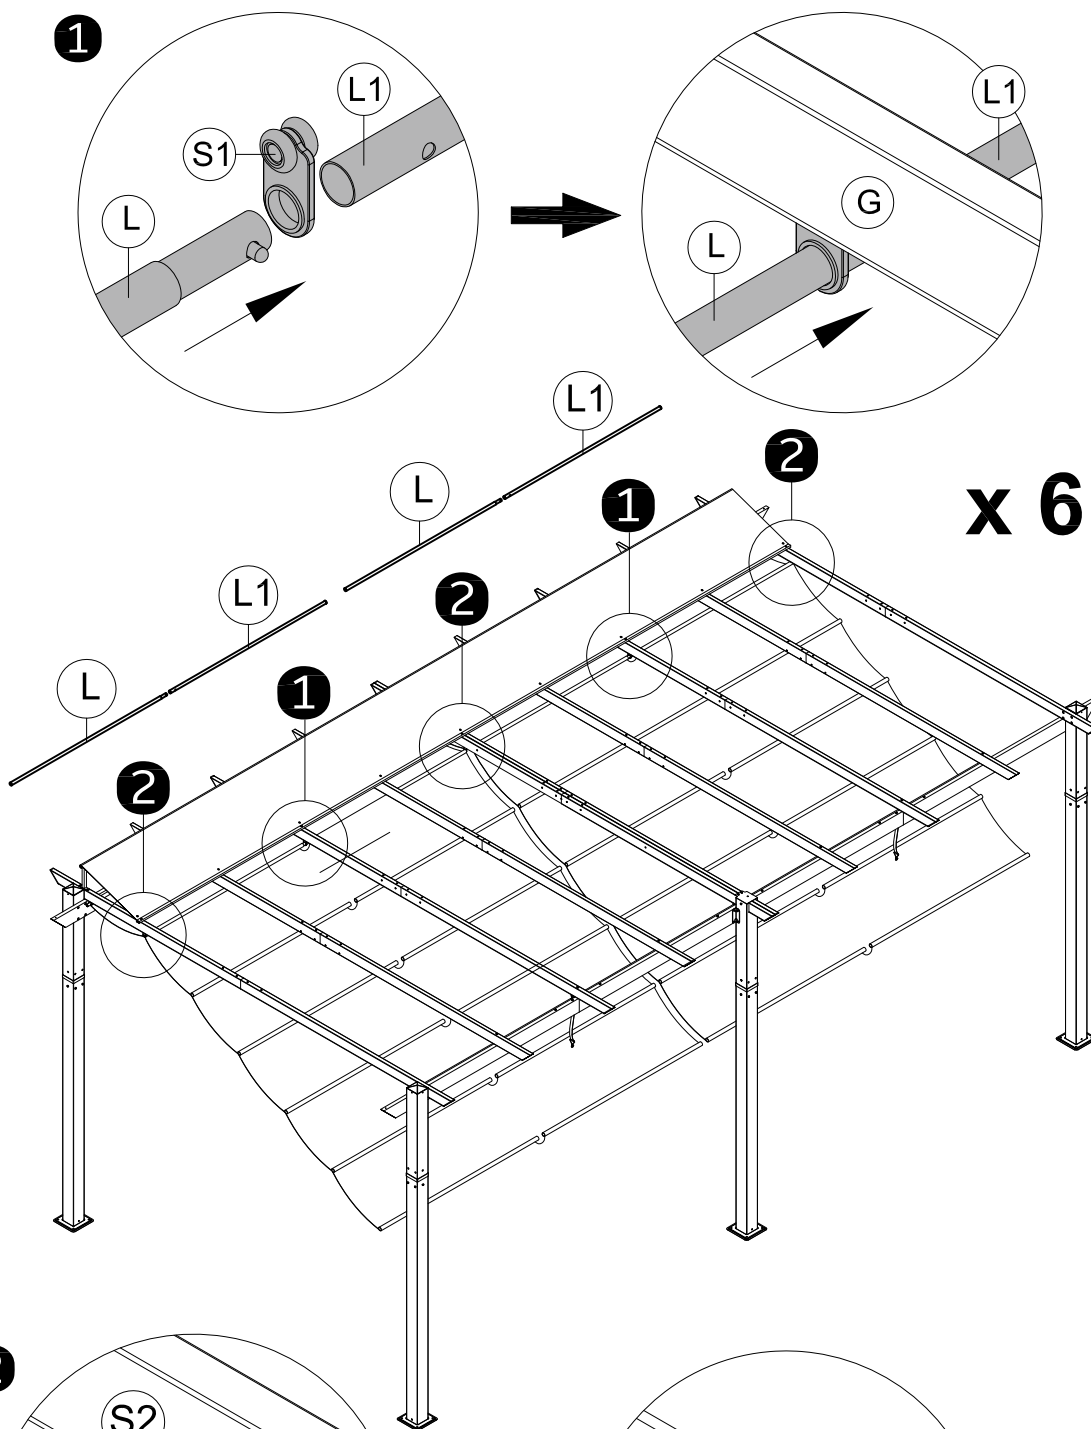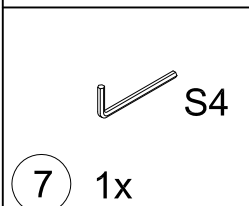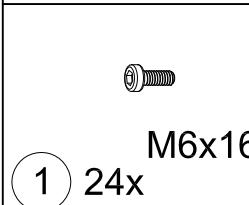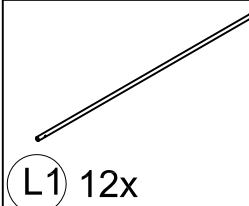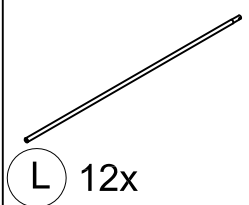

Step 26:

- ① Connect Part #L and L1 through the hooks (Part #S1).
- ② Fix Part #L and #L1 with the hooks (Part S1) on both ends using Bolt 1#, then attach the strap of top roof to the hook for securing the tube.

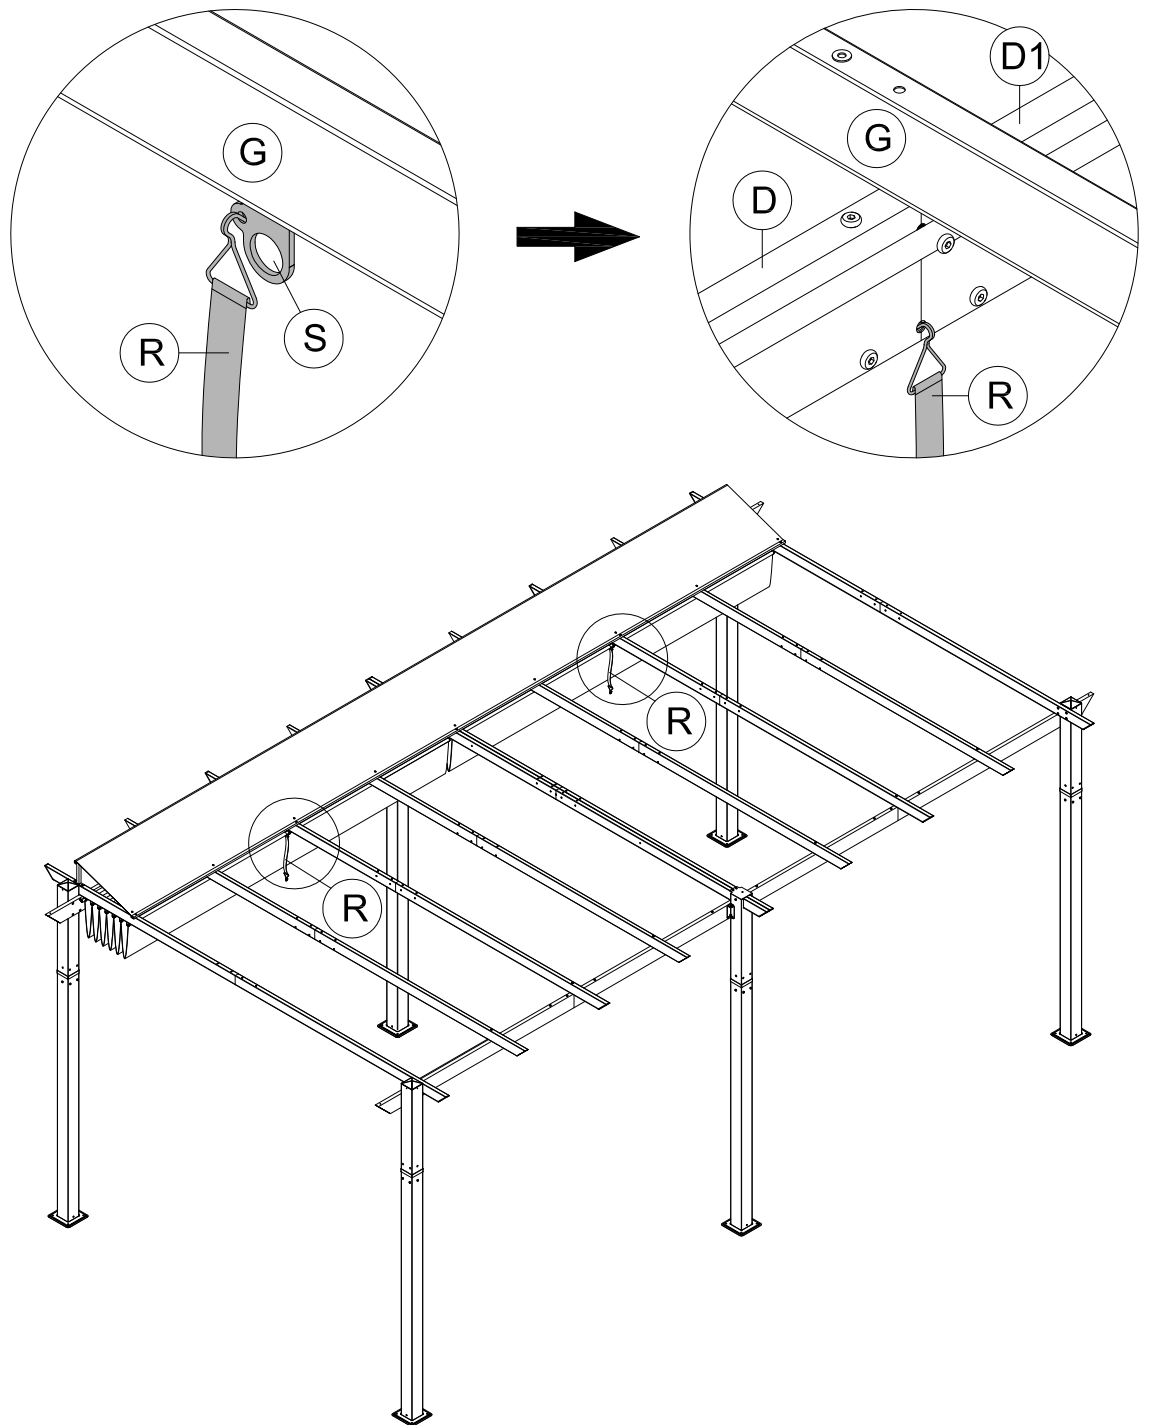


Step 27:

- ① When the canopy is folded, hang the other end of string (Part R) into the hole on the inside of Beam (Part #D and Part #D1) to secure the top roof.



V 12x

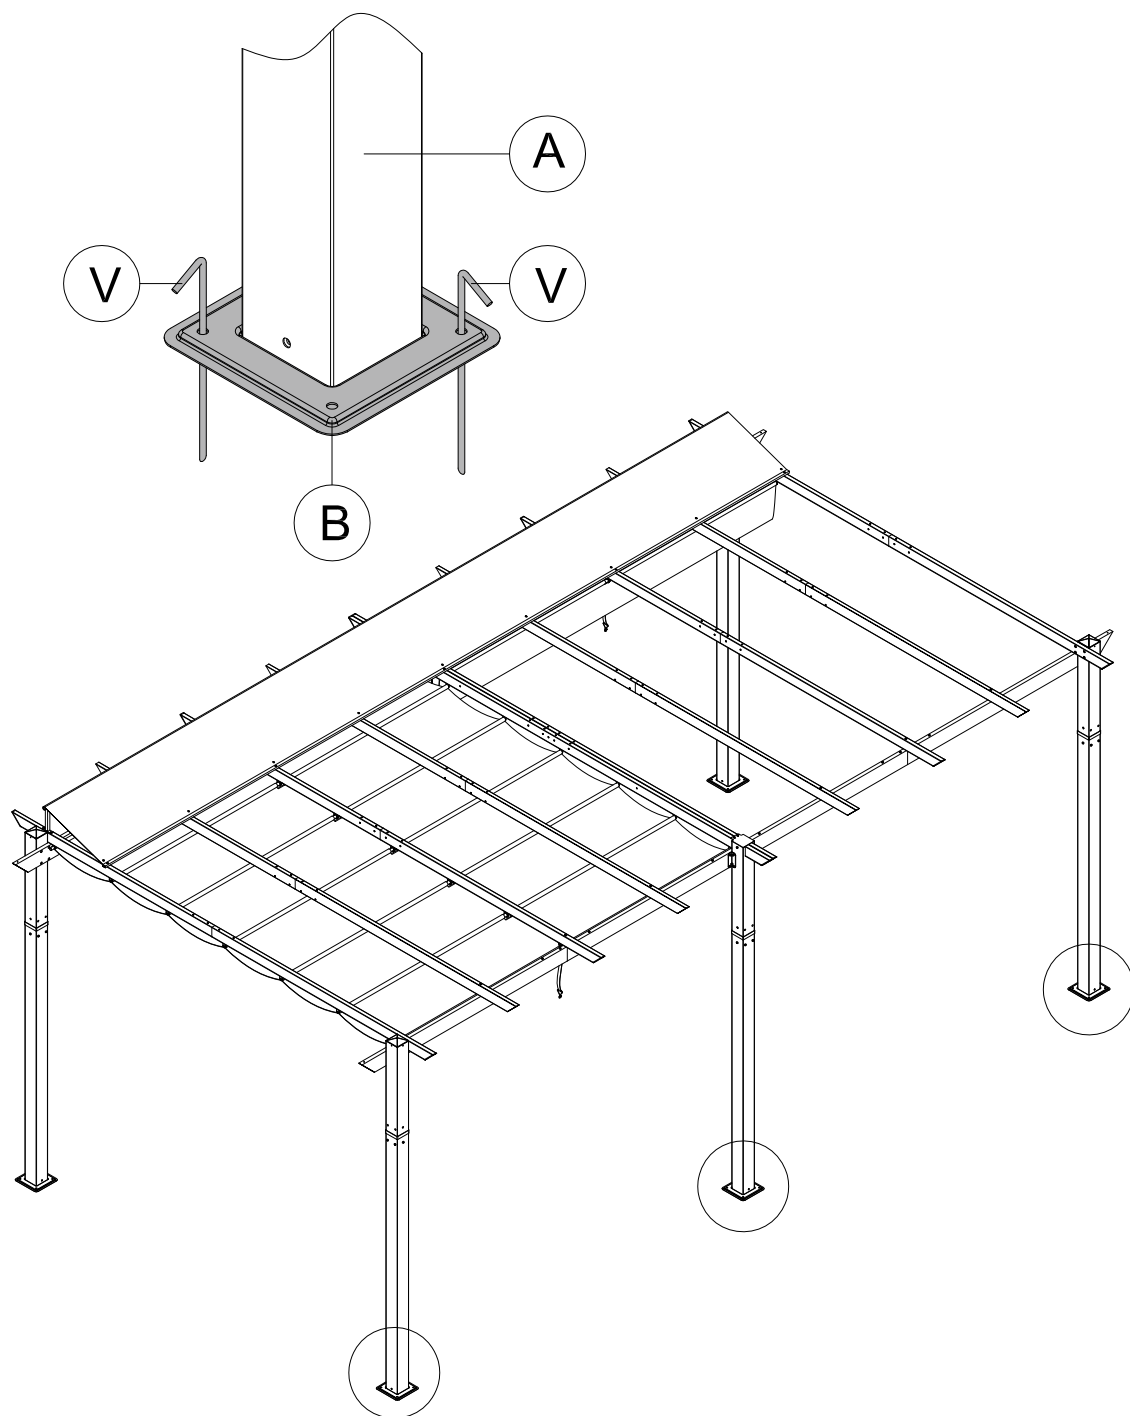

Step 28:

① Insert stakes (Part V) through the hole of stand plate (Part B) into the ground, to stabilize the tent.

⚠ Only used temporary, they can not stand against the heavy wind.