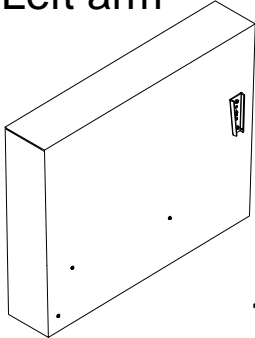
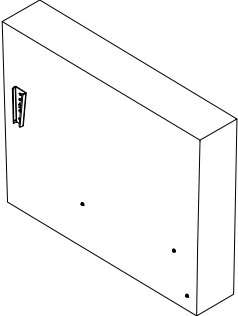
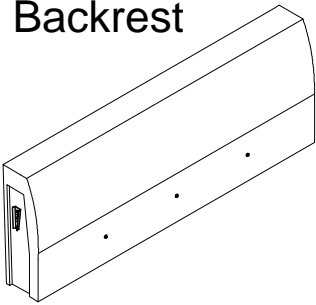
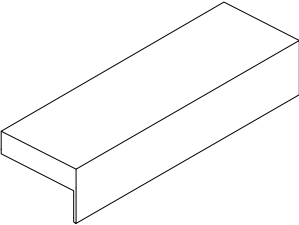
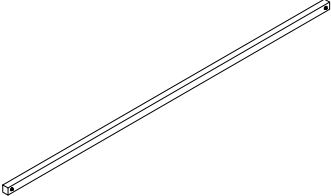
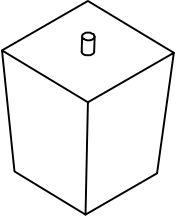
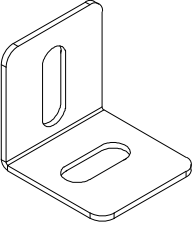
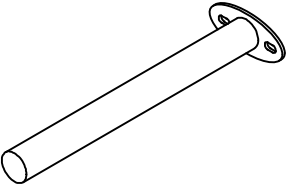

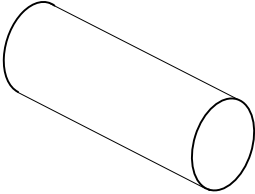



N711P180266

HARDWARE LIST:


A Left arm  1pc	B Right arm  1pc	C Backrest  1pc	D Cushion  1pc	Z Support Wood  1pc	M Leg  4pcs	I Fastener  11pcs	O1 Mid-Leg  1pc
P Inner allen wrench  1pc	Q pillow  2pcs						

Assembly instruction


STEP 1

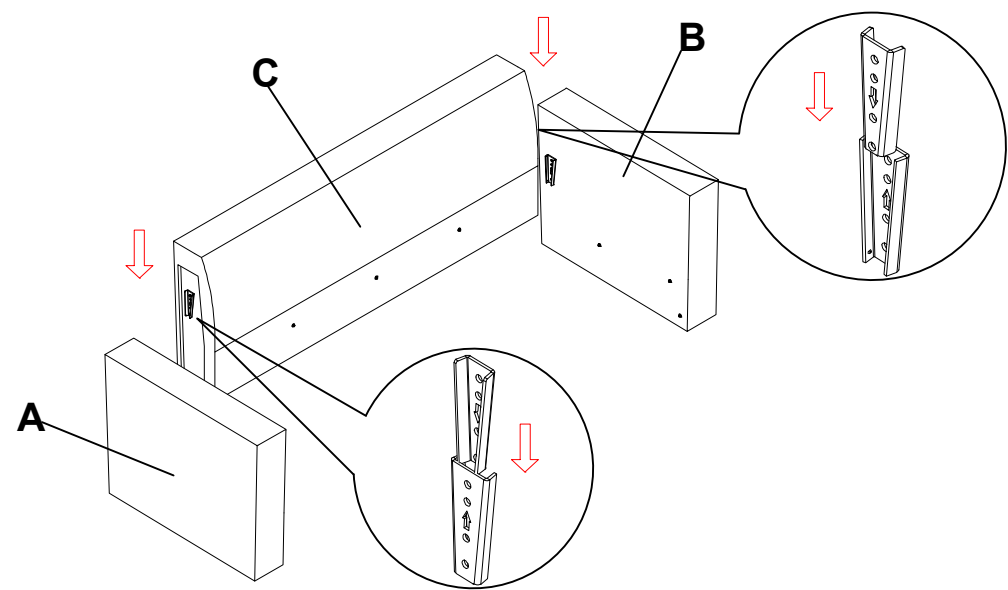

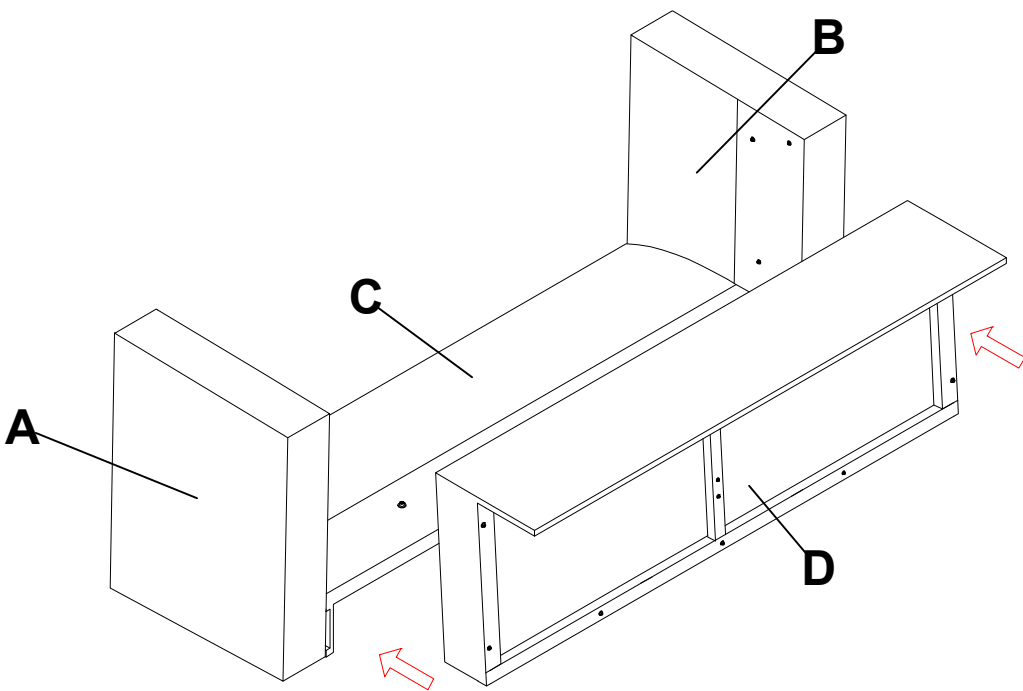

STEP 2




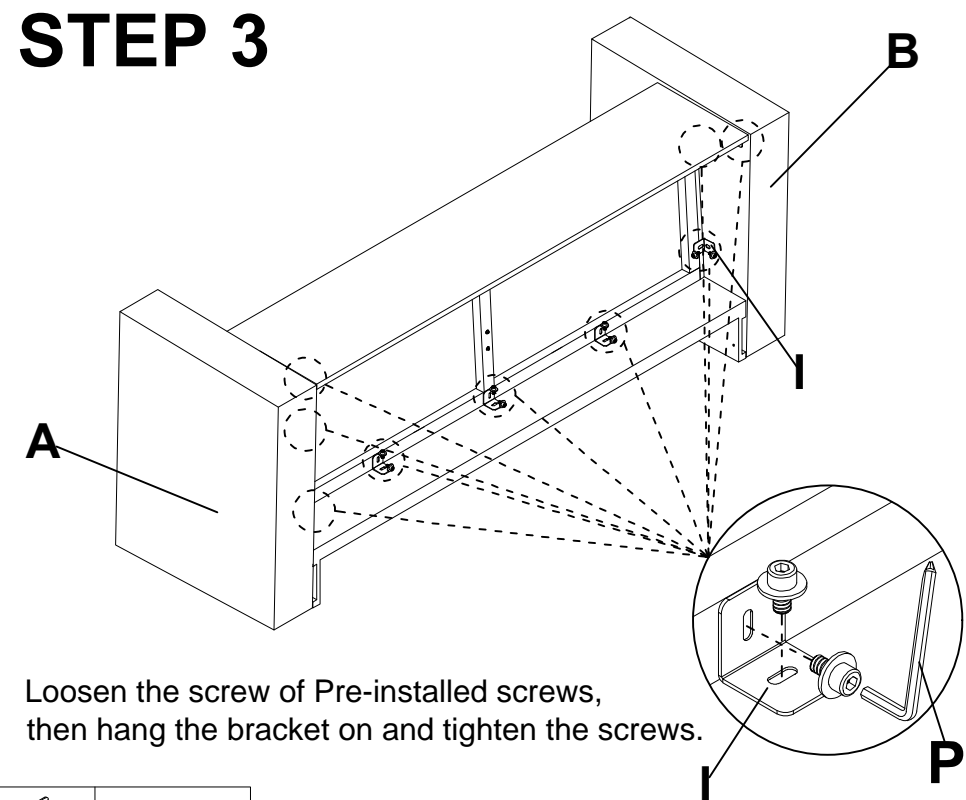

STEP 3



	I * 9pcs
	P * 1pc

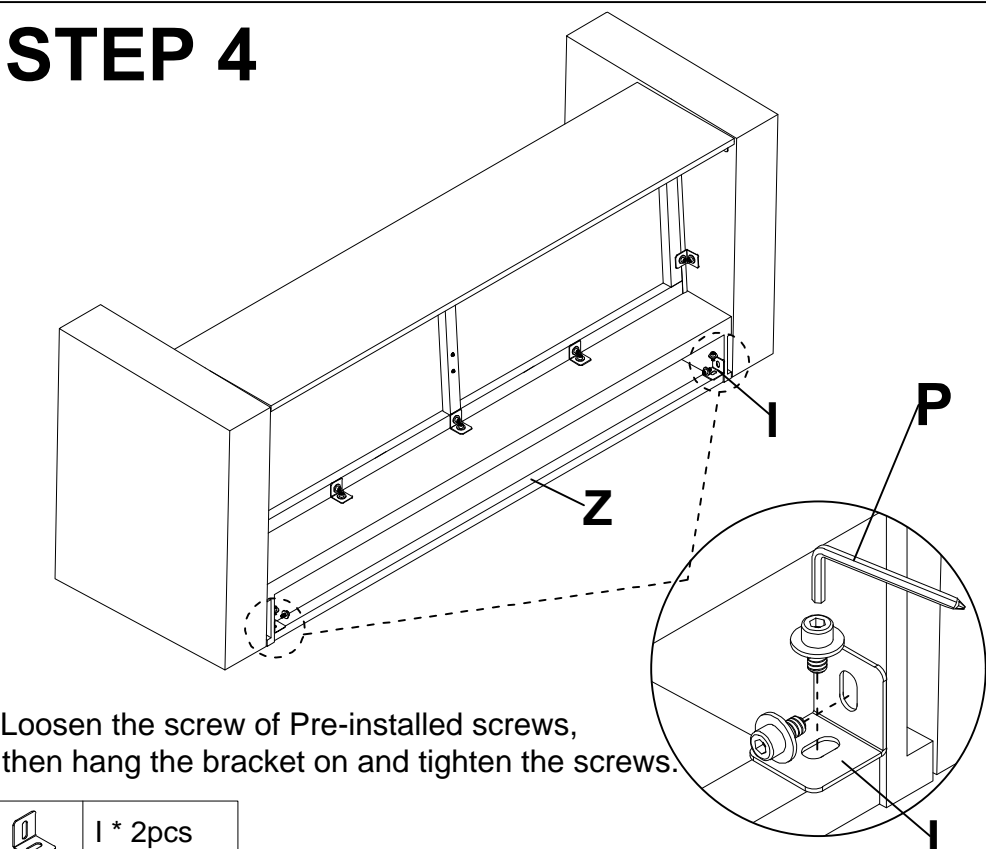
STEP 4






	I * 2pcs
	P * 1pc

STEP 5

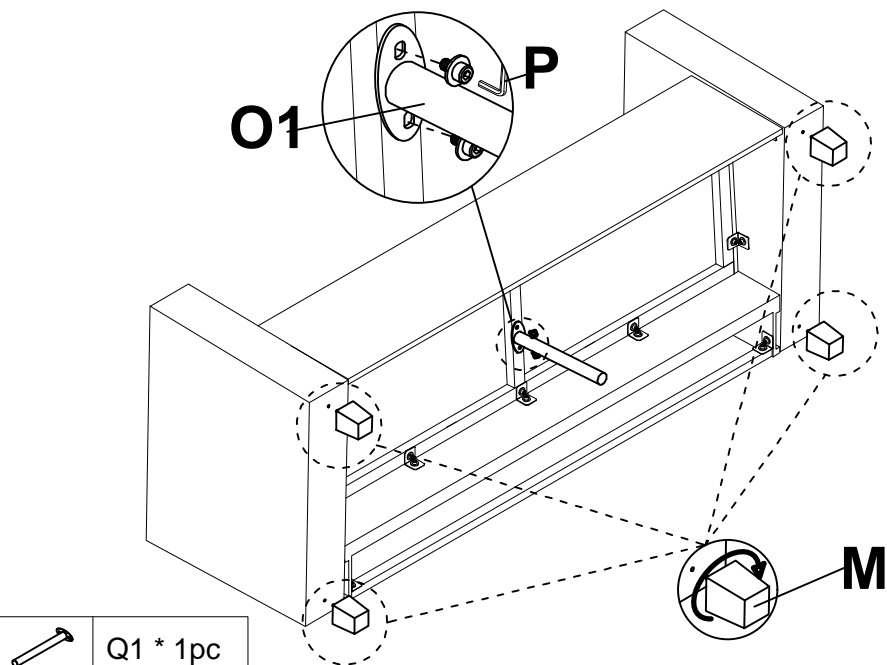Loosen the screw of Pre-installed screws, then hang the bracket on and tighten the screws.



	Q1 * 1pc
	M * 4pcs
	P * 1pc

STEP 6

