


# ASSEMBLY INSTRUCTIONS


## Hardware List

A

 Ø12x10 mm

4




B



4



1:Put (A ) into the hole  
with the screw face up

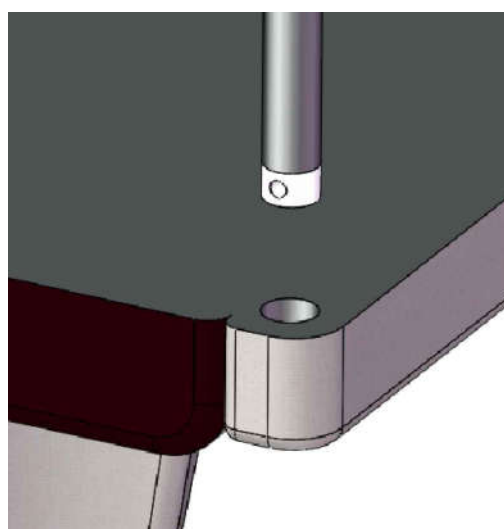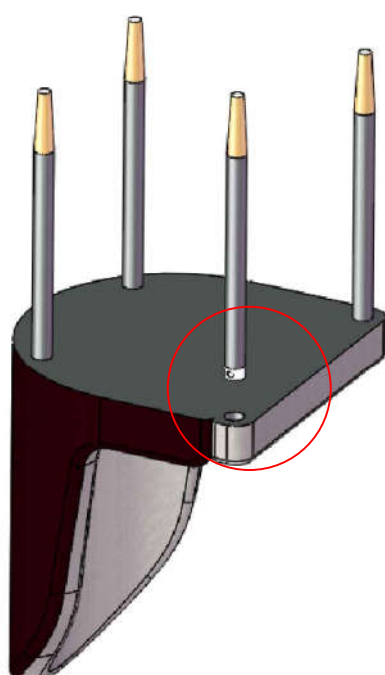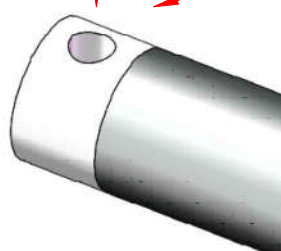

2:Put (B ) into the seat bag hole  
and tighten it