


AI-FPSCCTWR


Assembly Instructions

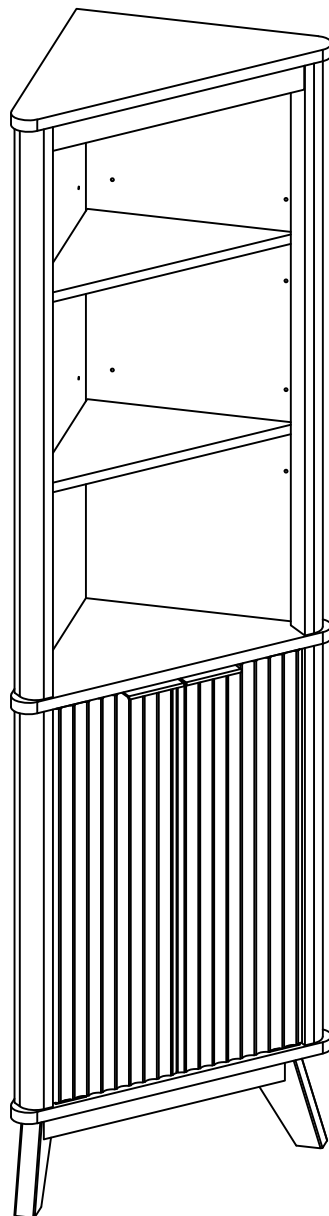


Customer Service E-mail Address: xiuxiumaoyius@163.com

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- VI. A Phillips head screwdriver is required for the assembly of this product .

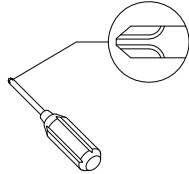


- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

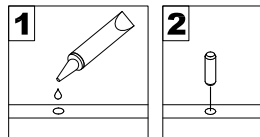


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

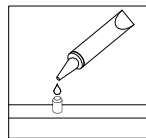


- VI. **HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS**
 - 1.Screw the Cam Bolt into the pre-drilled hole on the panel. Make sure Cam Bolt goes into the pre-drilled hole on the end of panel for Cam Lock.
 - 2.Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of Cam Lock points towards Cam Bolt.
 - 3.Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt.
 - 4.Use the sticker to conceal the Cam.

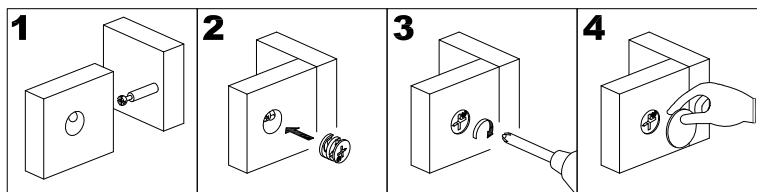


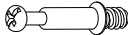


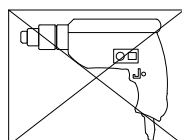




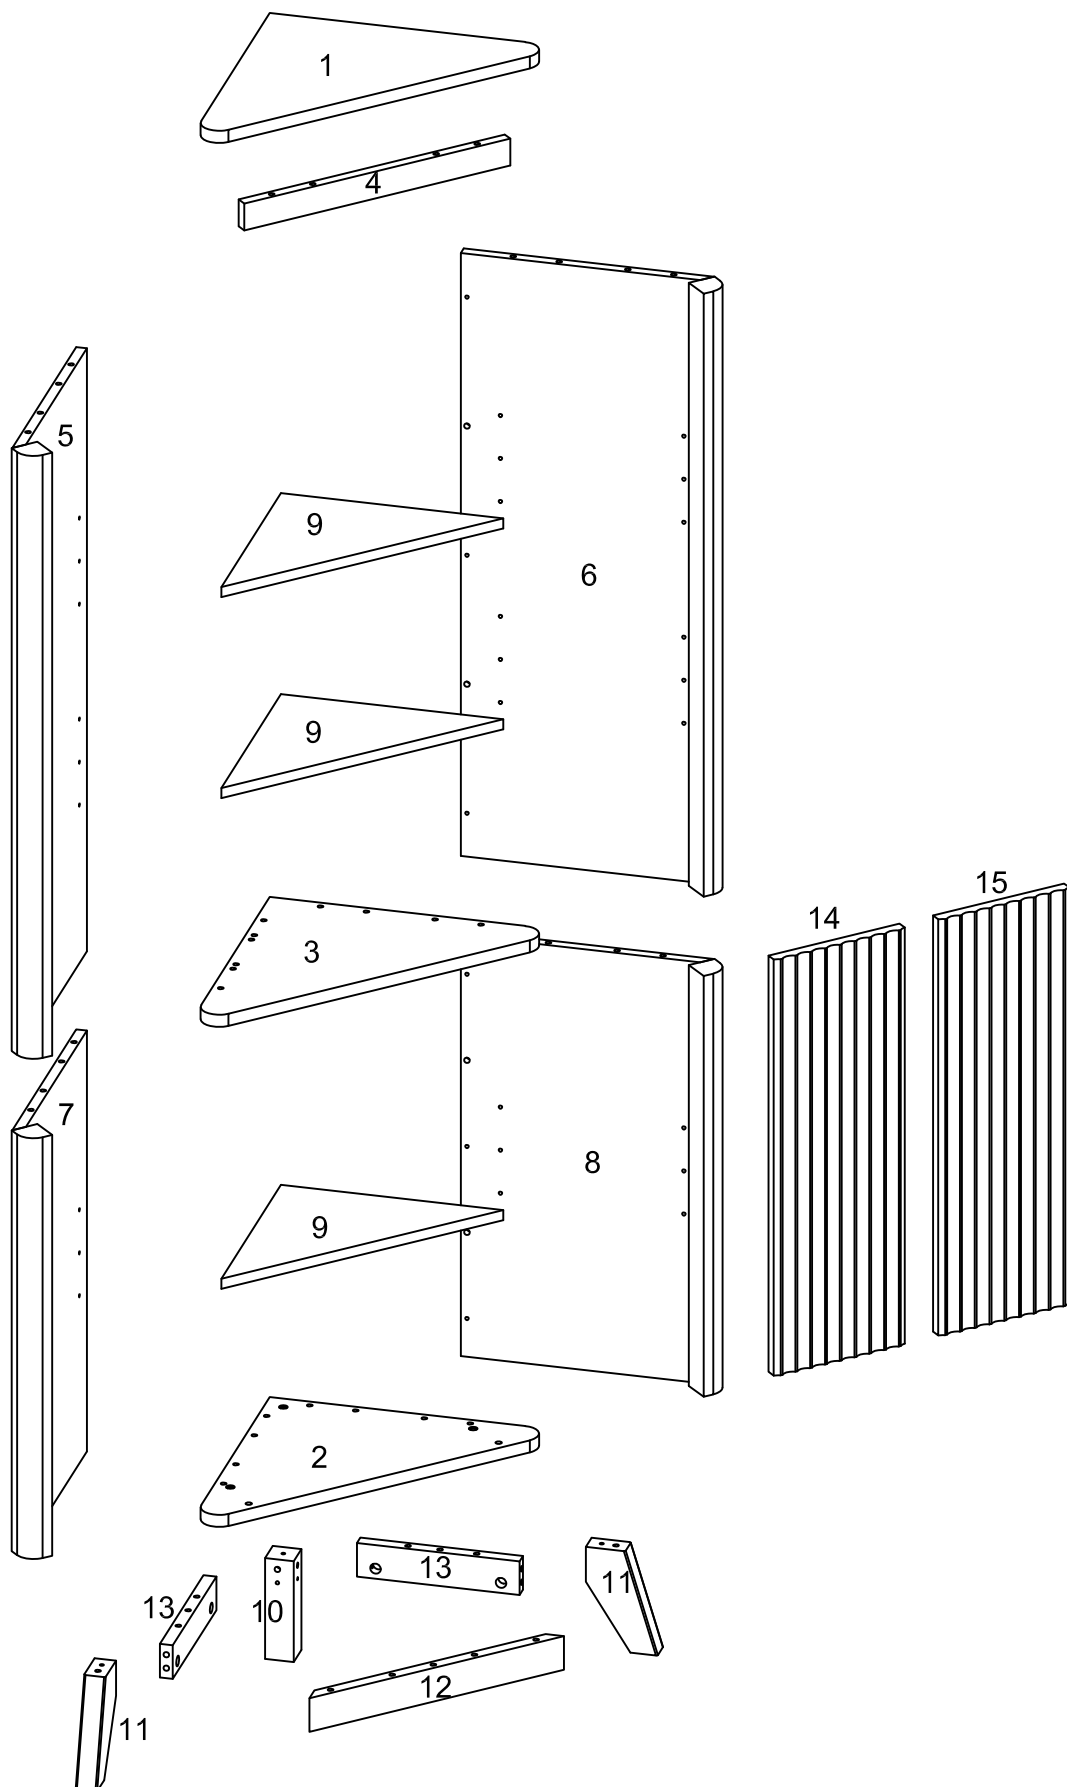







- VII. Power tools should not be used to assemble this product .

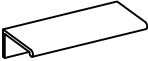


Parts List





Hardware List

A		Ø8x30mm	Dowel	32 pcs
B		Ø6x35mm	Cam Bolt	20 pcs
C		Ø15x12mm	Long Cam Lock	20 pcs
D		Ø30mm	Cam Cover	20 pcs
E			Handle	2 pcs
F		Ø4x12mm	Screw	4 pcs
G			Left Pin Hinge	2 pcs
H			Right Pin Hinge	2 pcs
I			Spacer	4 pcs
J		Ø3x15mm	Screw	10 pcs
K		M4	Allen Wrench	1 pc
L		Ø6x50mm	Screw	11 pcs
M			Glue tube	1 pc
N			Magnetic catch	1 pc
O		Ø5x16mm	Shelf support pin	12 pcs
P		1/4"x50mm	Bolt	7 pcs
Q			Tipping Restraint Hardware	2 pcs


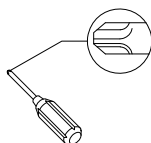


Philips head screwdriver required for assembly
(not included)



Step 1

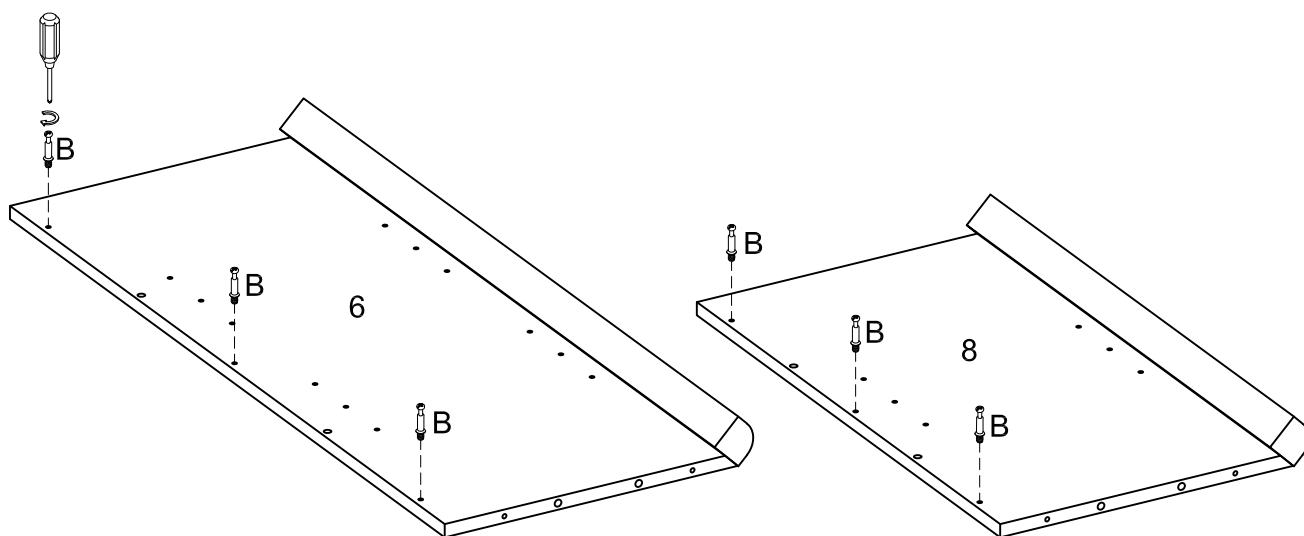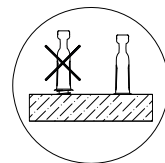


Step 2

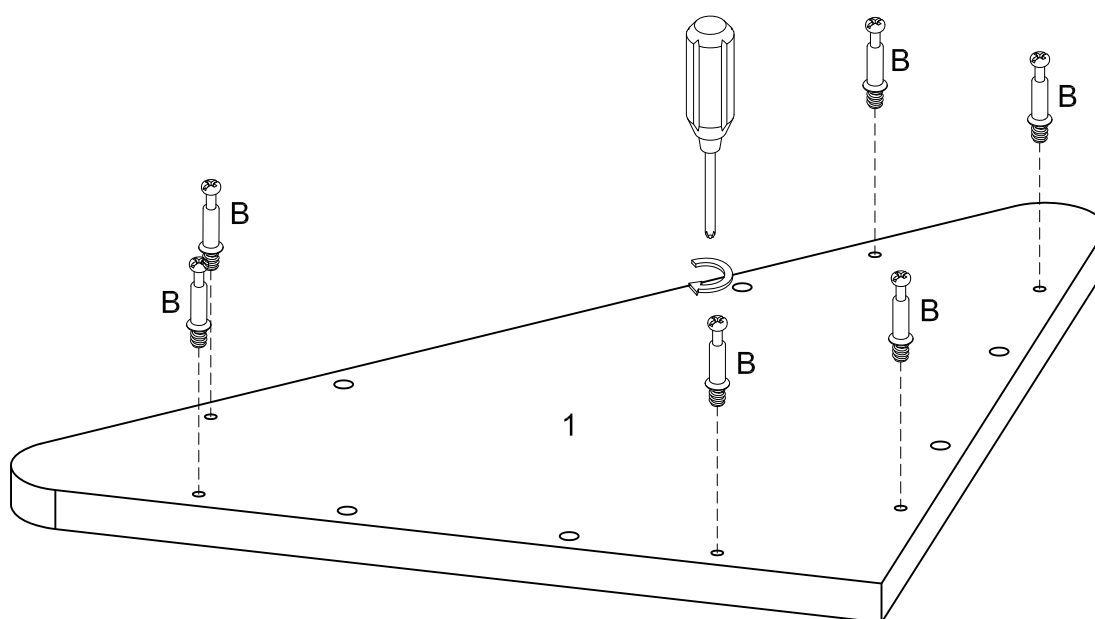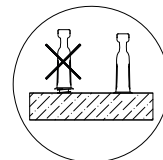



Step 3

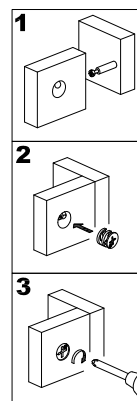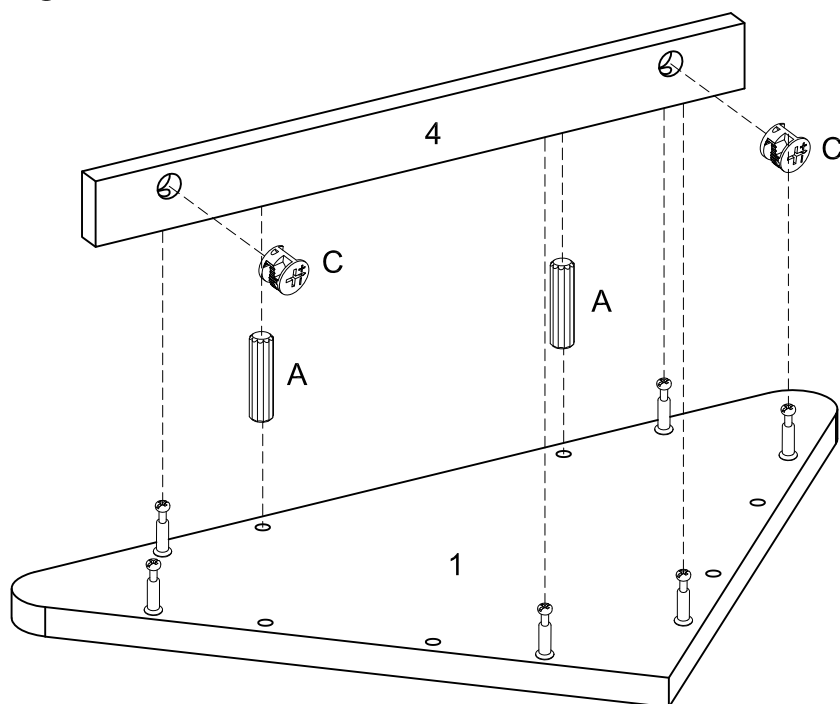



Step 4

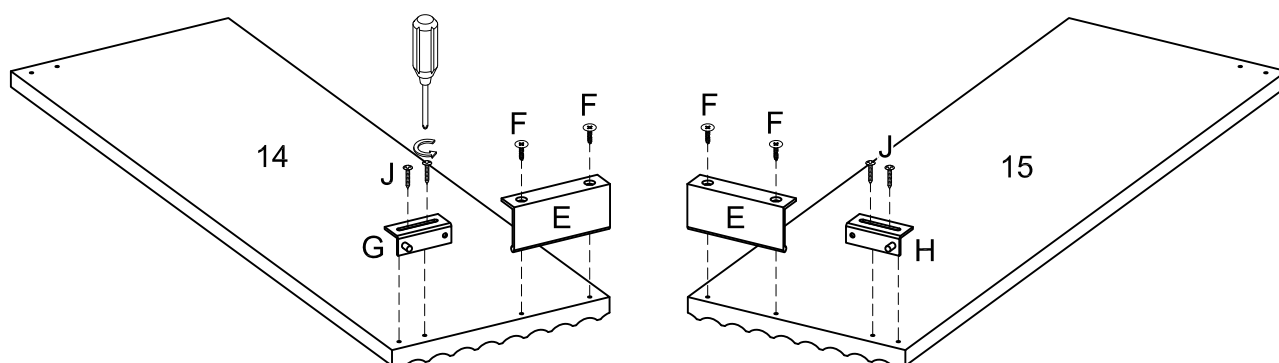


Step 5

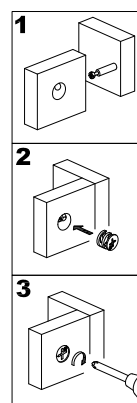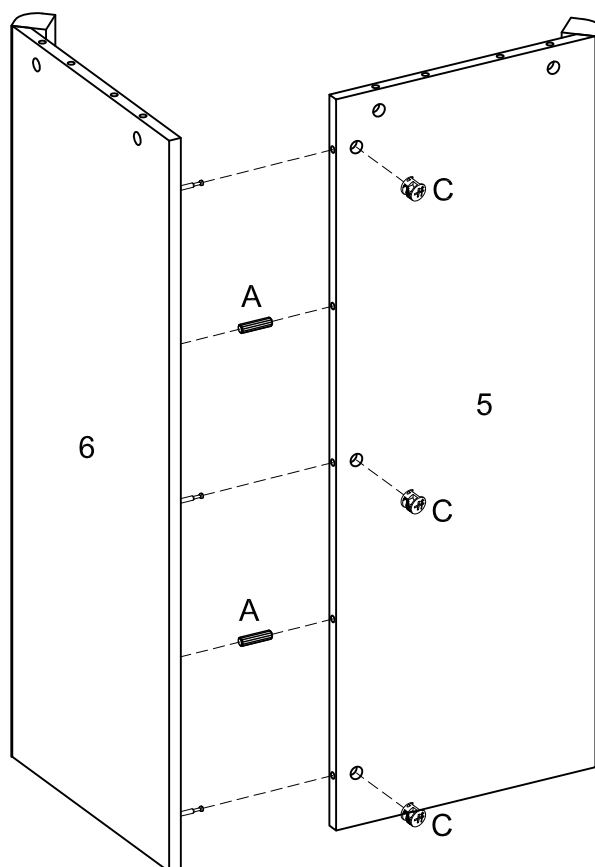


Step 6

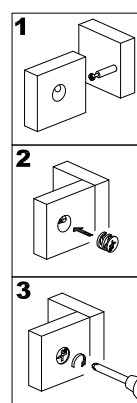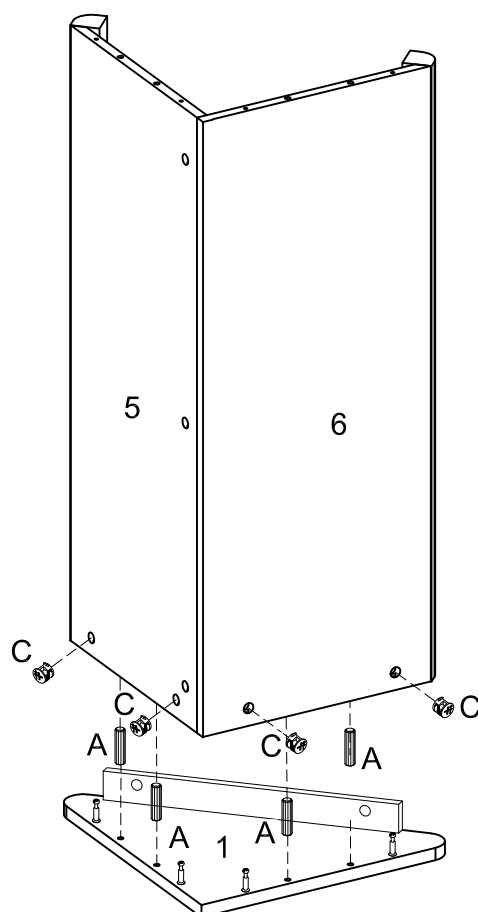



Step 7

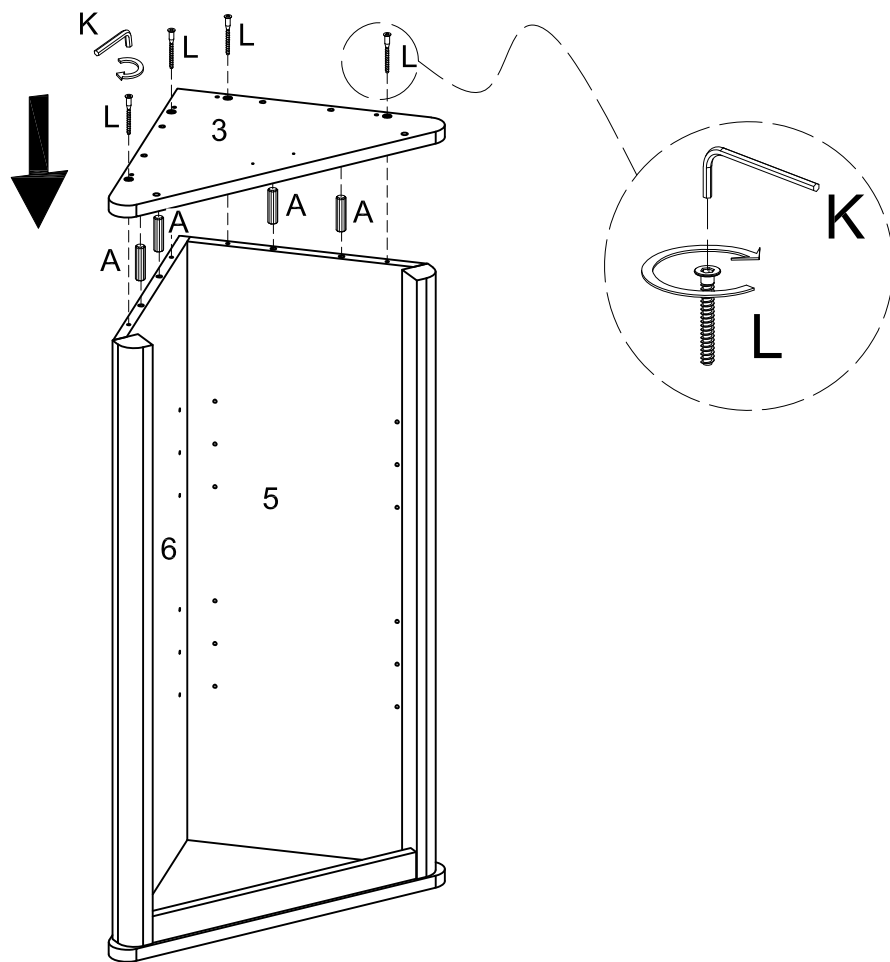


Step 8

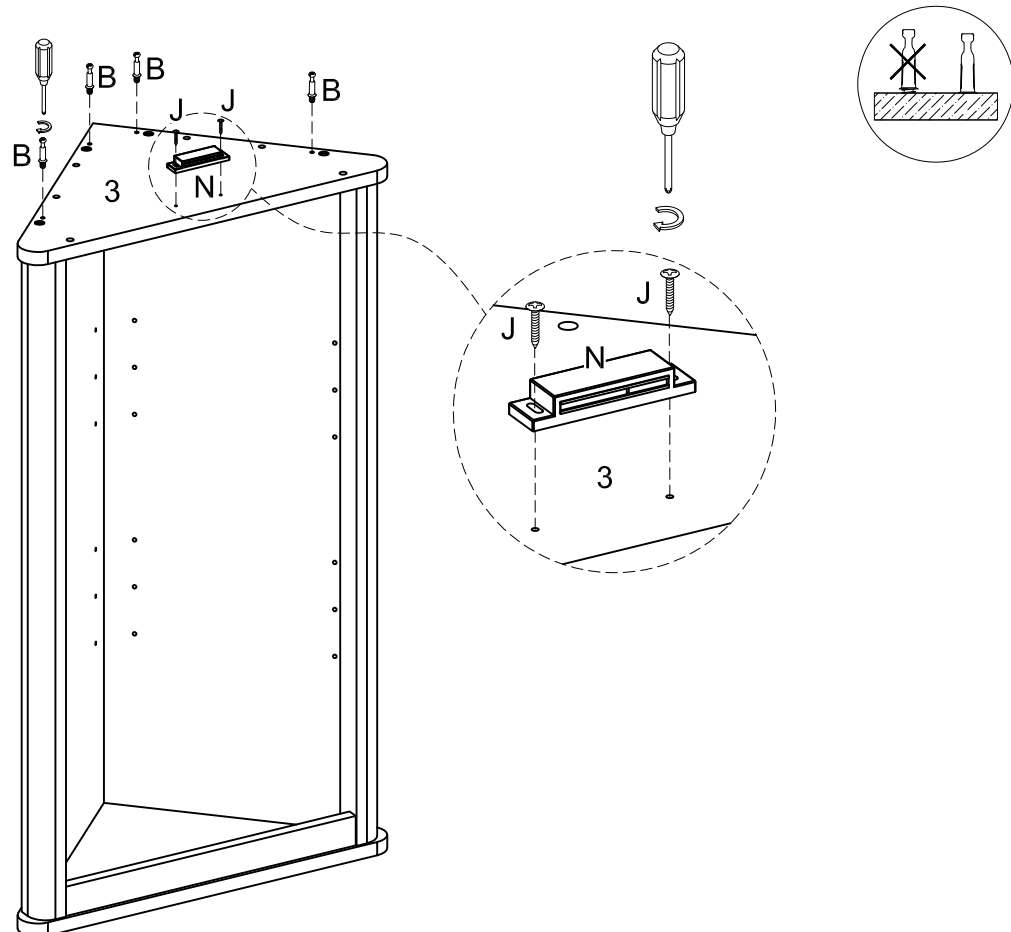




Step 9

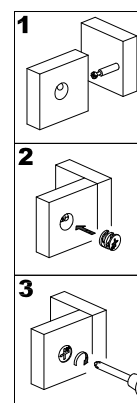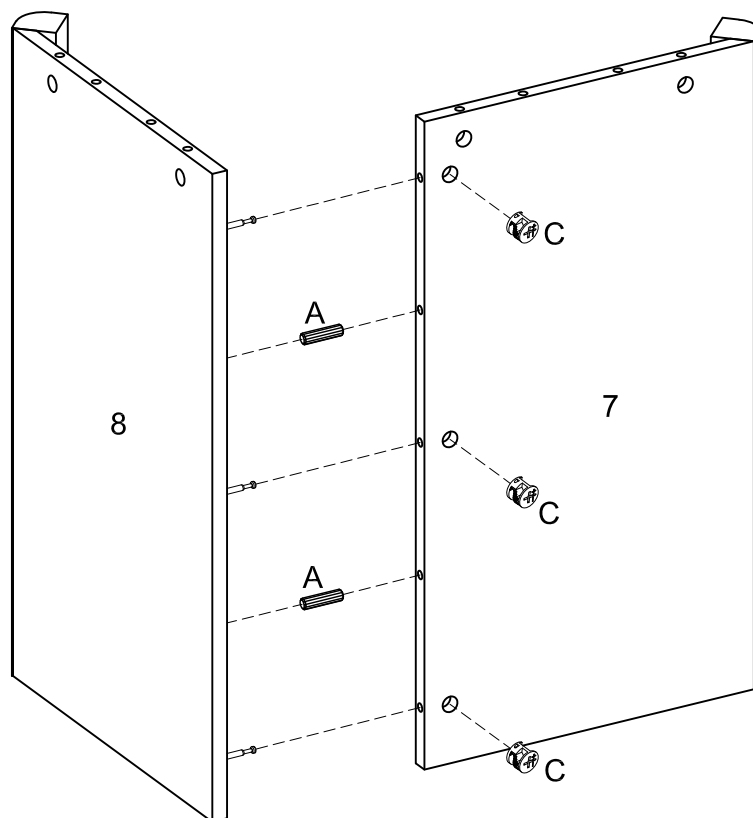



Step 10

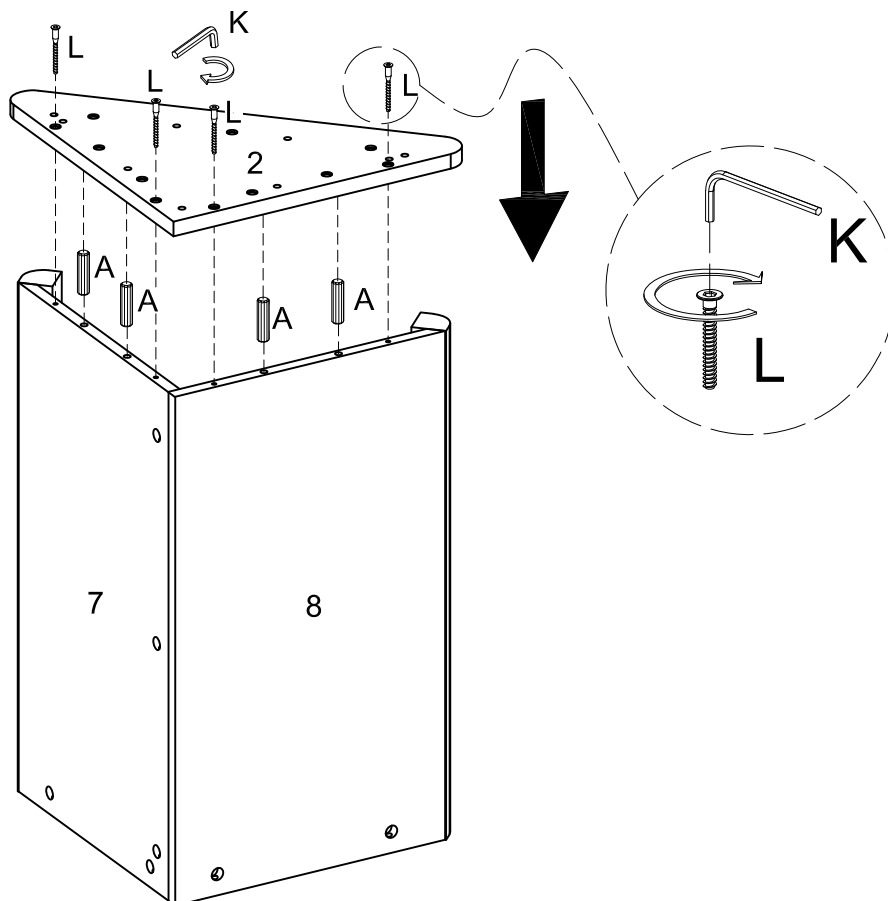


Step 11

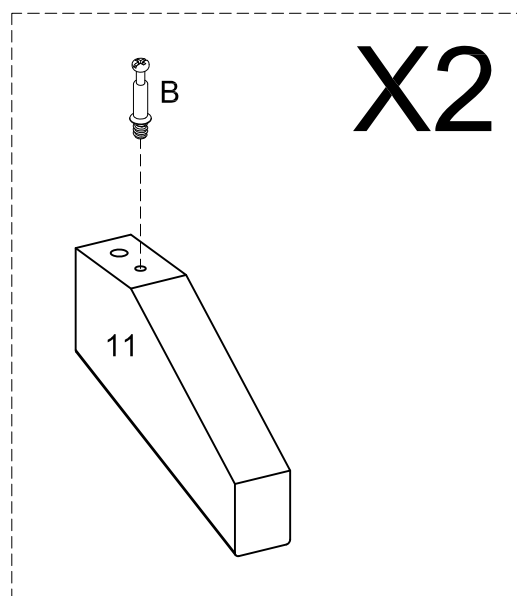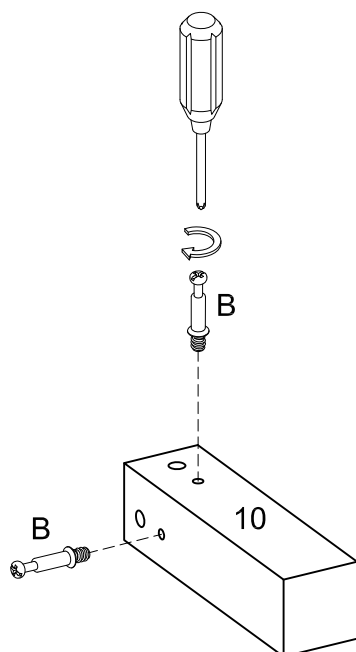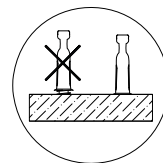


Step 12

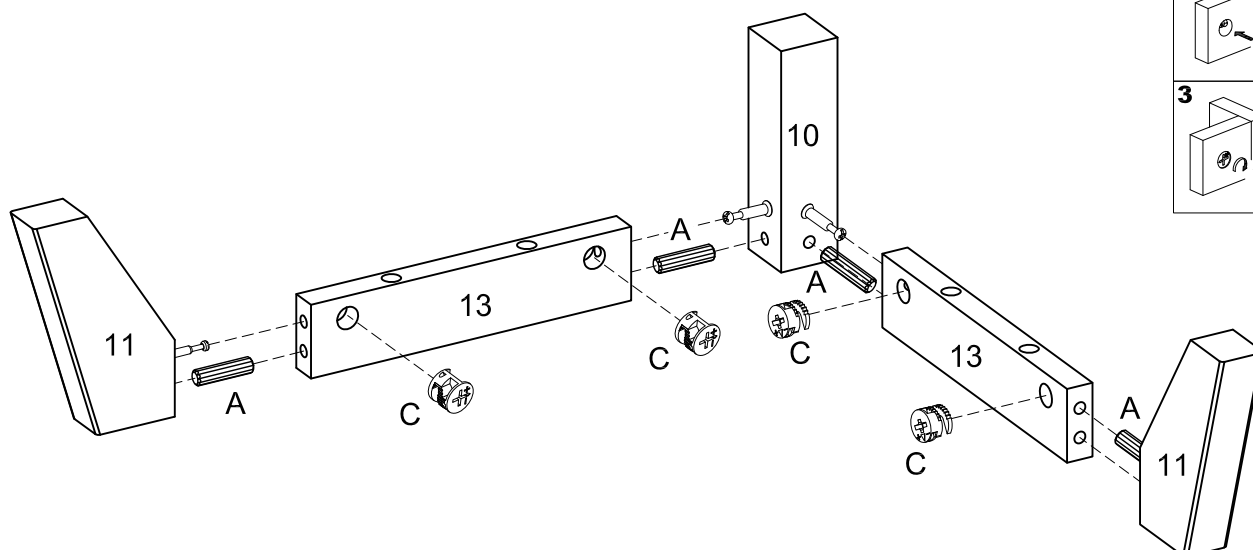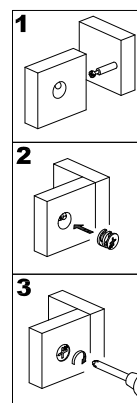



Step 13

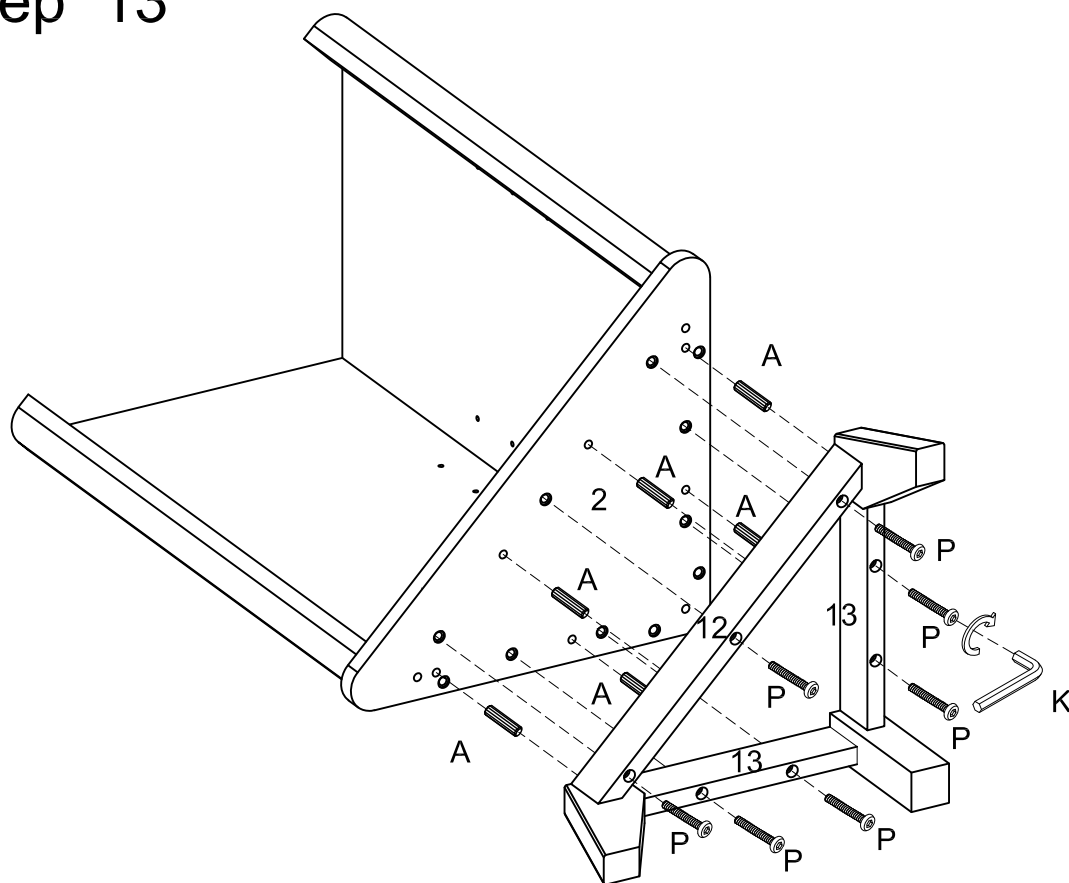




Step 14

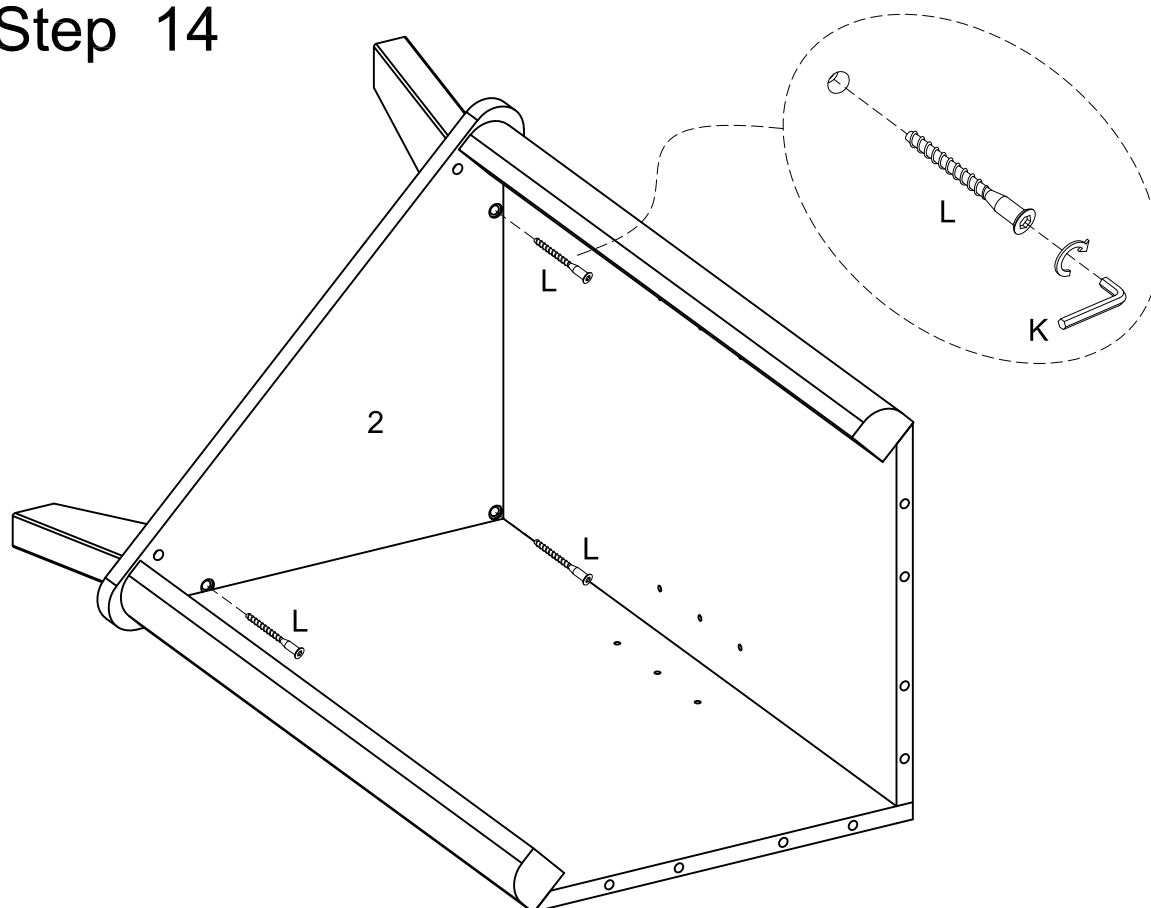


Step 15

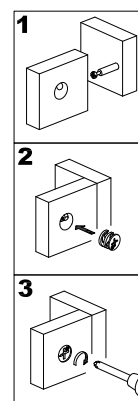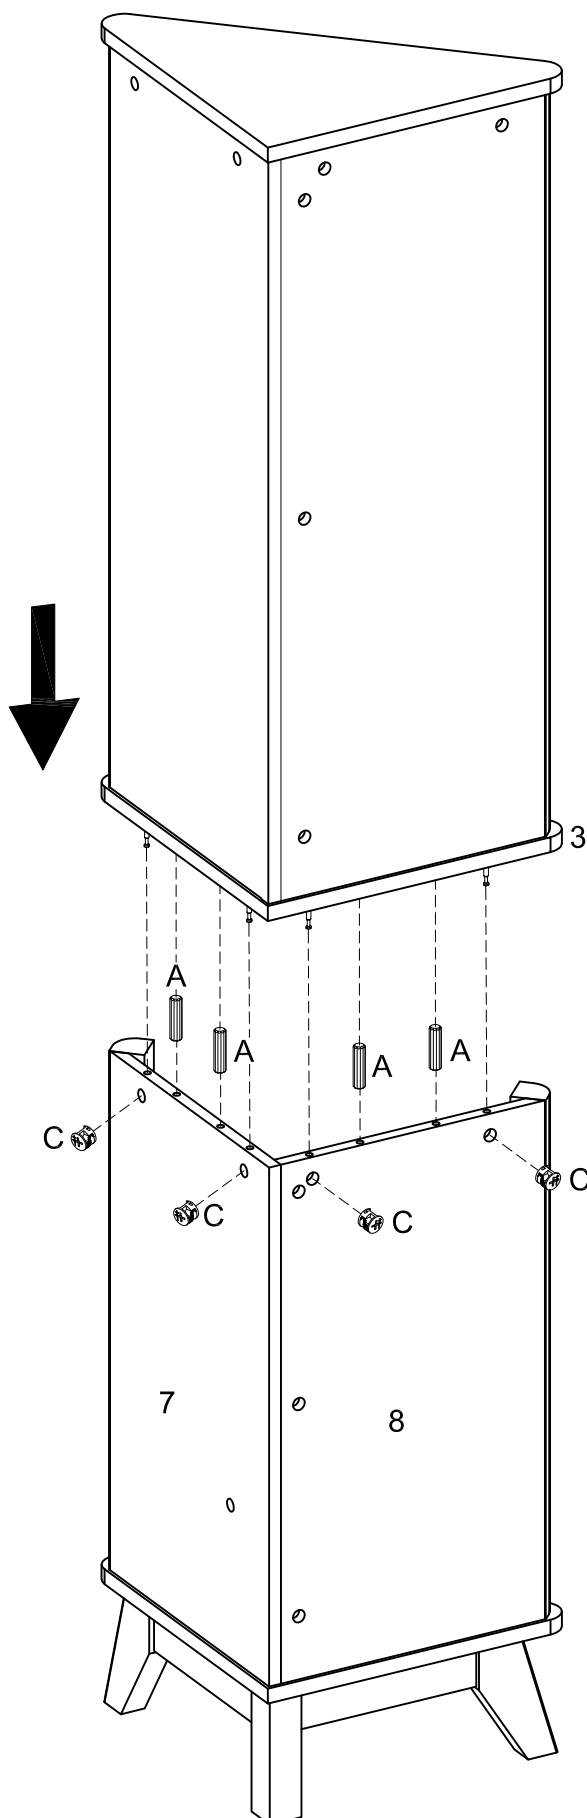

Step 16

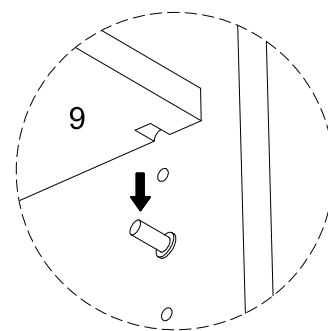
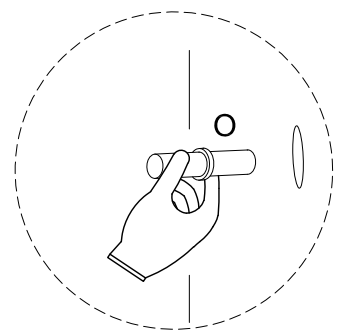
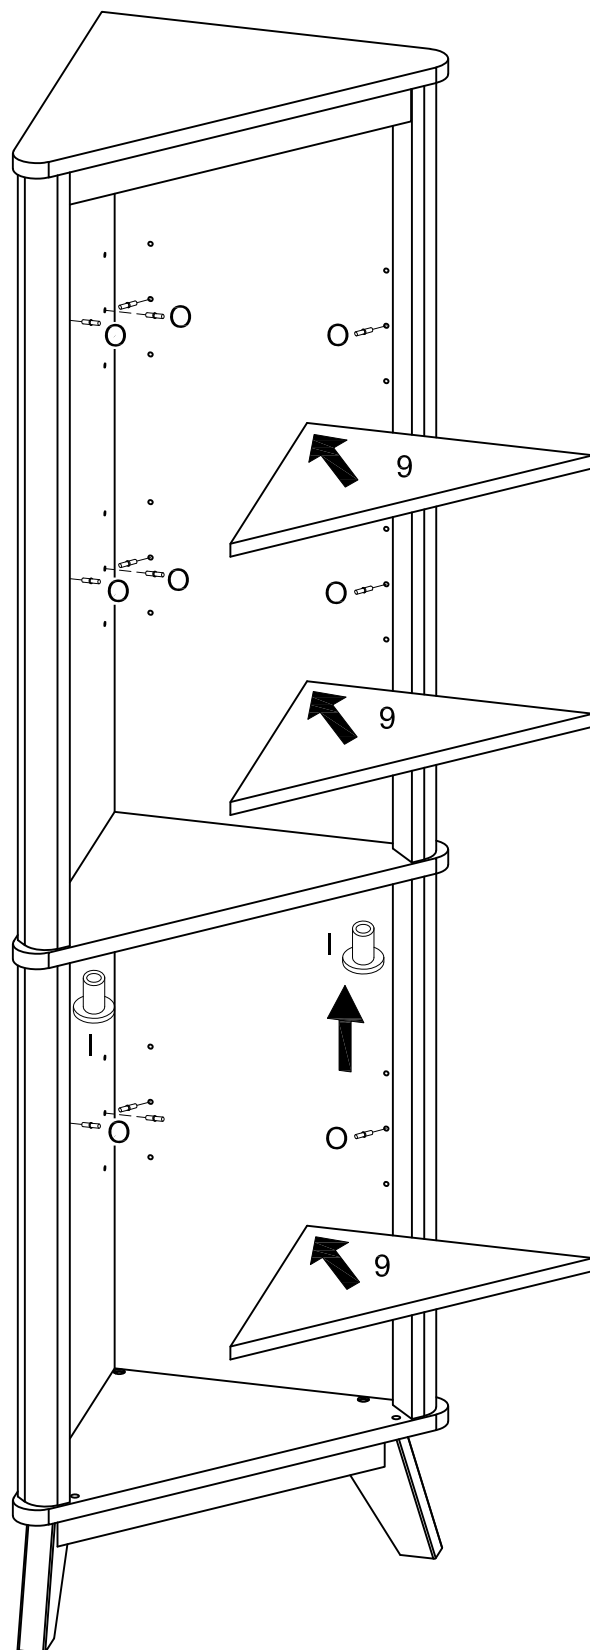


Step 17

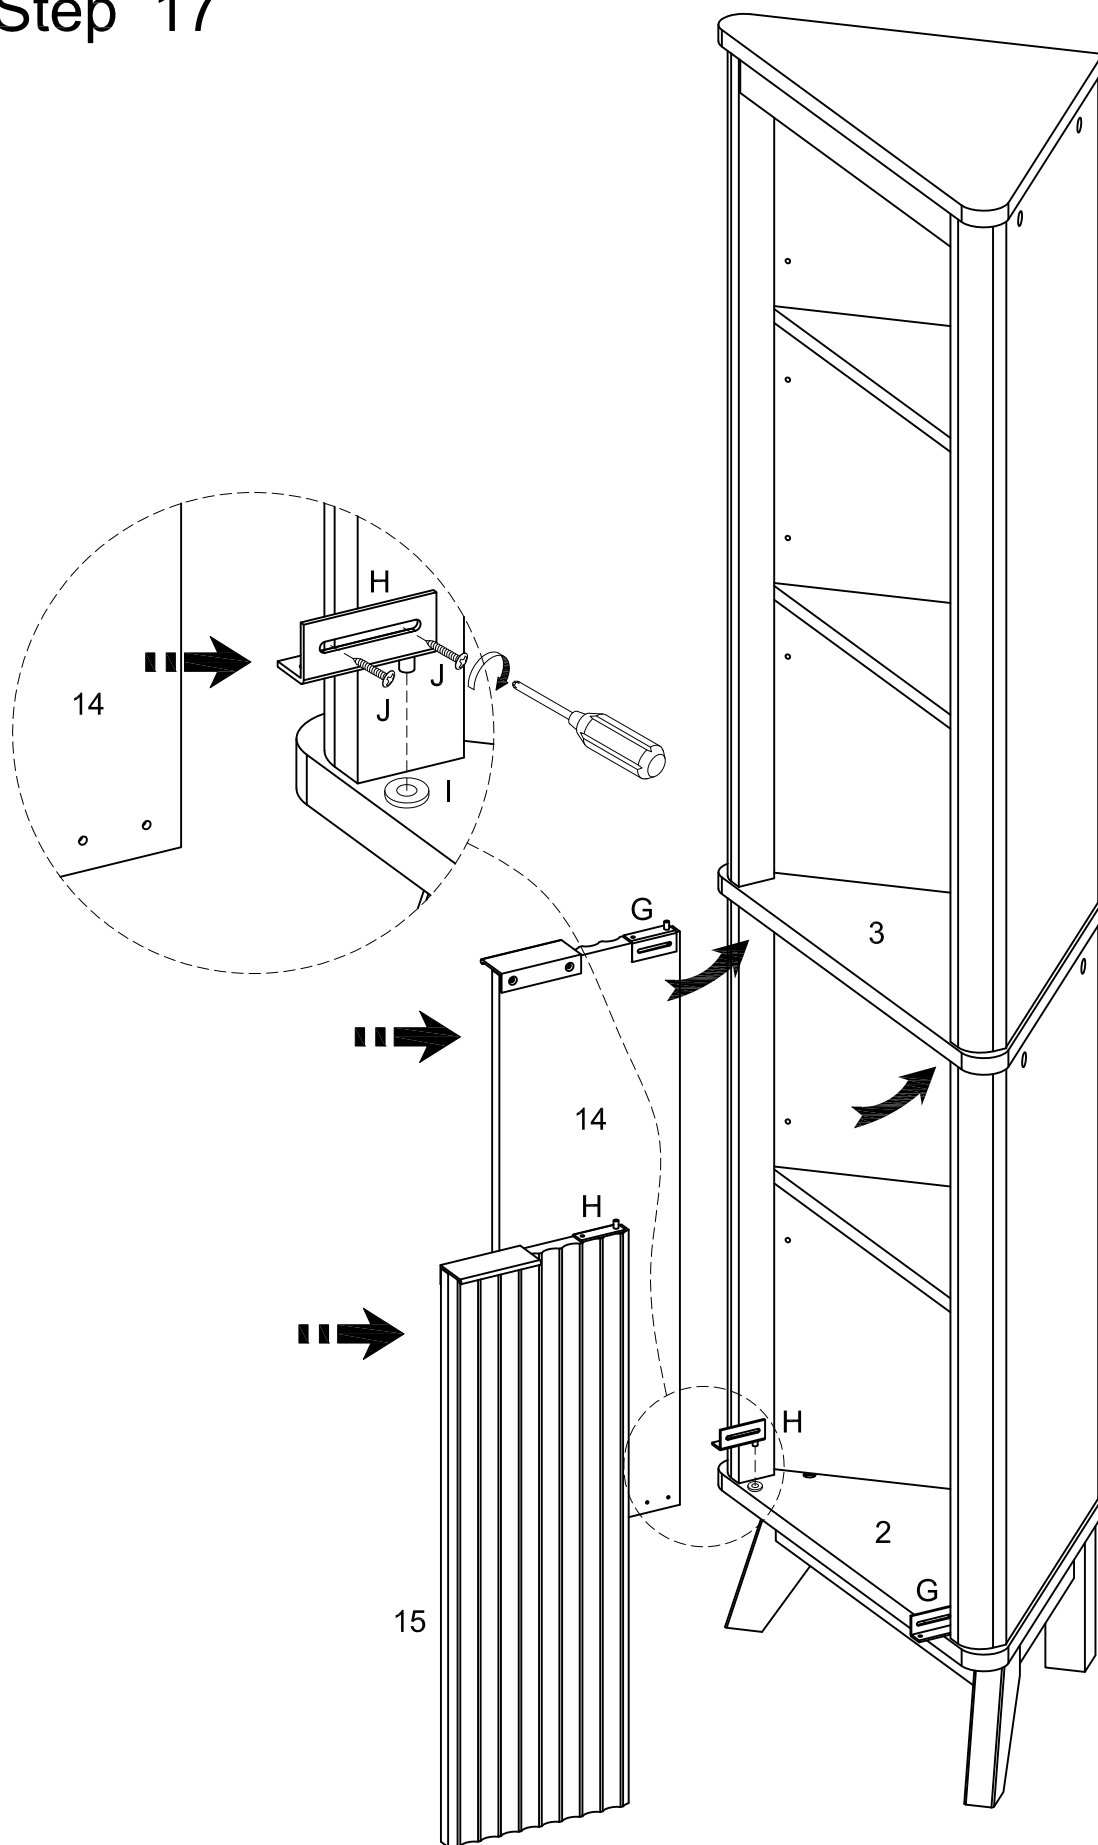

Step 18

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

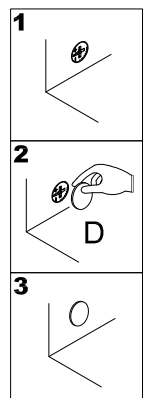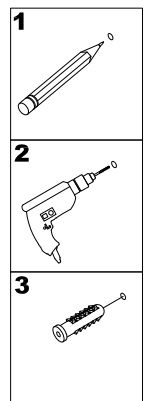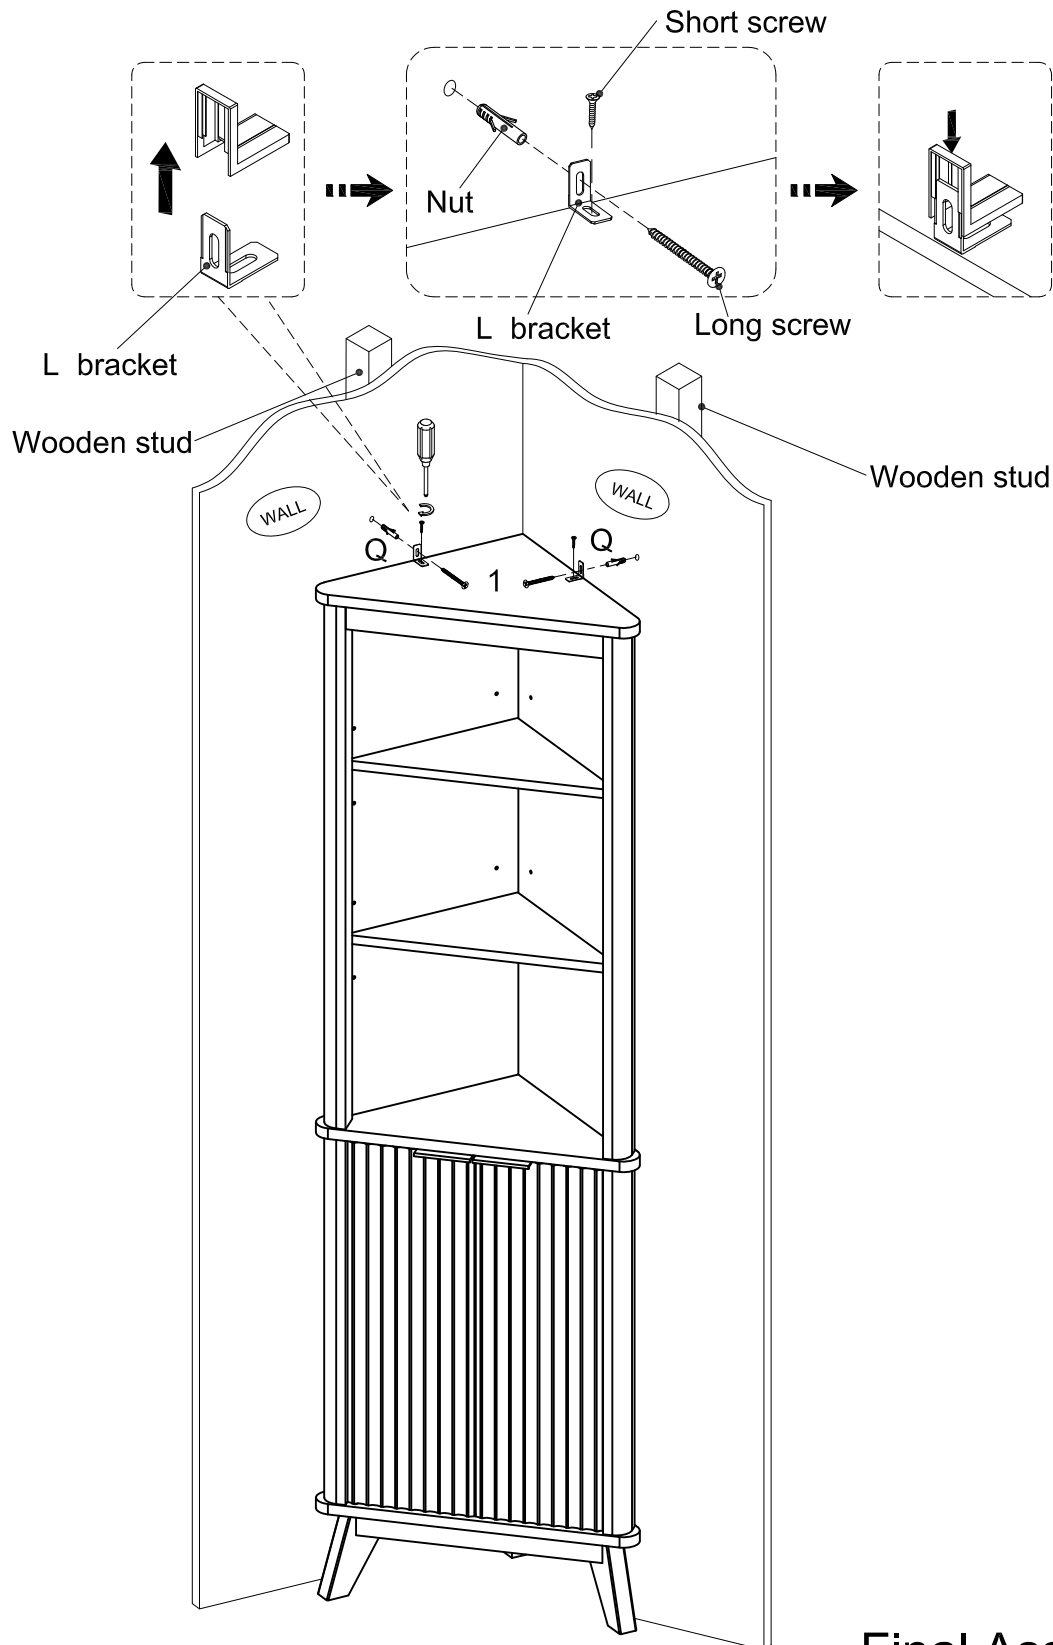

Final Assembly