



MB2401-F/Q

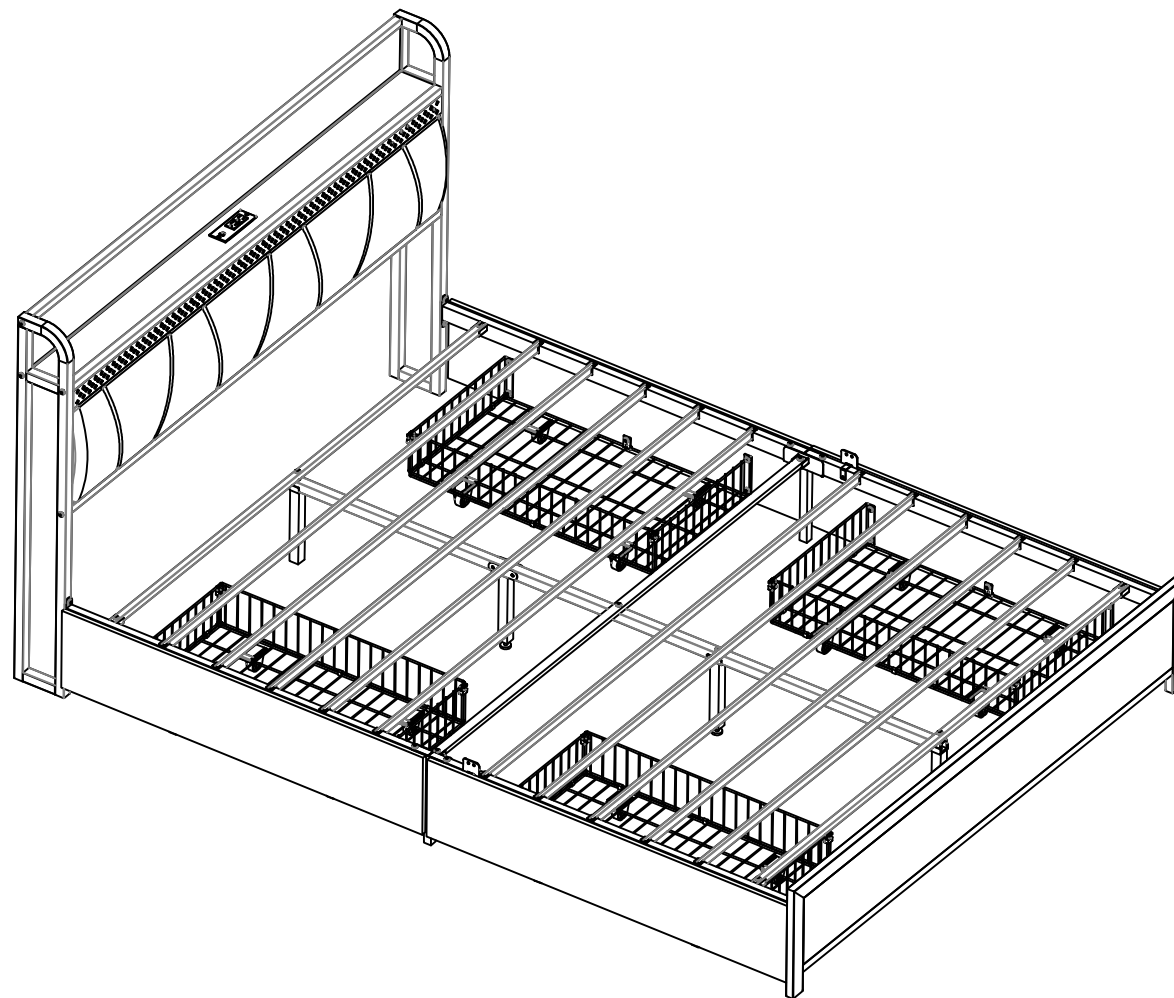

Attention: Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other. If the screws are tightened initially, subsequent hole positions may be misaligned.

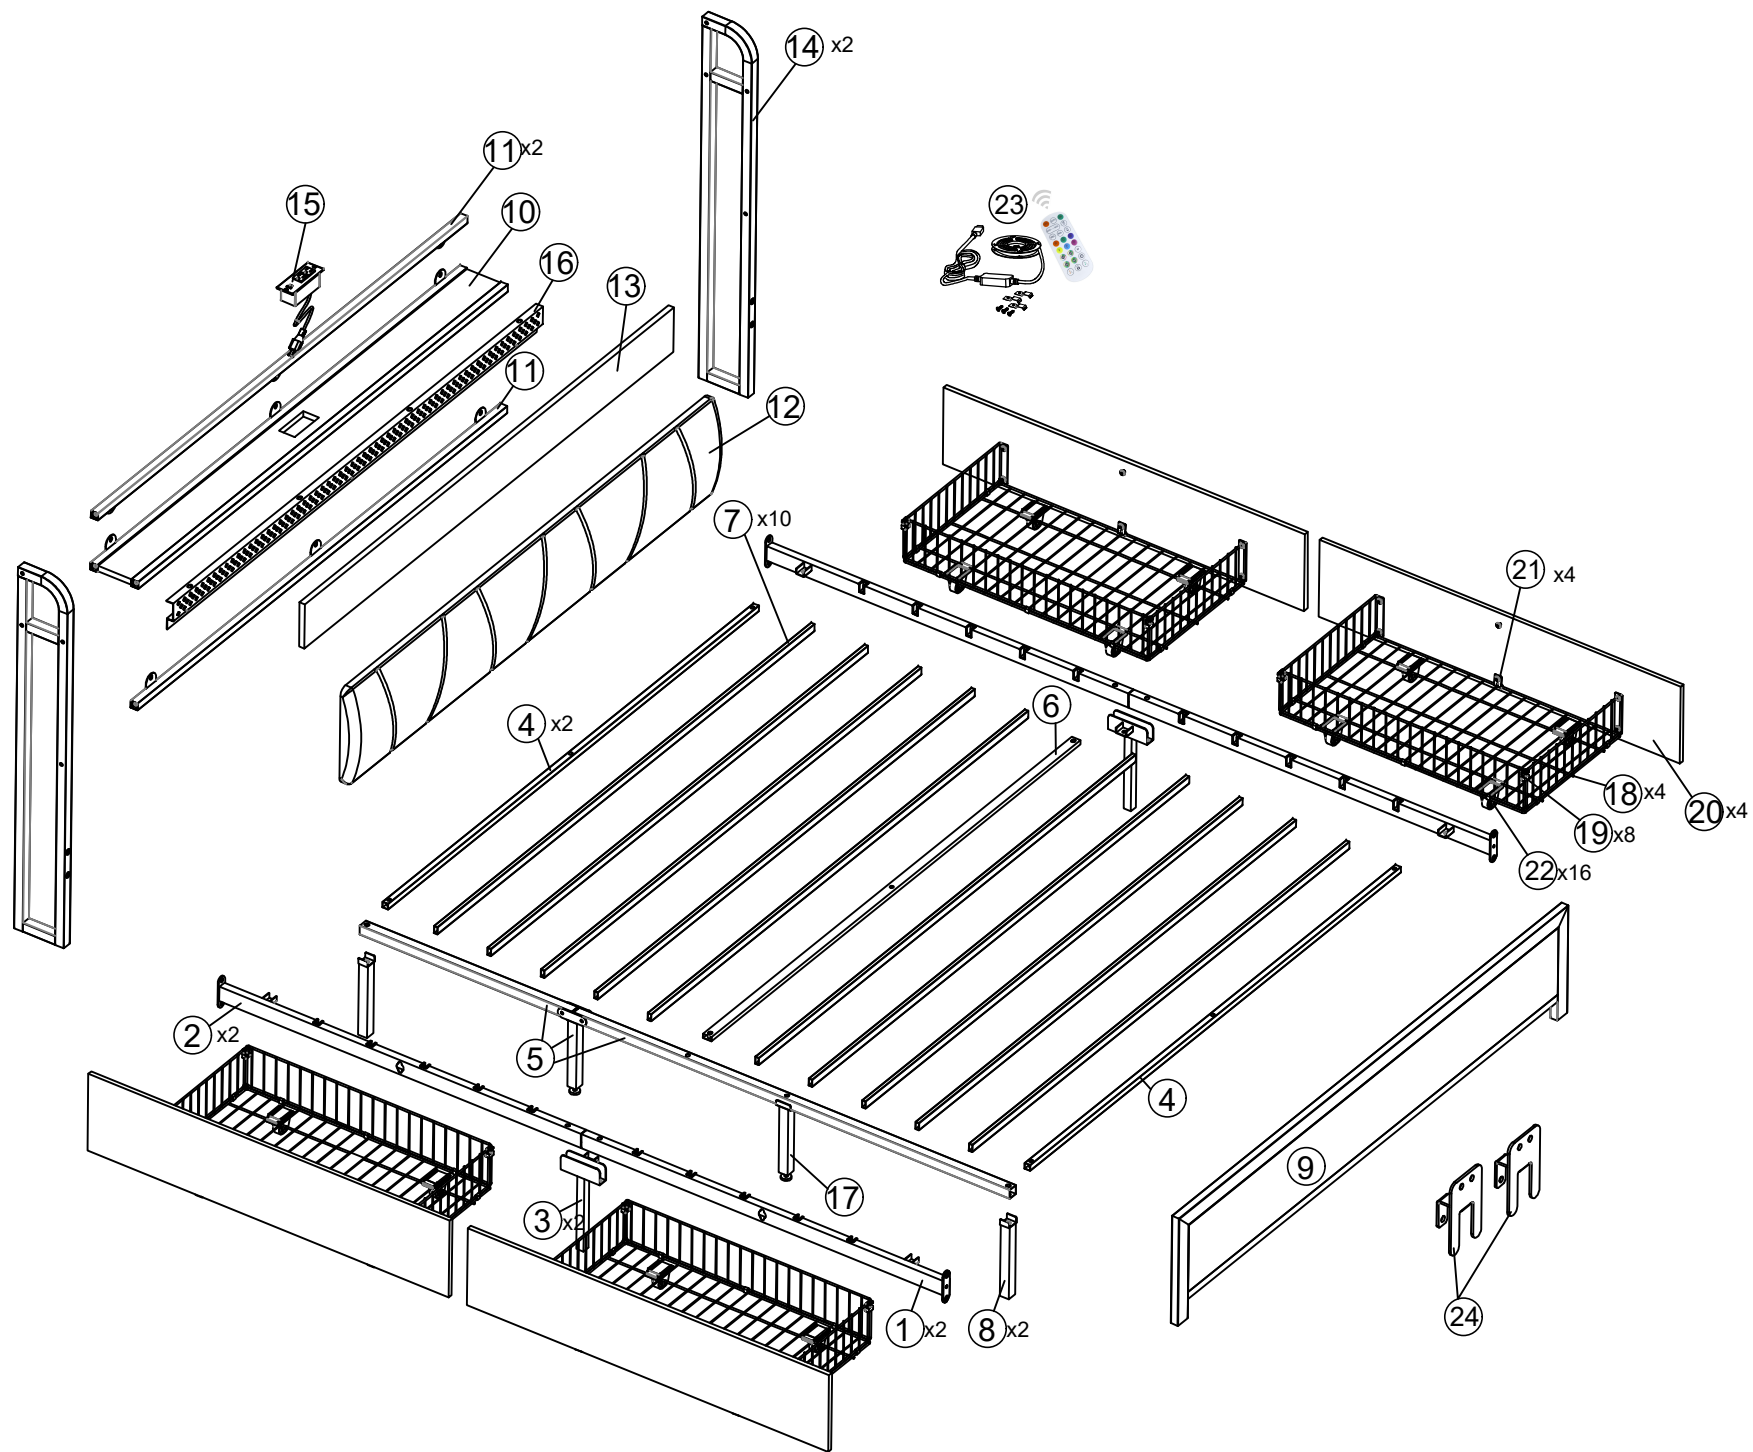

Hardware arts



M4*12

(A) 2PCS



M6*12

(B) 40 PCS



M6*25

(C) 5PCS




M6*45

(D) 8PCS



M8*20

(E) 10PCS



M8*50

(F) 7PCS



4#


(G) 1PC




5#

(H) 1PC

Part list




(1) 2PCS



(2) 2PCS




(3) 2PCS

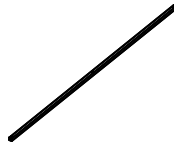

(4) 2PCS



(5) 1PC

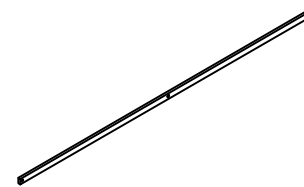


(6) 1PC



(7) 10PCS



(8) 2PCS

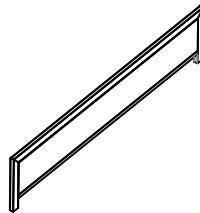


(9) 1PC




(10) 1PC



(11) 2PCS

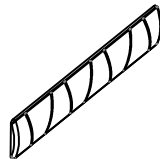


(12) 1PC

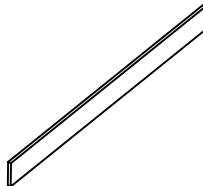

(13) 1PC



(14) 2PCS




(15) 1PC




(16) 1PC



(17) 1PC

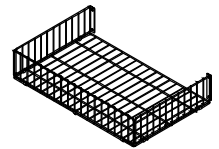

(18) 4PCS




(19) 8PCS



(20) 4PCS



(21) 4PCS






(22) 16PCS



(23) 1PC




(24) 2PCS

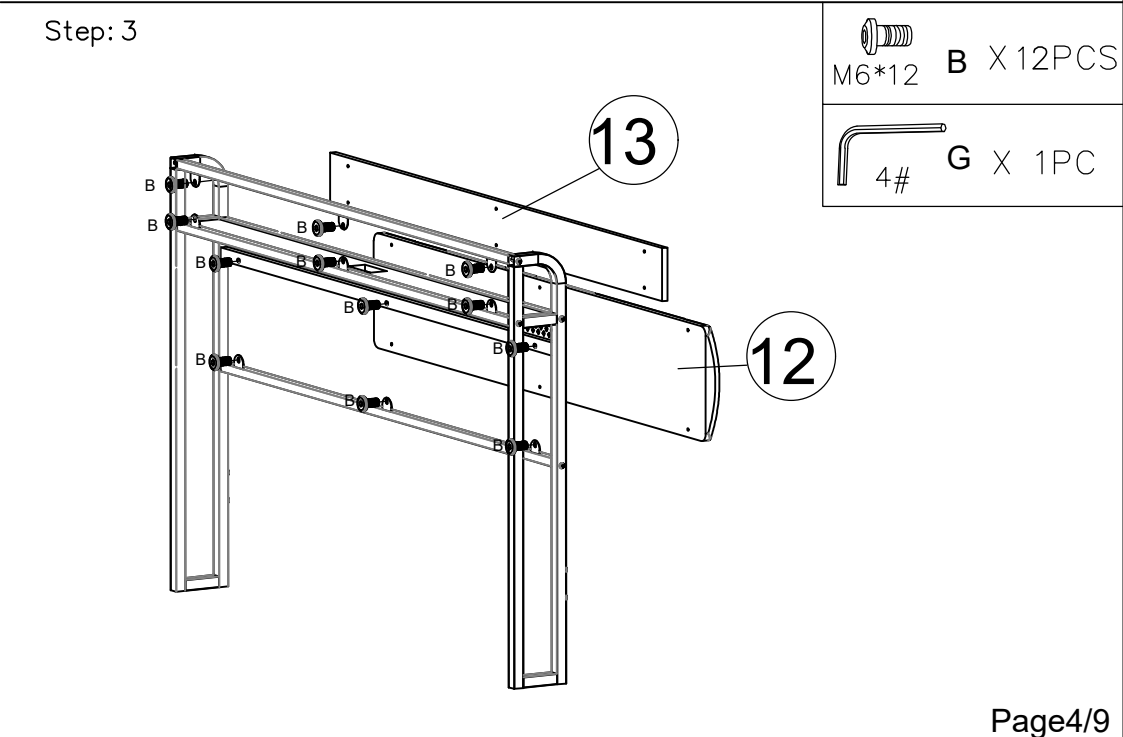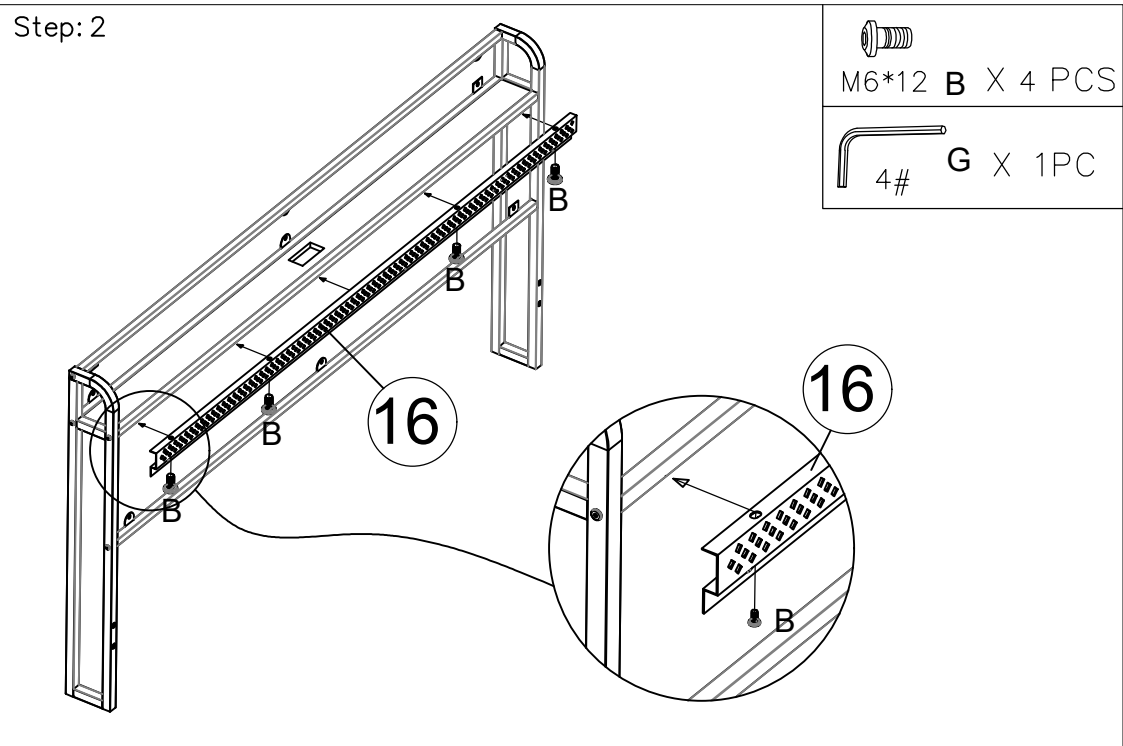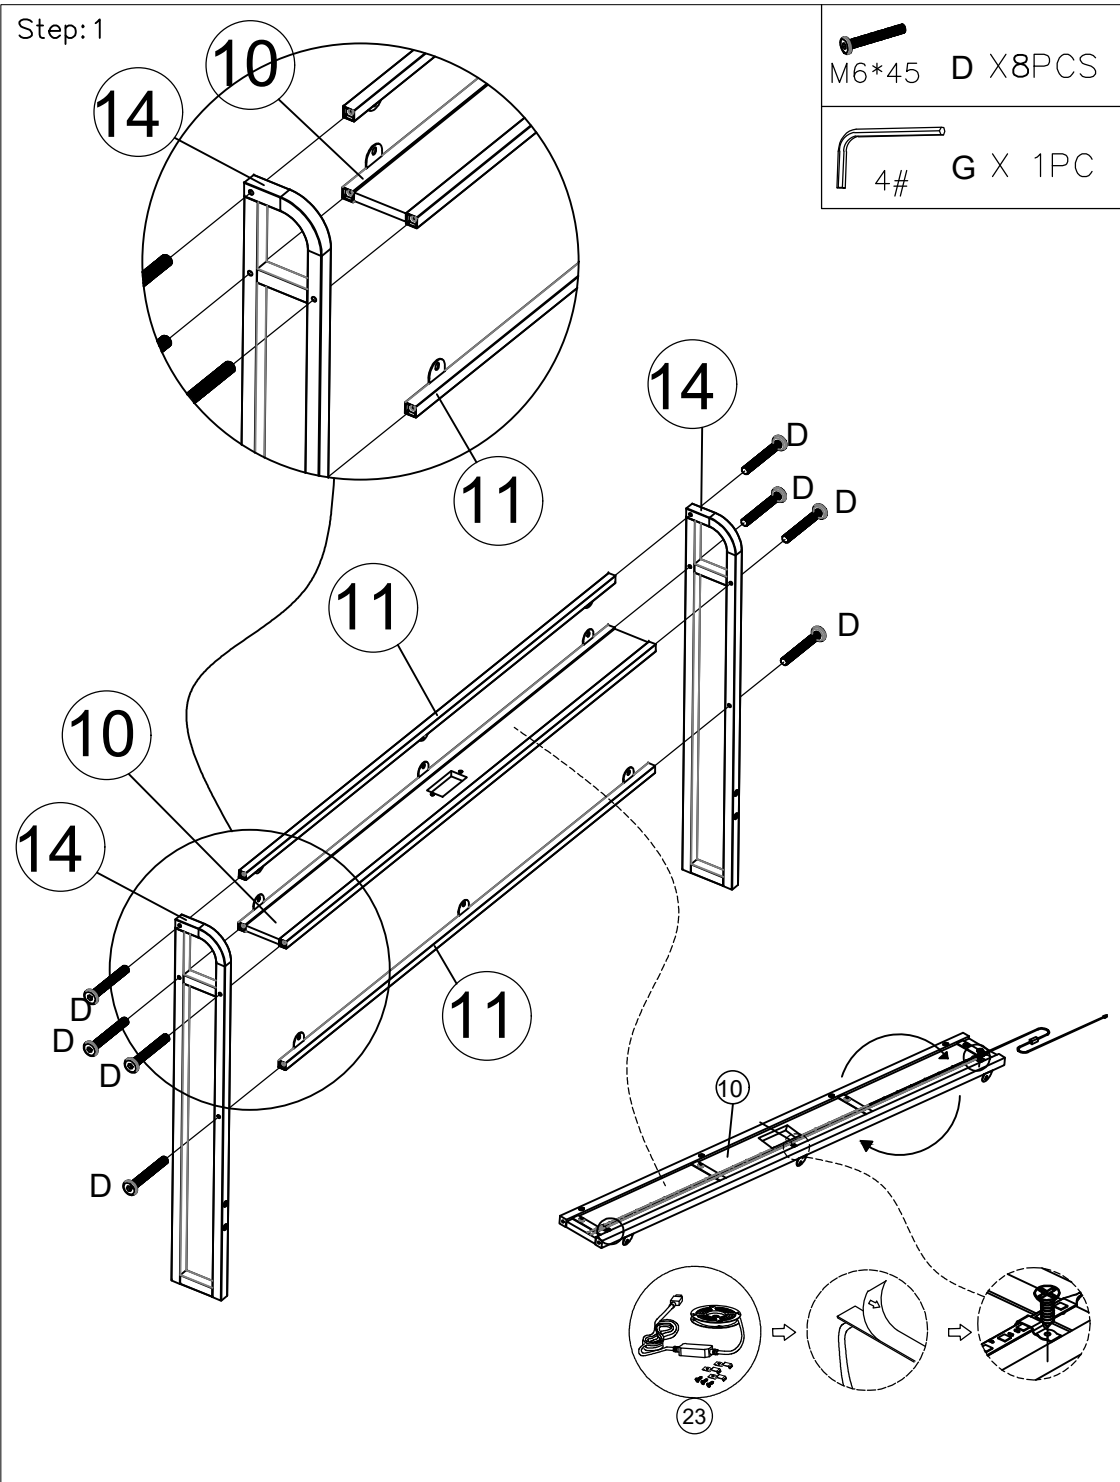


Step: 4




**Please pay attention to the
direction arrow in the illustration
to avoid reverse installation**



M8*50 F X 4PCS




5# H X 1PC

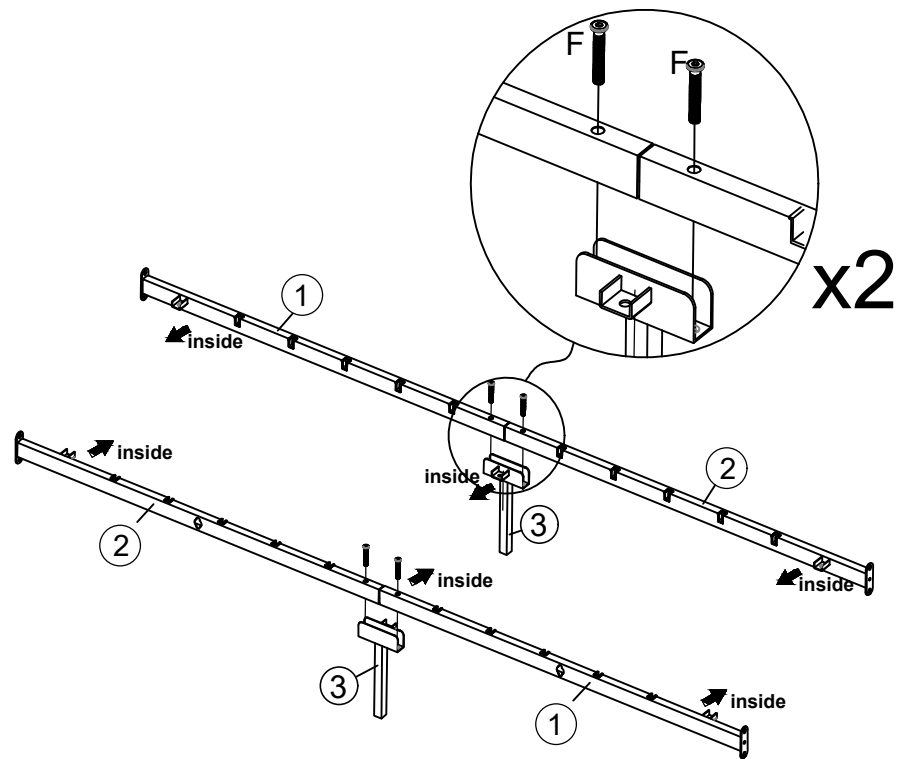

Step: 5




M4*12 A X 2PCS




M8*20 E X 8PCS



5# H X 1PC

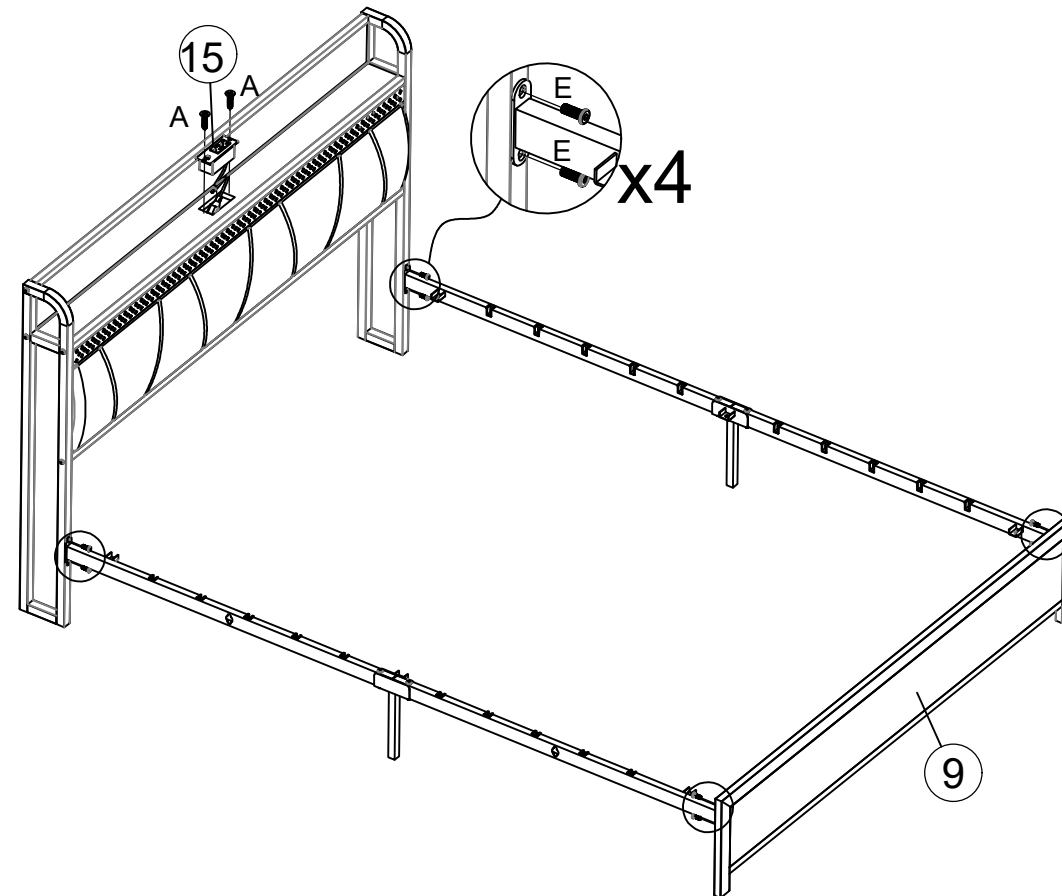

Step: 6



5# H X 1PC




M8*20 E X2PCS





4# G X 1PC



M6*25 C X4PCS

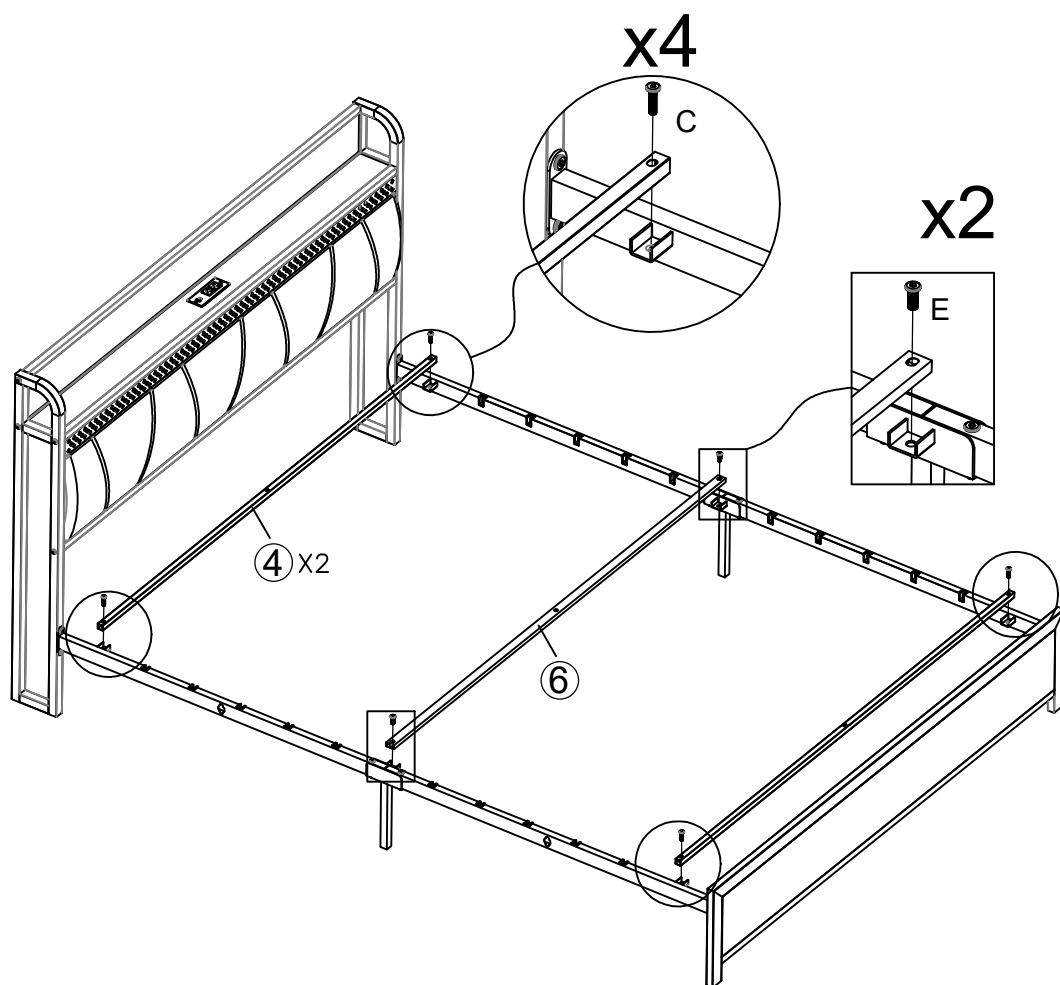


Step: 7

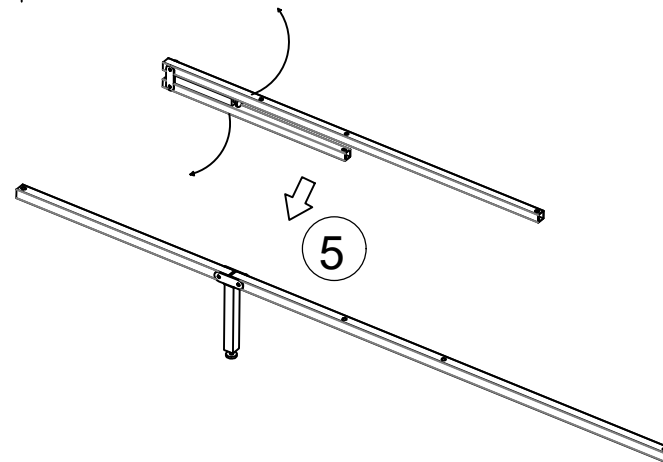

M8*50 F X 3 PCS




M6*25 C X 1PC




4# G X 1PC




5# H X 1P

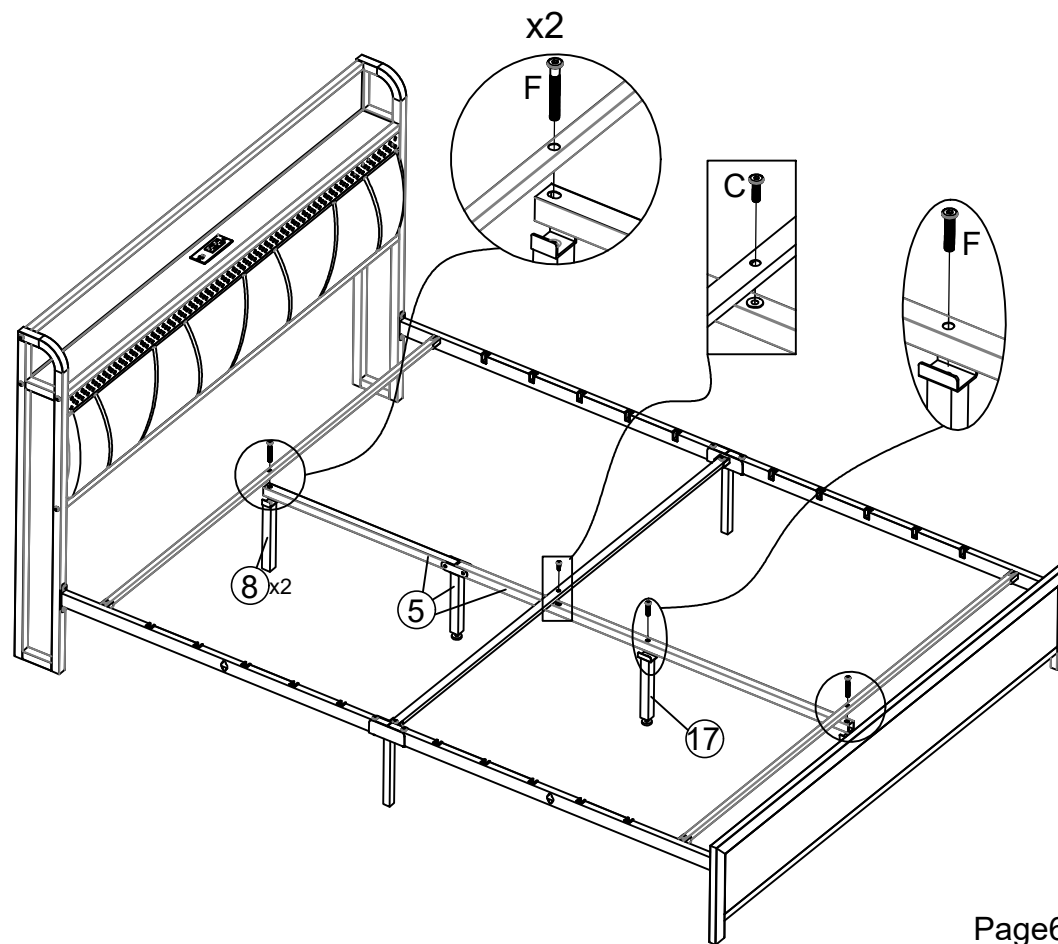


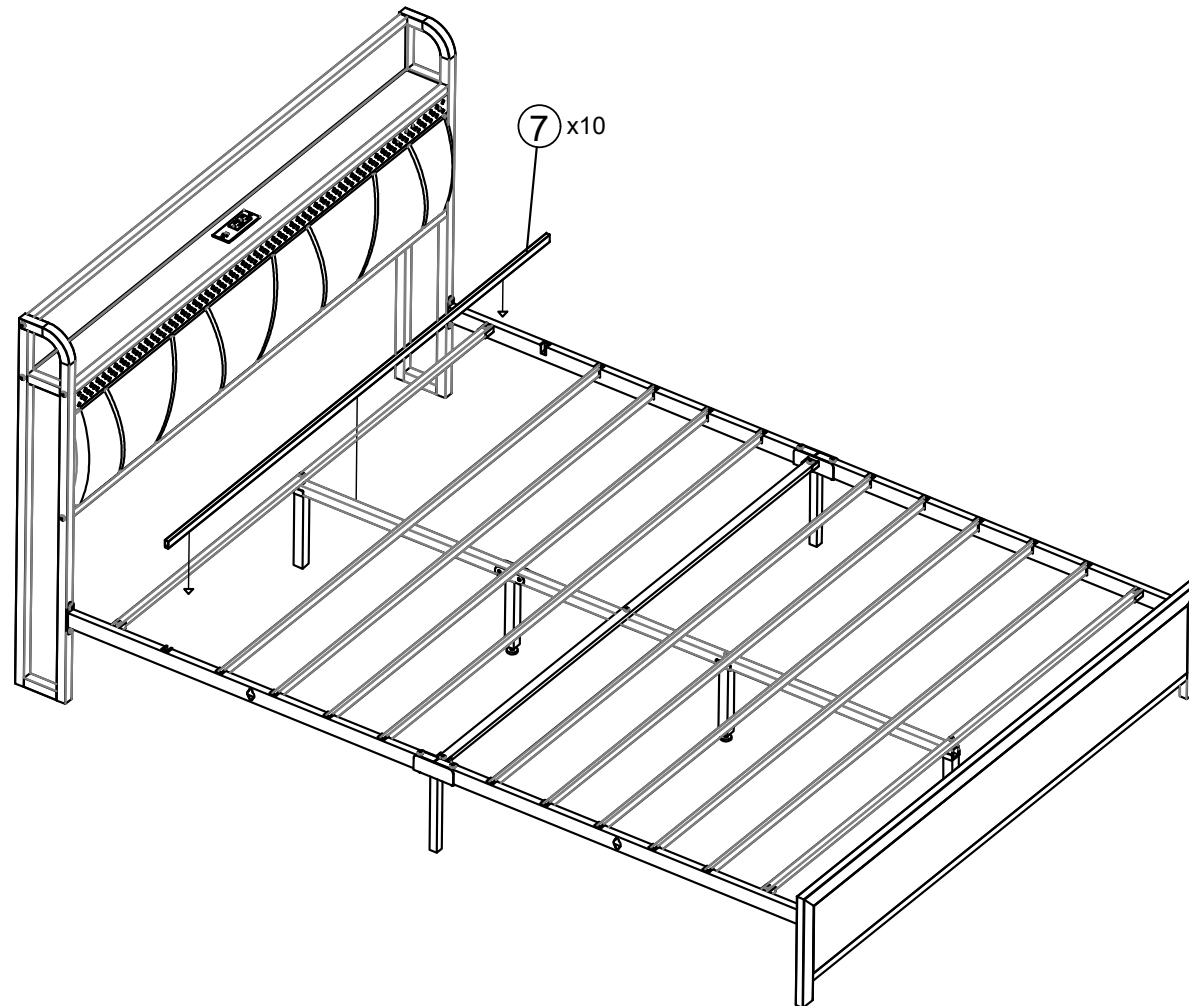


Step:9

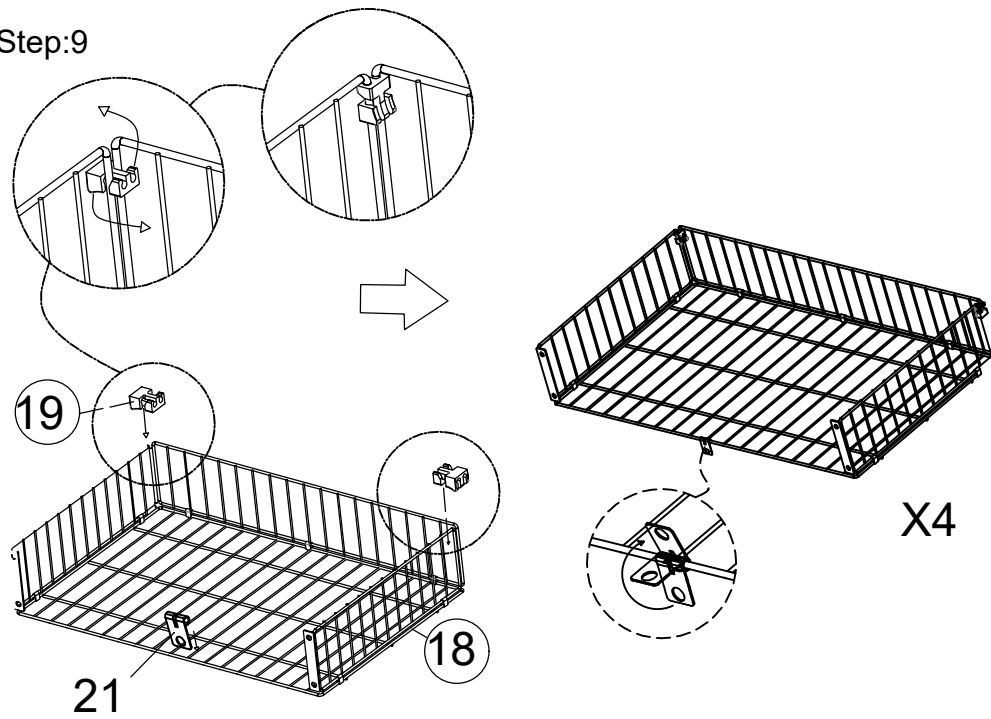

Step:10

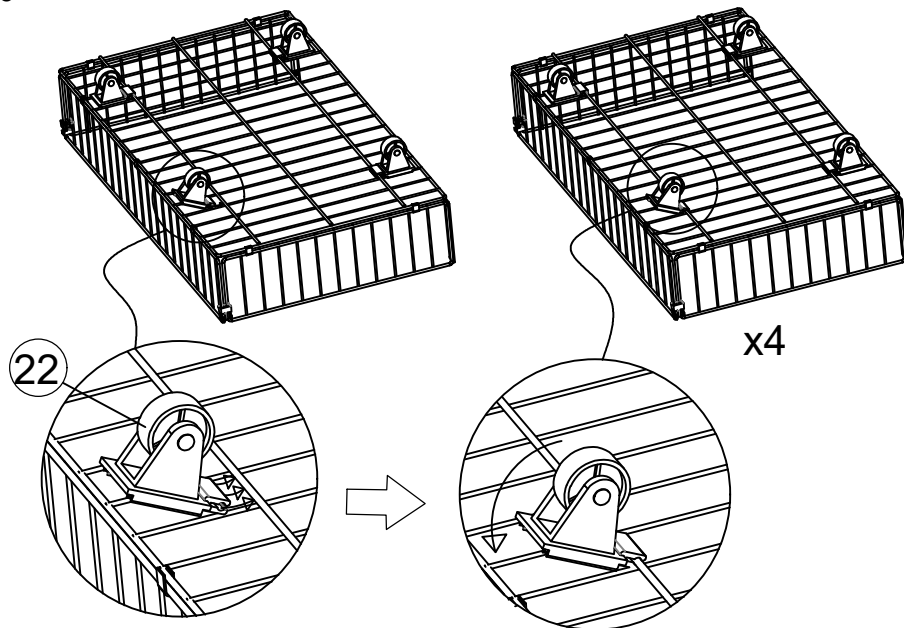

Step:11

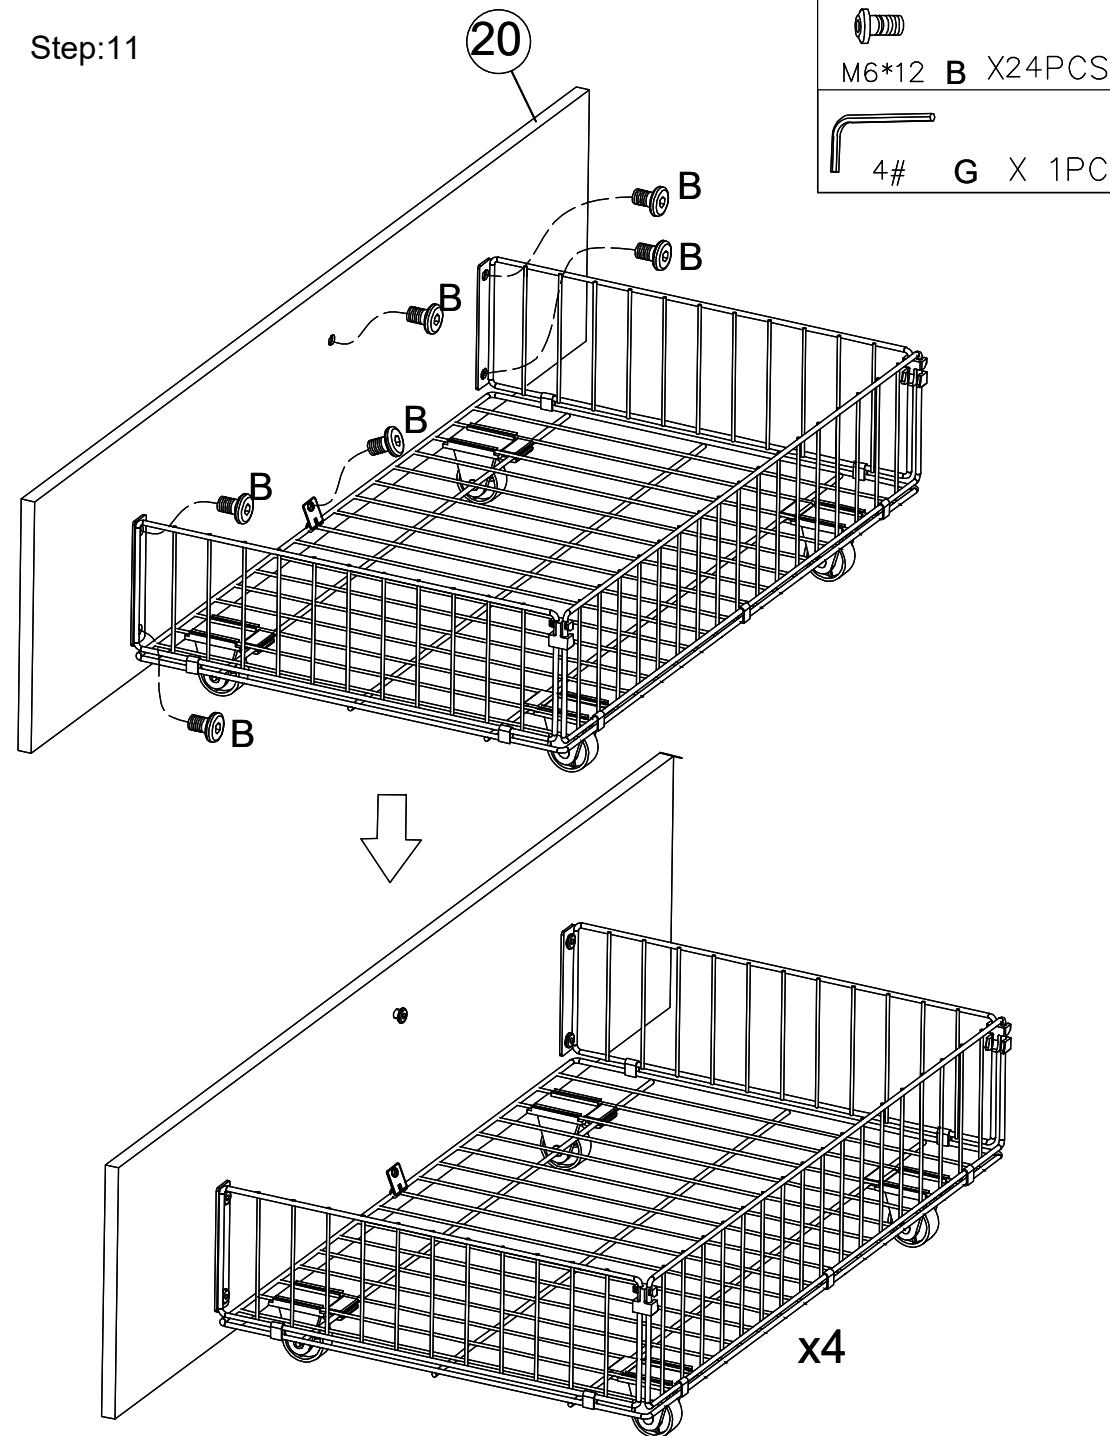

M6*12 B X24PCS

4# G X 1PC

