



METAL BED

FULL

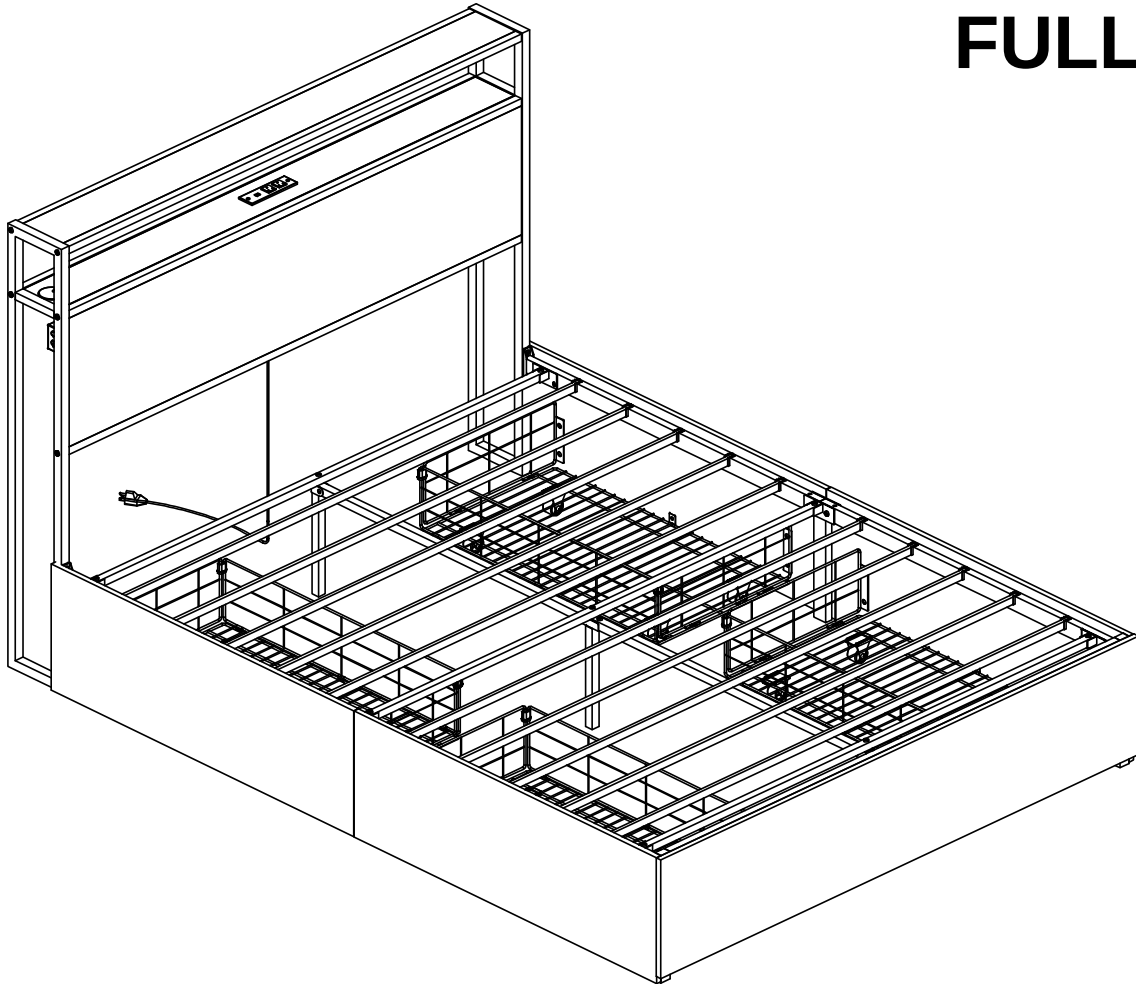

Before You Start

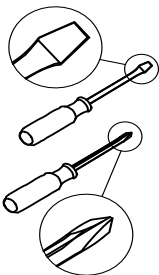


- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw.

Parts Identification


Not actual size




HEADBOARD FRAME
Q'ty: 2

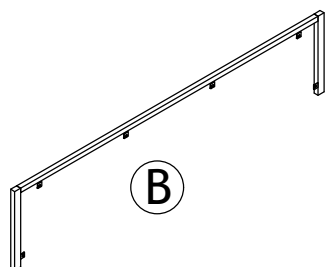


FOOTBOARD FRAME
Q'ty: 1

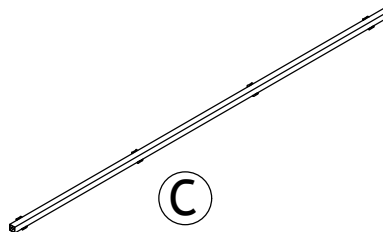


HEADBOARD CONNECTER
Q'ty: 1

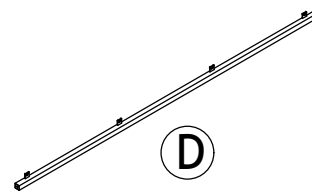


HEADBOARD CONNECTER
Q'ty: 4

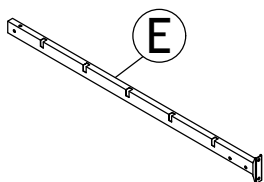


SIDE RAIL-1
Q'ty: 2

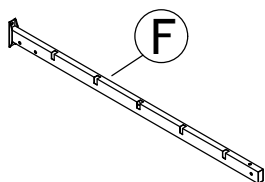


SIDE RAIL-2
Q'ty: 2

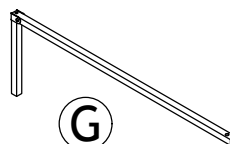


PORTION
Q'ty: 2

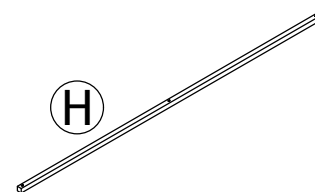


METAL TUBE
Q'ty: 3




CENTER SUPPORT LEG
Q'ty: 1

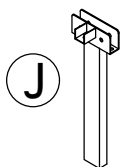


SUPPORT LEG
Q'ty: 2

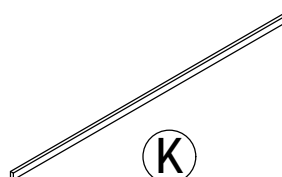


SLAT
Q'ty: 10

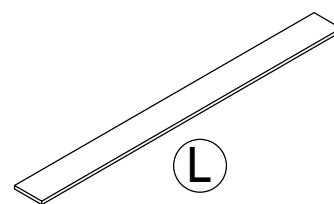


HEADBOARD TOP PANEL
Q'ty: 1

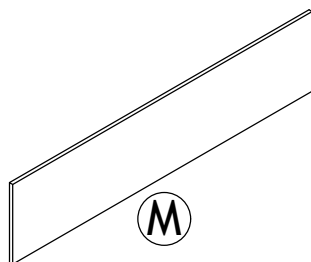


HEADBOARD BACKREST
Q'ty: 1

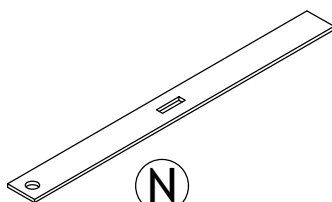


HEADBOARD SHELF PANEL
Q'ty: 1

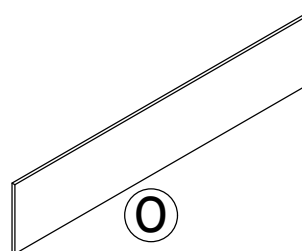


FOOTBOARD PANEL
Q'ty: 1

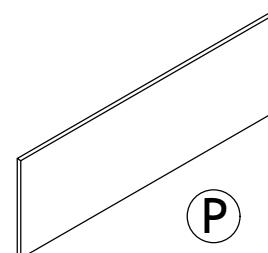


DRAWER FRONT PANEL
Q'ty: 4

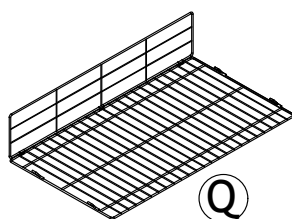

DRAWER BOTTOM FRAME
Q'ty: 4




DRAWER RIGHT FRAME
Q'ty: 4



DRAWER LEFT FRAME
Q'ty: 4

Hardware List




Ø1/4" x 12mm

①

x 58

BOLT
spare: 4




M8 x 20mm

②

x 12

BOLT
spare: 1




Ø1/4" x 25mm

③

x 6

BOLT
spare: 1




M8 x 38mm

④

x 2

BOLT
spare: 1




Ø1/4" x 50mm

⑤

x 10

BOLT
spare: 1

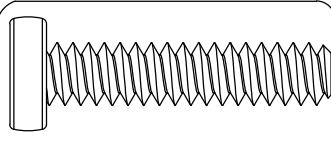


M8 x 55mm

⑥

x 7

BOLT
spare: 1




Ø3 x 12mm

⑦

x 9

SCREW




M4

⑧

x 1

ALLEN KEY

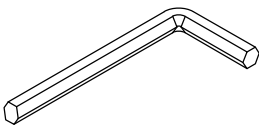


M5

⑨

x 1


ALLEN KEY



⑩

x 4


HINGE



⑪

x 1


SOCKET

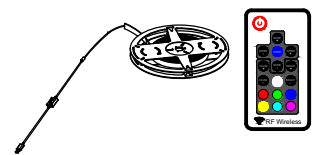

⑫

x 1


LED STRIP

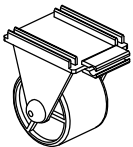

⑬

x 16


CASTER



⑭

x 8


CLAMP

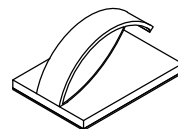

⑮

x 2


WIRE CLIP



⑯

x 7


LED STRIP CLIP

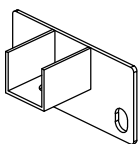

⑰

x 4

SUPPORTER



⑱

x 20

PLASTIC CAP




⑲

x 1

CABLE HOLE COVER

Parts Identification

Not actual size

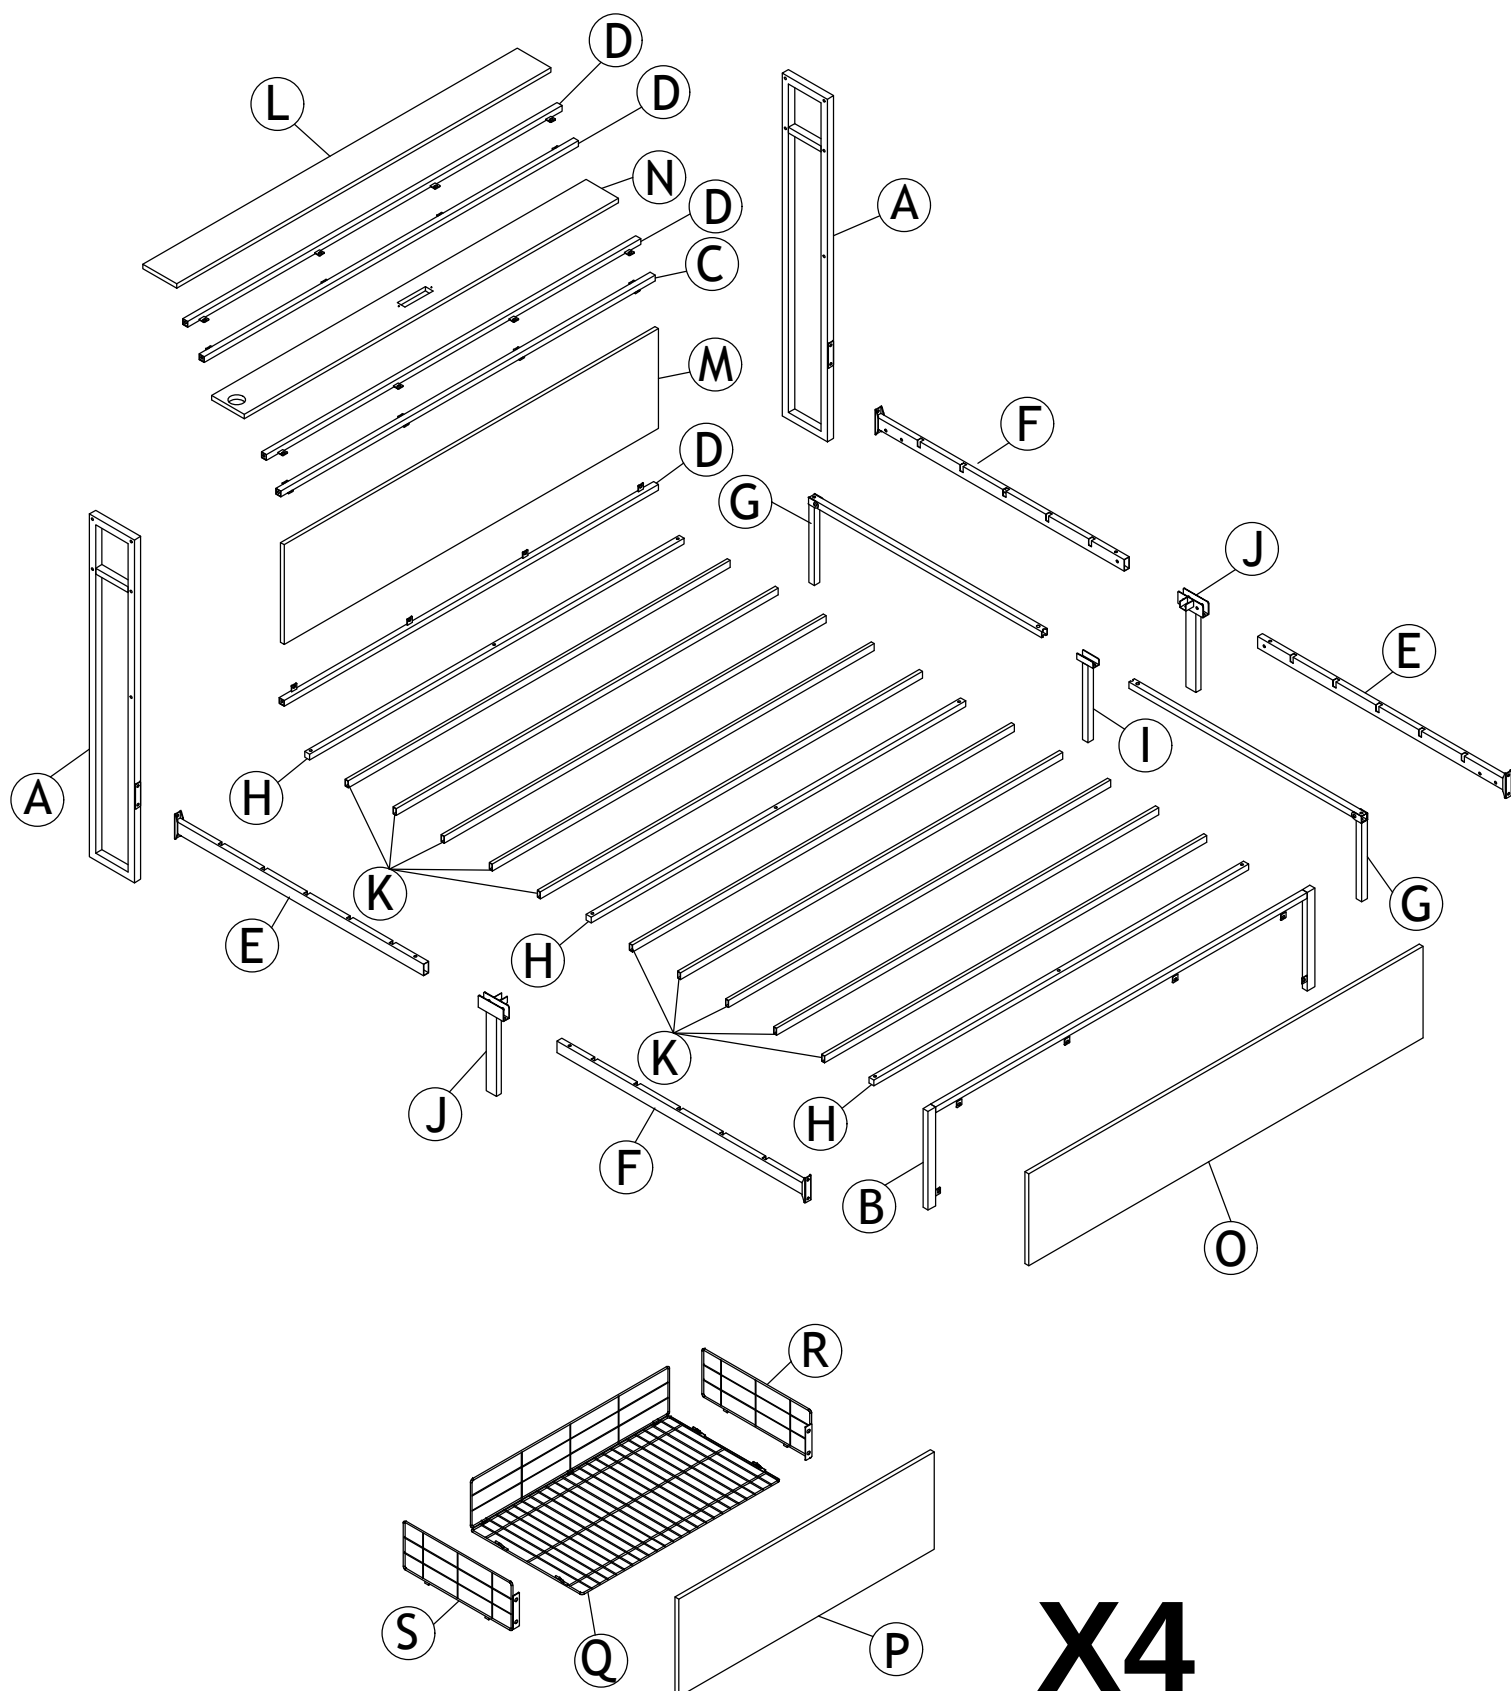


X4


STEP 1



Please tighten the screws to 80% first, and tighten all screws 100% after all parts are assembled.




Before you install this bolt, please make sure the bolt size is $\varnothing 1/4"$ *50mm.




$\varnothing 1/4"$ x 50mm

5	x 4
---	-----




M4


8	x 1
---	-----

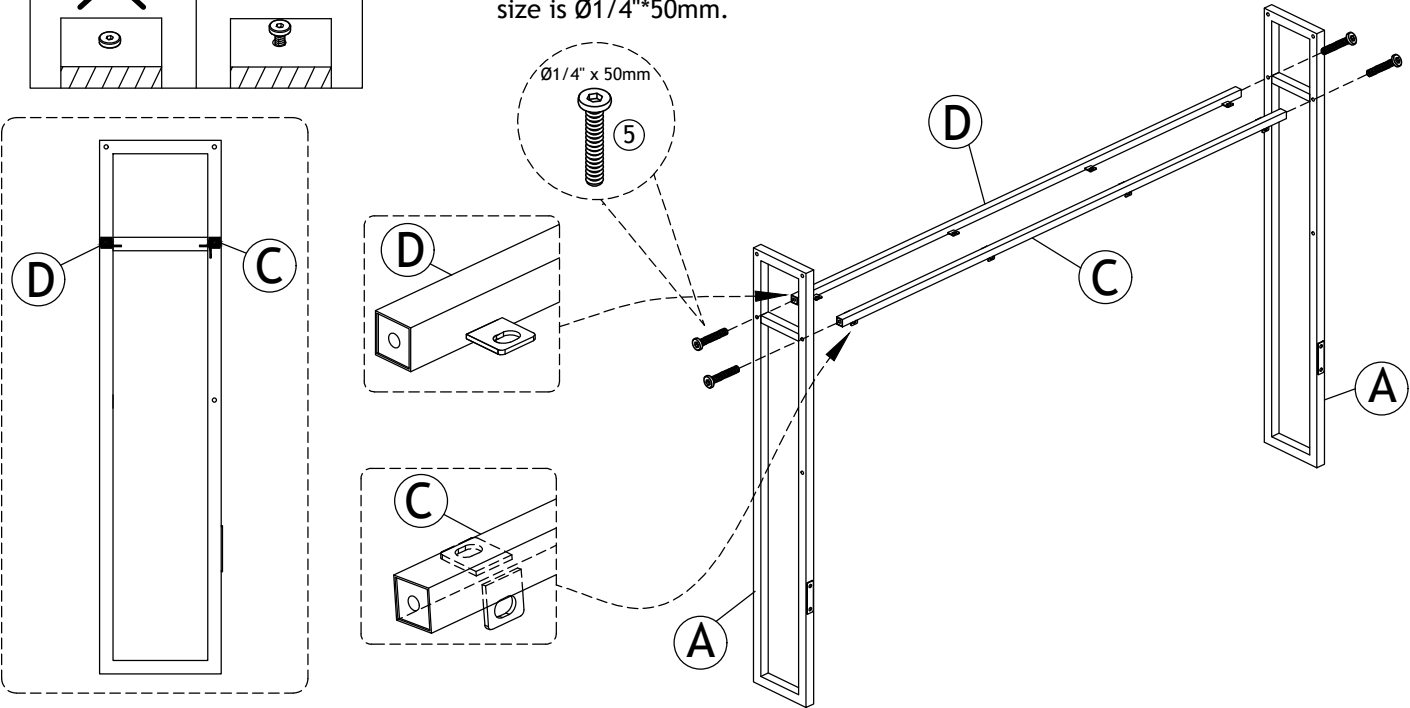

STEP 2


Please pay attention to the direction of the metal bolt plate.

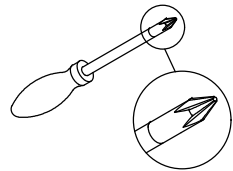







$\varnothing 3$ x 12mm




7	x 2
---	-----

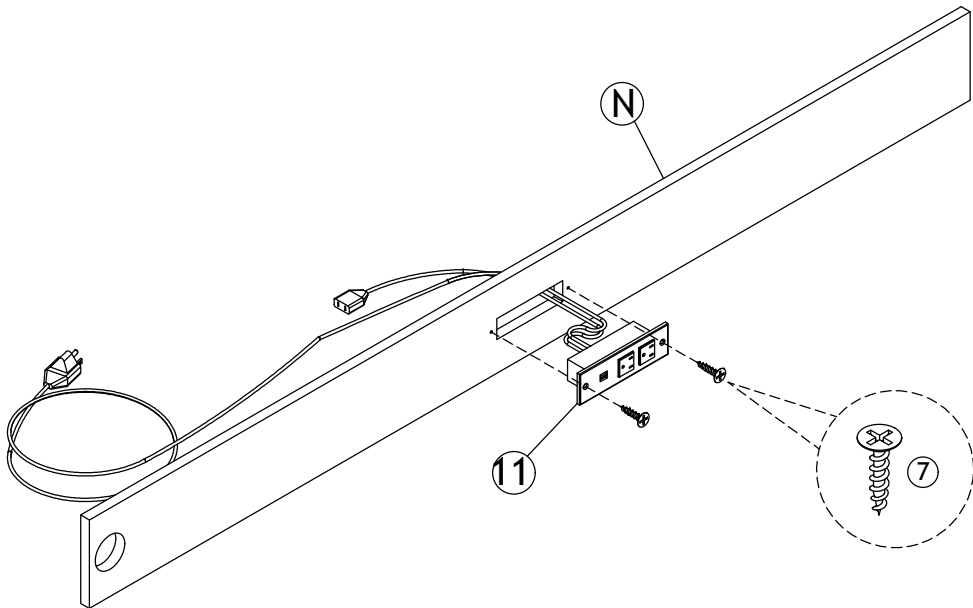


STEP 3

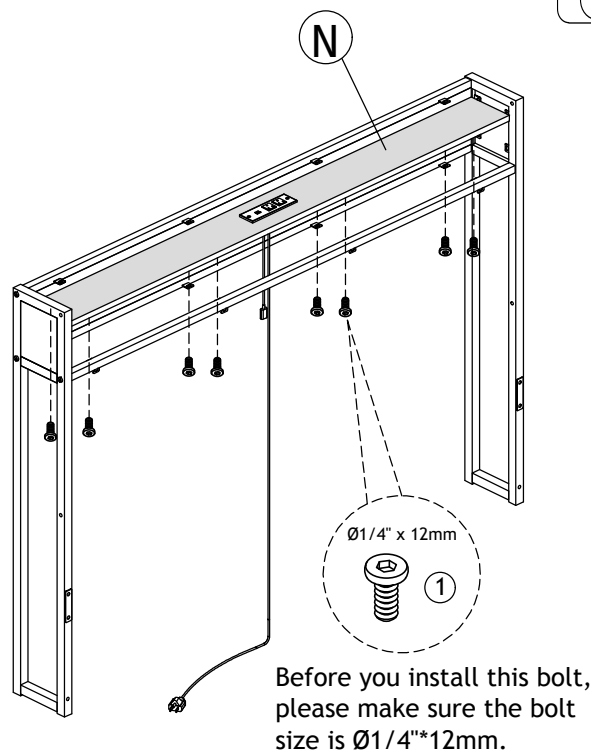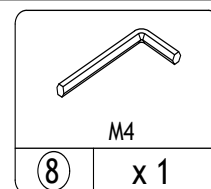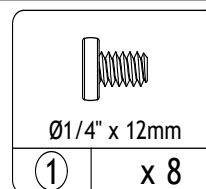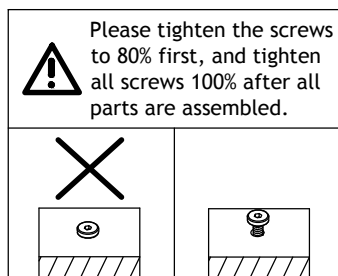


STEP 4

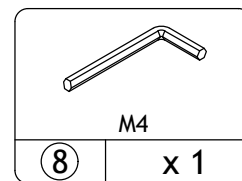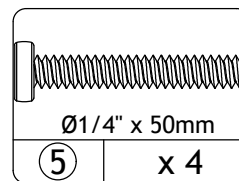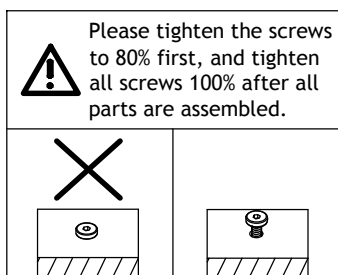

Before you install this bolt, please make sure the bolt size is Ø1/4" x 50mm.



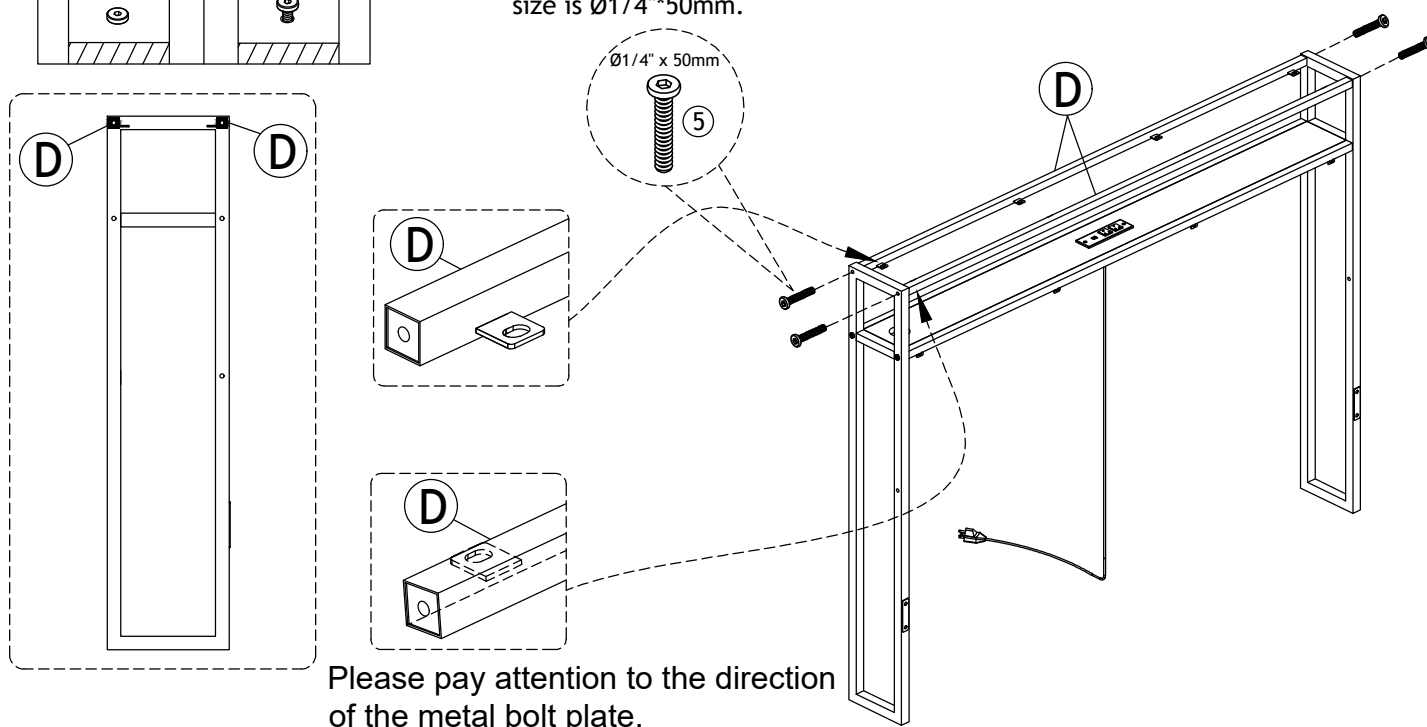


STEP 5

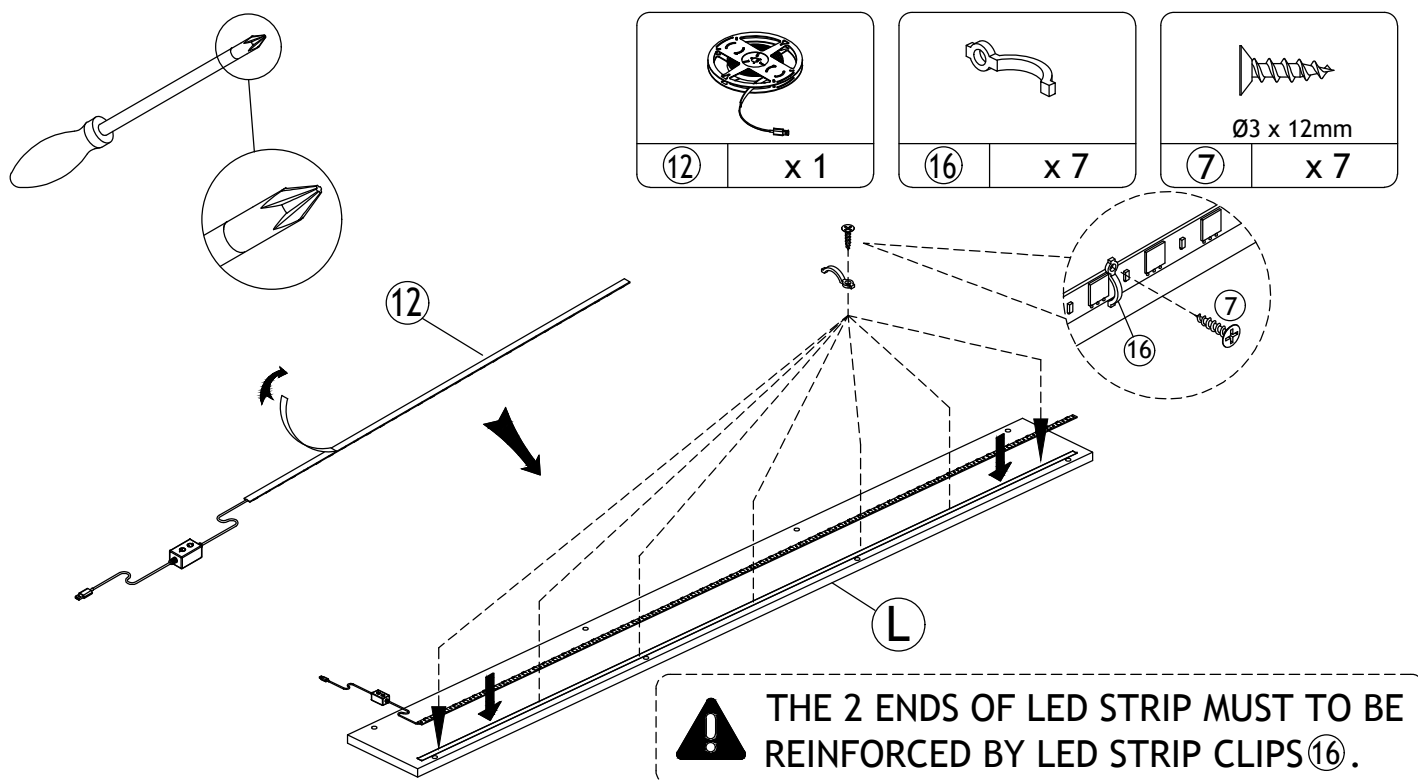





Stick LED strip ⑫ underneath board ①, then put the clips ⑯ on LED strip and fasten it with screws ⑦ to reinforce the LED strip. (There are no screw holes on board ①, you can choose suitable positions to fix the LED strip clips with screws.)

STEP 6

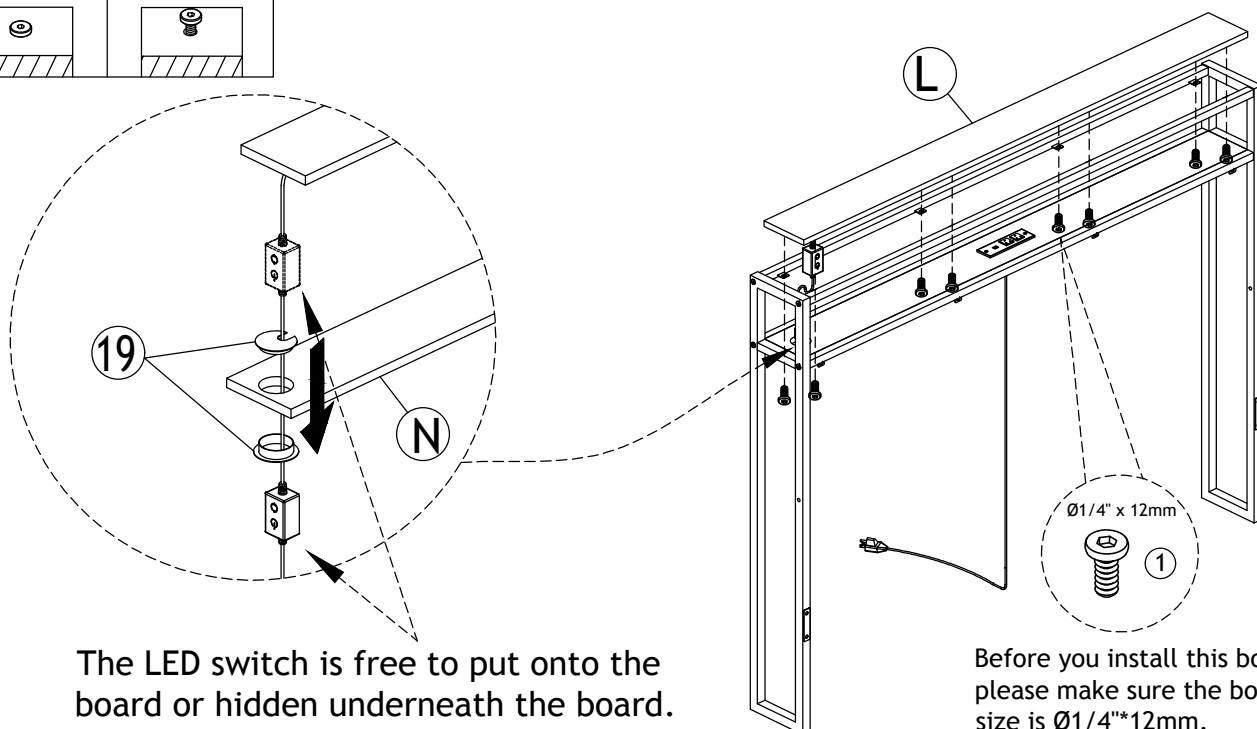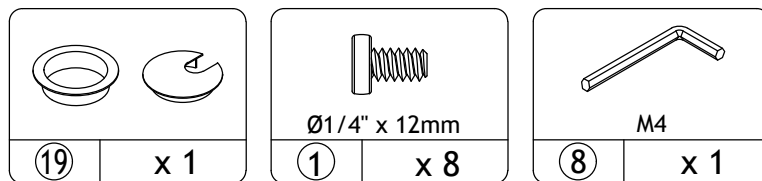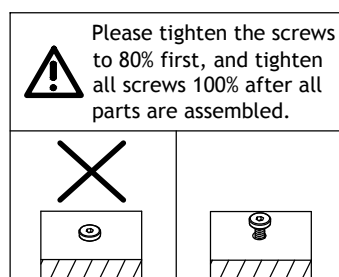

The LED switch is free to put onto the board or hidden underneath the board.








STEP 7

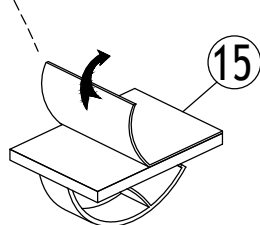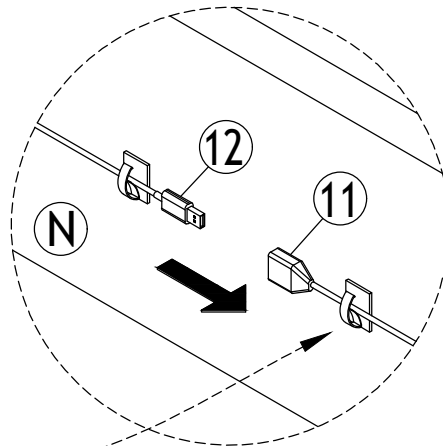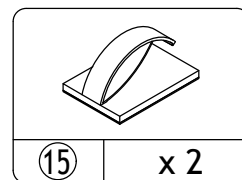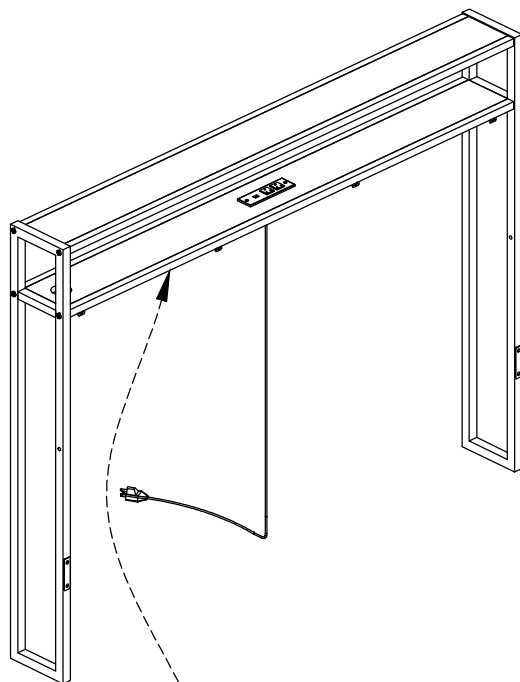

plug the interface of LED strip ⑫ into the extension interface on the back of the socket ⑪.

Then buckle the lines using wire clip ⑮.

STEP 8

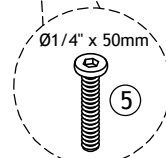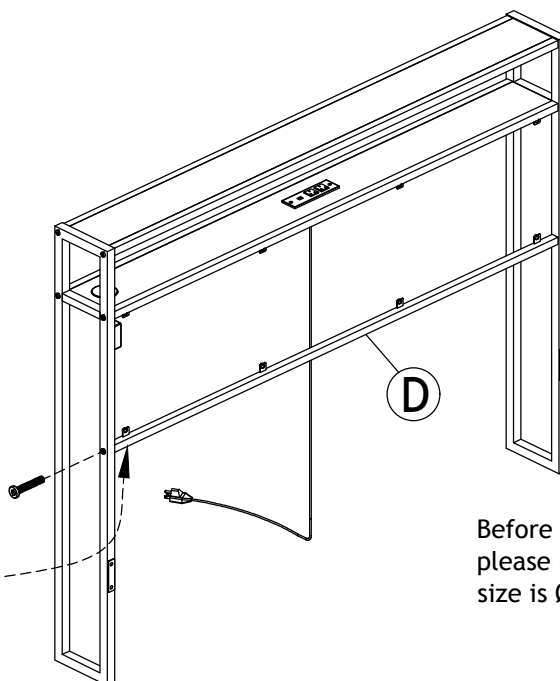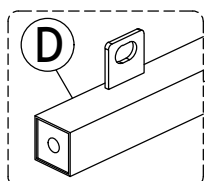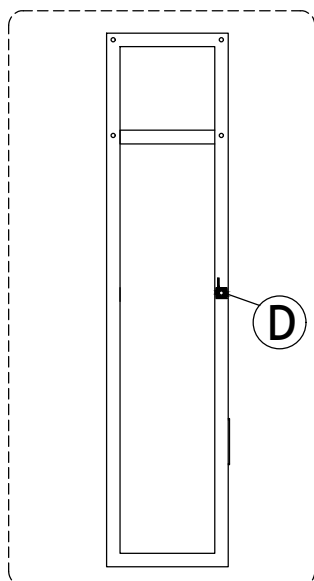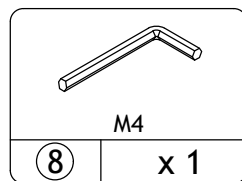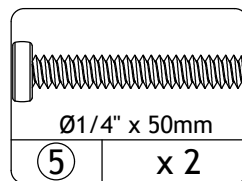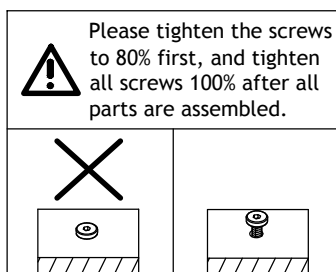


Before you install this bolt, please make sure the bolt size is $\varnothing 1/4" \times 50\text{mm}$.


Please pay attention to the direction of the metal bolt plate.

STEP 9



Please tighten the screws to 80% first, and tighten all screws 100% after all parts are assembled.





Ø1/4" x 12mm



1	x 8
---	-----



M4

8	x 1
---	-----


Before you install this bolt, please make sure the bolt size is Ø1/4" x 12mm.

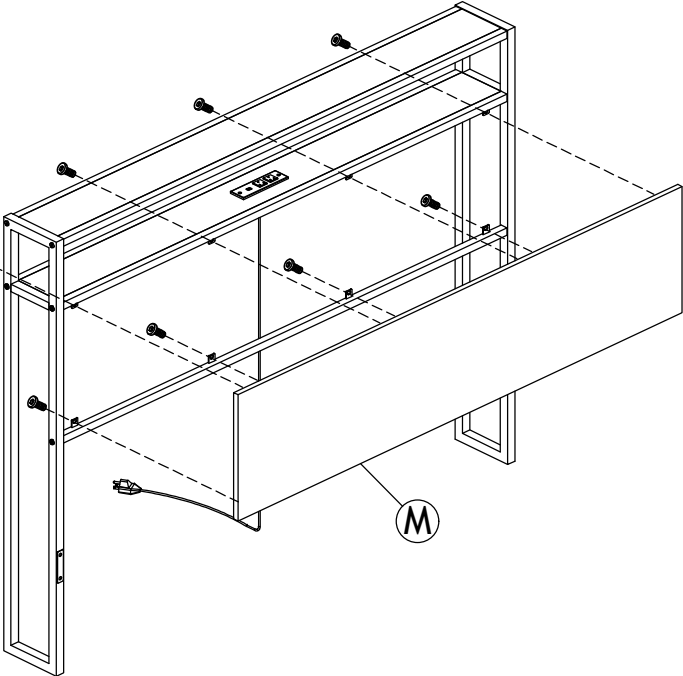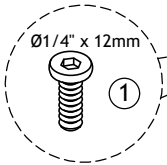


STEP 10



Please tighten the screws to 80% first, and tighten all screws 100% after all parts are assembled.






Ø1/4" x 12mm

1	x 4
---	-----



M4

8	x 1
---	-----

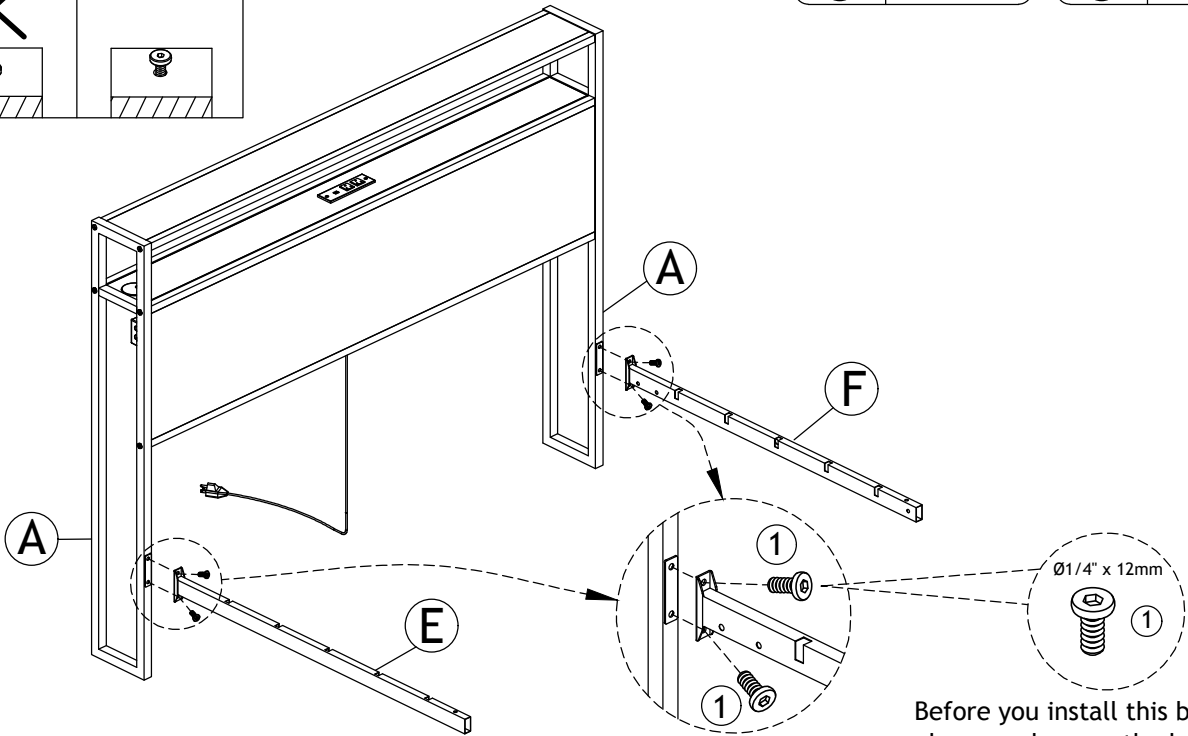


Before you install this bolt, please make sure the bolt size is Ø1/4" x 12mm.

STEP 11




Please tighten the screws to 80% first, and tighten all screws 100% after all parts are assembled.






Ø1/4" x 12mm

1	x 6
---	-----



M4


8	x 1
---	-----

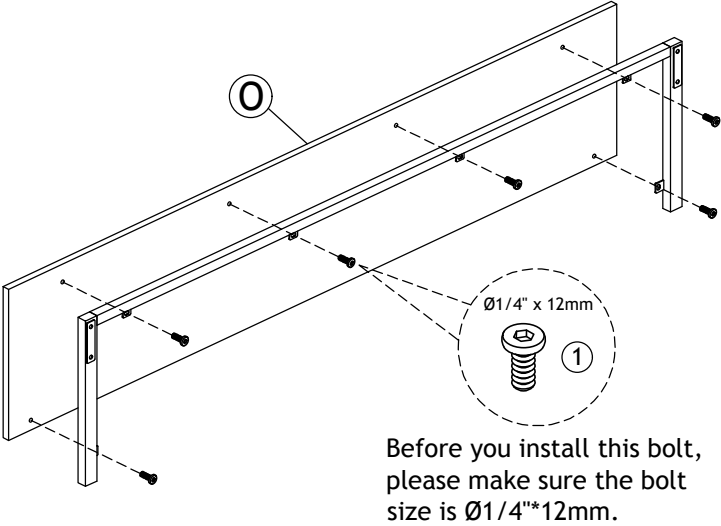

STEP 12




Please tighten the screws to 80% first, and tighten all screws 100% after all parts are assembled.






Ø1/4" x 12mm

1	x 4
---	-----



M4


8	x 1
---	-----

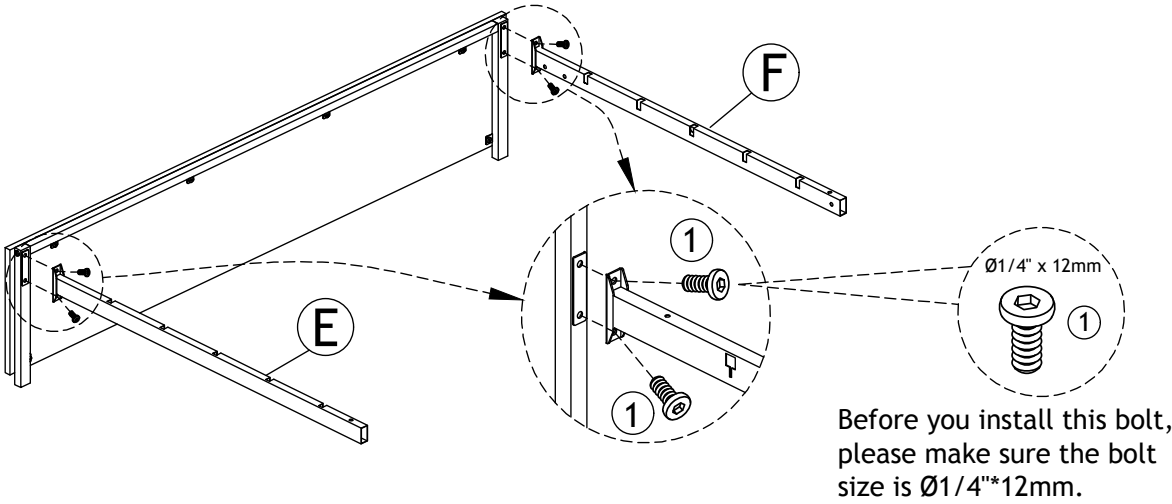


STEP 13



Please tighten the screws to 80% first, and tighten all screws 100% after all parts are assembled.






M8 x 20mm

②


x 4



M8 x 55mm

⑥

x 4




M5

⑨


x 1

Before you install this bolt, please make sure the bolt size is M8*55mm.



M8 x 55mm


⑥



M8 x 20mm

②


Before you install this bolt, please make sure the bolt size is M8*20mm.

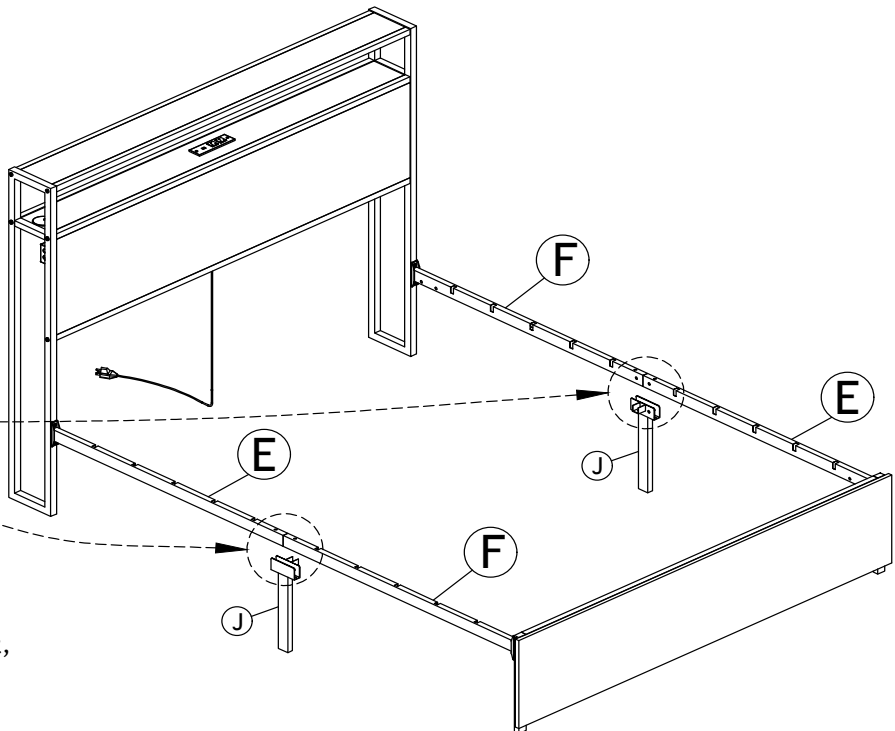


STEP 14




Please tighten the screws to 80% first, and tighten all screws 100% after all parts are assembled.





①⑦


x 4



M8 x 20mm

②


x 8




M5

⑨

x 1

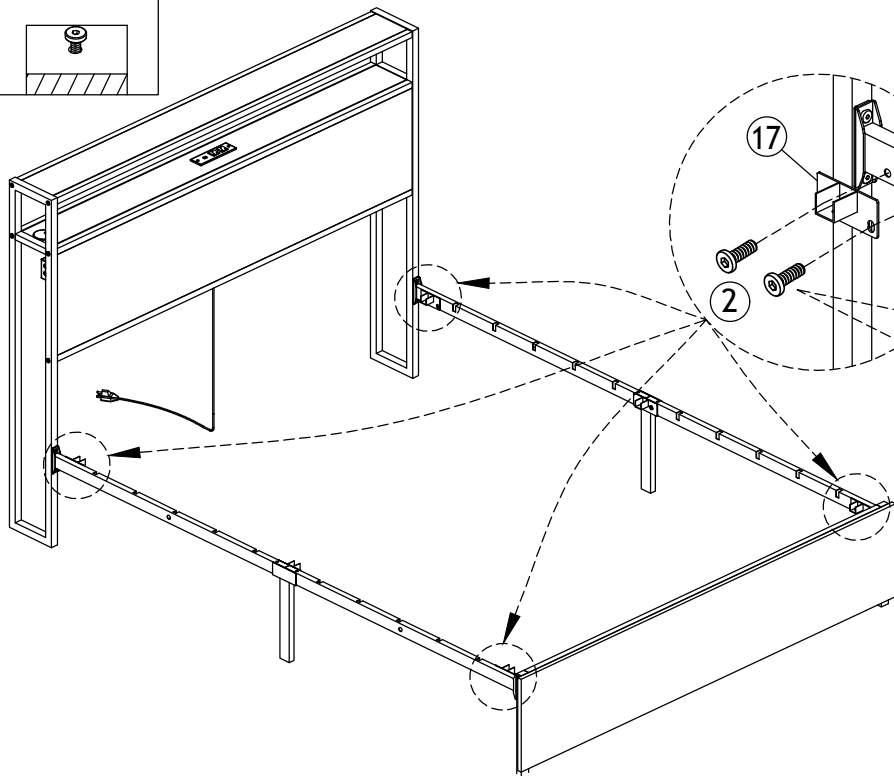



①⑦



M8 x 20mm

②

Before you install this bolt, please make sure the bolt size is M8*20mm.

STEP 15



Please tighten the screws to 80% first, and tighten all screws 100% after all parts are assembled.






Ø1/4" x 25mm

3	x 4
---	-----




M4

8	x 1
---	-----

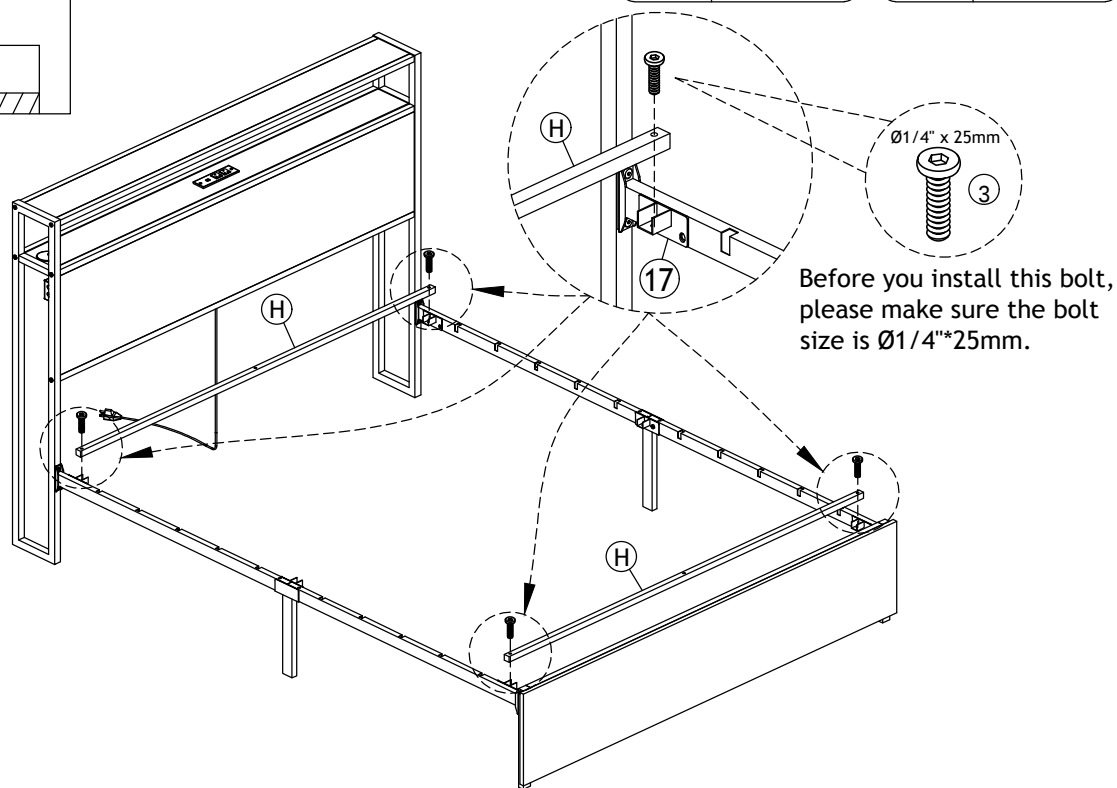

STEP 16

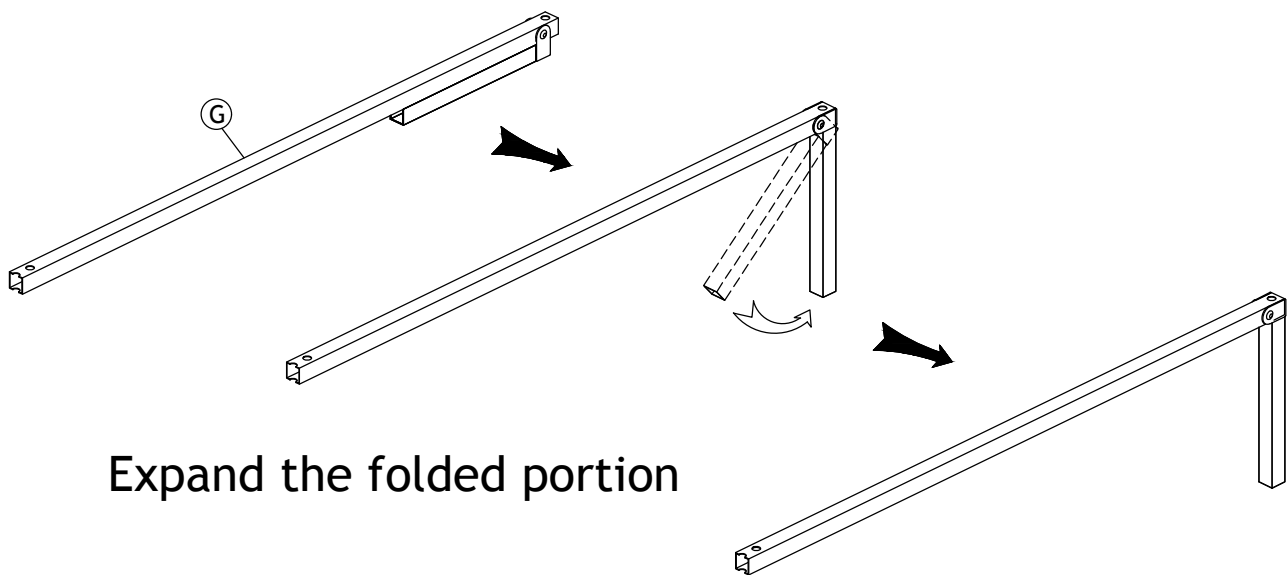



x 2

STEP 17



Please tighten the screws to 80% first, and tighten all screws 100% after all parts are assembled.






M8 x 38mm

④ x 2




M8 x 55mm

⑥ x 2



M5


⑨ x 1

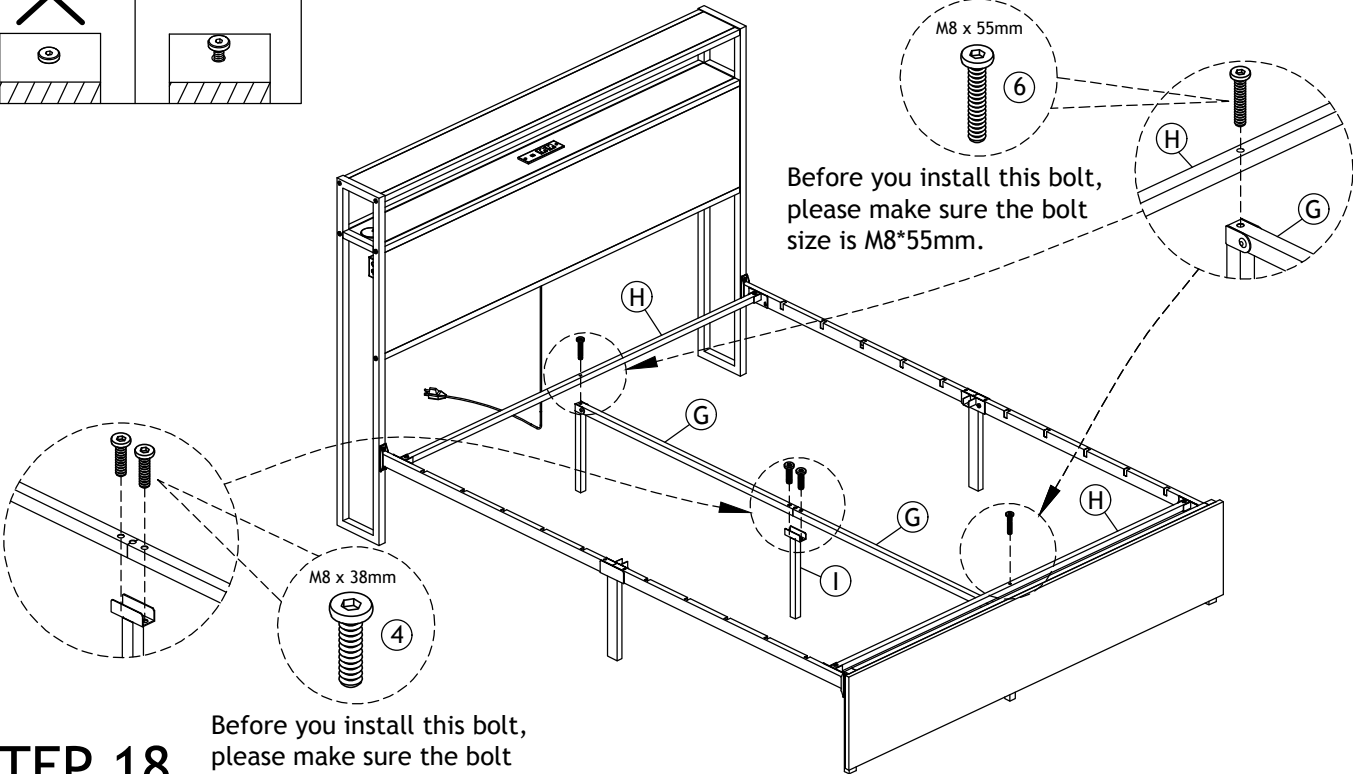

STEP 18




Please tighten the screws to 80% first, and tighten all screws 100% after all parts are assembled.






M8 x 55mm

⑥ x 1




M5

⑨ x 1




Ø1/4" x 25mm

③ x 2





M4


⑧ x 1

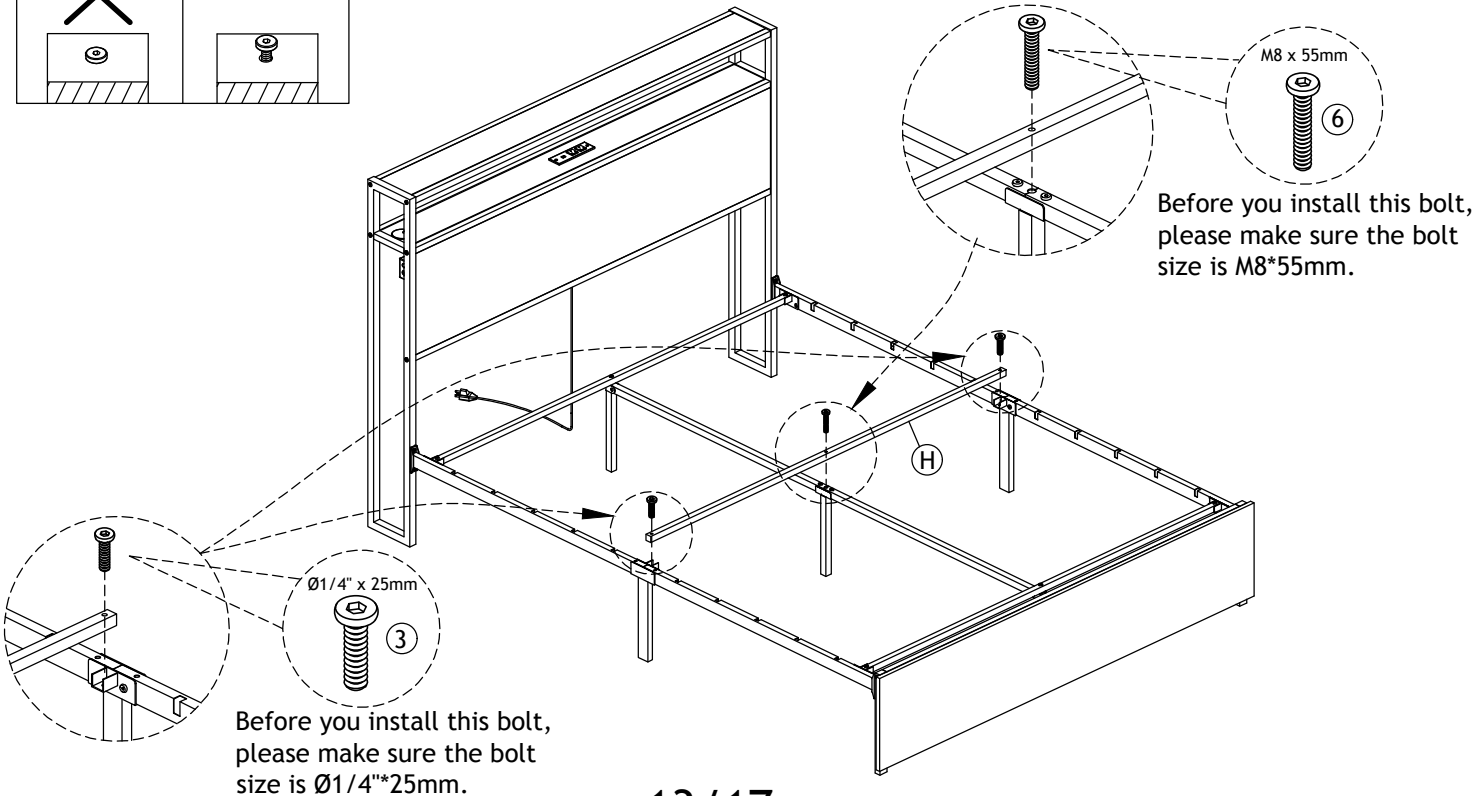


STEP 19

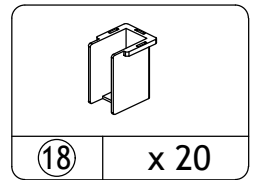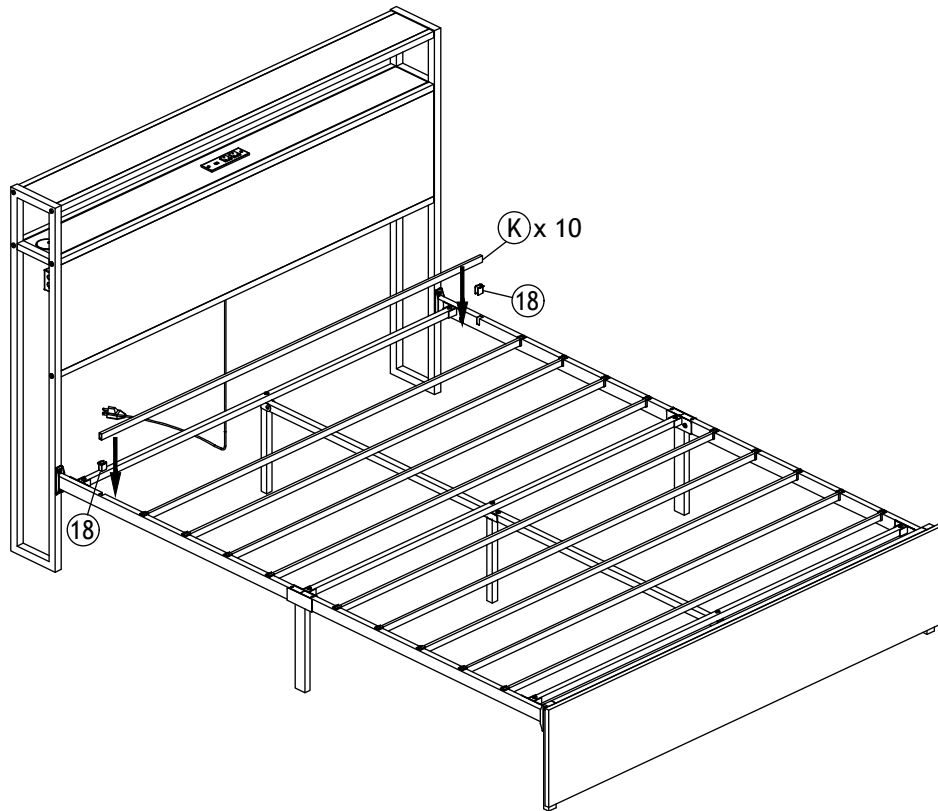


Assemble the slats

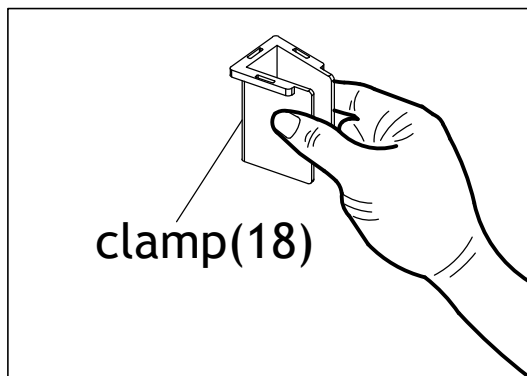


1. Squeeze the clamp (18) tightly.

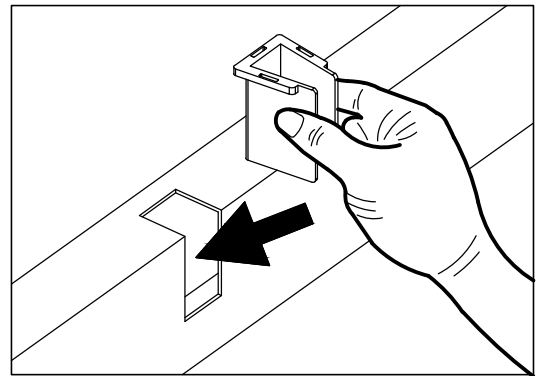

2. Put the clamp into the gaps.

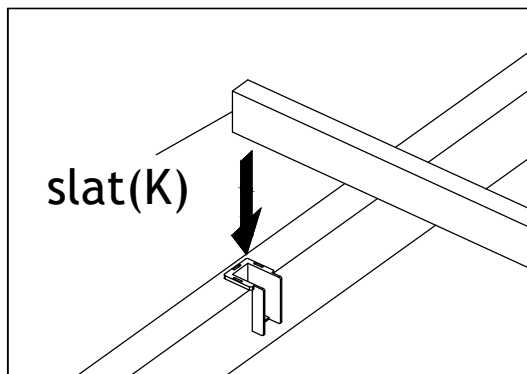


3. Put the slat (K) into the clamp.

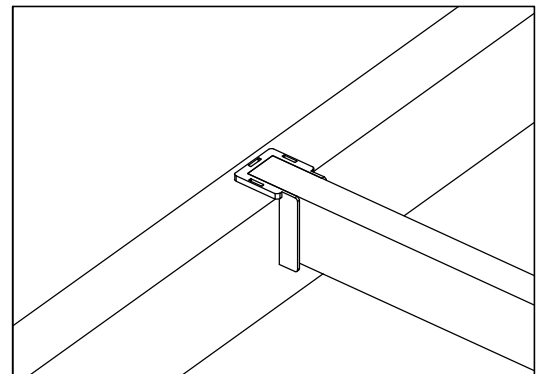


4. Finished.

STEP 20

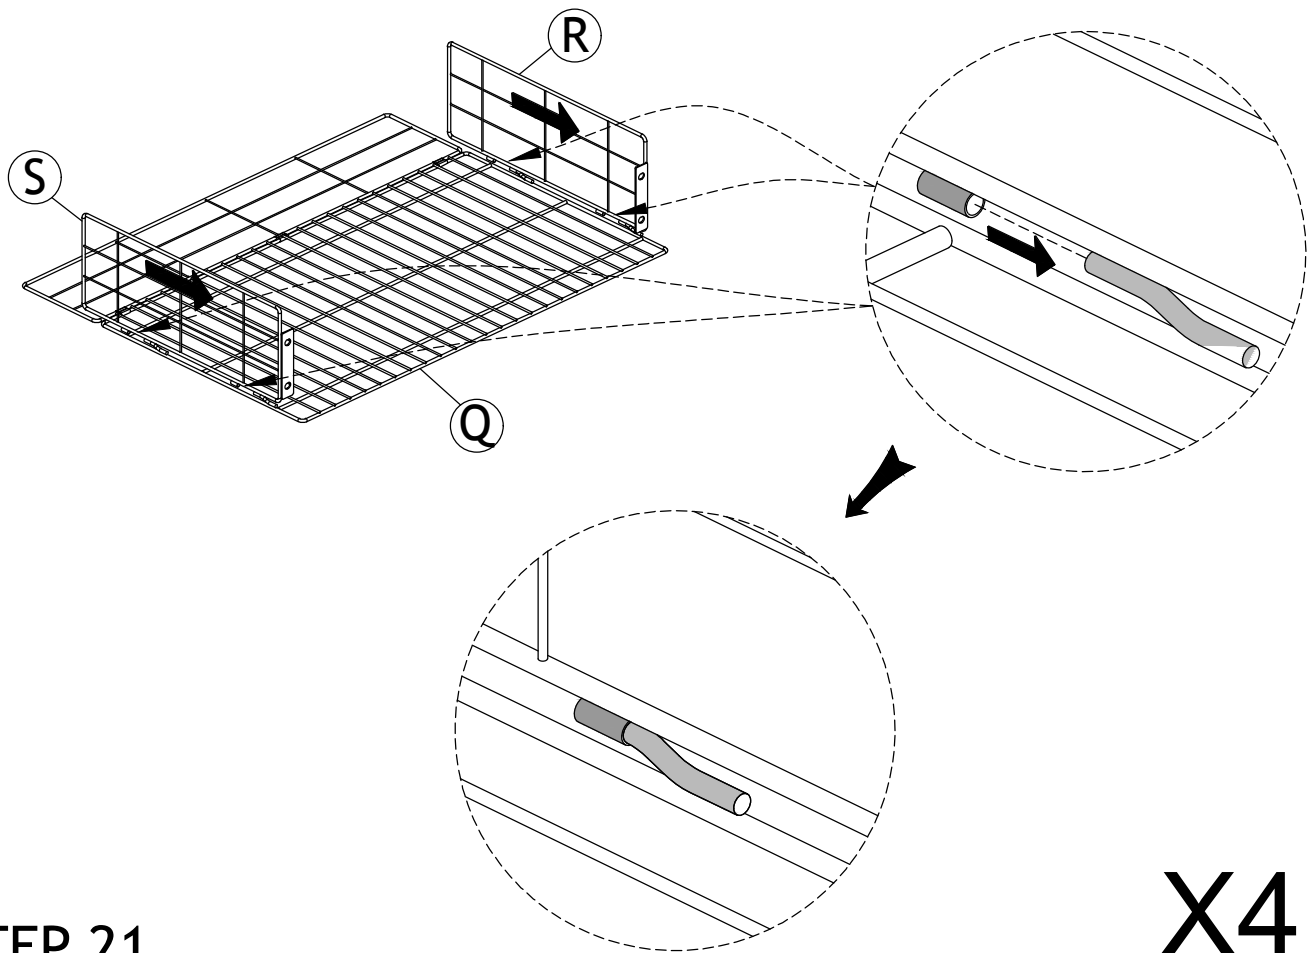


STEP 21


X4

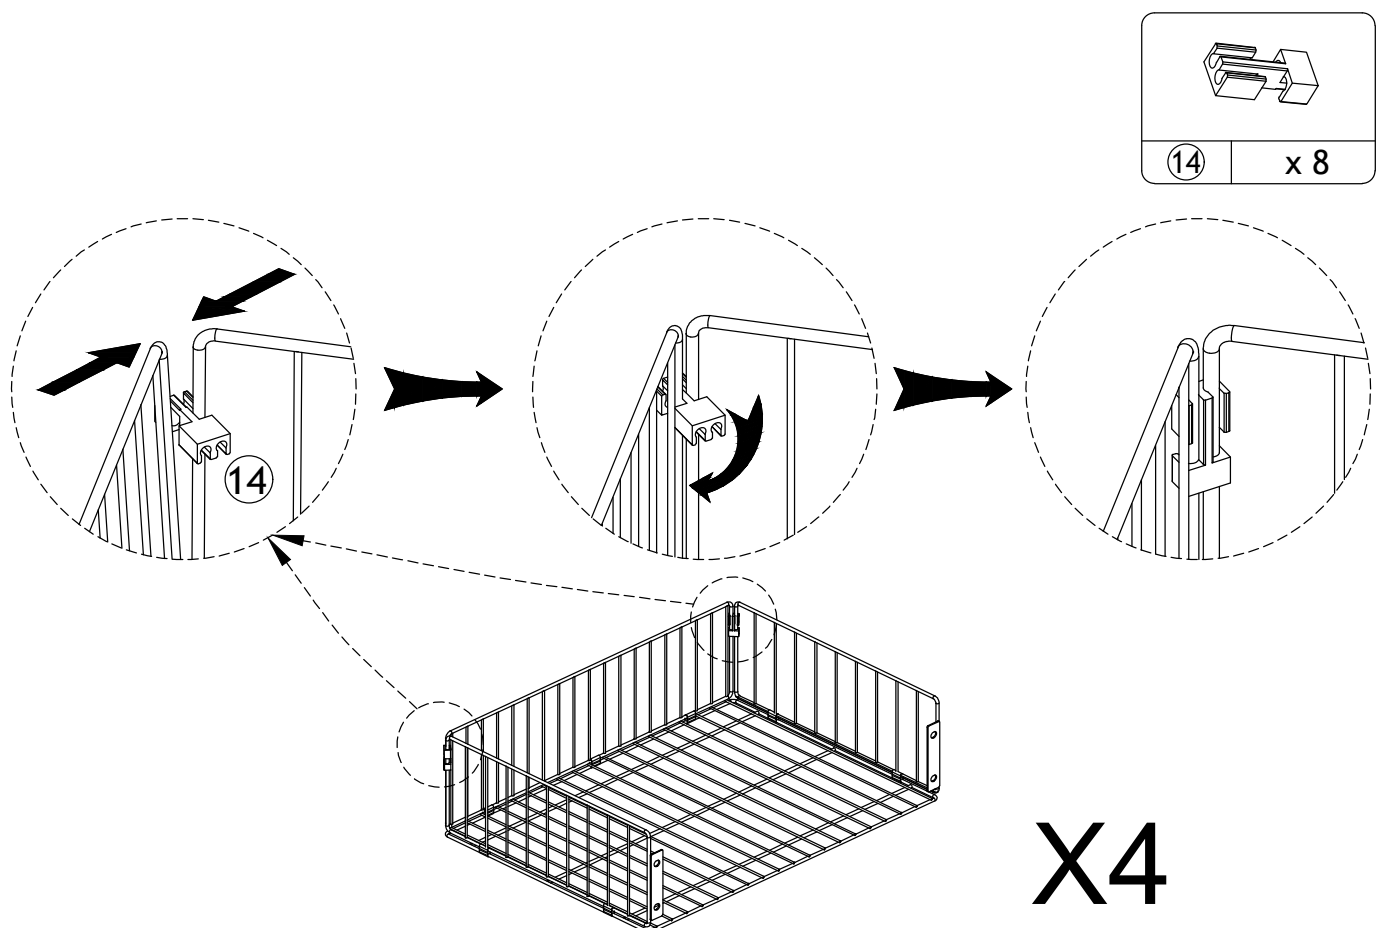


STEP 22

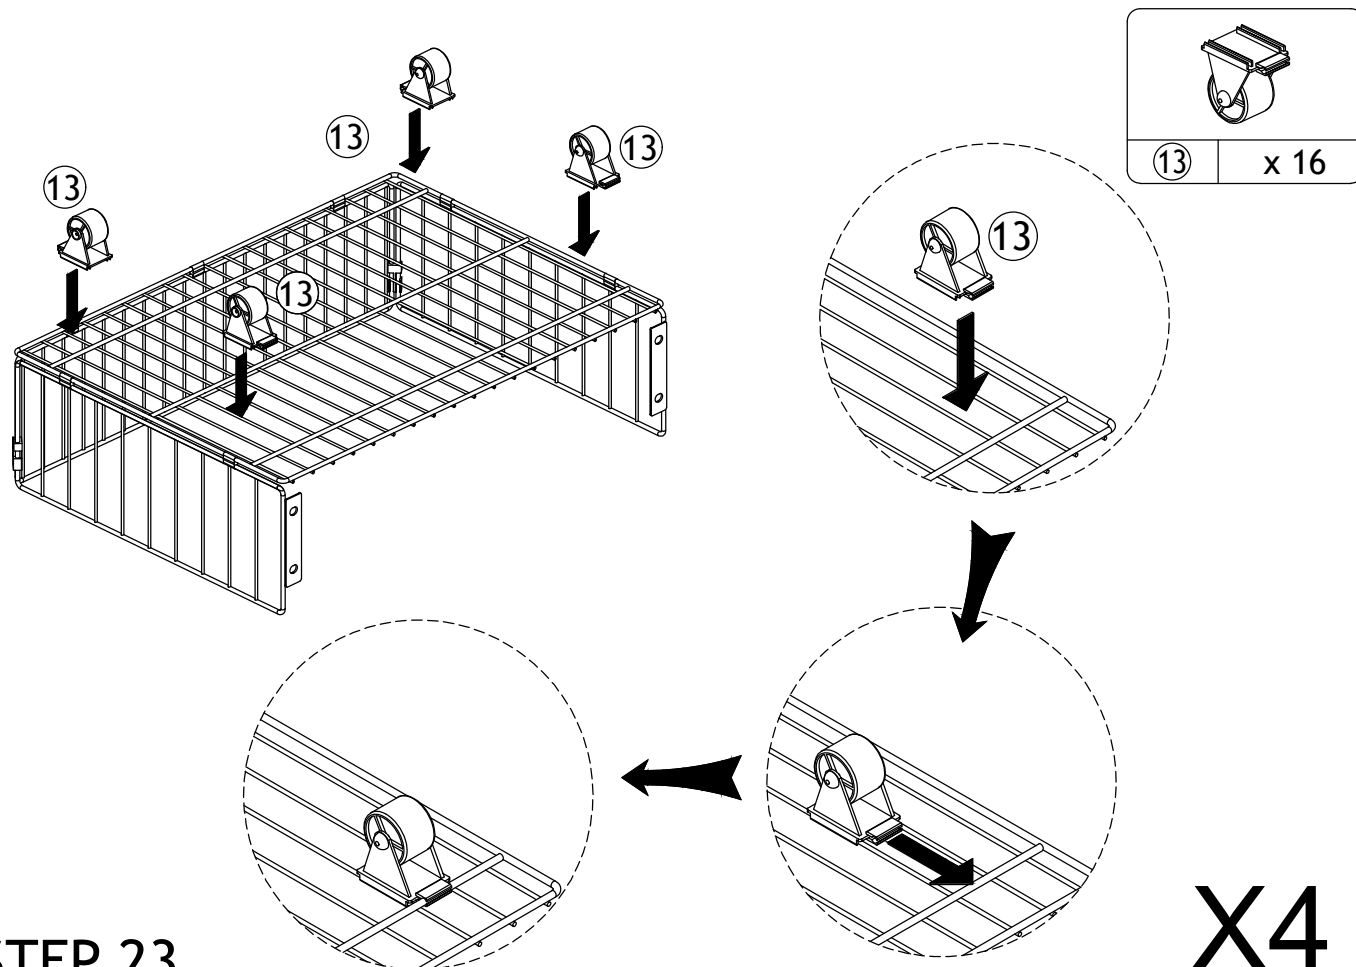

STEP 23

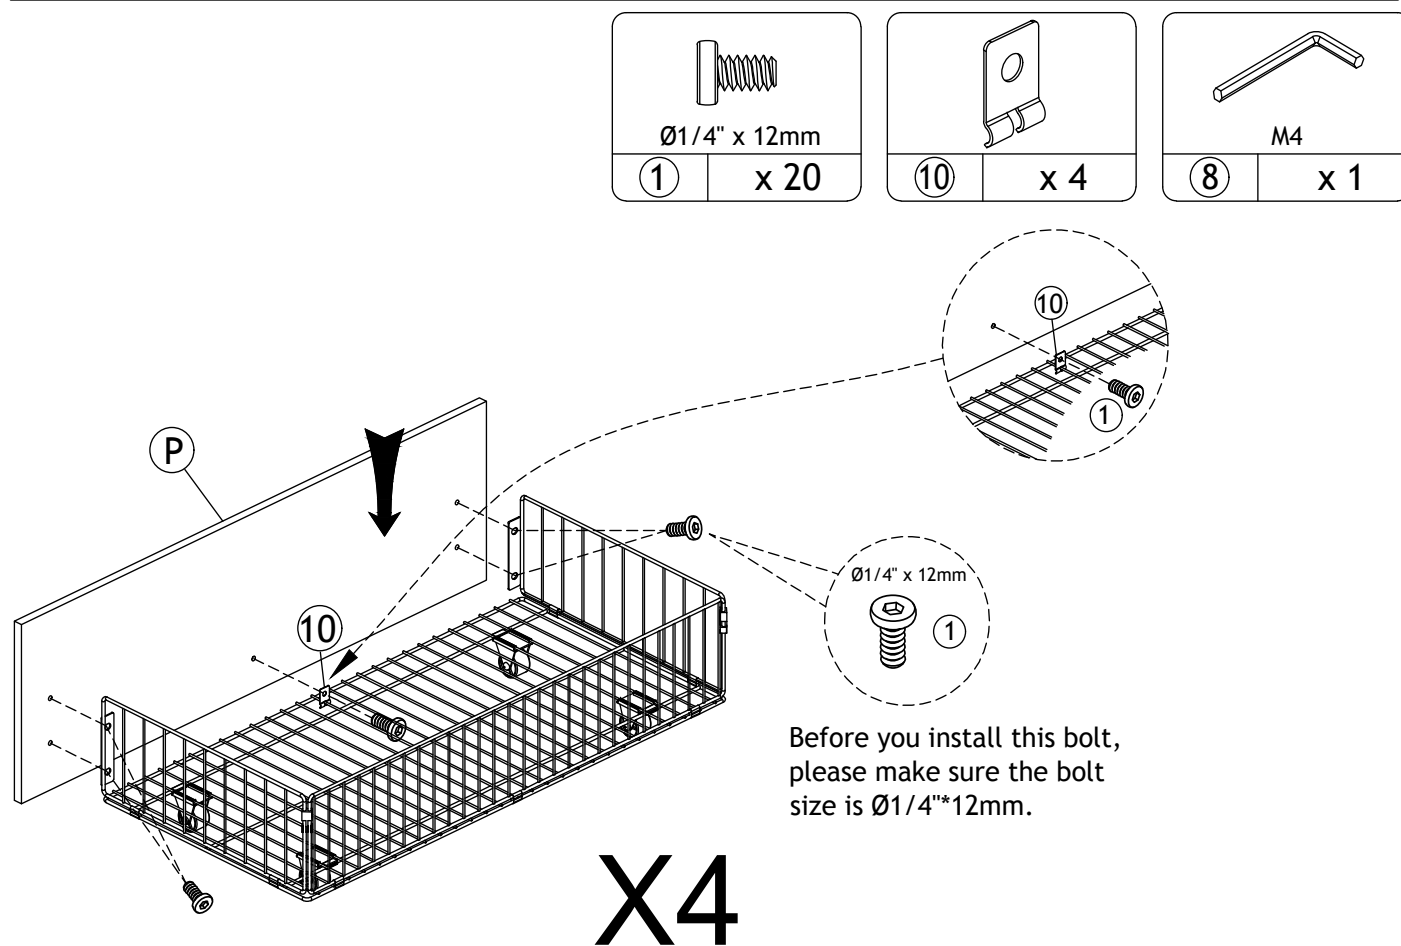

STEP 24

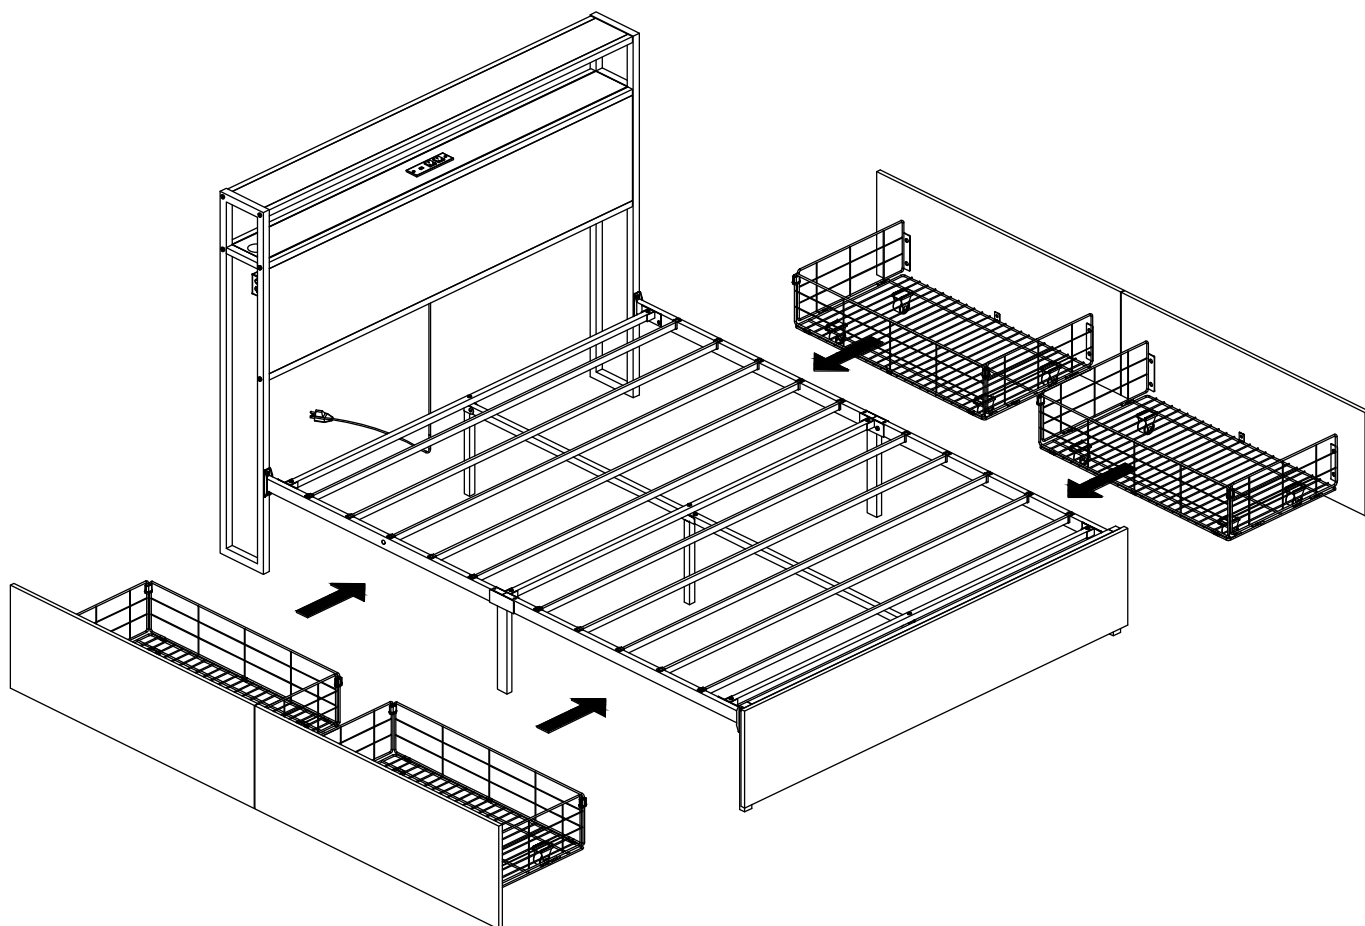

STEP 25

