


B0112-Q

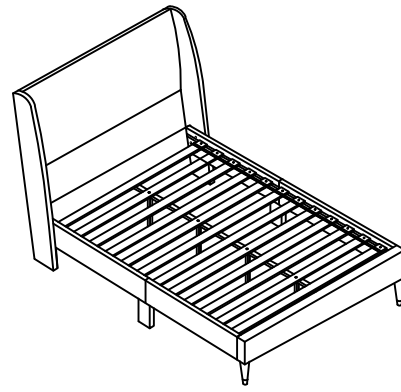

PARTS

#1 x 1pc




Headboard above

#2 x 1pc




Headboard below

#3 x 1pc

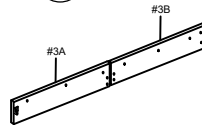

Rail Left

#4 x 1pc

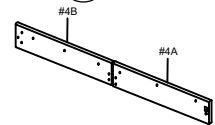

Rail Right

#5 x 1pc



Footboard

#6 x 1L + 1R



Wing

#7 x 2pcs



Rail Leg

#8 x 2pcs



FB Leg

#9 x 4pcs



Support Rail

#10 x 4pcs




Support Leg

#11 x 1pc



Support Slat


#12 x 1set



Slat (12pcs)

HARDWARE

#A x 24pcs



Screw #8x38mm

#B x 10pcs



Bolt Ø5/16" x 1 -1/2"

#C x 4pcs



Bolt Ø5/16" x 1-1/4"

#D x 6pcs



Bolt Ø1/4" x 3/4"

#E x 12pcs



Bolt Ø1/4" x 1-1/2"

#F x 8pcs



Bolt Ø1/4" x 1"

#G x 10pcs



Flat Washer
Ø5/16"x19mm

#H x 4pcs



Flat Washer
Ø5/16"x22mm

#I x 14pcs



Lock Washer Ø5/16"

#J x 26pcs




Flat Washer Ø1/4"x16mm

#K x 26pcs



Lock Washer Ø1/4"

#L x 3pcs



Connecting iron

#M x 1pc




Allen Wrench M5

#N x 1pc



Allen Wrench M4

#P x 8pcs



Screw #8x15mm


#Q x 4pcs




Connecting iron

ASSEMBLY INSTRUCTIONS

STEP 1

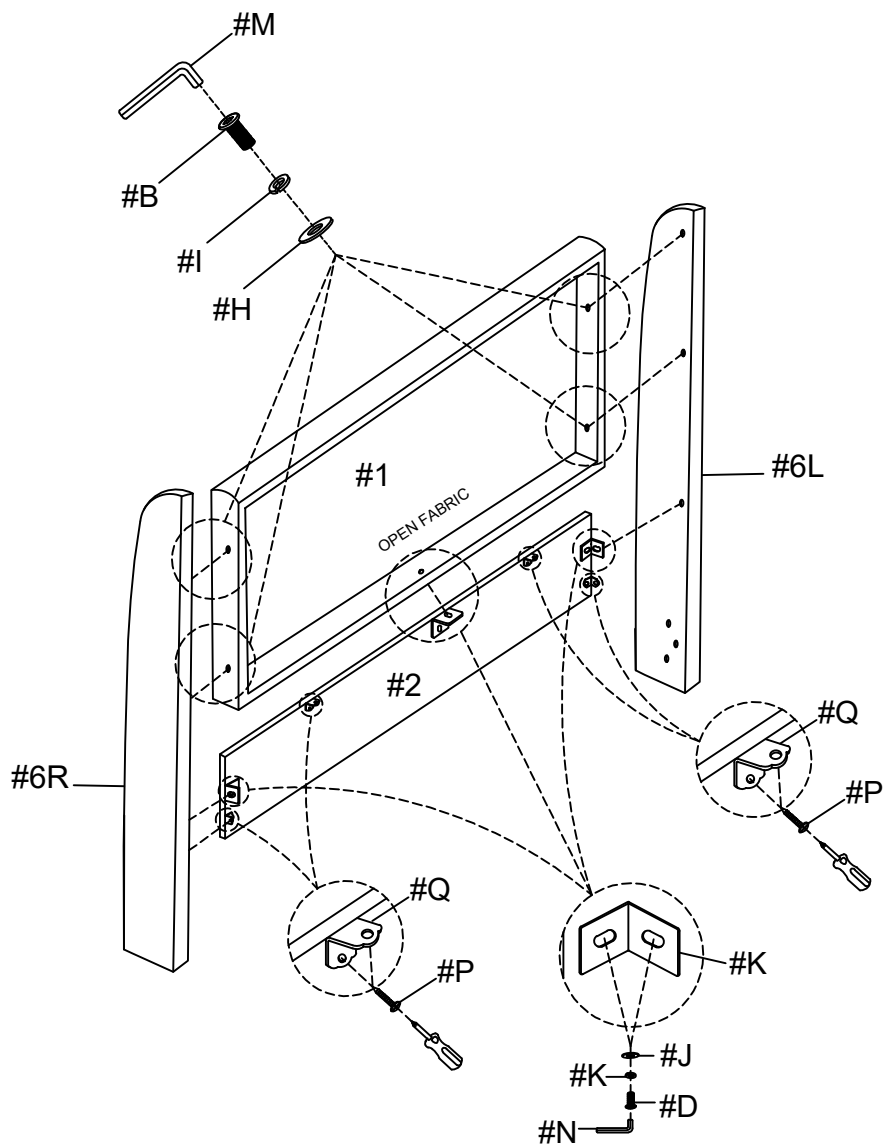


STEP 2

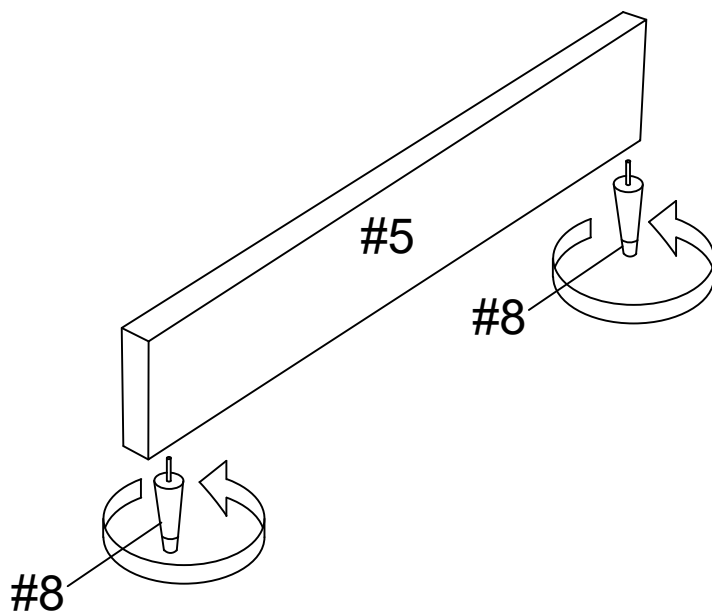


ASSEMBLY INSTRUCTIONS

STEP 3

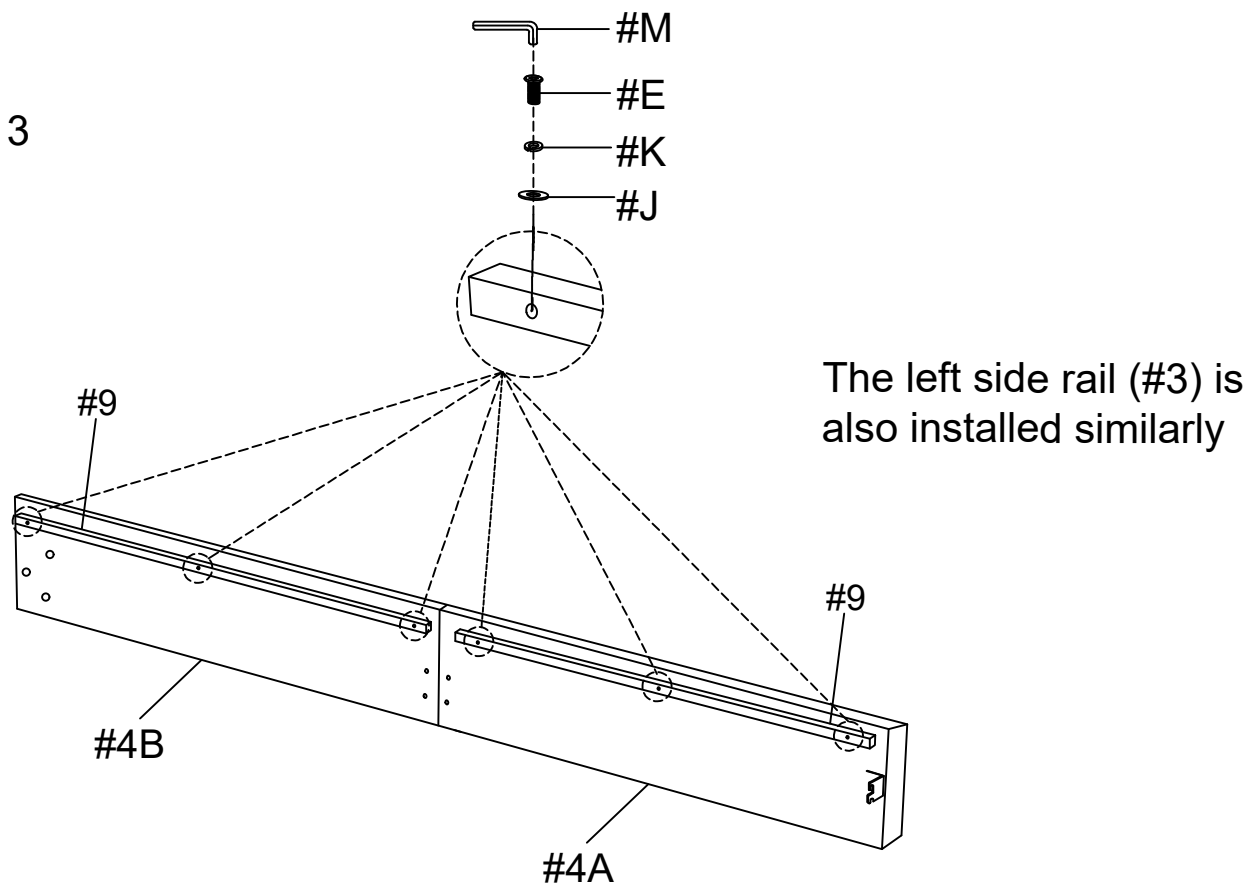


STEP 4

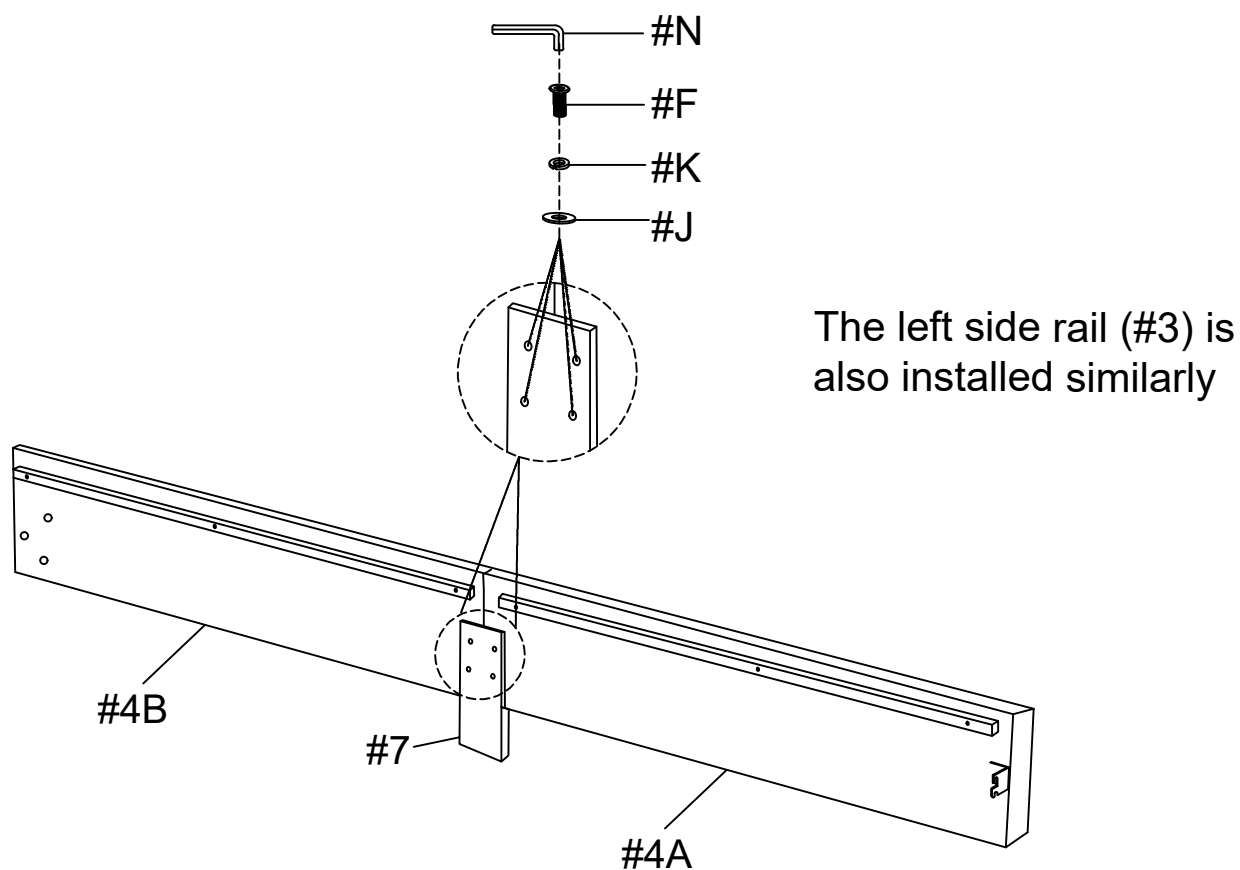


ASSEMBLY INSTRUCTIONS

STEP 5

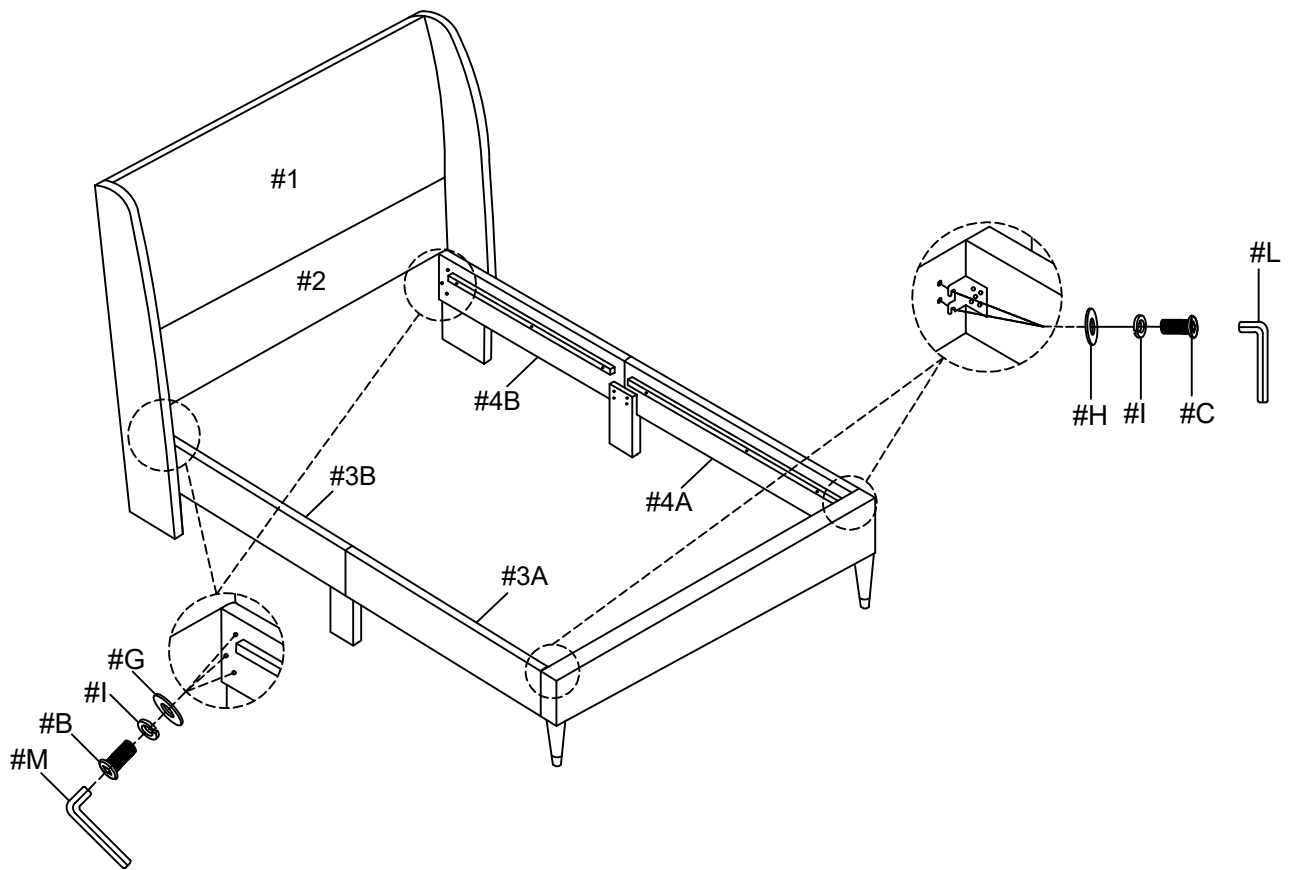

STEP 6

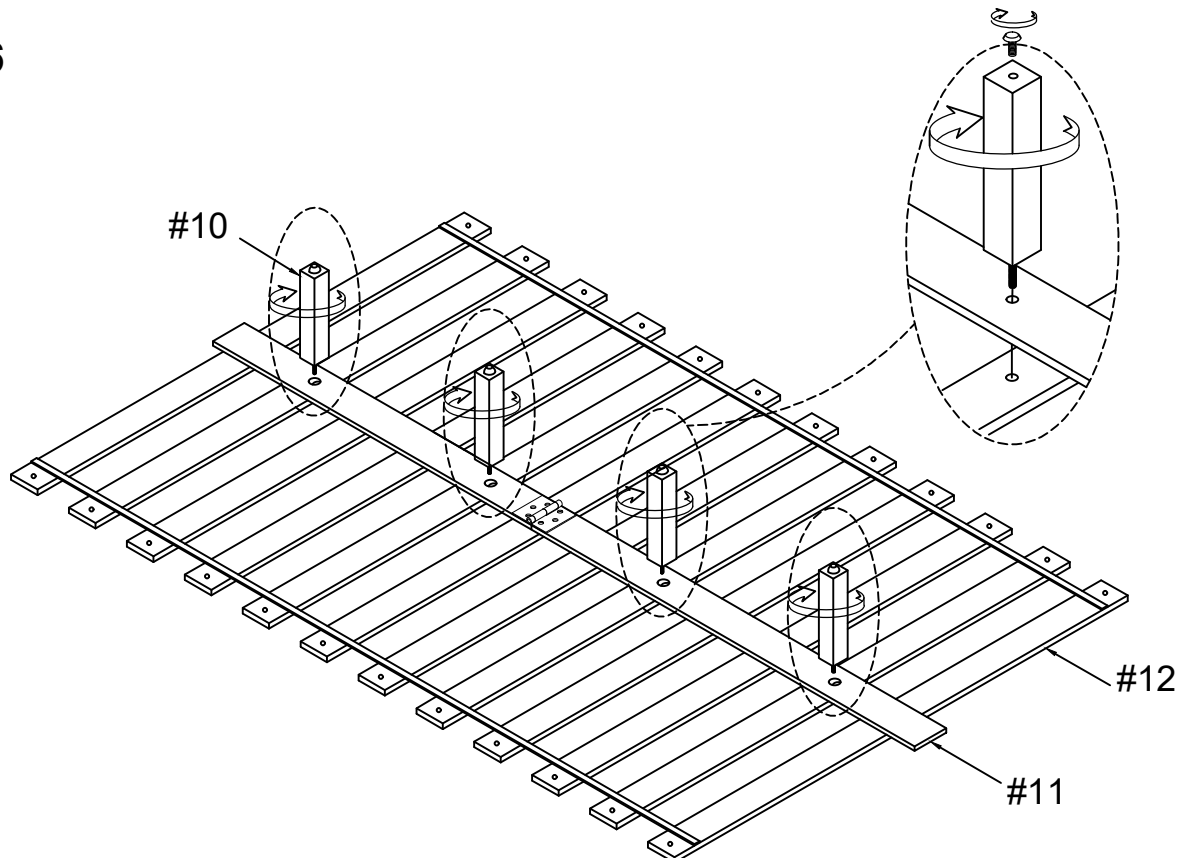

ASSEMBLY INSTRUCTIONS

STEP 7

