
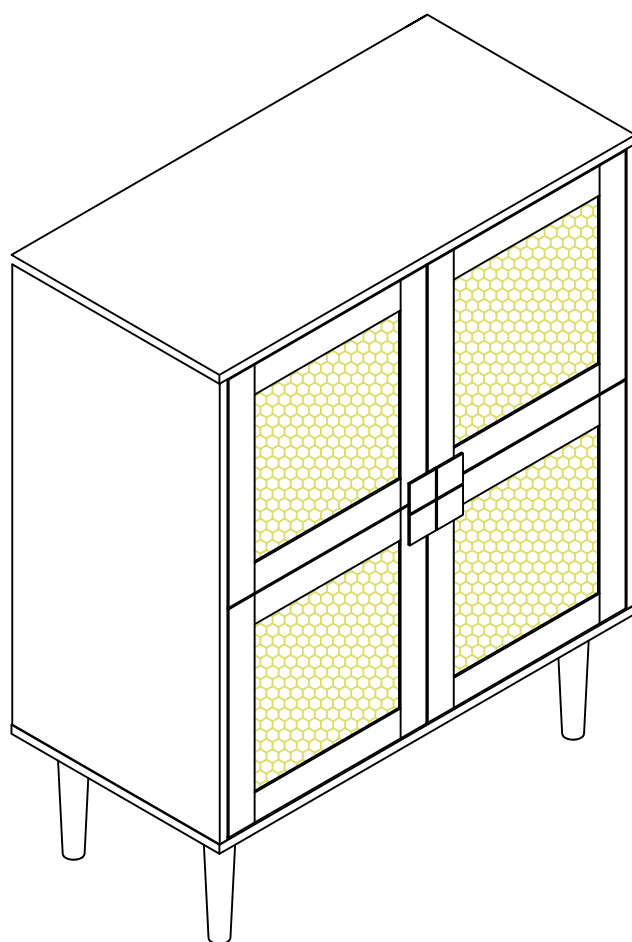





PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY.

Unpack all parts from Styrofoam and bubble wrap inside the carton to ensure there are no missing or damaged parts. If any parts are missing or damaged, do not attempt to assemble or use the product.











Hardware:

Ⓐ x16	Ⓑ x16	Ⓒ x22	Ⓓ x8	Ⓔ x12
				
Ⓕ x12	Ⓖ x12	Ⓗ x4	Ⓙ x4	Ⓚ x8
				
Ⓛ x48	Ⓜ x14	Ⓝ x2	Ⓞ x1	Ⓟ x1
				

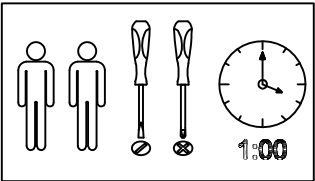


Tools required for assembly: Phillips screwdriver and Flathead Screwdriver (if using power tools, use with care)



Panels:

① x1	② x1	③ x1	④ x1	⑤ x4
				
⑥ x2	⑦ x2	⑧ x1	⑨ x2	⑩ x2
				
⑪ x2	⑫ x4			
				

Panels:

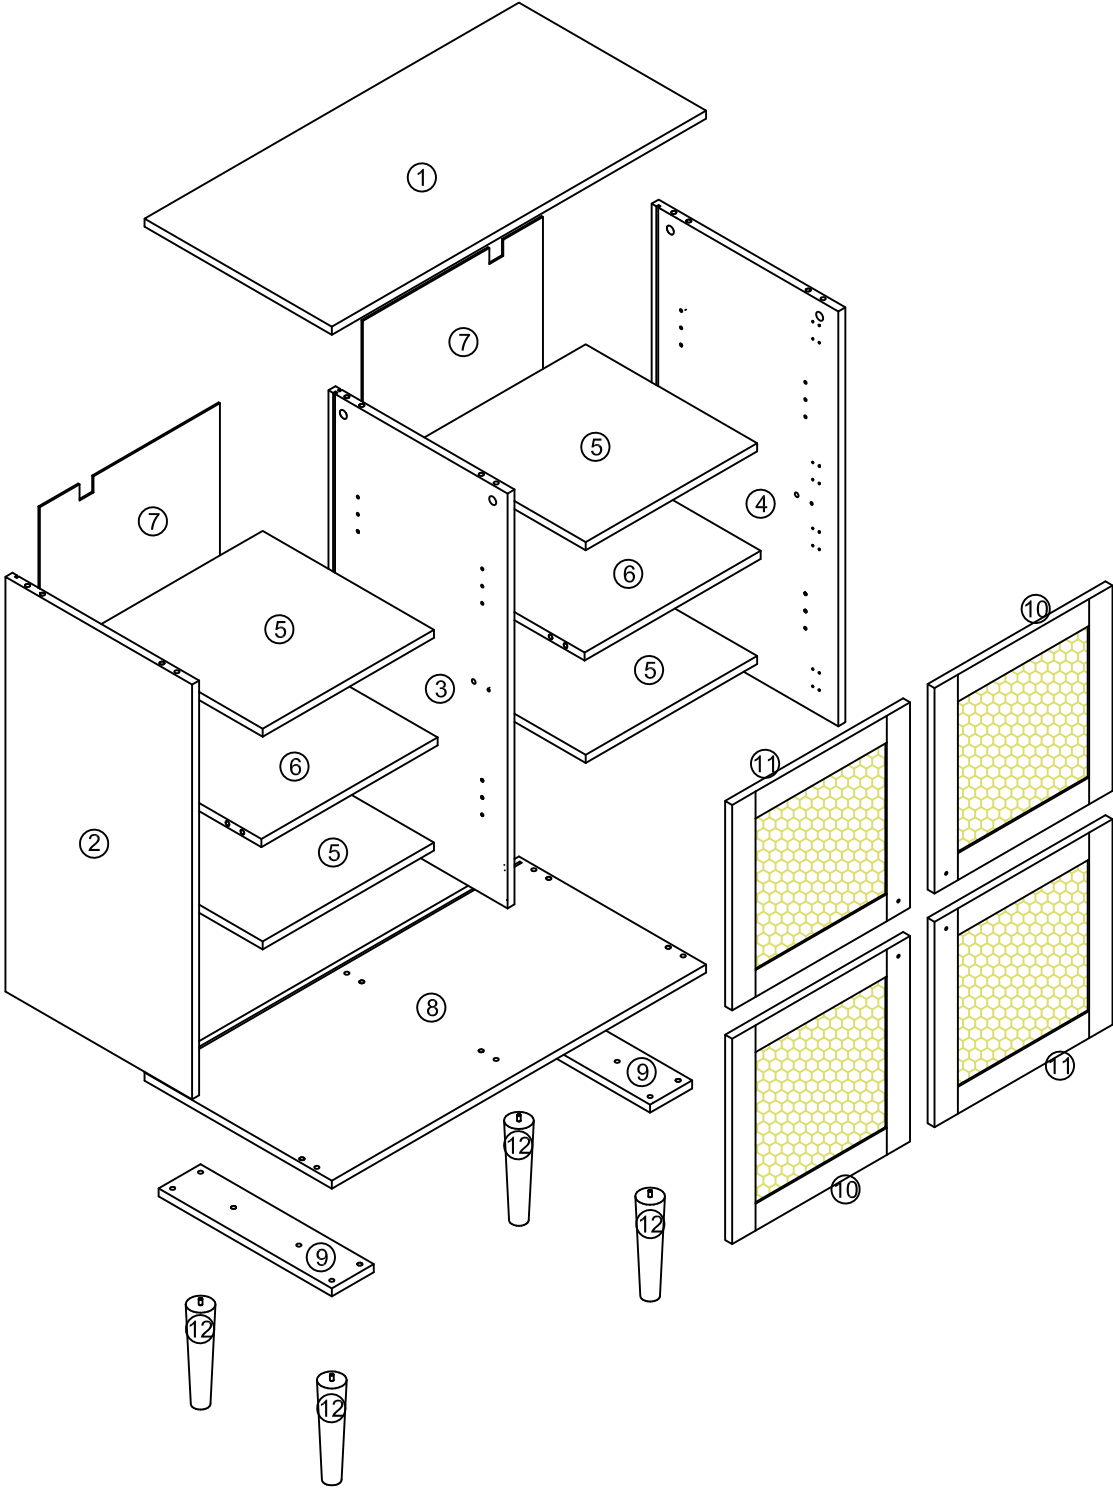


Step 1

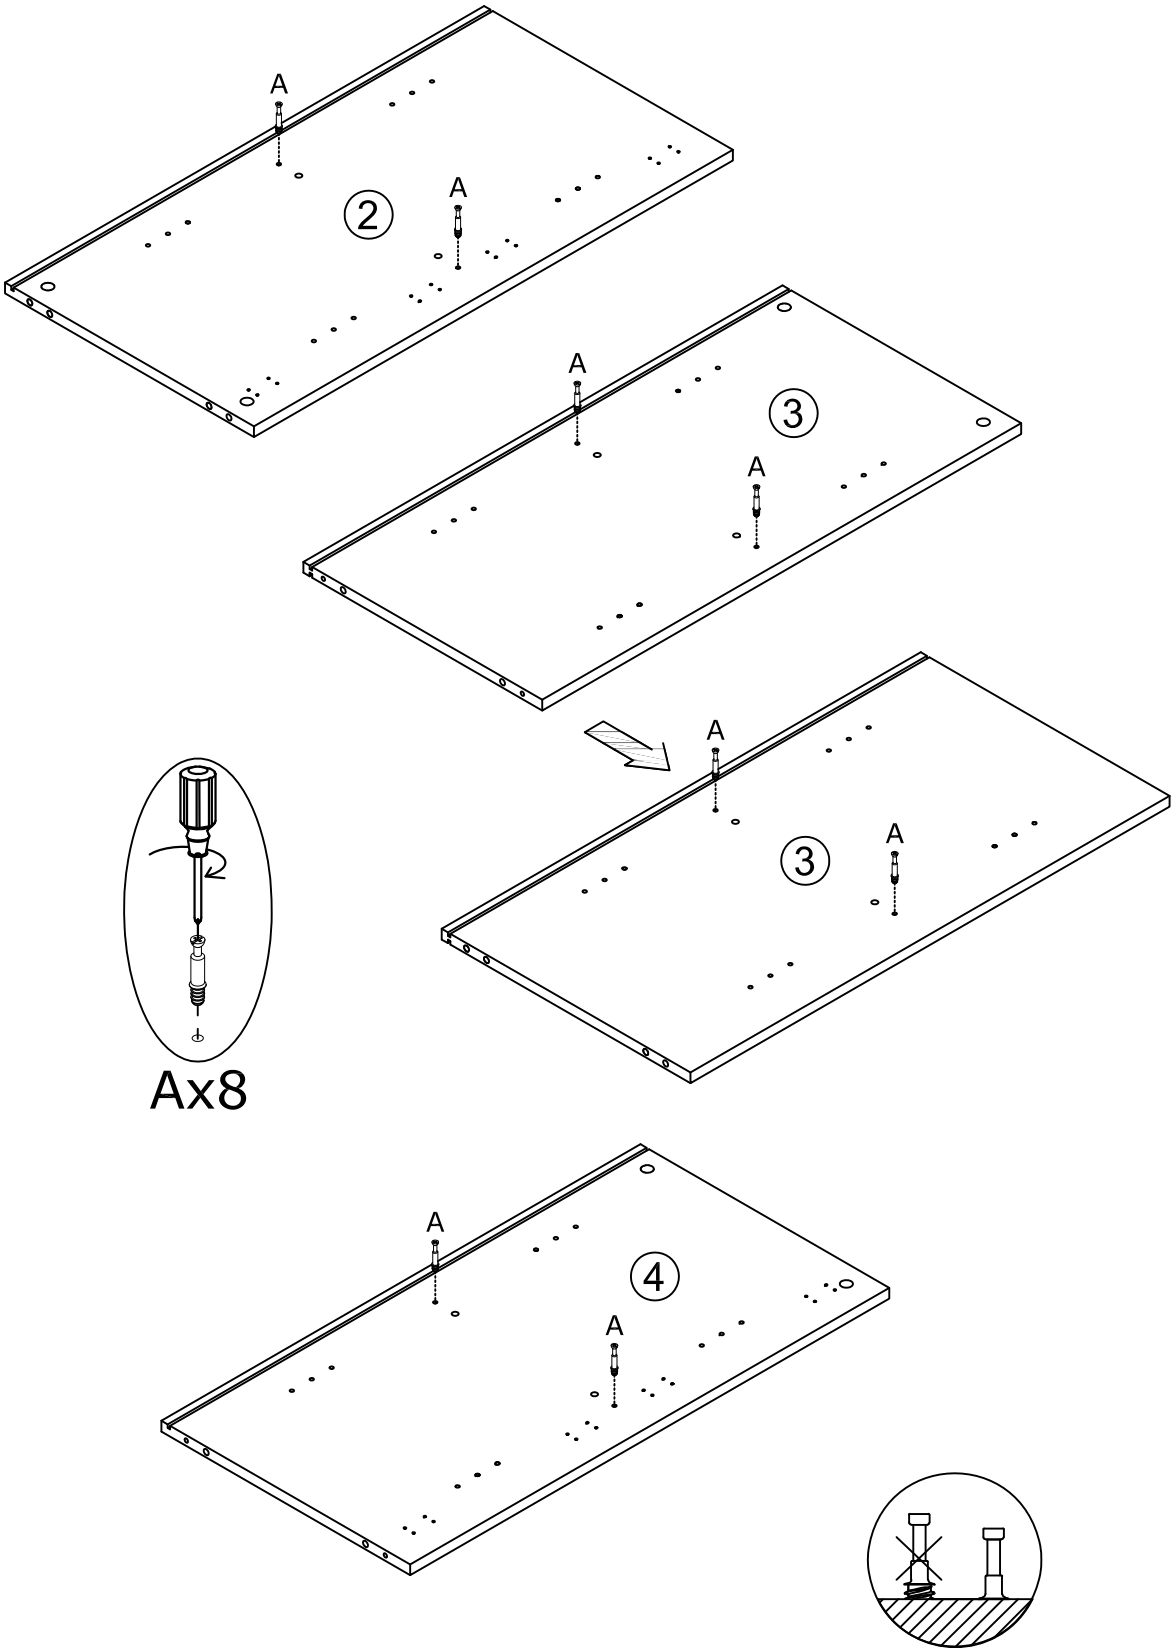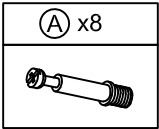


Step 2

Ⓑ x4	Ⓒ x4
	

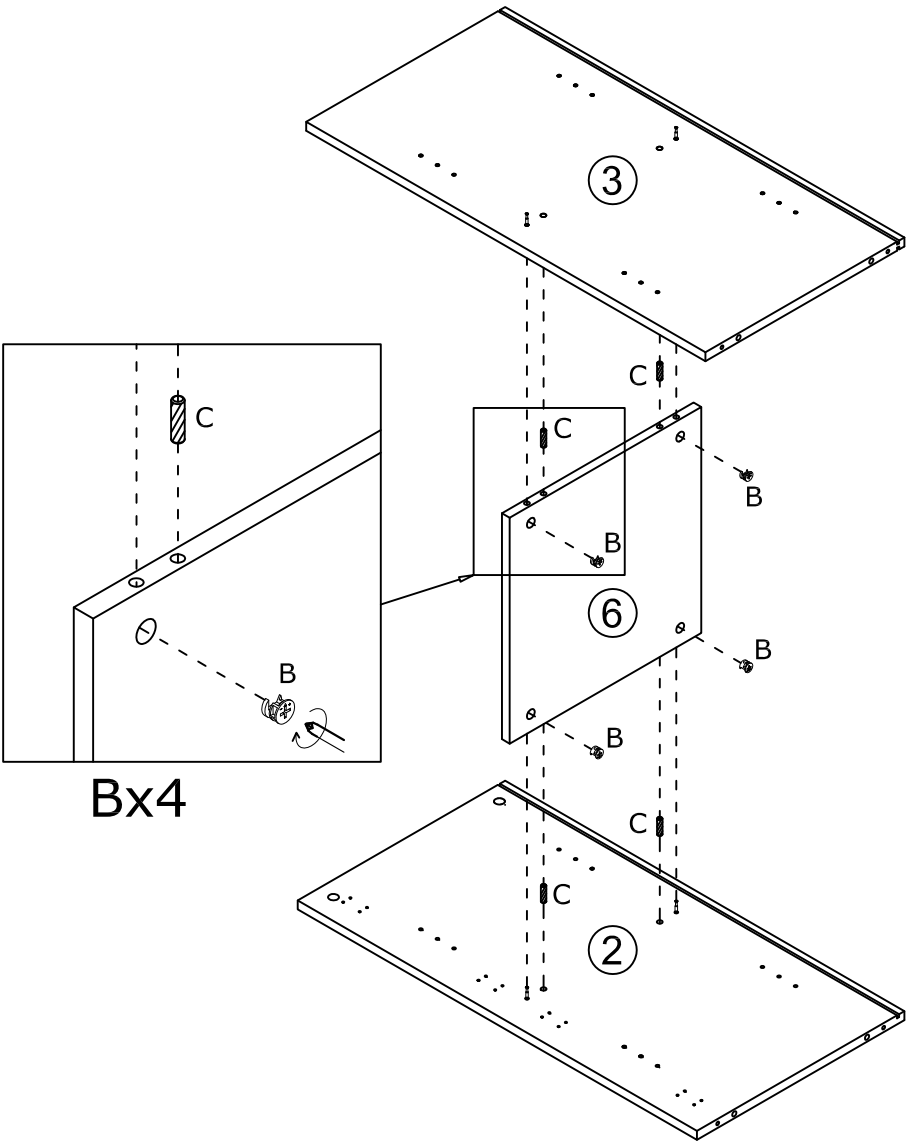


Step 3

Ⓑ x4	Ⓒ x4
	

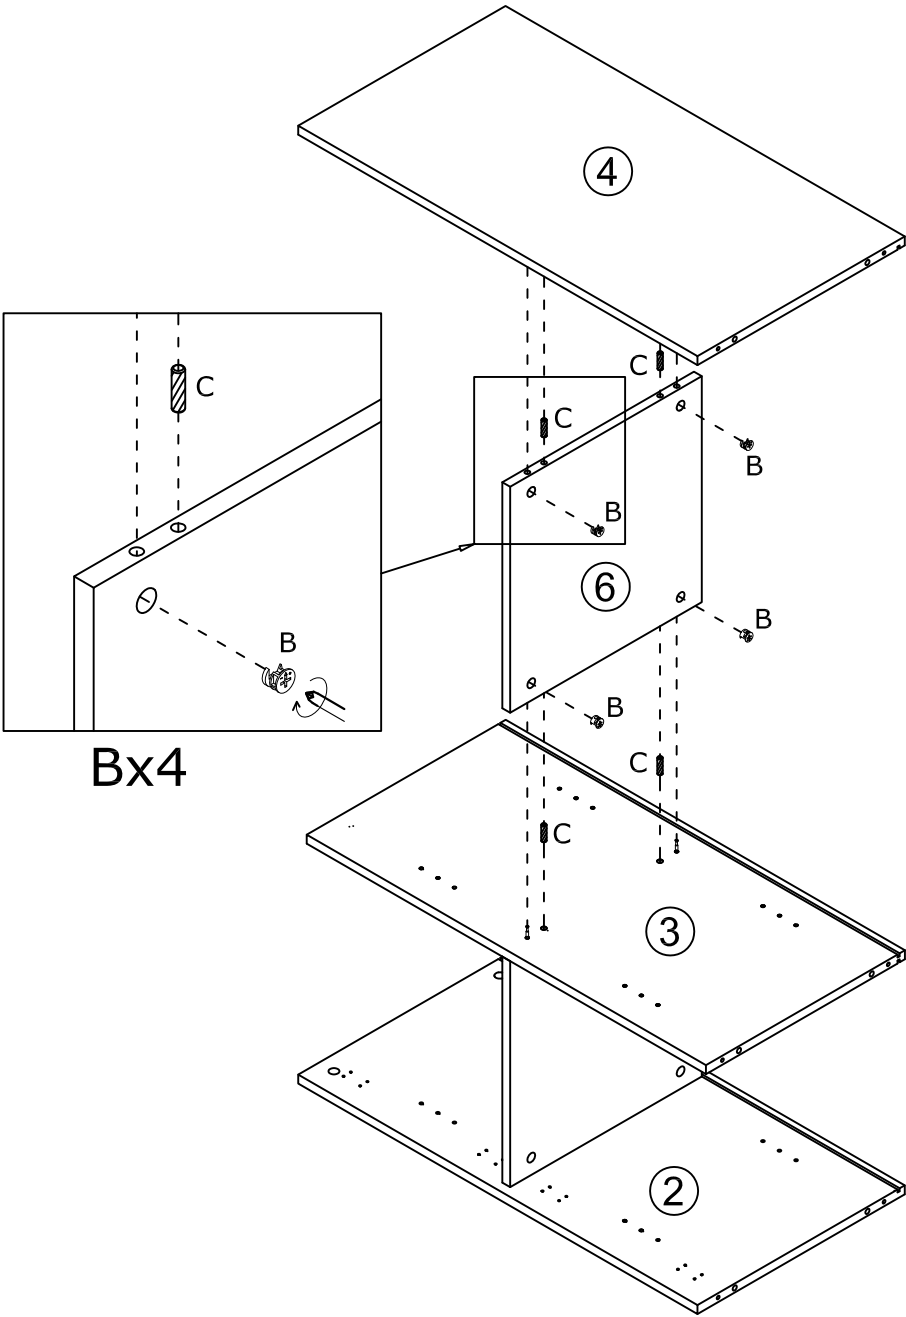


Step 4



Ⓓ x6	Ⓒ x6
	




Dx6

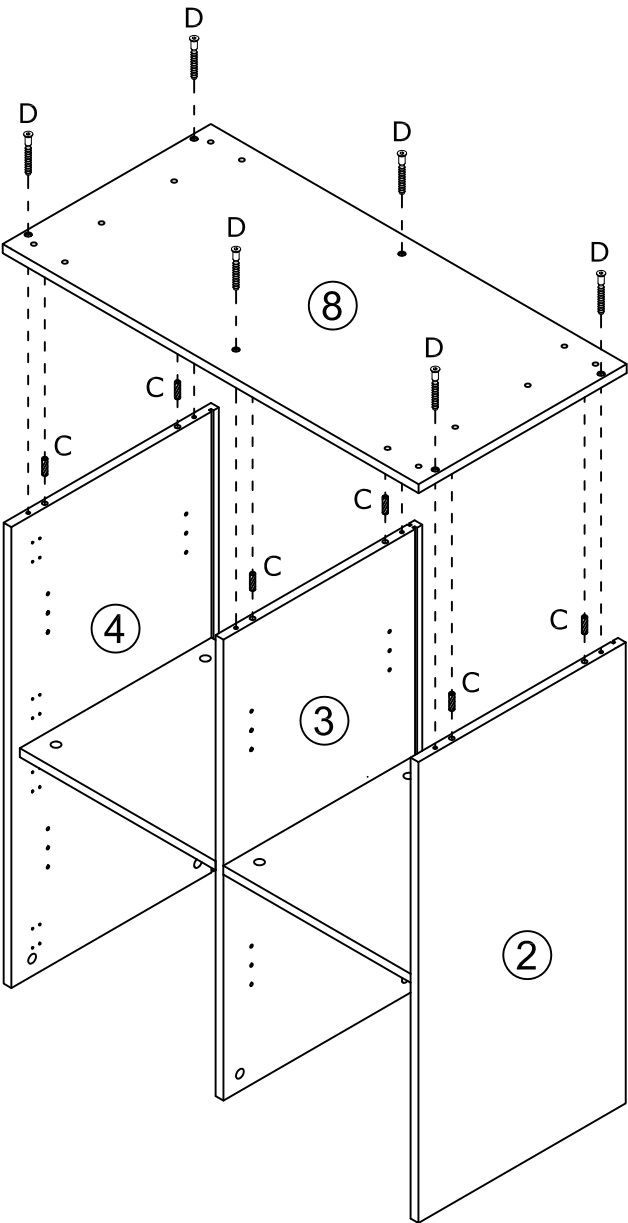


Step 5

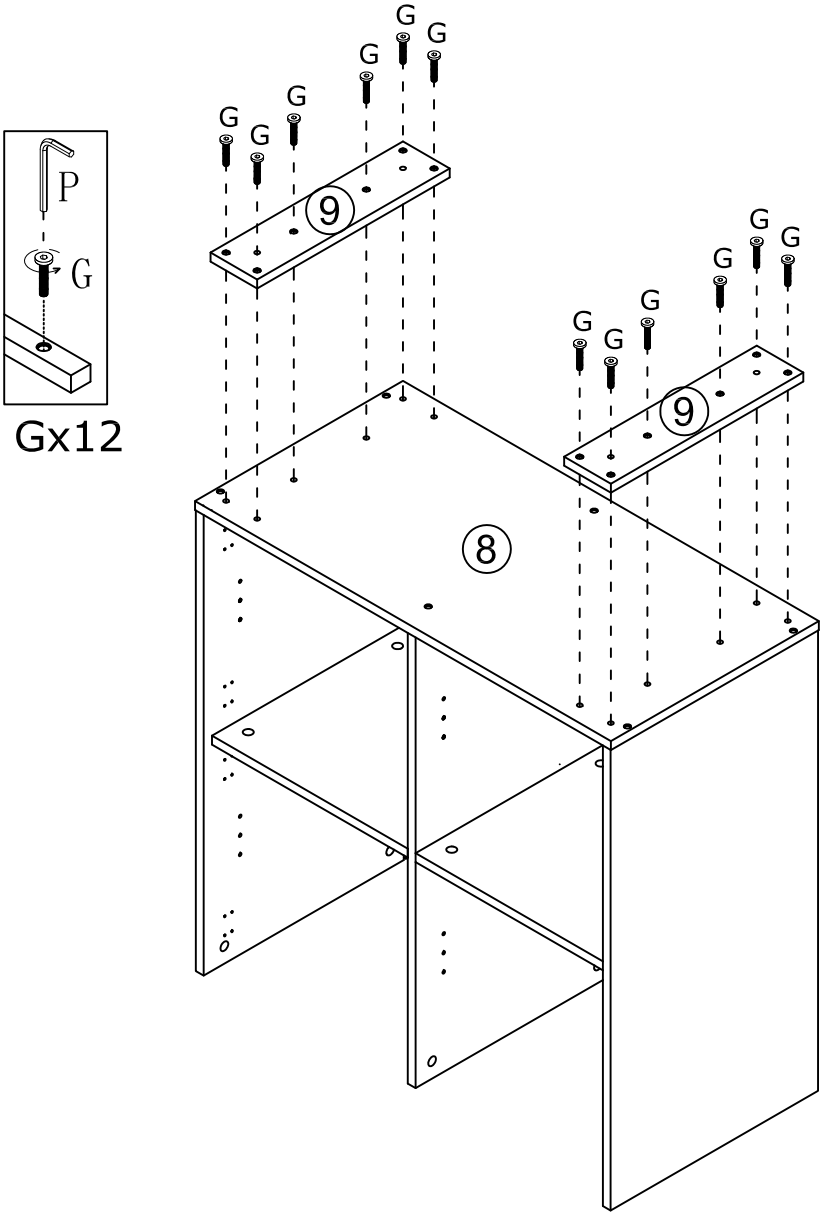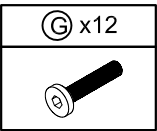


Step 6


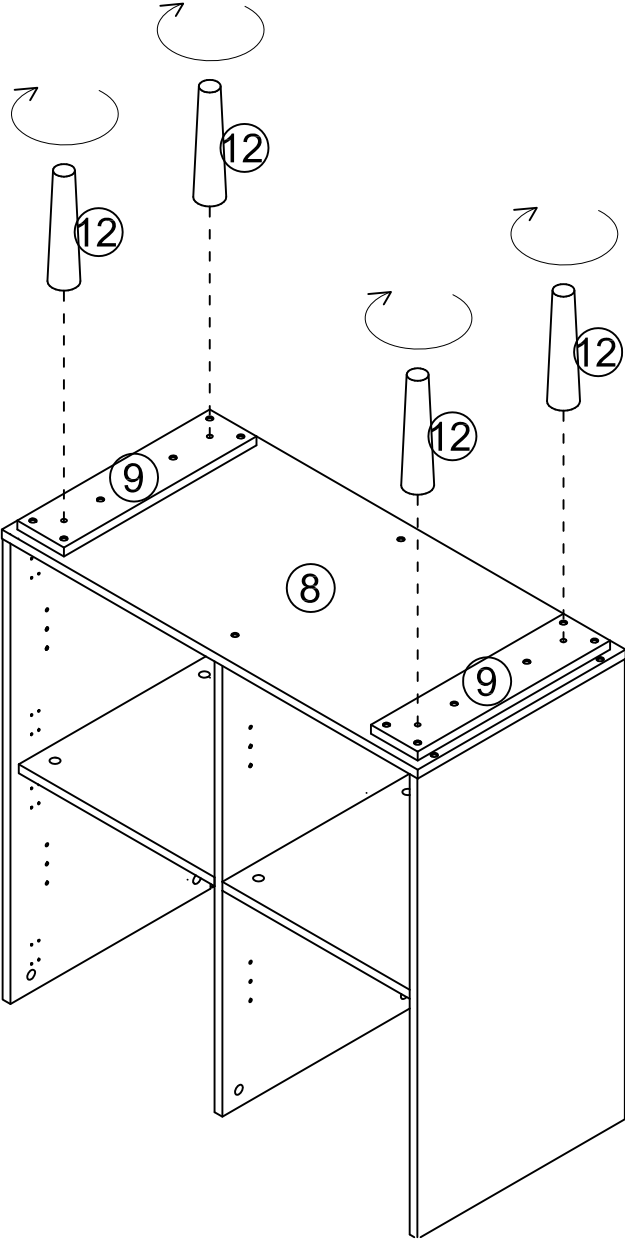


Step 7

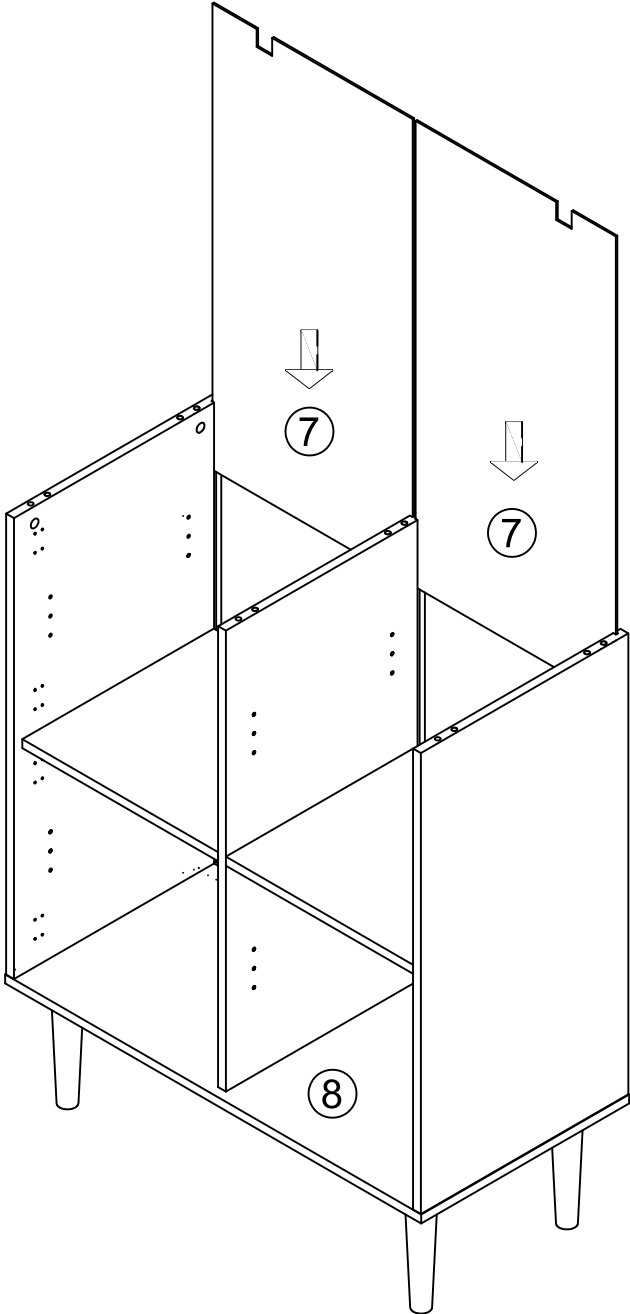


Step 8

(N) x2	(A) x6
	

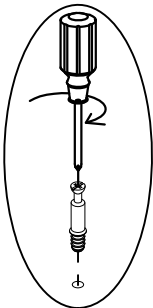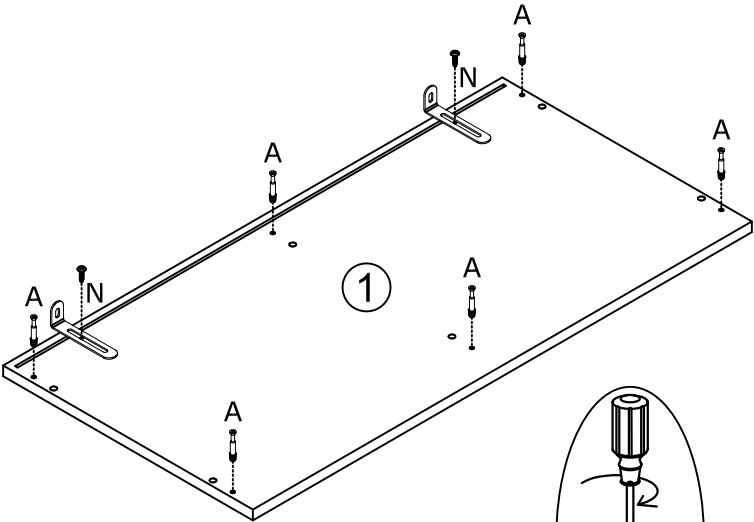


Ax8

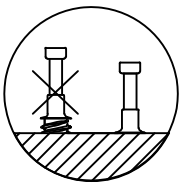



Step 9

Ⓑ x6	Ⓒ x6
	

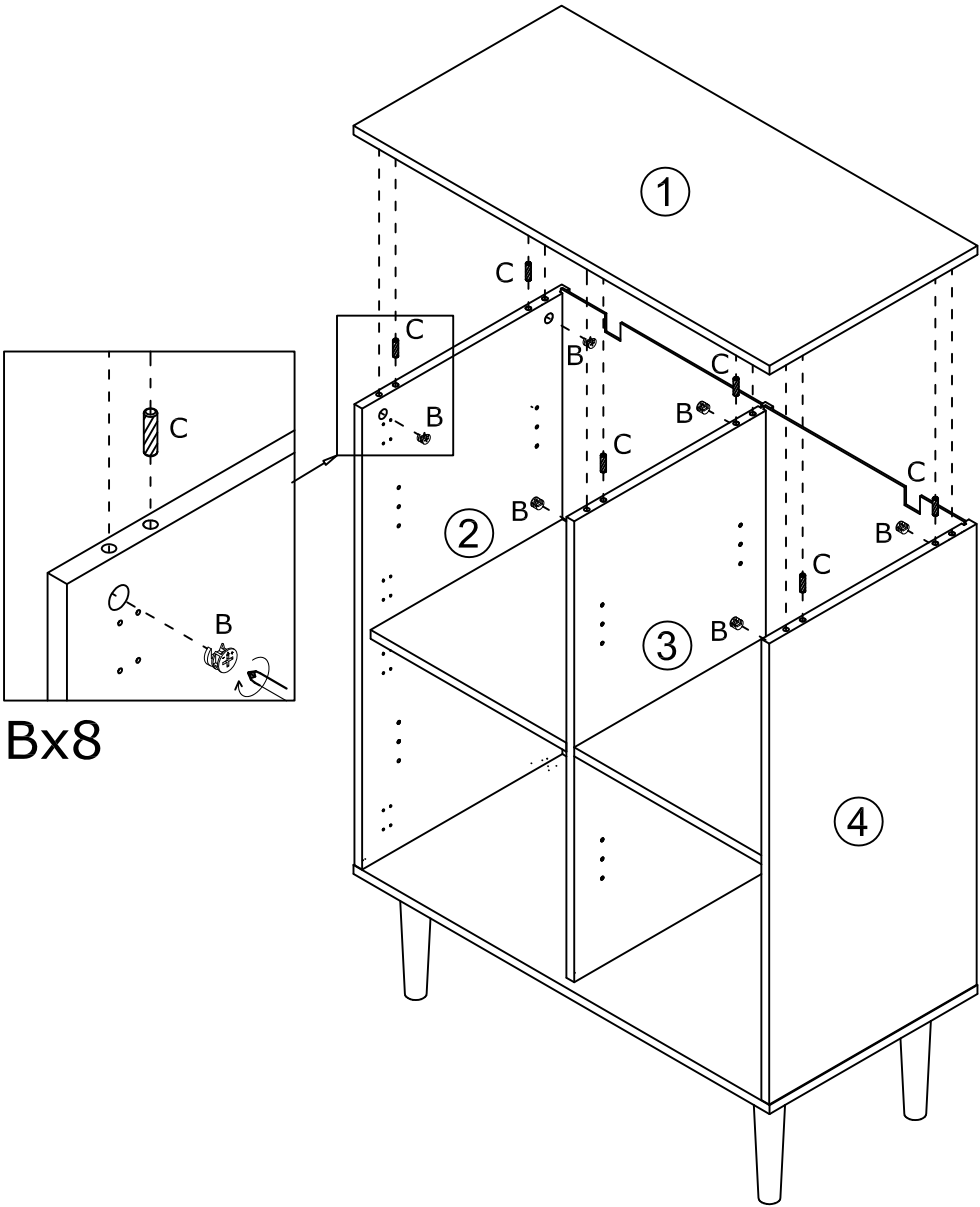

Step 10


Ⓔ x12	Ⓕ x12
	

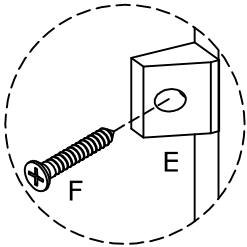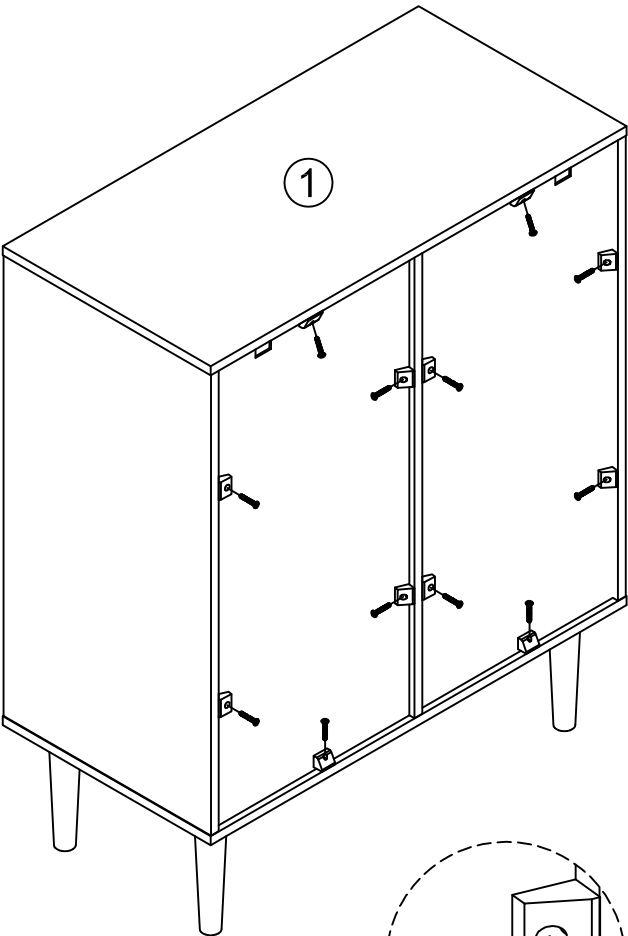


Ex12
Fx12

Step 11



Ⓚ x8	Ⓛ x16
	

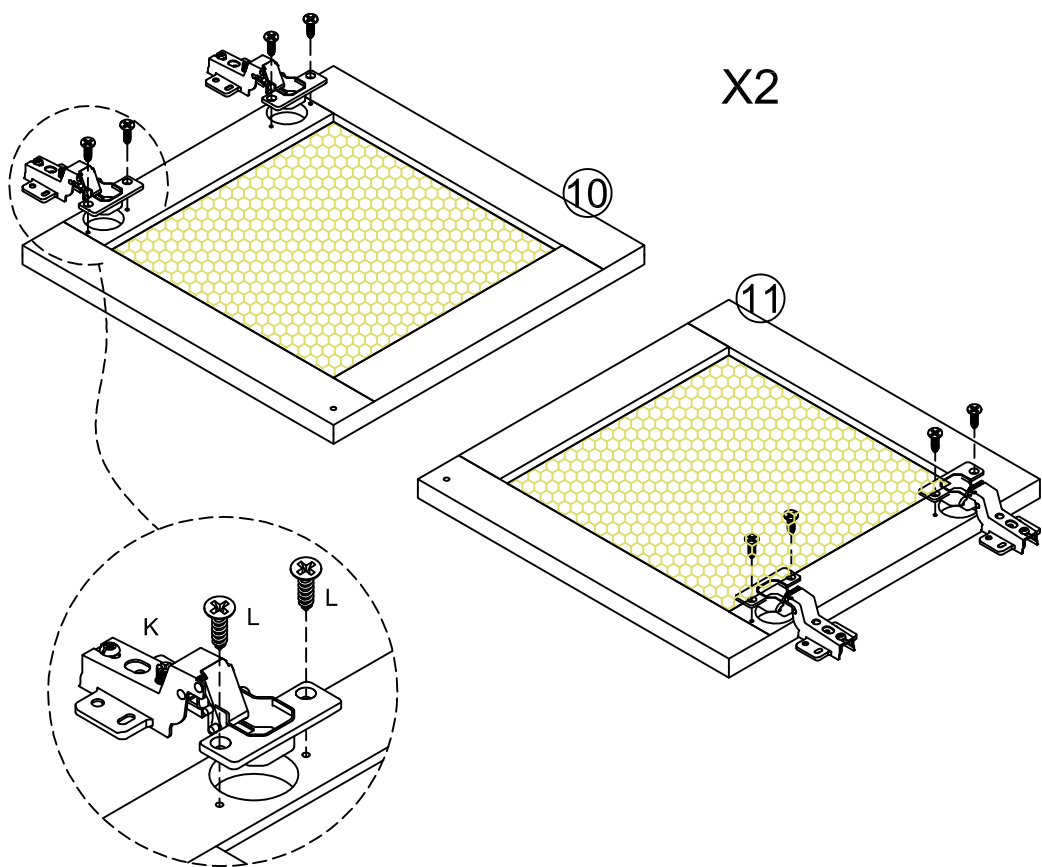

Step 12

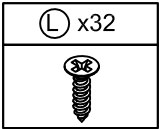


Step 18



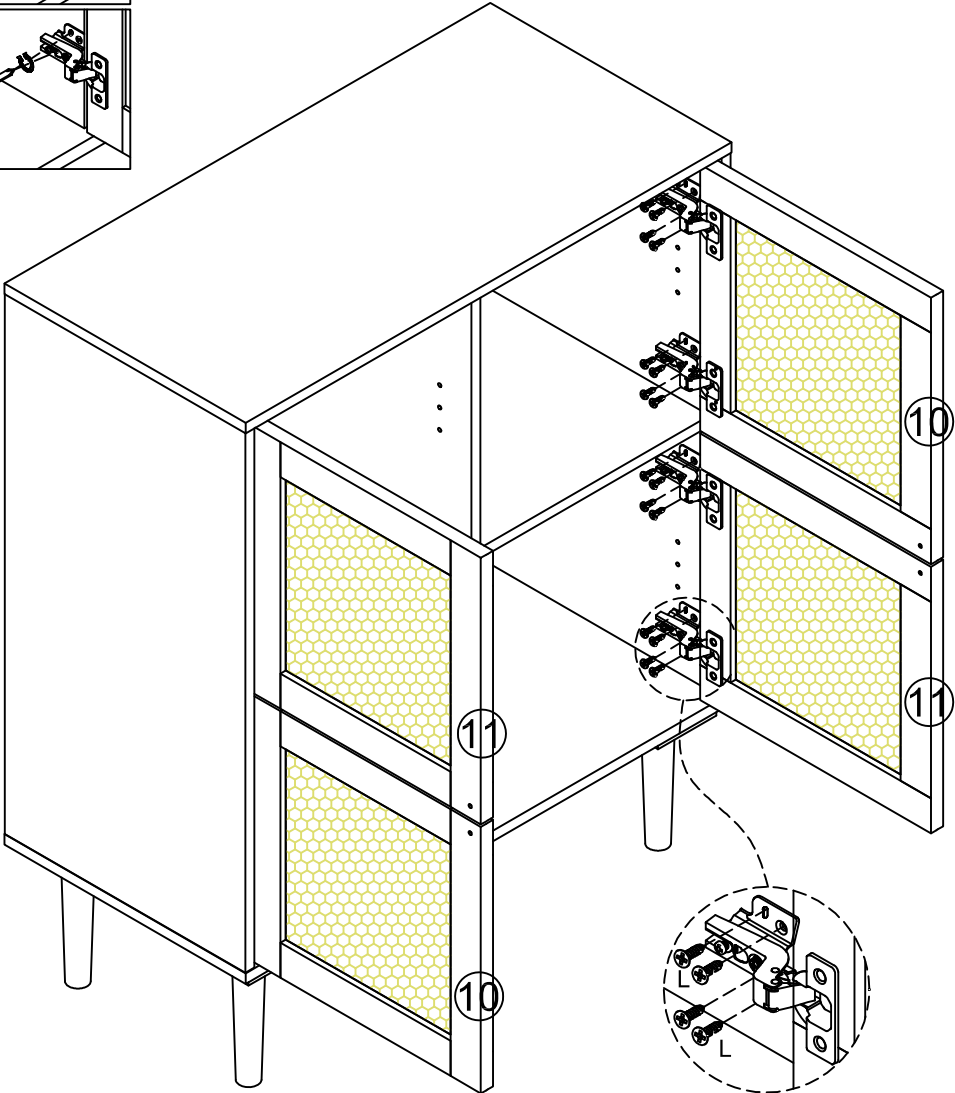
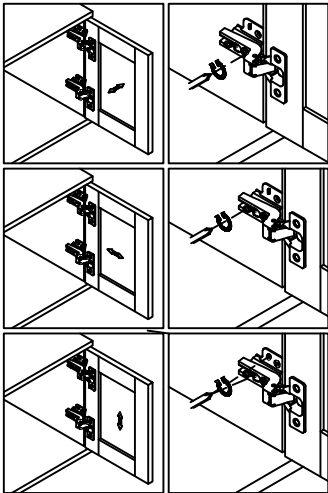


Step 12

Ⓜ x4	Ⓝ x4
	

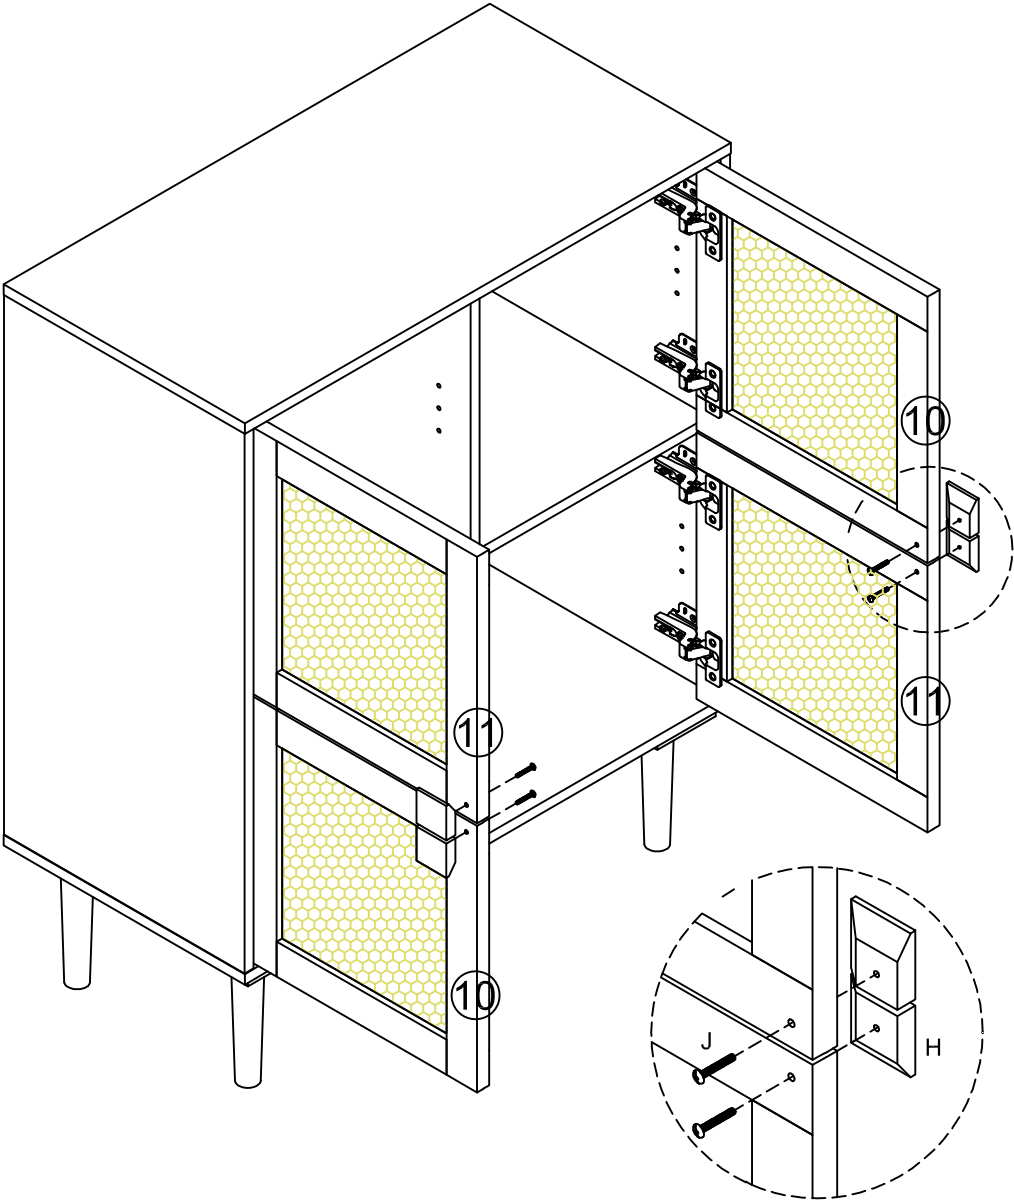

Step 13

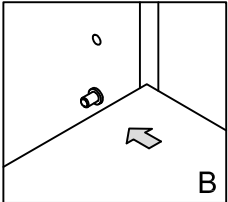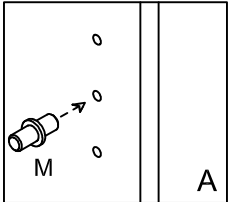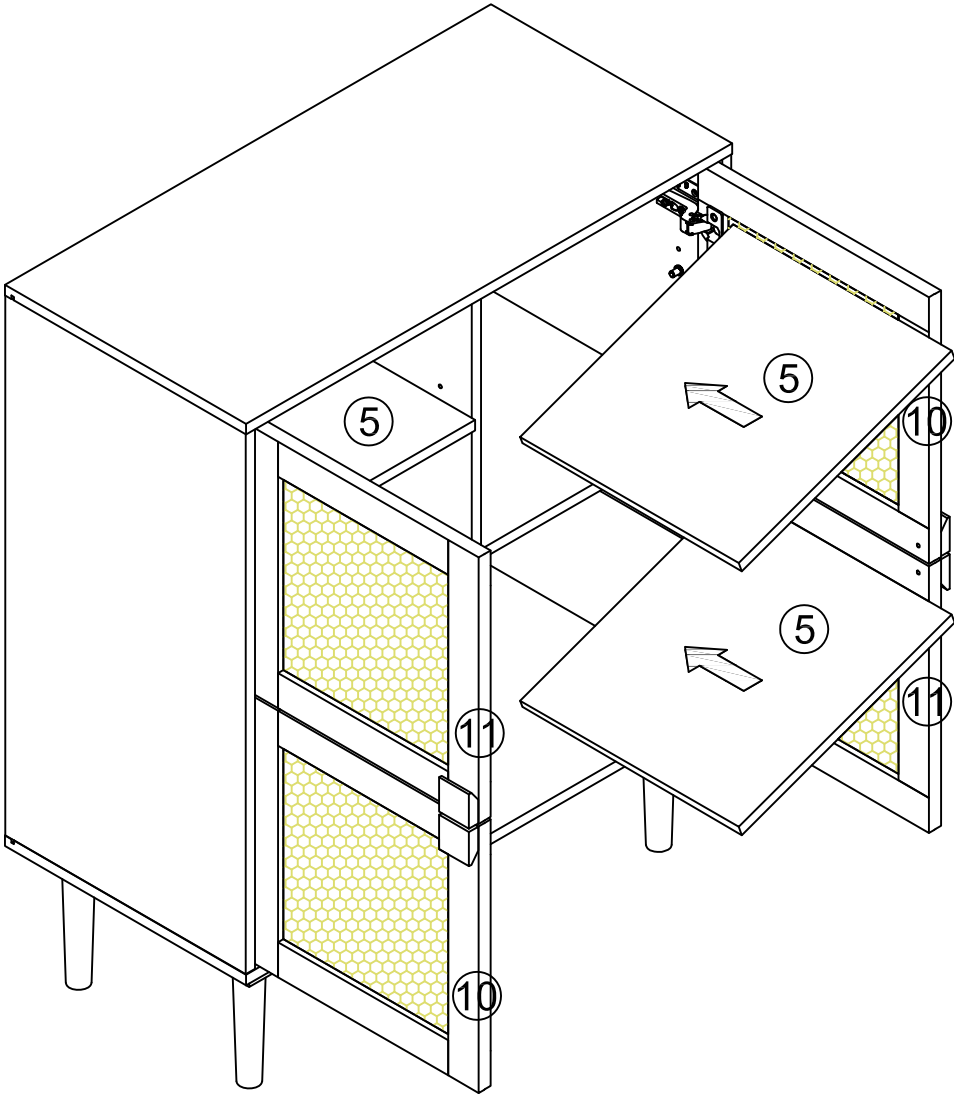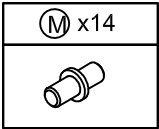

Step 14

