


# Coffee Table

Assembly Instructions - Please keep for future reference

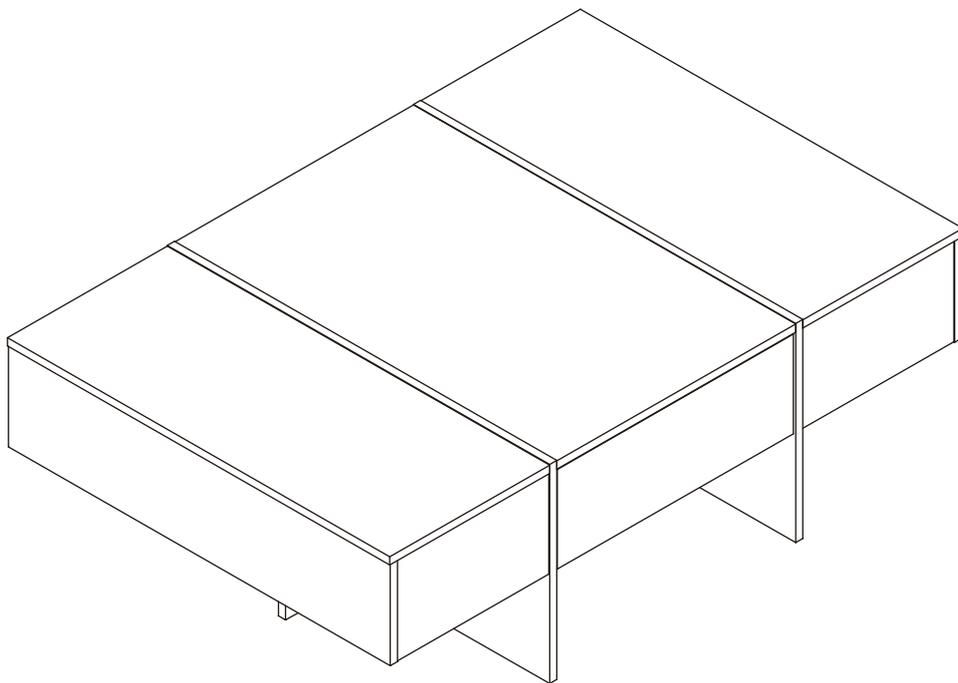

## Dimensions

Width-47.2inch

Depth-31.5inch

Height-15.7inch

**Important – Please read these instructions fully before starting assembly**



# Safety and Care Advice

**Important – Please read these instructions fully before starting assembly**

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

## Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

## Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

## **WARNING** In order to help prevent overturning – please follow these instructions

To help prevent product toppling over please follow the below steps:-

- Use the anti tip stap or wall fixing method provided (if applicable)
- Do not allow children to climb or hang on the furniture
- Do not open more than one drawer at a time
- Do not place heavy items in the top drawers
- Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


# Using Camlocks

## Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.  
NE PAS SERRER EXCESSIVEMENT.

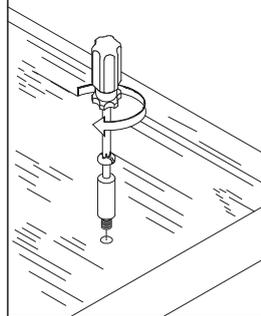

## Step 2

Push the male camlock into the entry hole.

2

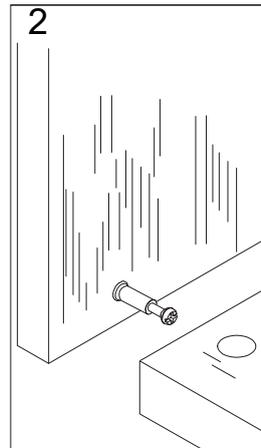


## Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

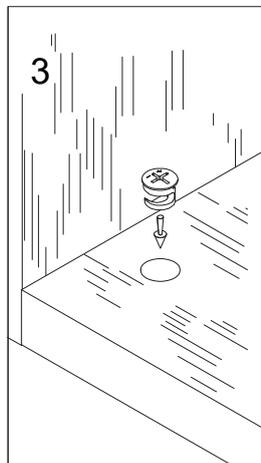


## Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.

4

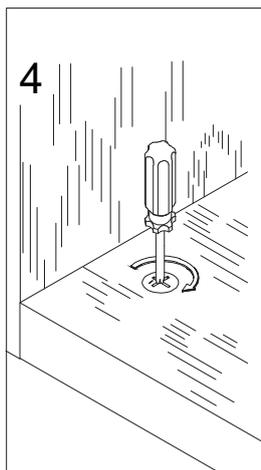


# Assembly Instructions

















1, 2, 3, 5, 8, 9 plates have  
a protective film, please  
remove them

1, 2, 3, 5, 8, 9 plaques ont  
un film protecteur, veuillez  
les retirer

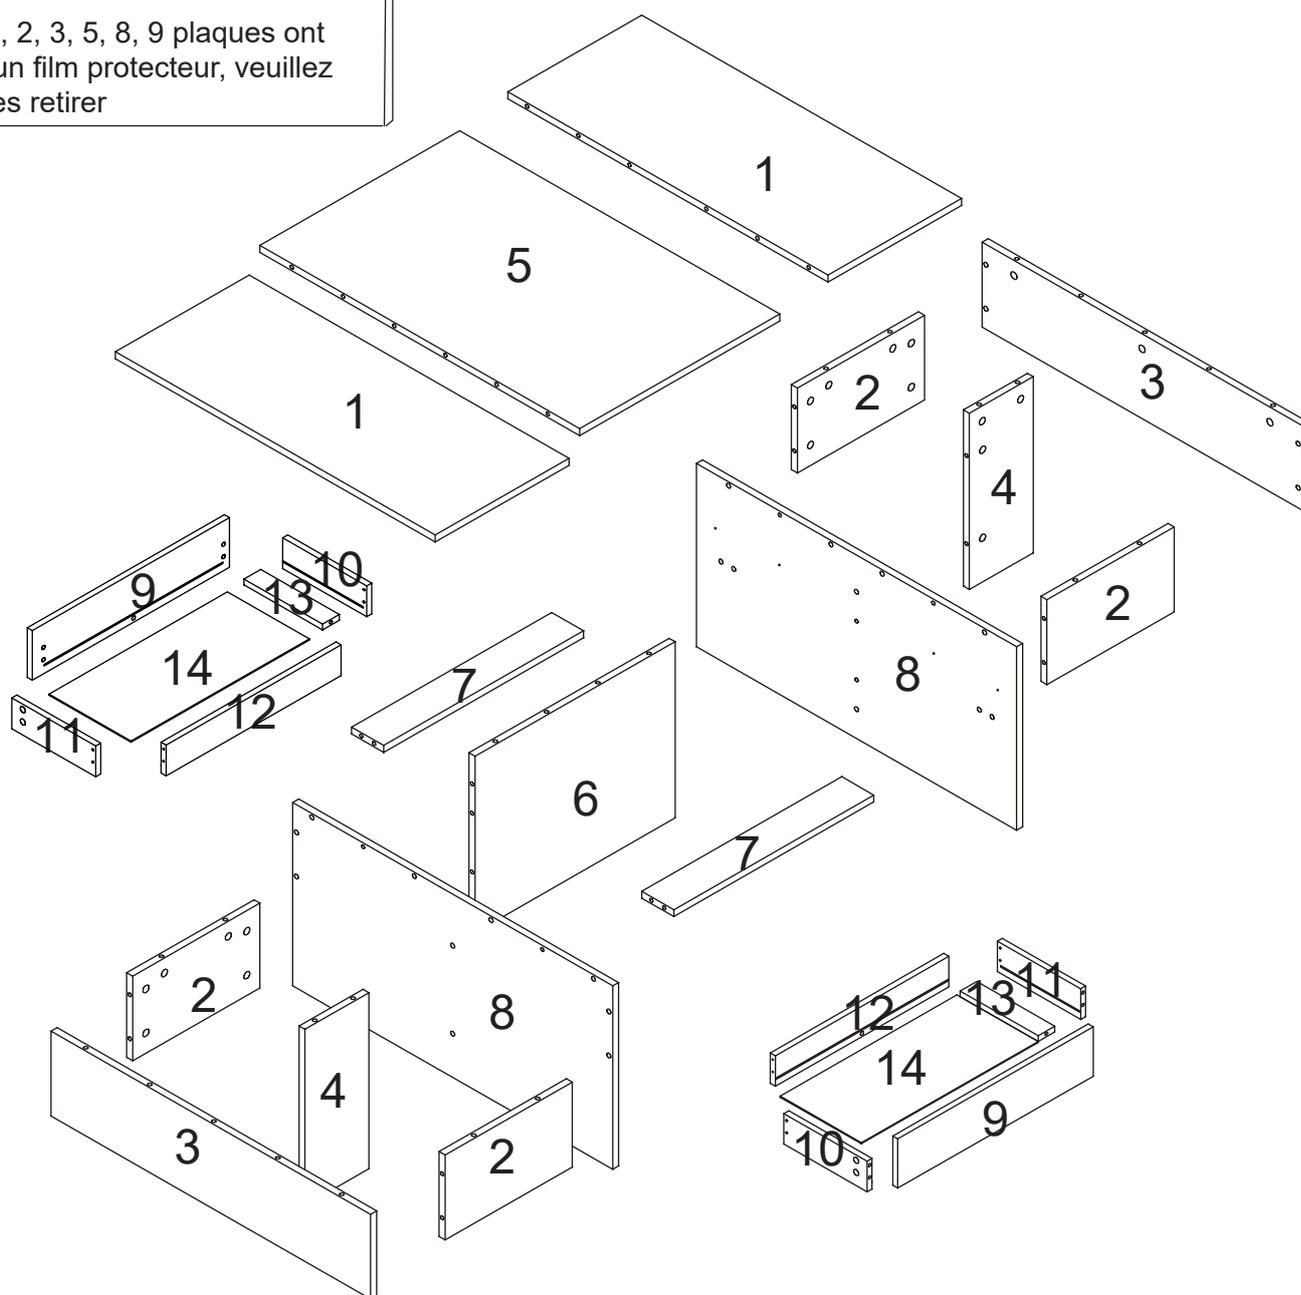




# Assembly Instructions

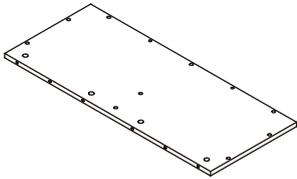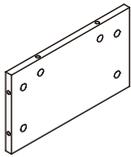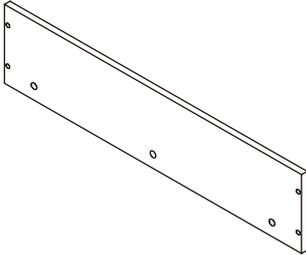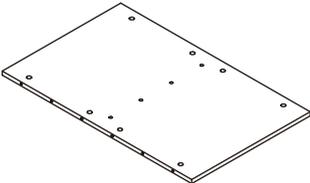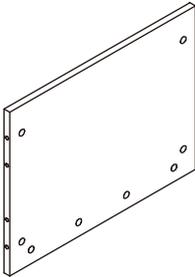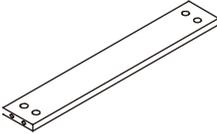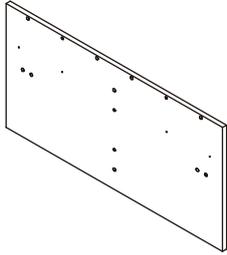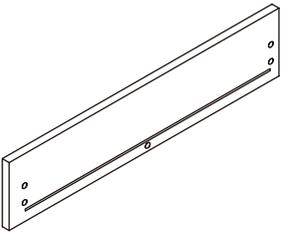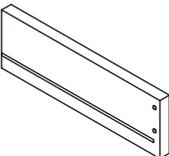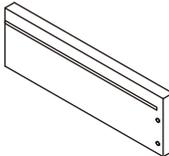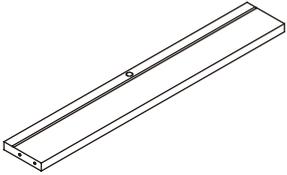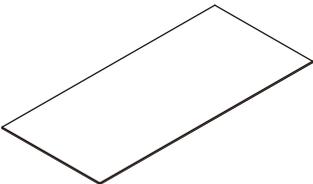
			
① x 2	② x 4	③ x 2	④ x 2
			
⑤ x 1	⑥ x 1	⑦ x 2	⑧ x 2
			
⑨ x 2	⑩ x 2	⑪ x 2	⑫ x 2
			
⑬ x 2	⑭ x 2		

# Components-Fittings


Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

<p><b>(A)</b></p>  <p>Cam Bolt x 82+3</p>	<p><b>(B)</b></p>  <p>Cam Lock x 82+3</p>	<p><b>(C)</b></p>  <p>8*30mm Dowel x 16+2</p>	<p><b>(D)</b></p>  <p>3.5*35mm Screw x 8+2</p>
<p><b>(E)</b></p>  <p>300mm x 2 set</p>	<p><b>(F)</b></p>  <p>3.5*14mm Screw x 16+2</p>	<p><b>(G)</b></p>  <p>felt x 8+2</p>	<p><b>(H)</b></p>  <p>Perfect Fit x14+4</p>
<p><b>(J)</b></p>  <p>Screwdriver x 1</p>			

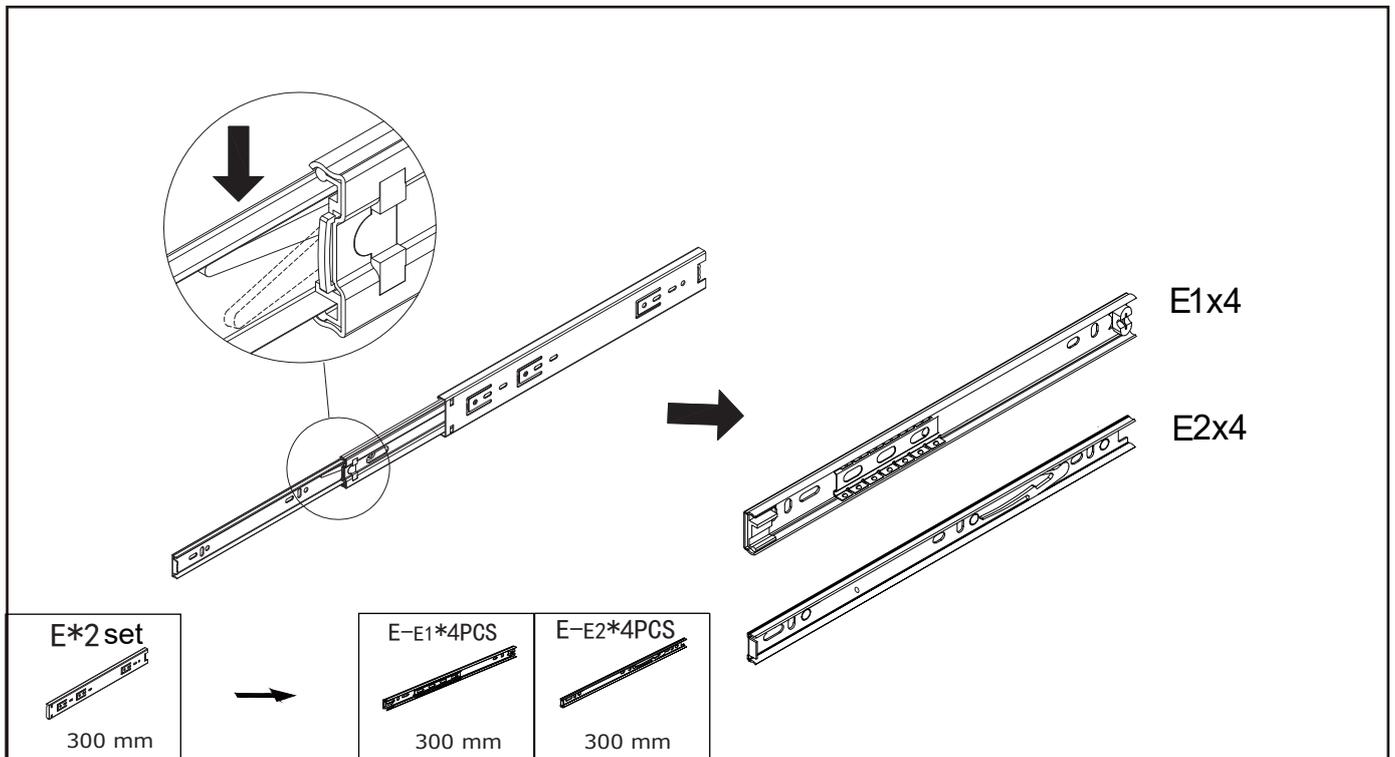


# 1.

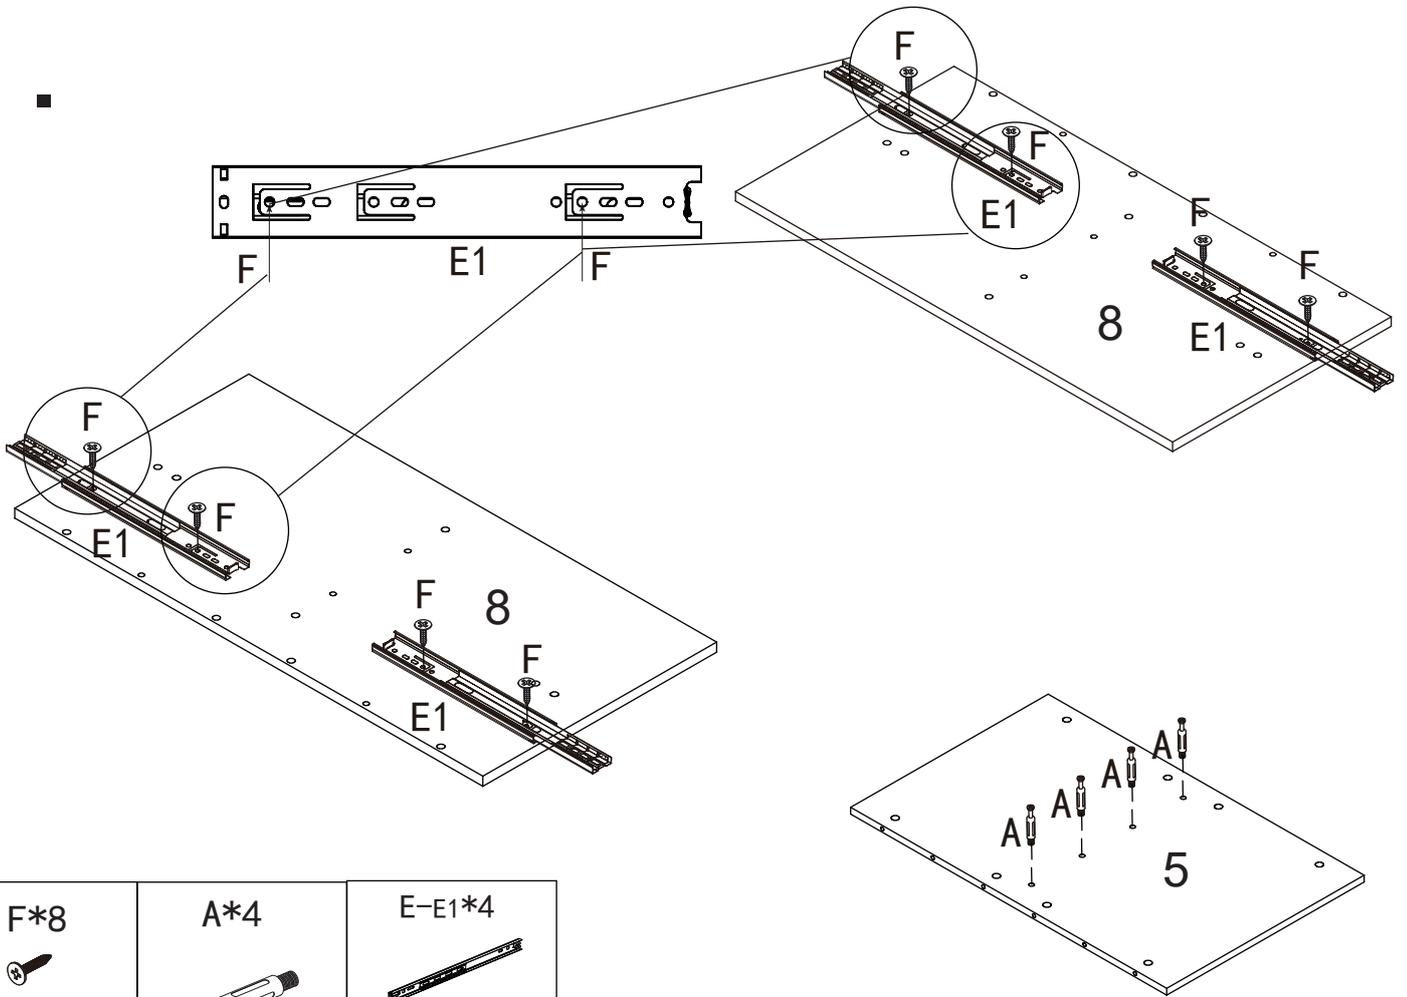


<b>F*8</b>  Ø3.5 x 14 mm	<b>A*4</b> 	<b>E-E1*4</b>  300 mm
---	---	--

# 2. x2

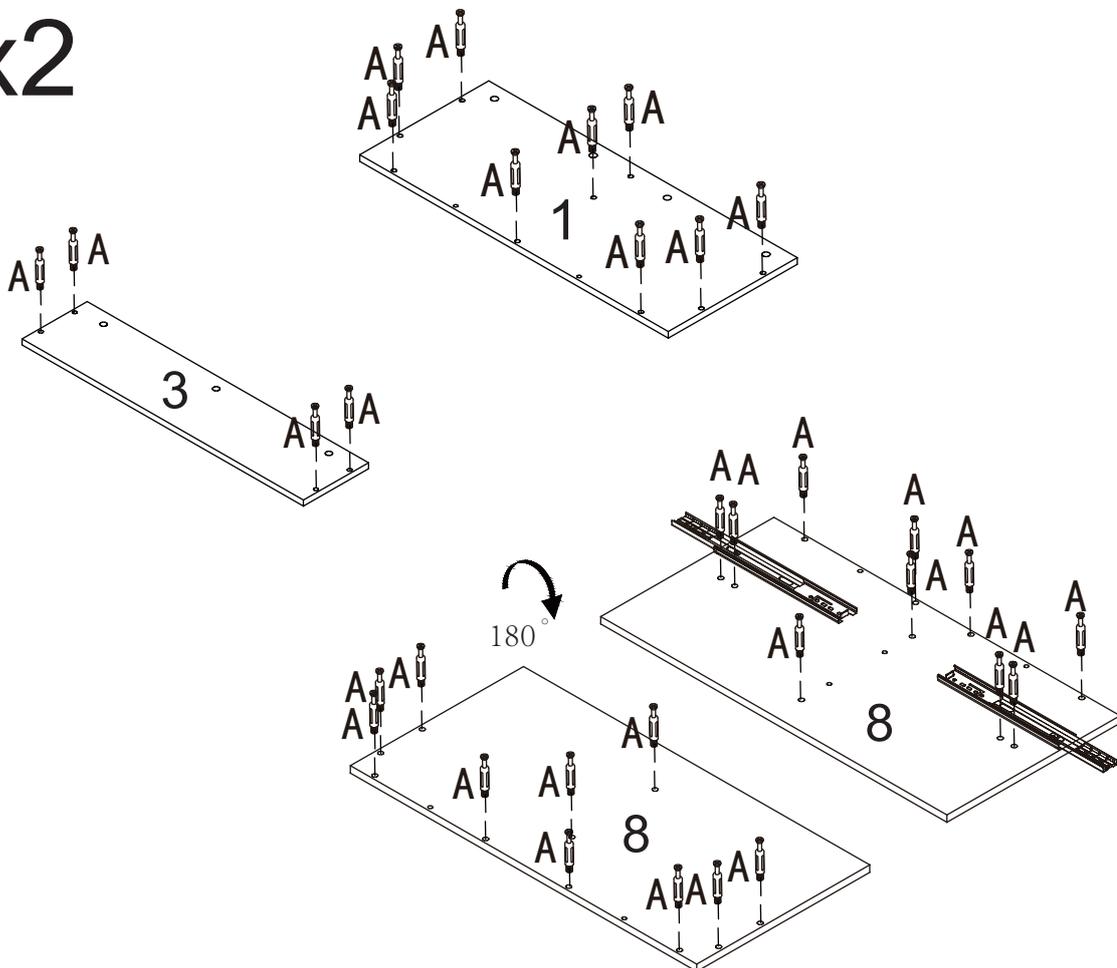

<b>A*66</b> 
--


# 3. x2

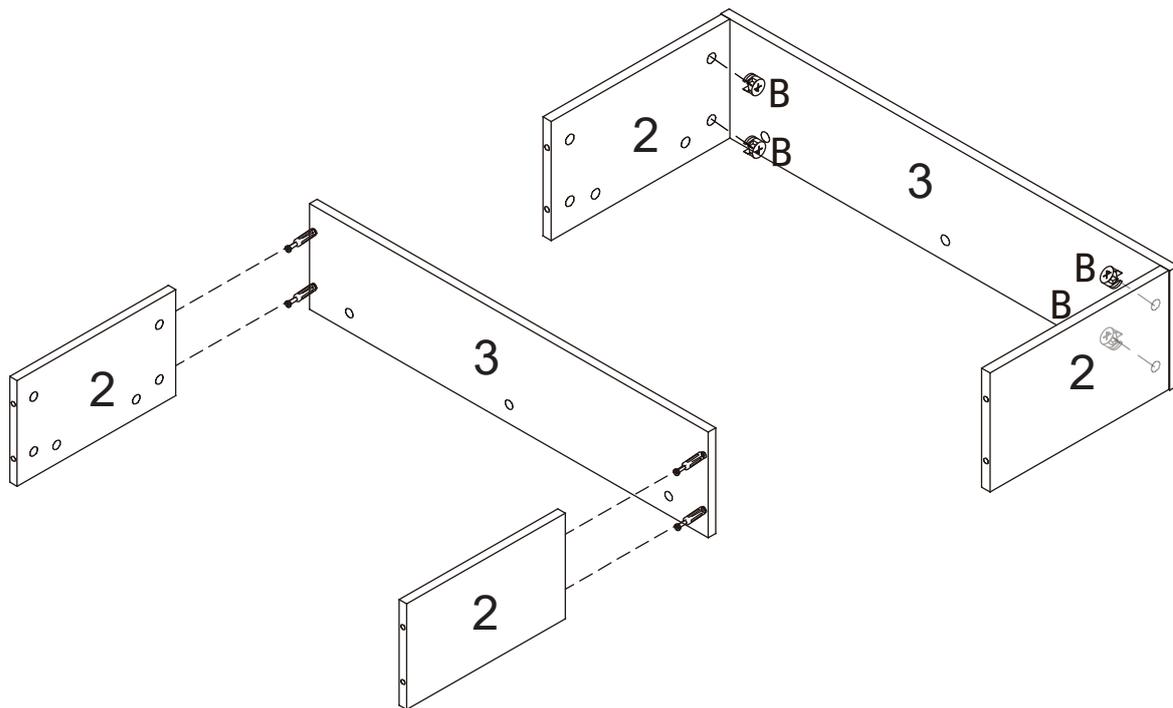

B\*8



# 4. x2

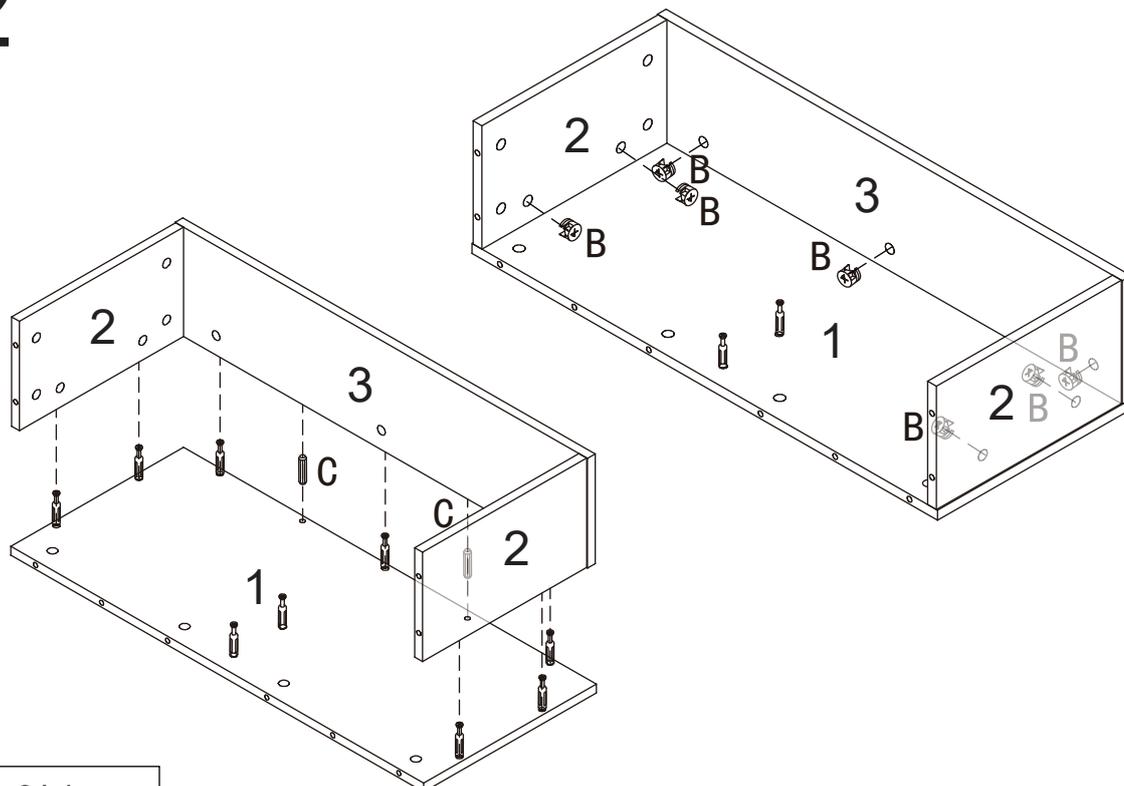

B\*14





C\*4



# 5. x2



180°

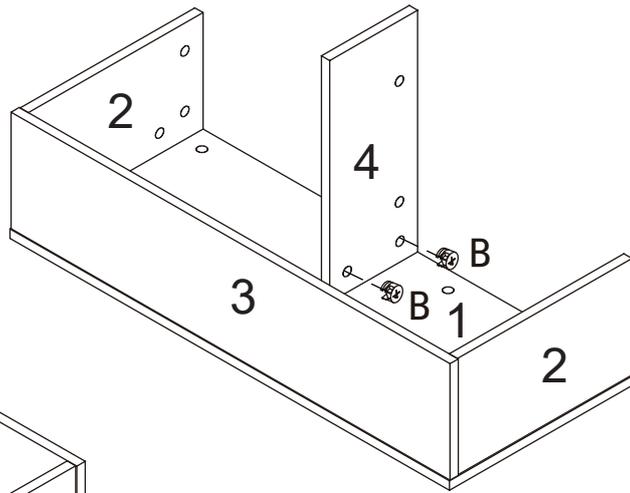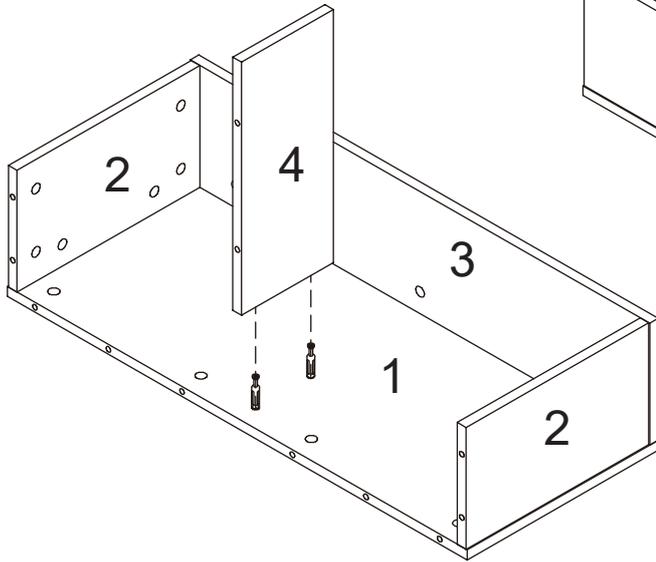

B\*4





# 6.

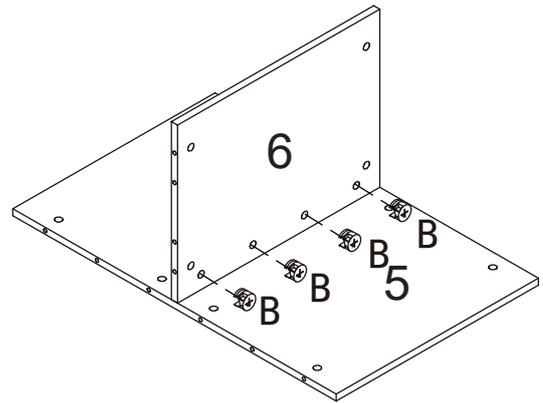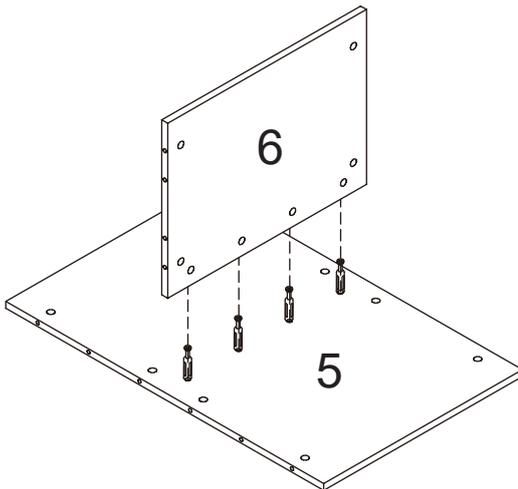

B\*4





# 7.

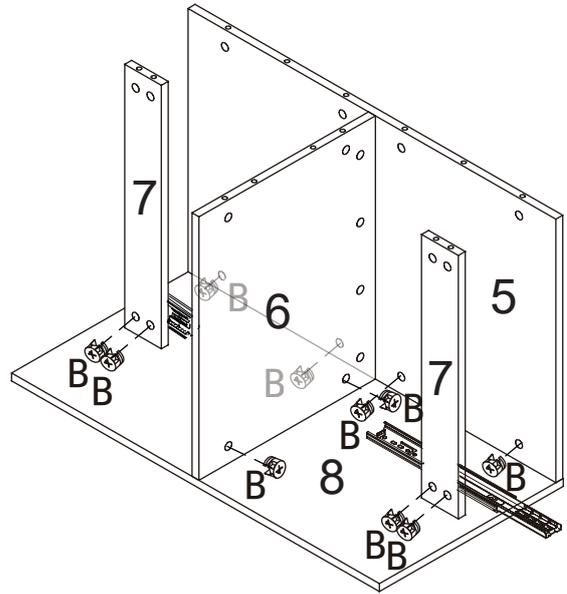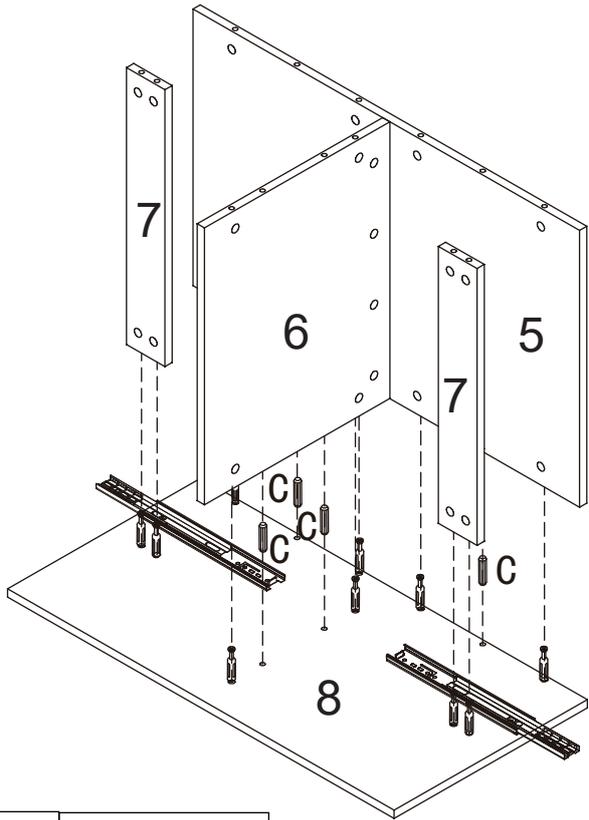


B*10	C*4
	

# 8.

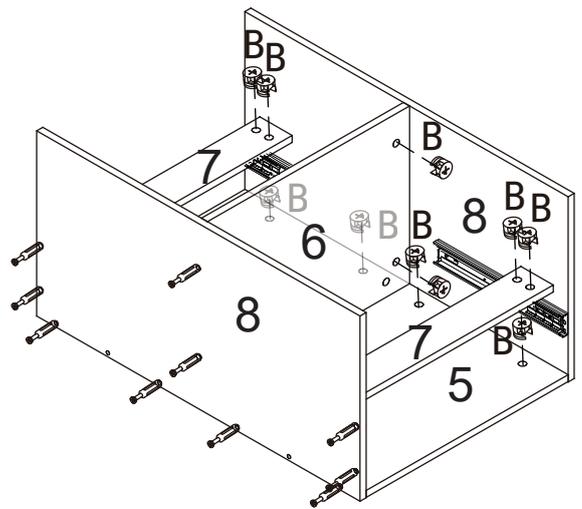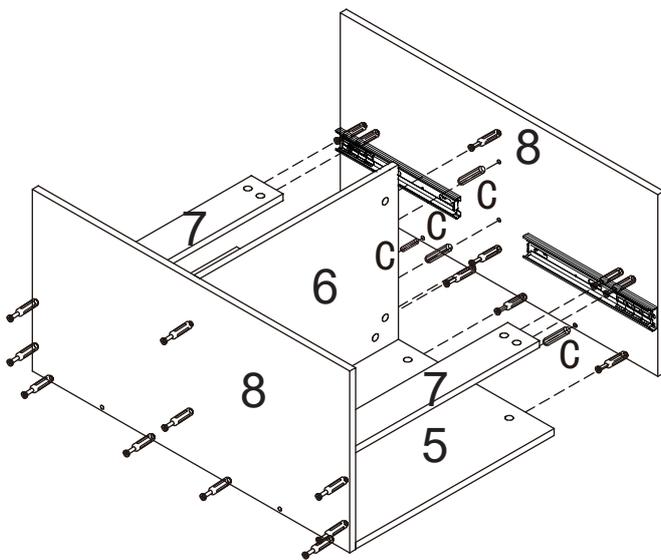

B*10	C*4
	

# 9.

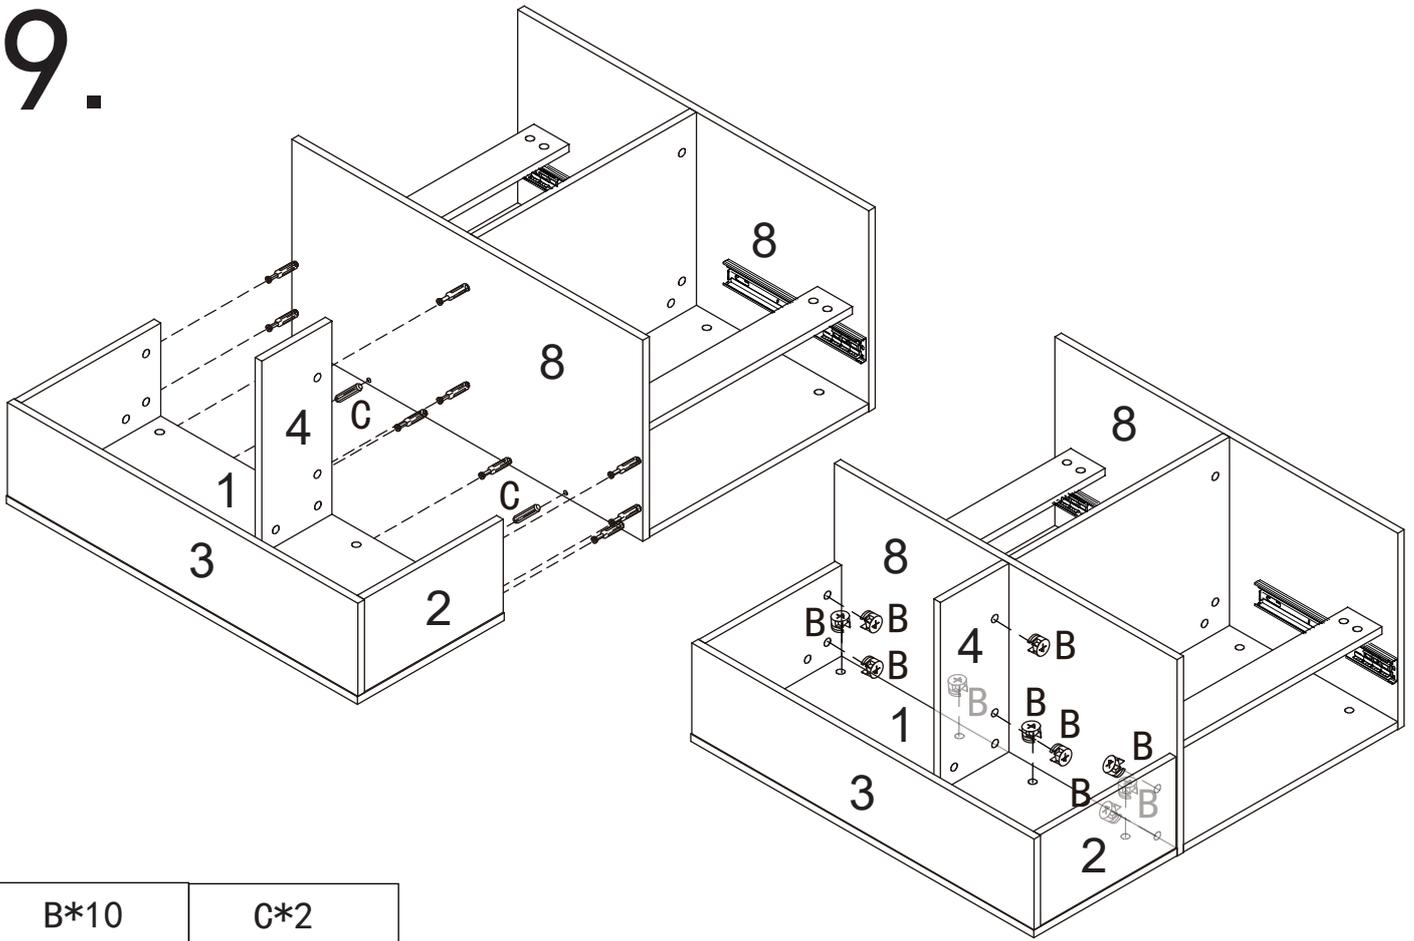

B\*10






C\*2



# 10.

Les trous visibles de la roue excentrique sont clairement partiellement collés avec l'autocollant parfait H

The visible hole of the eccentric wheel is clearly partially pasted with perfect paste H

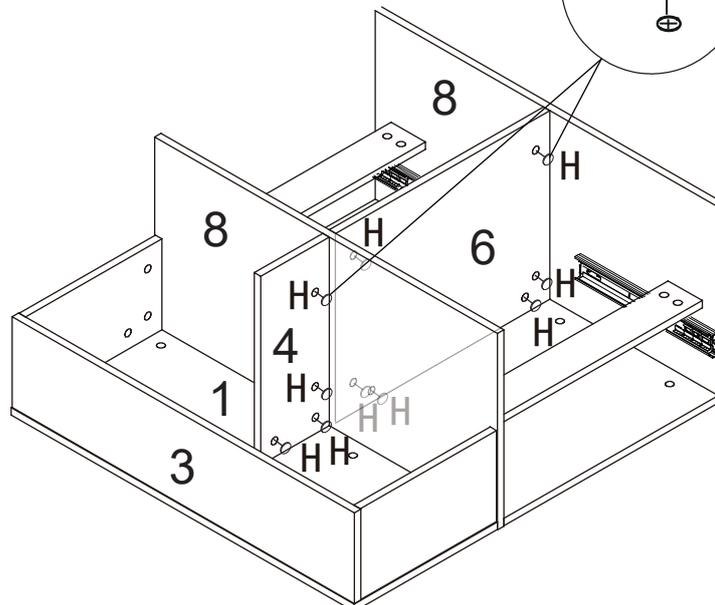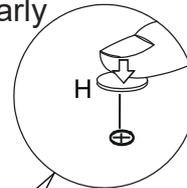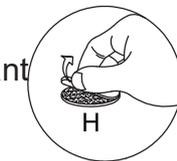


H\*10



# 11.


180°

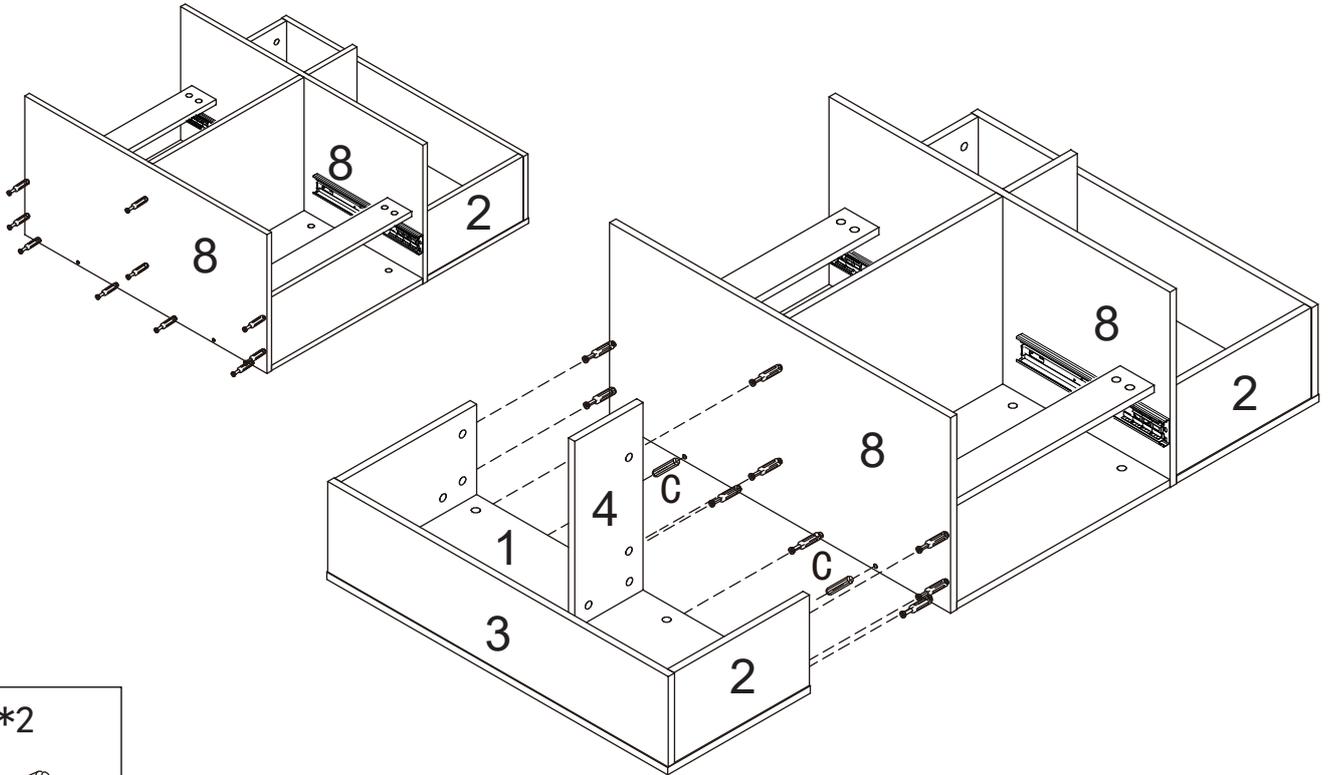

C\*2



# 12.

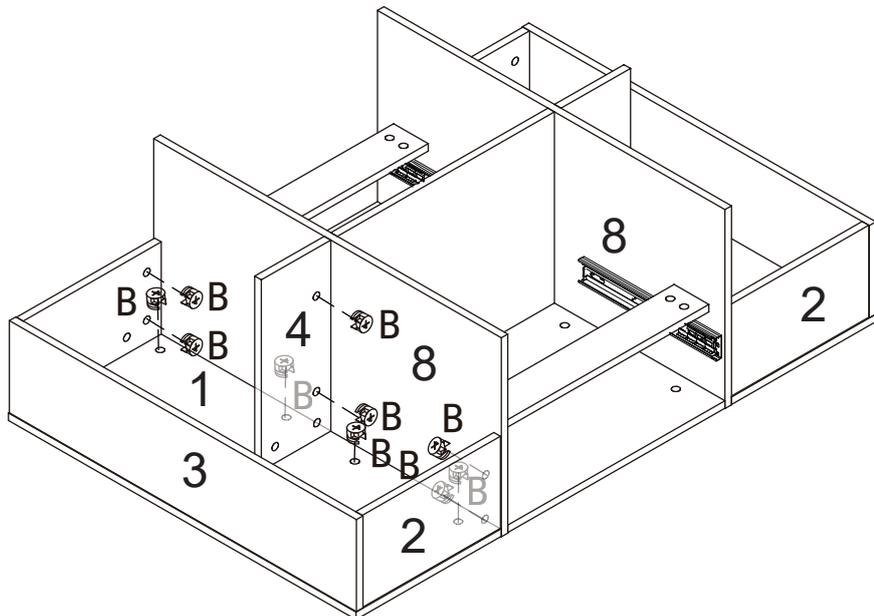



B\*10



# 13.

Les trous visibles de la roue excentrique sont clairement partiellement collés avec l'autocollant parfait H



The visible hole of the eccentric wheel is clearly partially pasted with perfect paste H

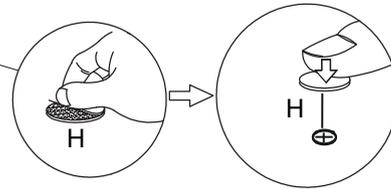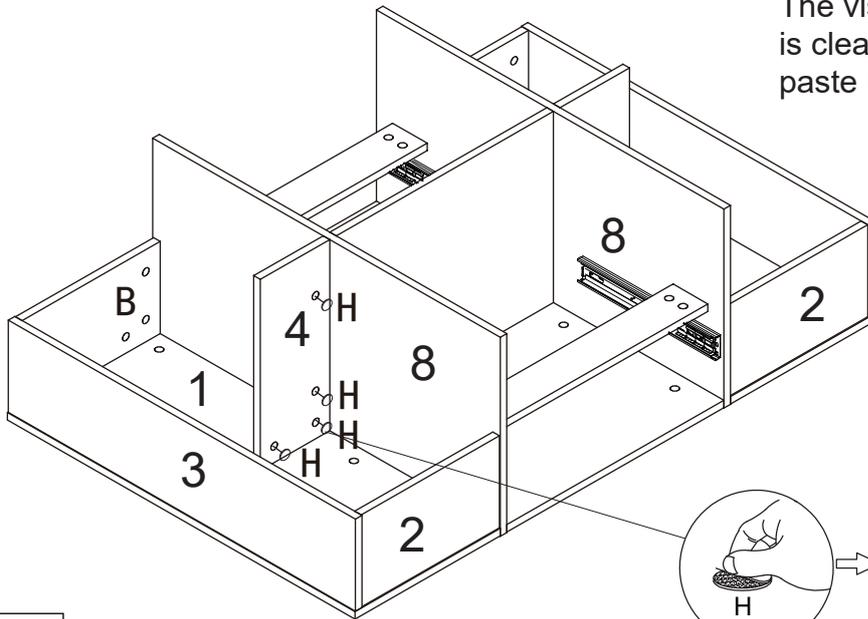


H\*4



# 14.

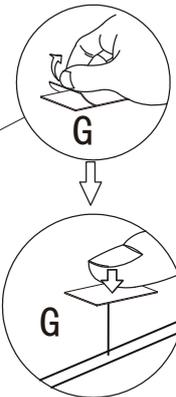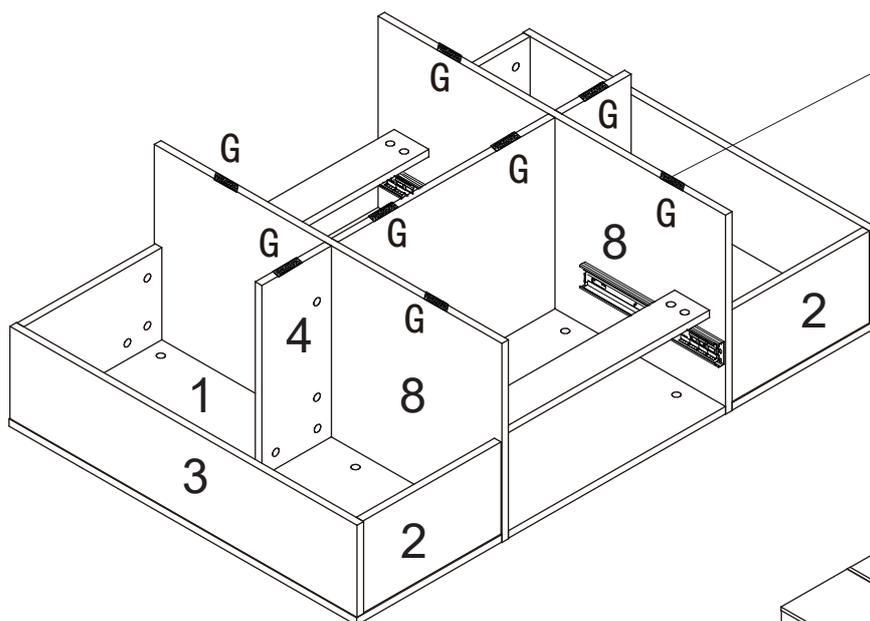


180°

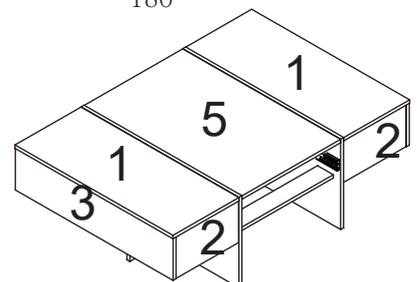

G\*8



# 15. x2

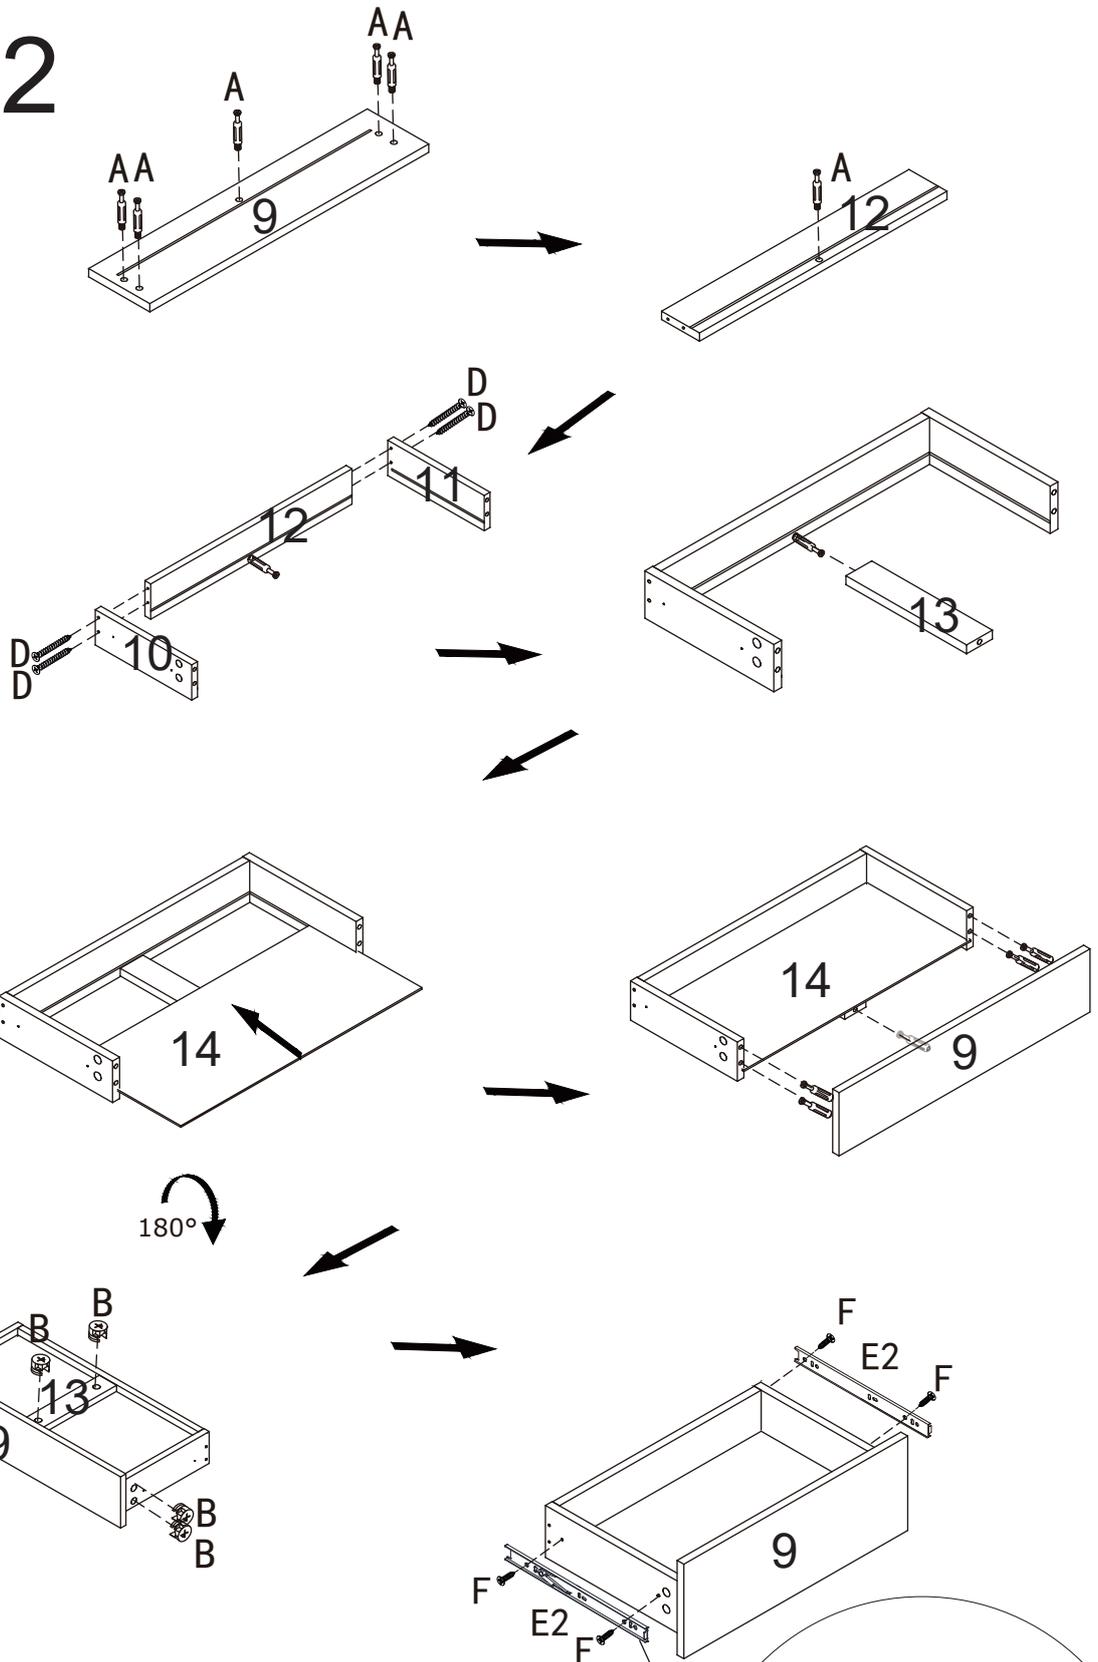


**D\*8**  
  
 Ø 3.5 x 35 mm

**A\*12**  




**B\*12**  


**F\*8**  
  
 Ø 3.5 x 14 mm

**E-E2\*4**  
  
 300 mm

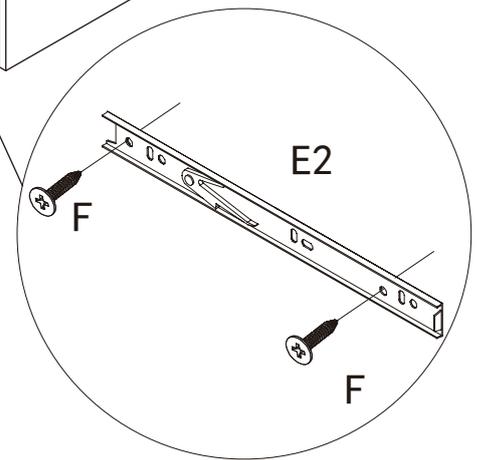

# 16.

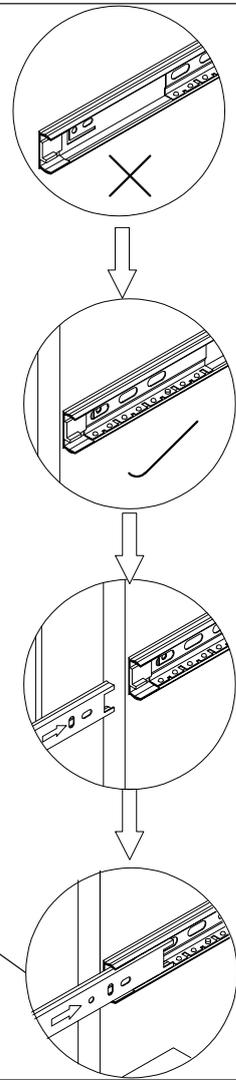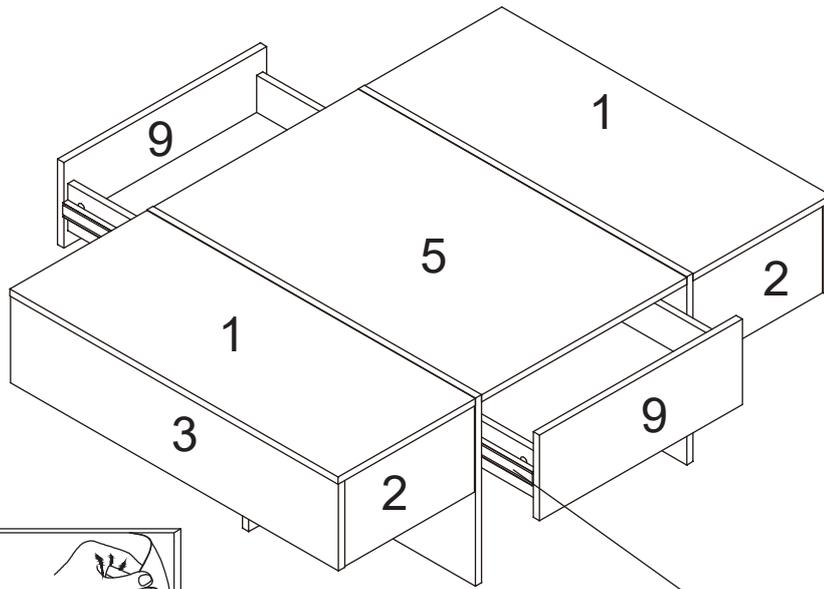

1, 2, 3, 5, 8, 9 plates have  
a protective film, please  
remove them

1, 2, 3, 5, 8, 9 plaques ont  
un film protecteur, veuillez  
les retirer

# 17.

