



Coffee Table

ID0260428WH




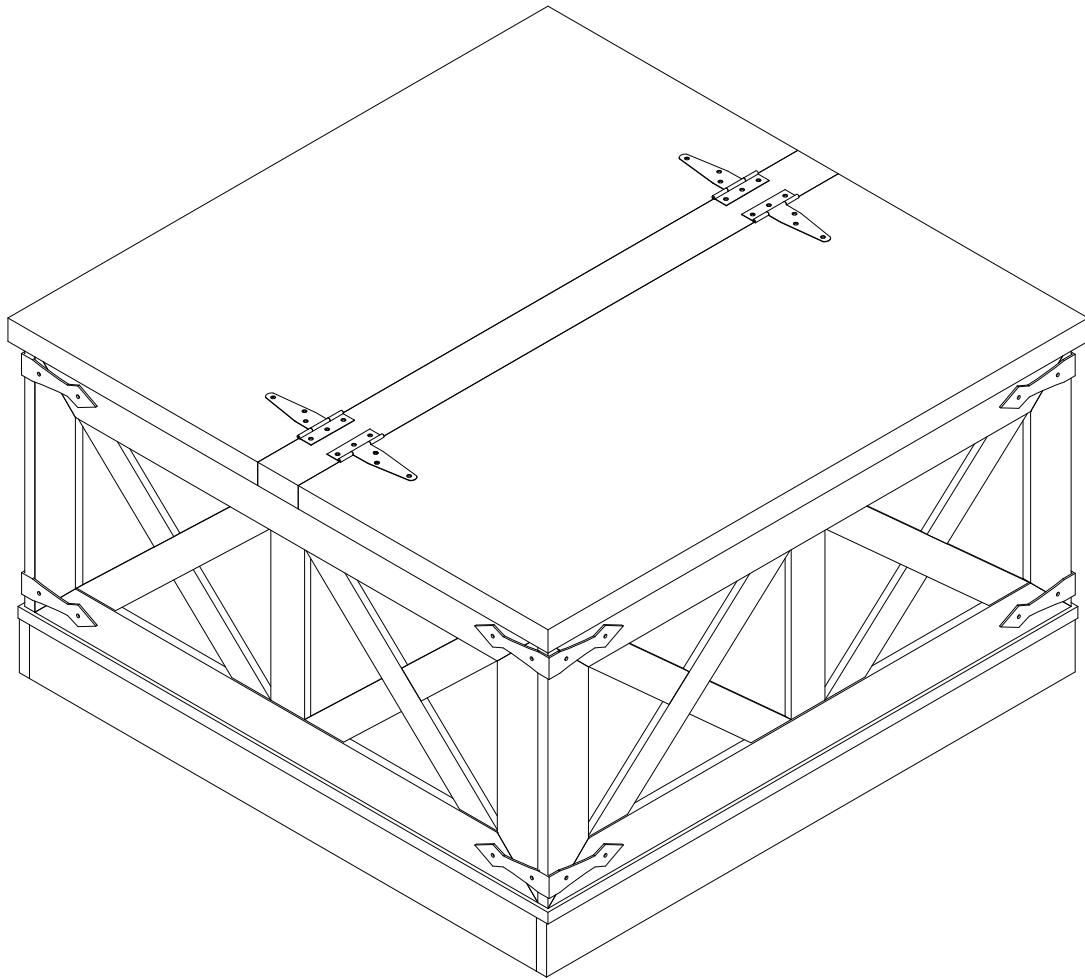


Important – Please read these instructions fully before starting assembly
Customer Service: contactus24service@gmail.com
Phone: (951) 213-4742



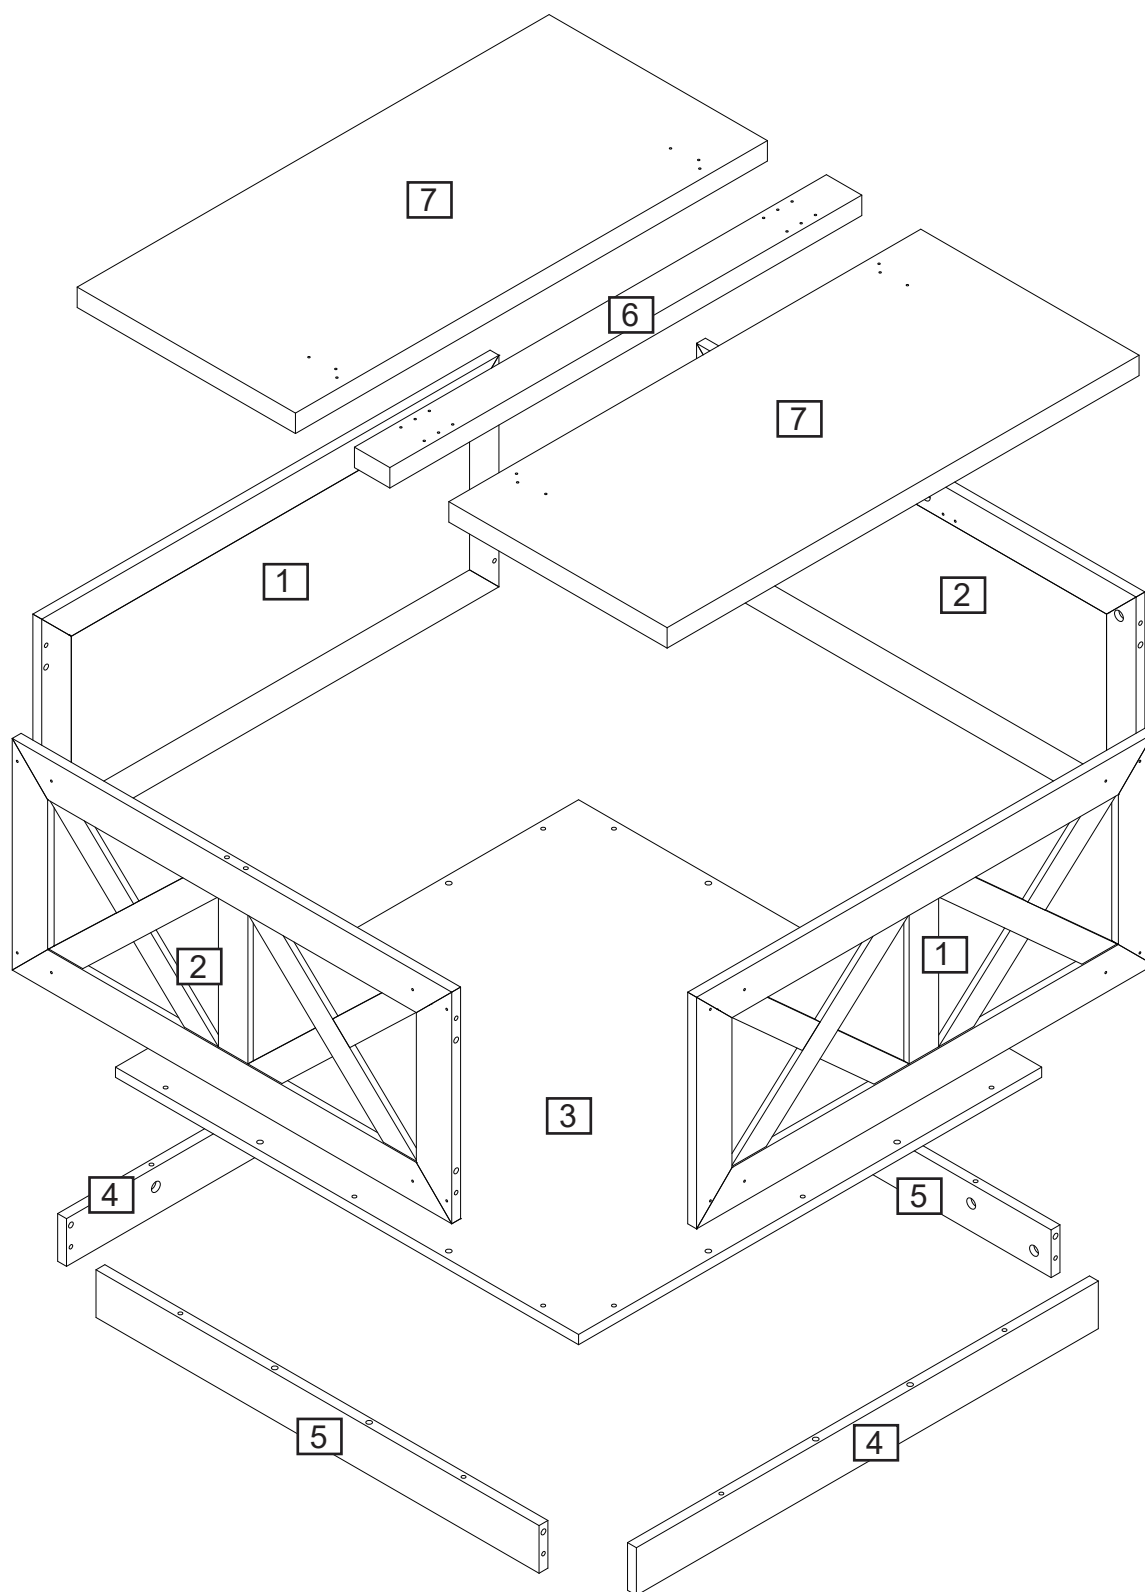


ASSEMBLY INSTRUCTIONS

Part List:

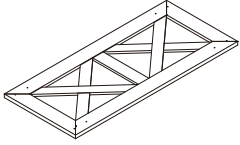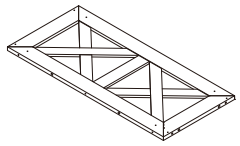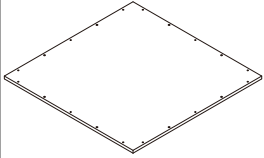






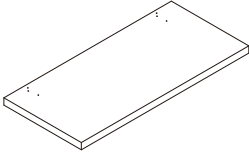



| ITEM | DESCRIPTION | PART | QTY |
|------|----------------------|---|-----|
| 1 | Side board |  | 2 |
| 2 | Side board |  | 2 |
| 3 | Bottom board |  | 1 |
| 4 | Bottom side covering |  | 2 |

Part List:

| ITEM | DESCRIPTION | PART | QTY |
|------|----------------------|---|-----|
| 5 | Bottom side covering |  | 2 |
| 6 | Top rail |  | 1 |
| 7 | Top board |  | 2 |

ASSEMBLY INSTRUCTIONS

Hardware List:

| ITEM | DESCRIPTION | PART | QTY |
|------|-----------------|---|-----|
| A | 7*39mm Cam bolt |  | 24 |
| B | Cam lock |  | 24 |
| C | 8*30mm Dowel |  | 28 |
| D | 3.5*14mm Screw |  | 8 |
| E | 5*40mm Screw |  | 12 |
| F | 4*14mm Screw |  | 56 |
| G | Arm locks |  | 2 |
| H | Hinge |  | 4 |
| I | Foot nail |  | 8 |
| J | Matal plant |  | 8 |
| K | Pad |  | 1 |


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

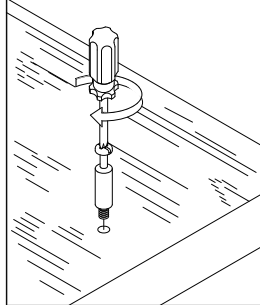

Step 2

Push the male camlock into the entry hole.

2

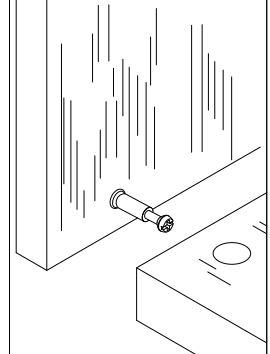


Step 3

Insert the female camlock as shown in the instructions.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

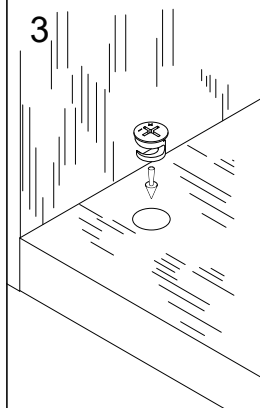


Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.



4

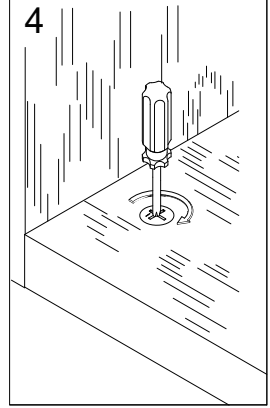


1

CAM-LOCK

Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

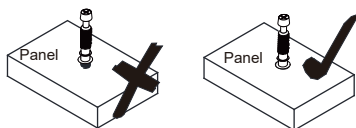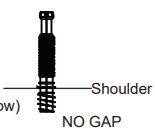



A 
A x 8

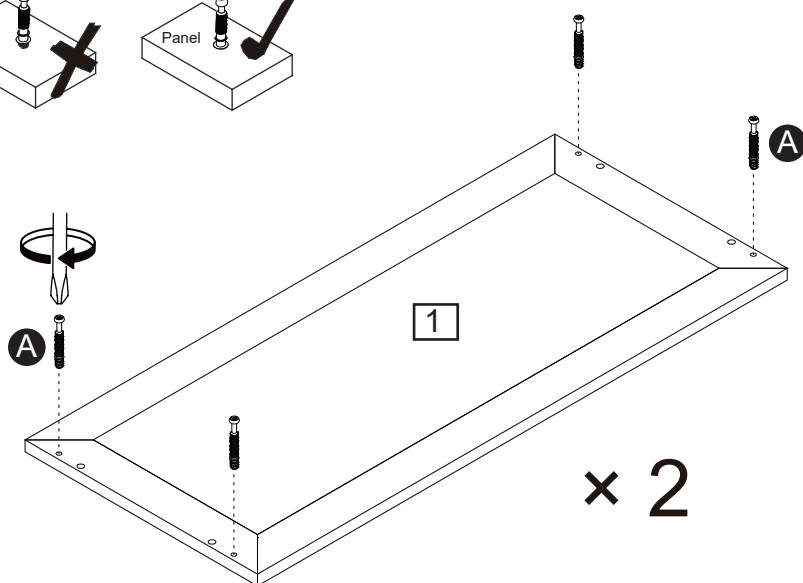




2

B 
B x 8


C 
C x 8

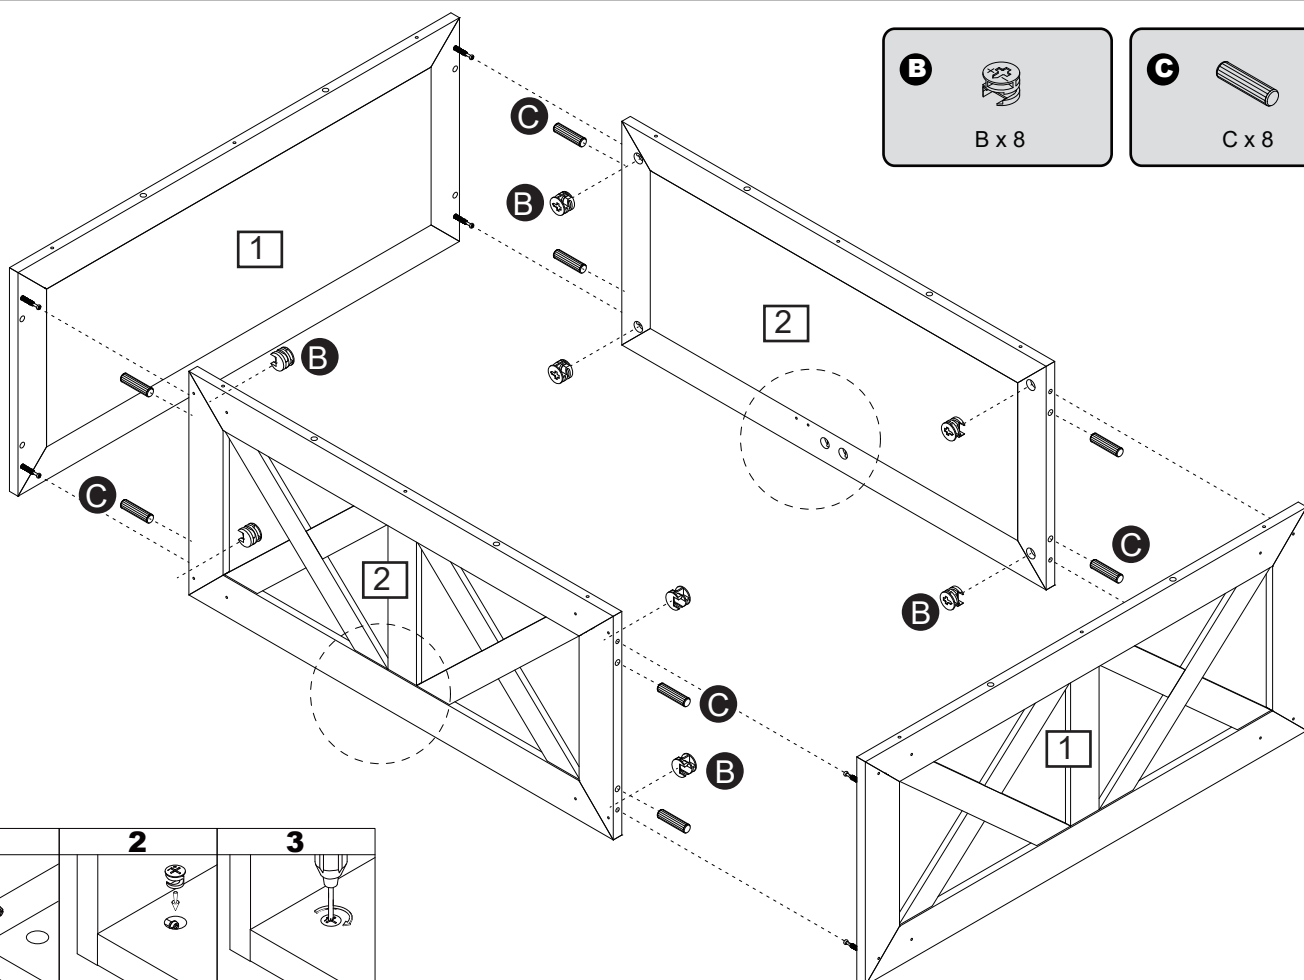

3

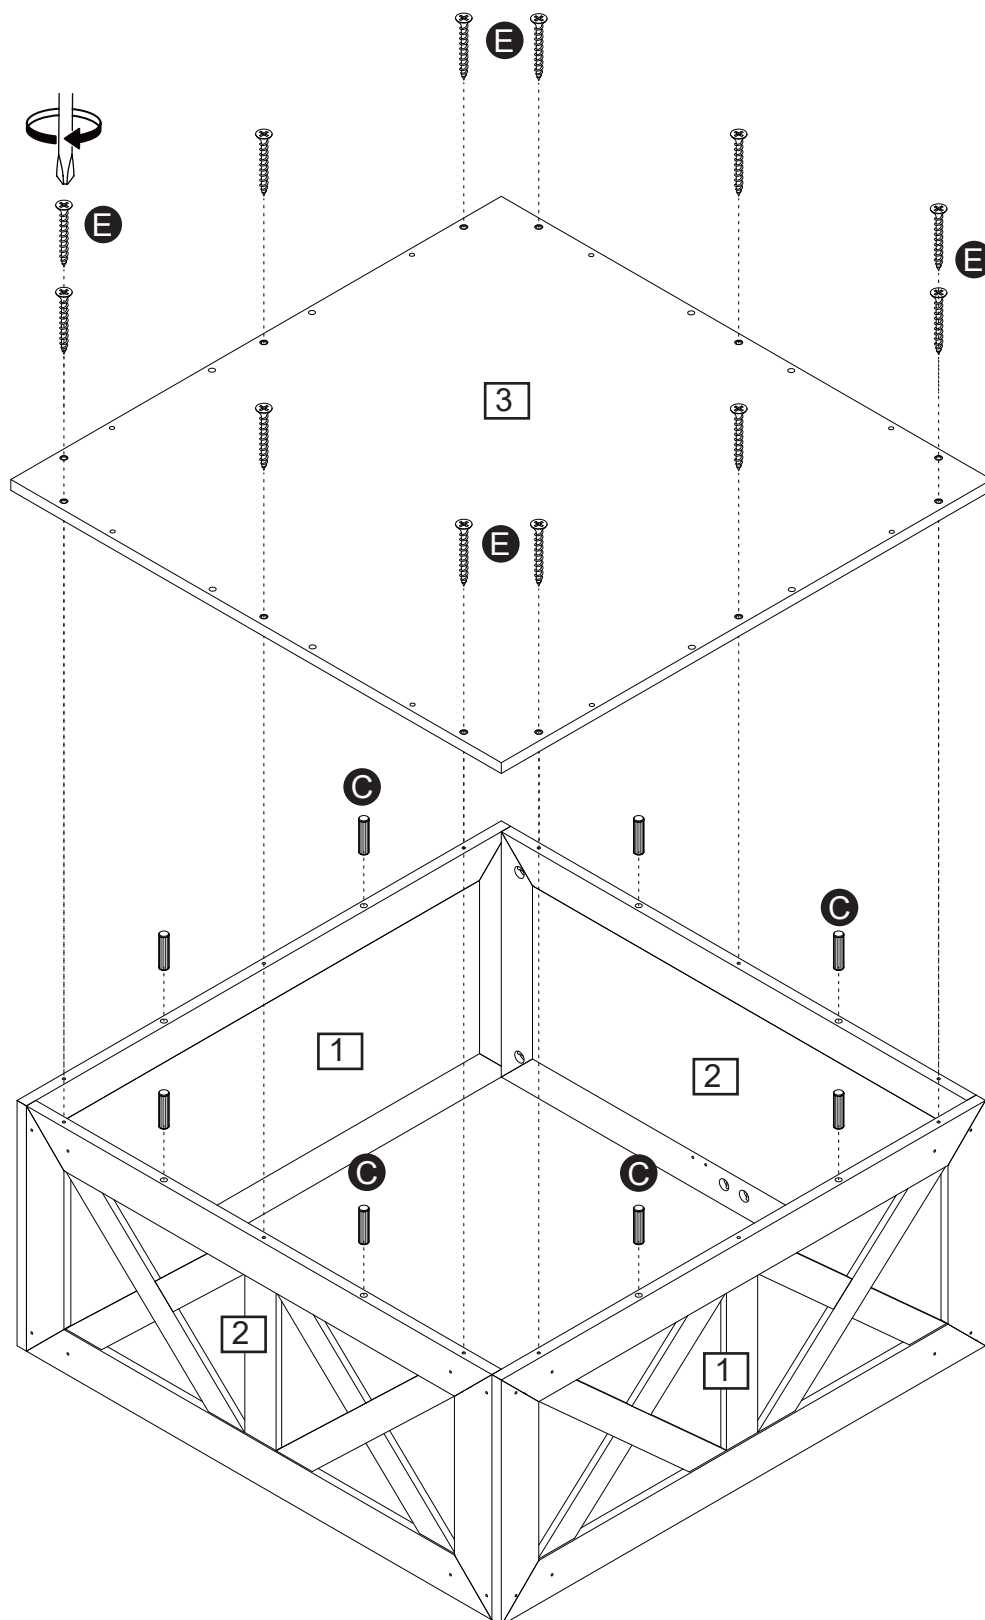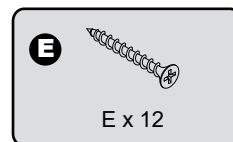
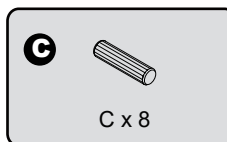


4




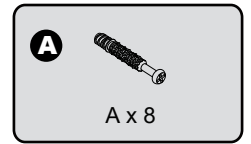


CAM-LOCK

Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

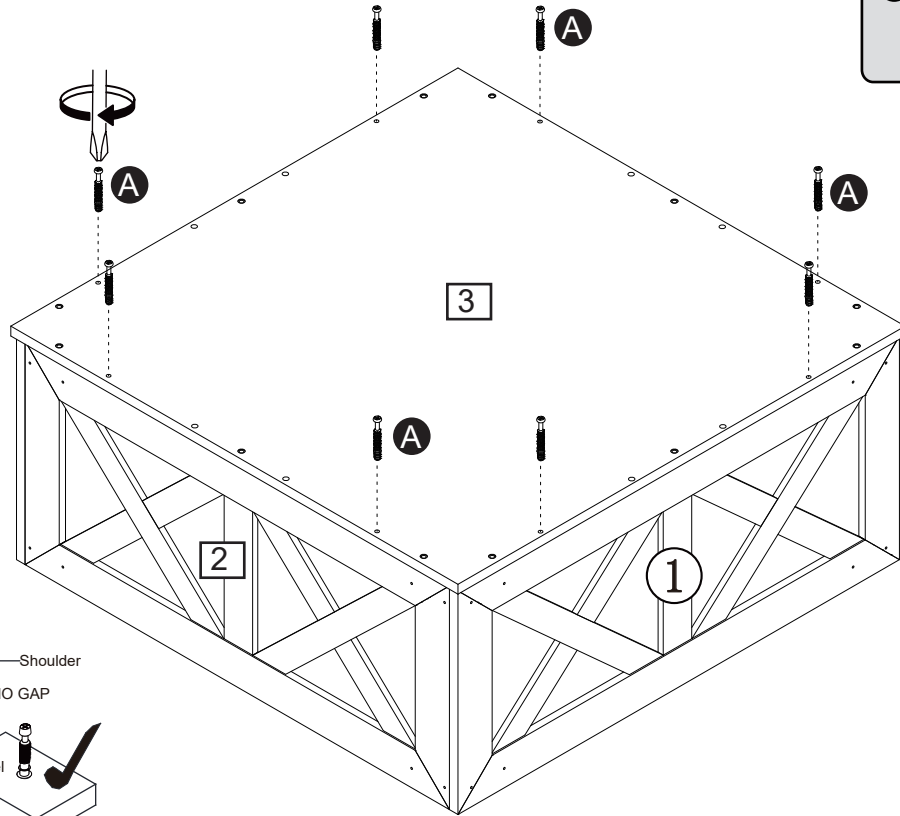
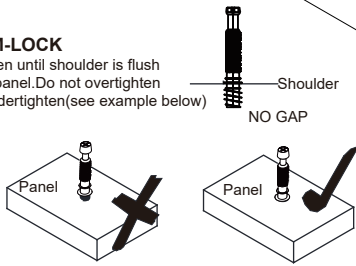


5

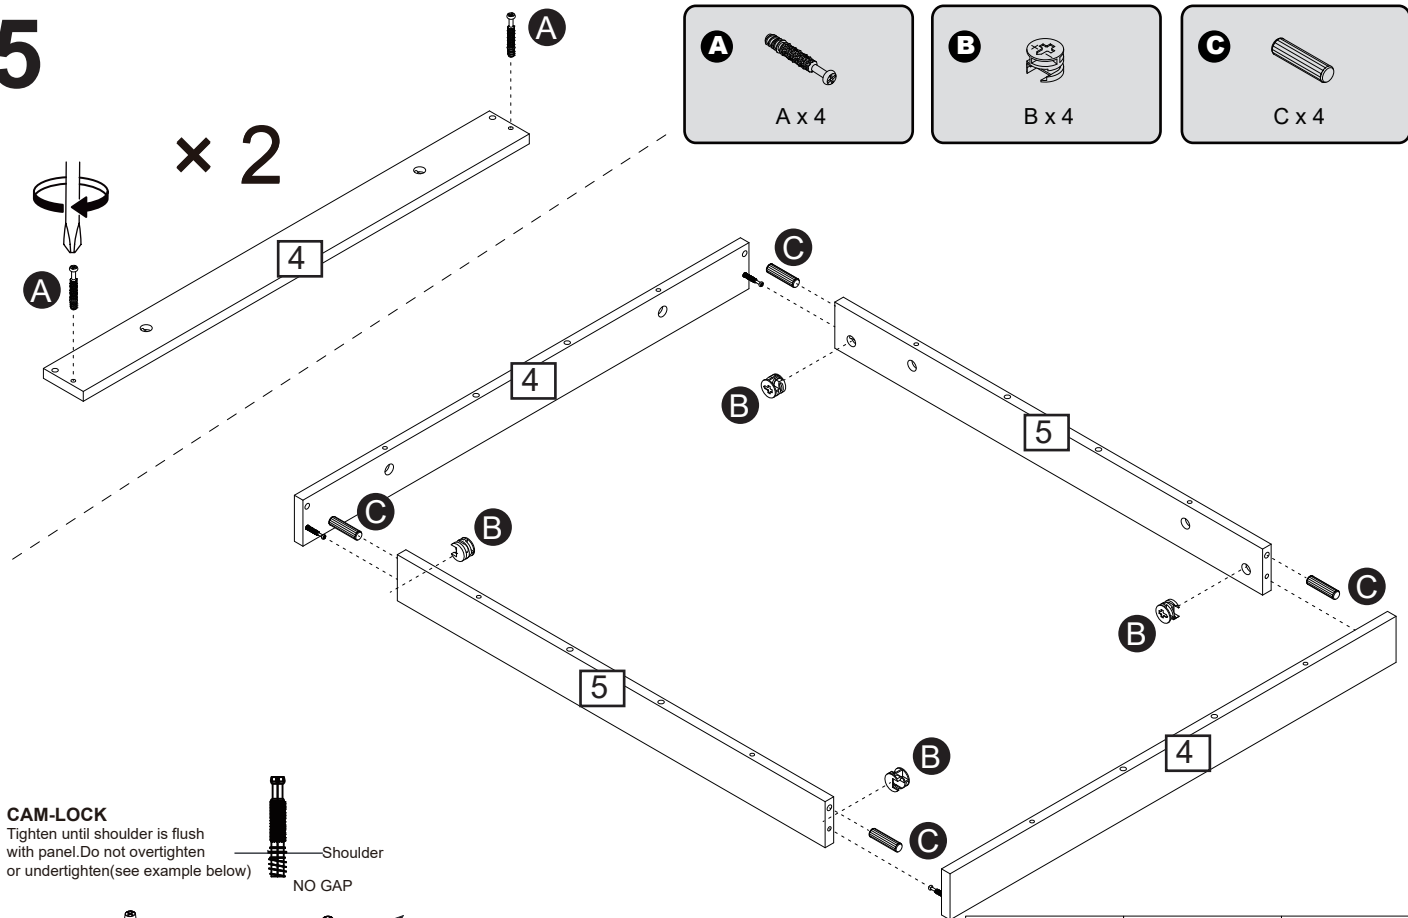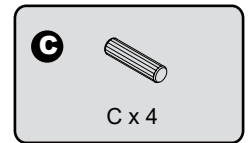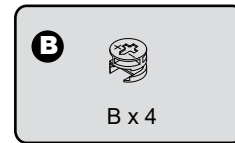
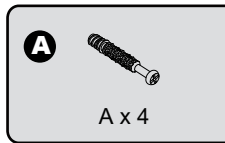


CAM-LOCK



Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

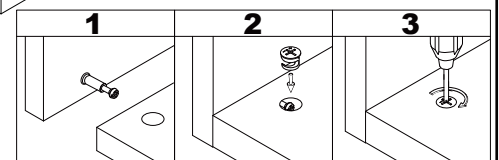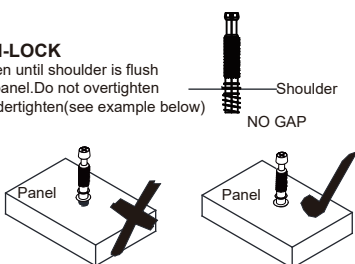



6

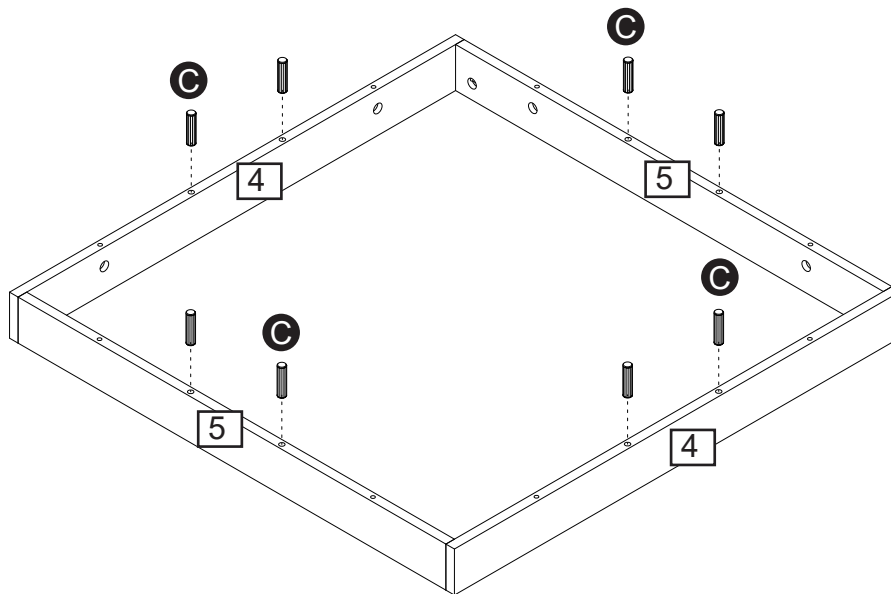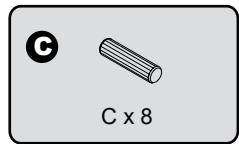






7

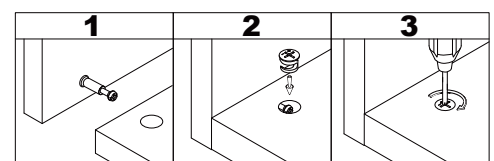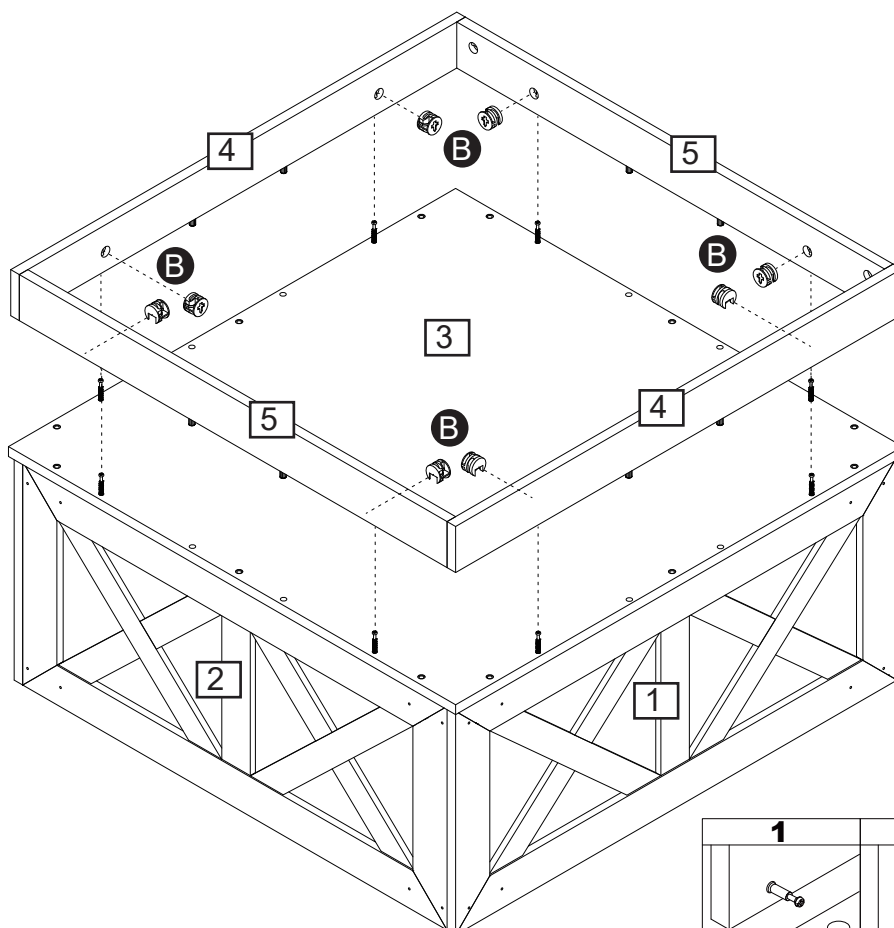




8

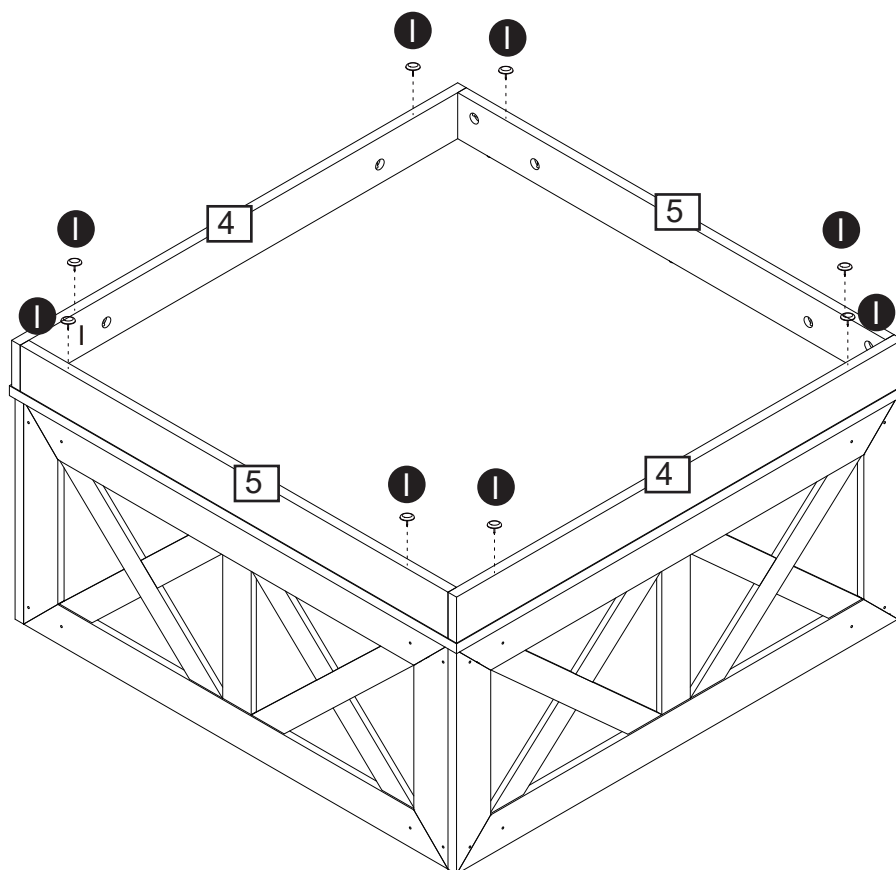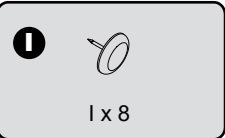




9

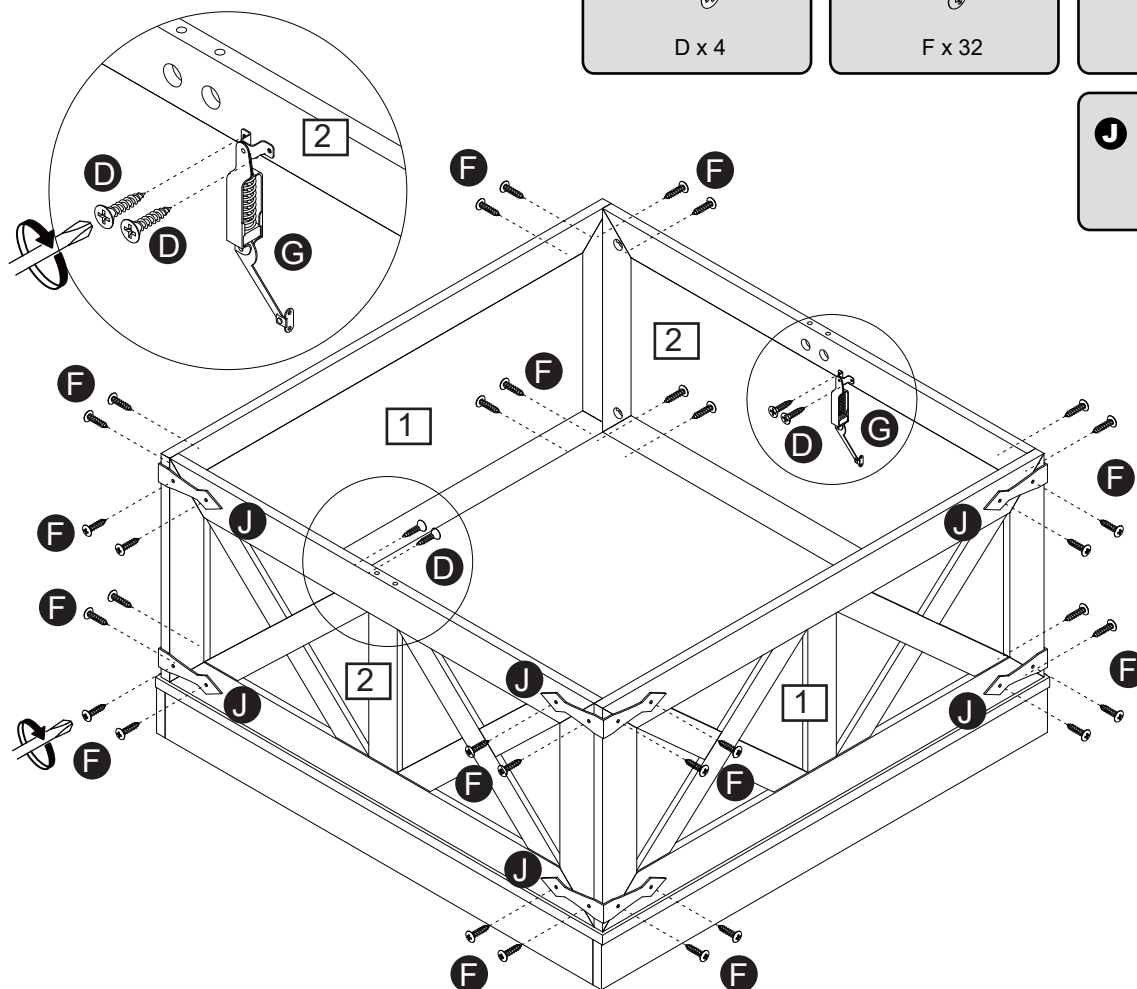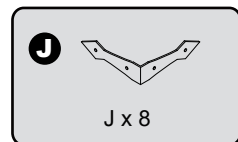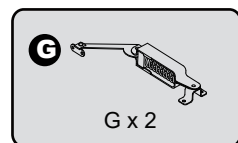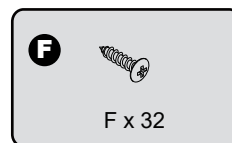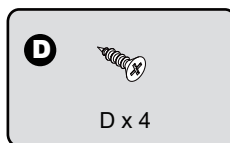




10

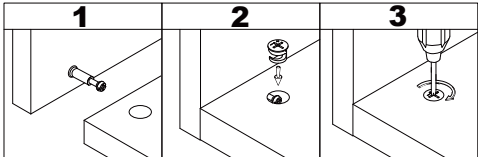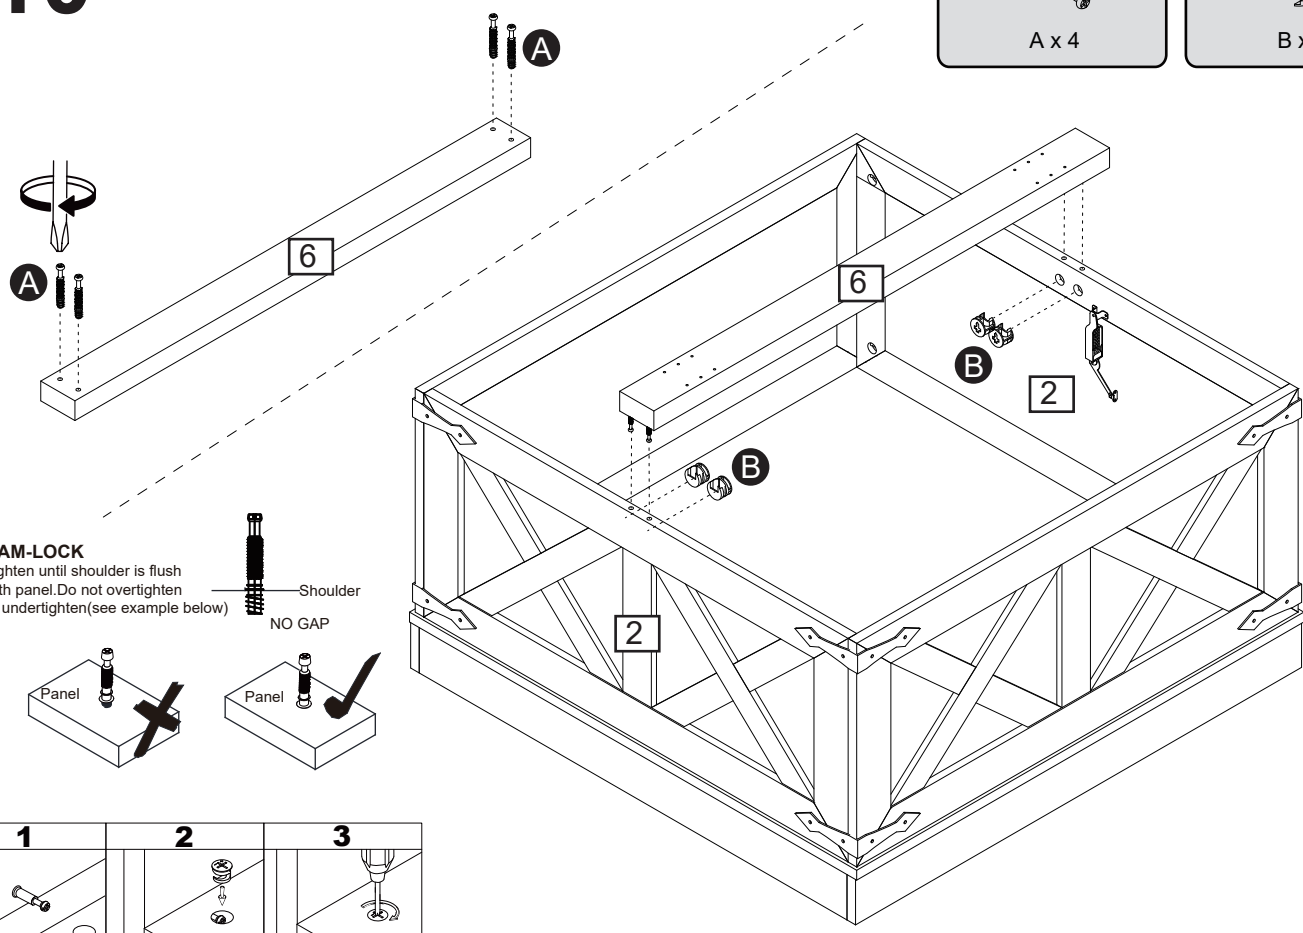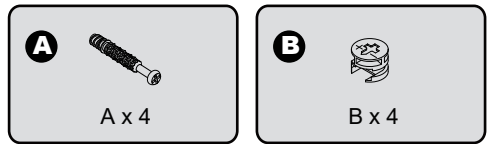

11

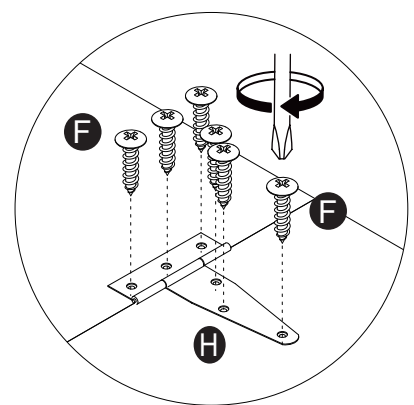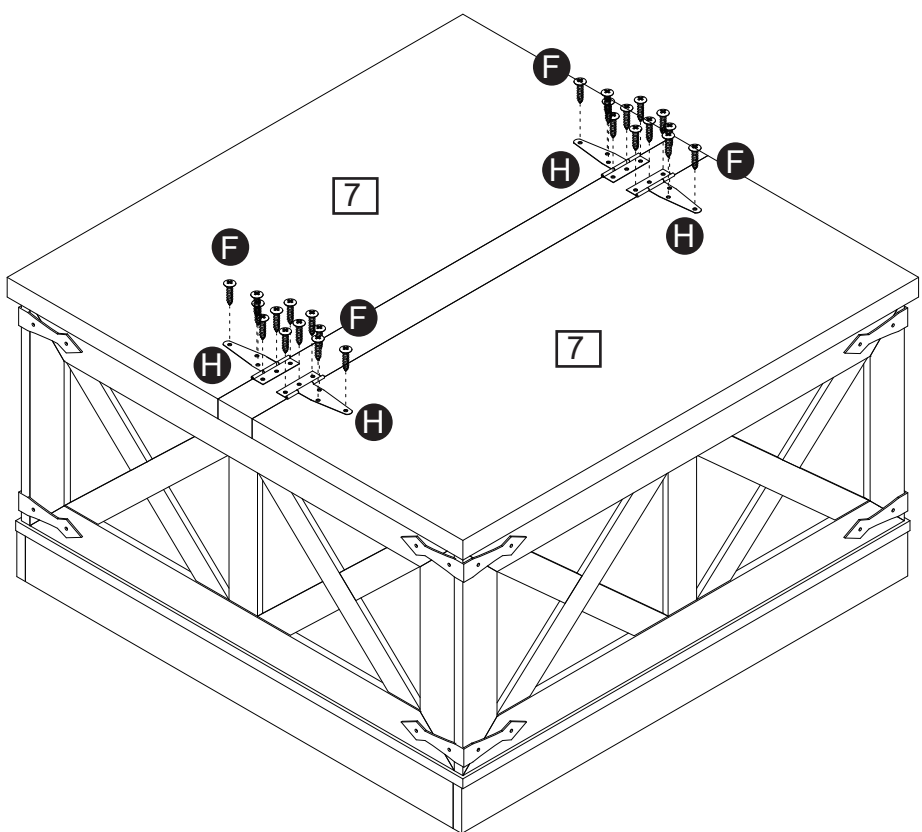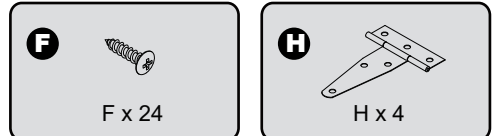

12

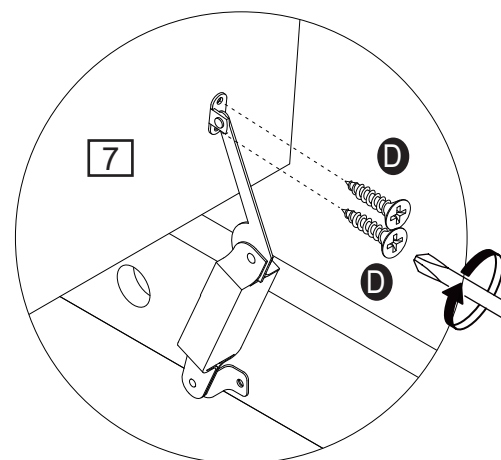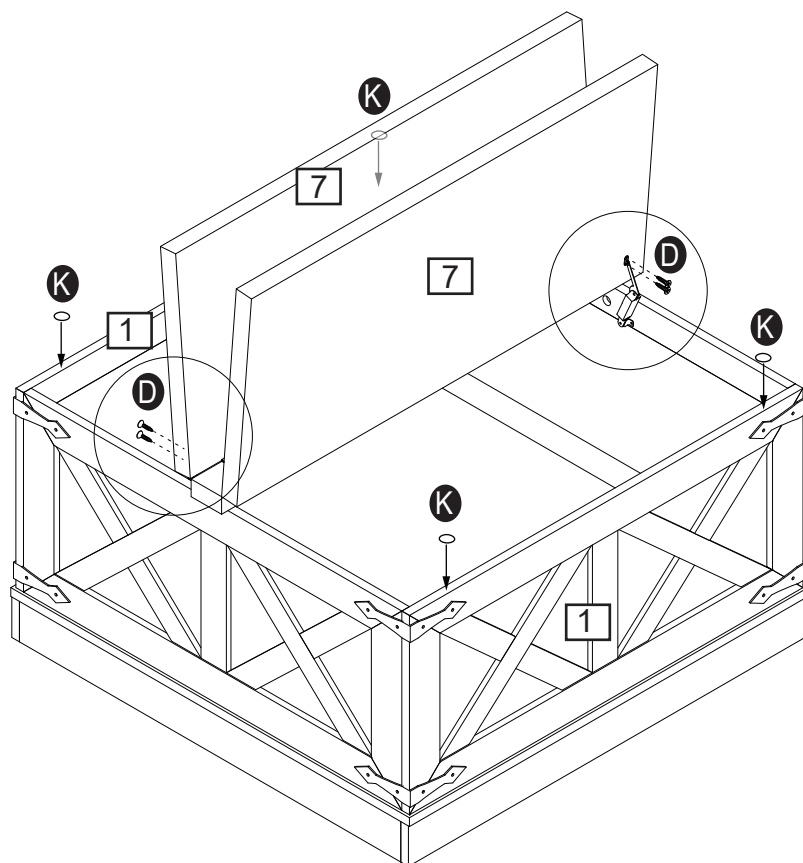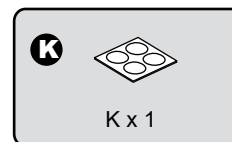

13

