


ASSEMBLY INSTRUCTION


DINING CHAIR

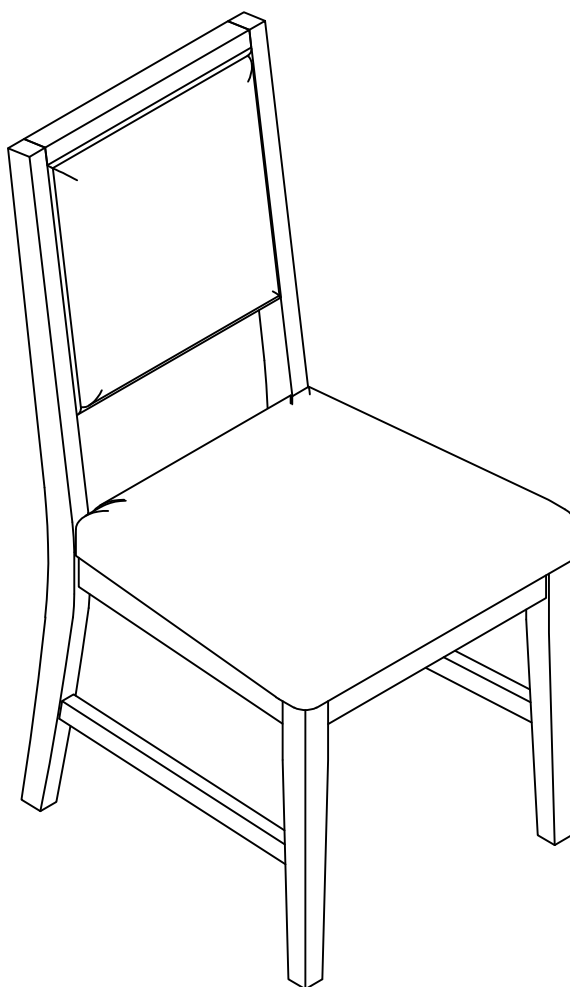







WF324181

IMPORTANT NOTE :




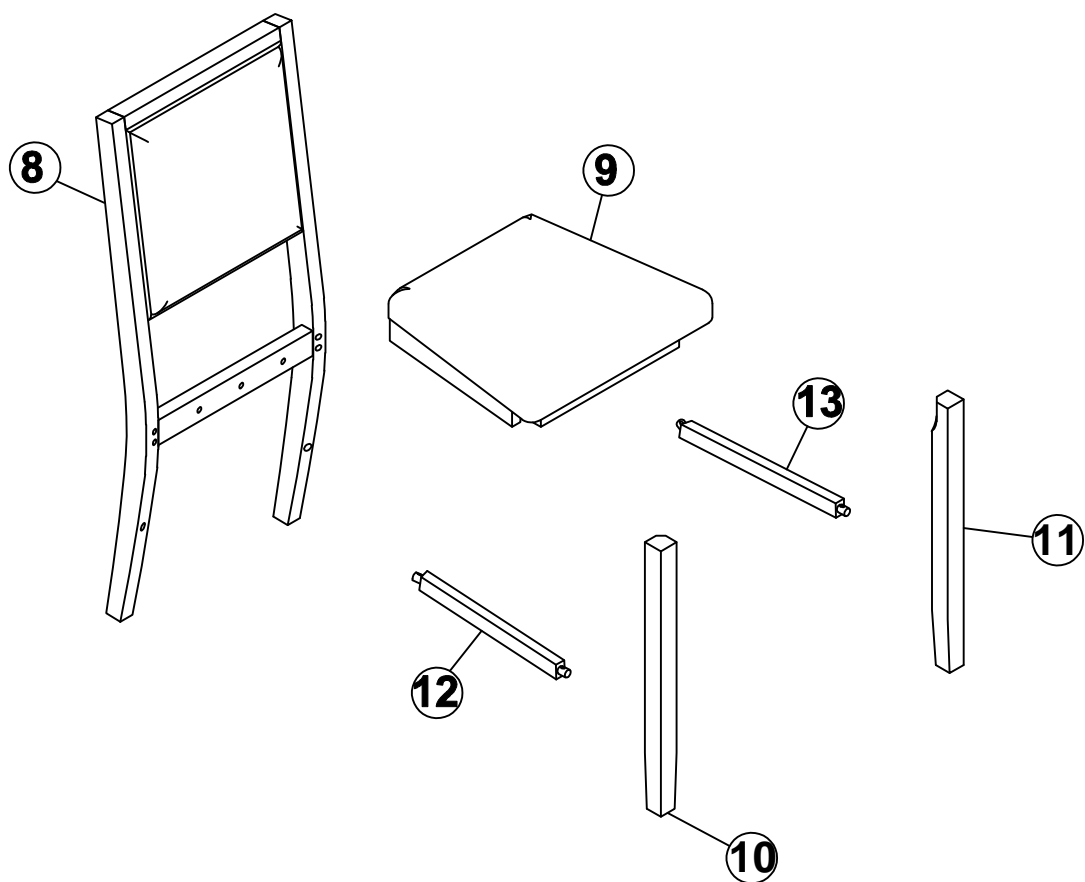

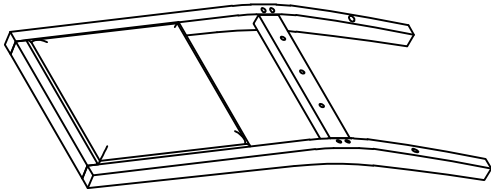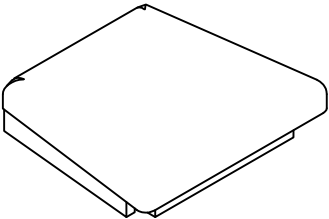


- ① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE YOU BEGIN , KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE CHAIR IS FULLY SET-UP




Part List For One Chair







| | |
|--|---|
| 8  | 10  |
| | LEFT CHAIR LEG (1pc) |
| 9  | 11  |
| | RIGHT CHAIR LEG (1pc) |
| | 12  |
| SEAT FRAME (1pc) | 13  |
| | RIGHT STRETCHER (1pc) |

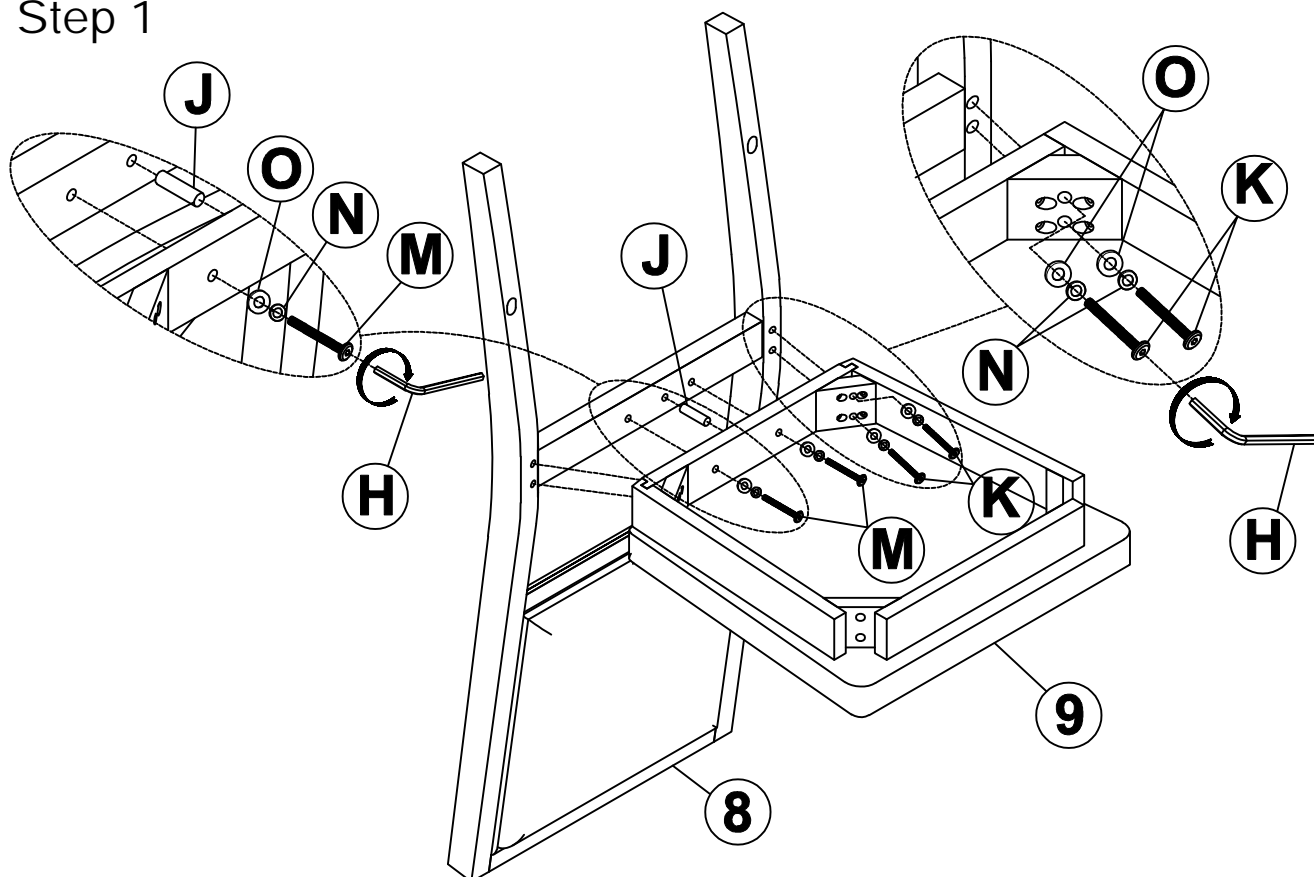Hardware List For One Chair


| | | | |
|----------|--|----------|--|
| J |  Ø10 x 30mm WOODEN PEGS (1pc) | N |  Ø1/4" x 13mm SPRING WASHER (10pcs) |
| K |  Ø1/4" x 75mm BOLT (4pcs) | O |  Ø1/4" x 19mm FLAT WASHER (10pcs) |
| L |  Ø1/4" x 55mm BOLT (4pcs) | P |  Ø4 x 38mm SCREW (4pcs) |
| M |  Ø1/4" x 35mm BOLT (2pcs) | H |  4x58mm ALLENKEY (1pc) |






Step 1




| | | | | | |
|----------|--|------|----------|--|------|
| J | Ø10x30  | 1PC | N | Ø1/4"x13  | 6PCS |
| K | Ø1/4"x75  | 4PCS | O | Ø1/4"x19  | 6PCS |
| M | Ø1/4"x35  | 2PCS | H | 4x58  | 1PC |

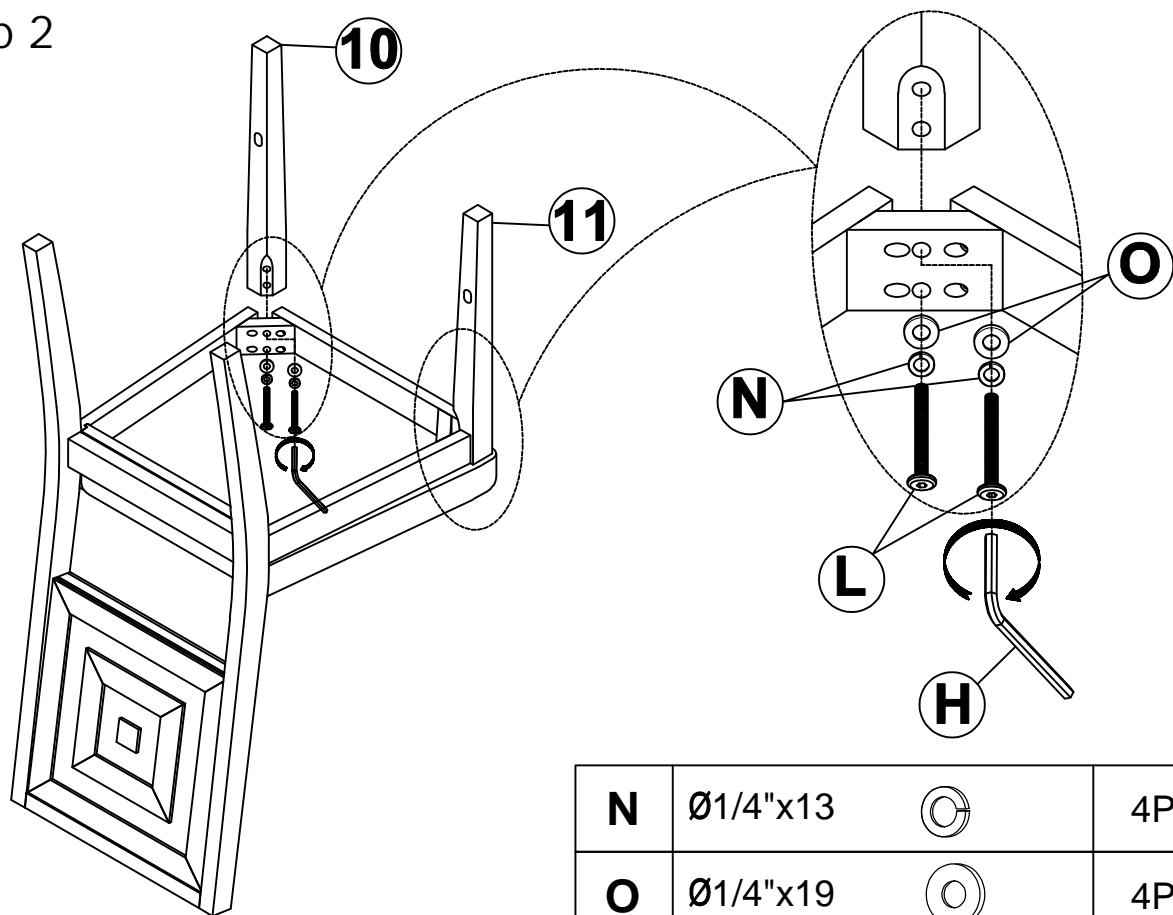
Step 2



| | | | | | | | |
|---|--------|---|------|----------|----------|---|------|
|  | | | | N | Ø1/4"x13 |  | 4PCS |
| | | | | O | Ø1/4"x19 |  | 4PCS |
| L | 1/4x55 |  | 4PCS | H | 4x58 |  | 1PC |

Step 3

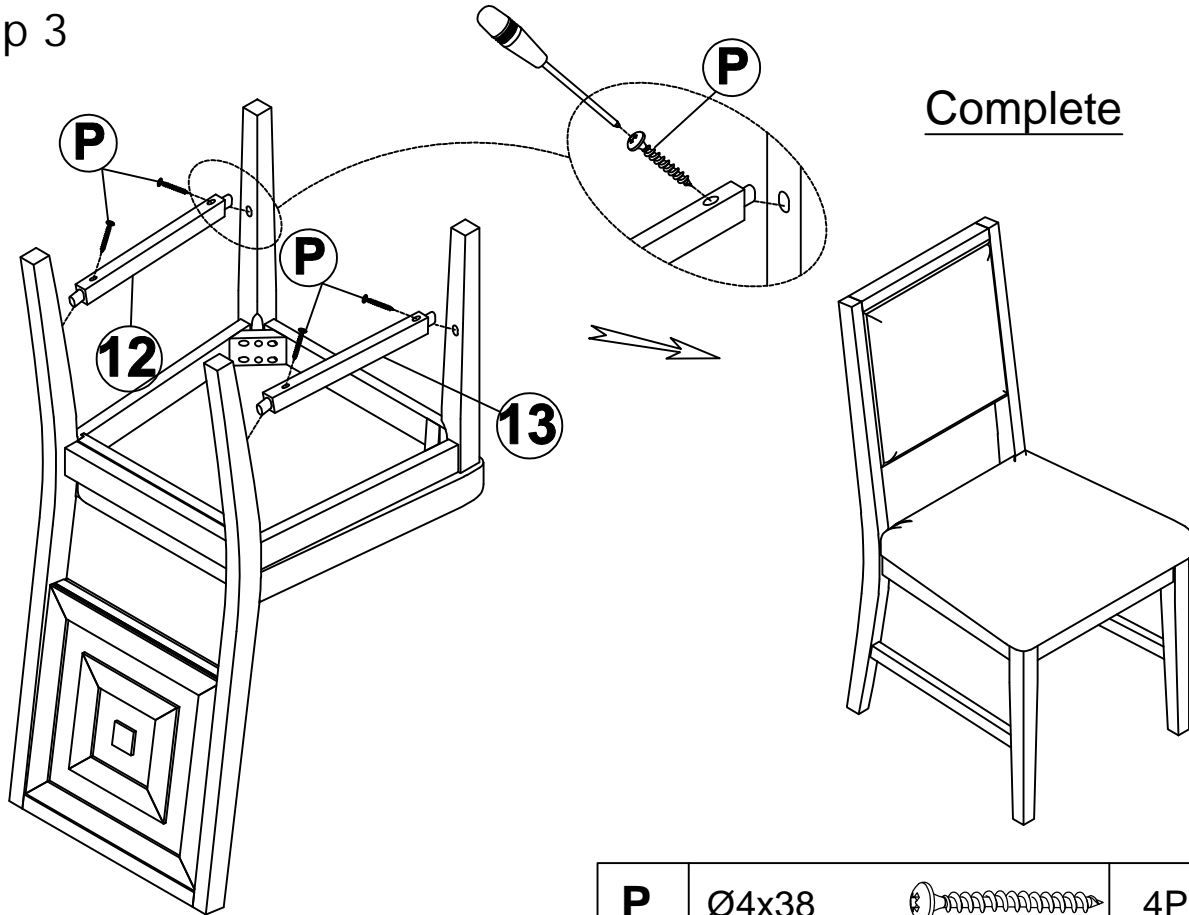

| | | | |
|----------|-------|---|------|
| P | Ø4x38 |  | 4PCS |
|----------|-------|---|------|