


Square 4 Doors Glass Cabinet

Item : YL-006

Assembly Instruction






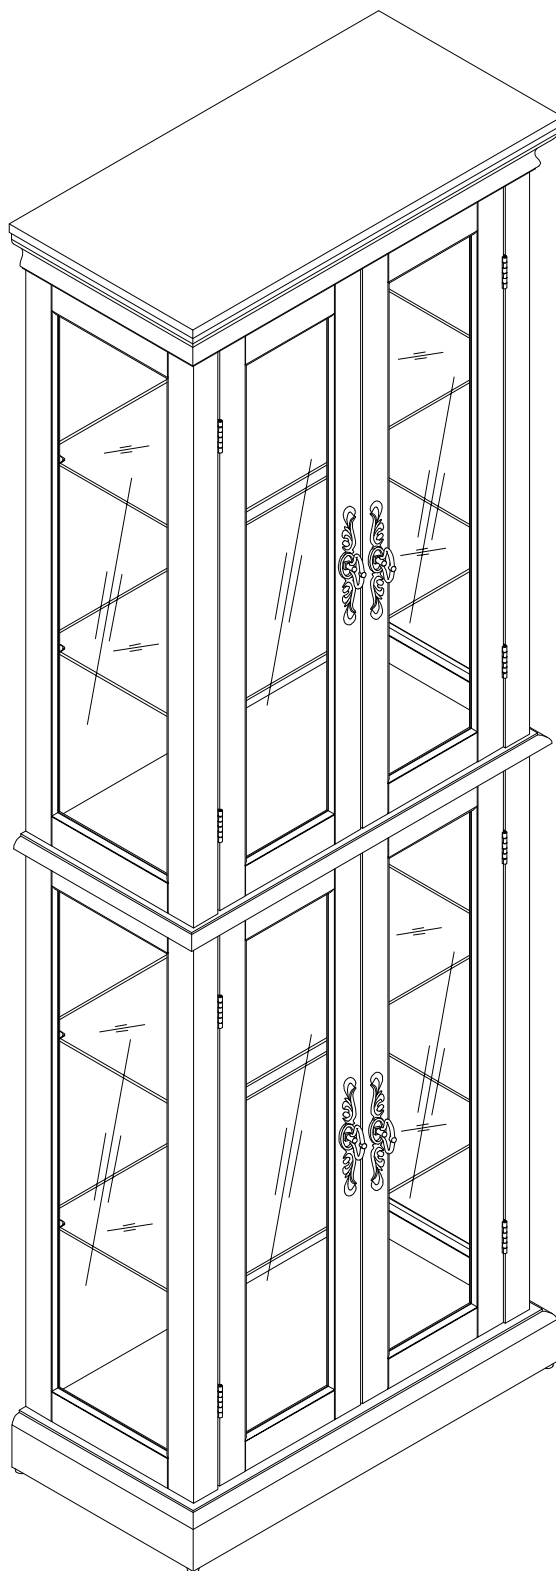


MADE IN CHINA







ASSEMBLY INSTRUCTION

Page 2 of 11

Part List:

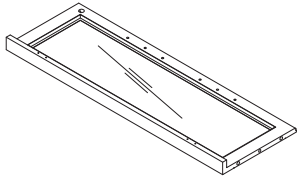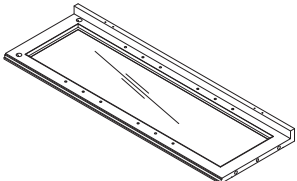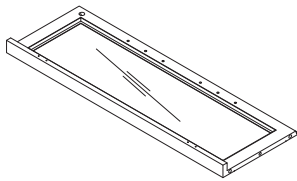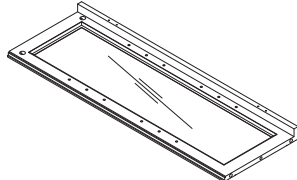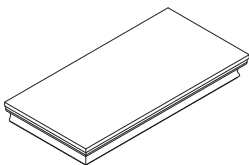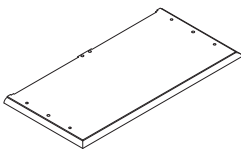ITEM	DESCRIPTION	PART	QTY
1	Upper left side		1
2	Upper right side		1
3	Lower left side		1
4	Lower right side		1
5	Top panel		1
6	Middle panel		1

Part List:

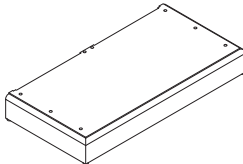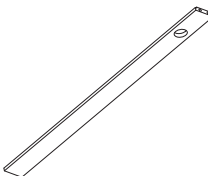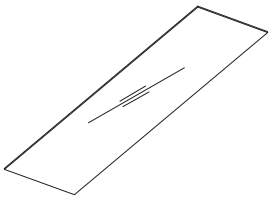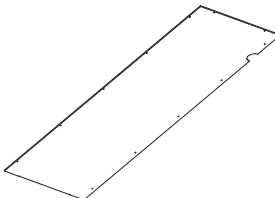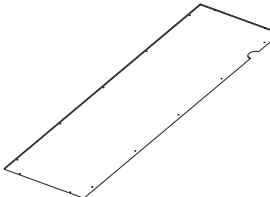
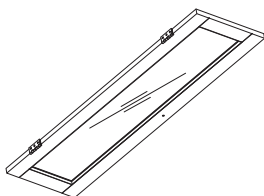
ITEM	DESCRIPTION	PART	QTY
7	Base		1
8	Back post		2
9	Back mirror		4
10	Upper back panel		2
11	Lower back panel		2
12	Left door		2

MADE IN CHINA



ASSEMBLY INSTRUCTION

Page 3 of 11




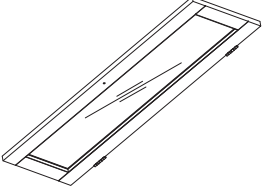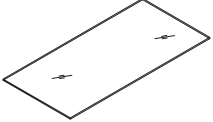





Part List:

ITEM	DESCRIPTION	PART	QTY
13	Right door		2
14	Glass shelf		4









Part List:

ITEM	DESCRIPTION	PART	QTY
15	Lamp unit		1
16	Lamp Bulb	 120V 4W Type T Bulb	1

Hardware List:

ITEM	DESCRIPTION	PART	QTY
A	Camlock bolt		9
B	Camlock		9
C	Wooden dowel	 Φ8*30mm	9
D	Bolt	 Φ1/4"*1 1/8"	9
E	Allen wrench		1
F	Knob		4
G	Machine screw	 Φ5/32*5/8"	4
H	Short wood screw	 Φ3*15mm	32
I	Magnet		2

Hardware List:


ITEM	DESCRIPTION	PART	QTY
J	Handle		4
K	Back screw	 Φ3*15mm	54
L	Shelf support		17
M	Safety wall strap		1
N	Plastic anchor		1
O	Mounting screw	 Φ4*38mm	1
P	Washer		1
Q	Wooden dowel	 Φ8*50mm	4

Tip: It is recommended to keep all hardware in a box to avoid loss during installation.

MADE IN CHINA

- * Required screwdriver & mallet, not included.
- * Before discarding packing materials, please check to make sure that all parts and hardware is present.
- * Two people needed for assembly.
- * Please follow the instructions closely; do not over tighten screws or bolts unless instructed.
- * Caution: If using a power drill or power screwdriver for screwing, please be aware to slow down and stop when screw is tight. Failure to do so may result in stripping the screw.

Guideline For Assembling of Cam Lock(A & B)

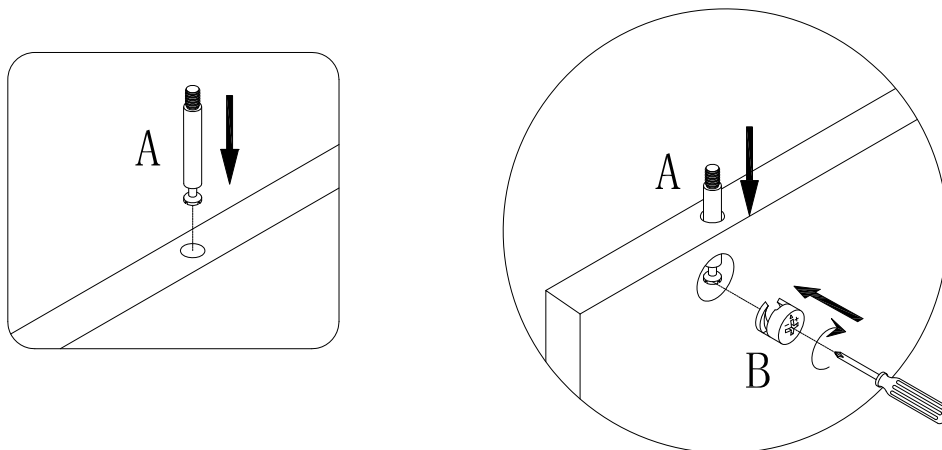

Screw camlock bolt (A) to wood part.



Do not assemble camlock (B) unless instructed.


To assemble camlock (B), ensure long side of the + is facing the bolt (A) before inserting into hole.

ASSEMBLY INSTRUCTION

Page 5 of 11

STEP 1

H:		6PCS
I:		2PCS

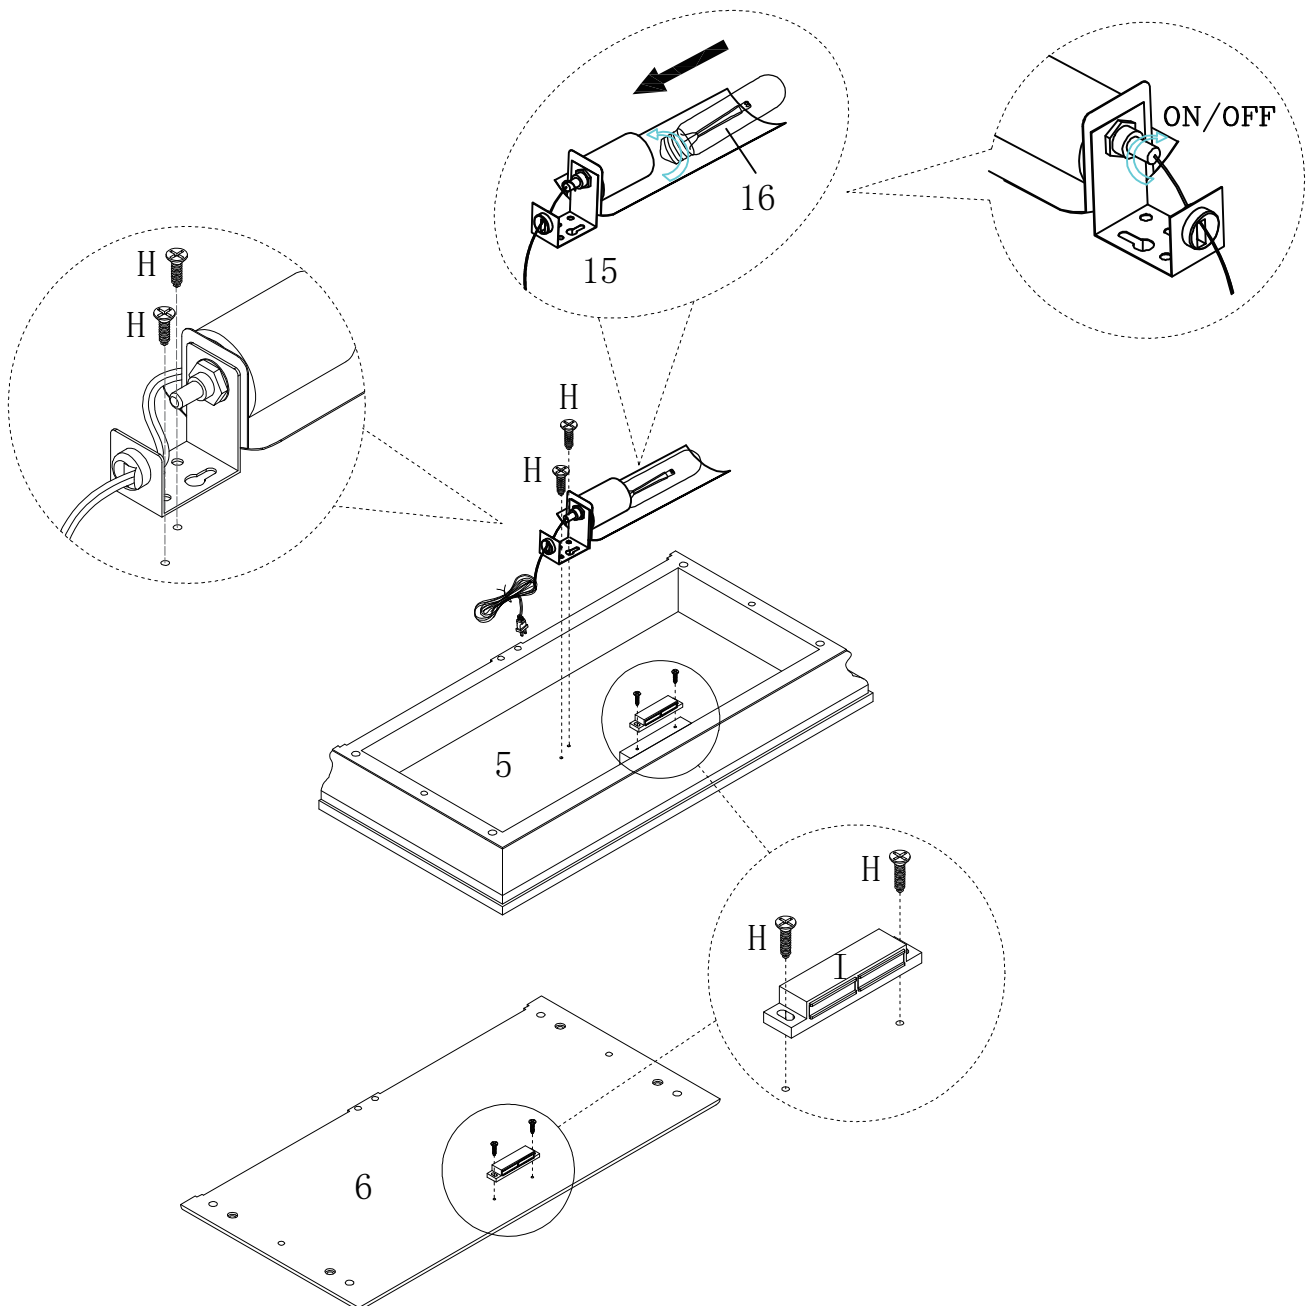


MADE IN CHINA

ASSEMBLY INSTRUCTION

Page 6 of 11


STEP 2

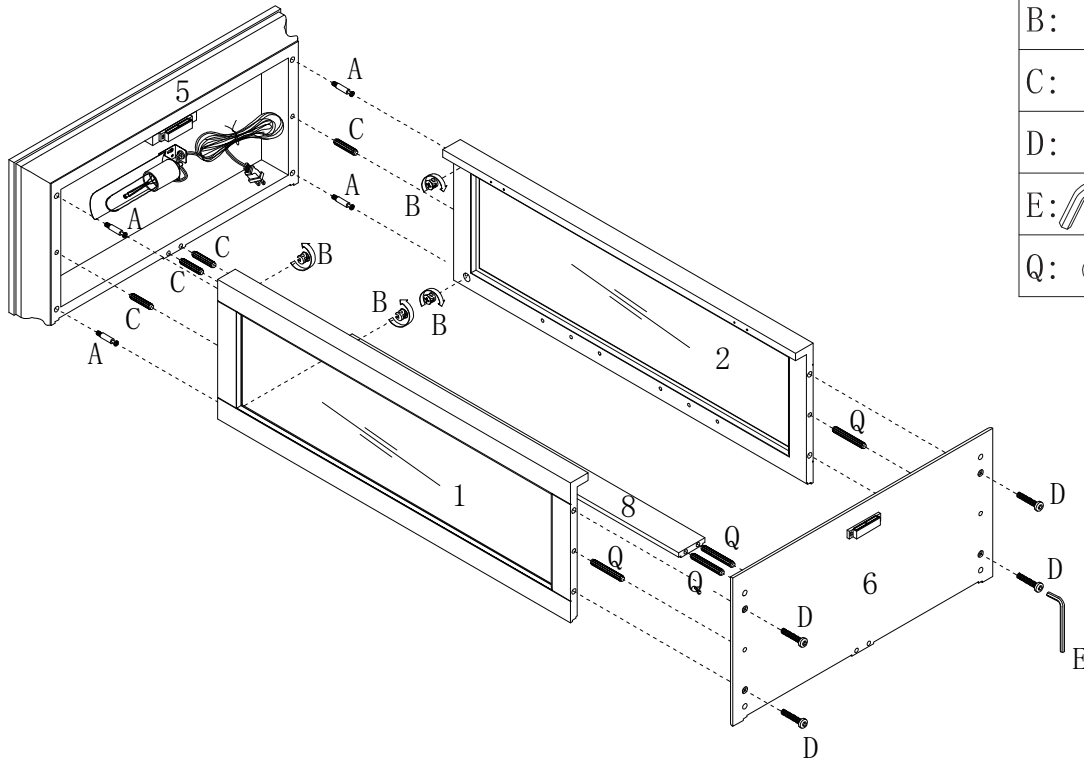

A:		4PCS
B:		4PCS
C:		4PCS
D:		4PCS
E:		1PC
Q:		4PCS




STEP 3

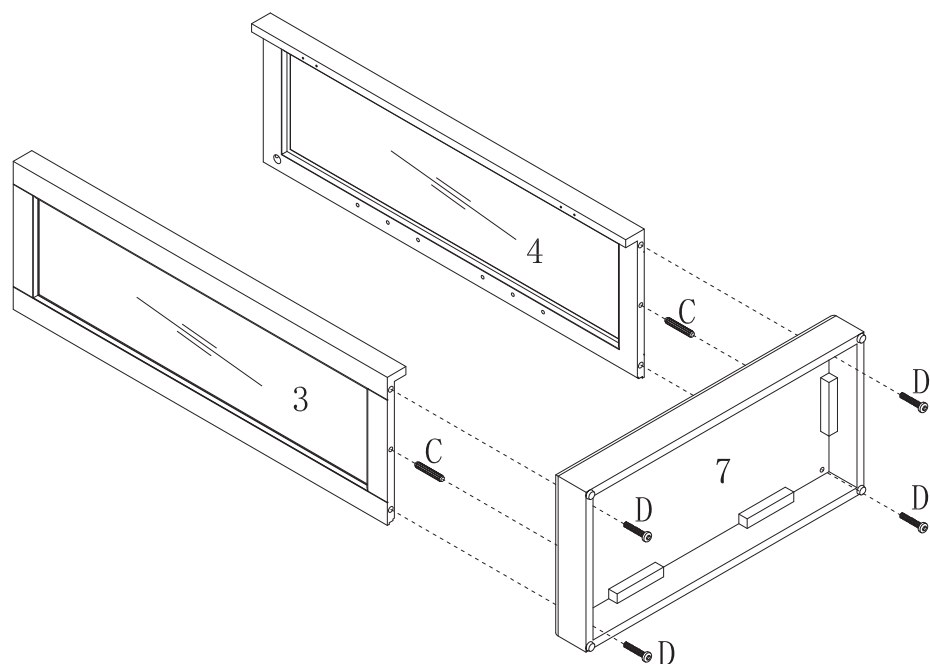
C:		2PCS
D:		4PCS



MADE IN CHINA




STEP 4

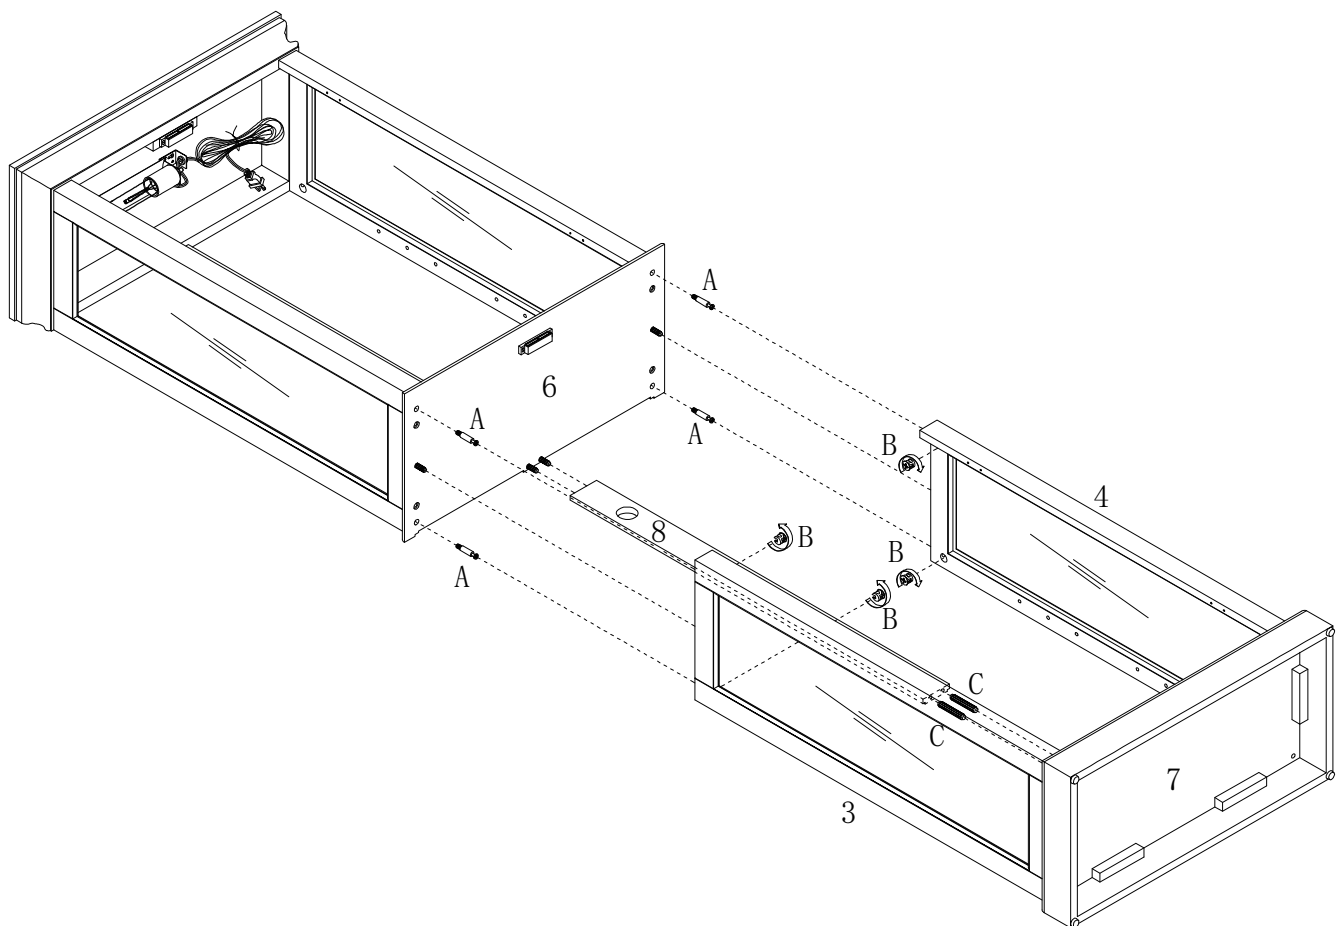A:		4PCS
B:		4PCS
C:		2PCS





ASSEMBLY INSTRUCTION

STEP 5

K:		52PCS
M:		1PC
P:		1PC



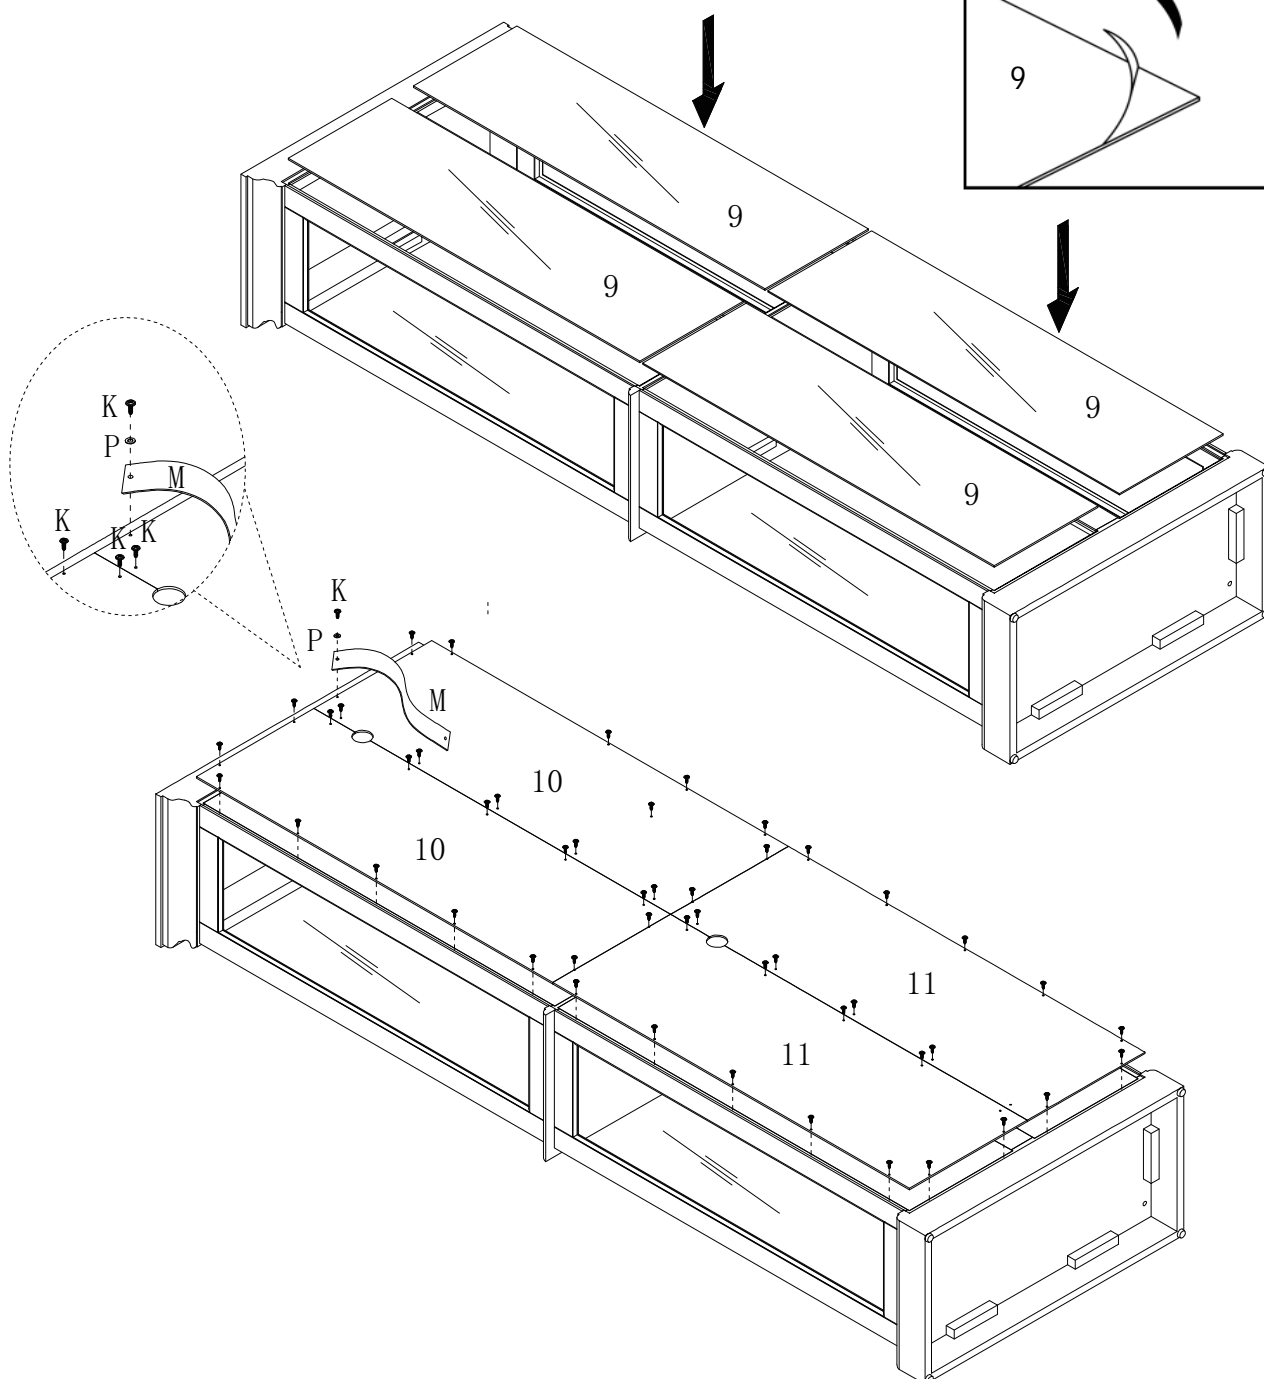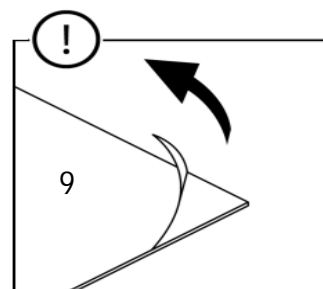

Please tear off the protective film of the mirror before assembling the mirror.




ASSEMBLY INSTRUCTION

Page 9 of 11


STEP 6




F:		4PCS
G:		4PCS
H:		24PCS
J:		4PCS

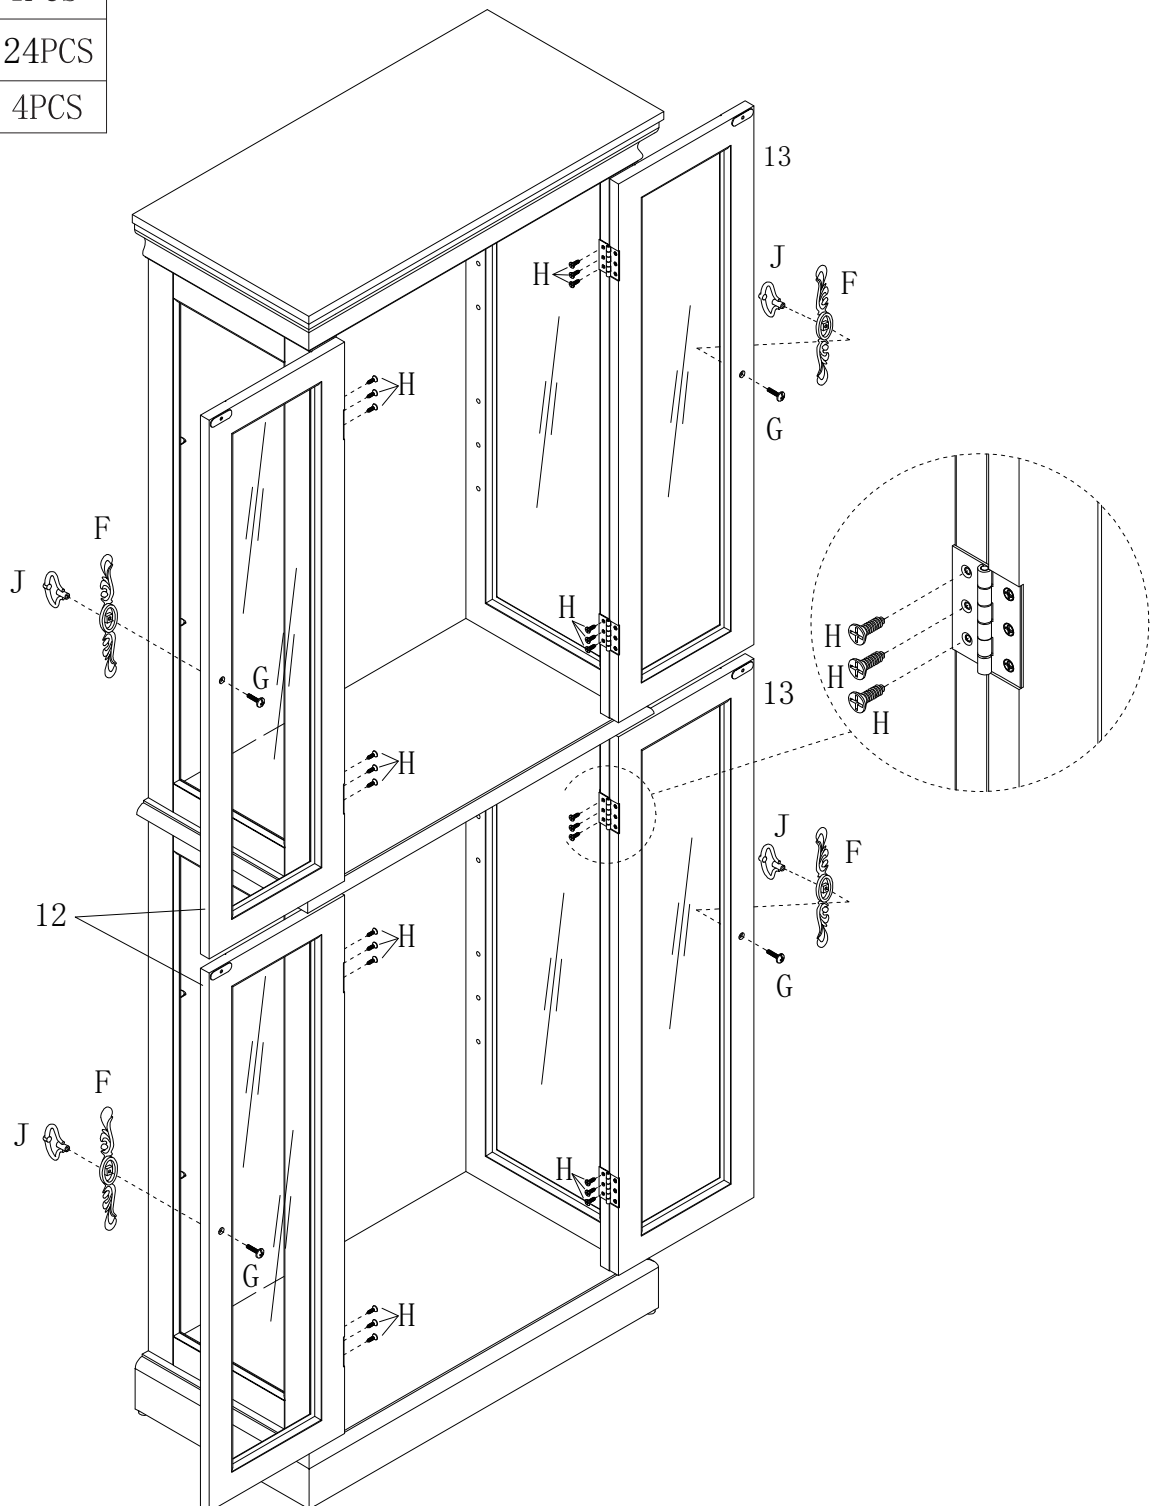

MADE IN CHINA

STEP 7

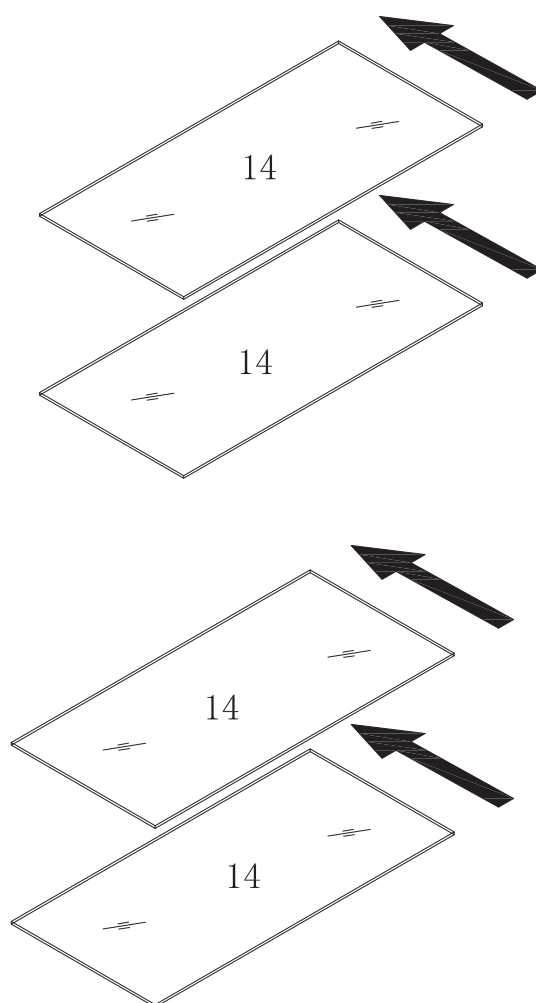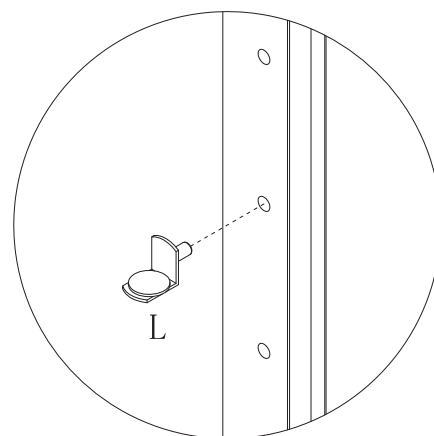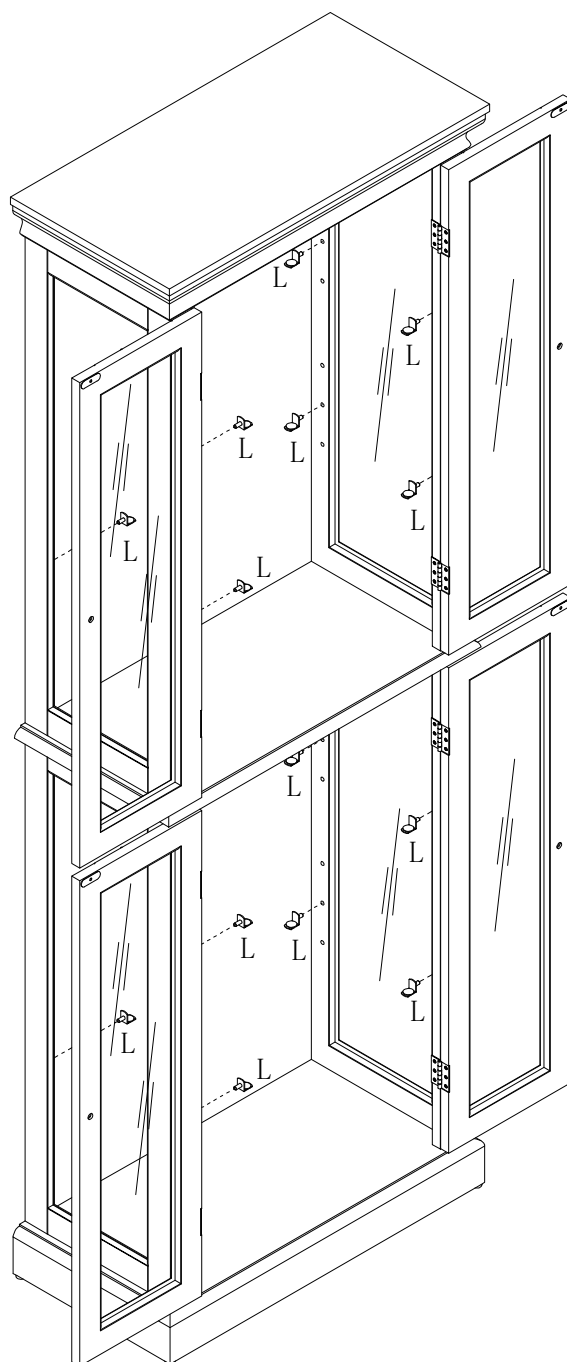


L:  16PCS




ASSEMBLY INSTRUCTION



Page 11 of 11

STEP 8

N:		1PC
O:		1PC
P:		1PC

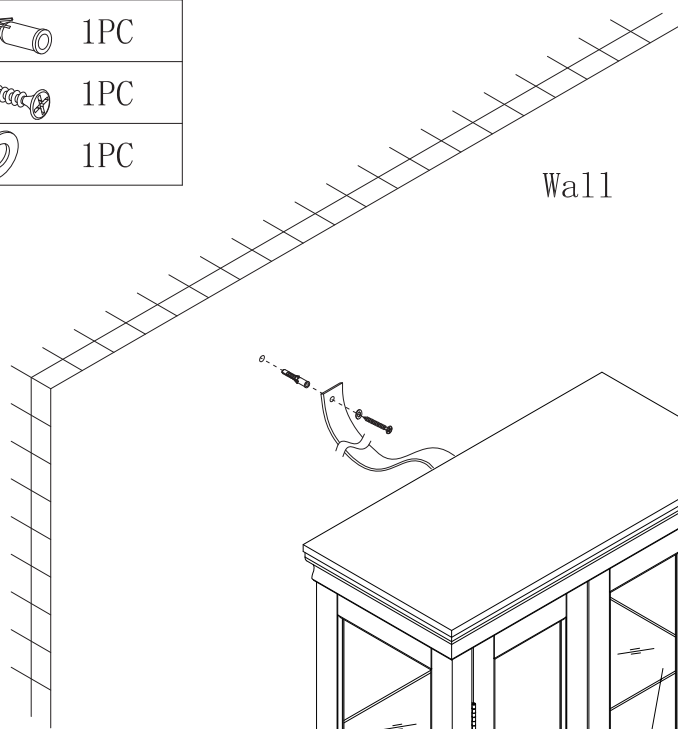

Wall

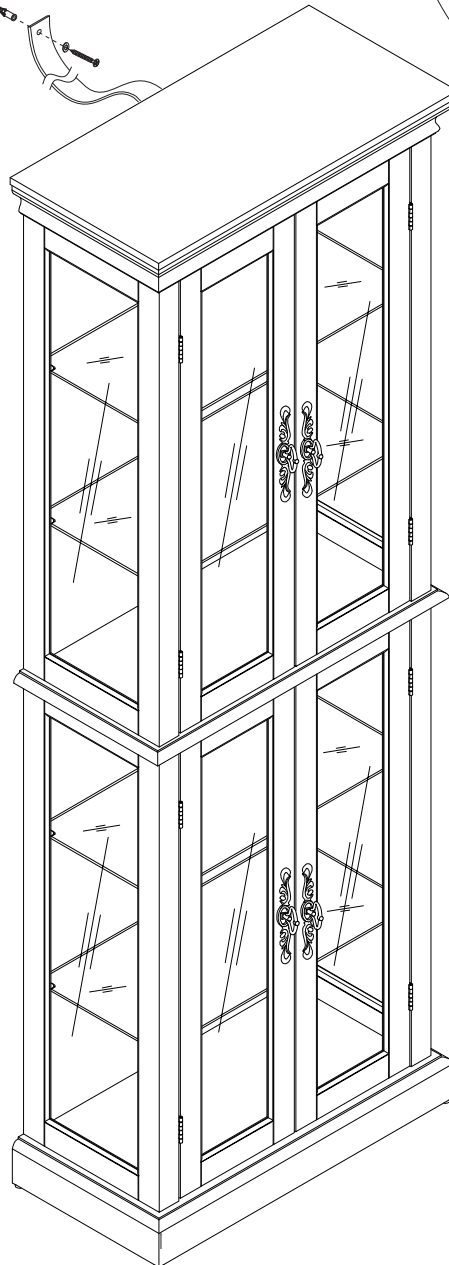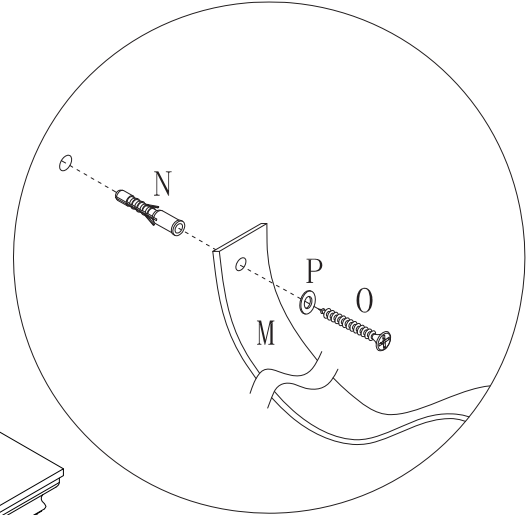

MADE IN CHINA