## DREAMS

IDEA

Instruction Manual





#### **ABOUT US**

**D**REAMSIDEA IS A ONE-STOP HOME FURNISHING AND SERVICE COMPANY BASED IN USA.

WE ARE DEDICATED TO BRINGING YOUR DREAM HOME TO LIFE.

OUR SERVICES COVER FROM DESIGN, PRODUCTION,

DIRECT SELL, STORAGE, AND TRANSPORTATION.

IF REALITY IS THE NEAR SHORE

AND IDEALISM THE FAR SHORE,

 ${\cal D}$ REAMSIDEA AS THE FERRY BETWEEN THEM,

TO YOUR IDEAL HOME.


EAGER TO ACCOMPANY YOU ON A JOURNEY



#### ITEM NO.CH0020N/CH0020ND

#### WARRANTY

We strive to offer high quality product and we also try our best to satisfy each customer that order from us, no matter on products or services as needed. Each customer receives a record of their order, such as the order number or item receipt. For any items that are out of warranty period, you may still be able to purchase the replacement parts from our company if they are available.

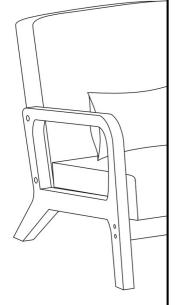

Are you having difficulty with assembly? Missing parts?

Please contact us : info@firstopintl.com

Tel: (562)-781-3327

send an email with your order No. to us For return, please check the return policy with the retailer or platforms you bought from.

Appreciate your purchasing from us.

Pop up your life by our furniture!

#### MAINTAINANCE AND WARNING

Please read the manual thoroughly before you start installing. Please keep the product away from sharp object. Packaging and small parts may have chocking hazard, please keep them away from children and pets. Please clean the product according to each clean code, check the product description for more information. Please keep the product away from fire. If you have any other questions, please contact us, we will be glad to help you out. If the product is placed under direct sunlight, the pattern or color might fade away overtime. Check the product periodically to make sure everything is secured and tightened. Always use proper tools for installation. Do not jump on the product.









#### PRDOUCT DESCRIPTION

Soft Cotton Upholstery: Made from high-quality cotton fabric for a breathable and comfortable touch.

Durable Solid Wood Frame: Ensures stability and long-lasting use.

Mid-Century Modern Appeal: Adds a sophisticated, timeless style to your living space.

Easy to install: The product box comes with detailed installation instructions and all the parts and tools needed for installation, so even a single person can install it quickly


The chair should be assembled on cardboard or carpet for ease of handling and to avoid collision with the floor



## **EXPLODED VIEW**




The product's left and right are determined by sitting posture

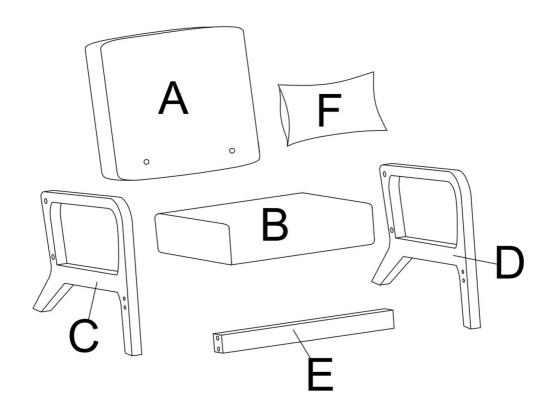




## PARTS

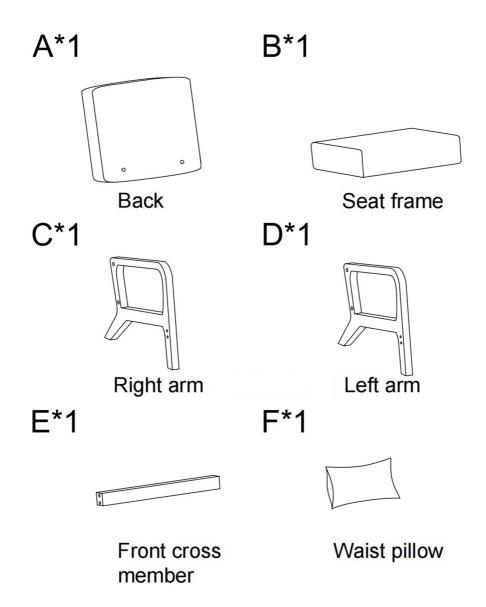

## HARDWARE

#### TOOL LIST


NOTE: Designated with (★) We provide additional spare parts in the hardware package

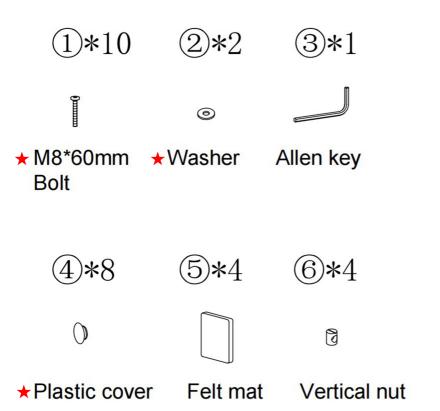

Please make sure all hardware&packing material fitting the list. Especially some small accessories may be missing during transportation. Please contact us if you have any question.




Using allen key (3) provided to remove the armrests (C & D) from the wooden board, the wooden board is for fixing the armrests during the transportation, not part of the product.

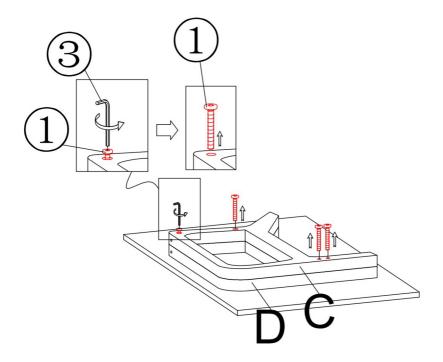


<sup>\*</sup> You may place a rug or some covers underneath the seat frame, in order to protect your floor and the product.


Connect back (A) and the seat cushion (B) with the bolts (1) and washers (2), using allen wrench (3) provided to tighten the bolts, make sure all the bolts are fully tightened before next step.

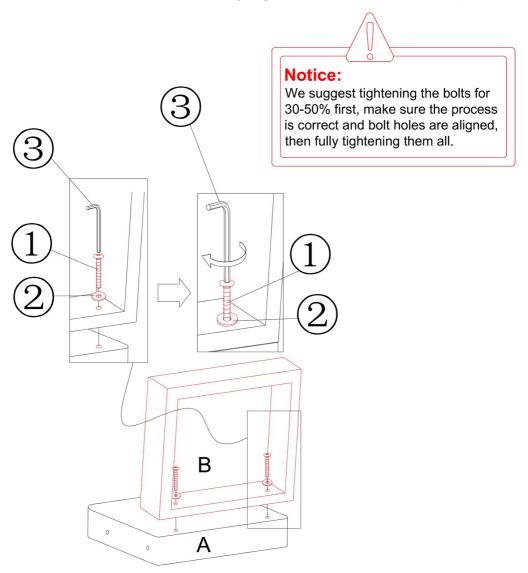

Use the bolts (1) to tighten the right arm (C) with the frame as shown, use the allen wrench (3) provided to tighten the bolts.

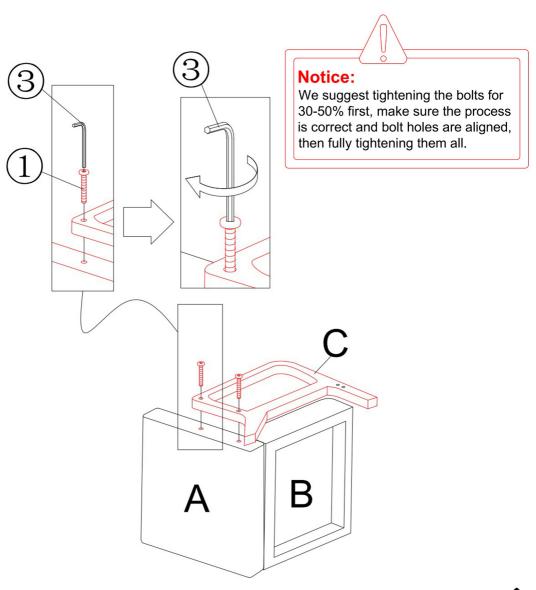


Use the bolts (1) to tighten the right arm (D) with the frame as shown, use the allen wrench (3) provided to tighten the bolts.

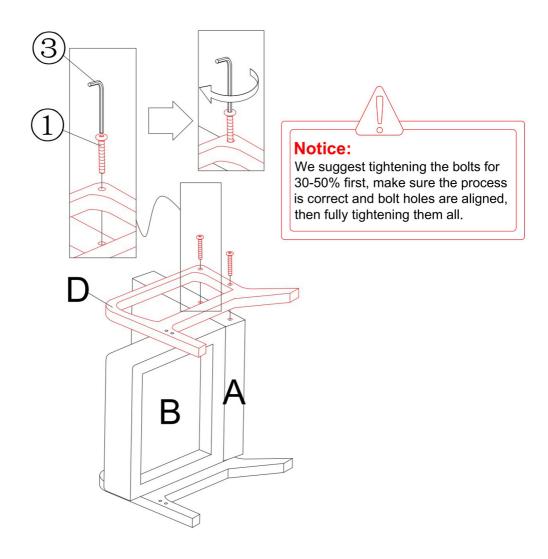





Insert the vertical nuts (6) into the front transom (E) as shown, make sure the holes on vertical nuts are aligned with the holes on the sides of transom. Then install the transom to the seat frame as shown, use the bolt (1) to tighten the transom to both arms, use the allen wrench (3) provided to tighten the bolts, make sure all bolts are fully tightened.

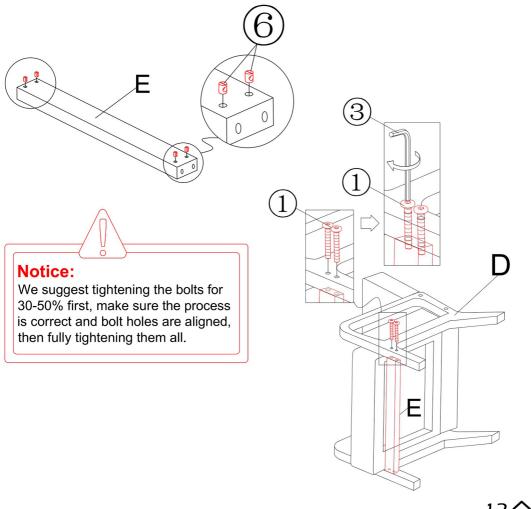

Use the bolt (1) to tighten the transom to both arms, use the allen wrench (3) provided to tighten the bolts, make sure all bolts are fully tightened. Stick on the antislip pads (5) onto the bottom of the legs as shown.

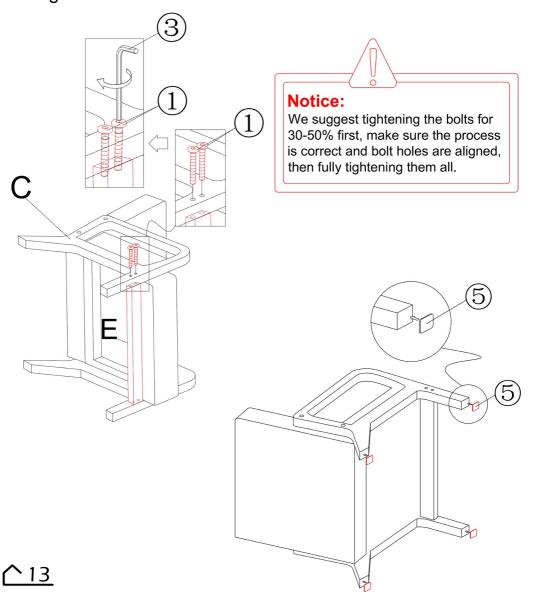

Insert the plastic covers (4) into each holes of the bolt as shown. Place the waist pillow, the assembly is complete.

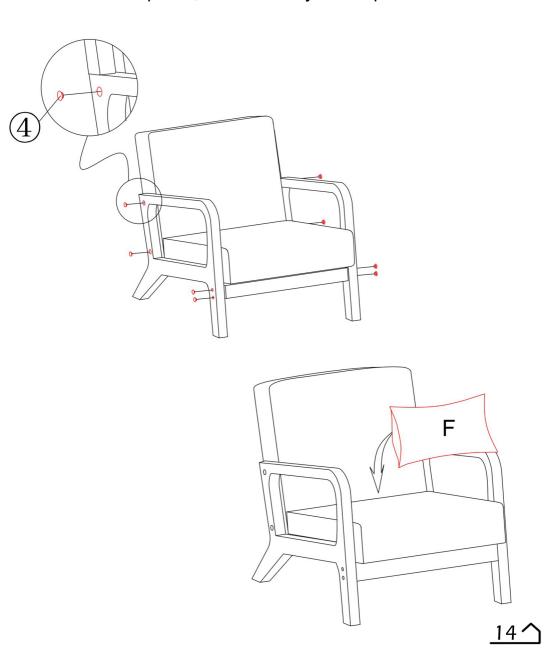



# ASSEMBLY INSTRUCTIONS Tel.(562)-781-3327 Please contact us:info@firstopintl.com https://www.dreamsidea.com