
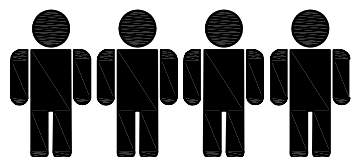


# ASSEMBLY INSTRUCTION


SKU CODE: (WF530405-WF530406-WF530407)

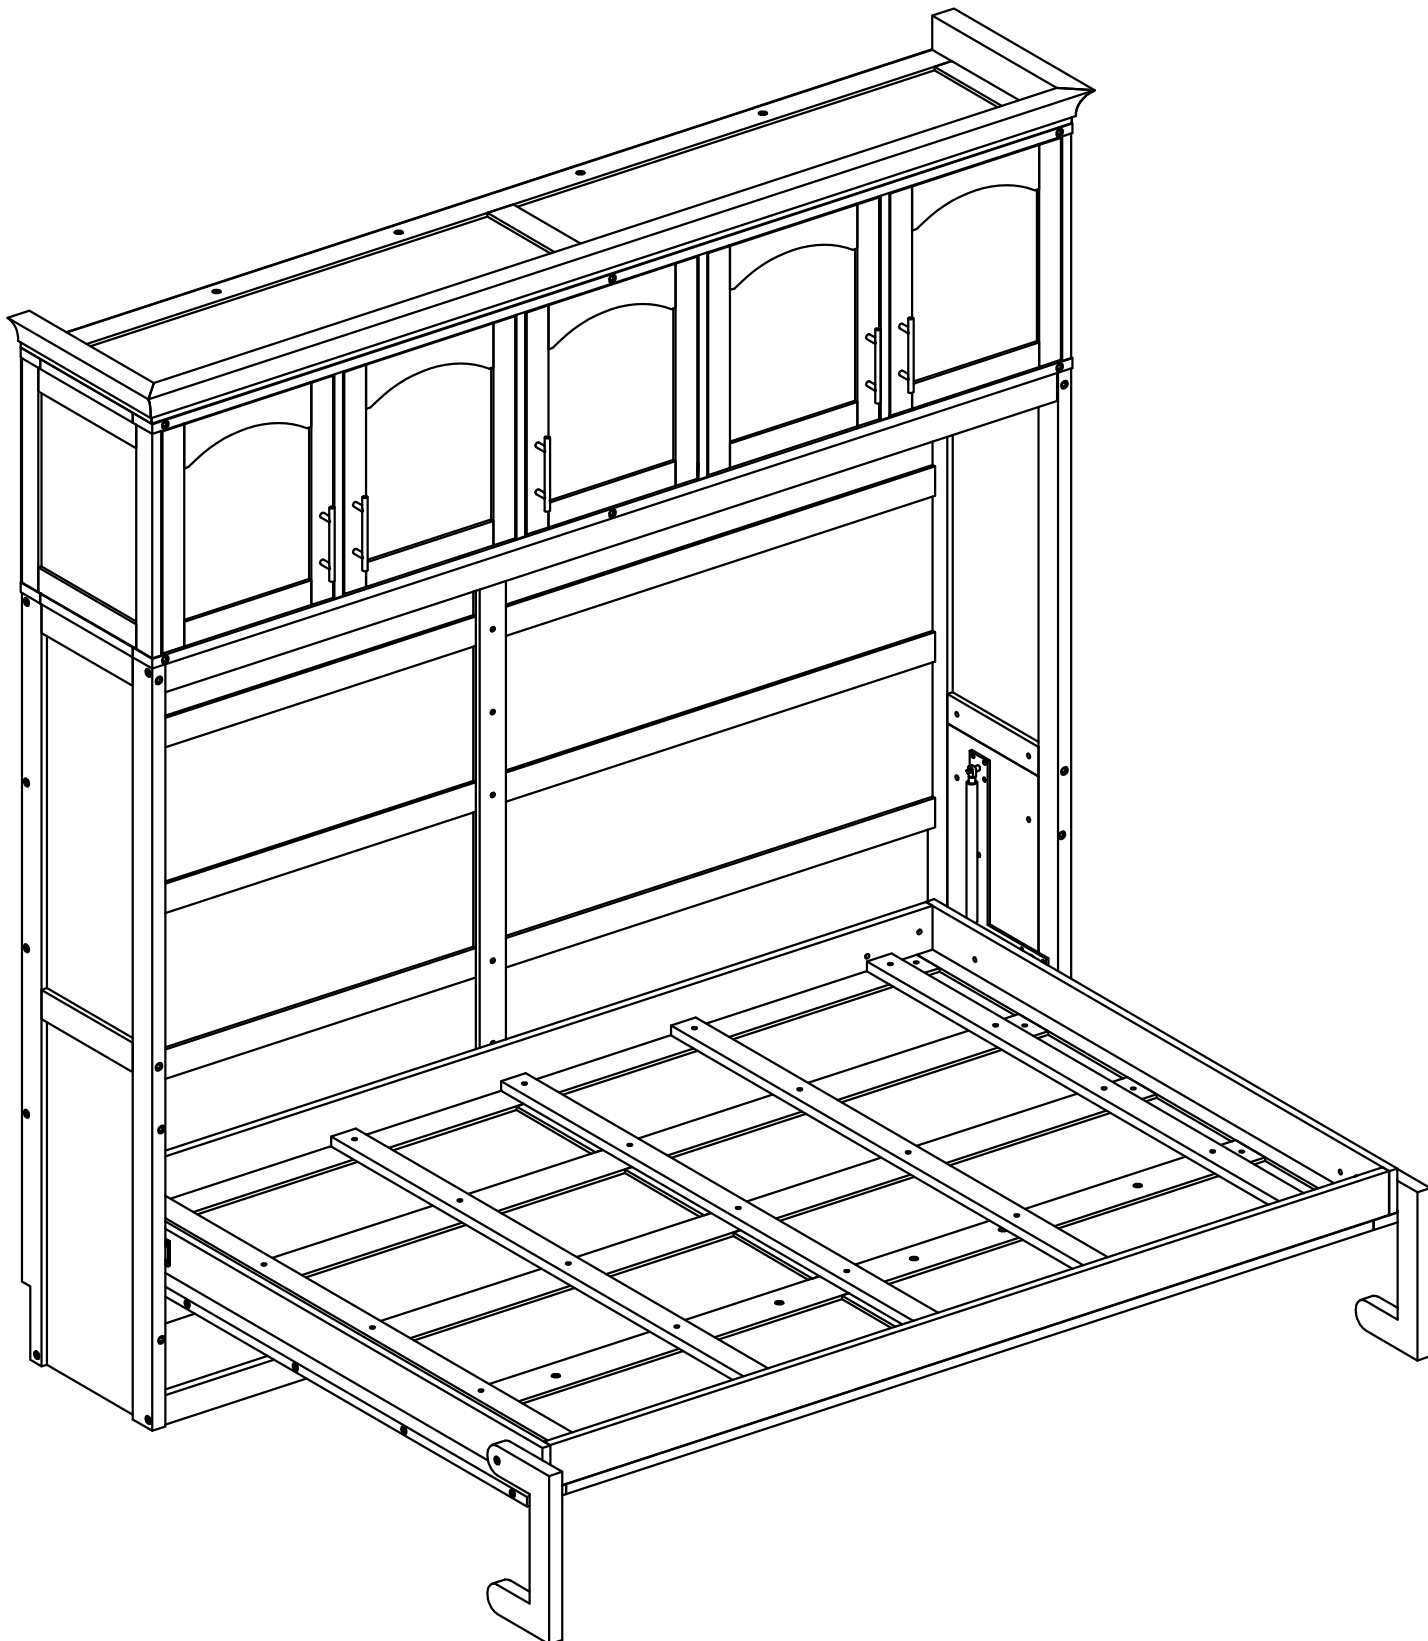


Four people are required to  
assemble and move this model.


Note: This bed must be equipped with  
a mattress equivalent to 39 lb

OPTION 1

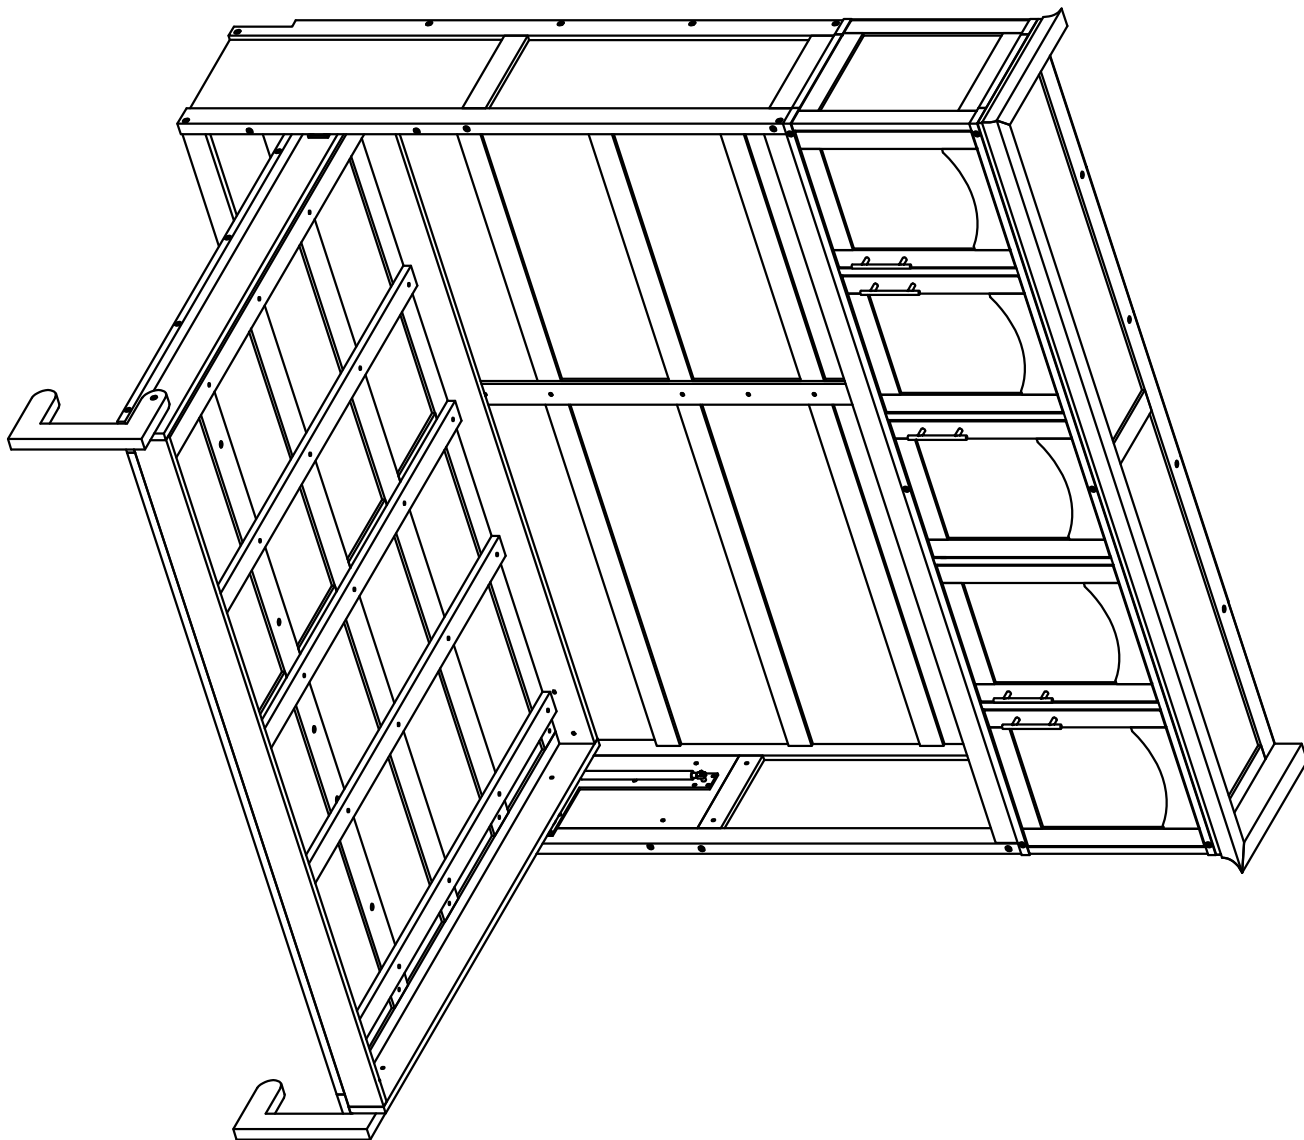

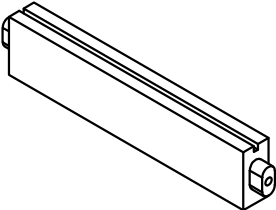
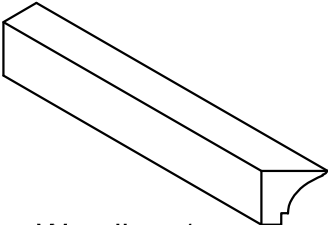

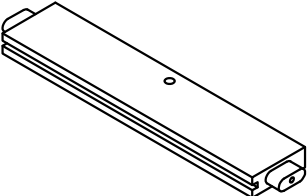
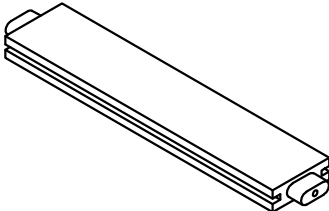
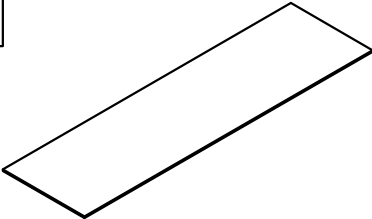

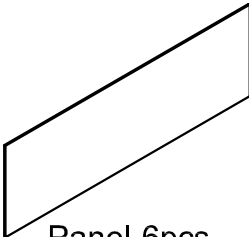
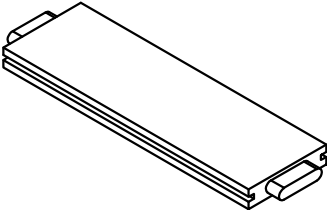
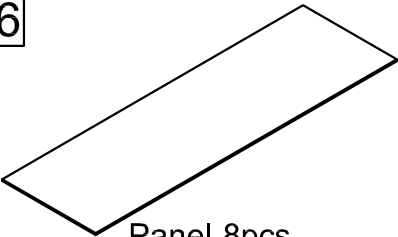
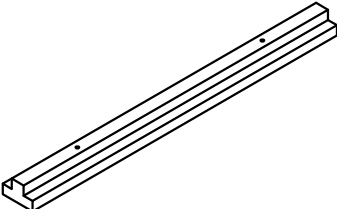

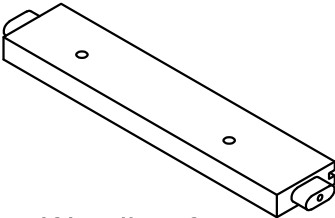
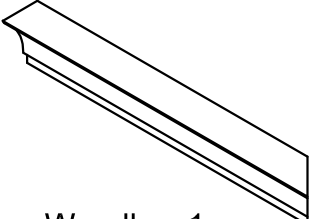


OPTION 2

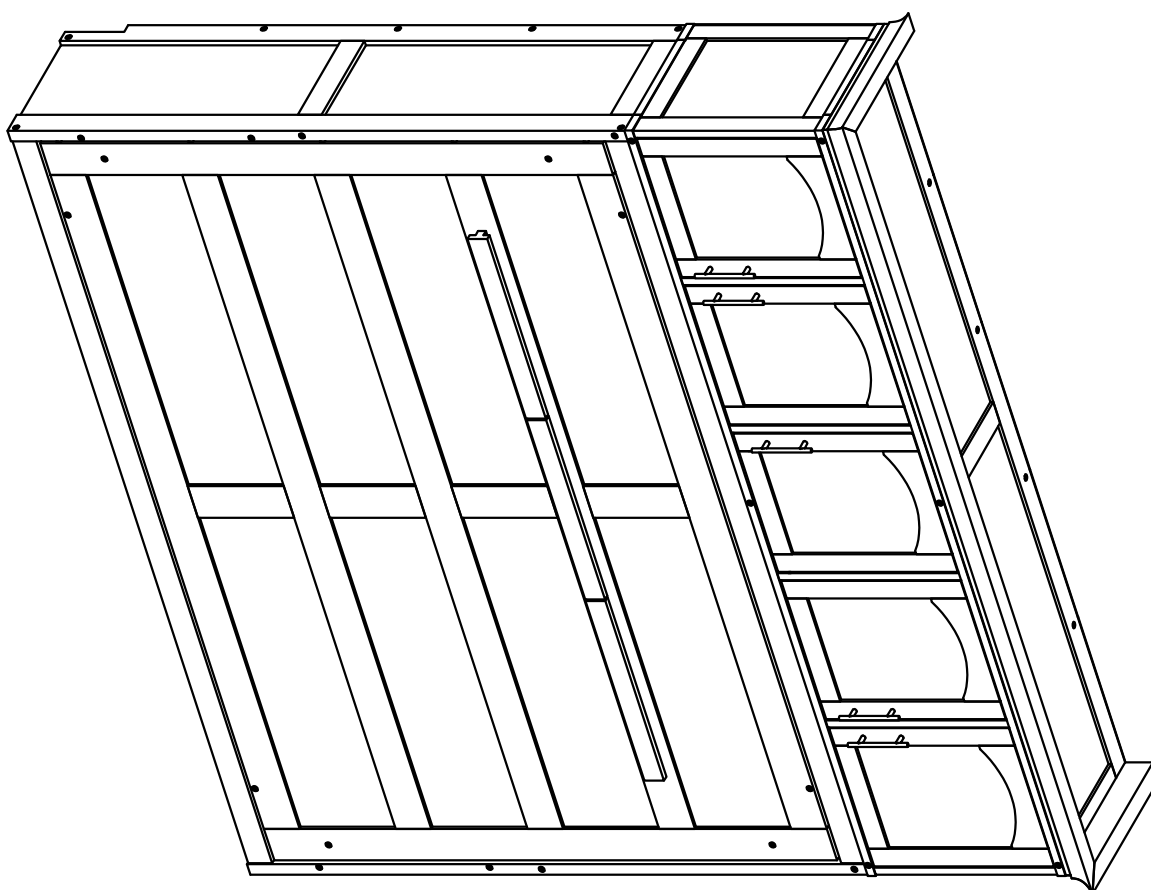

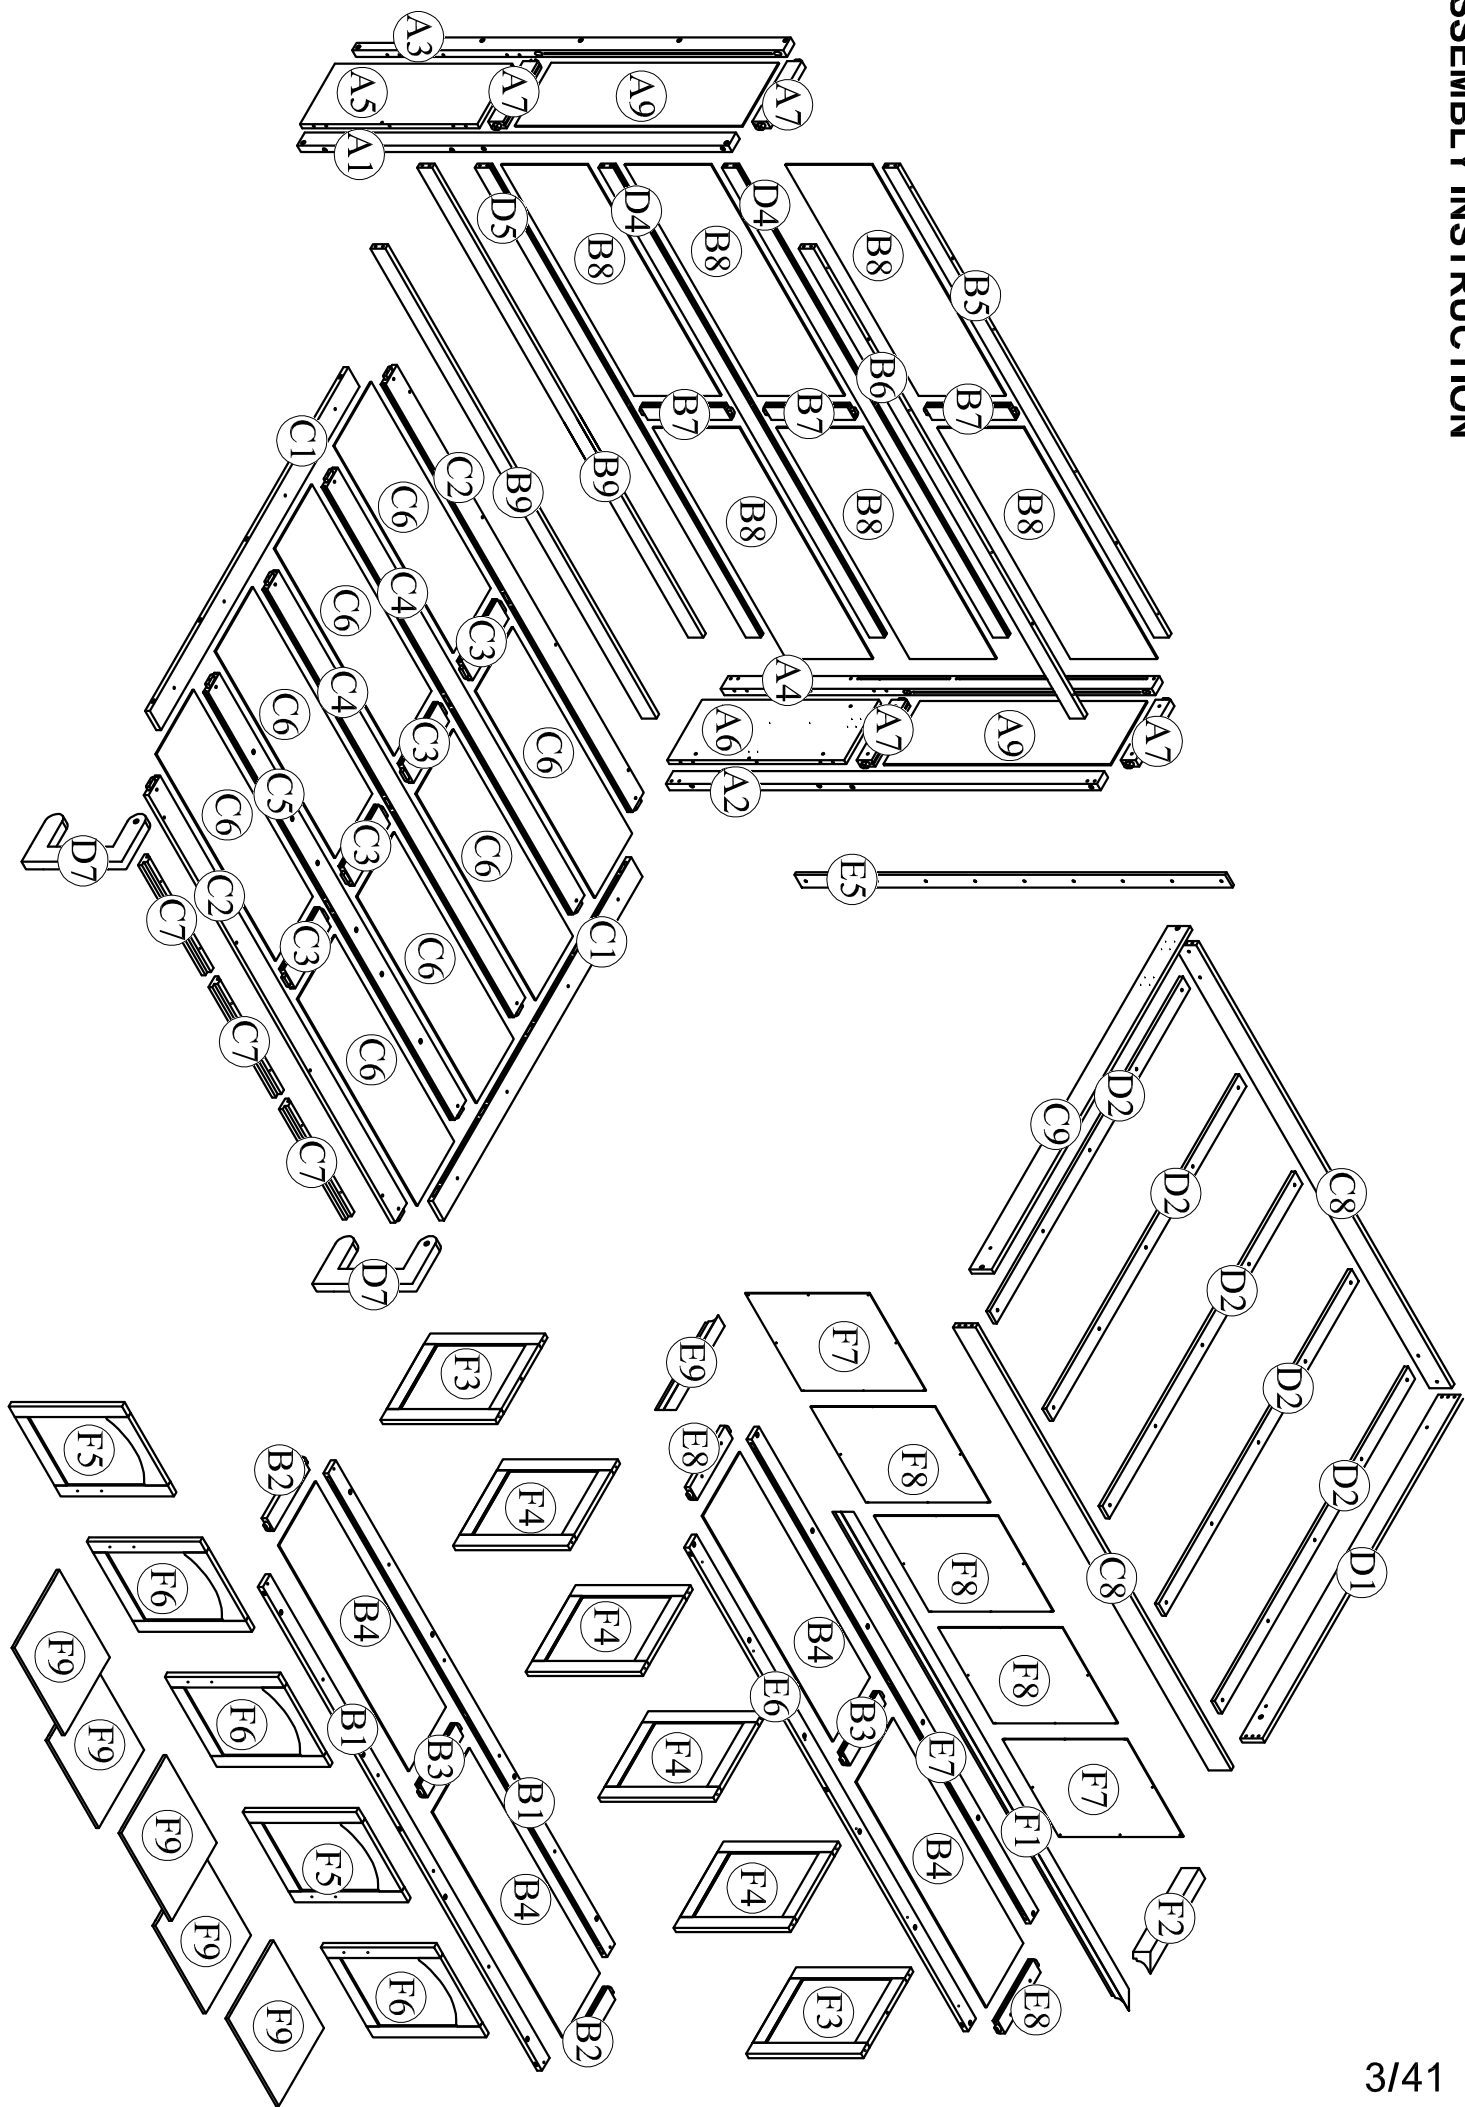


# Part List (Box 1-WF530405)

<div>A5</div> <div></div> <div>Panel-1pc</div>	<div>A6</div> <div></div> <div>Panel-1pc</div>	<div>A7</div> <div></div> <div>Woodbar-4pcs</div>
<div>F2</div> <div></div> <div>Woodbar-1pc</div>	<div>A9</div> <div></div> <div>Panels-2pcs</div>	<div>B2</div> <div></div> <div>Woodbar-2pcs</div>
<div>B3</div> <div></div> <div>Woodbar-2pcs</div>	<div>B4</div> <div></div> <div>Panel-4pcs</div>	<div>B7</div> <div></div> <div>Woodbar-3pcs</div>
<div>B8</div> <div></div> <div>Panel-6pcs</div>	<div>C3</div> <div></div> <div>Woodbar-4pcs</div>	<div>C6</div> <div></div> <div>Panel-8pcs</div>
<div>C7</div> <div></div> <div>Wooden Handle-3pcs</div>	<div>D7</div> <div></div> <div>Woodleg-2pcs</div>	<div>E8</div> <div></div> <div>Woodbar-2pcs</div>
<div>E9</div> <div></div> <div>Woodbar-1pc</div>		


# Part List (Box 2-WF530406)

B1

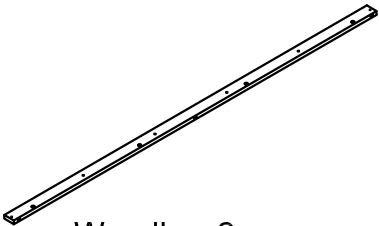


Woodbar-2pcs

B5

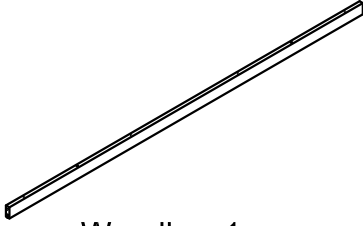


Woodbar-1pc

B6

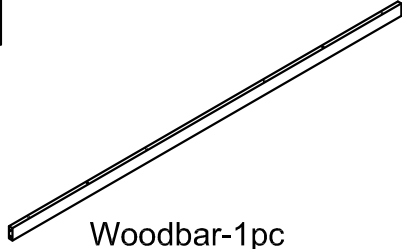


Woodbar-1pc

B9

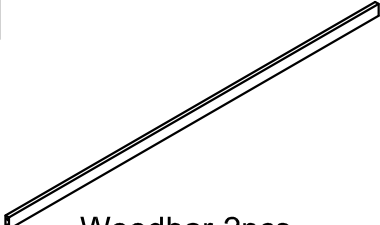


Woodbar-2pcs

C2

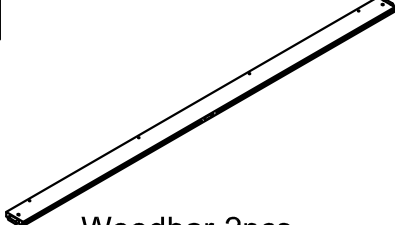


Woodbar-2pcs

C4

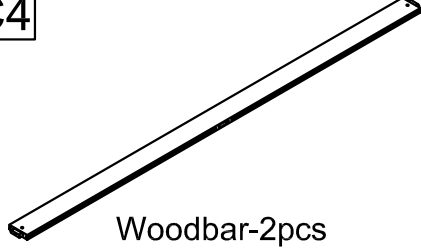


Woodbar-2pcs

C5

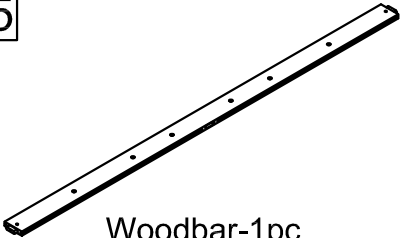


Woodbar-1pc

C8

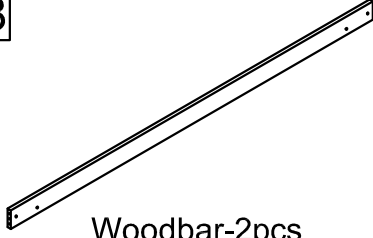


Woodbar-2pcs

F1

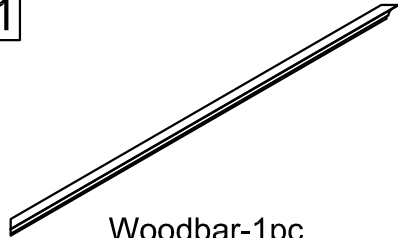


Woodbar-1pc

D4

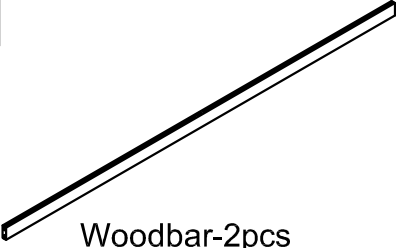


Woodbar-2pcs

D5

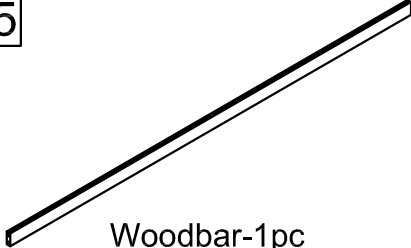


Woodbar-1pc

E6

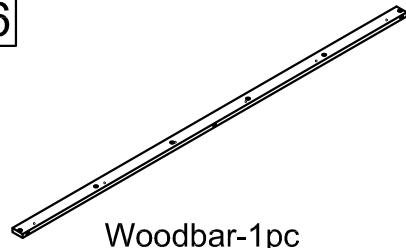



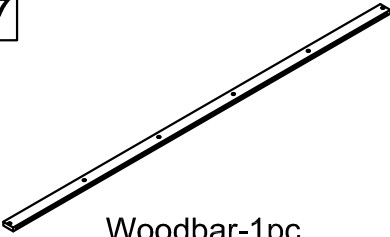


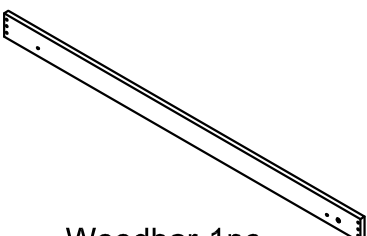
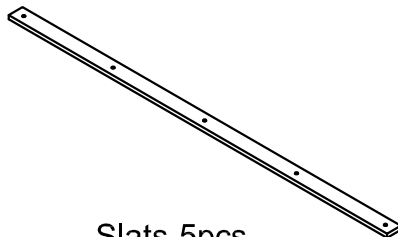


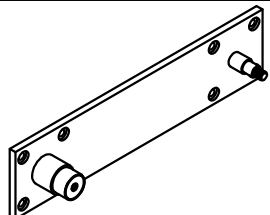


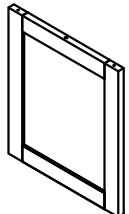
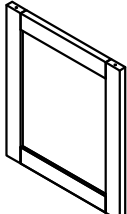
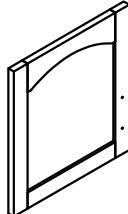
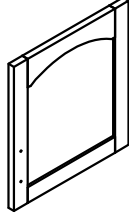
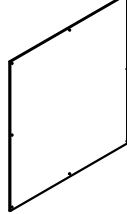
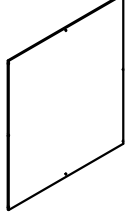
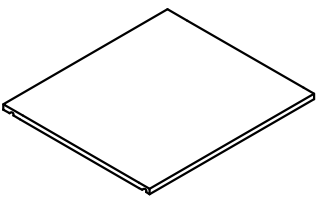
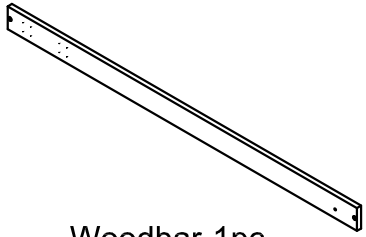
Woodbar-1pc

E7















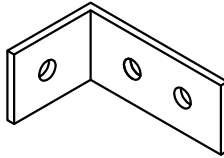



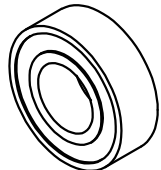
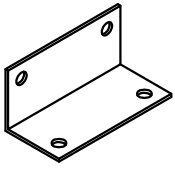



Woodbar-1pc

# Part List & Hardware List (Box 3-WF530407)

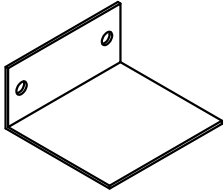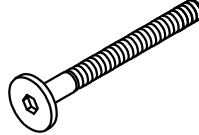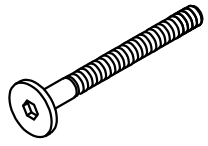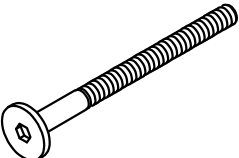
<div>A1</div> <div></div> <div>Woodleg-1pc</div>	<div>A2</div> <div></div> <div>Woodleg-1pc</div>	<div>A3</div> <div></div> <div>Woodleg-1pc</div>
<div>A4</div> <div></div> <div>Woodleg-1pc</div>	<div>C1</div> <div></div> <div>Woodbar-2pcs</div>	<div>D1</div> <div></div> <div>Woodbar-1pc</div>
<div>D2</div> <div></div> <div>Slats-5pcs</div>	<div>D8</div> <div></div> <div>Metal corner link-1pc</div>	<div>D9</div> <div></div> <div>Metal corner link-1pc</div>
<div>E1</div> <div></div> <div>Metal corner link-2pcs</div>	<div>E2</div> <div><div>500N</div></div> <div>Piston Steam-2pcs</div>	<div>E5</div> <div></div> <div>Woodbar-1pc</div>
<div>F3</div> <div></div> <div>Woodframe-2pcs</div>	<div>F4</div> <div></div> <div>Woodframe-4pcs</div>	<div>F5</div> <div></div> <div>Door frame-2pcs</div>
<div>F6</div> <div></div> <div>Door frame-3pcs</div>	<div>F7</div> <div></div> <div>Panel-2pcs</div>	<div>F8</div> <div></div> <div>Panel-3pcs</div>
<div>F9</div> <div></div> <div>Panel-5pcs</div>	<div>C9</div> <div></div> <div>Woodbar-1pc</div>	

# Hardware List (Box 3-WF530407)

1	 Angle Metal 2pcs	2	 Ø1/4" x 40 mm Hex-Head bolts 2pcs	3	 Ø1/4" x 60 mm Hex-Head bolts 12pcs
4	 Ø1/4" x 70 mm Hex-Head bolts 14pcs	5	 Ø1/4" x 100 mm Hex-Head bolts 16pcs	6	 Ø8 x 30 mm Wood dowel 56pcs
7	 M4 x 25 mm Wood Screws 8pcs	8	 Ø1/4" x 13 mm Horizontal-Hole bolts 52pcs	9	 Ø1/4" x 15 mm Canopy head though 2pcs
10	Nhựa trắng  Ø20 / Ø6 x 2 mm Washer 2pcs	11	 Allen Key 2pcs	12	 Screws 1/4" x40 38pcs
13	 Screws 1/4" x70 12pcs	14	 M4 x 15 mm Wood Screws 110pcs	15	 Angle Metal 4pcs
16	 M4 x 30 mm Wood Screws 29pcs	17	 Nut 4pcs	18	Xi trắng  Ø1/3" x 40 mm Hex-Head bolts 2pcs
19	 Bearings 2pcs	20	 Angle Metal 14pcs	21	 M4 x 20 mm Wood Screws 36pcs


# Hardware List (Box 3-WF530407)

22

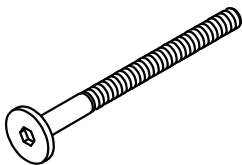

Ø1/4" x 120 mm  
Hex-Head bolts 10pcs

23

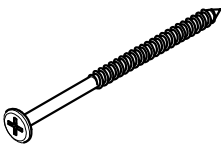


M5 x 75 mm  
Wood Screws 4pcs

24



L-pat - 2pcs

25




M8 x 80 mm  
Plastic anchor 4pcs

26



Bolt Ø1/6" x 25 mm  
10pcs

27




Handle - 5pcs

28



M3 x 15 mm  
Wood Screws 30pcs

29

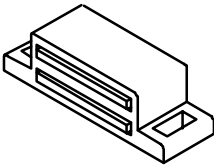


Magnet Door Catcher  
5pcs

30




Ø6 x 20 mm  
Metal dowel 20pcs




Assembly Tools Required (Not Included)



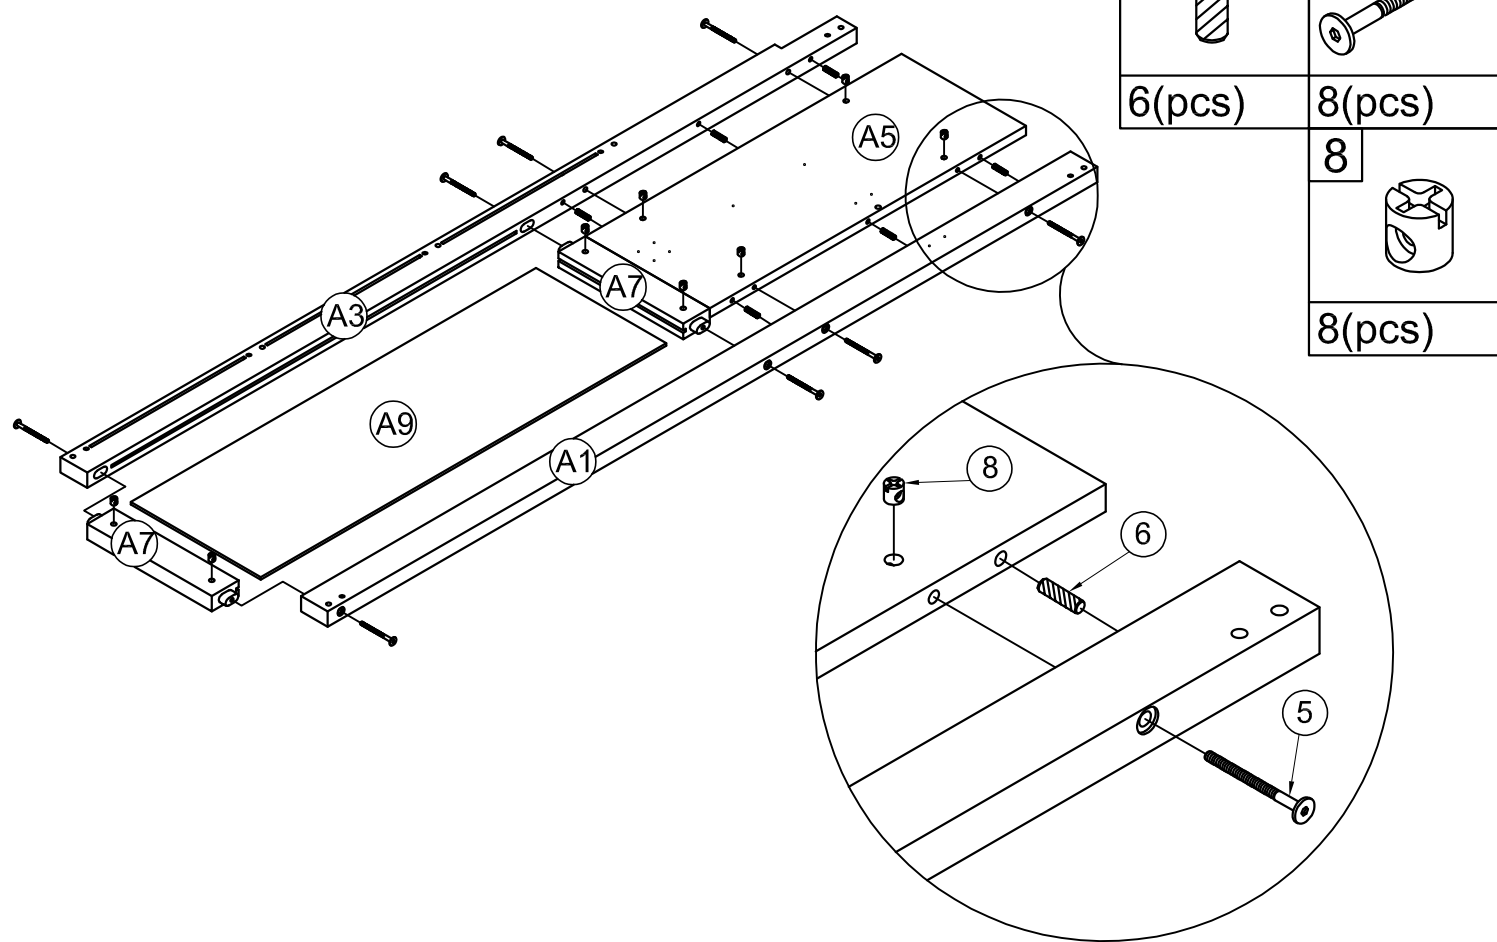


**STEP1:** Following below illustration.

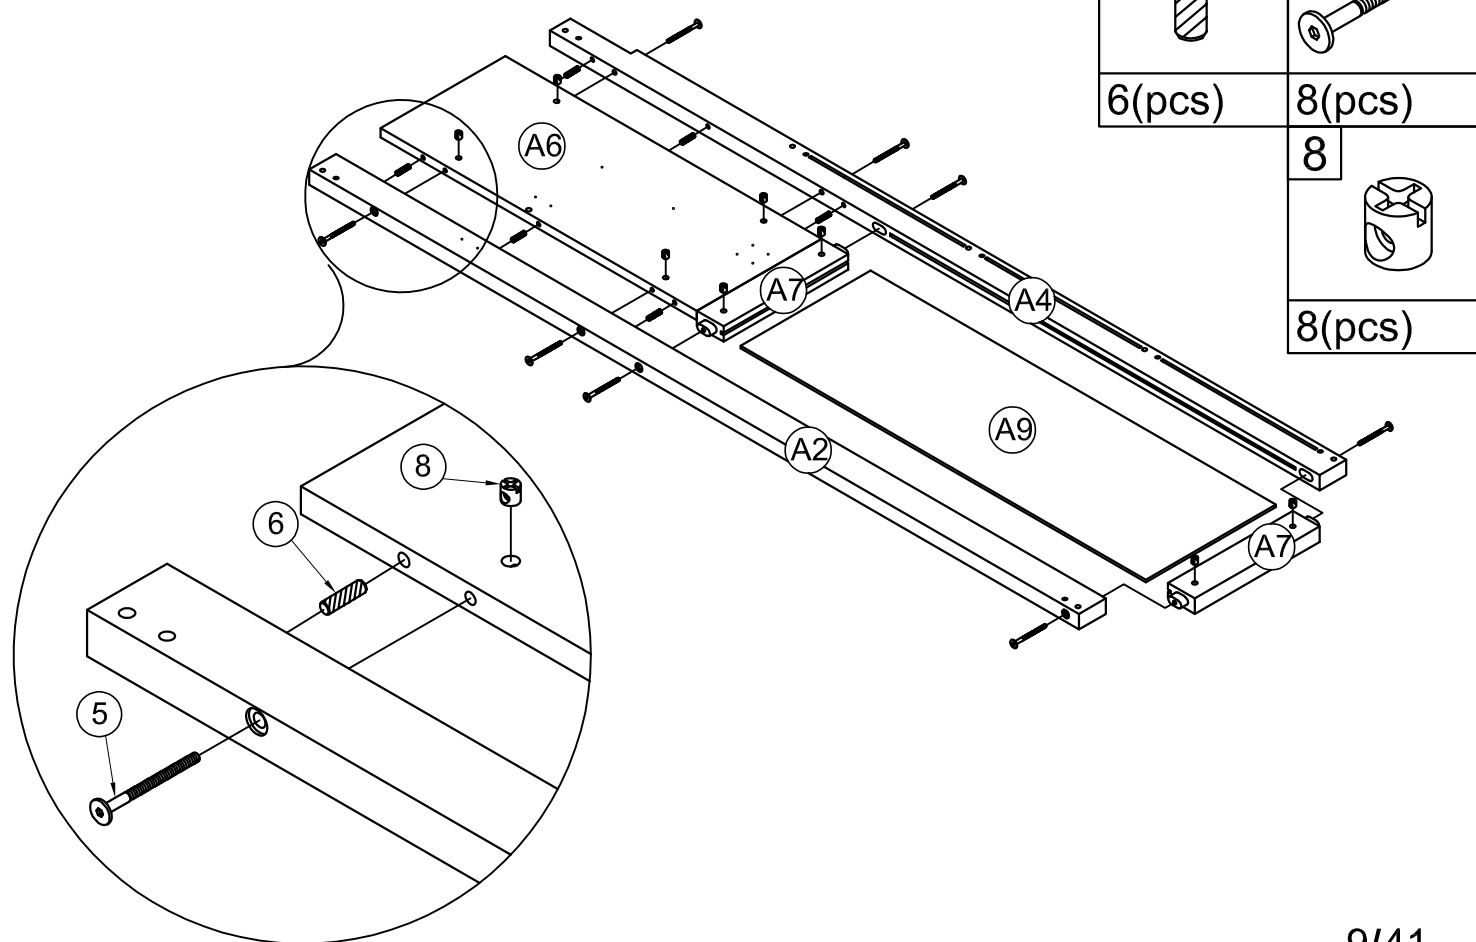


**STEP2:** Following below illustration.



STEP3: Following below illustration.

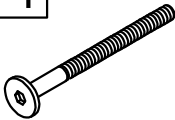


6		8		4	
6(pcs)		6(pcs)		6(pcs)	

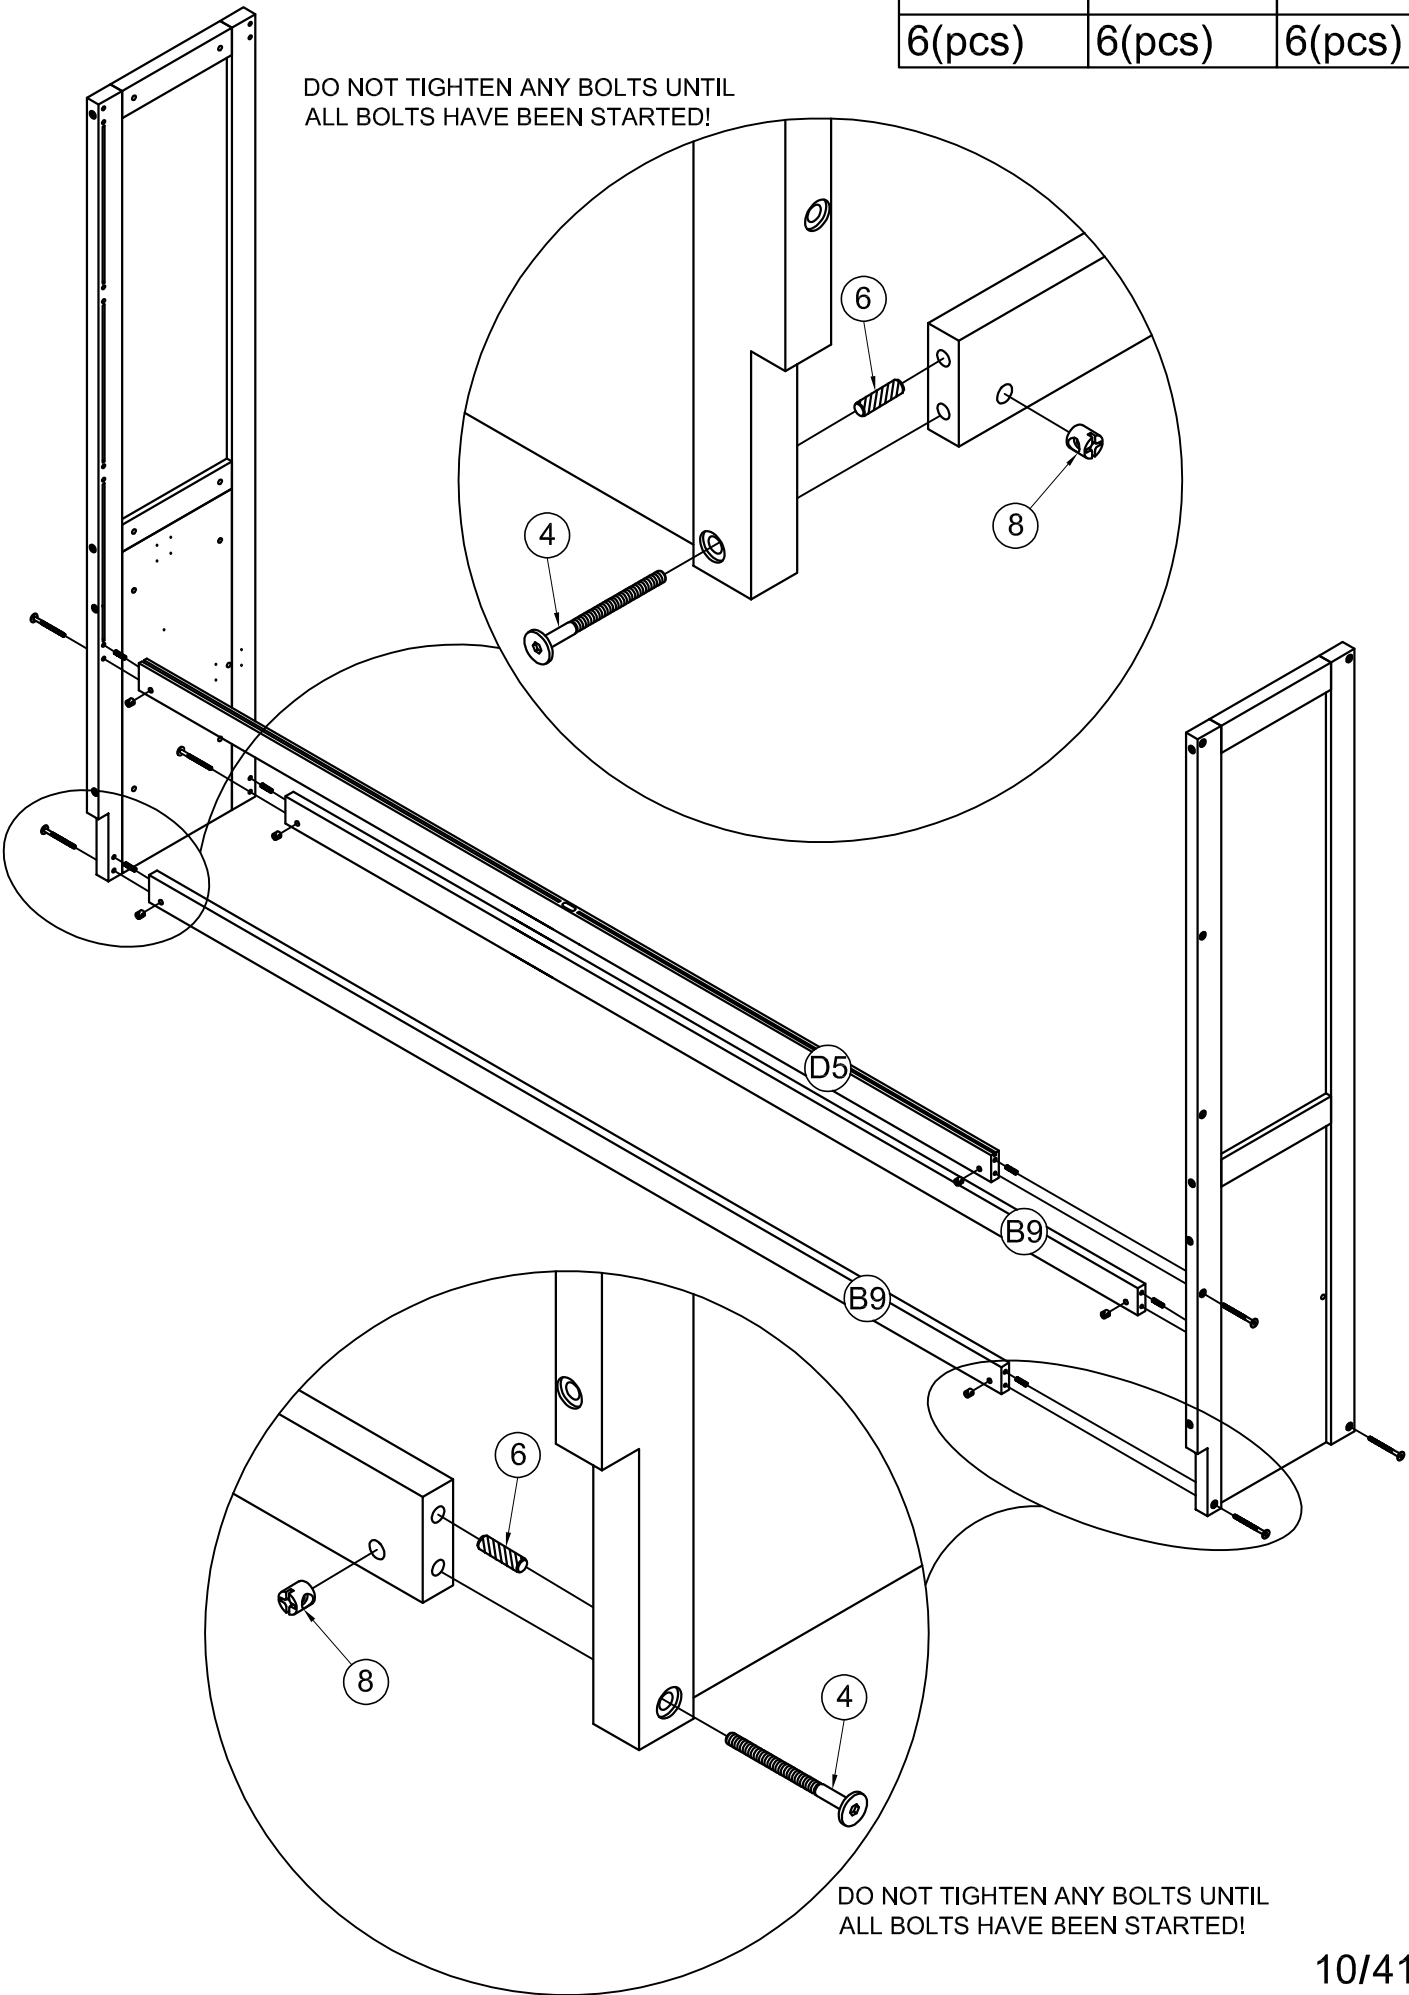DO NOT TIGHTEN ANY BOLTS UNTIL  
ALL BOLTS HAVE BEEN STARTED!




DO NOT TIGHTEN ANY BOLTS UNTIL  
ALL BOLTS HAVE BEEN STARTED!

STEP4: Following below illustration.

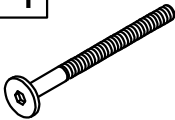


6	8	4
		
2(pcs)	2(pcs)	2(pcs)

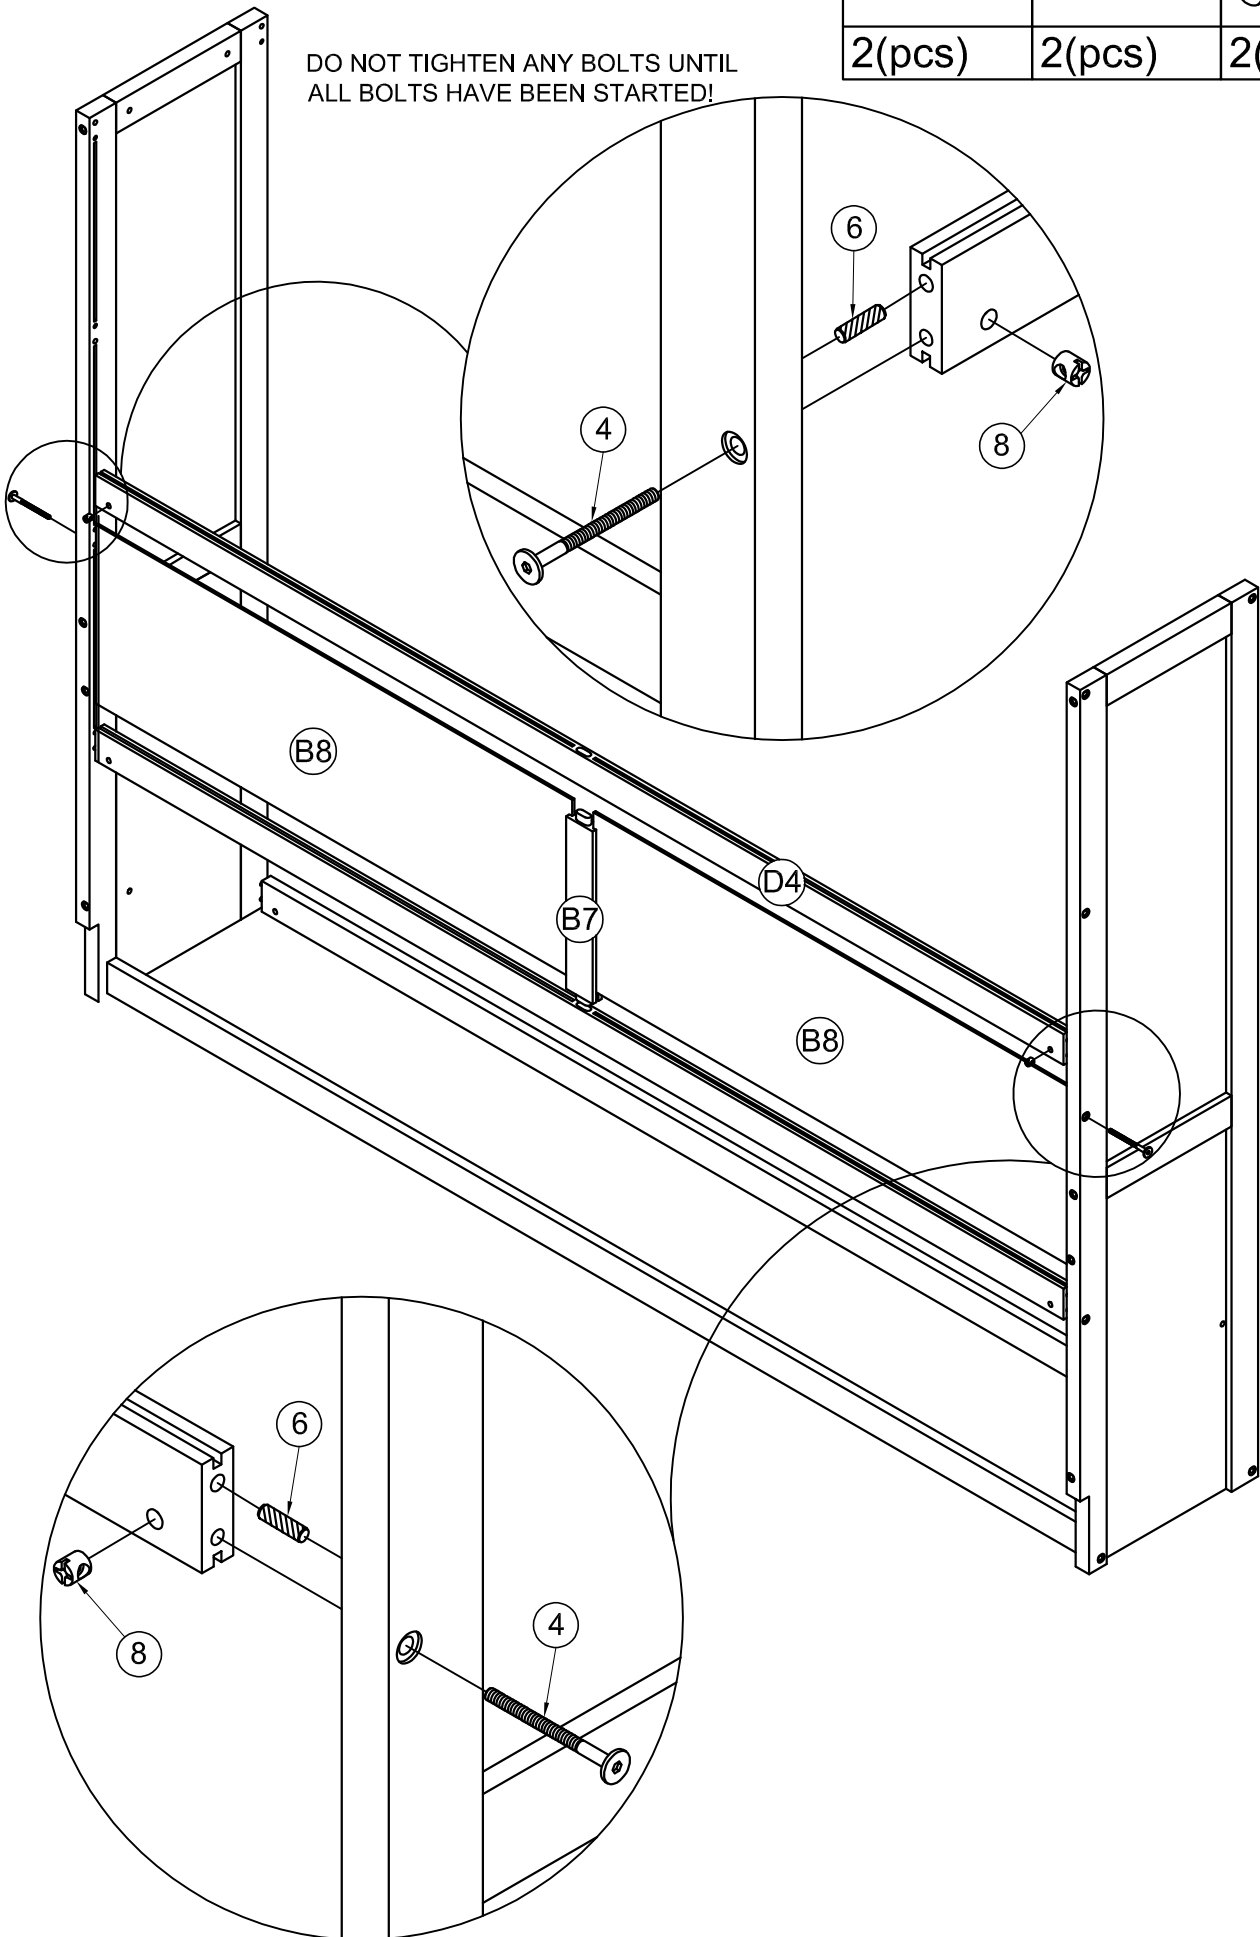DO NOT TIGHTEN ANY BOLTS UNTIL  
ALL BOLTS HAVE BEEN STARTED!




DO NOT TIGHTEN ANY BOLTS UNTIL  
ALL BOLTS HAVE BEEN STARTED!

**STEP5:** Following below illustration.

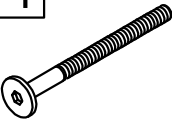
6	8	4
		
2(pcs)	2(pcs)	2(pcs)


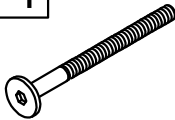

DO NOT TIGHTEN ANY BOLTS UNTIL  
ALL BOLTS HAVE BEEN STARTED!

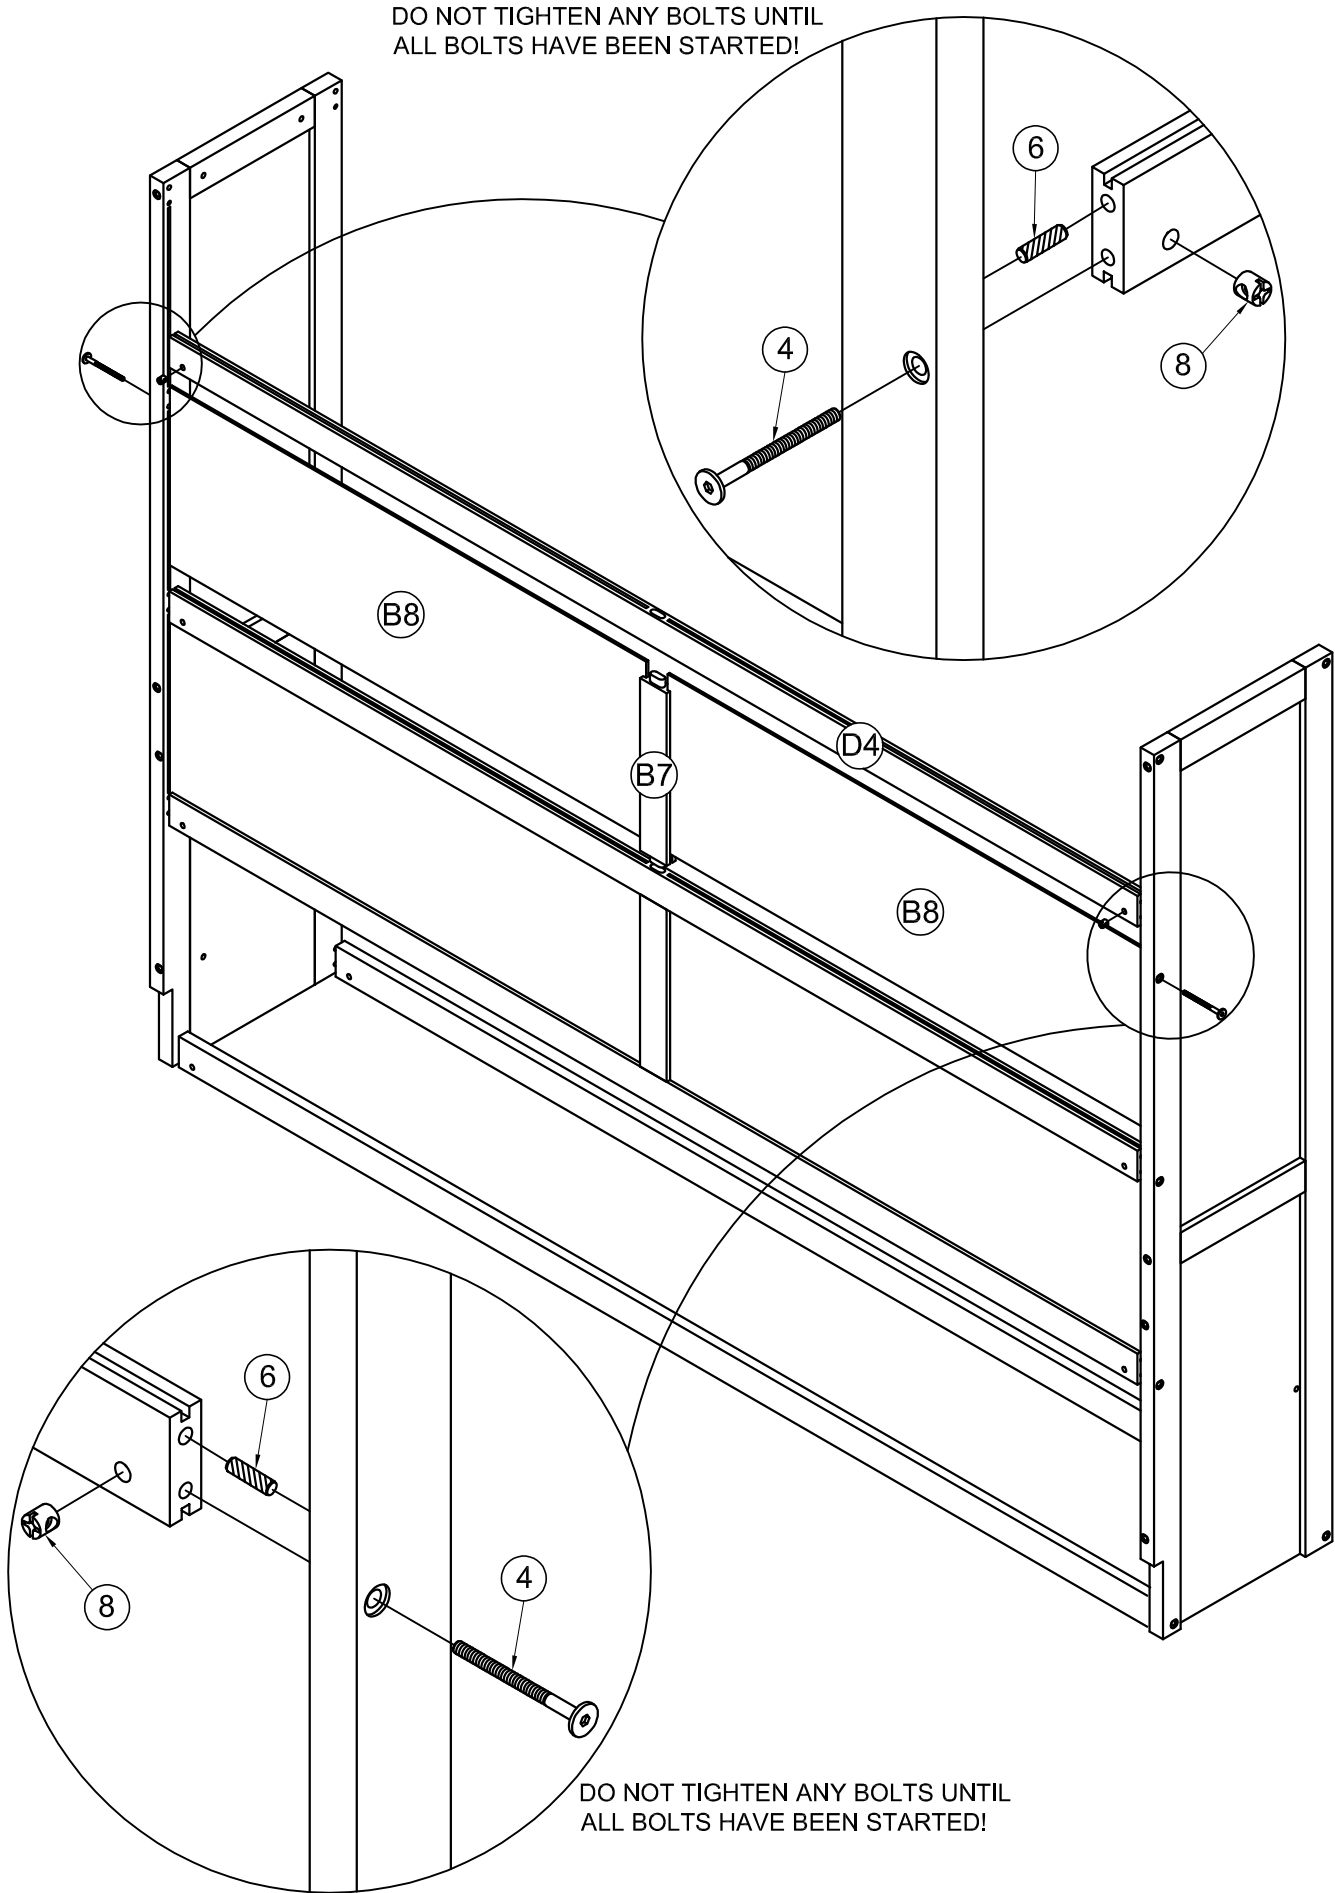

DO NOT TIGHTEN ANY BOLTS UNTIL  
ALL BOLTS HAVE BEEN STARTED!


**STEP6:** Following below illustration.

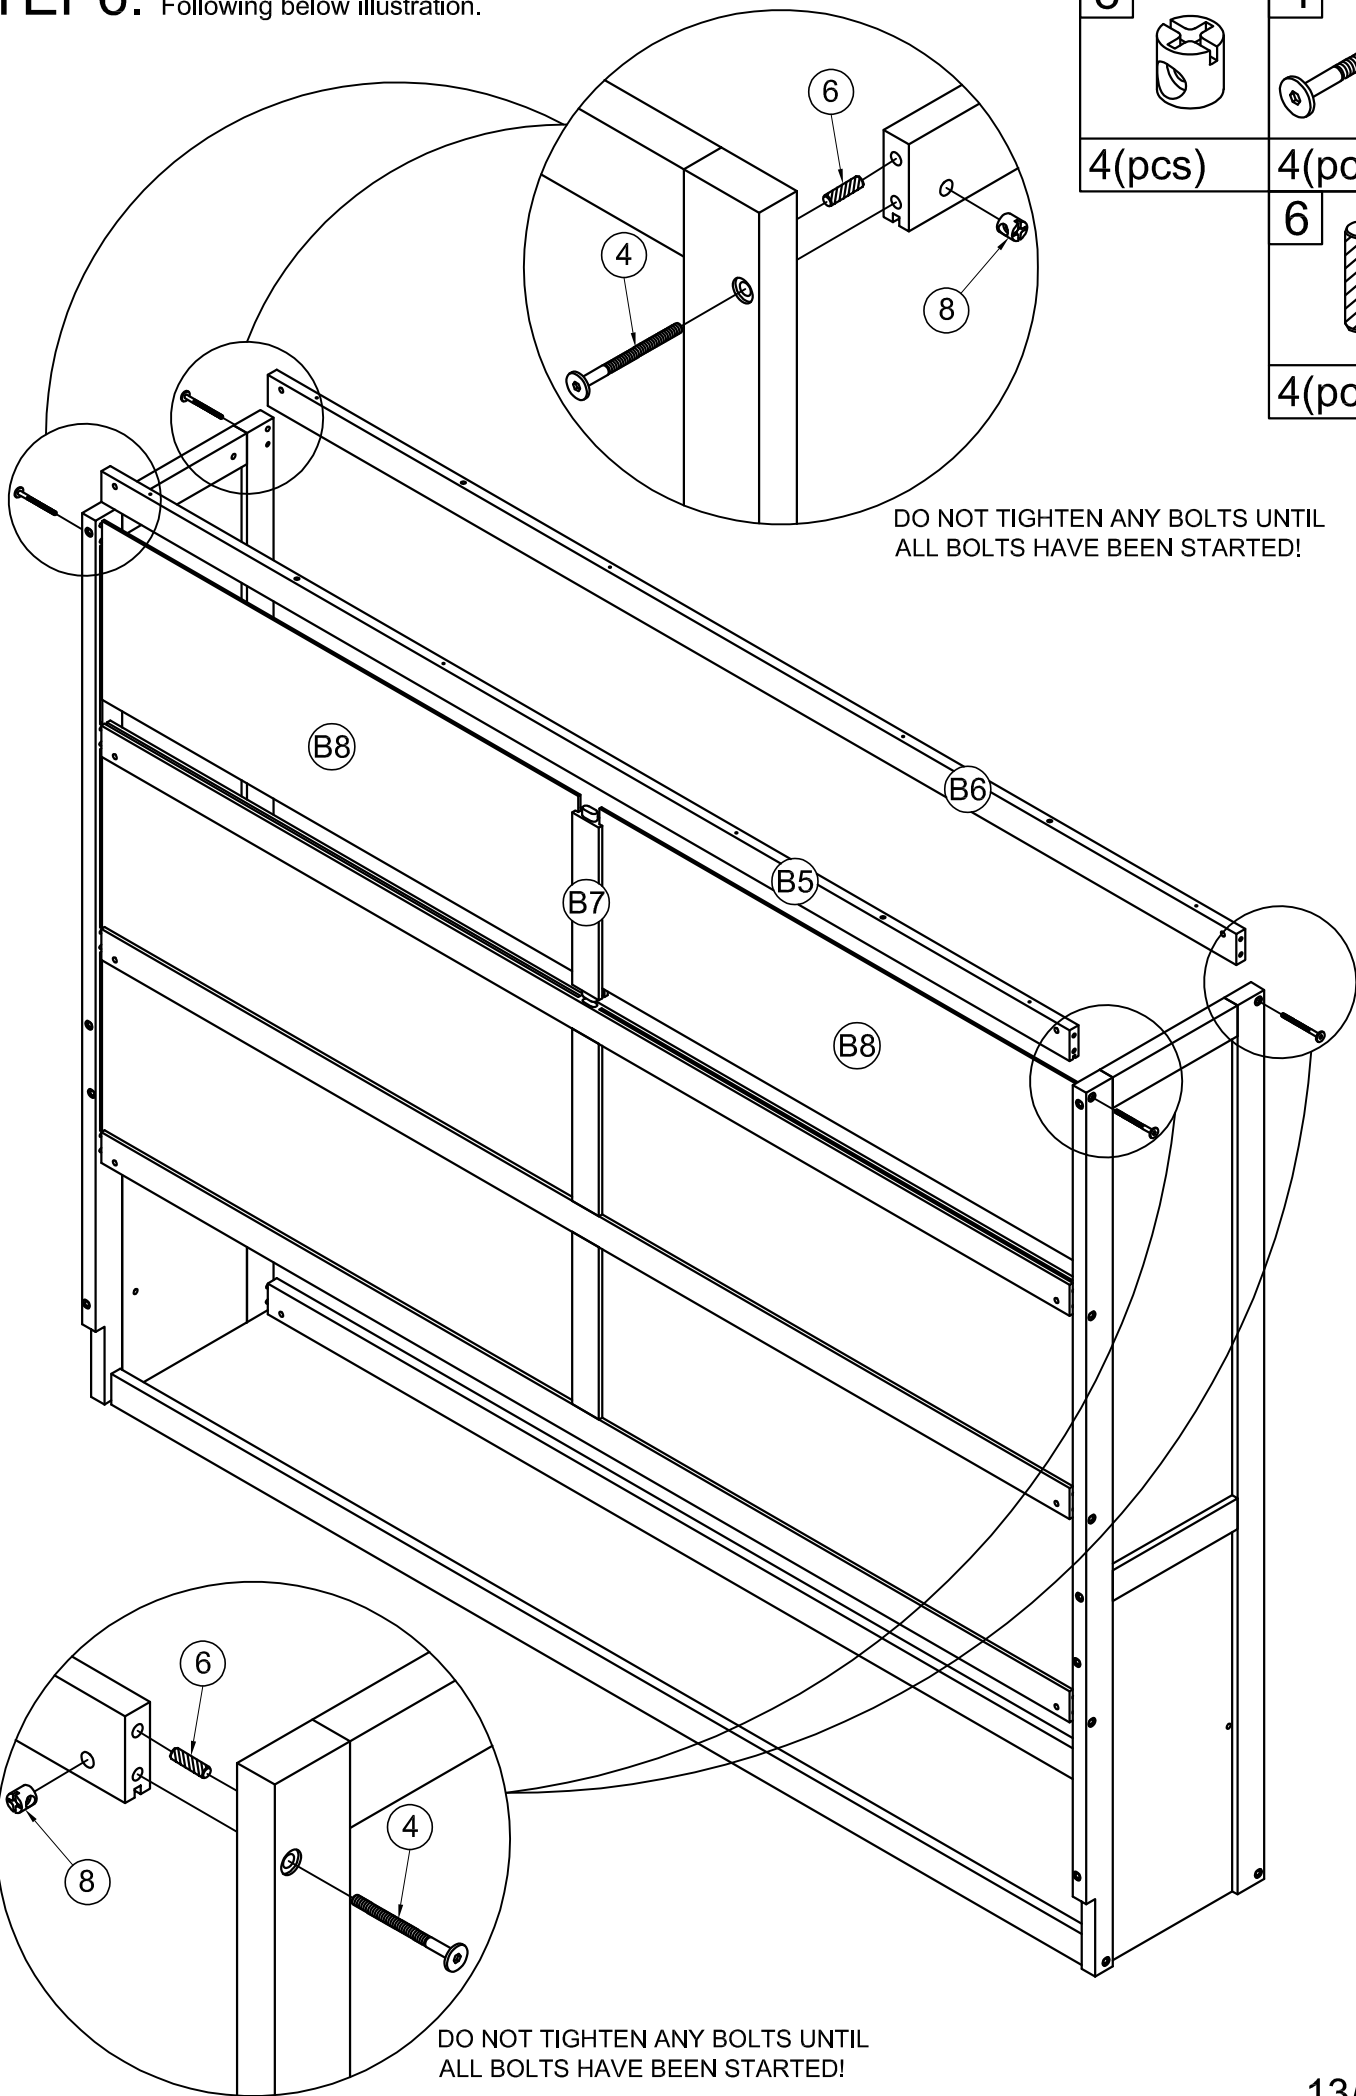





8		4	
4(pcs)		4(pcs)	
		6	
		4(pcs)	

STEP7: Following below illustration.


7




8(pcs)

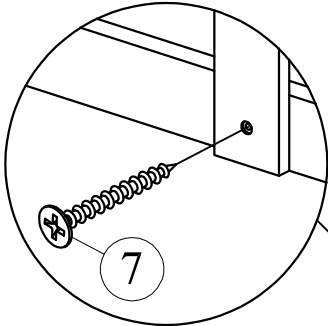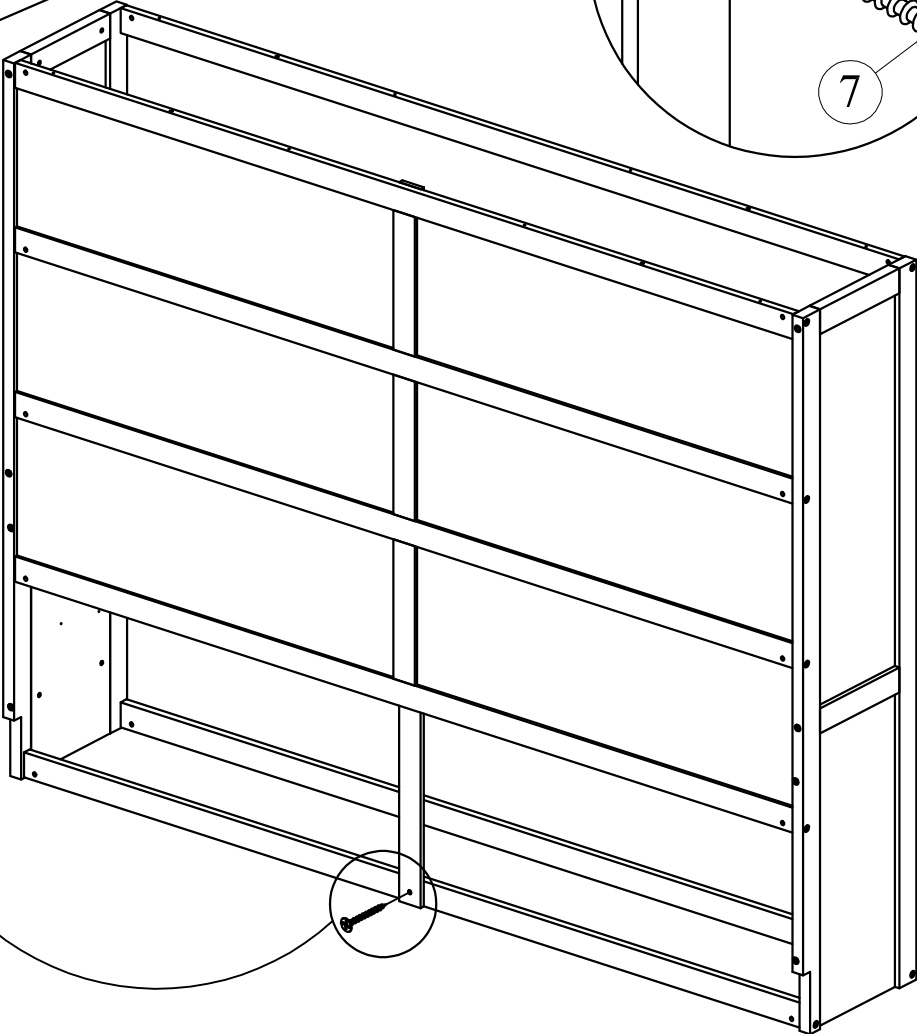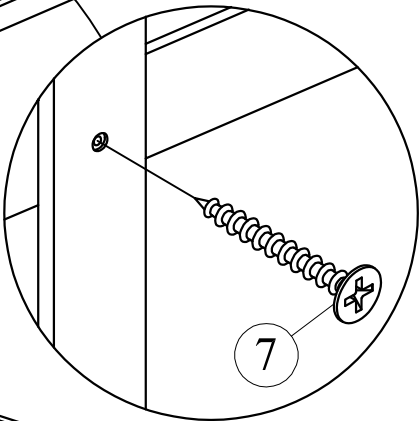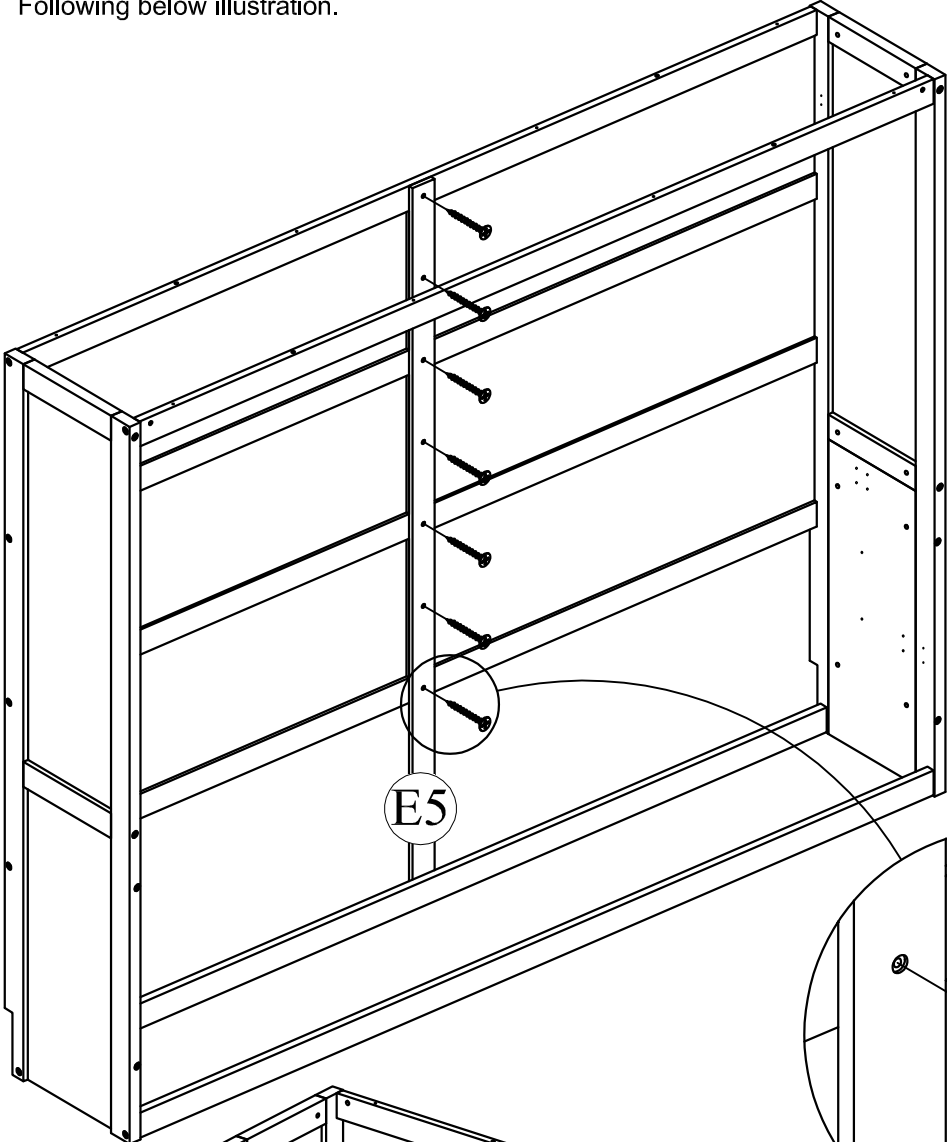


**STEP8:** Following below illustration.

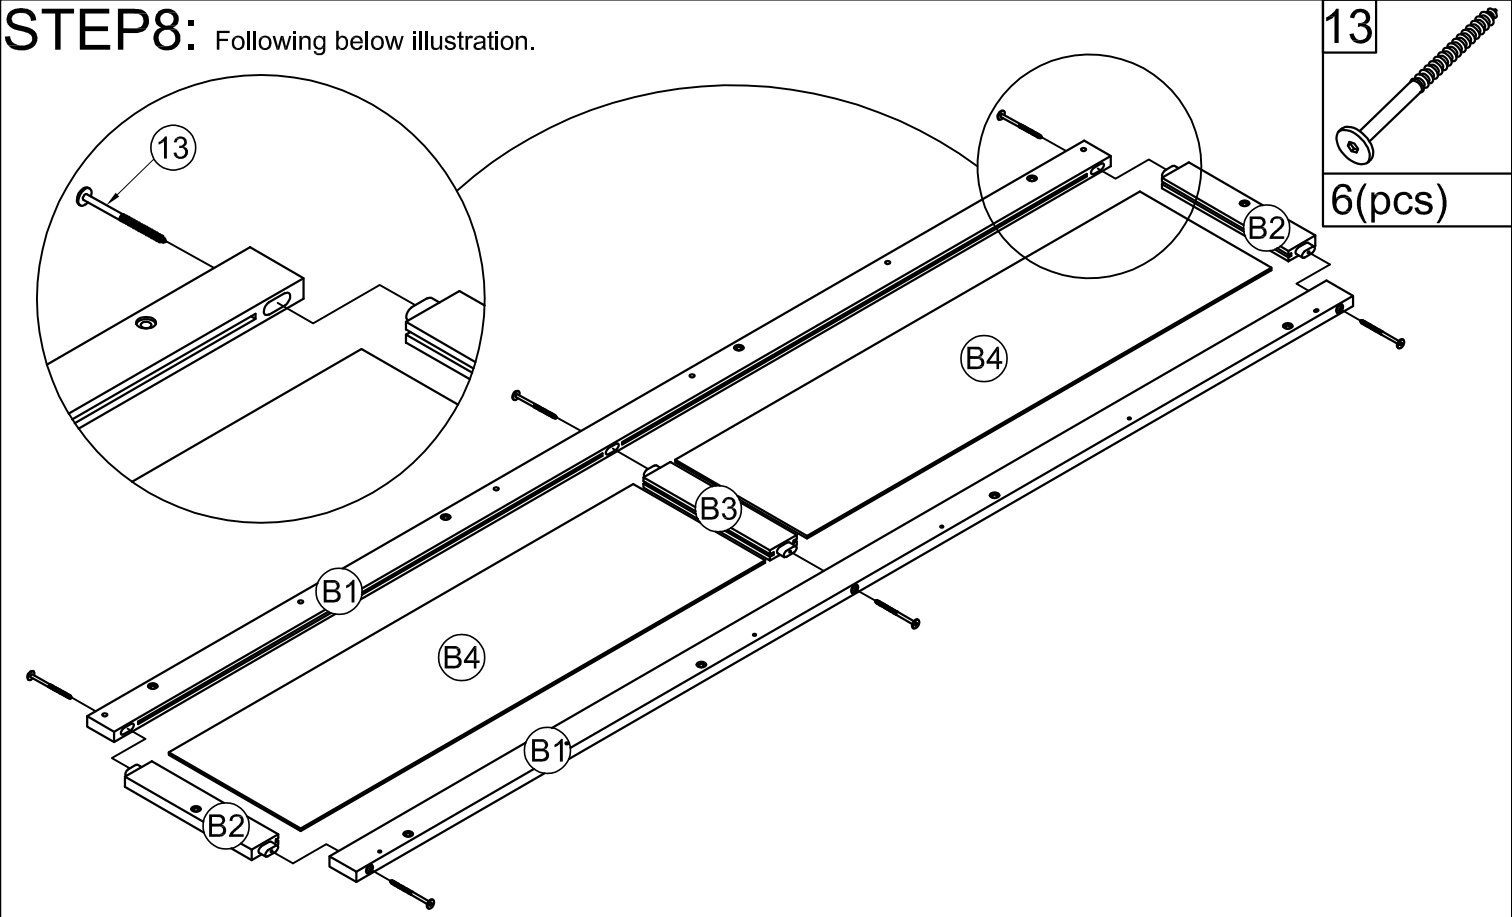


**STEP9:** Following below illustration.

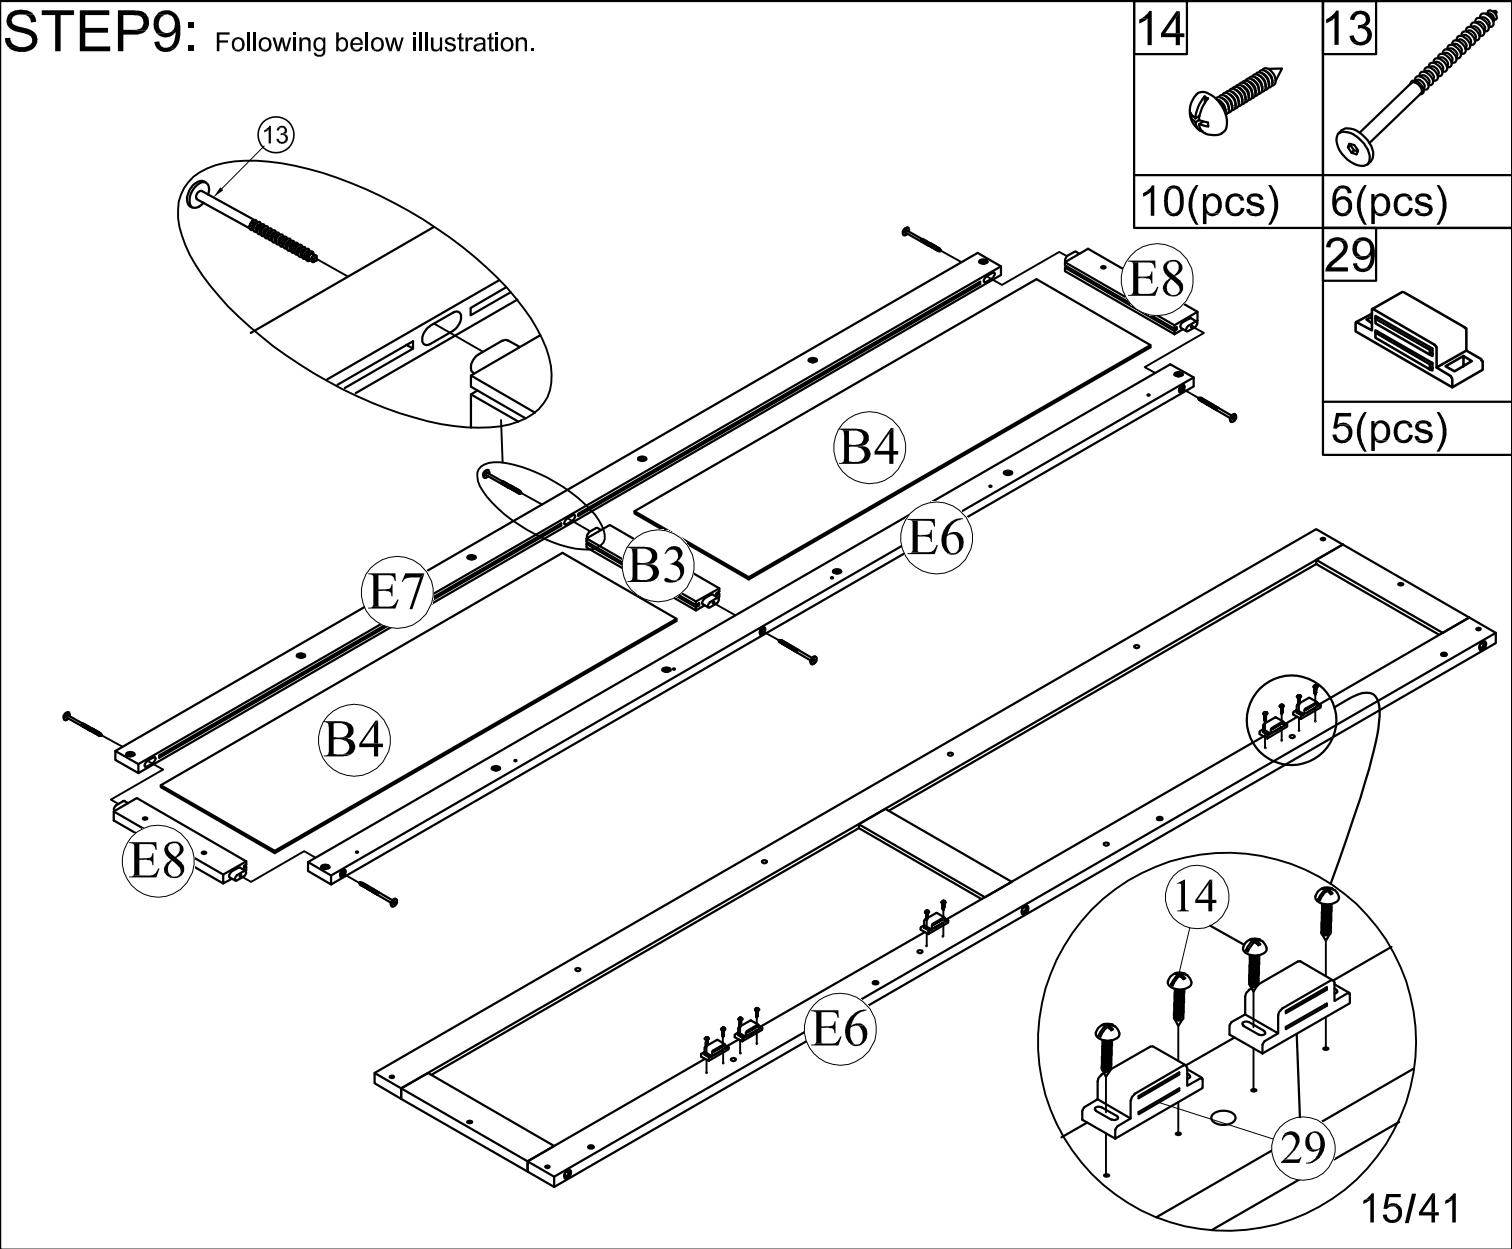

STEP10: Following below illustration.

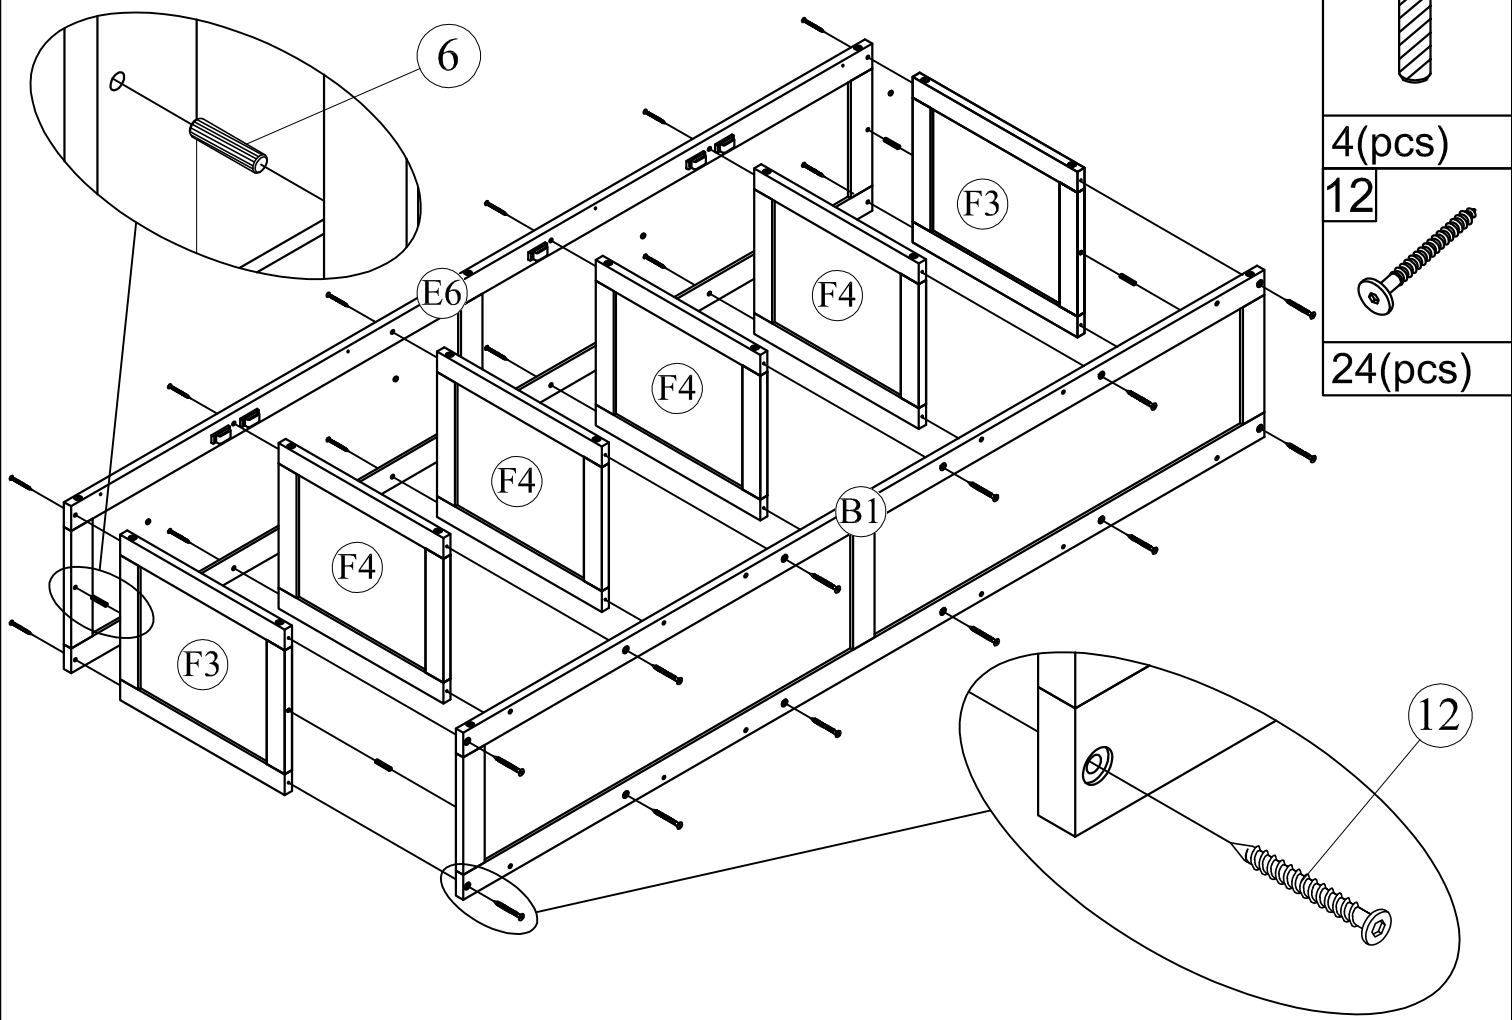


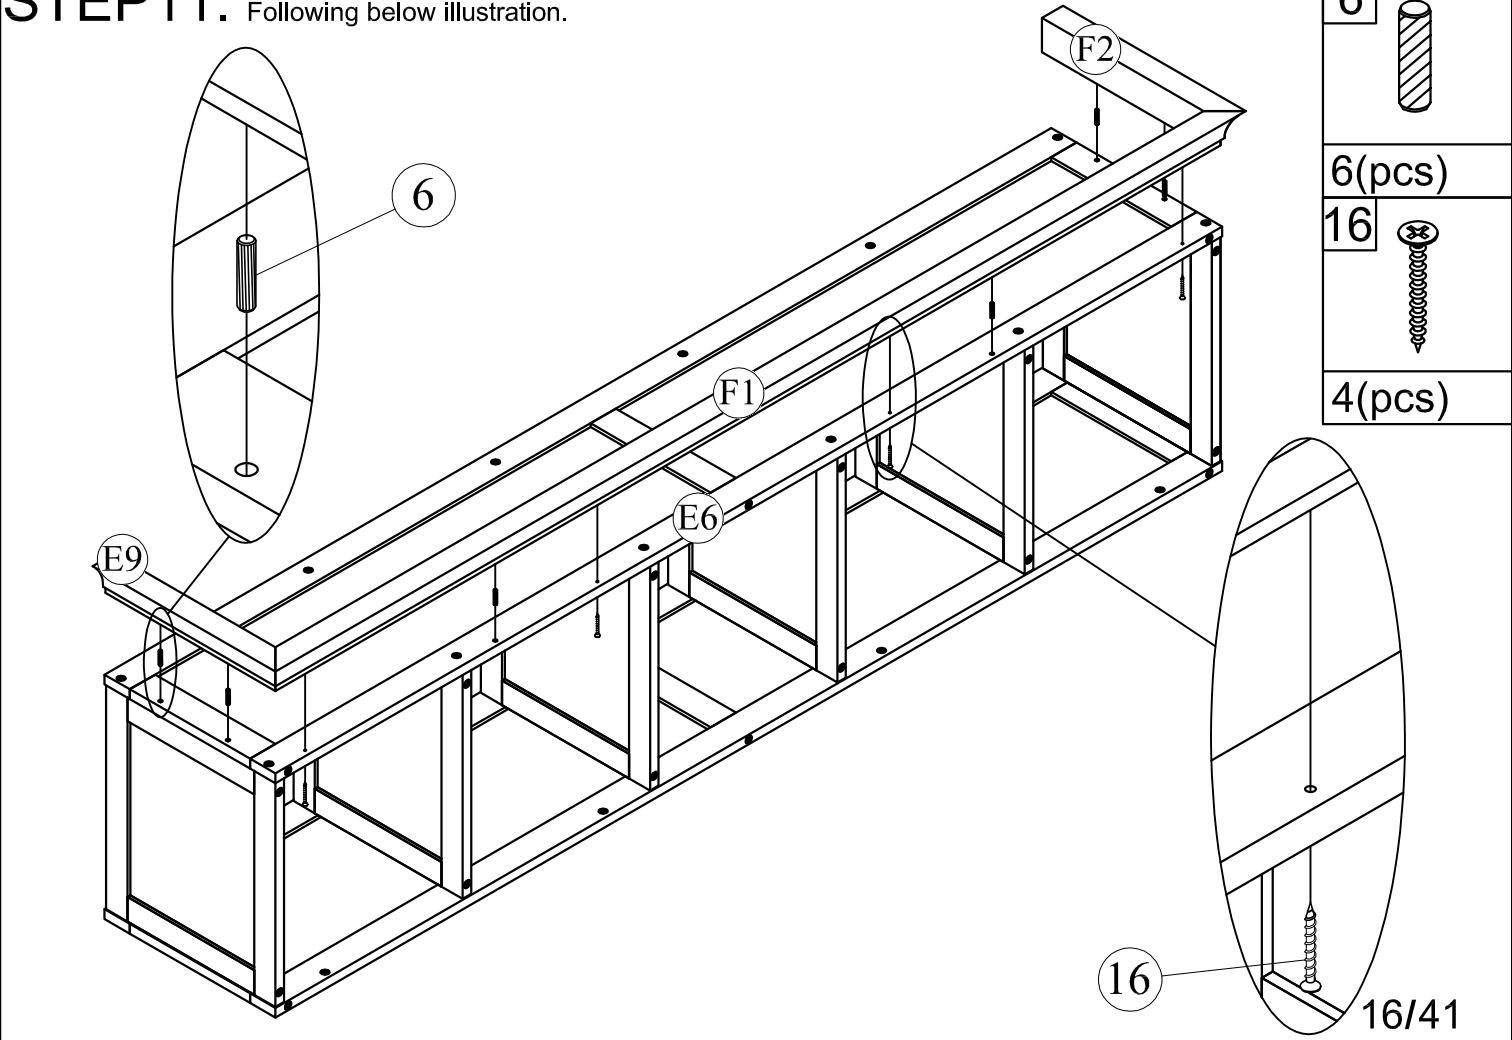

STEP11: Following below illustration.



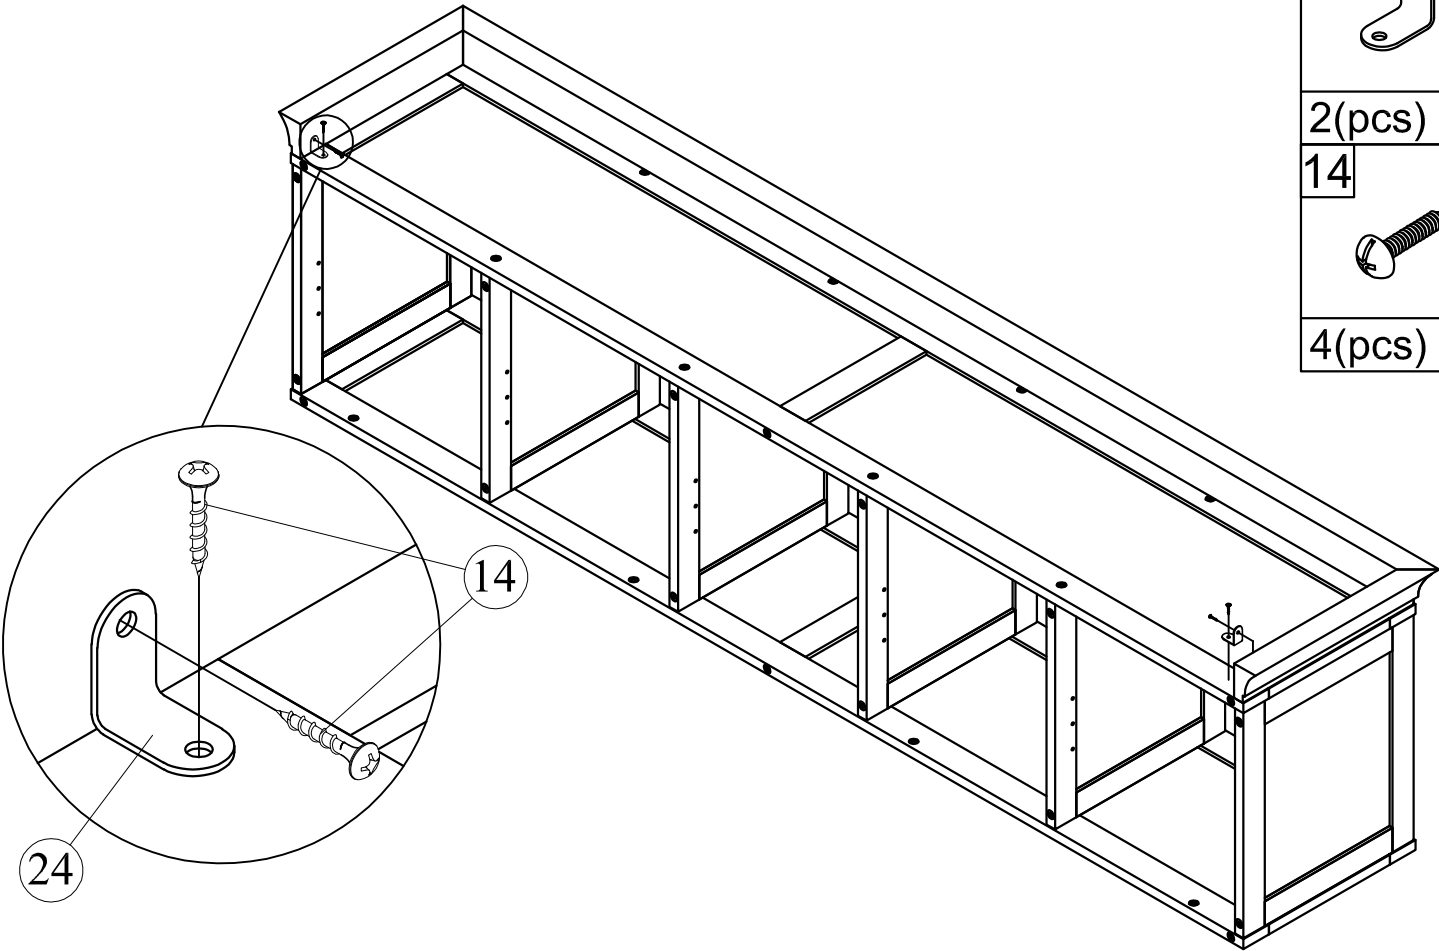




STEP12: Following below illustration.




24	
2(pcs)	
14	
4(pcs)	

STEP13: Following below illustration.

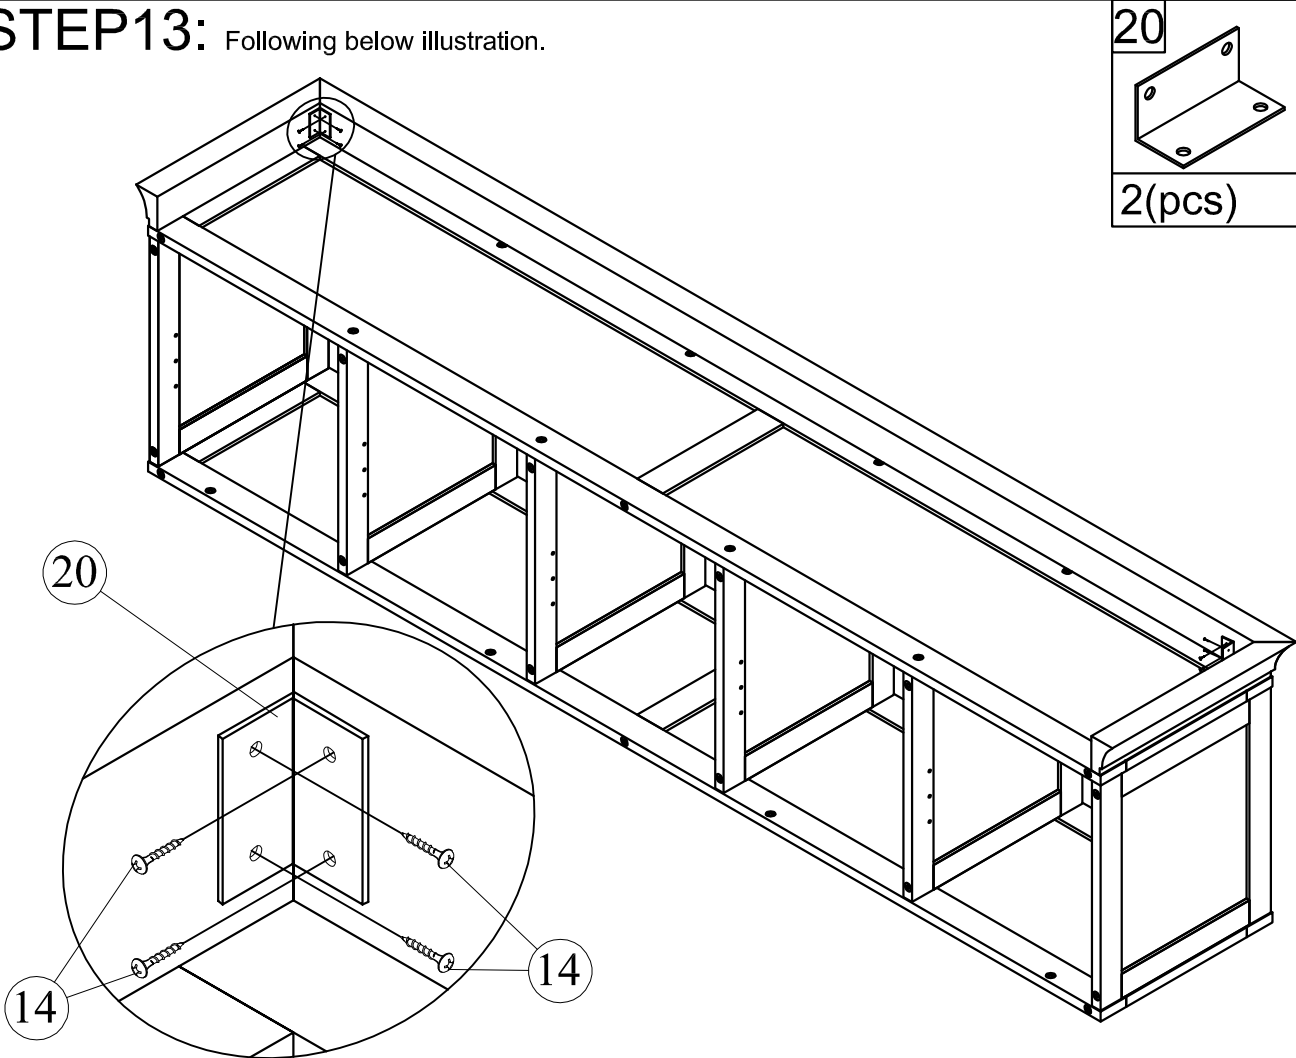

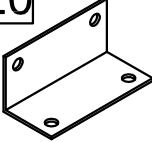20		14	
2(pcs)		8(pcs)	

STEP14: Following below illustration.

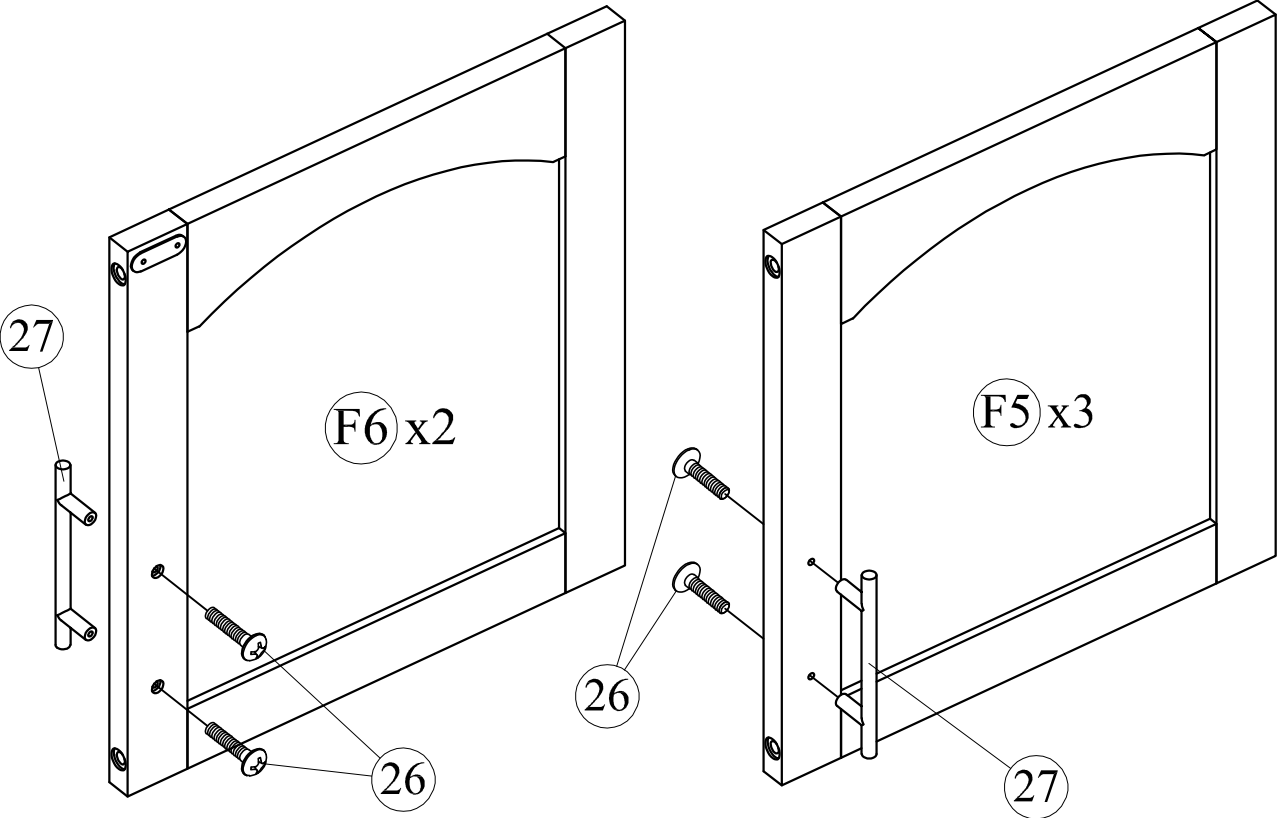


26




10(pcs)

27



5(pcs)

STEP15: Following below illustration.

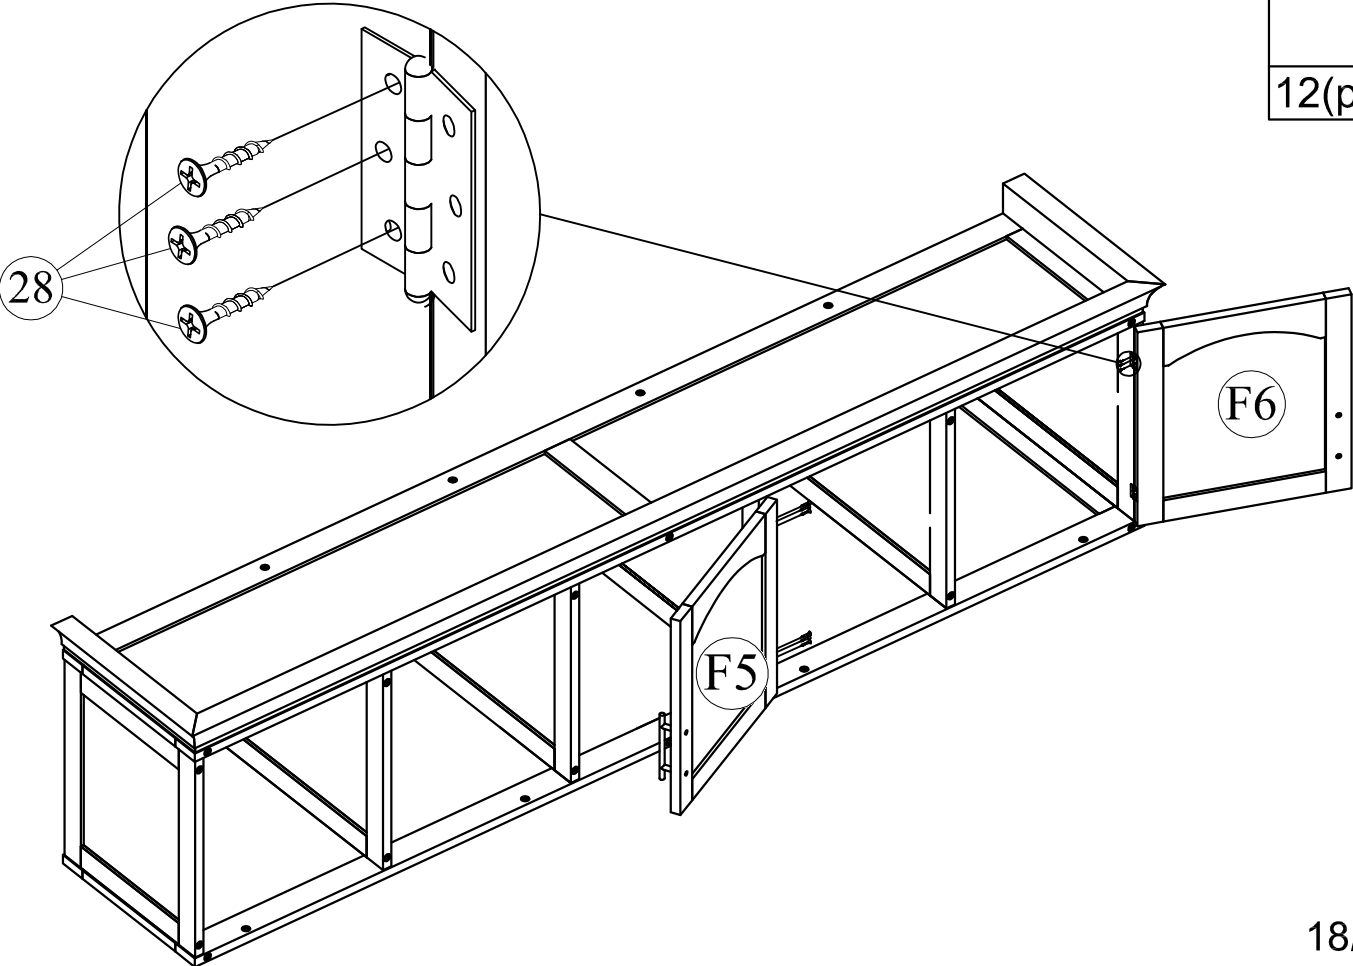


28



12(pcs)

**STEP16:** Following below illustration.

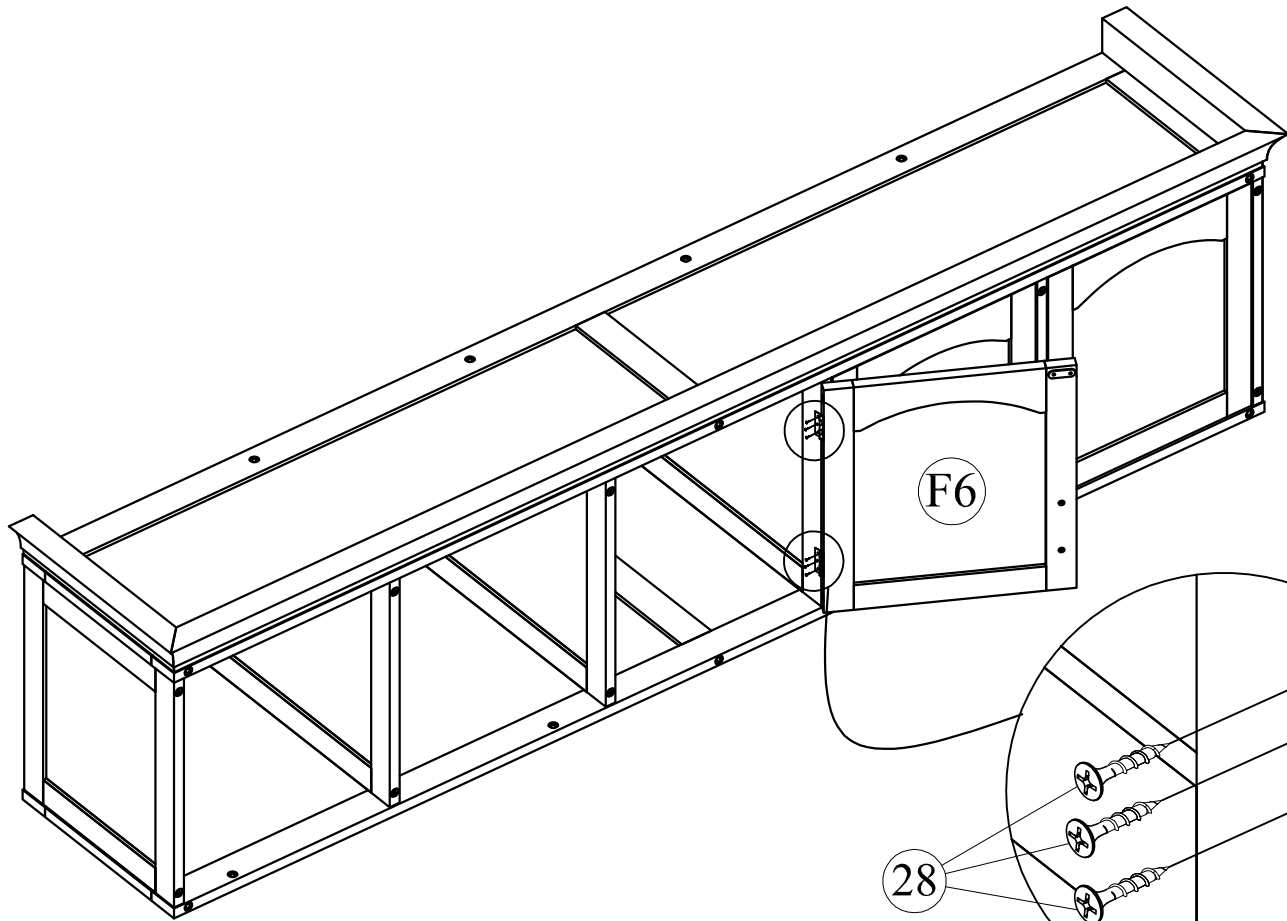


28




6(pcs)

**STEP17:** Following below illustration.

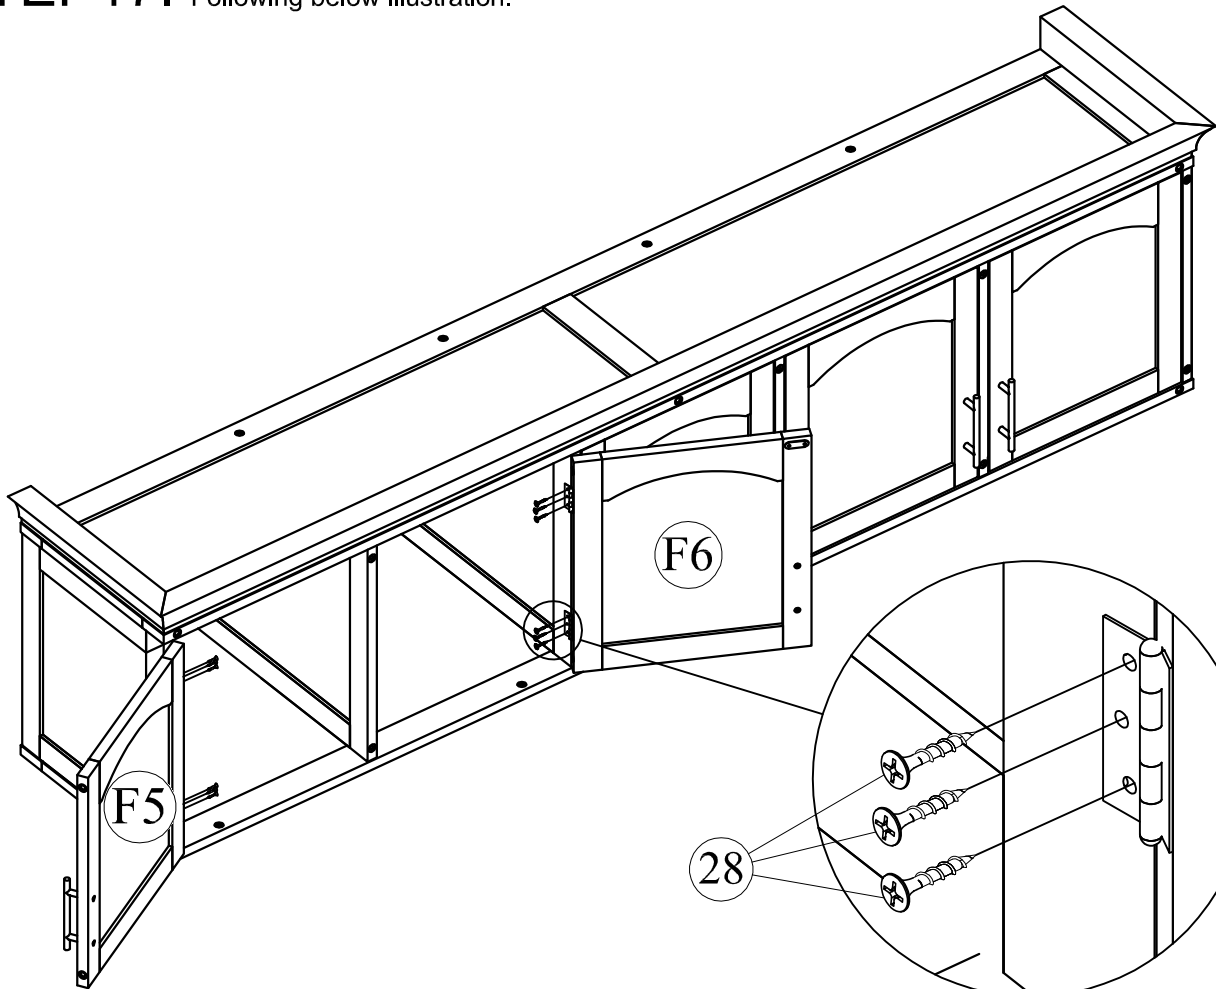



28




12(pcs)



**STEP18:** Following below illustration.

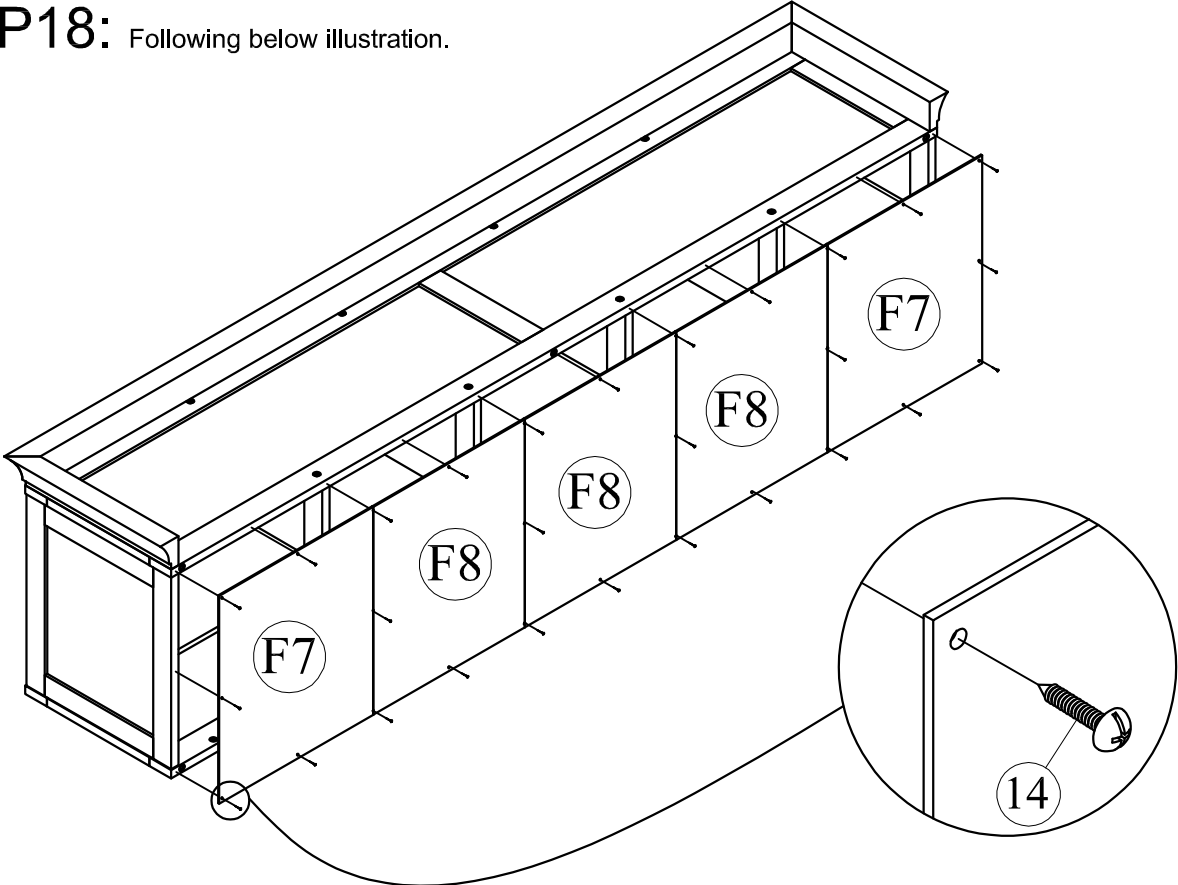

- 14
- 
- 28(pcs)

**STEP19:** Following below illustration.

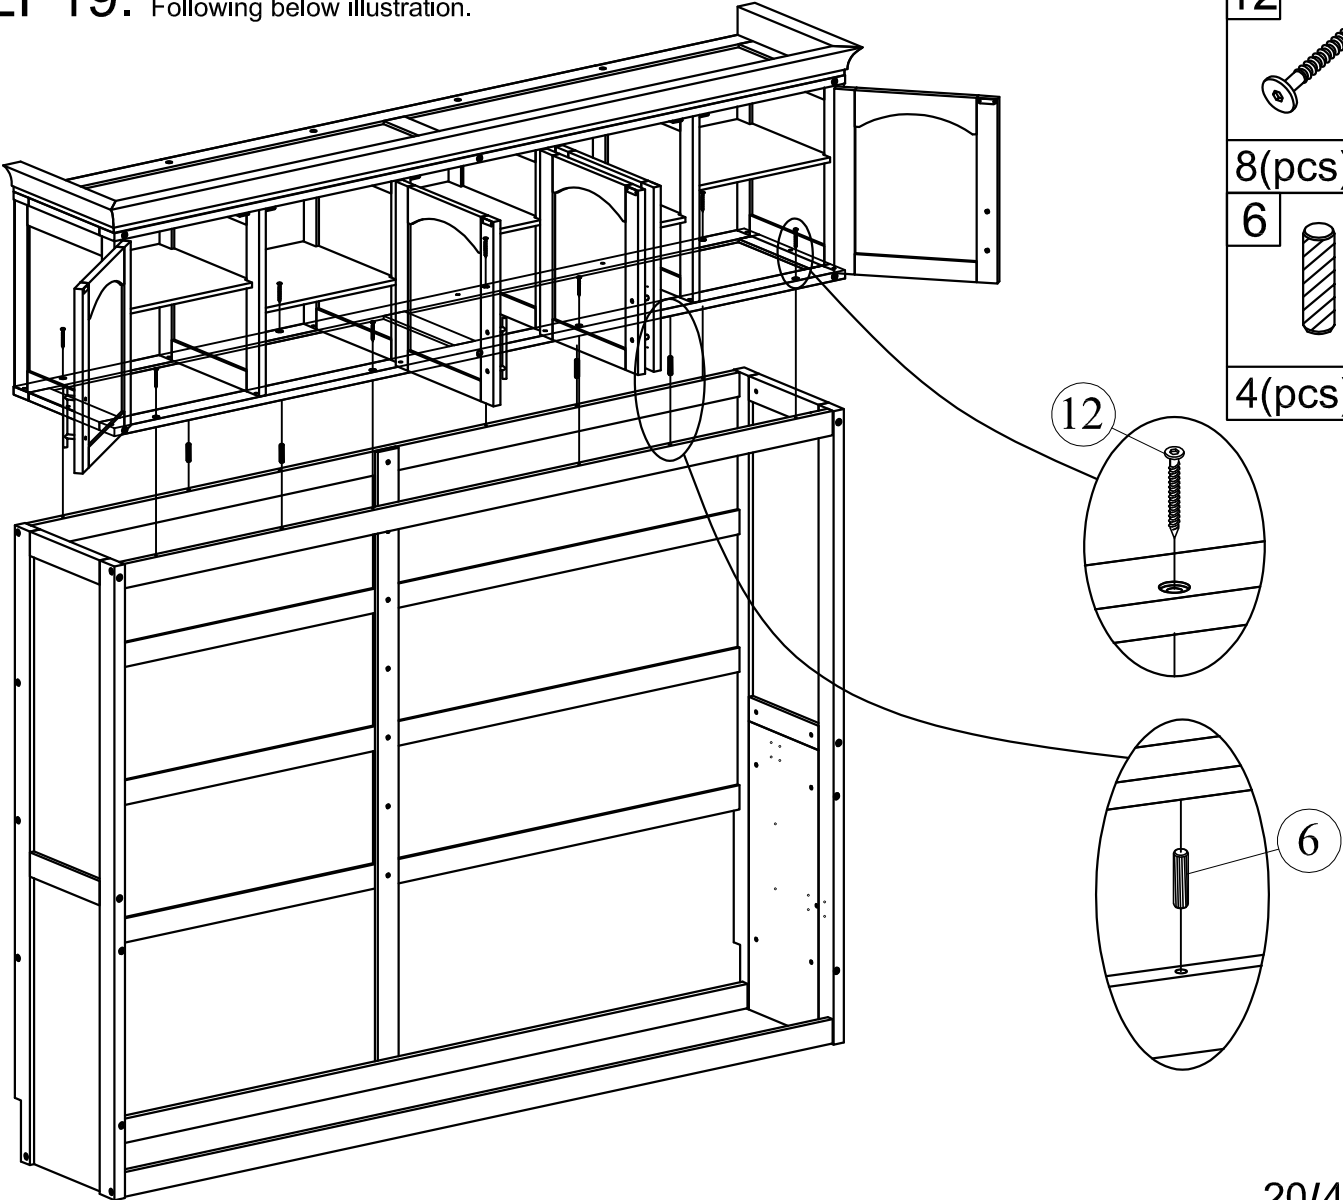


- 12
- 
- 8(pcs)
- 6
- 
- 4(pcs)

STEP20: Following below illustration.


30


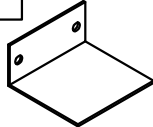






20(pcs)

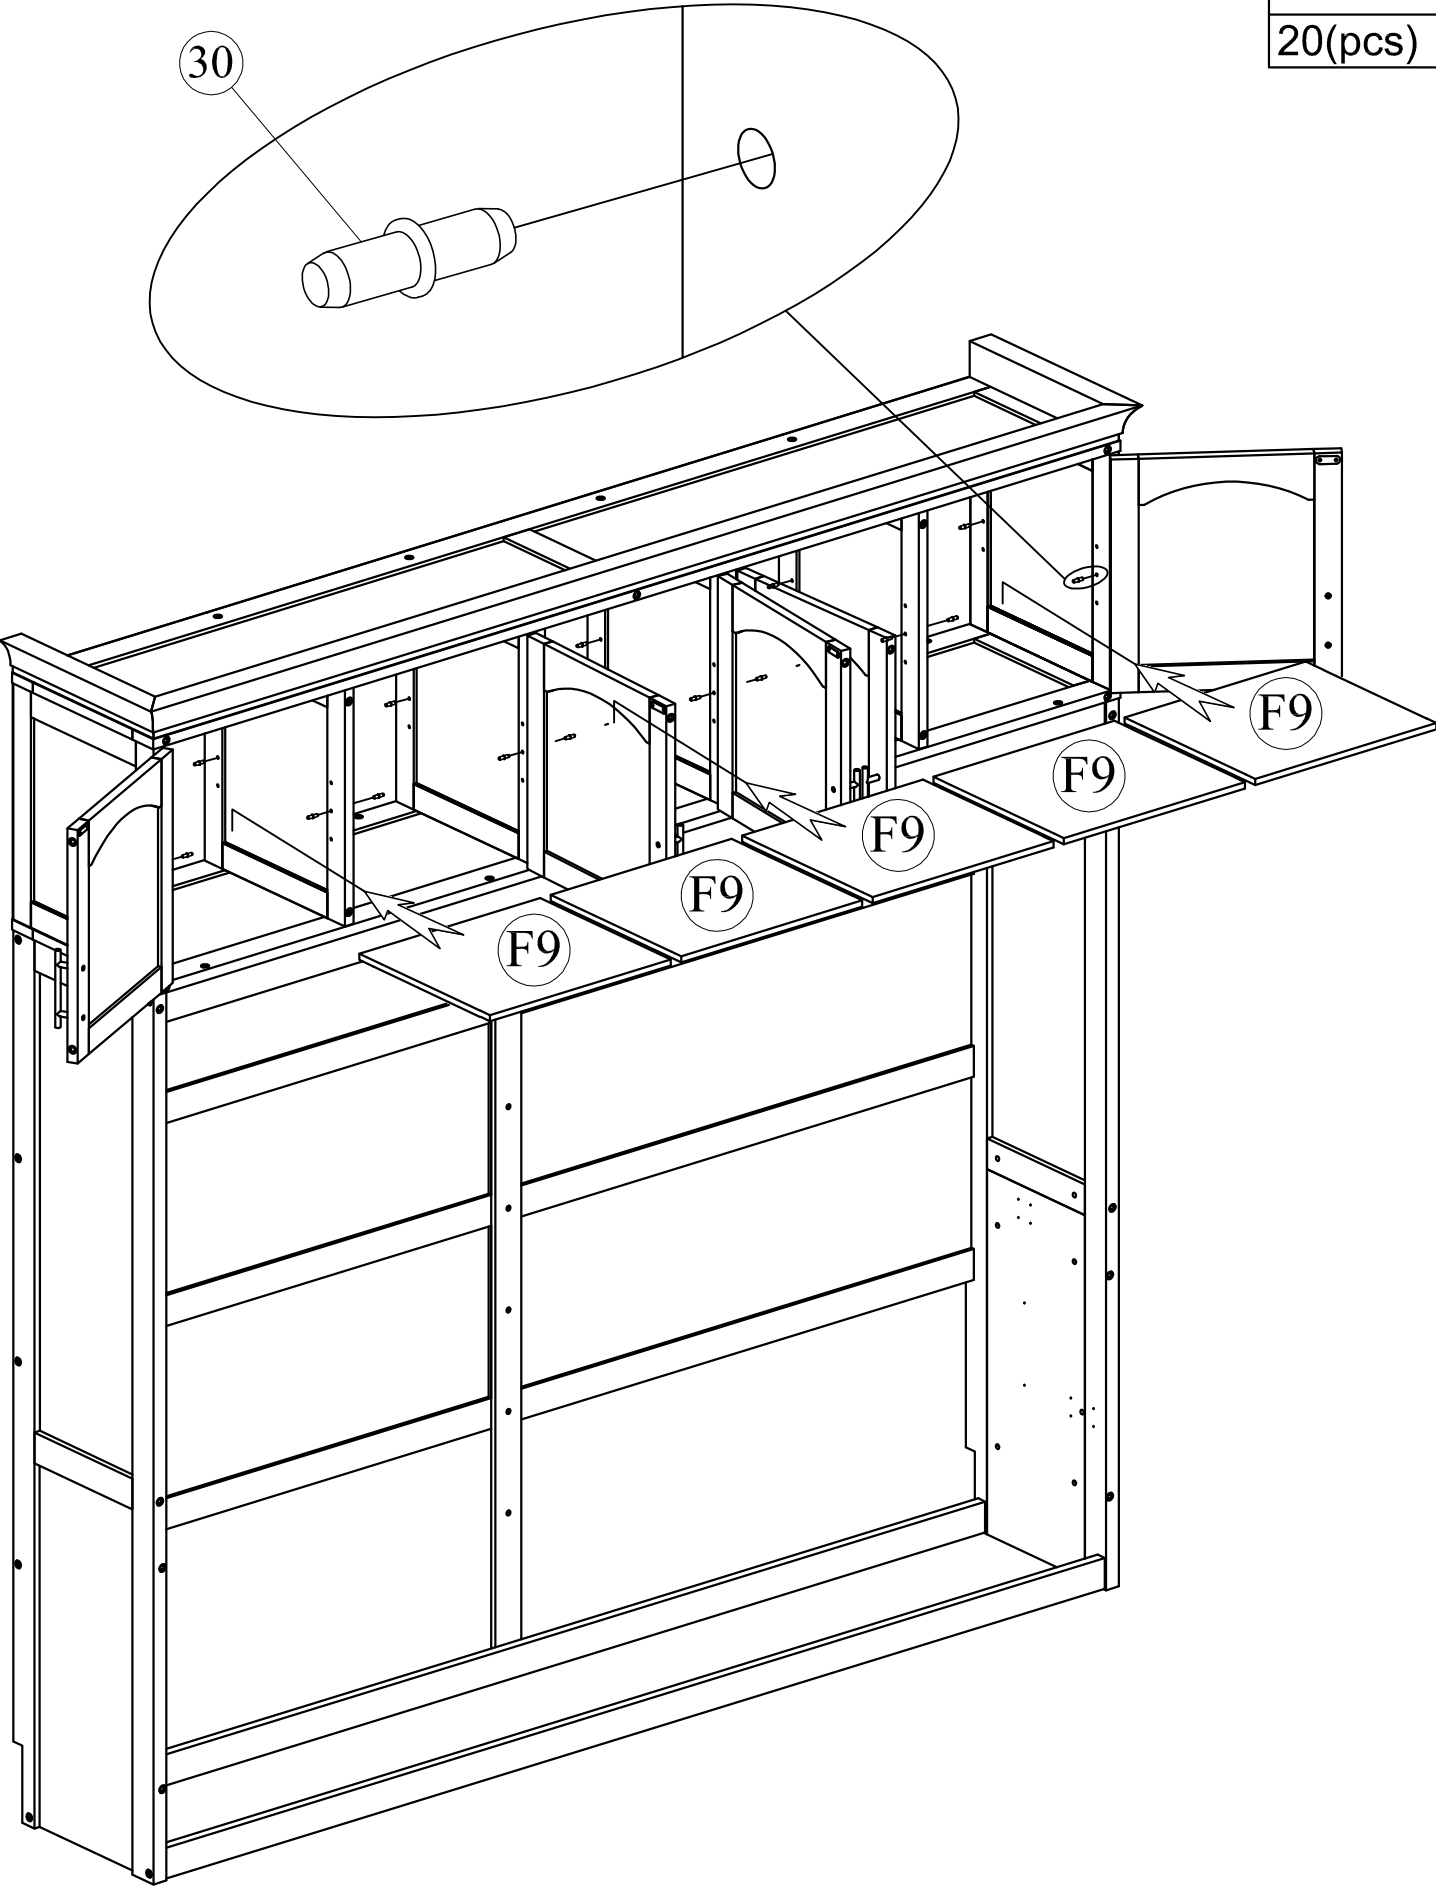


STEP21: Following below illustration.

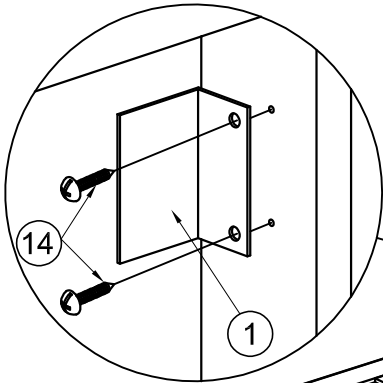

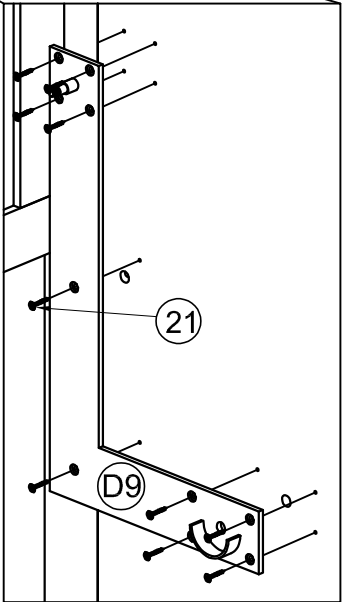
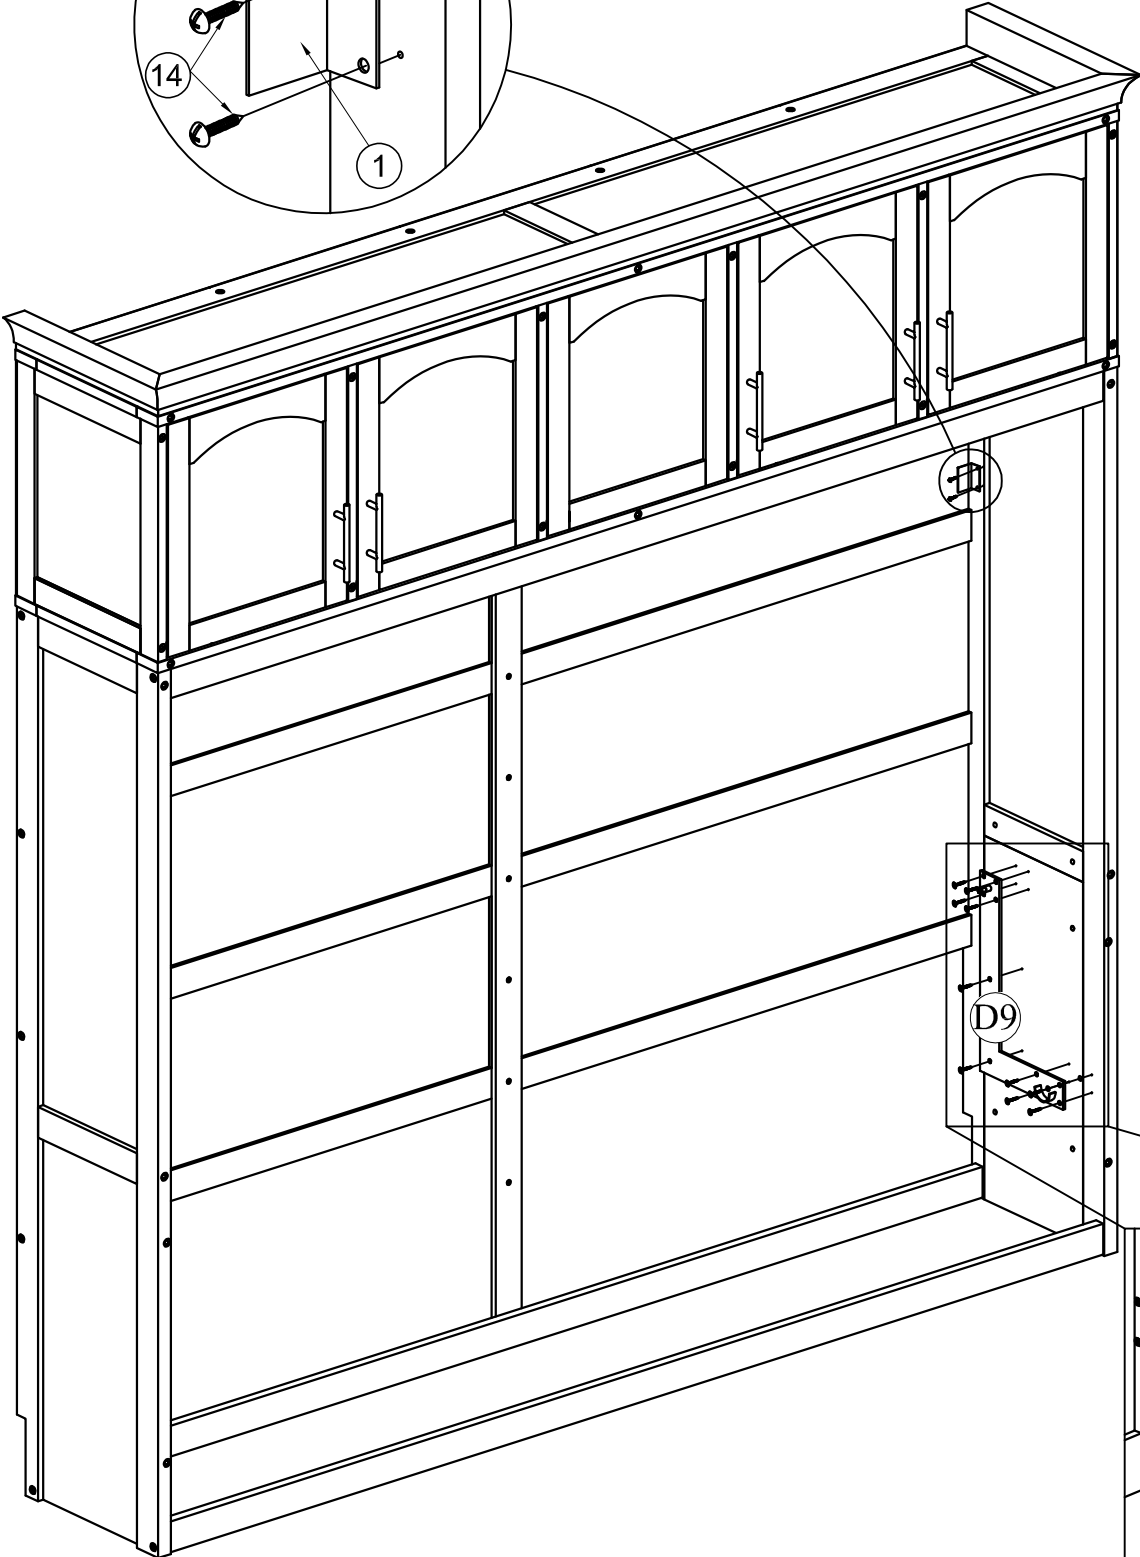


14	1	21
		
2(pcs)	1(pc)	10(pcs)
		D9
		
		1(pc)


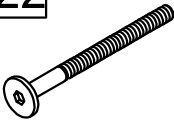


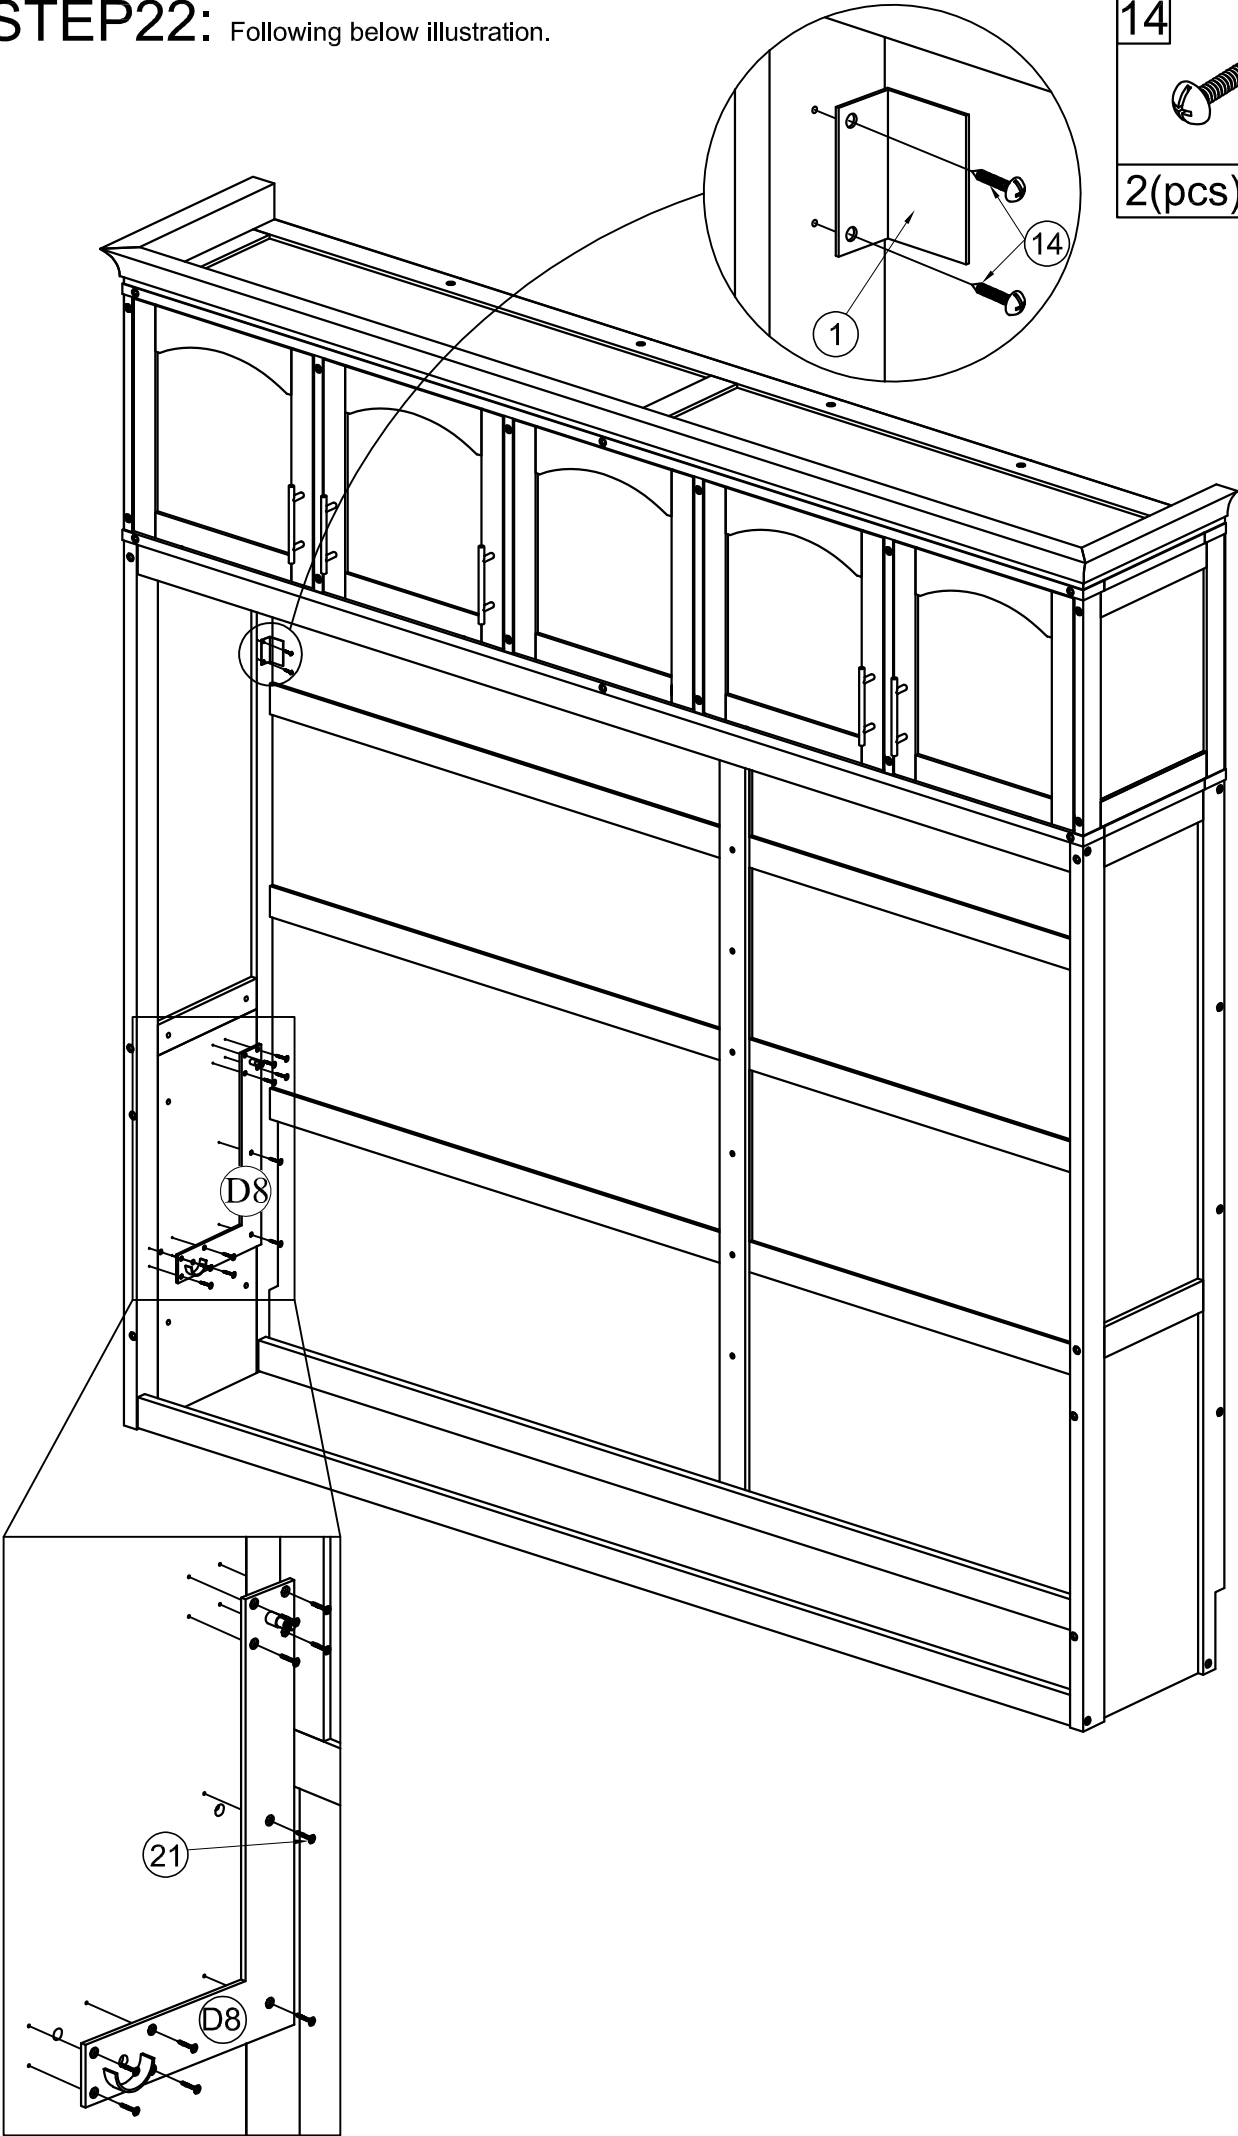
STEP22: Following below illustration.

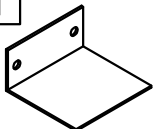


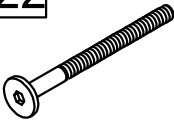
14	21
	
2(pcs)	10(pcs)
	1
	
	1(pc)
	D8
	
	1(pc)


STEP23: Following below illustration.

8		22	
1(pc)		1(pc)	

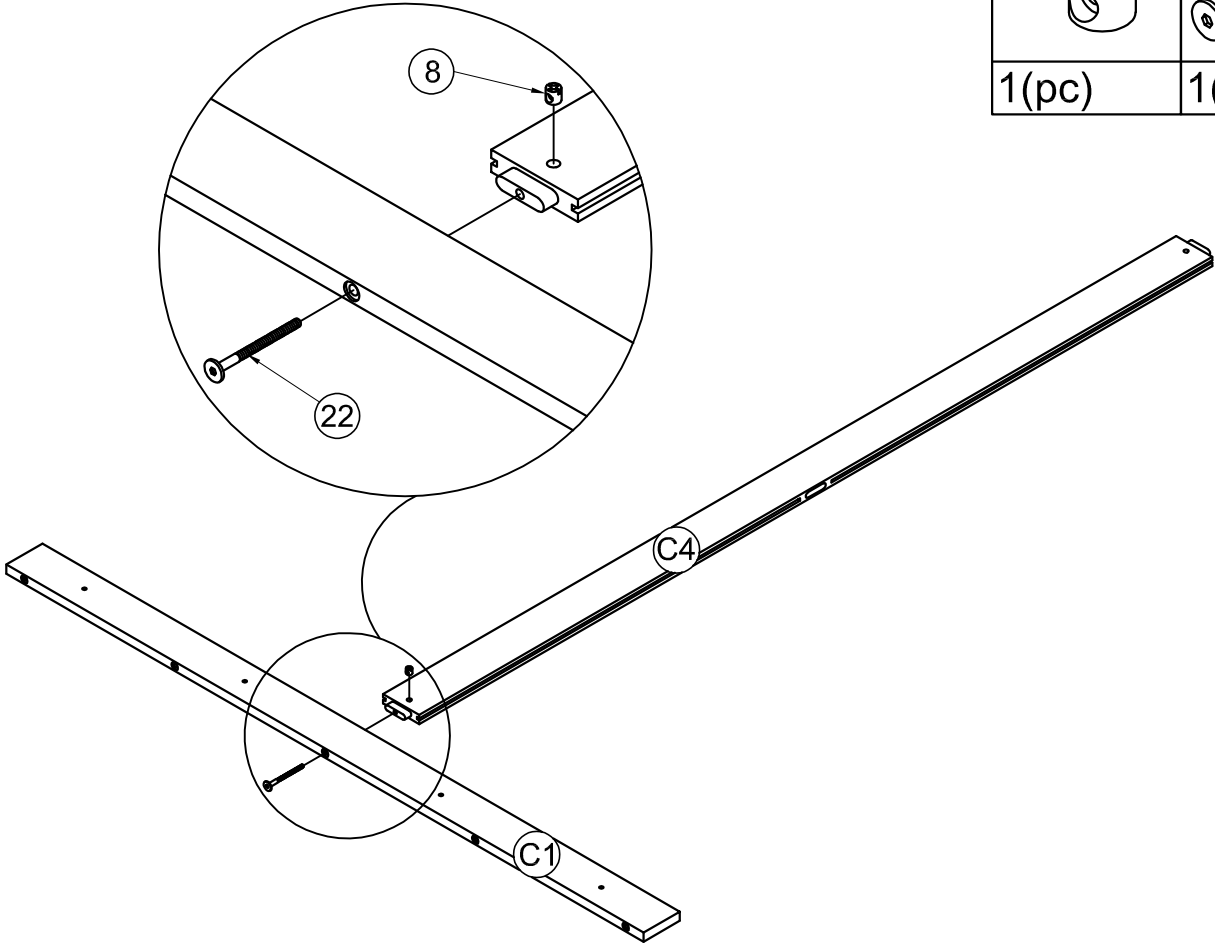


STEP24: Following below illustration.

8		22	
2(pcs)		2(pcs)	

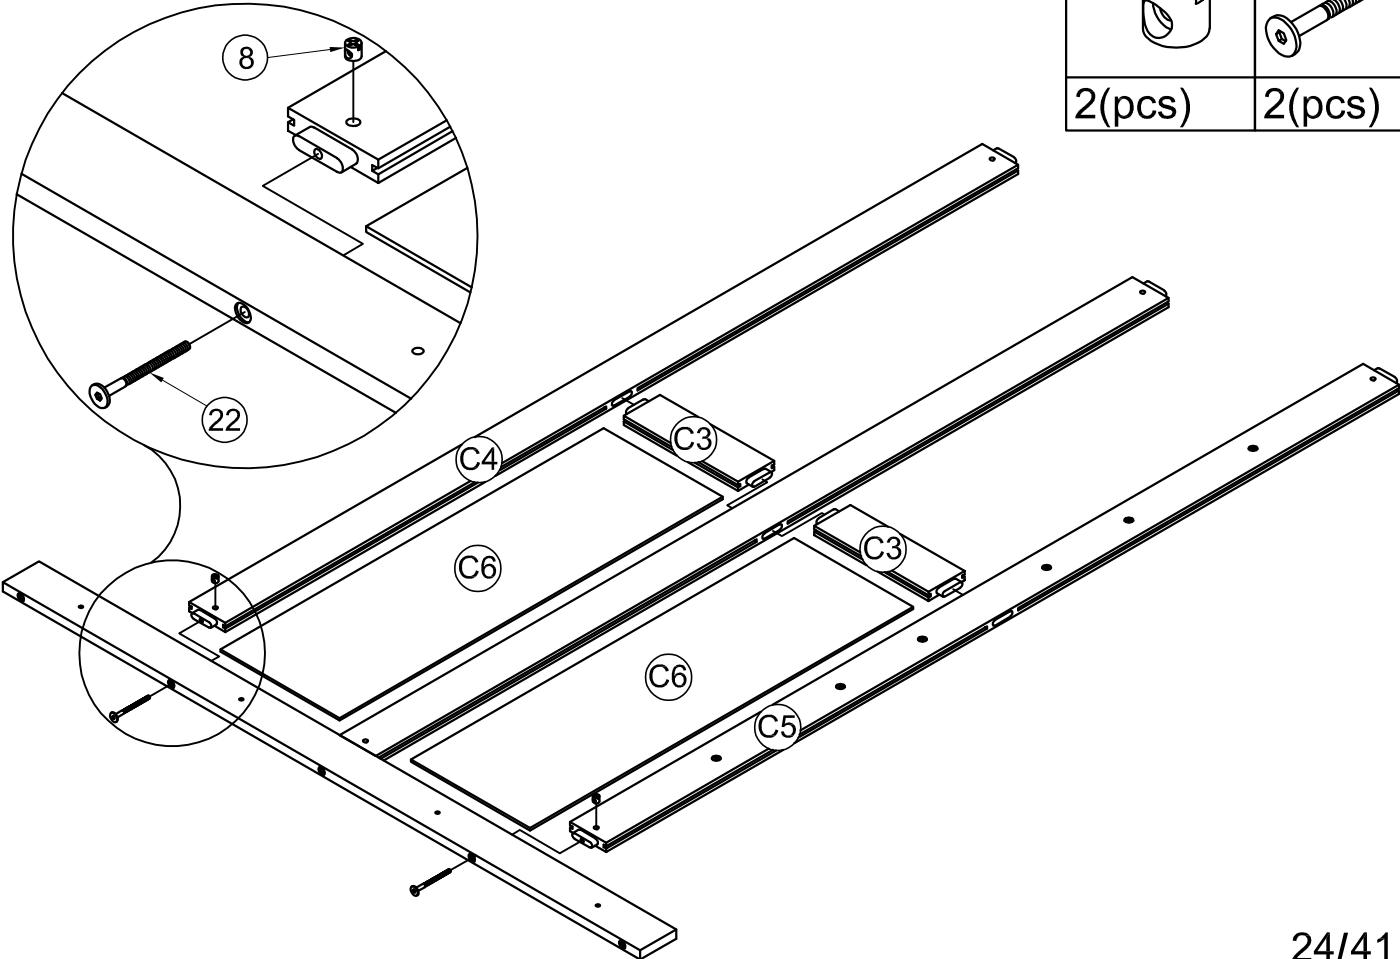




STEP25: Following below illustration.

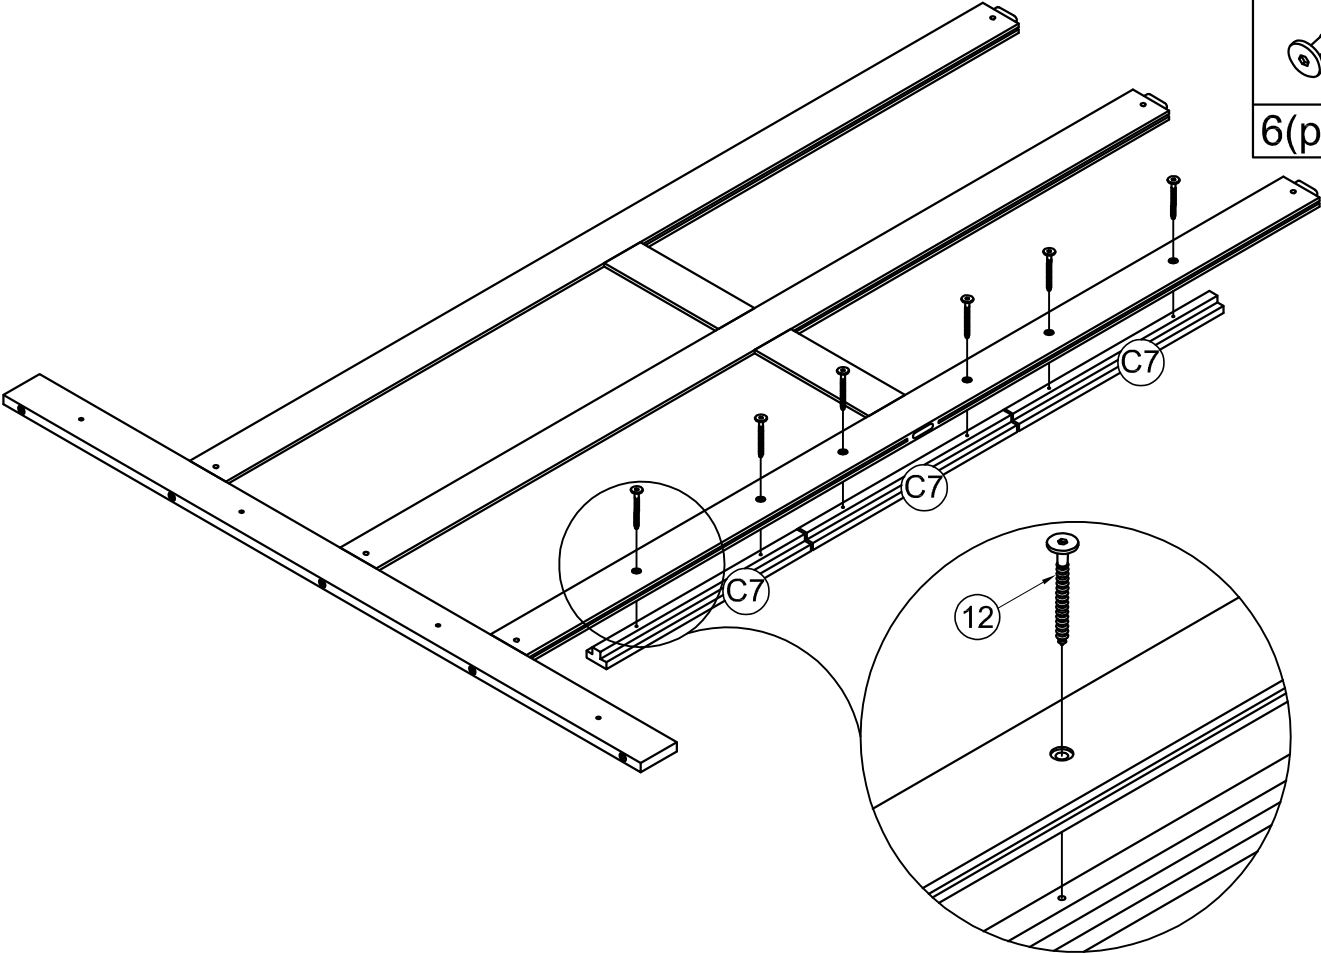


12



6(pcs)

STEP26: Following below illustration.

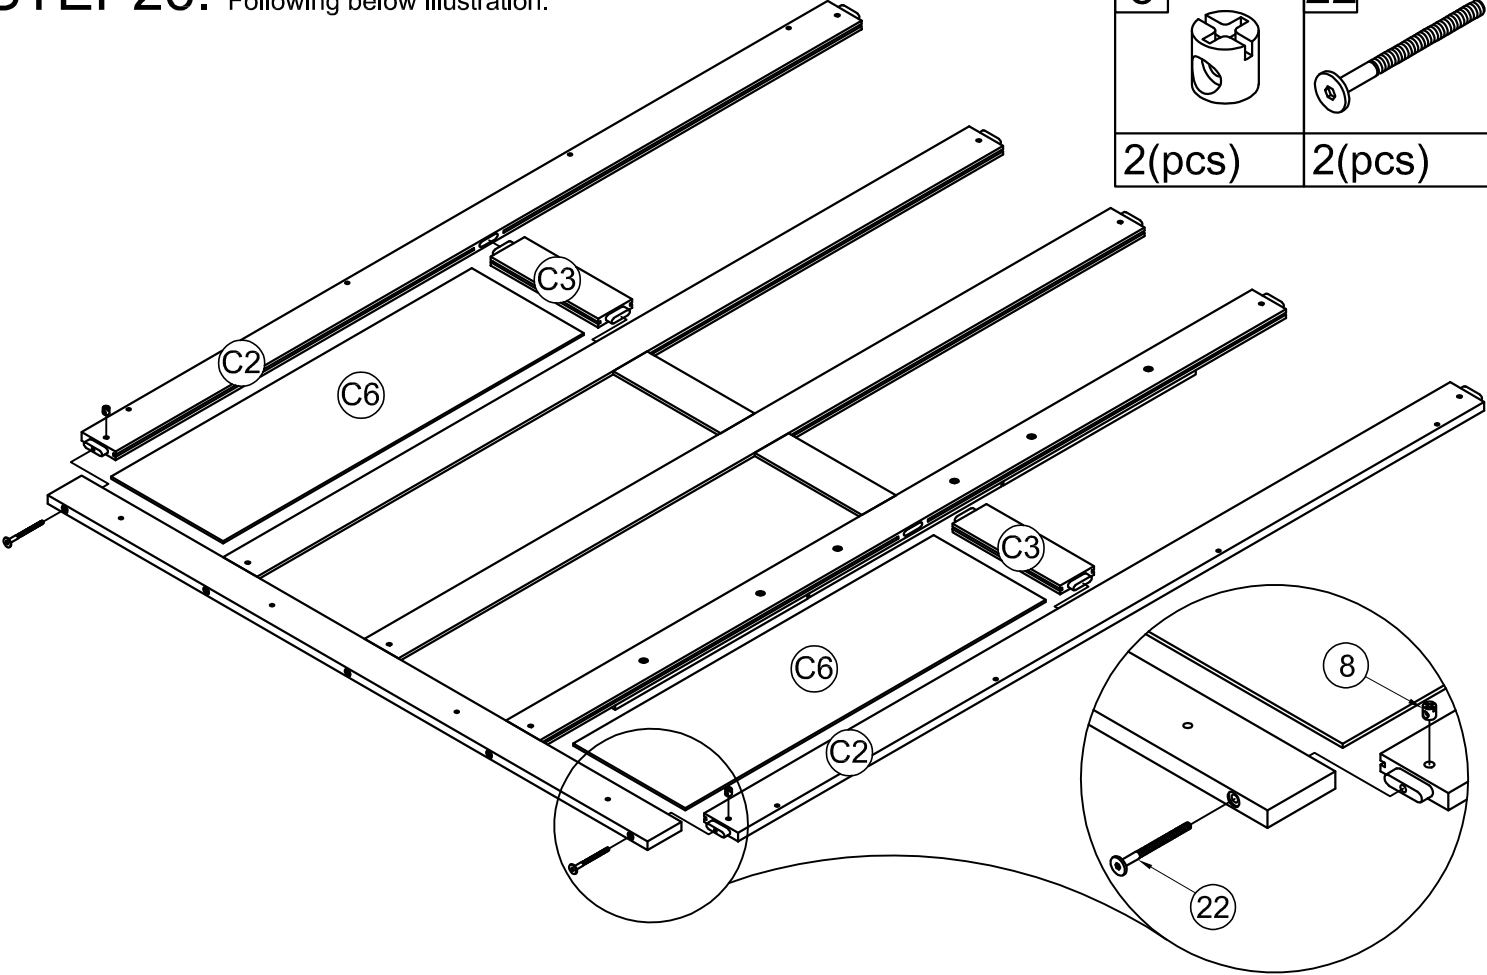


8




2(pcs)

22




2(pcs)


STEP27: Following below illustration.

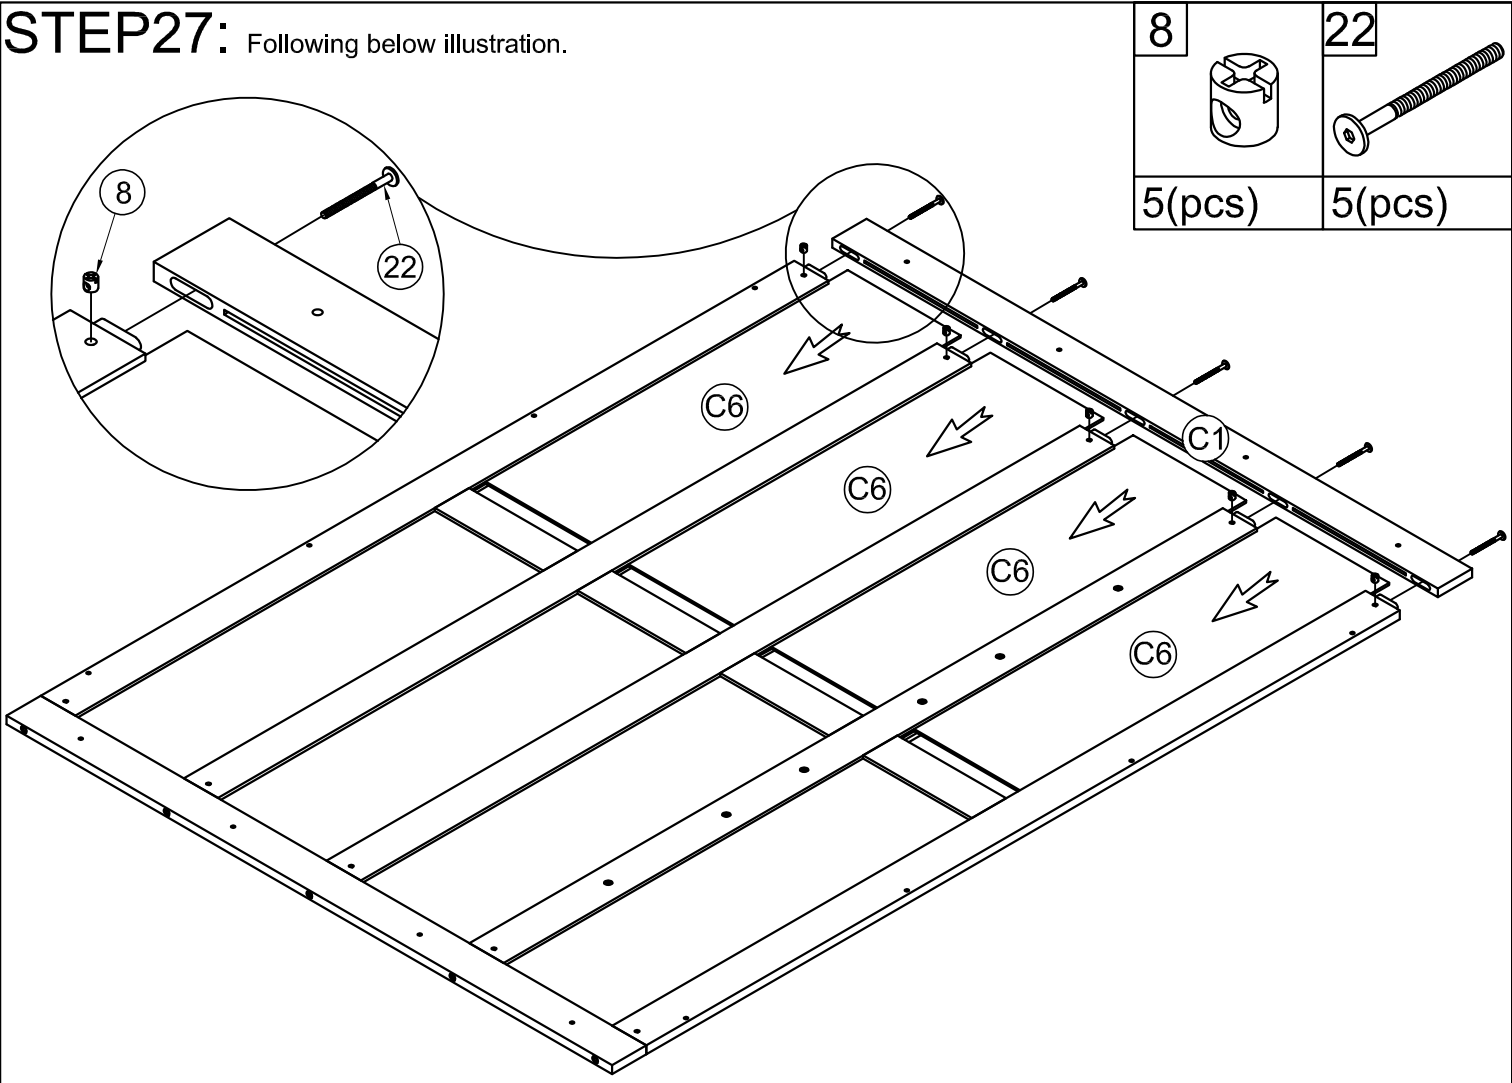


STEP28: Following below illustration.

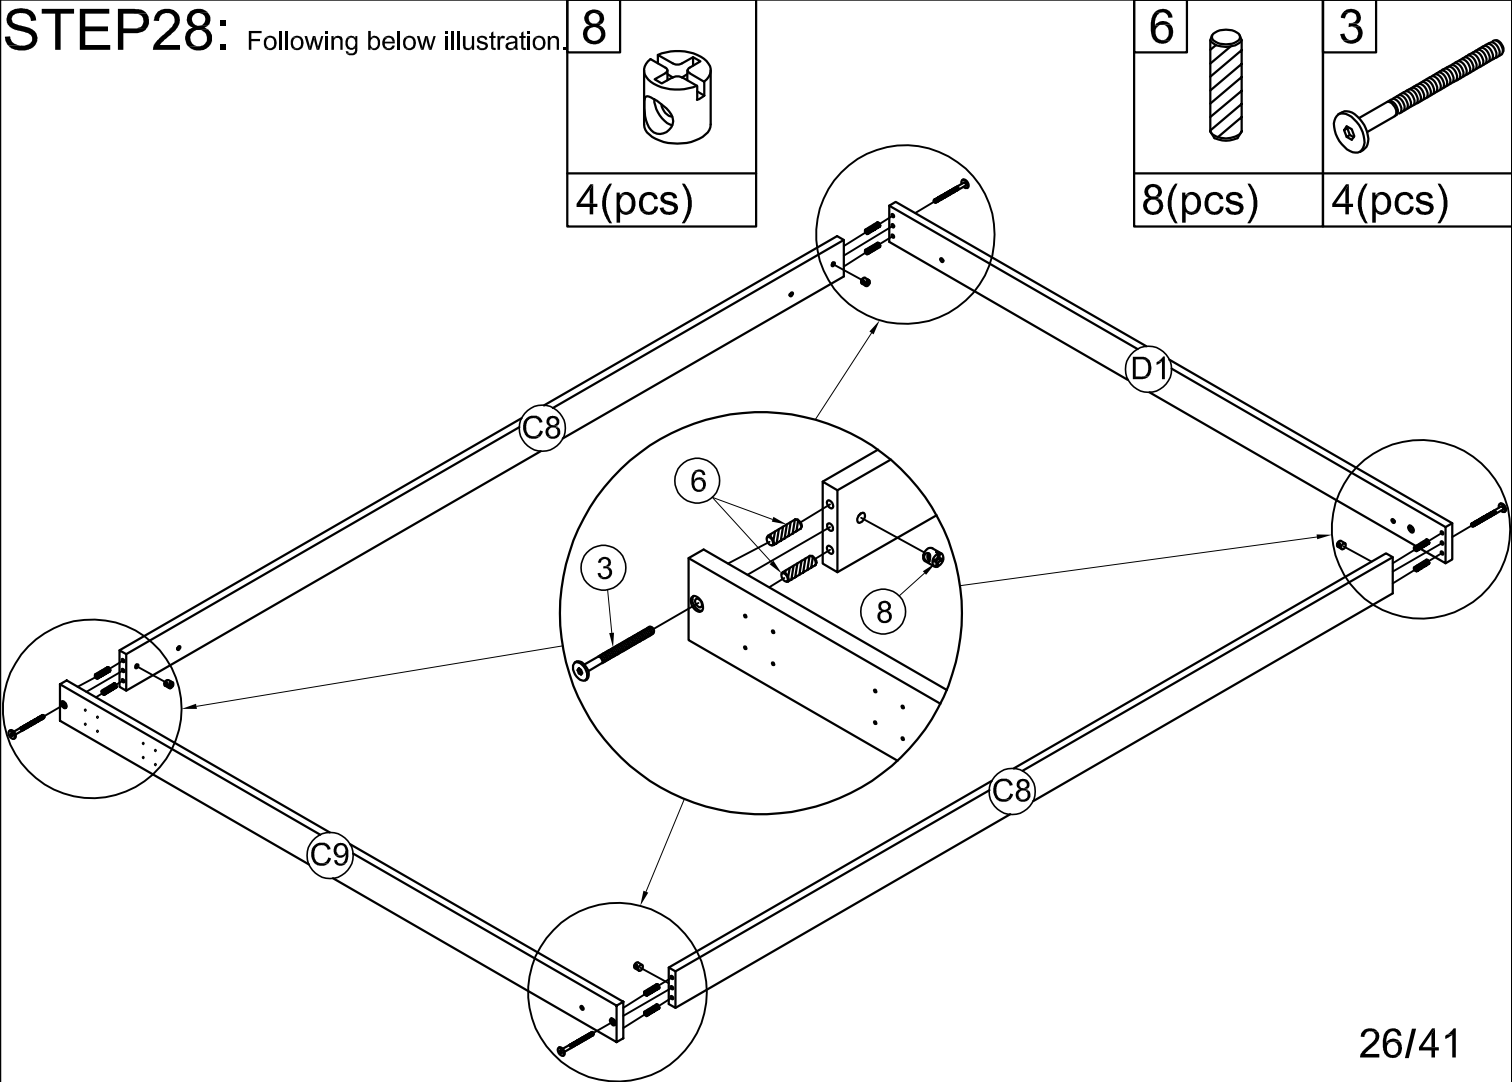


**STEP29:** Following below illustration.

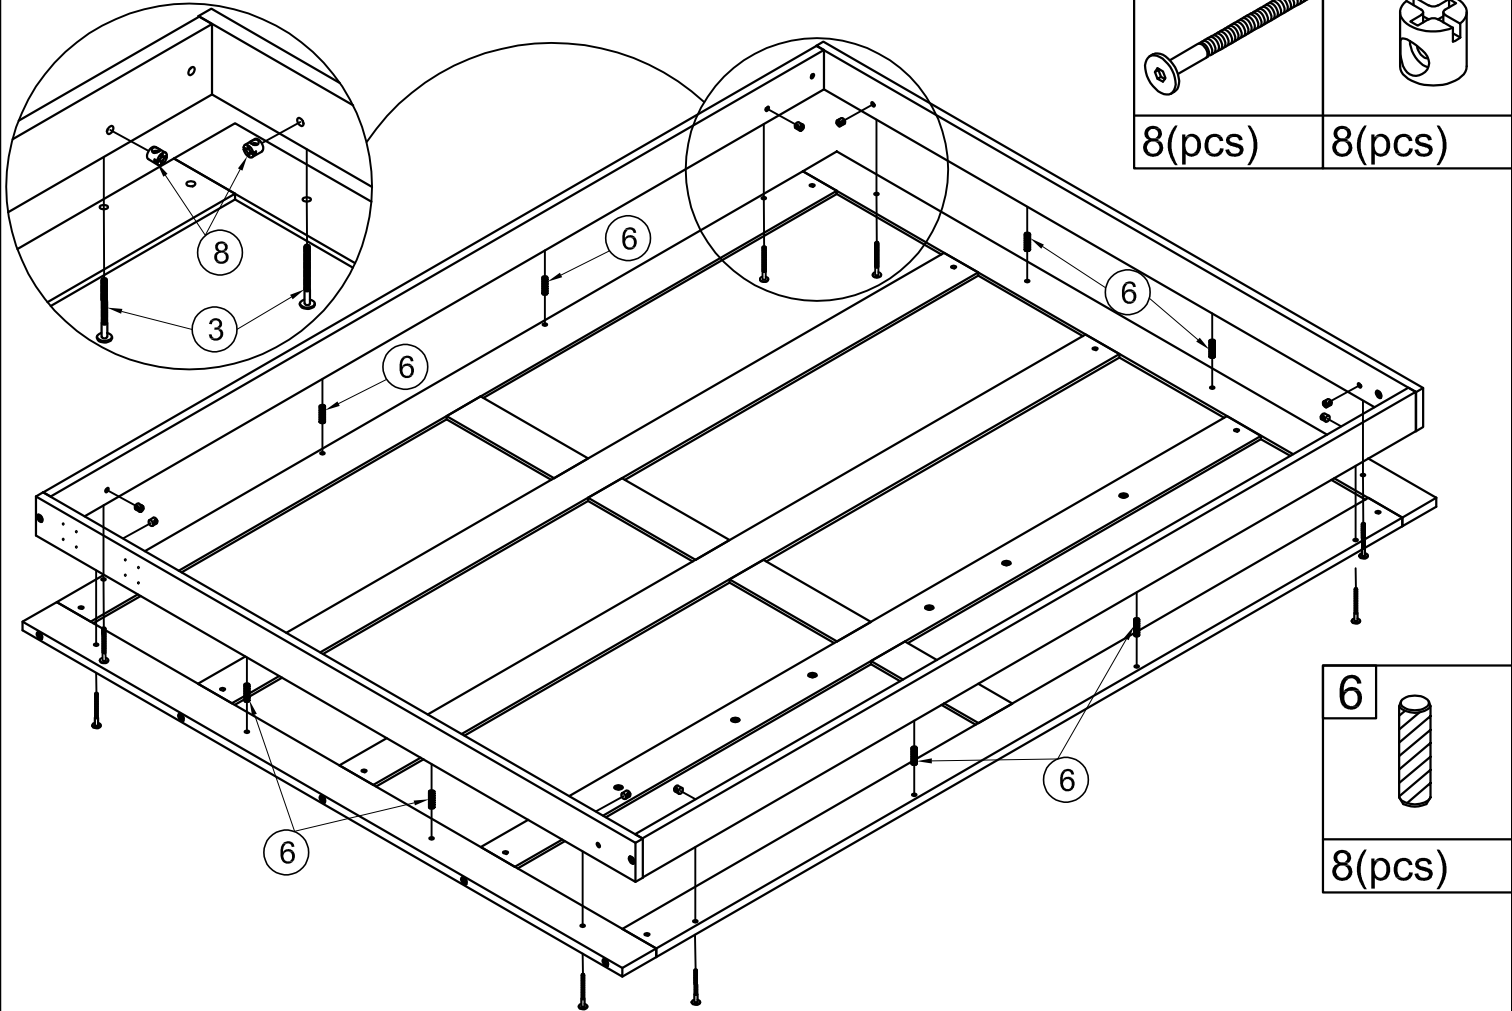
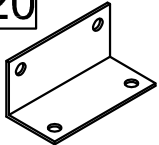



**STEP30:** Following below illustration.

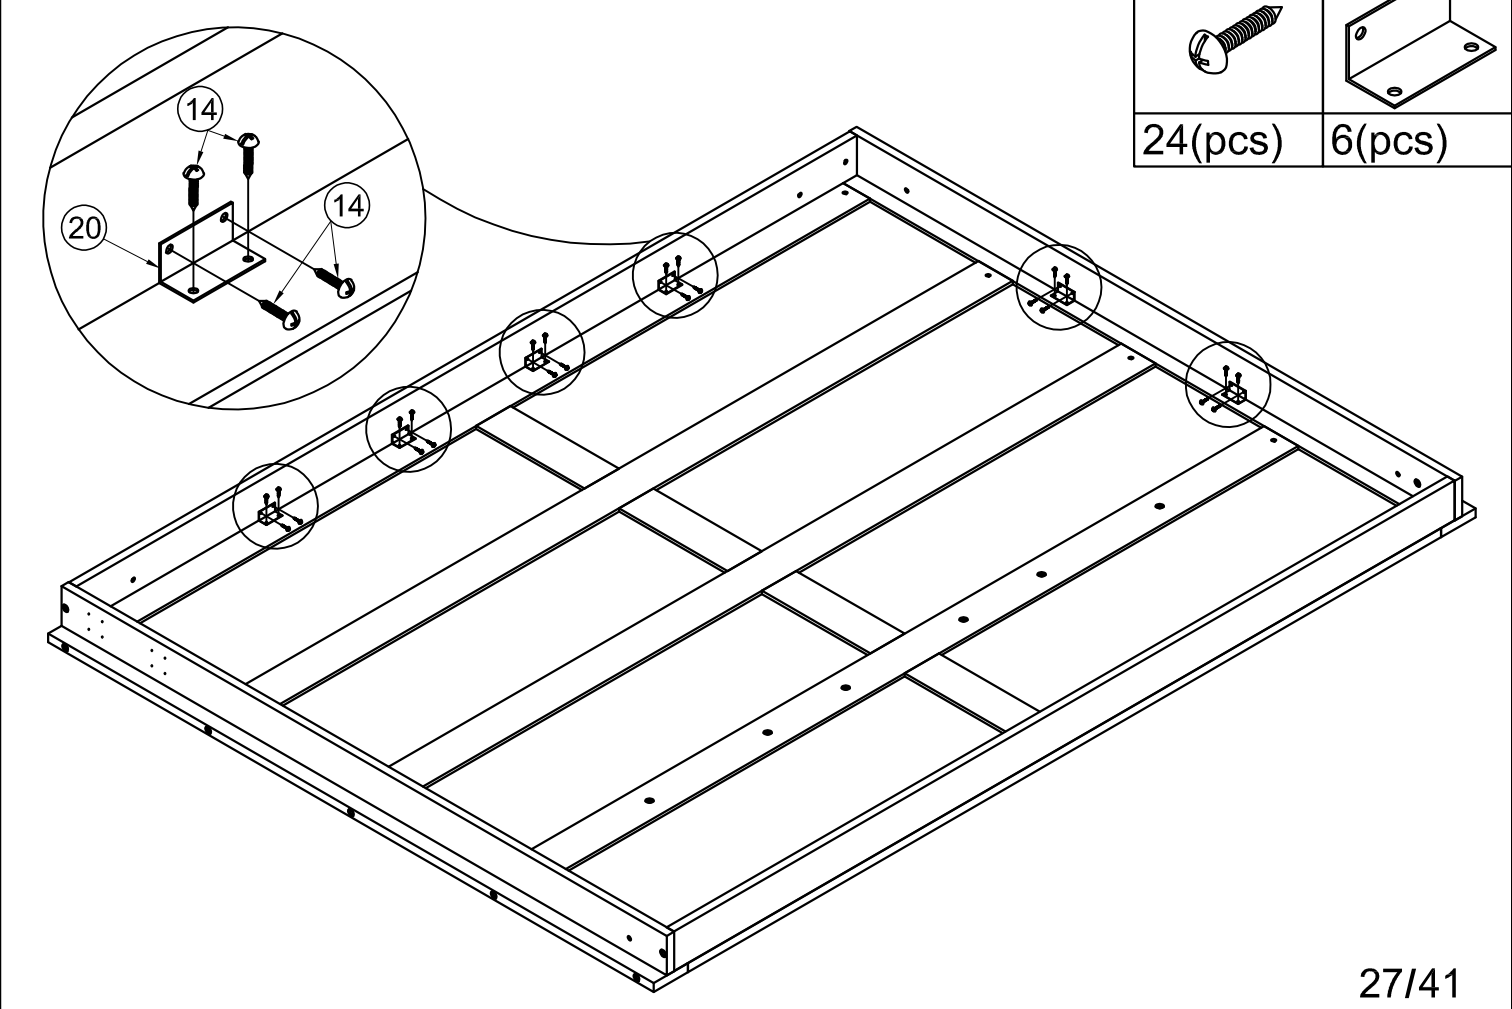


STEP31: Following below illustration.

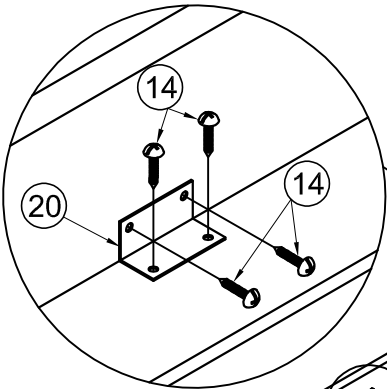



14	20
	
24(pcs)	6(pcs)

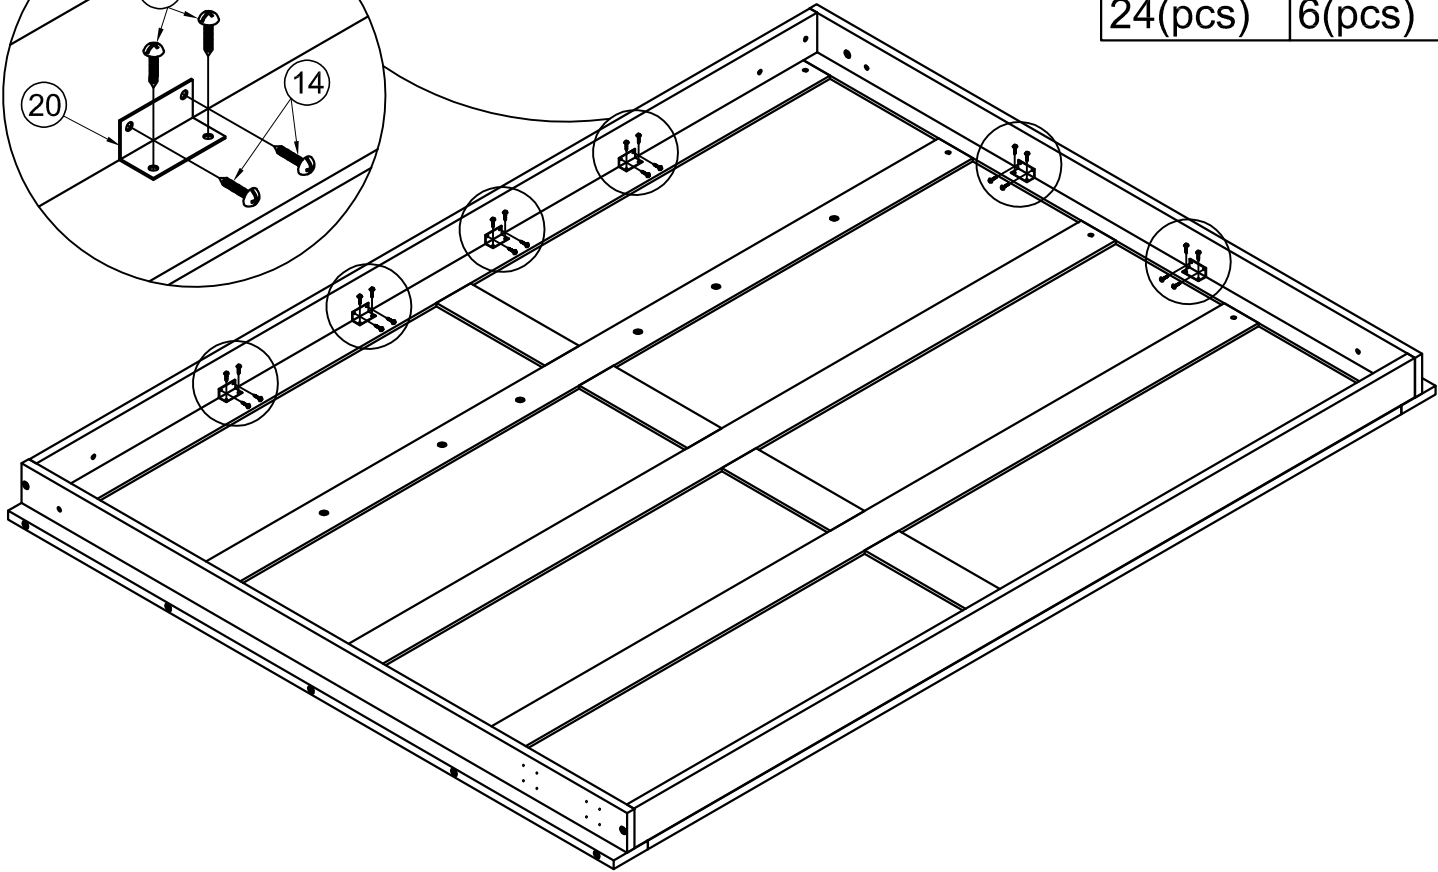


STEP32: Following below illustration.

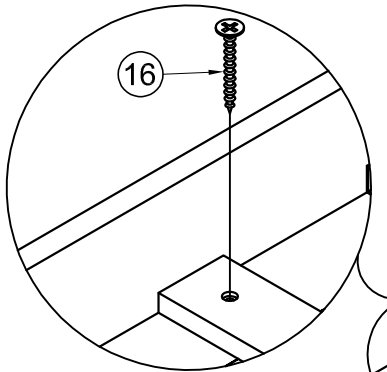


16

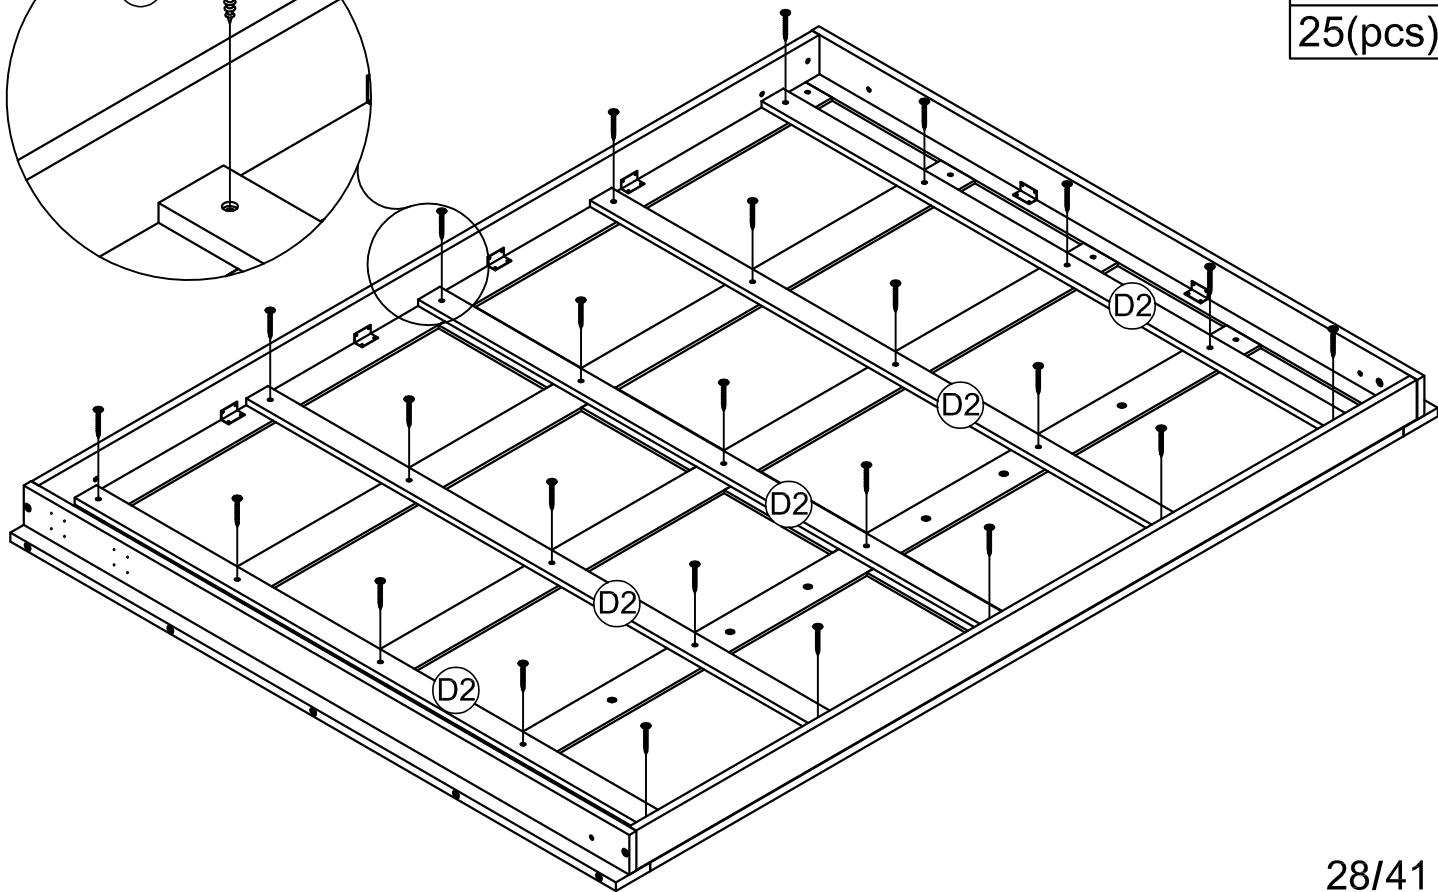25(pcs)

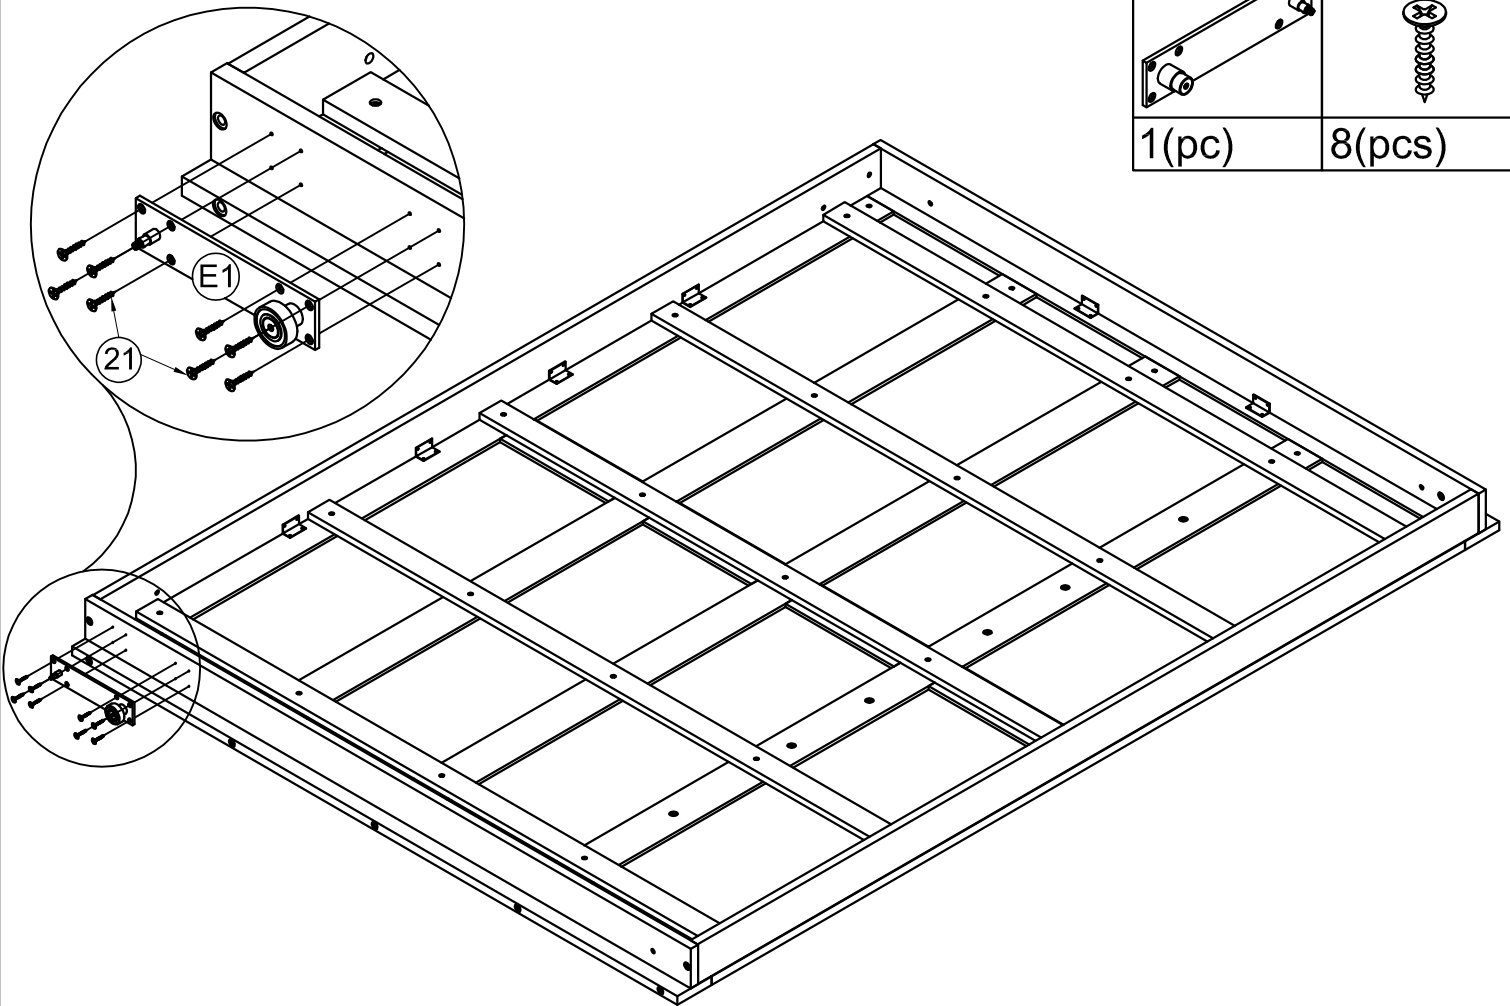


STEP33: Following below illustration.

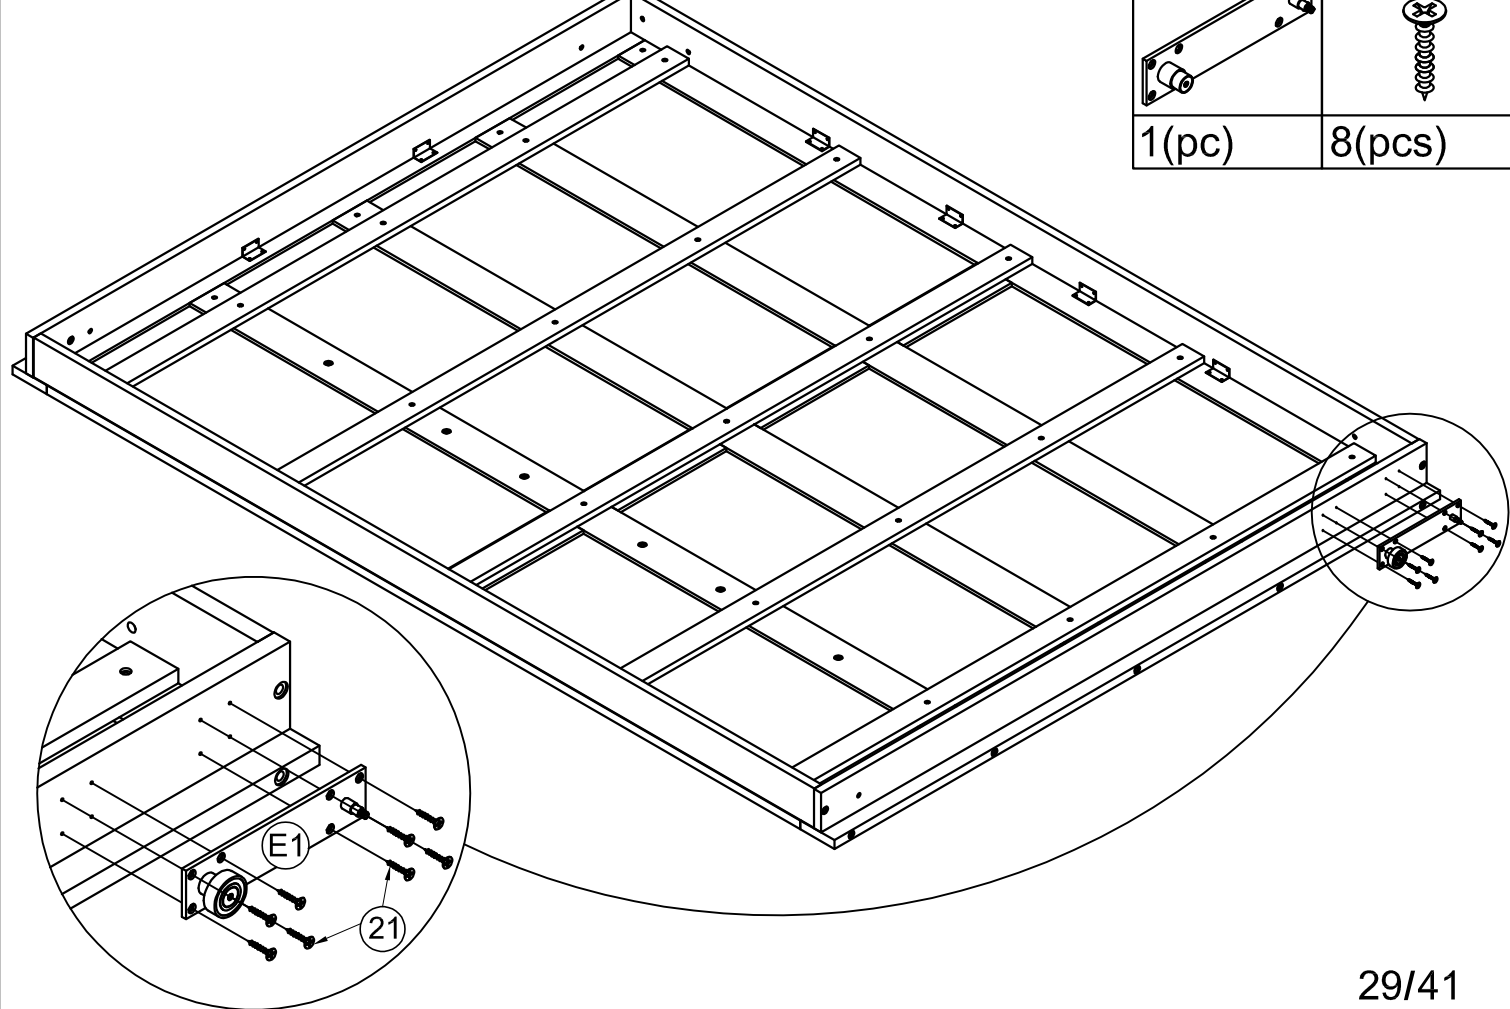


STEP34: Following below illustration.



STEP35: Following below illustration.

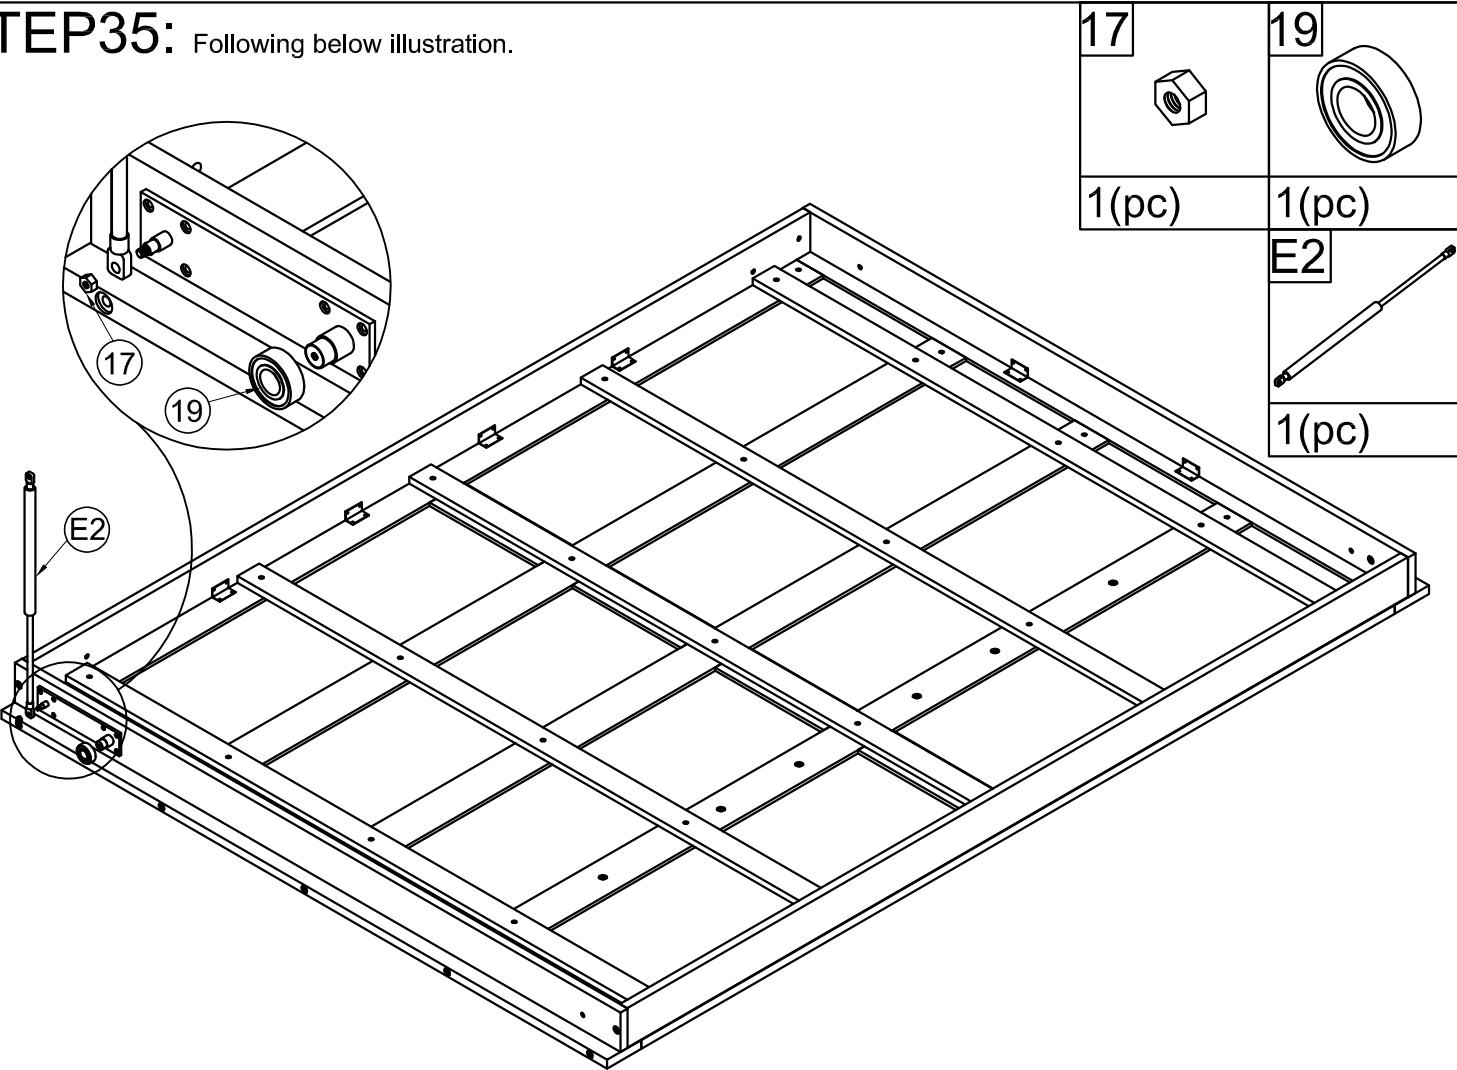

STEP36: Following below illustration.

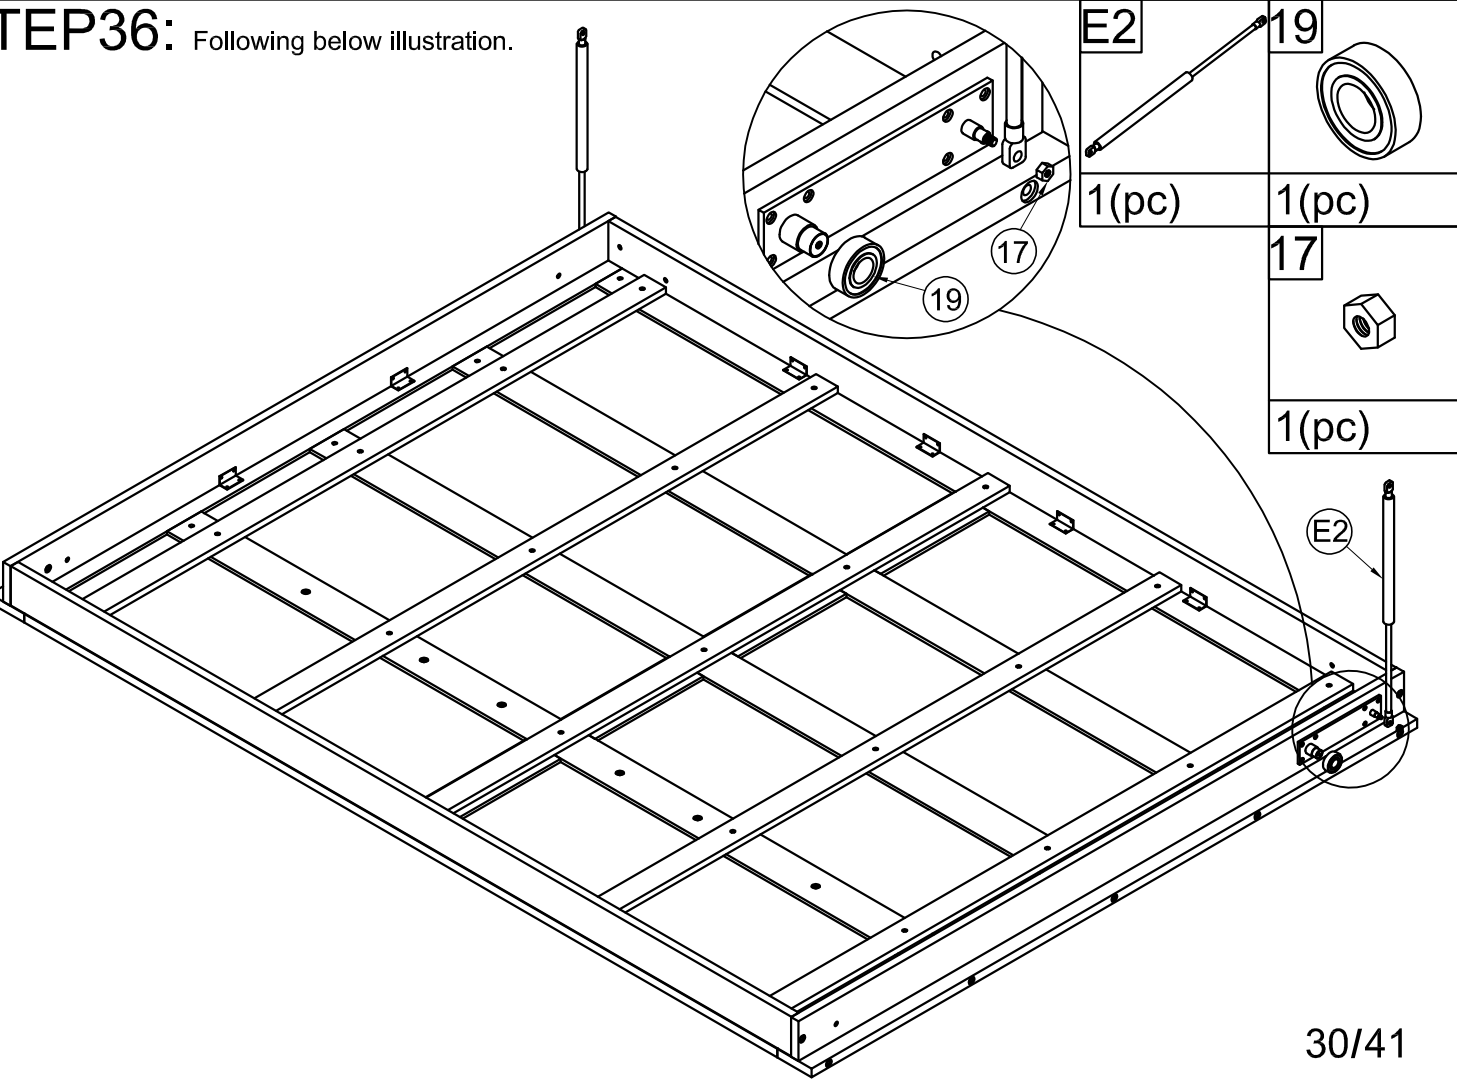


STEP37: Following below illustration.




Four people are required to assemble and move this model.

18



2(pcs)

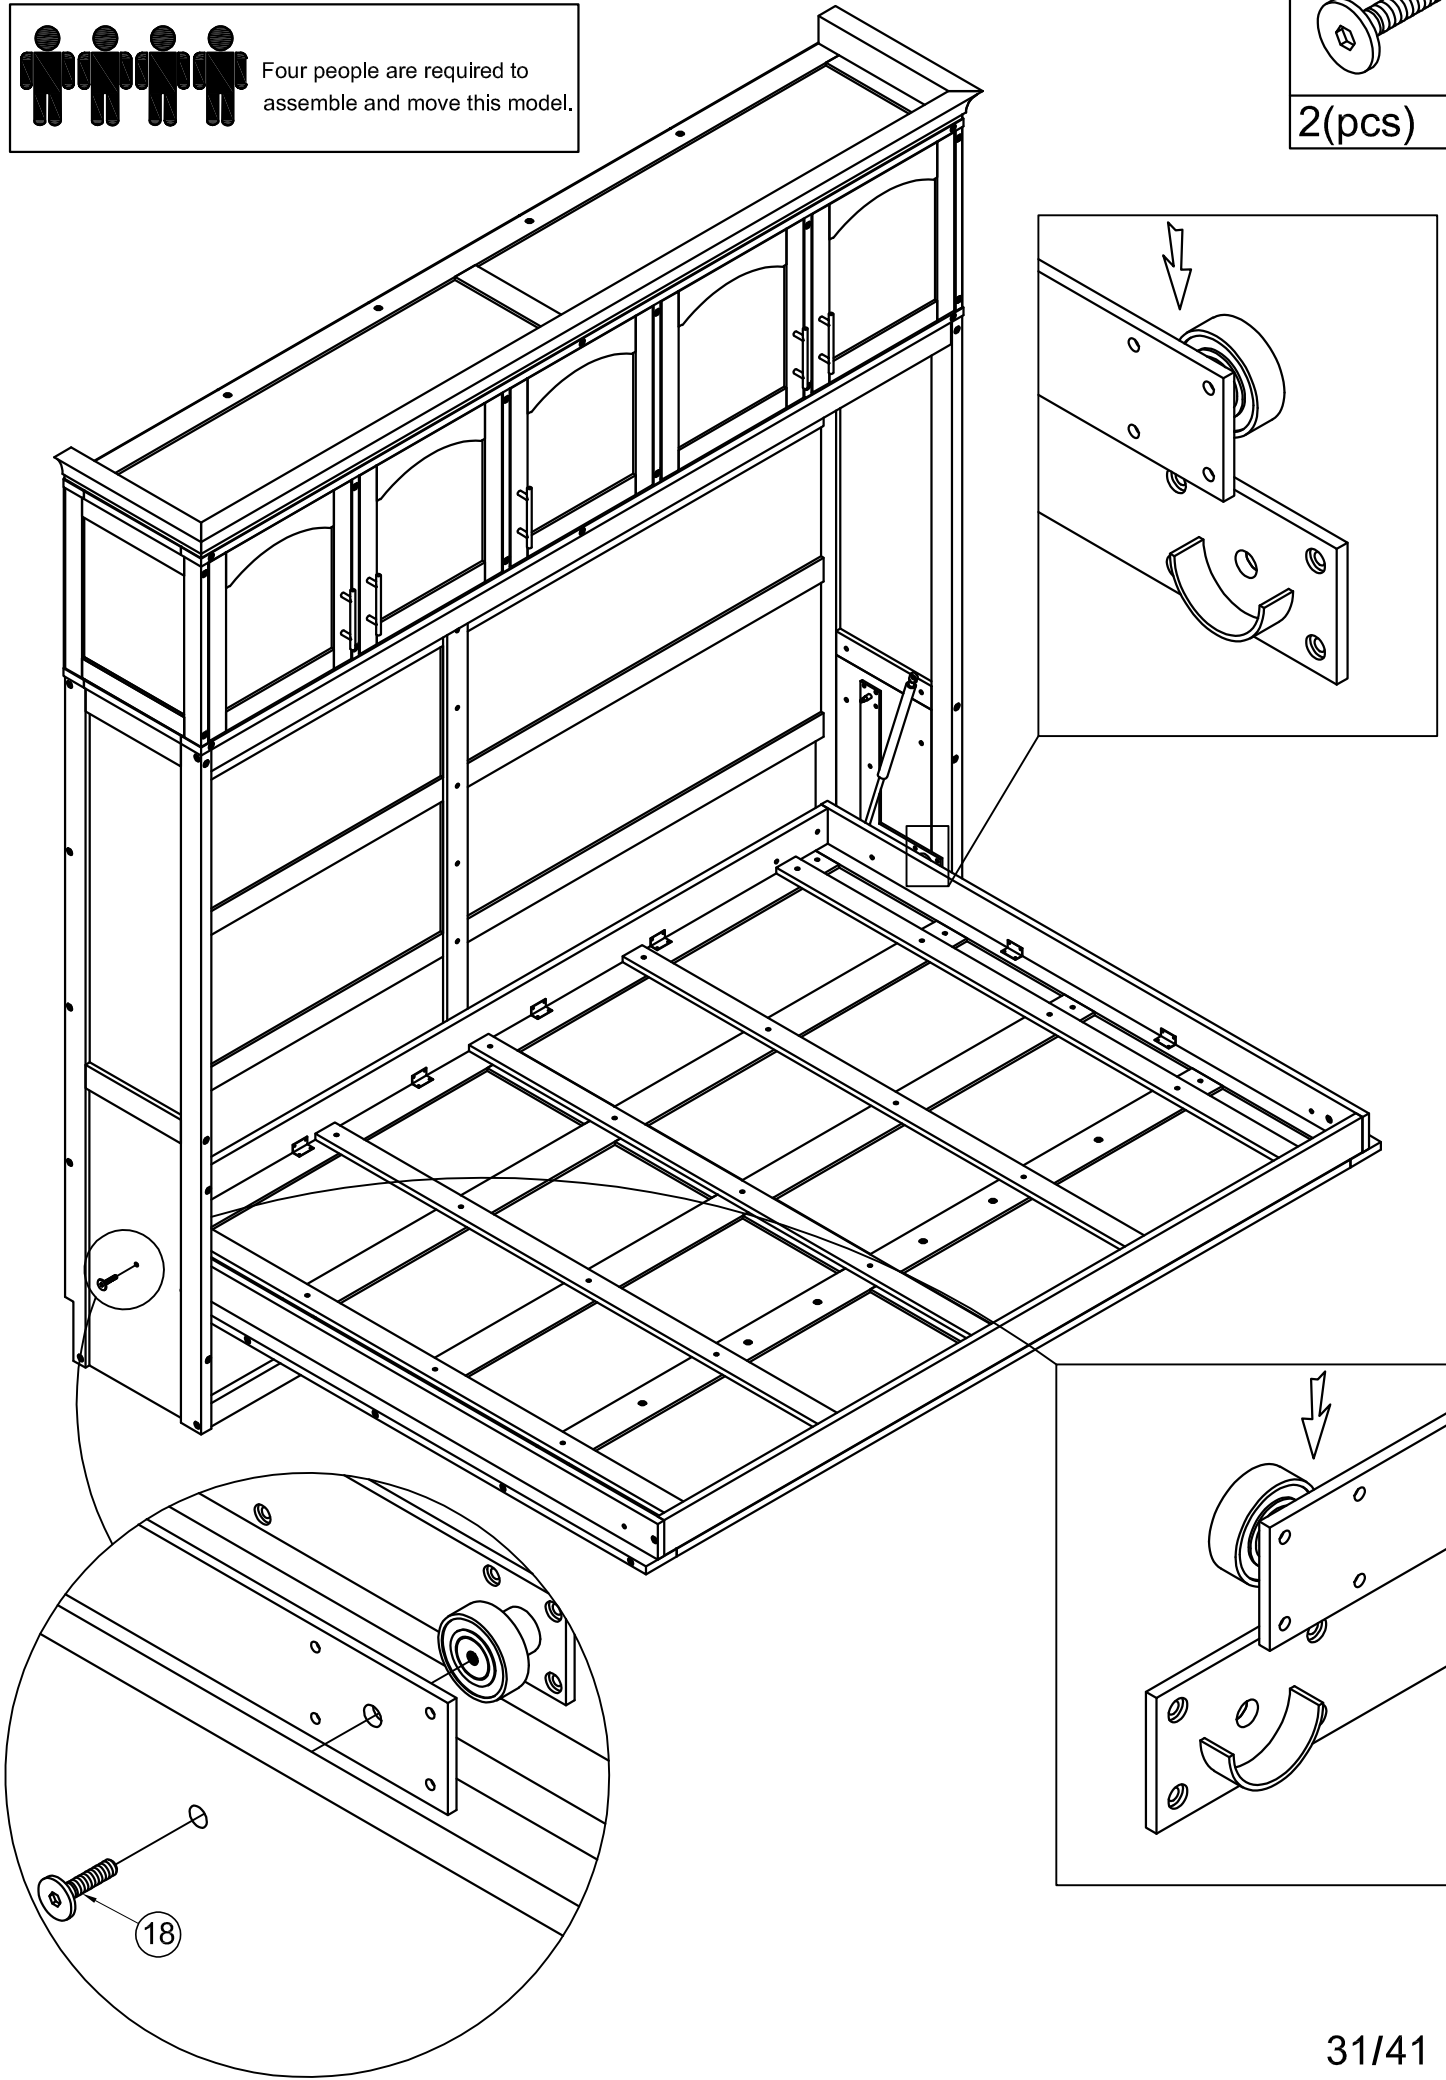

STEP38: Following below illustration.


17



.Requires 4 people to assemble  
(2 people hold the large cabinet  
in place and 2 people tilt the bed  
until accessories are in place)




1(pc)

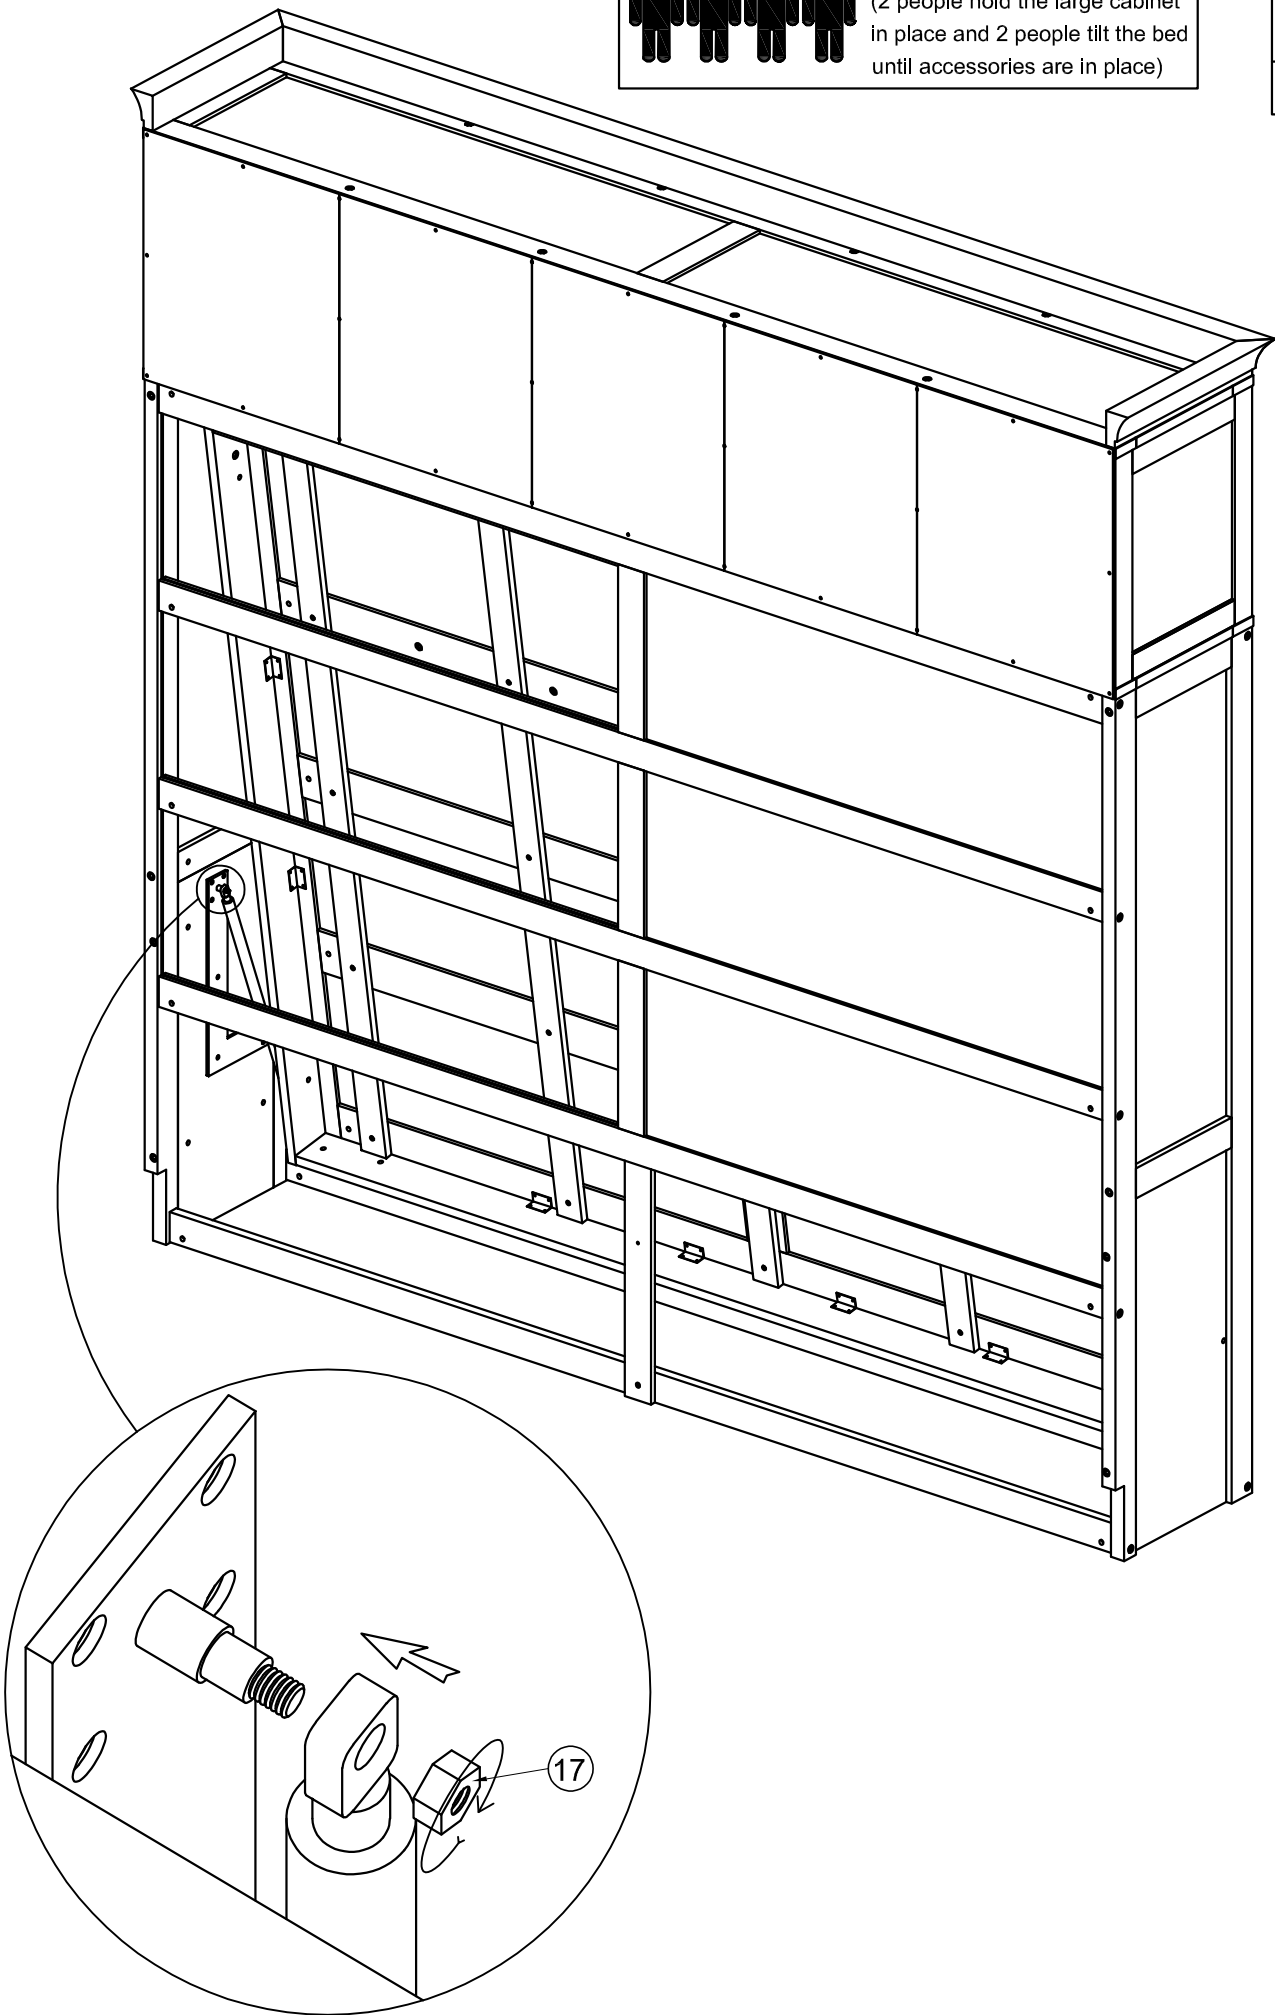



STEP39: Following below illustration.

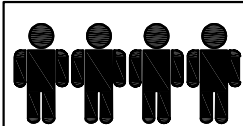


.Requires 4 people to assemble  
(2 people hold the large cabinet  
in place and 2 people tilt the bed  
until accessories are in place)




17




1(pc)

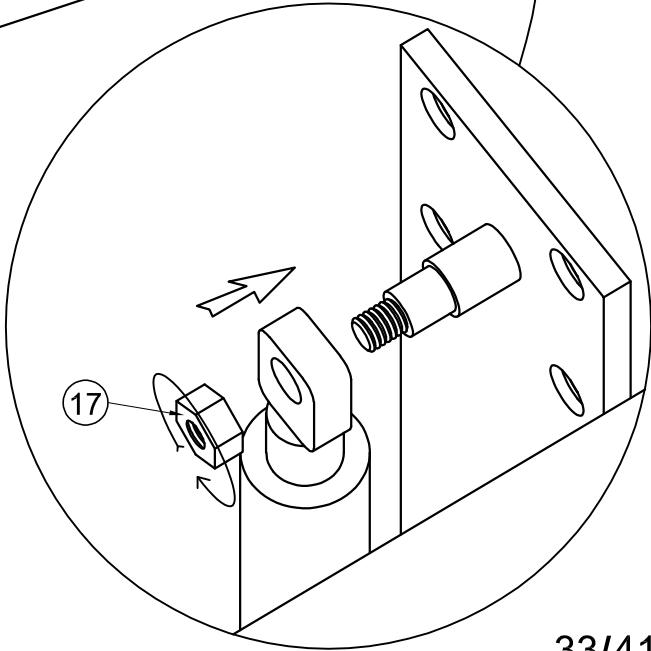


STEP40: Following below illustration.

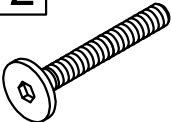
2	10	9
		
2(pcs)	2(pcs)	2(pcs)

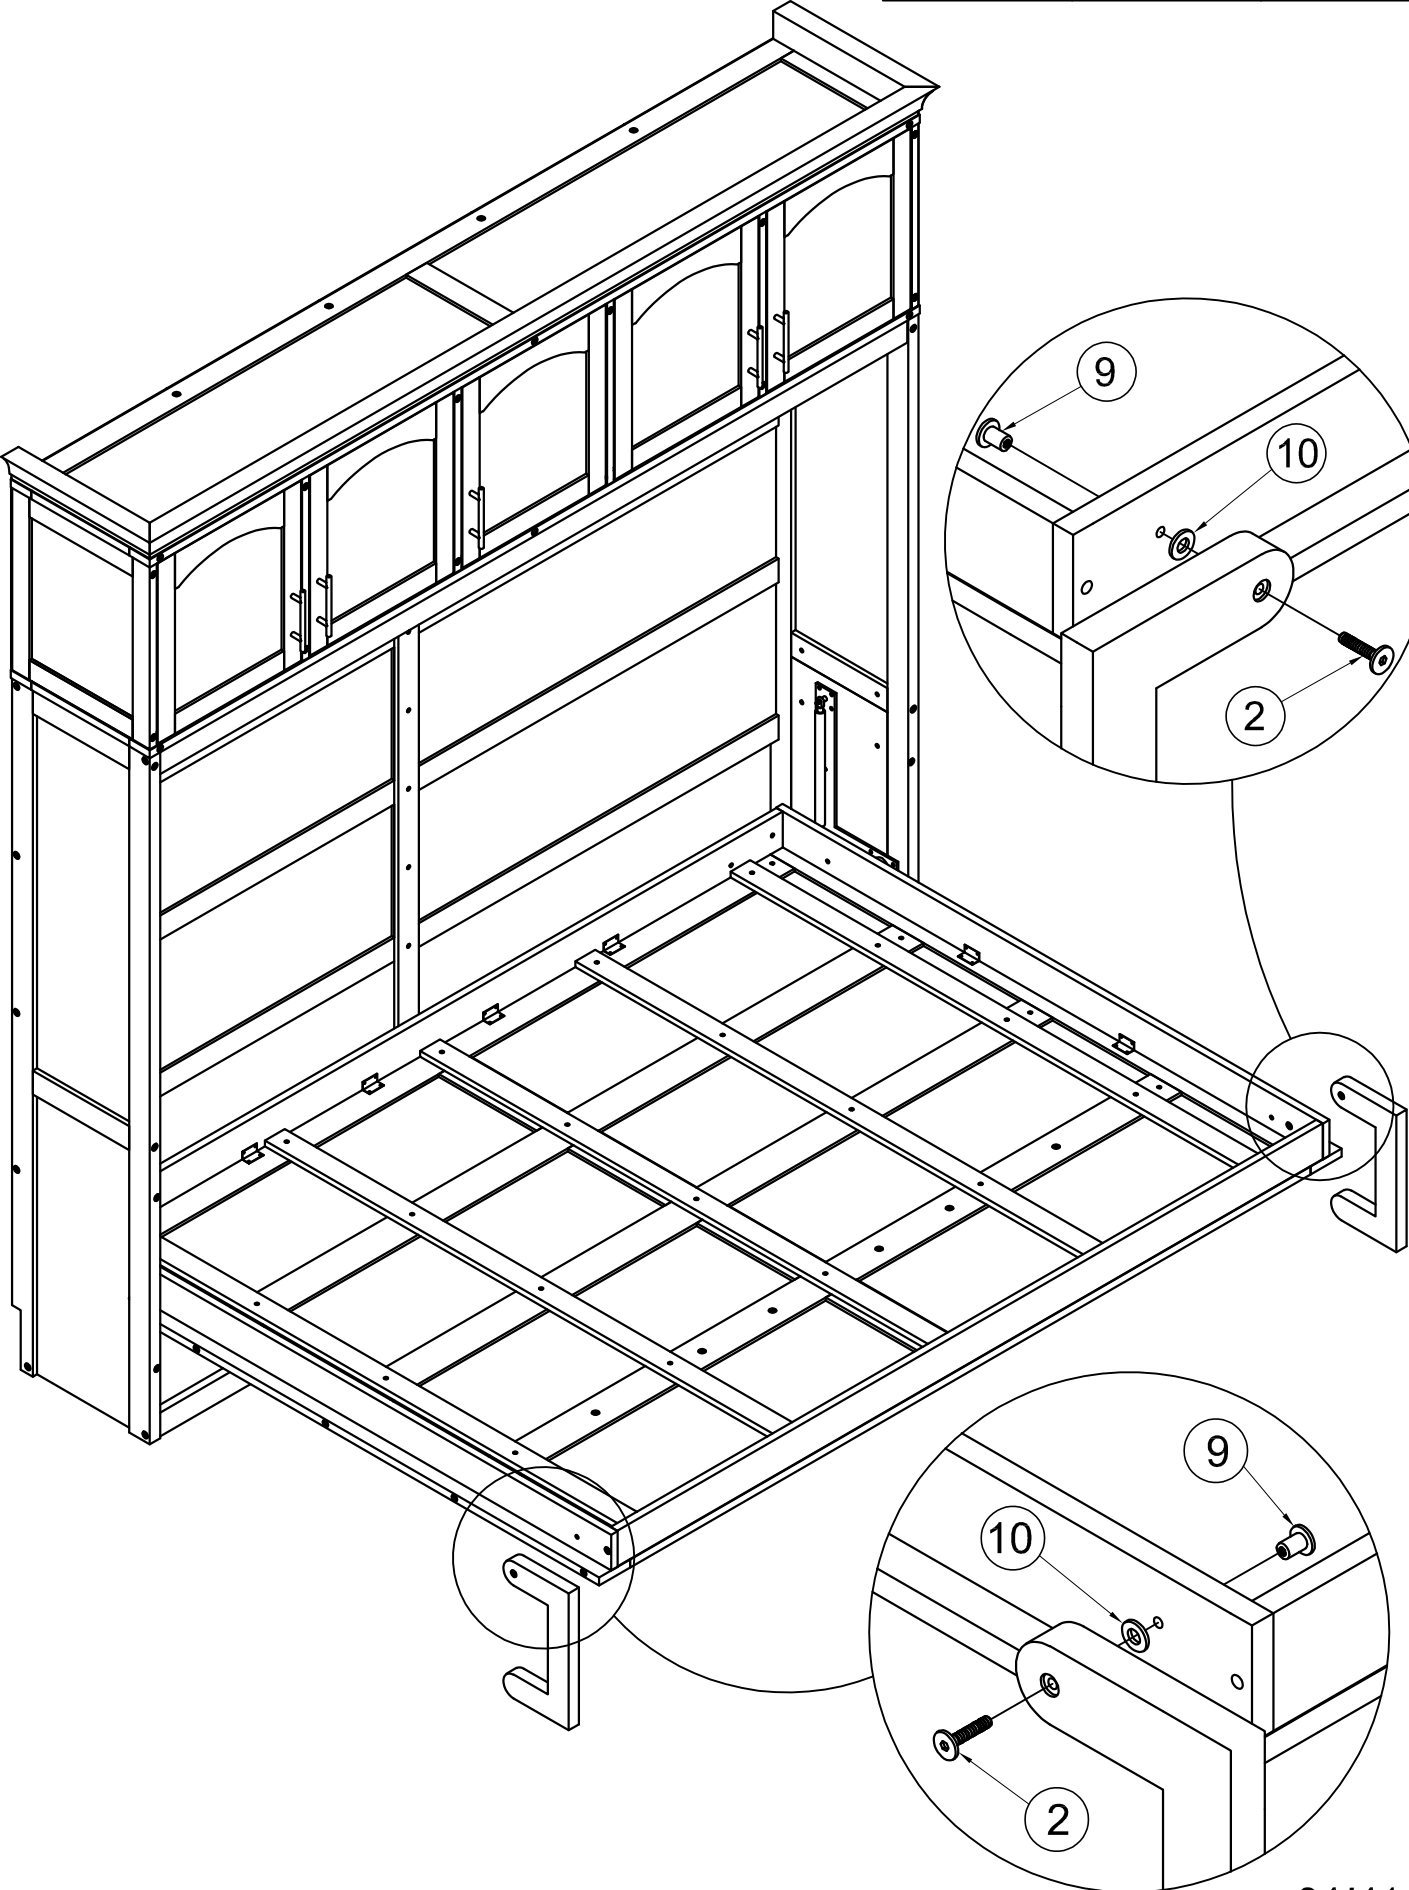


1- Determine the position of the bed in the room.

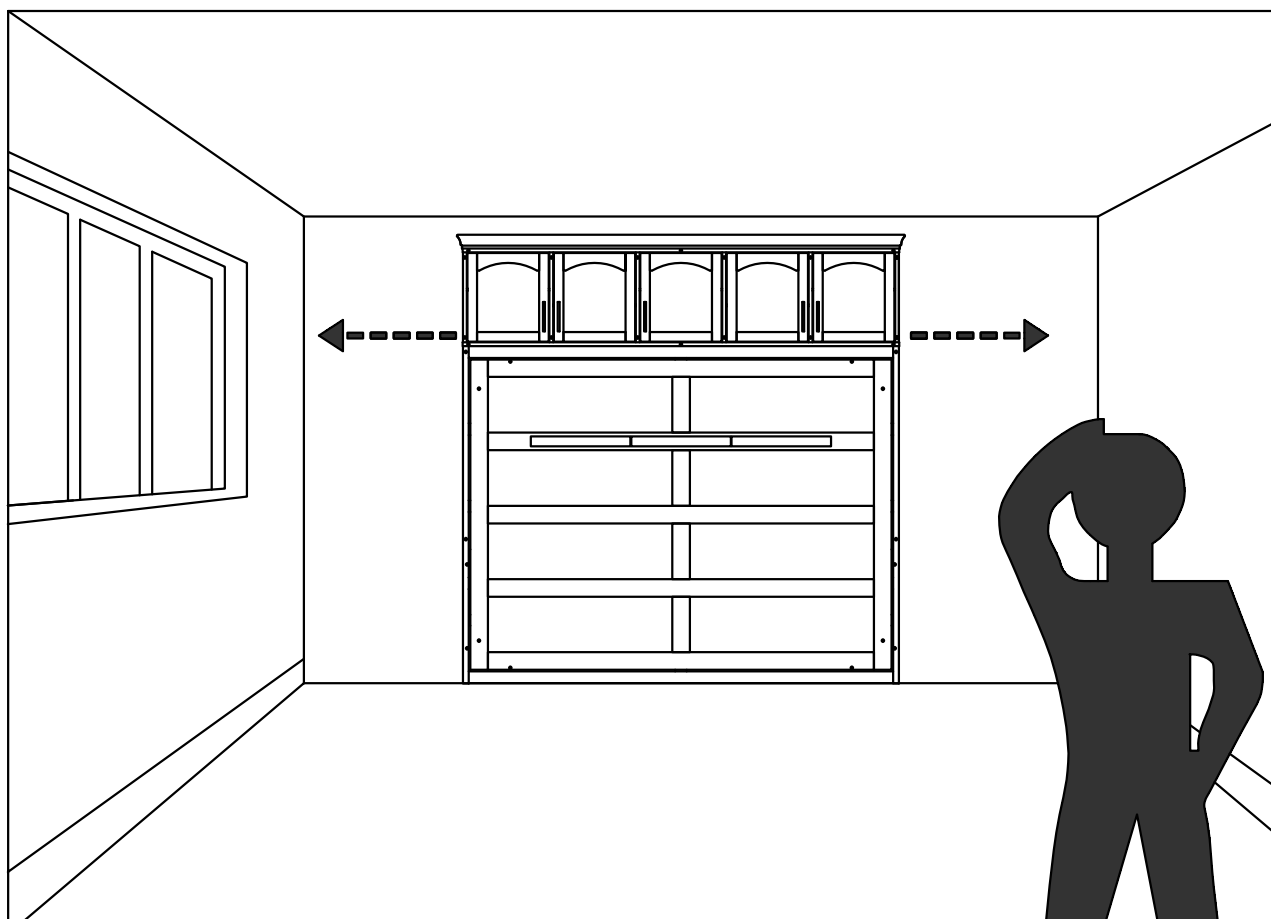


2- Put the bed back in its place. Please keep it vertical and horizontal.

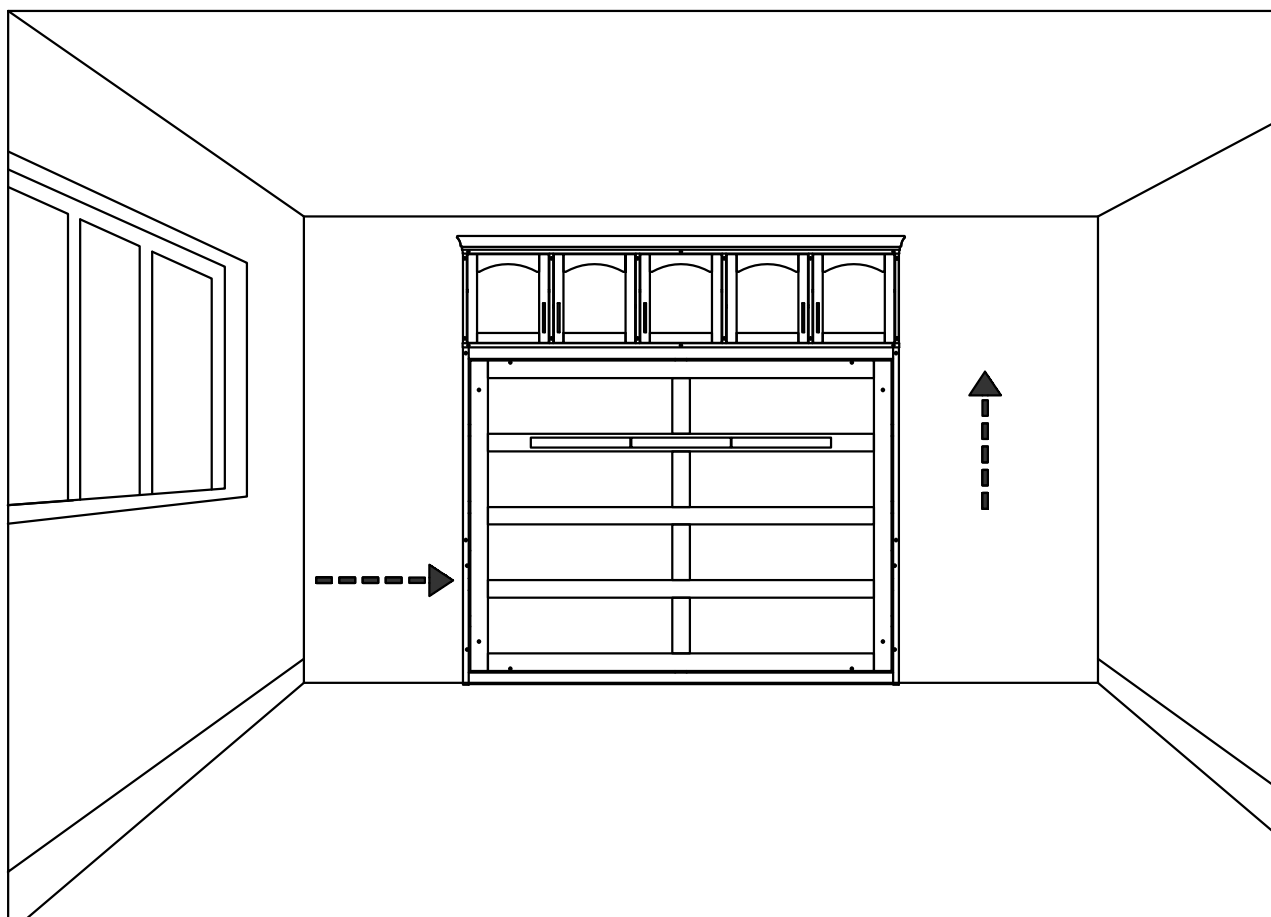

### 3- Mark the points drill holes according to actual products

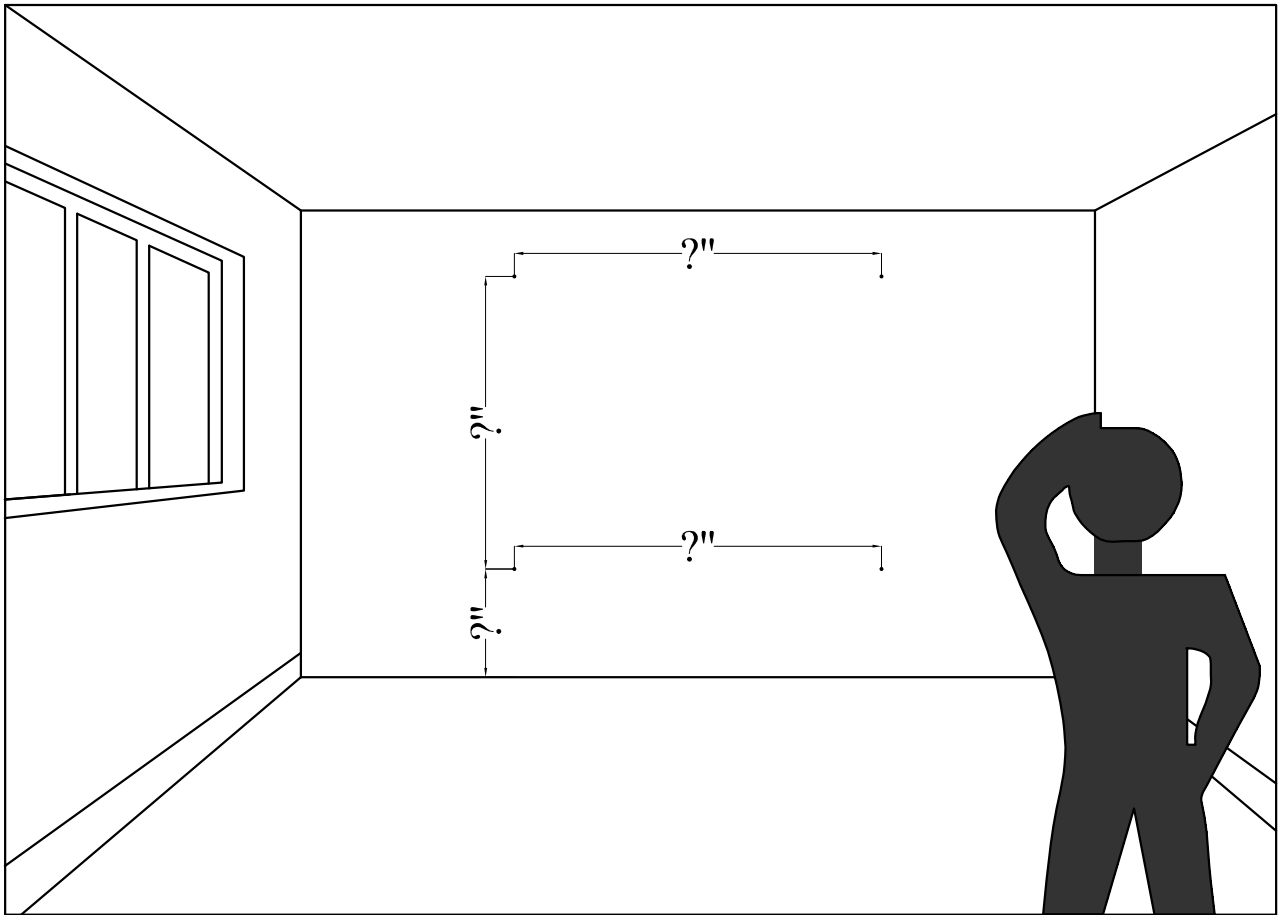

### 4- Drill the positions marked in step 3 and secure the plug.

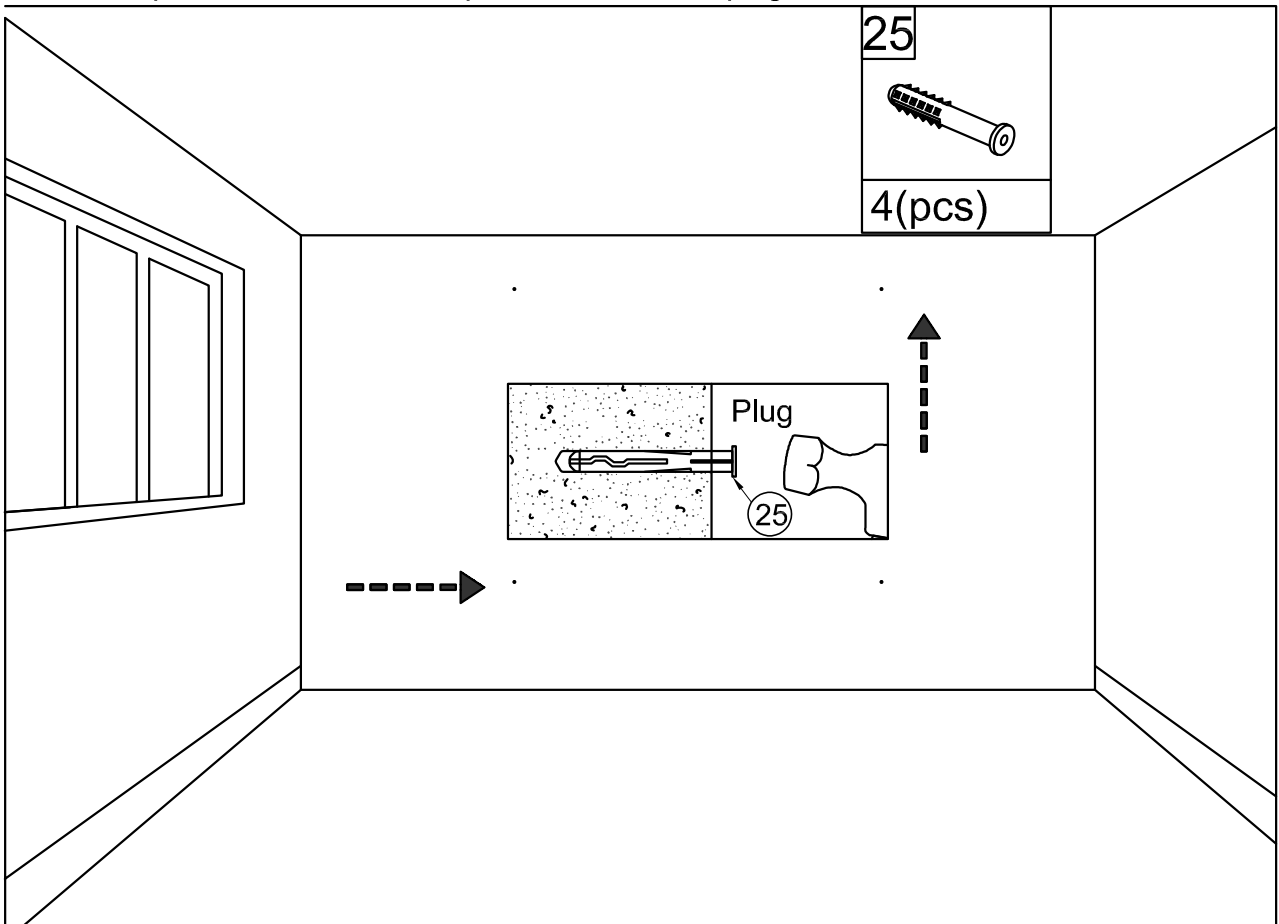

Wall attached item only:

## A guide to wall mounting and fixings




### Warning

Wall fixing screws are not included, since different wall materials require different types of screws / fixings. Please ensure you use the correct screws / fixings for your type of walls and seek professional advice if you are not sure.

Failure of the product due to incorrect fixings is the responsibility of the installer.

**Important:** When drilling into the walls always check that there are no hidden wires or pipes etc.

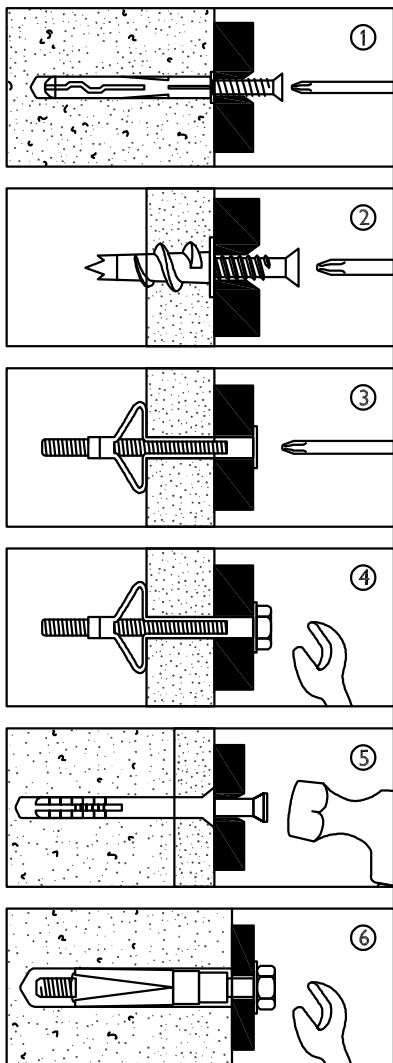

### Types of walls

You can use one of the following types of wall plug if your walls are made of brick, breezeblock, concrete, stone or wood.

#### 1. Genral Purpose wall plug

Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general - purpose wall plugs can be used.

#### 2. Plasterboard wall plug

For use when attaching light loads on to plasterboard partitions.

#### 3. Cavity Fixing wall plug

For use with plasterboard partitions or hollow wooden doors.

#### 4. Cavity Fixing - Heavy Duty wall plug

For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

#### 5. Hammer Fixing wall plug

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

#### 6. Shield Anchor wall plug - Heavy loads


For use with heavier load such as TV and HI-Fi speakers and satellite dishes etc.



Care and maintenance

**Safety:** Periodically check all fittings and wall fixings to ensure they have not come loose and retighten as necessary.

STEP41: Following below illustration.

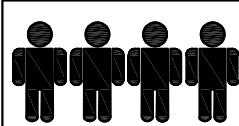


.Requires 4 people to assemble  
(2 people hold the large cabinet  
in place and 2 people tilt the bed  
until accessories are in place)

14



4(pcs)

15





2(pc)


23



2(pcs)

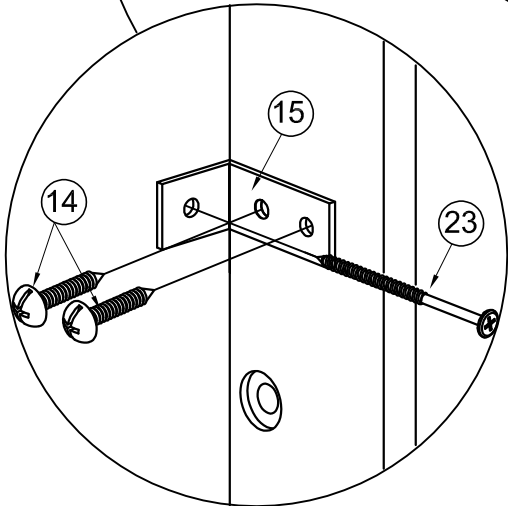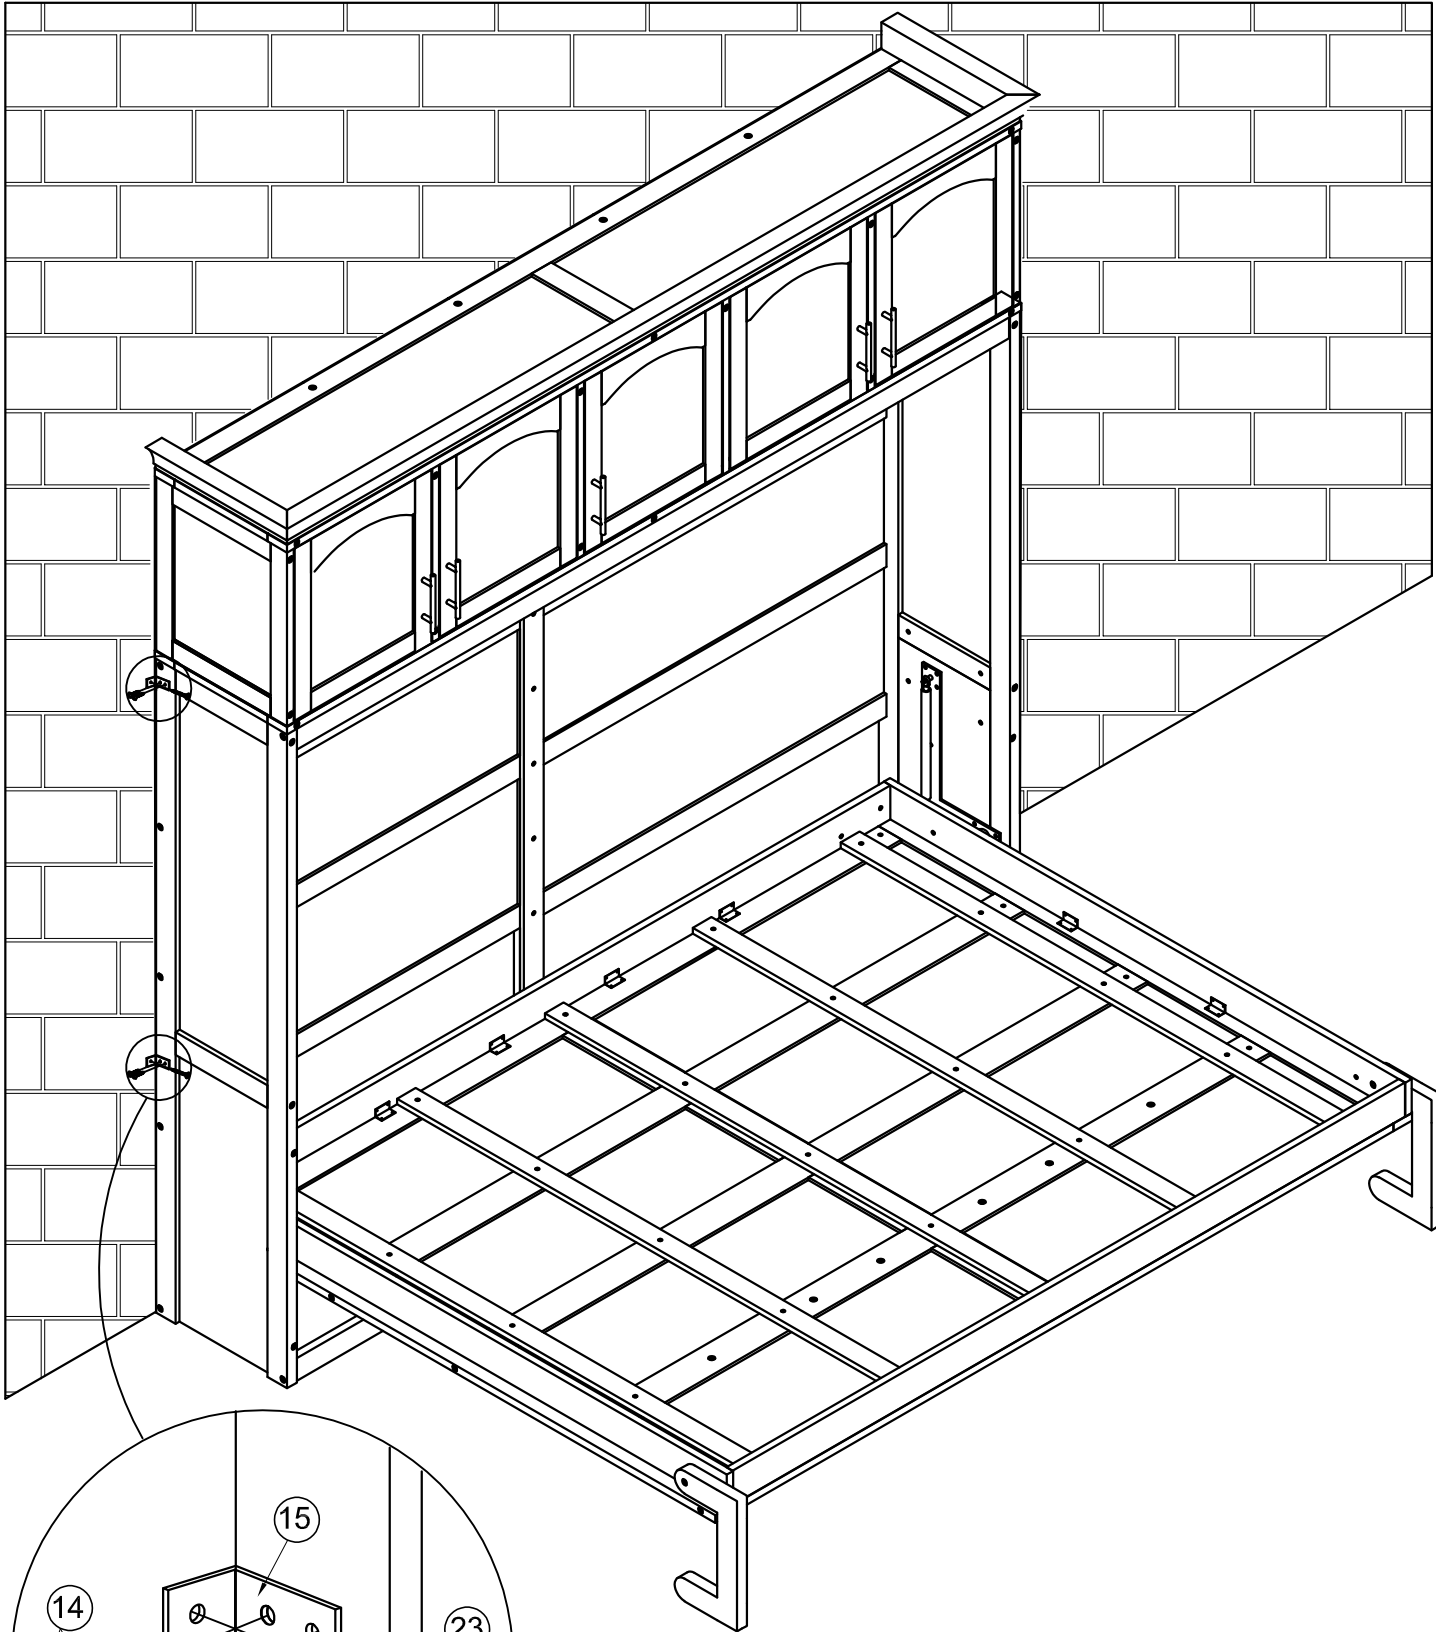

STEP42: Following below illustration.

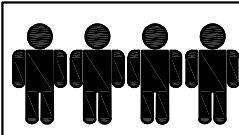


.Requires 4 people to assemble  
(2 people hold the large cabinet  
in place and 2 people tilt the bed  
until accessories are in place)

14



4(pcs)

15




2(pc)


23



2(pcs)

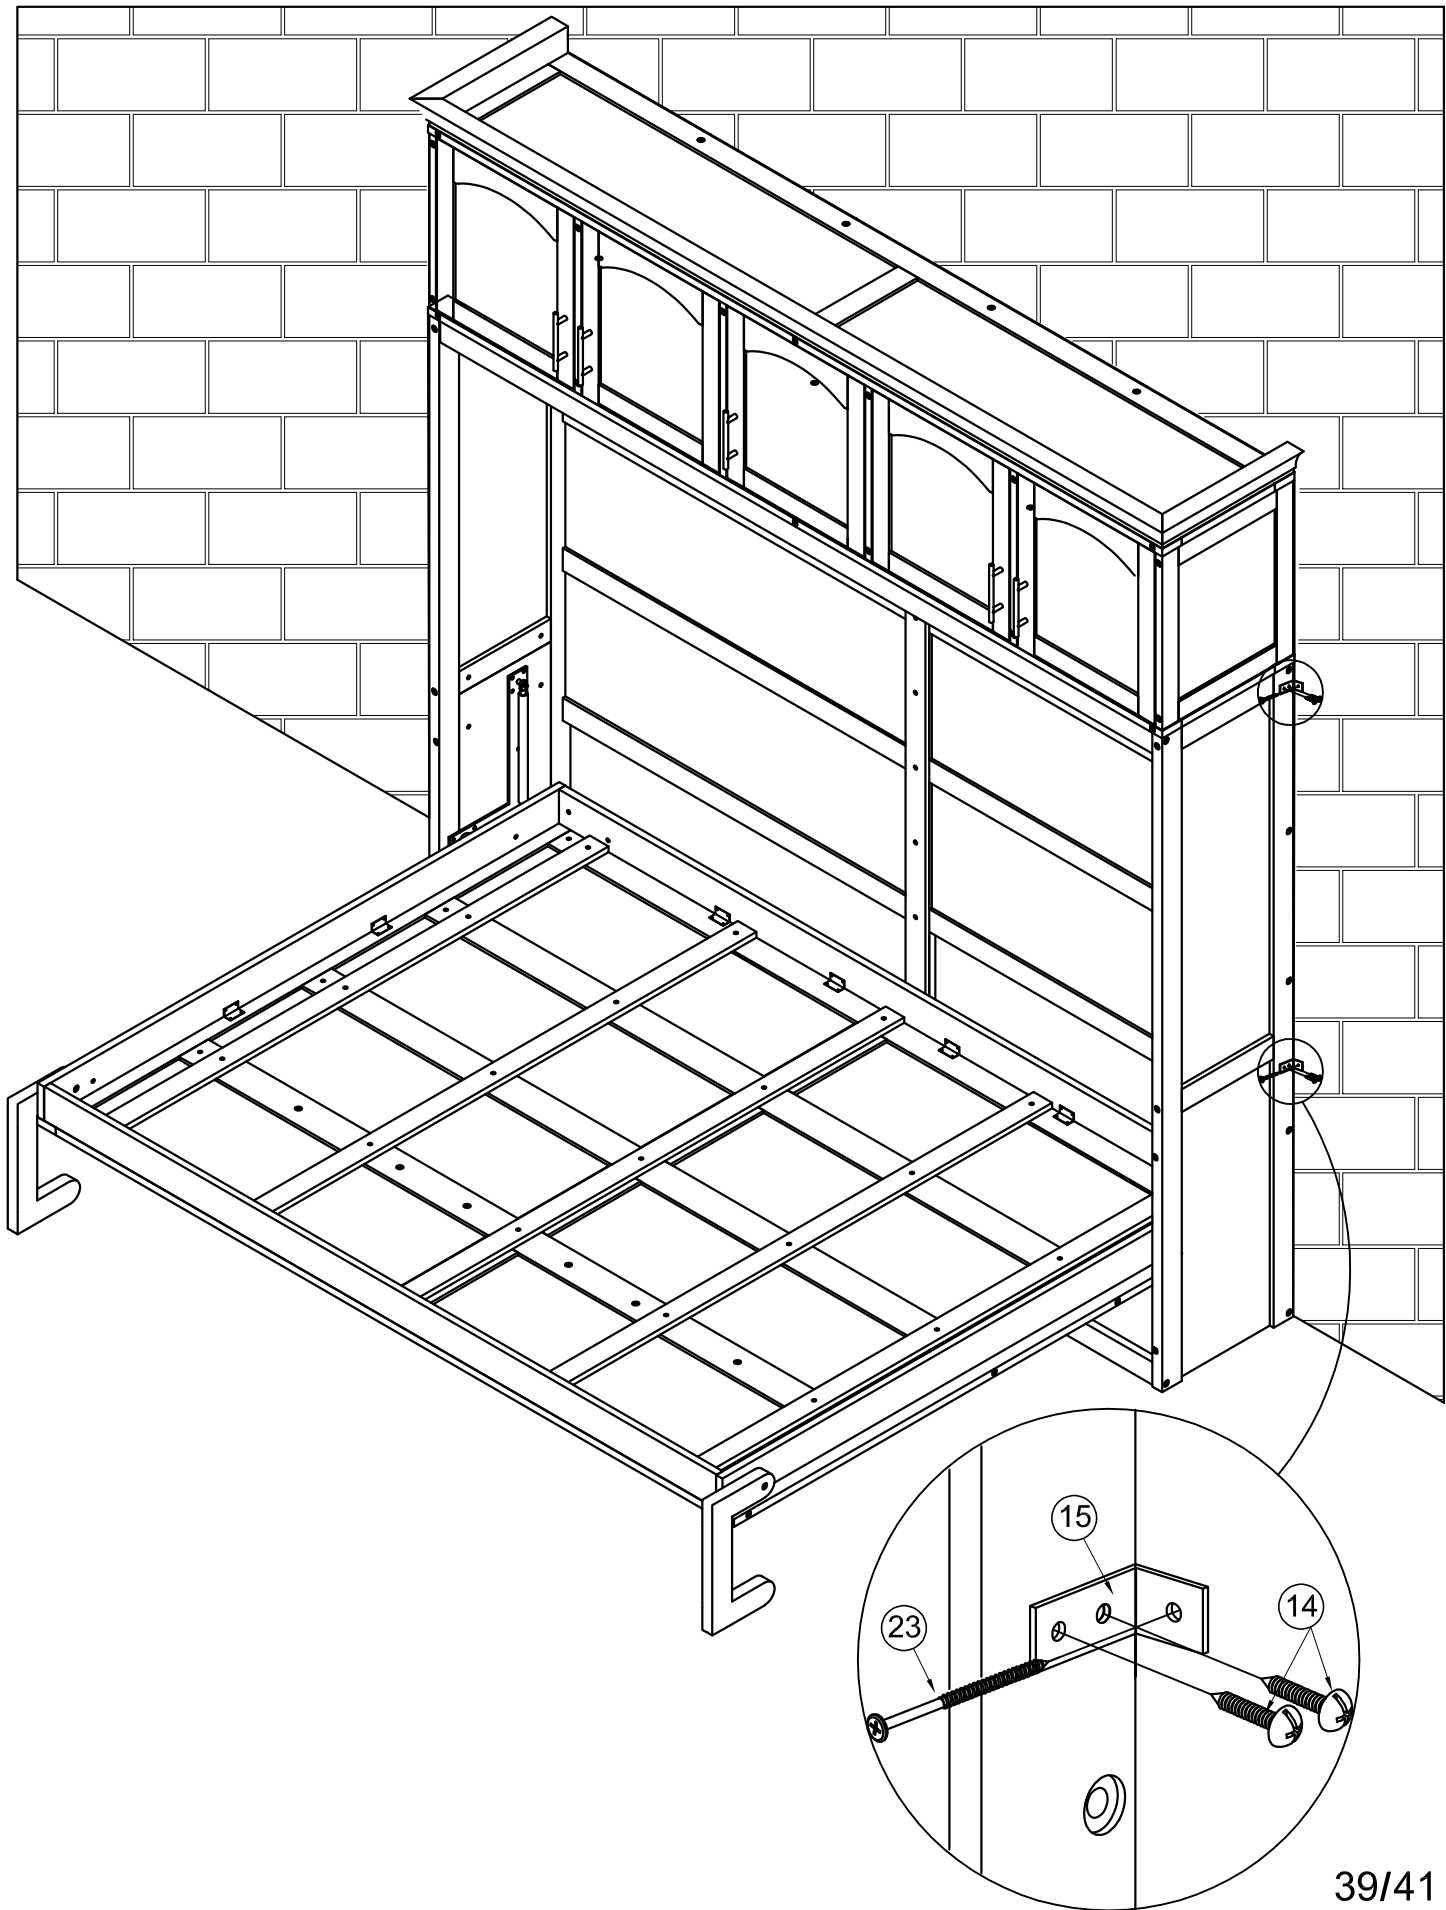


## OPTION 2

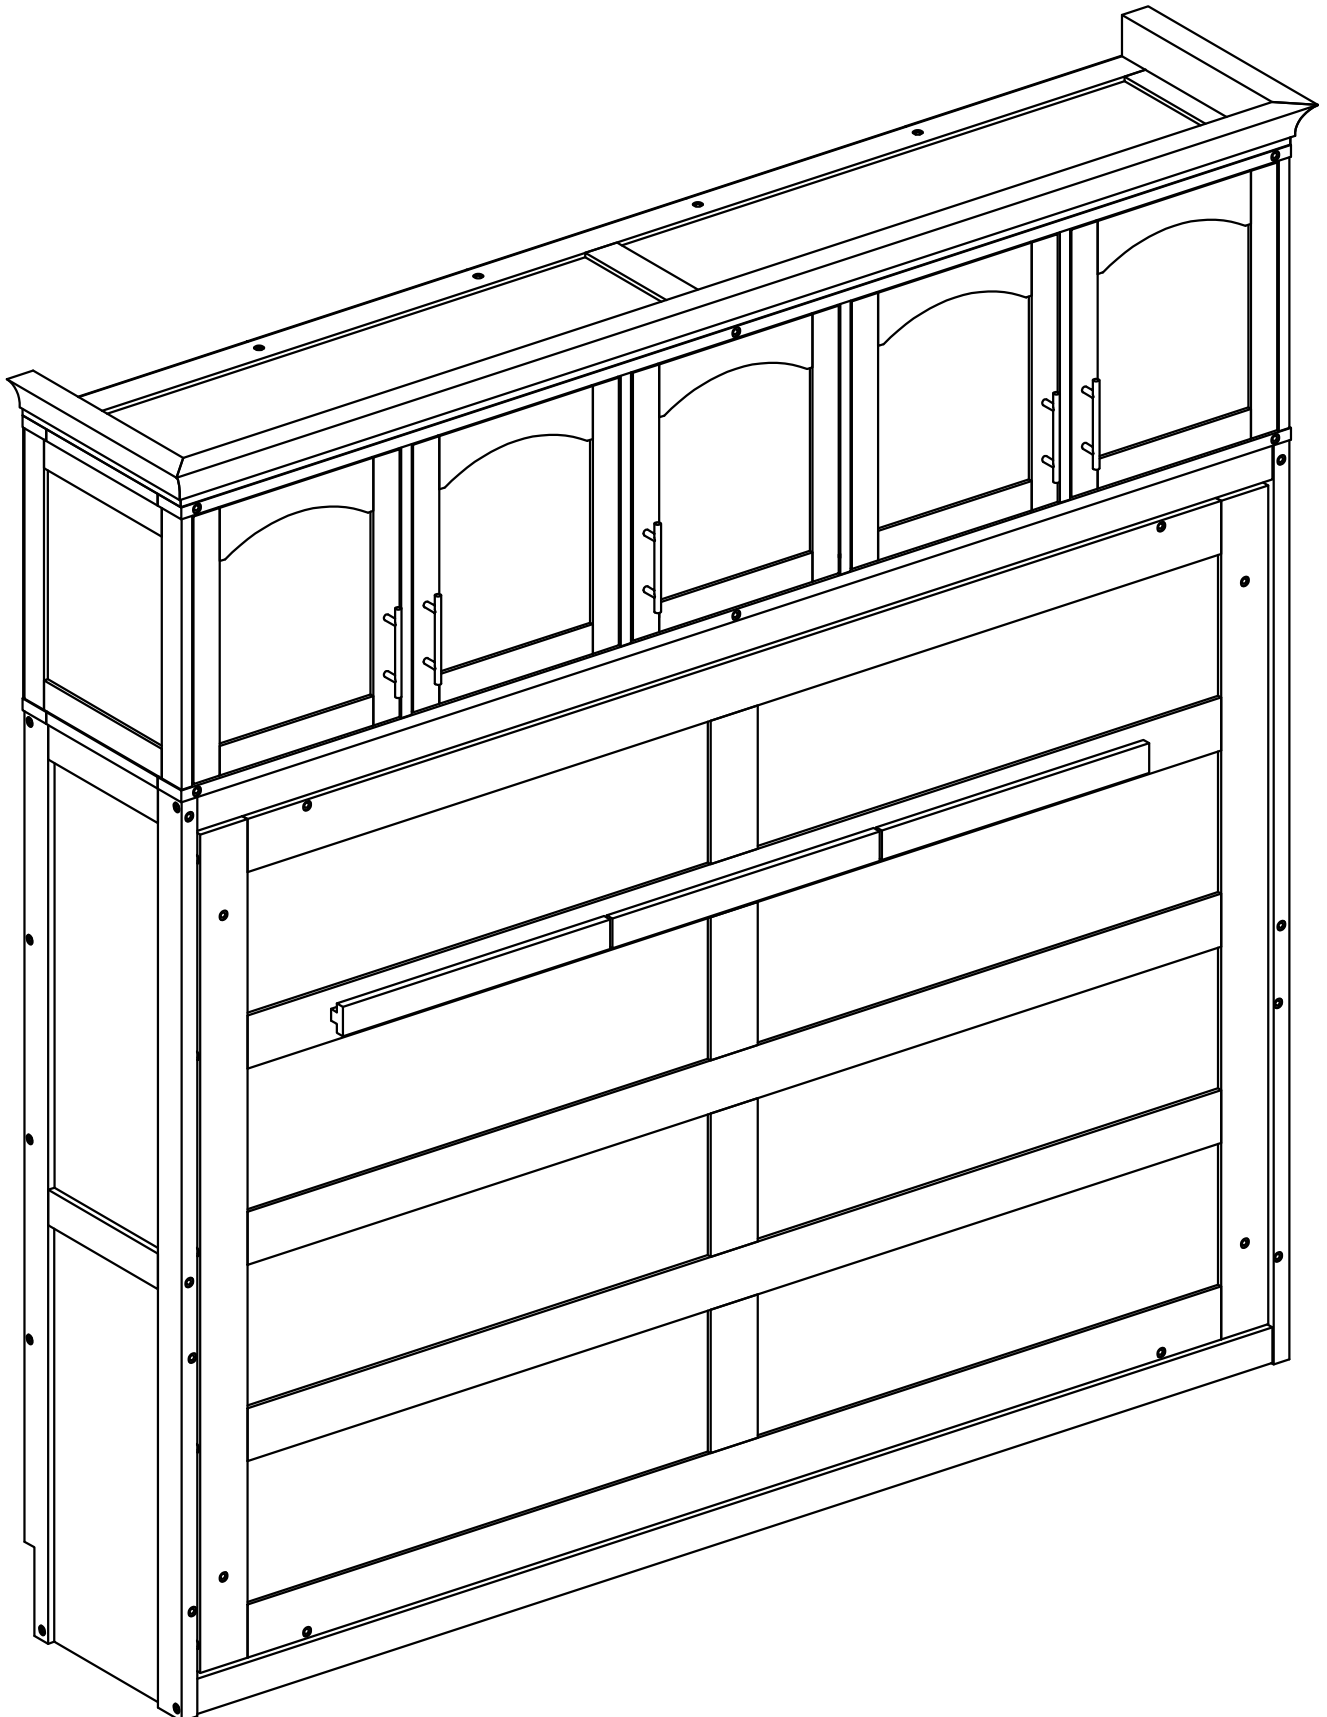



**STEP1:** Following below illustration.

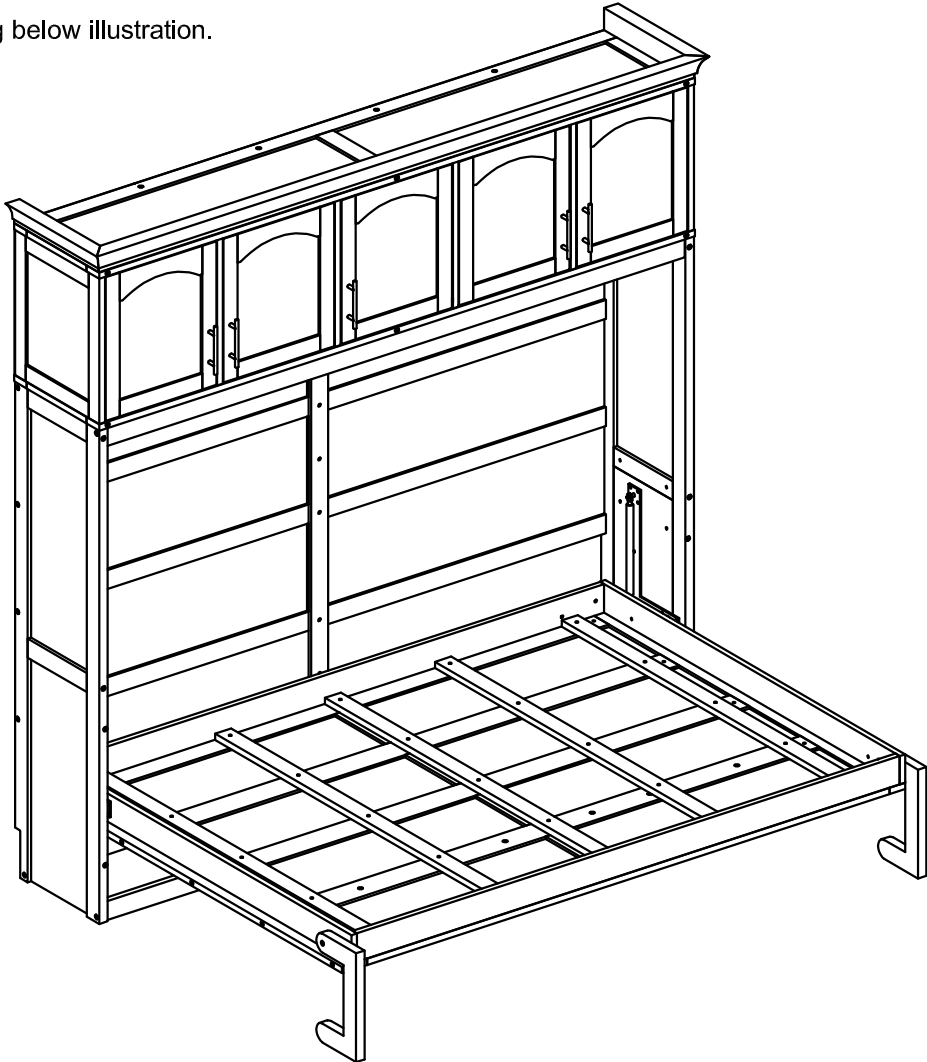

**STEP2:** Following below illustration.

