

# User's Manual











# BEFORE INSTALLATION

This product has been inspected and debugged by the factory to the best condition. Please do not disassemble and assemble it yourself.

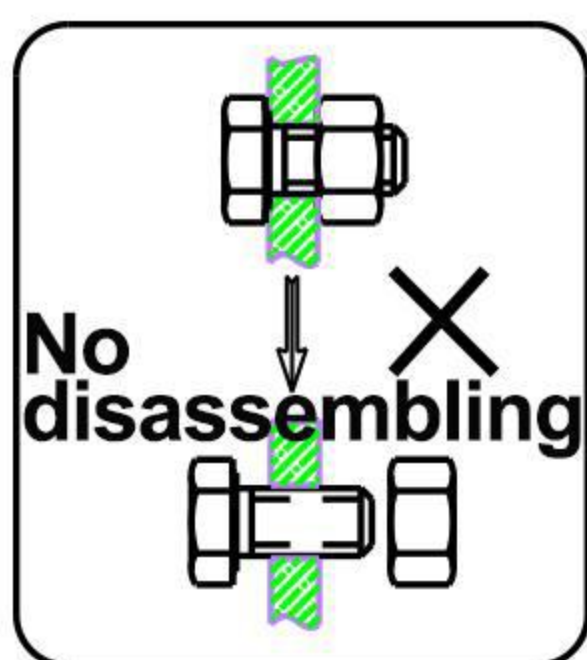


Before installing the product, please be sure to remove sundries and sludge from the water pipe to prevent sundries from blocking the product.

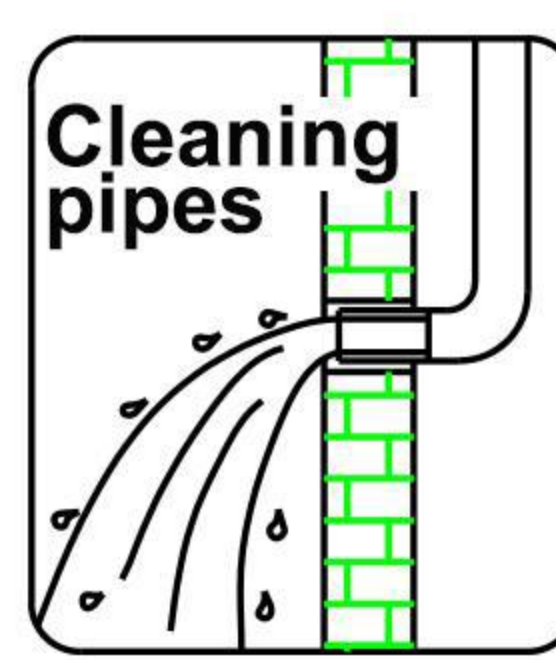


1. Please read the manual firstly before installation;
2. Please check the condition of all the parts, and the installation tools are not included, please prepare it by yourself;
3. User manual includes matters needing attention during installation, please keep it properly;
4. The size chart in the manual is for reference only, please refer to the actual product that you receive.


## Recommend Tools :

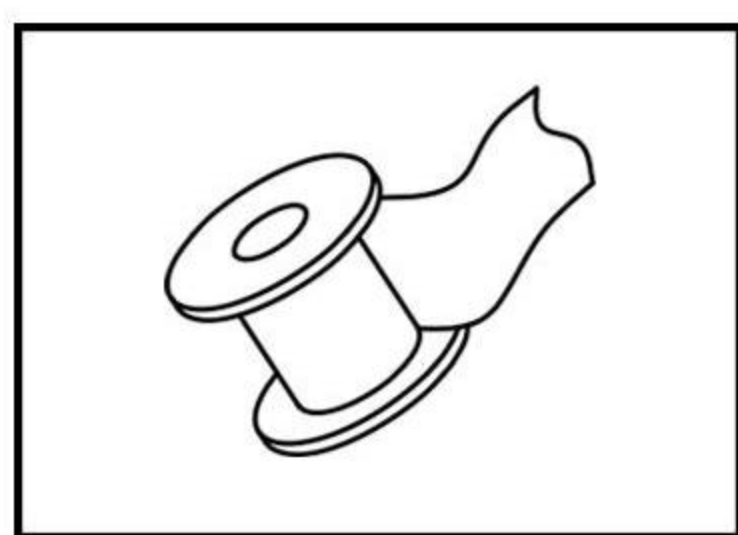


PTFE Tape

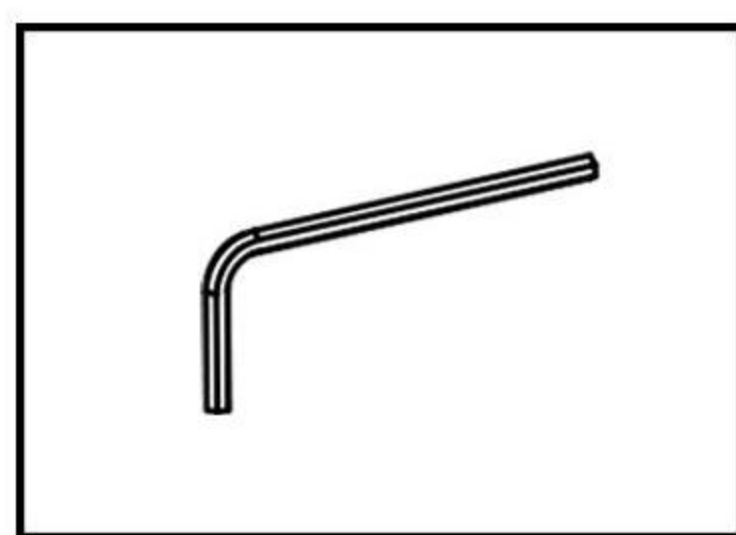

Hex Key

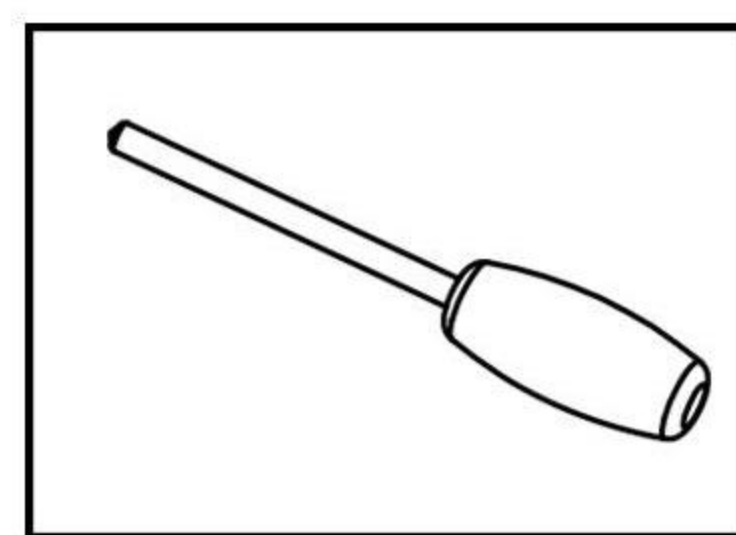




Slotted Screwdriver

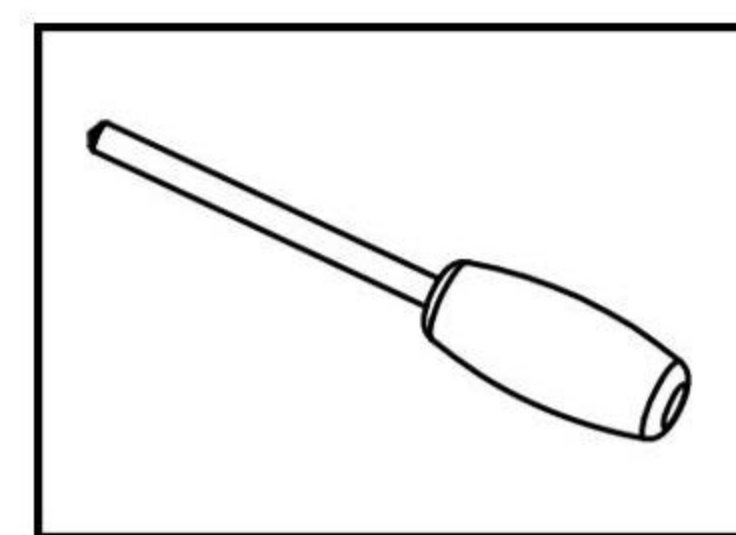

Phillips Screwdriver

1. The sundries at the connection area must be cleared before installation to avoid blockage or leakage;
2. Connect the inlet pipe correctly as shown in the figure;
3. The maximum temperature of hot water is not higher than 80°C (176°F);
4. Please contact seller for consultation if you need to install in other method.


# INSTALLATION DIMENSION

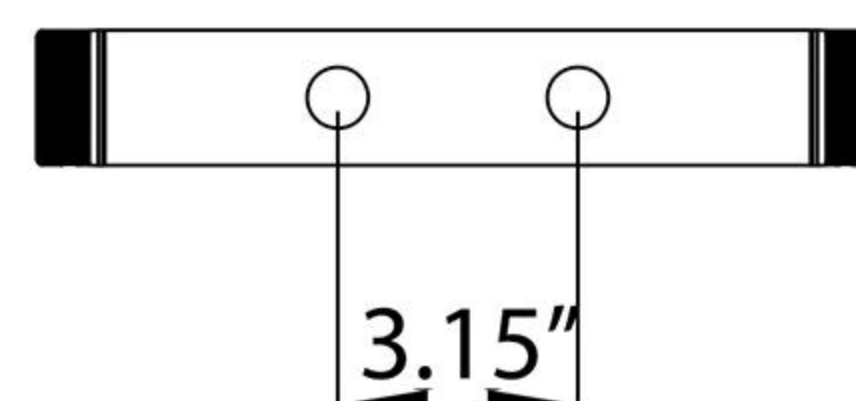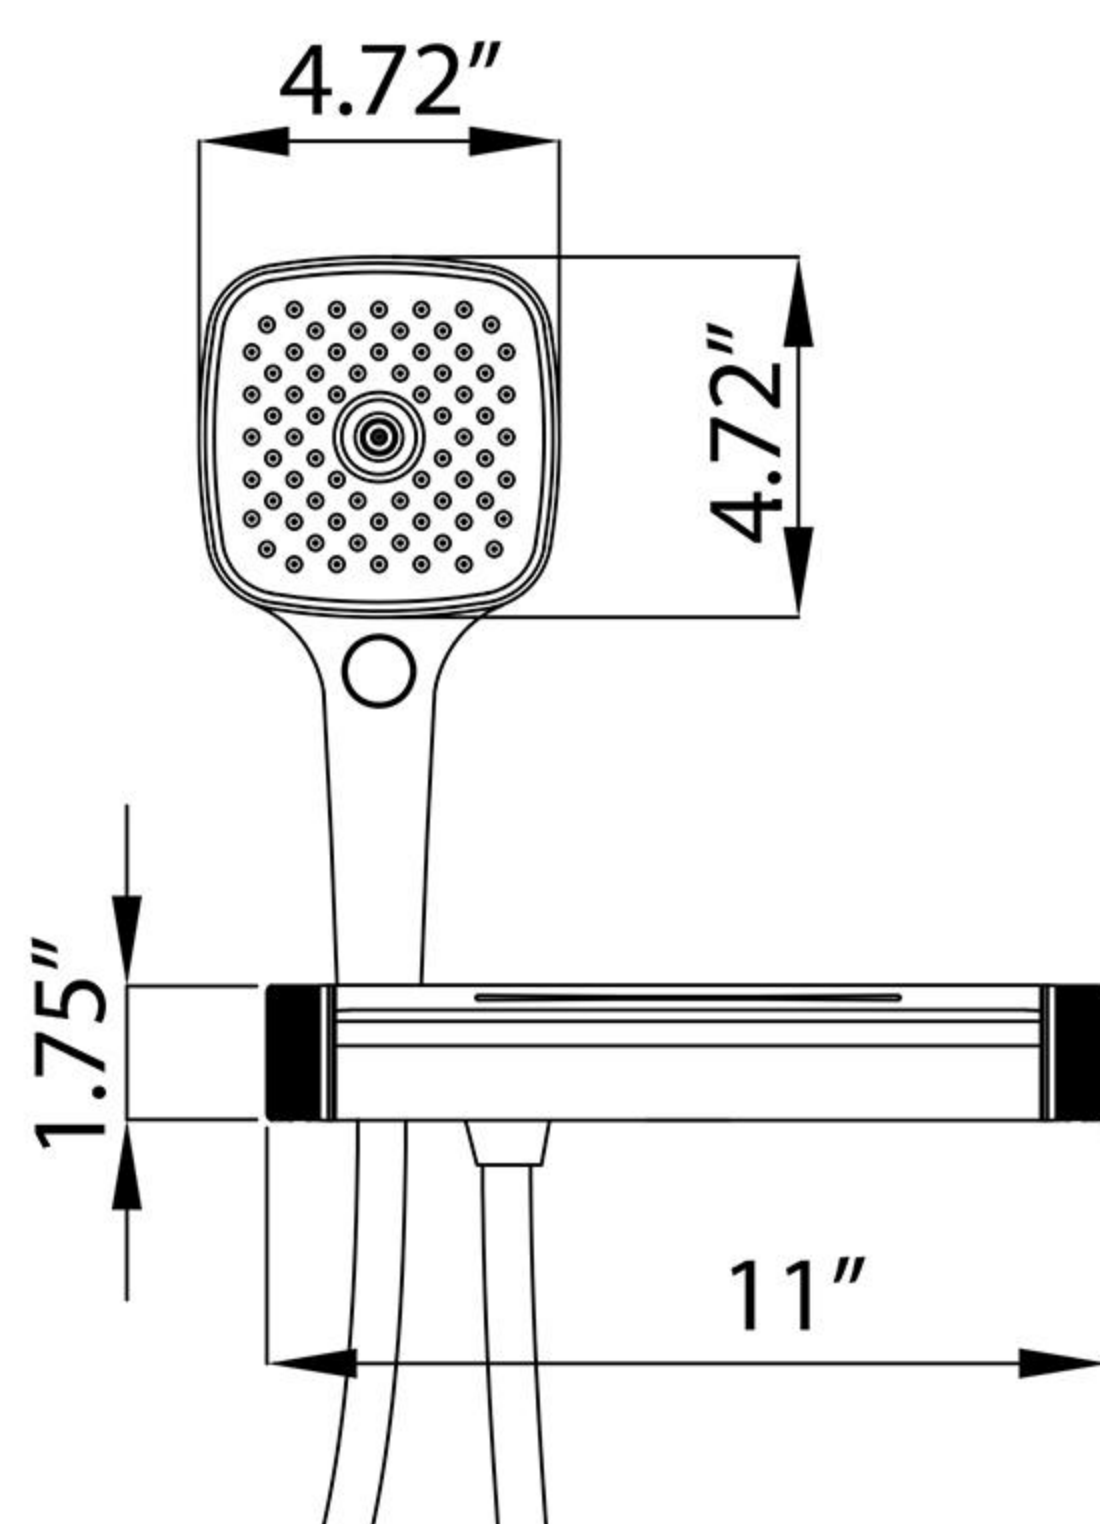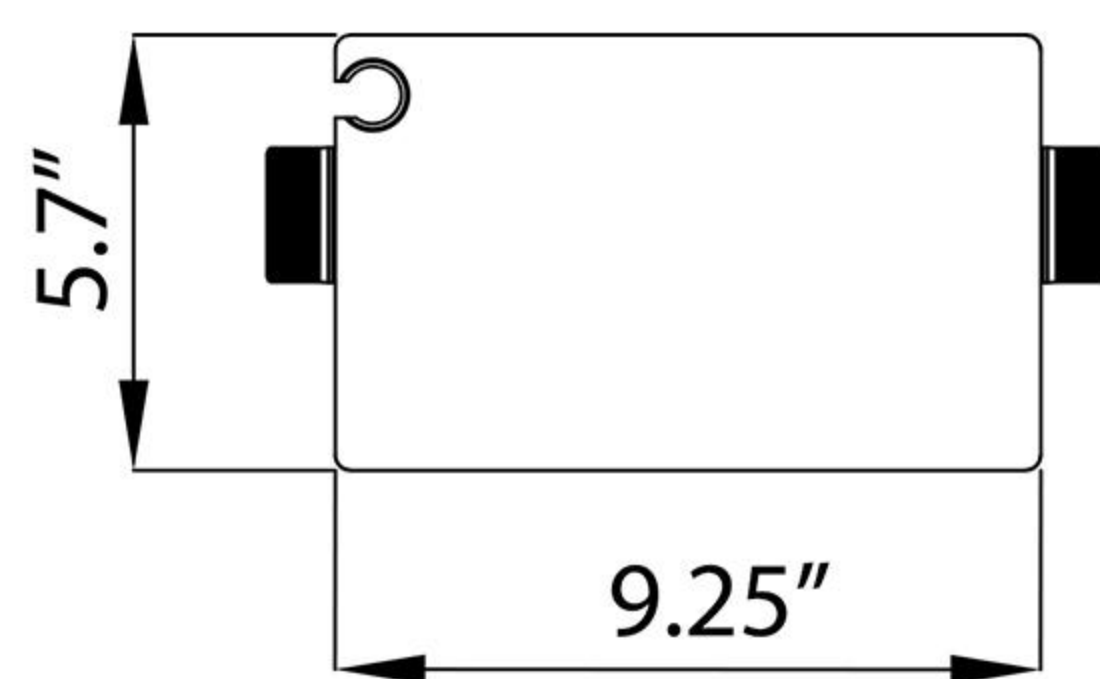




# INSTALLATION STEPS


## Configuration List

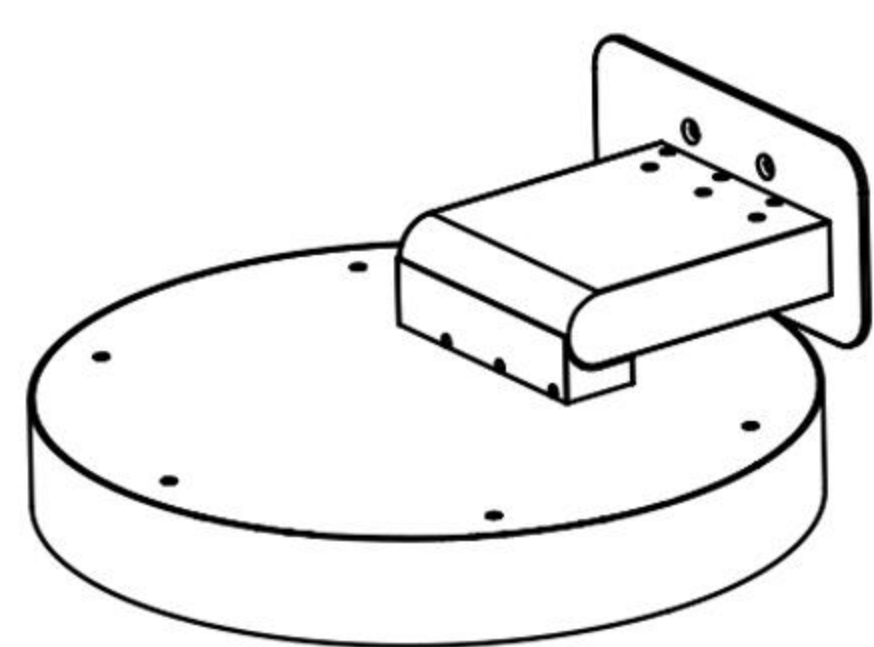

Shower body

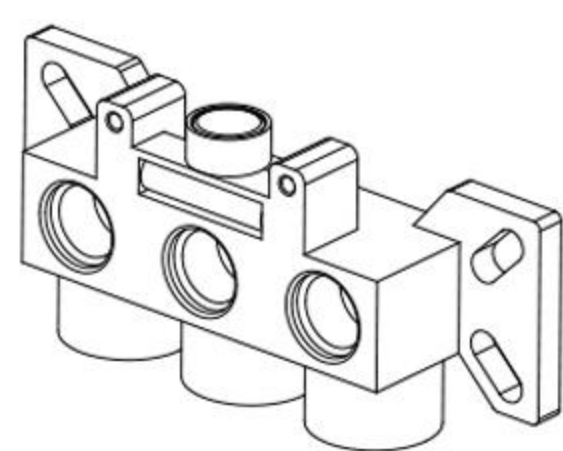

PPR(G1/2)

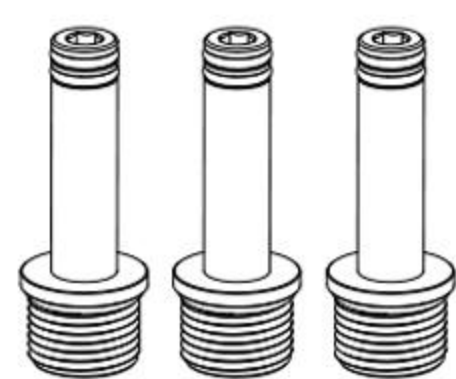


Connector



Expansion bolt






Accessory

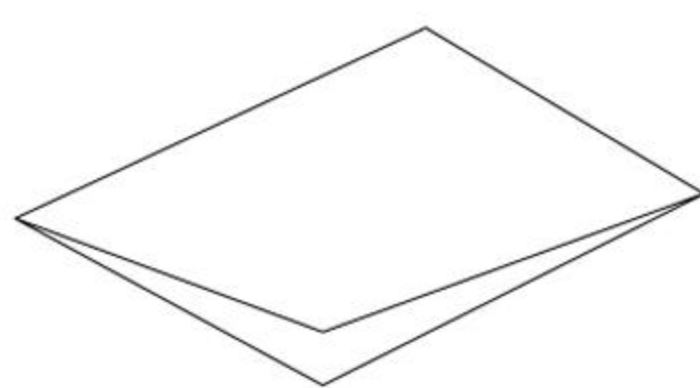

Instructions

## Installation process


- 1. Open the water source and remove the mud and sand from the water pipe,Clean and flush out the dirt.
- 2. Slot size for rough wall:  
175 \* 80 \* 39mm deep.
- Attention:
  - A. The surface of the PPR embedded box is flush with the rough surface.
  - B. Refer to the level gauge on the PPR embedded parts,Ensure balance before fixing.Excavate cold and hot water pipes as well as outlet pipe slots.
- 3. Tile slot size: 115 \* 75mm

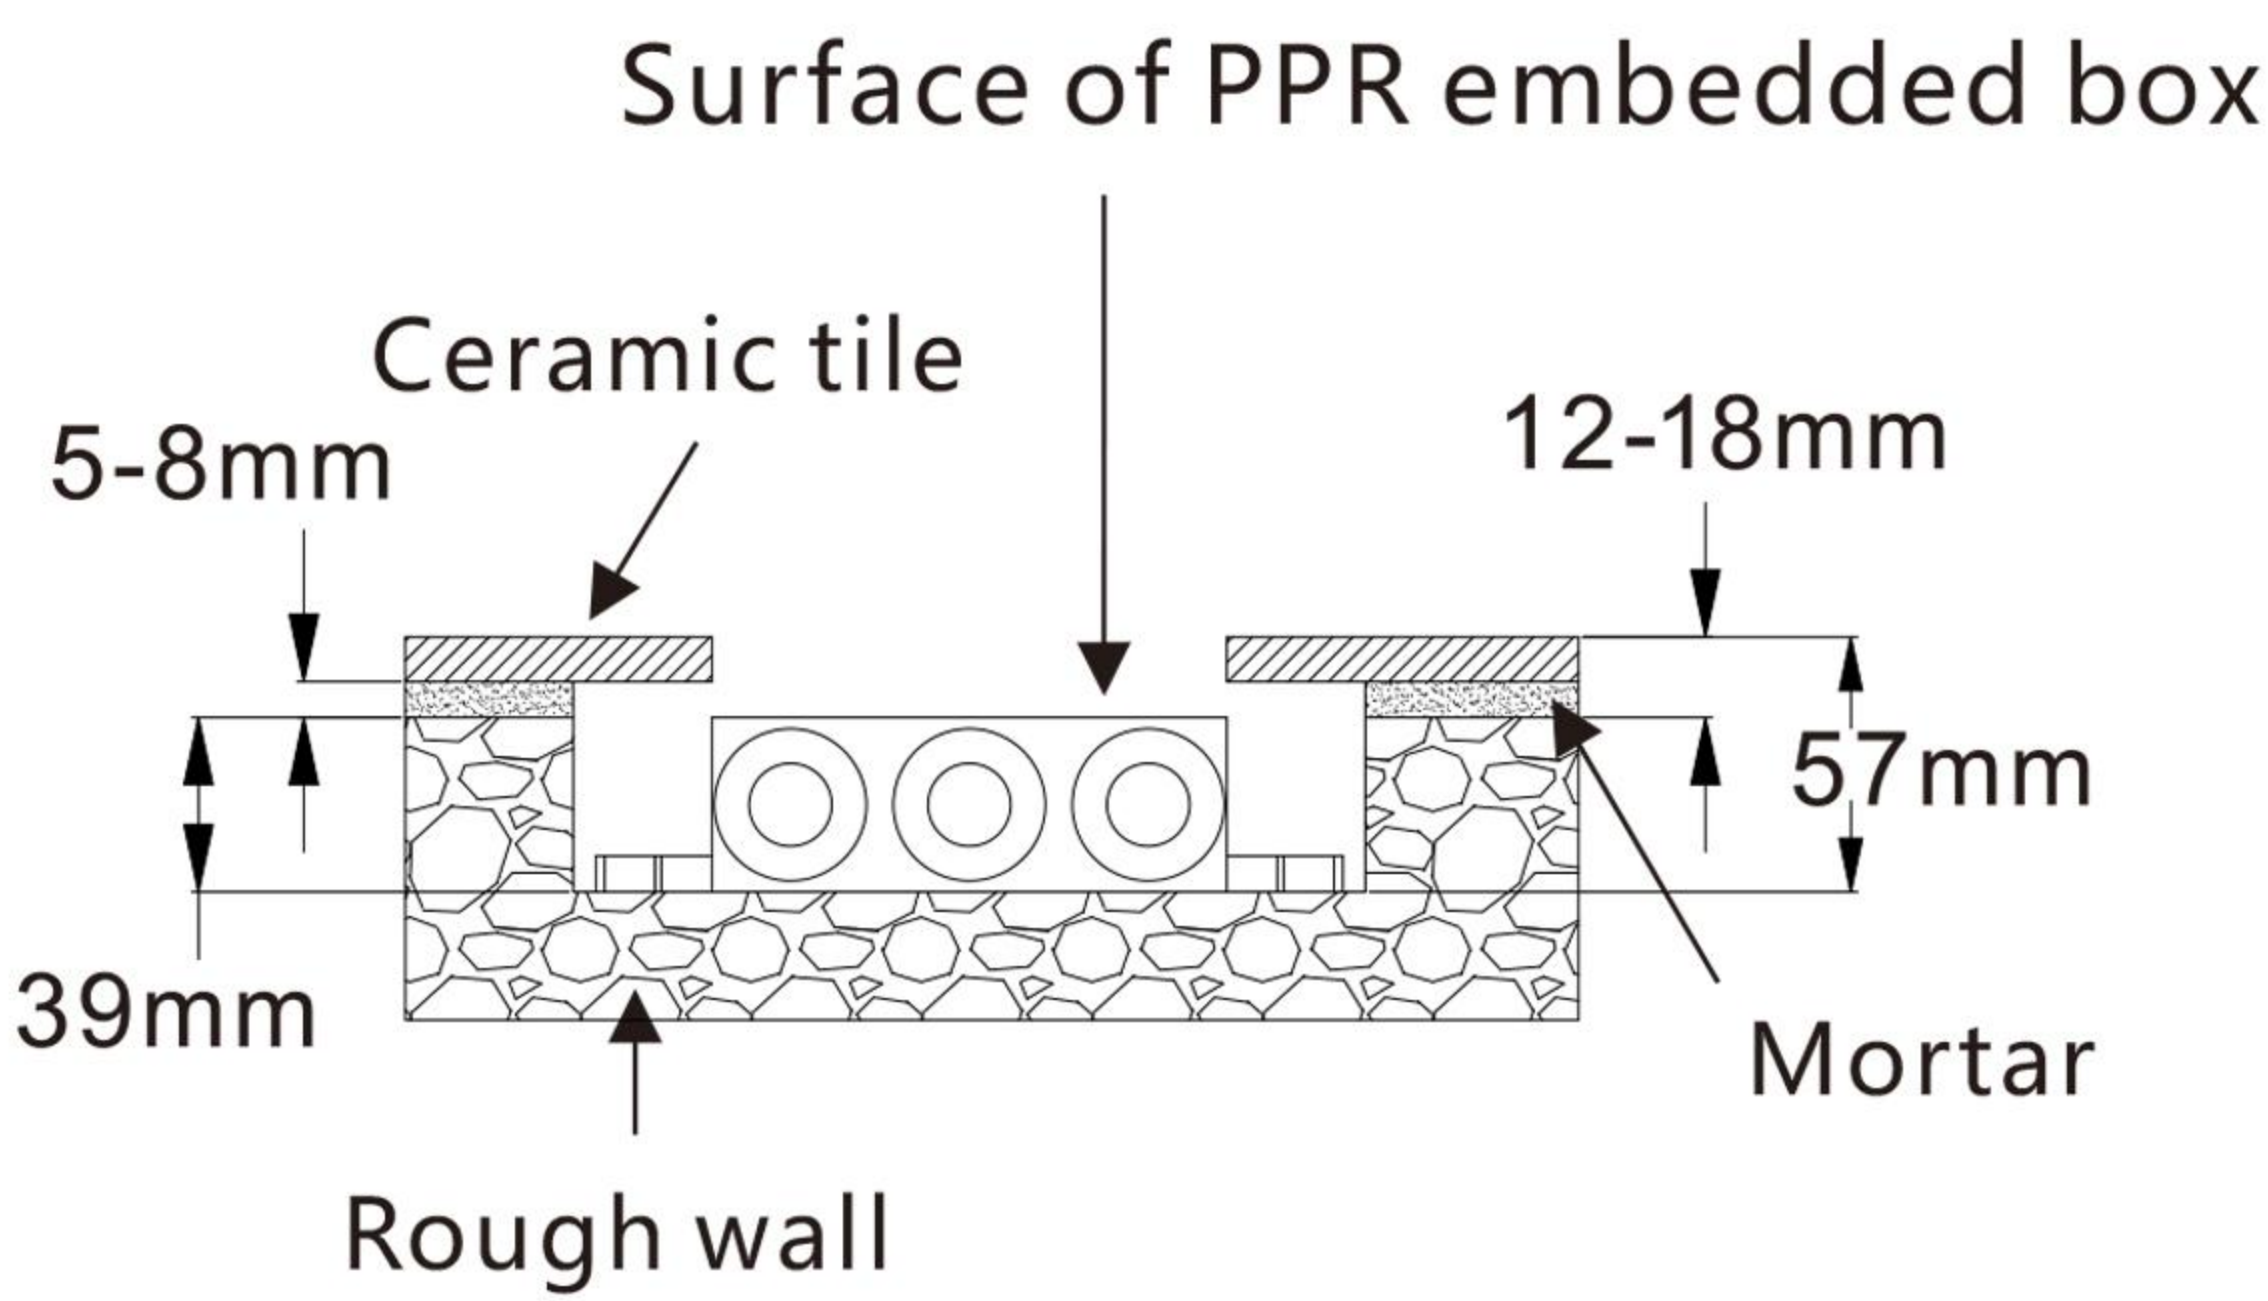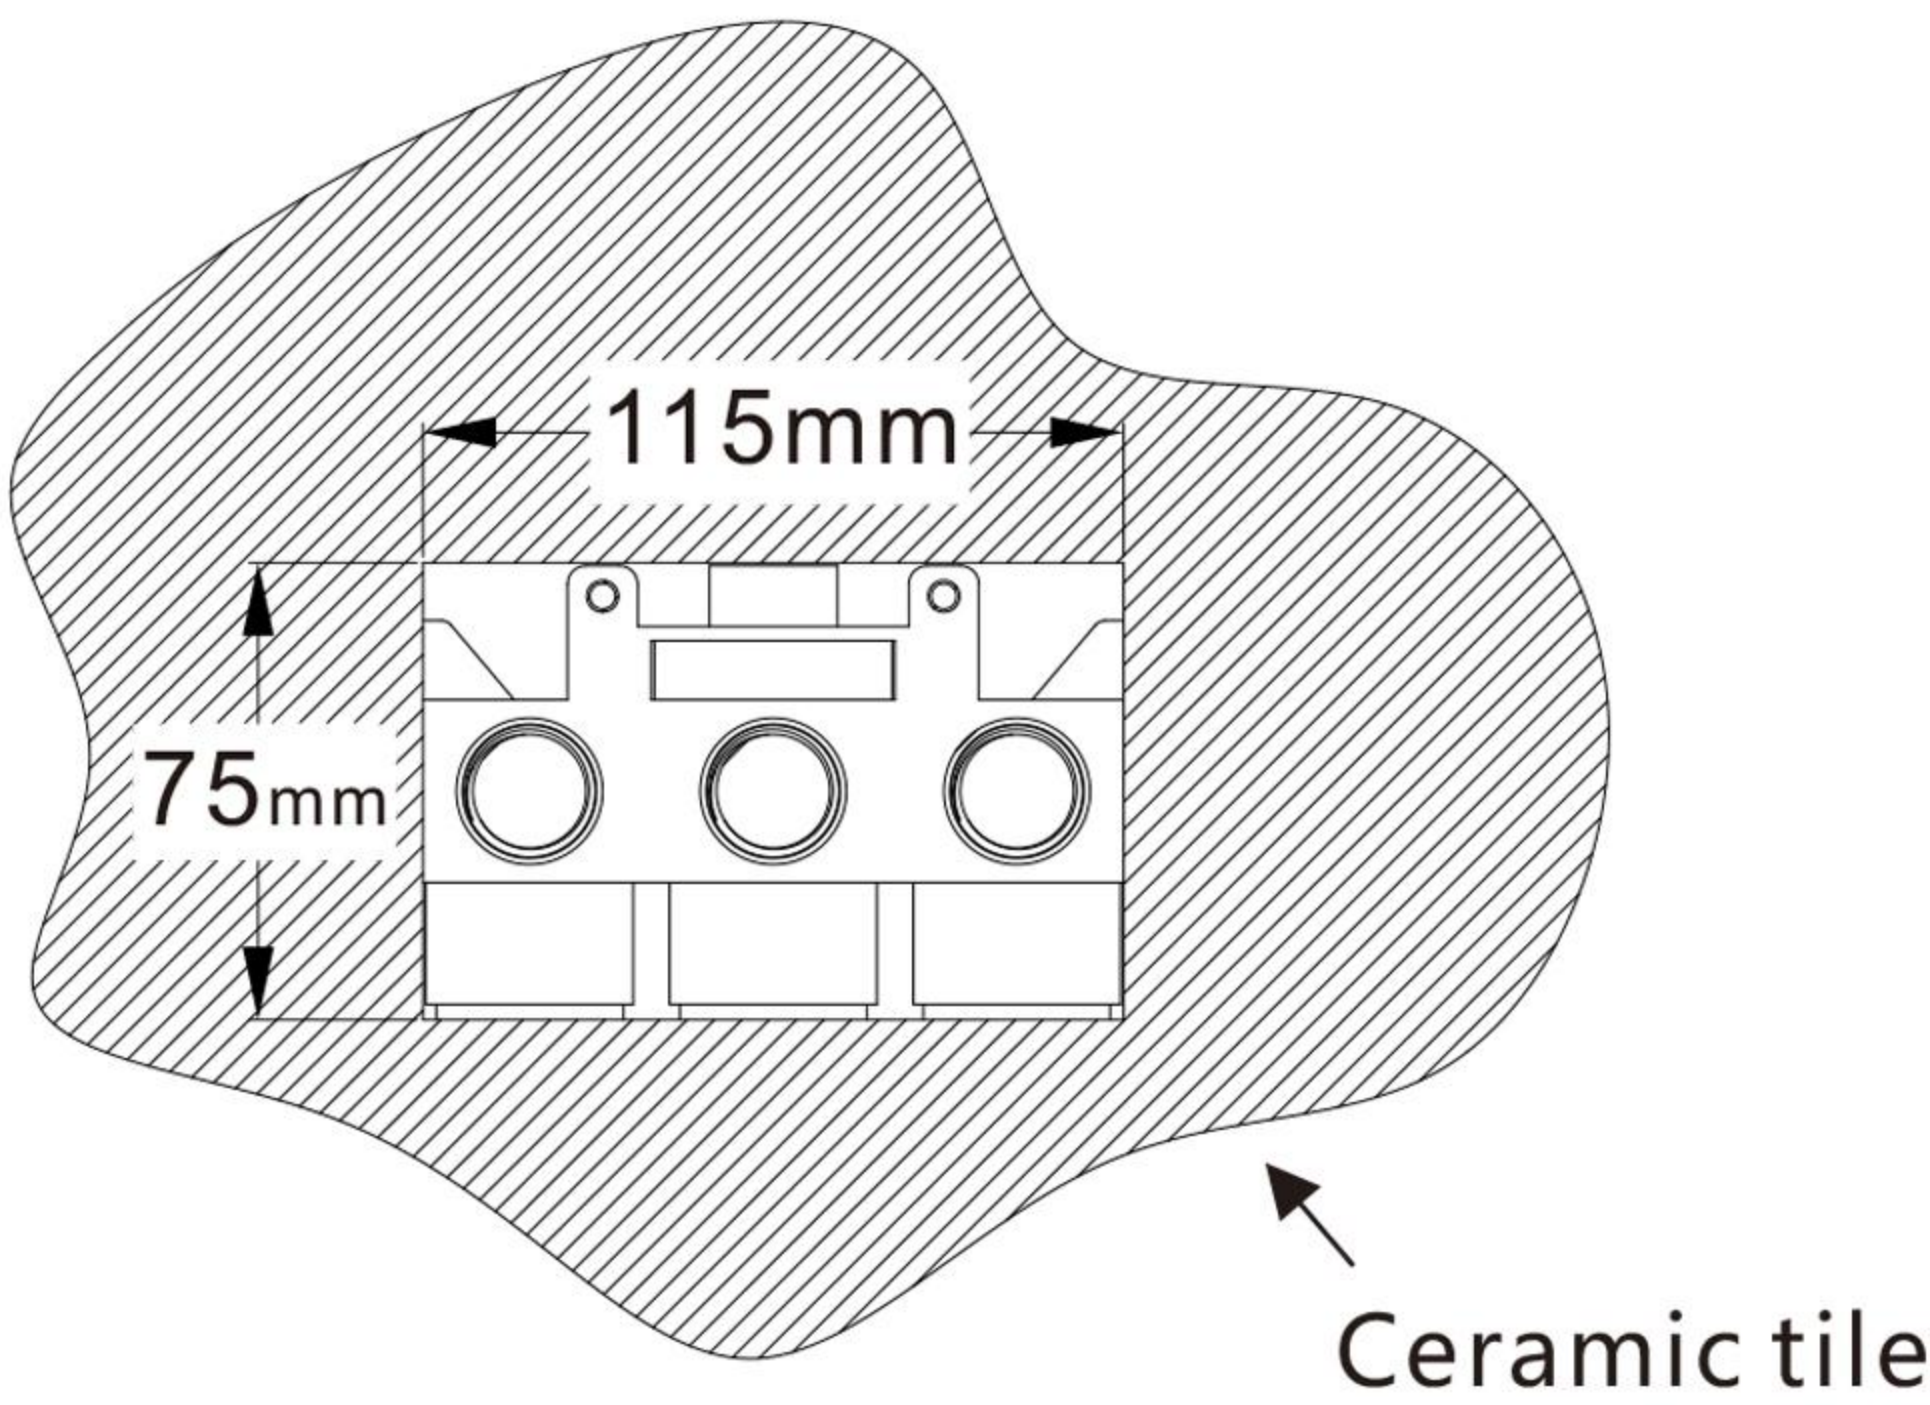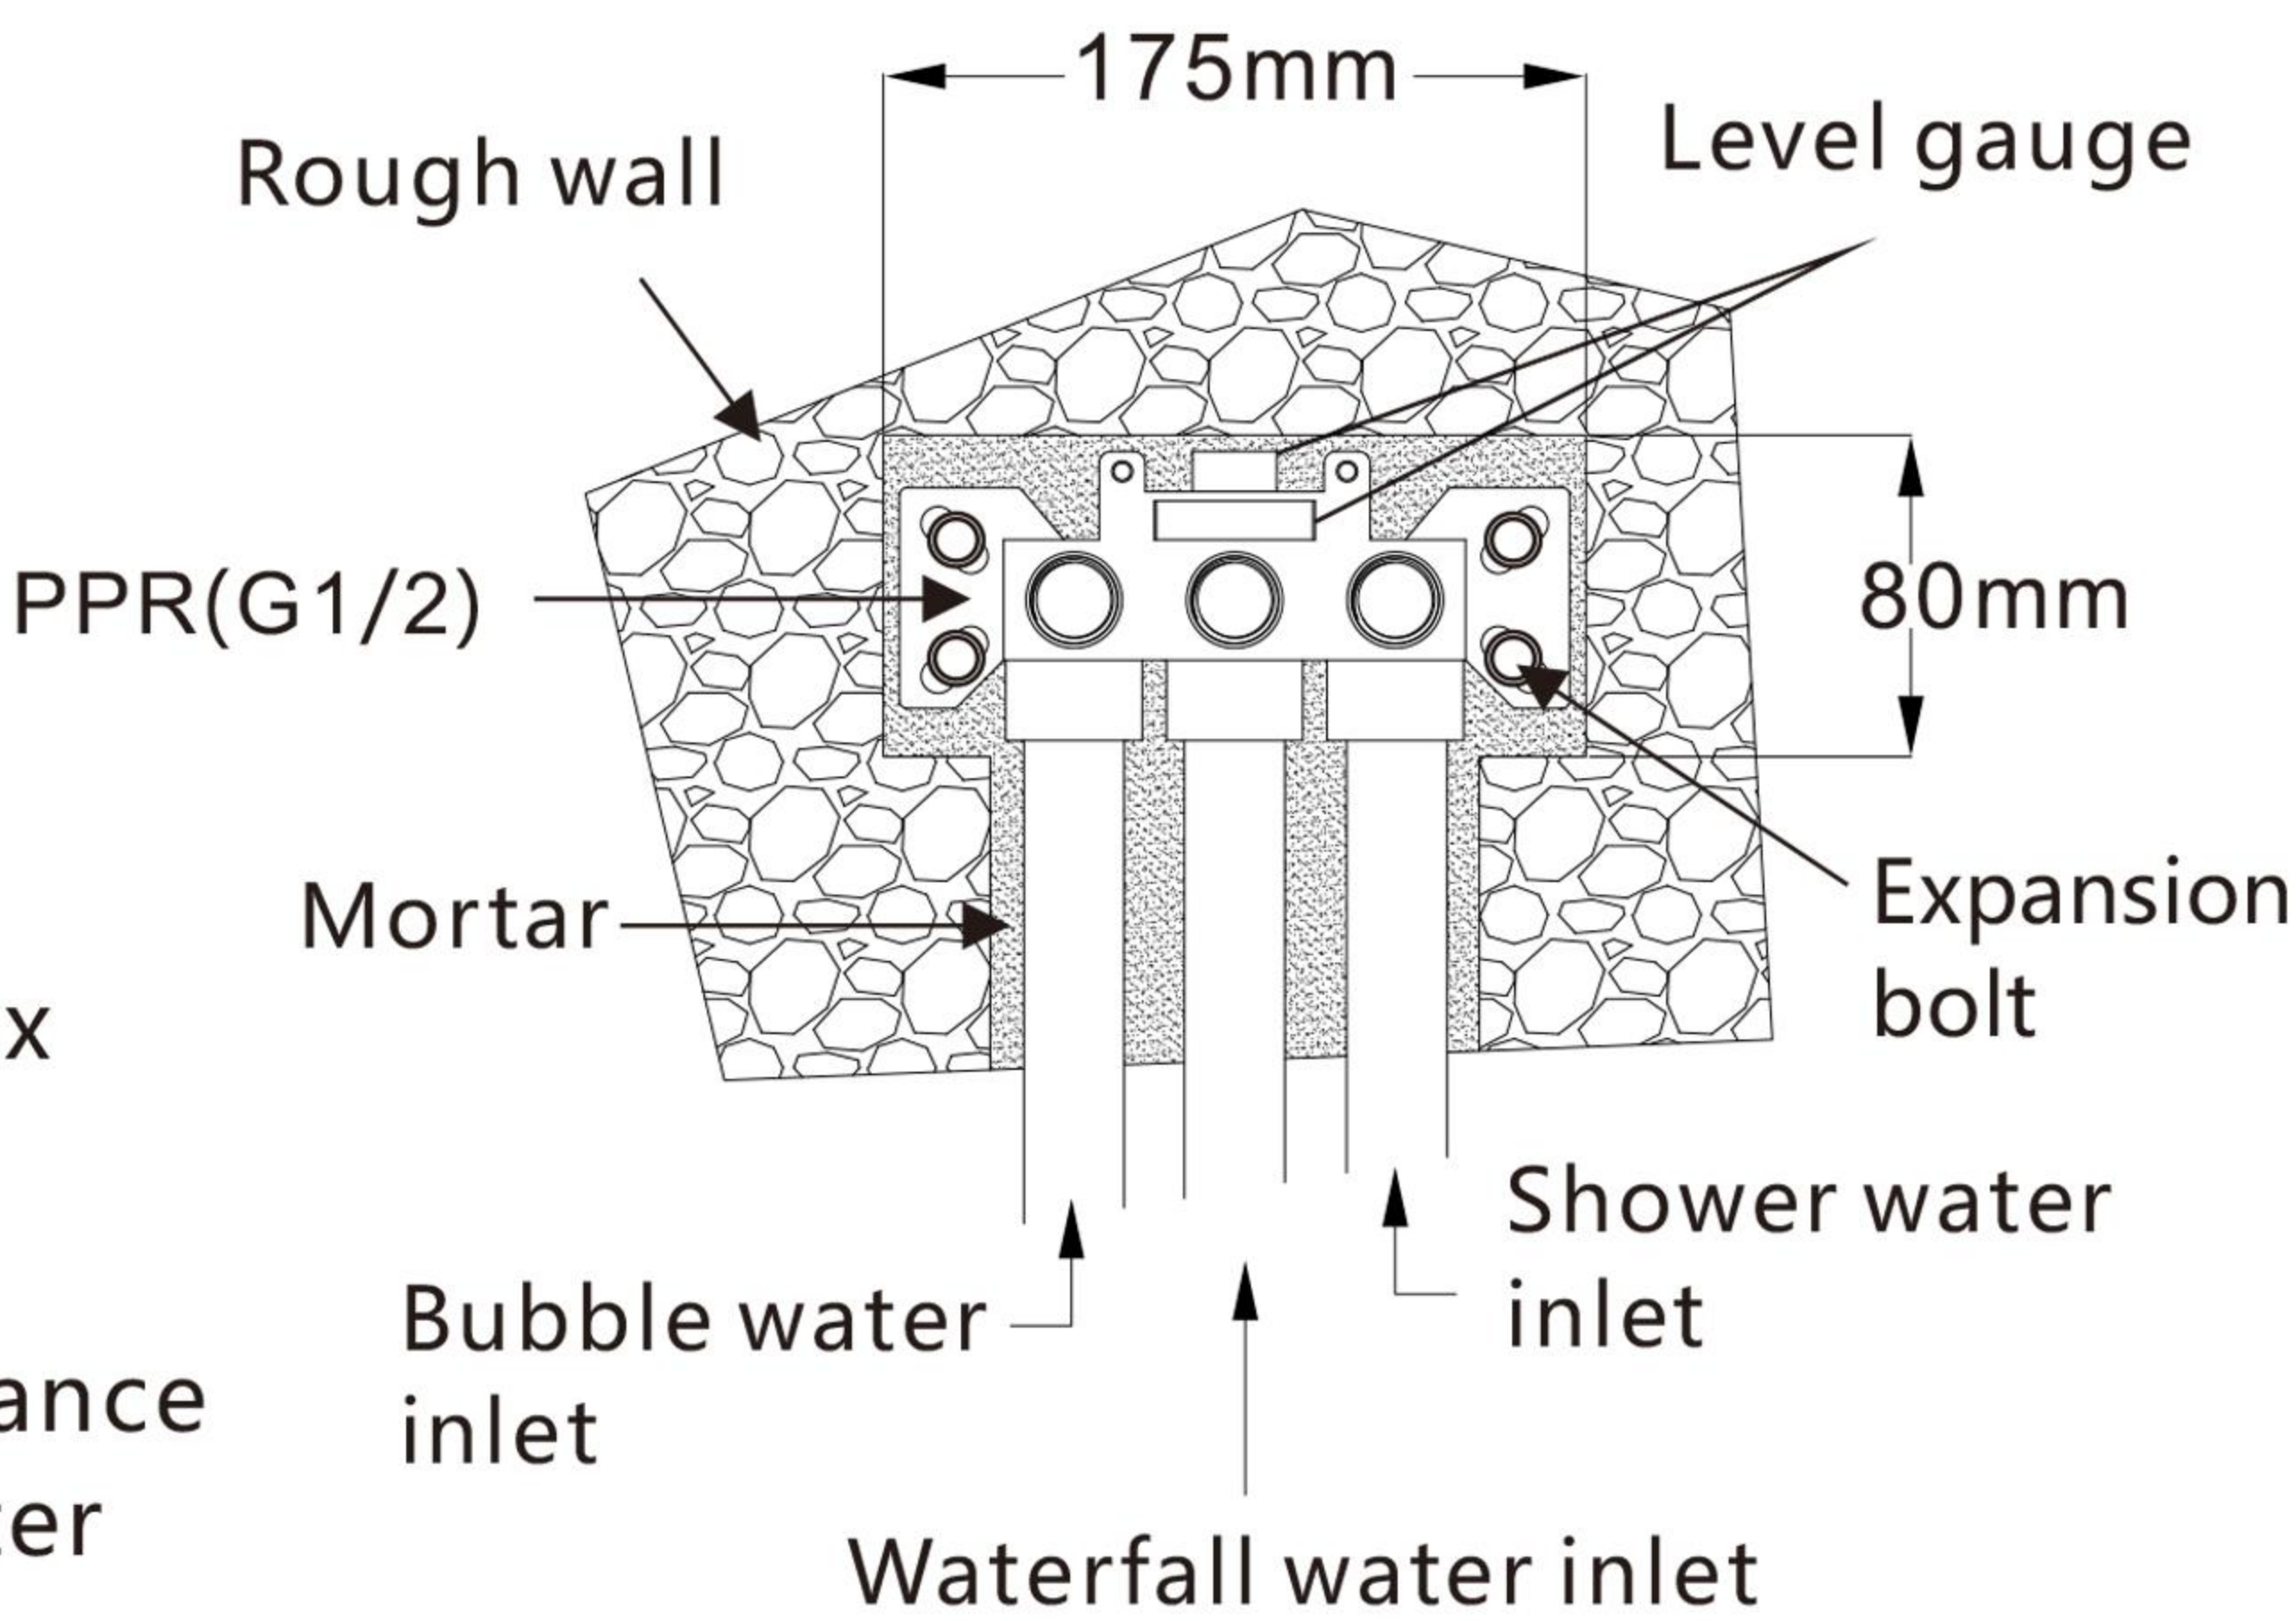




# INSTALLATION STEPS

4. Installing connecting pieces.

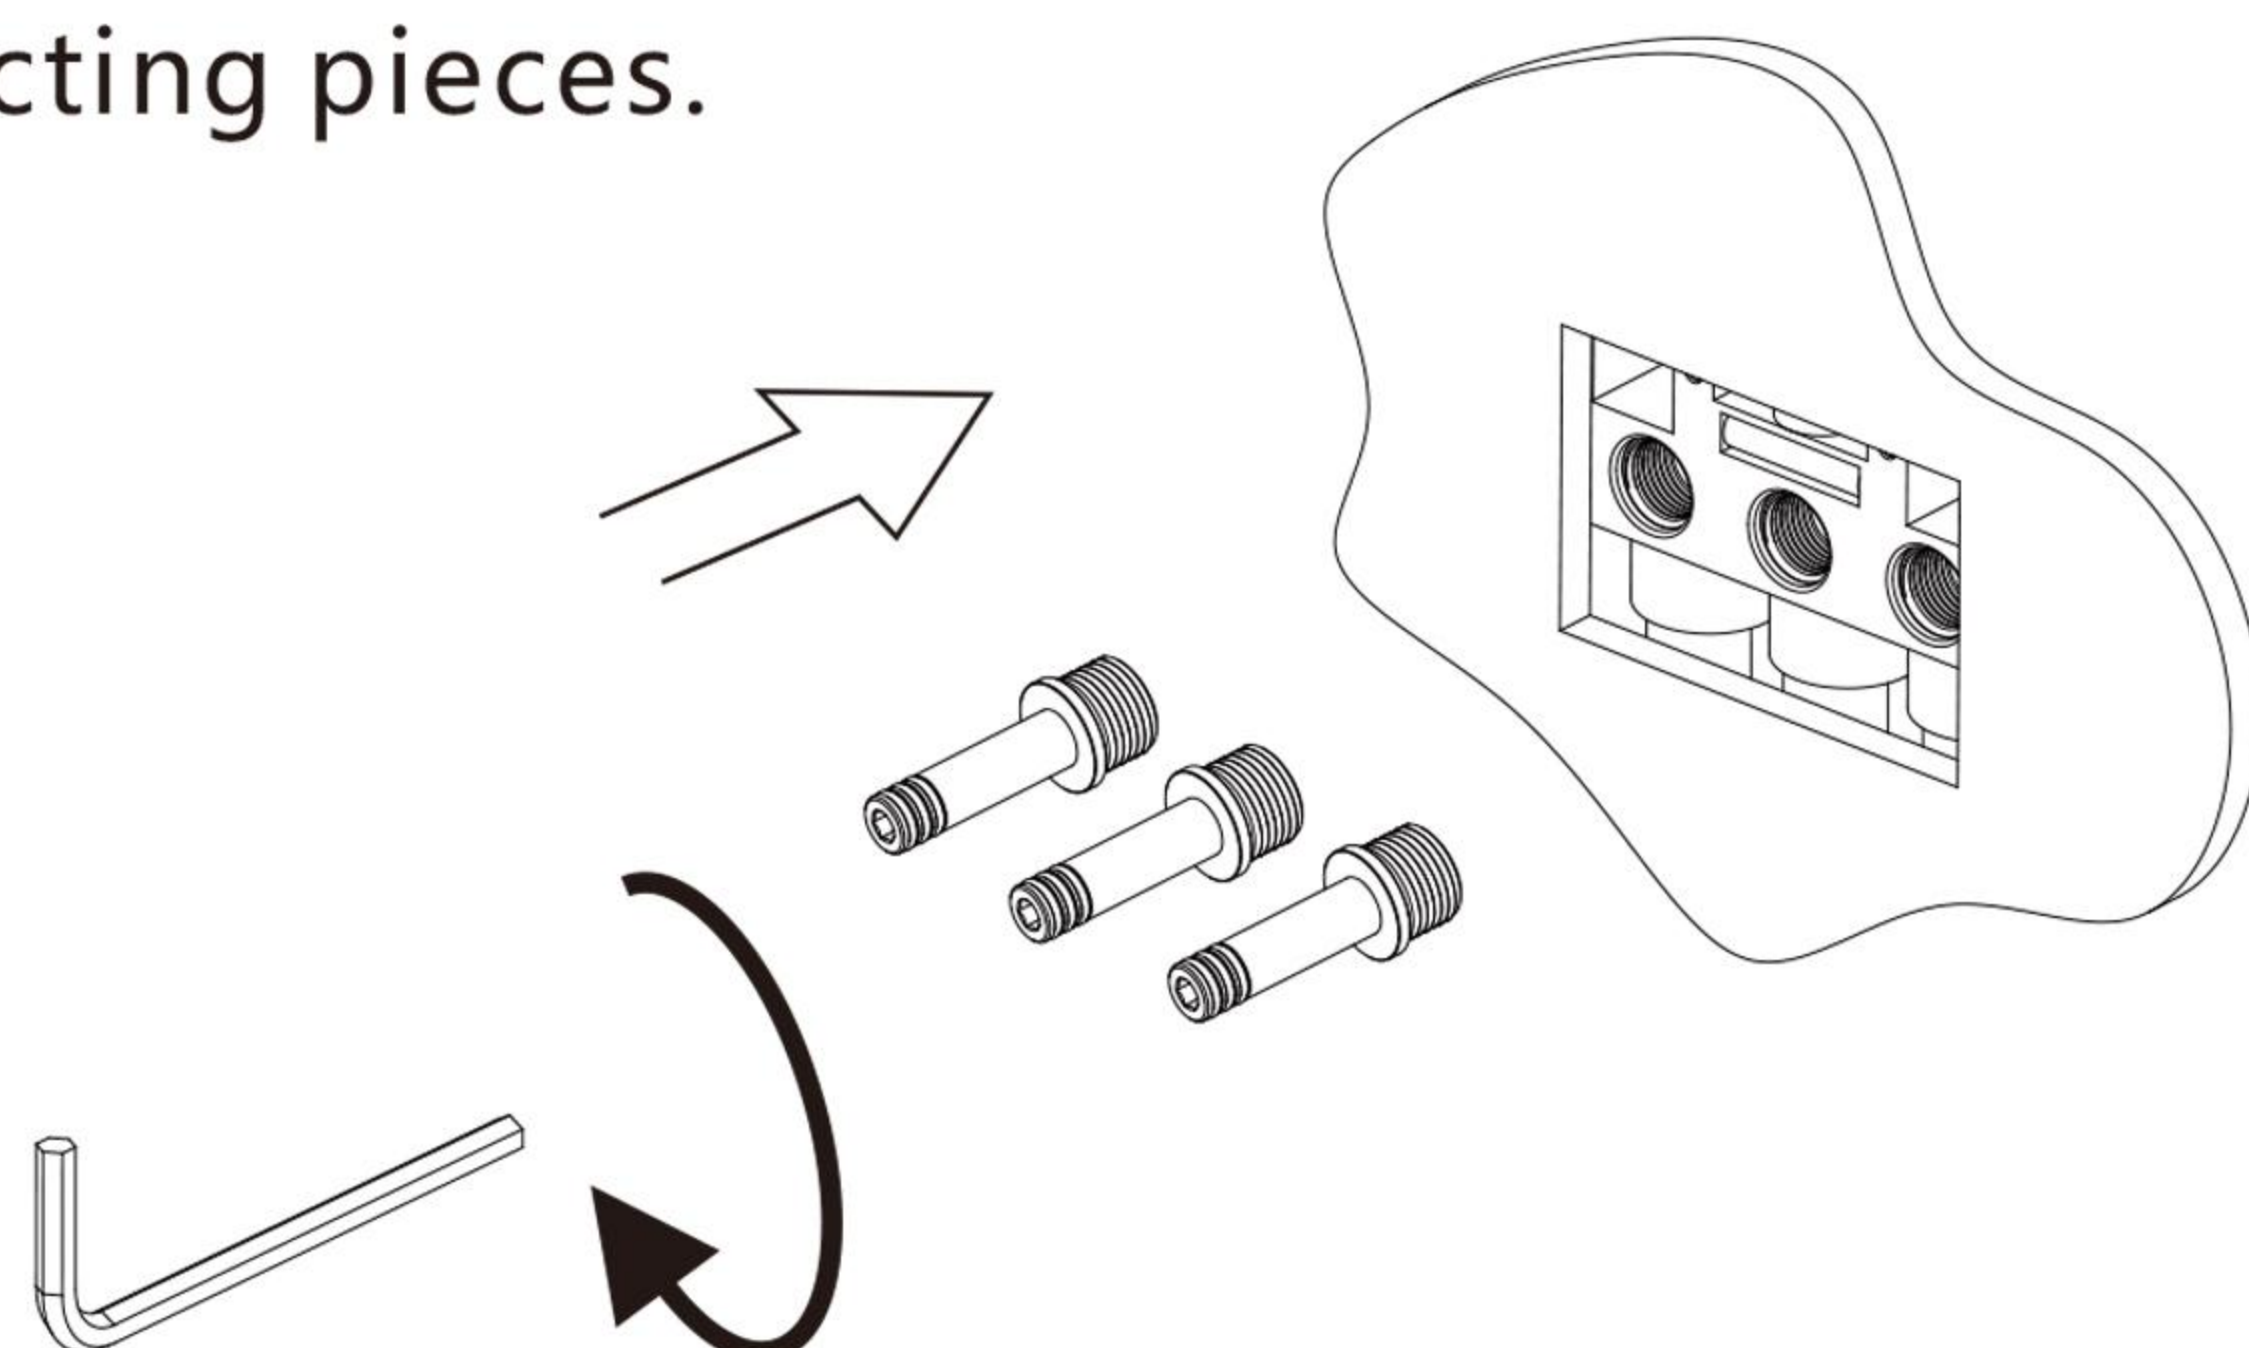

5. Insert the main body into the connecting piece and fix it with screws from top.

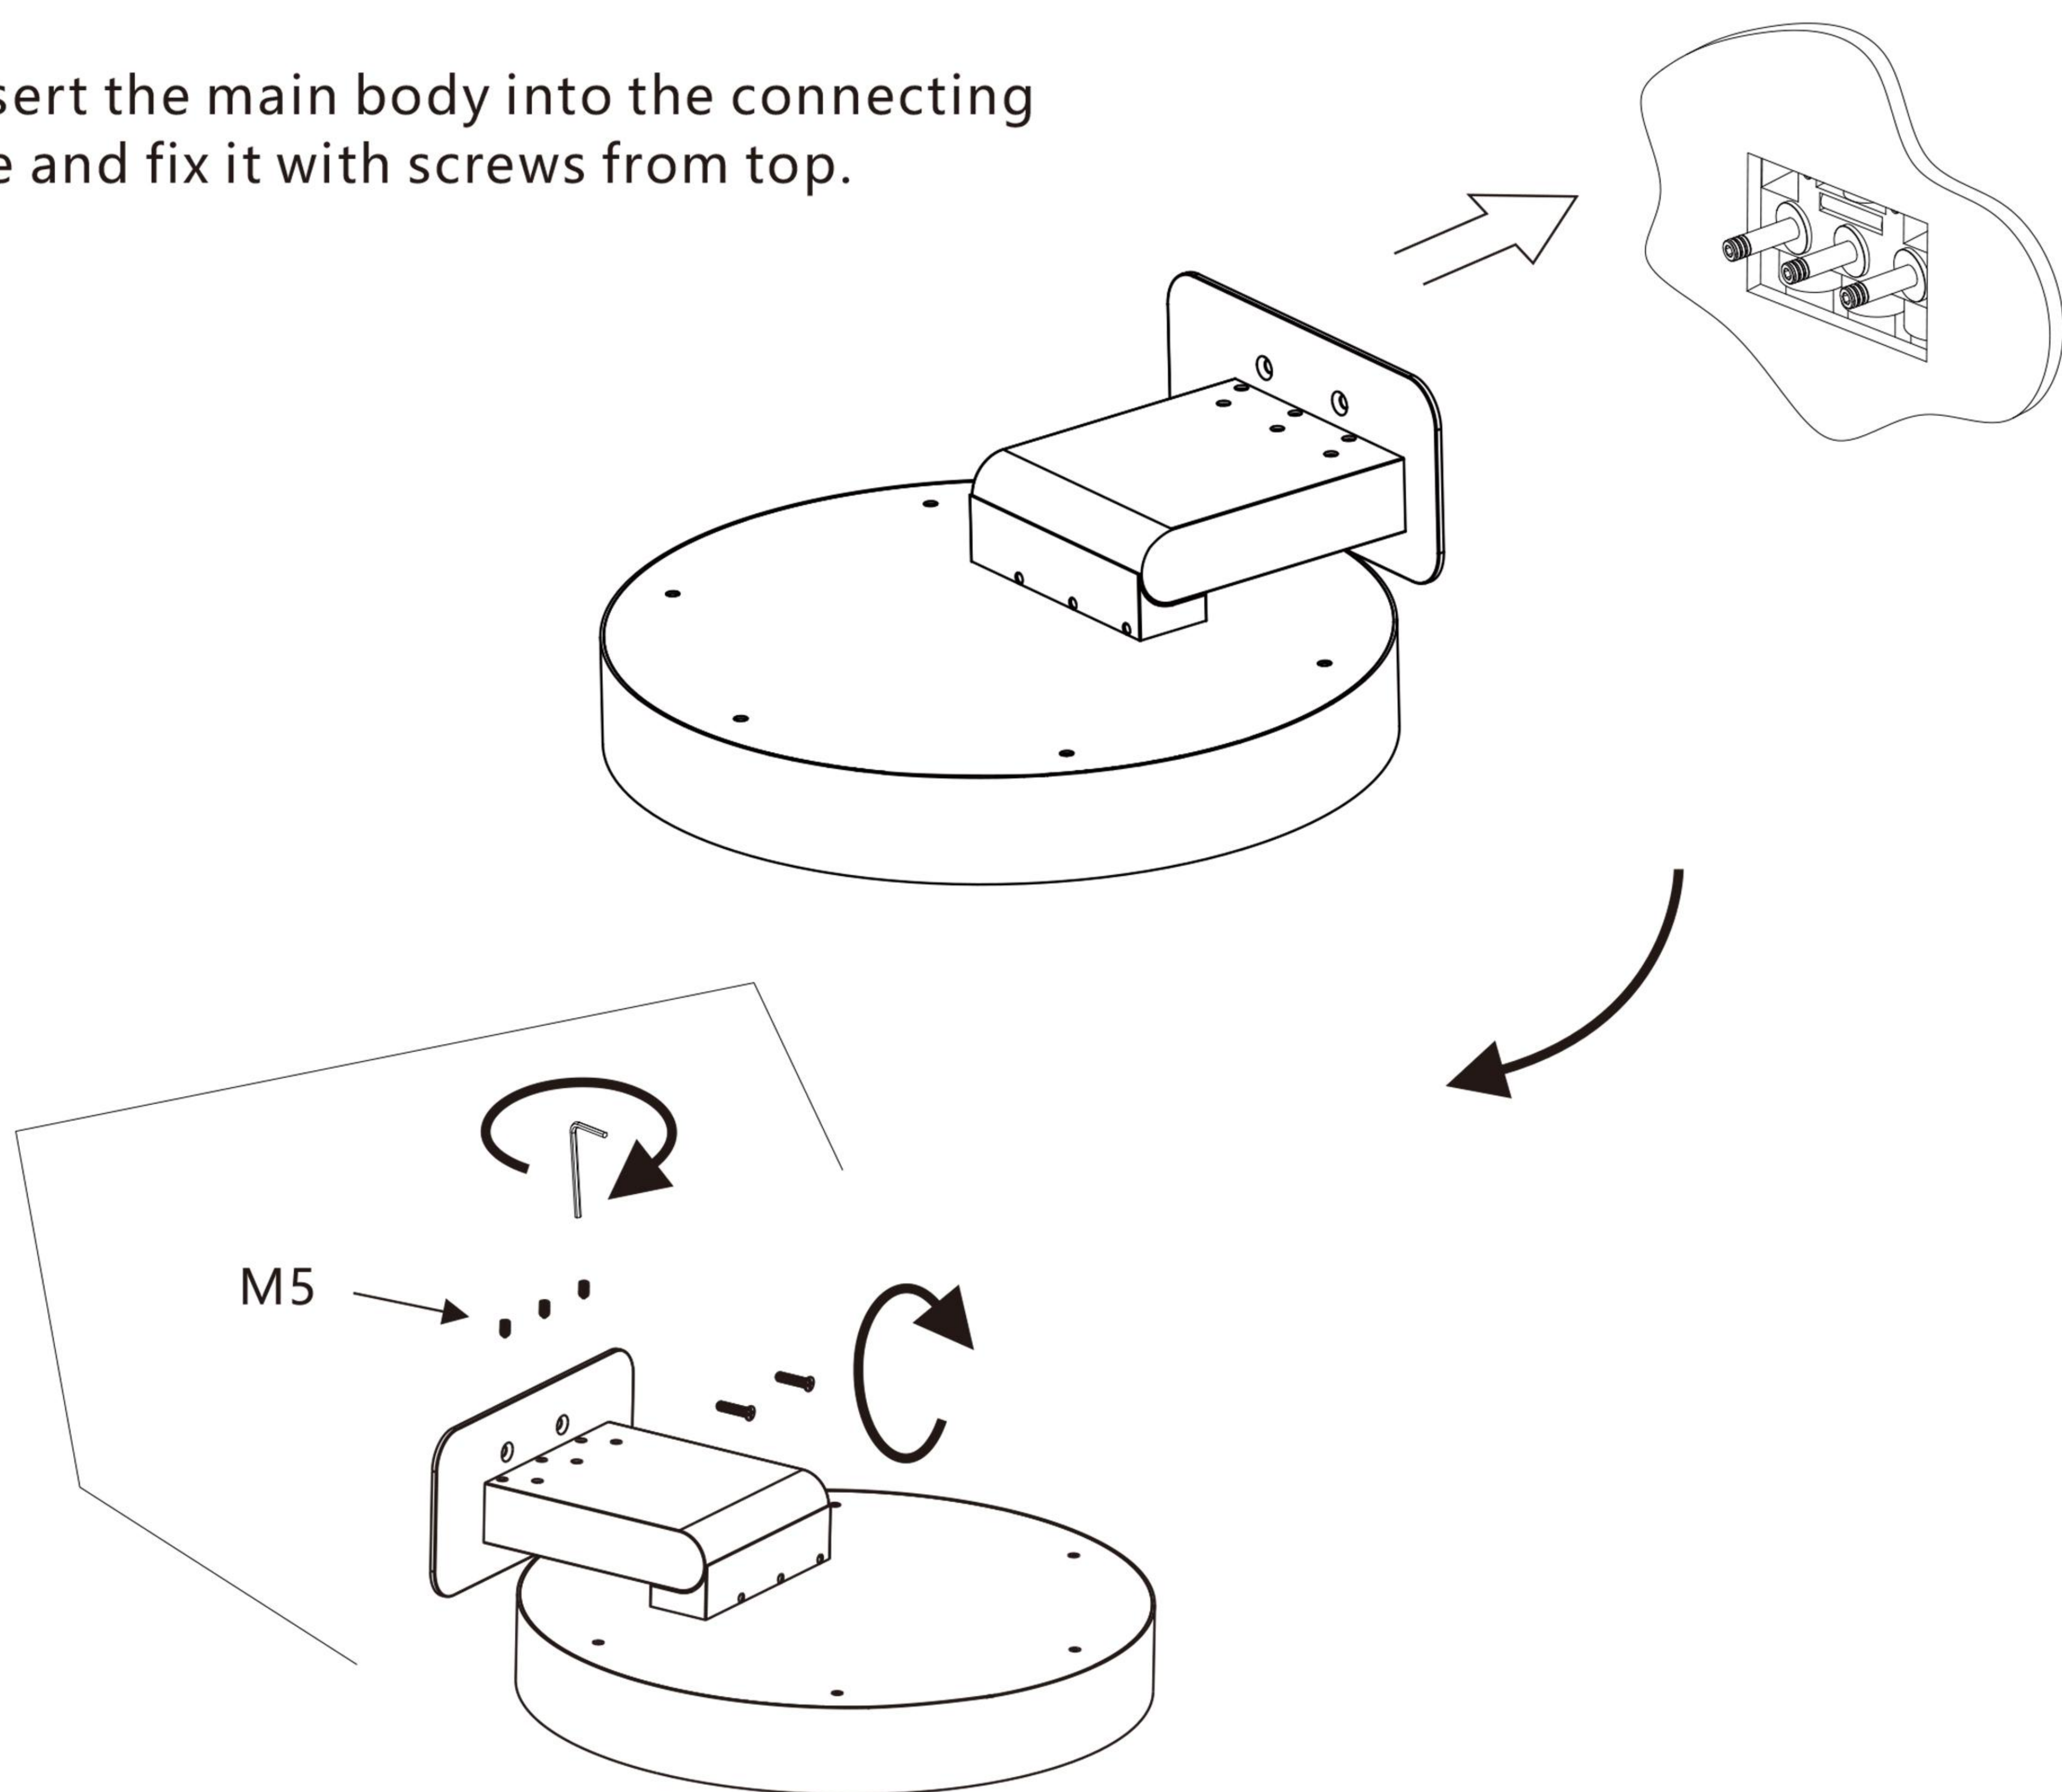


6. Check the water outlet and complete the installation.




# INSTALLATION STEPS


## Configuration List

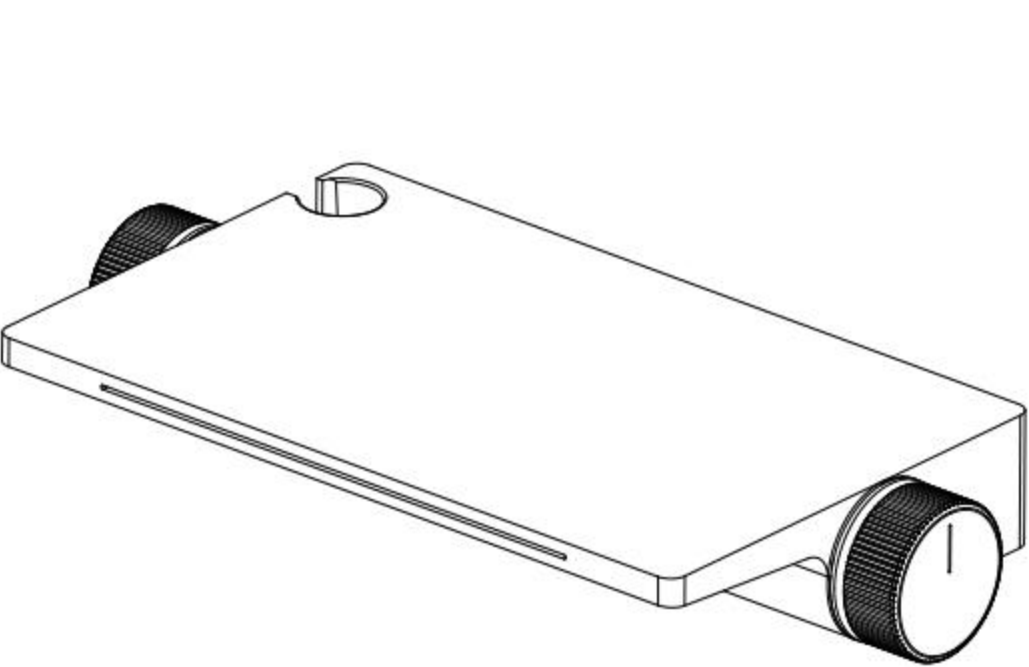


Faucet body

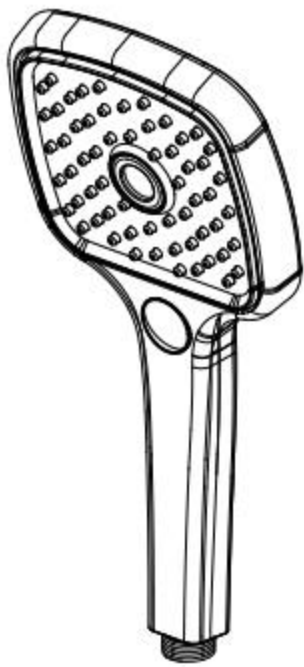

Shower head

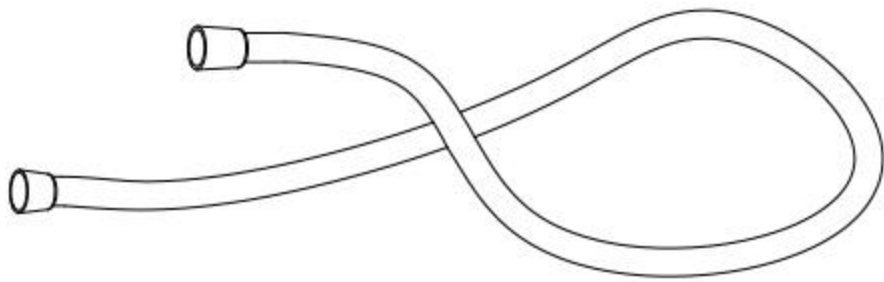

Hose

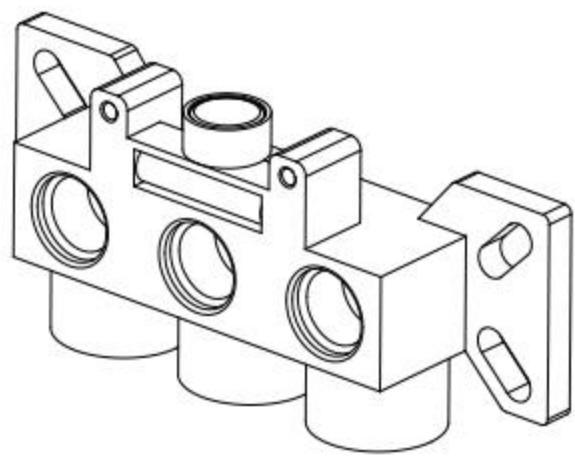

PPR(G1/2)




Connector



Expansion bolt



Accessory

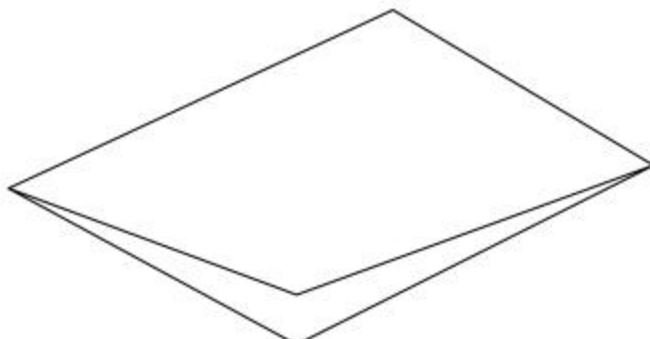

Instructions

## Installation process




1. Open the water source and remove the mud and sand from the water pipe,Clean and flush out the dirt.

2. Slot size for rough wall:  
175 \* 80 \* 39mm deep.

Attention:

- A. The surface of the PPR embedded box is flush with the rough surface.
- B. Refer to the level gauge on the PPR embedded parts,Ensure balance before fixing.Excavate cold and hot water pipes as well as outlet pipe slots.


3. Tile slot size: 115 \* 30mm

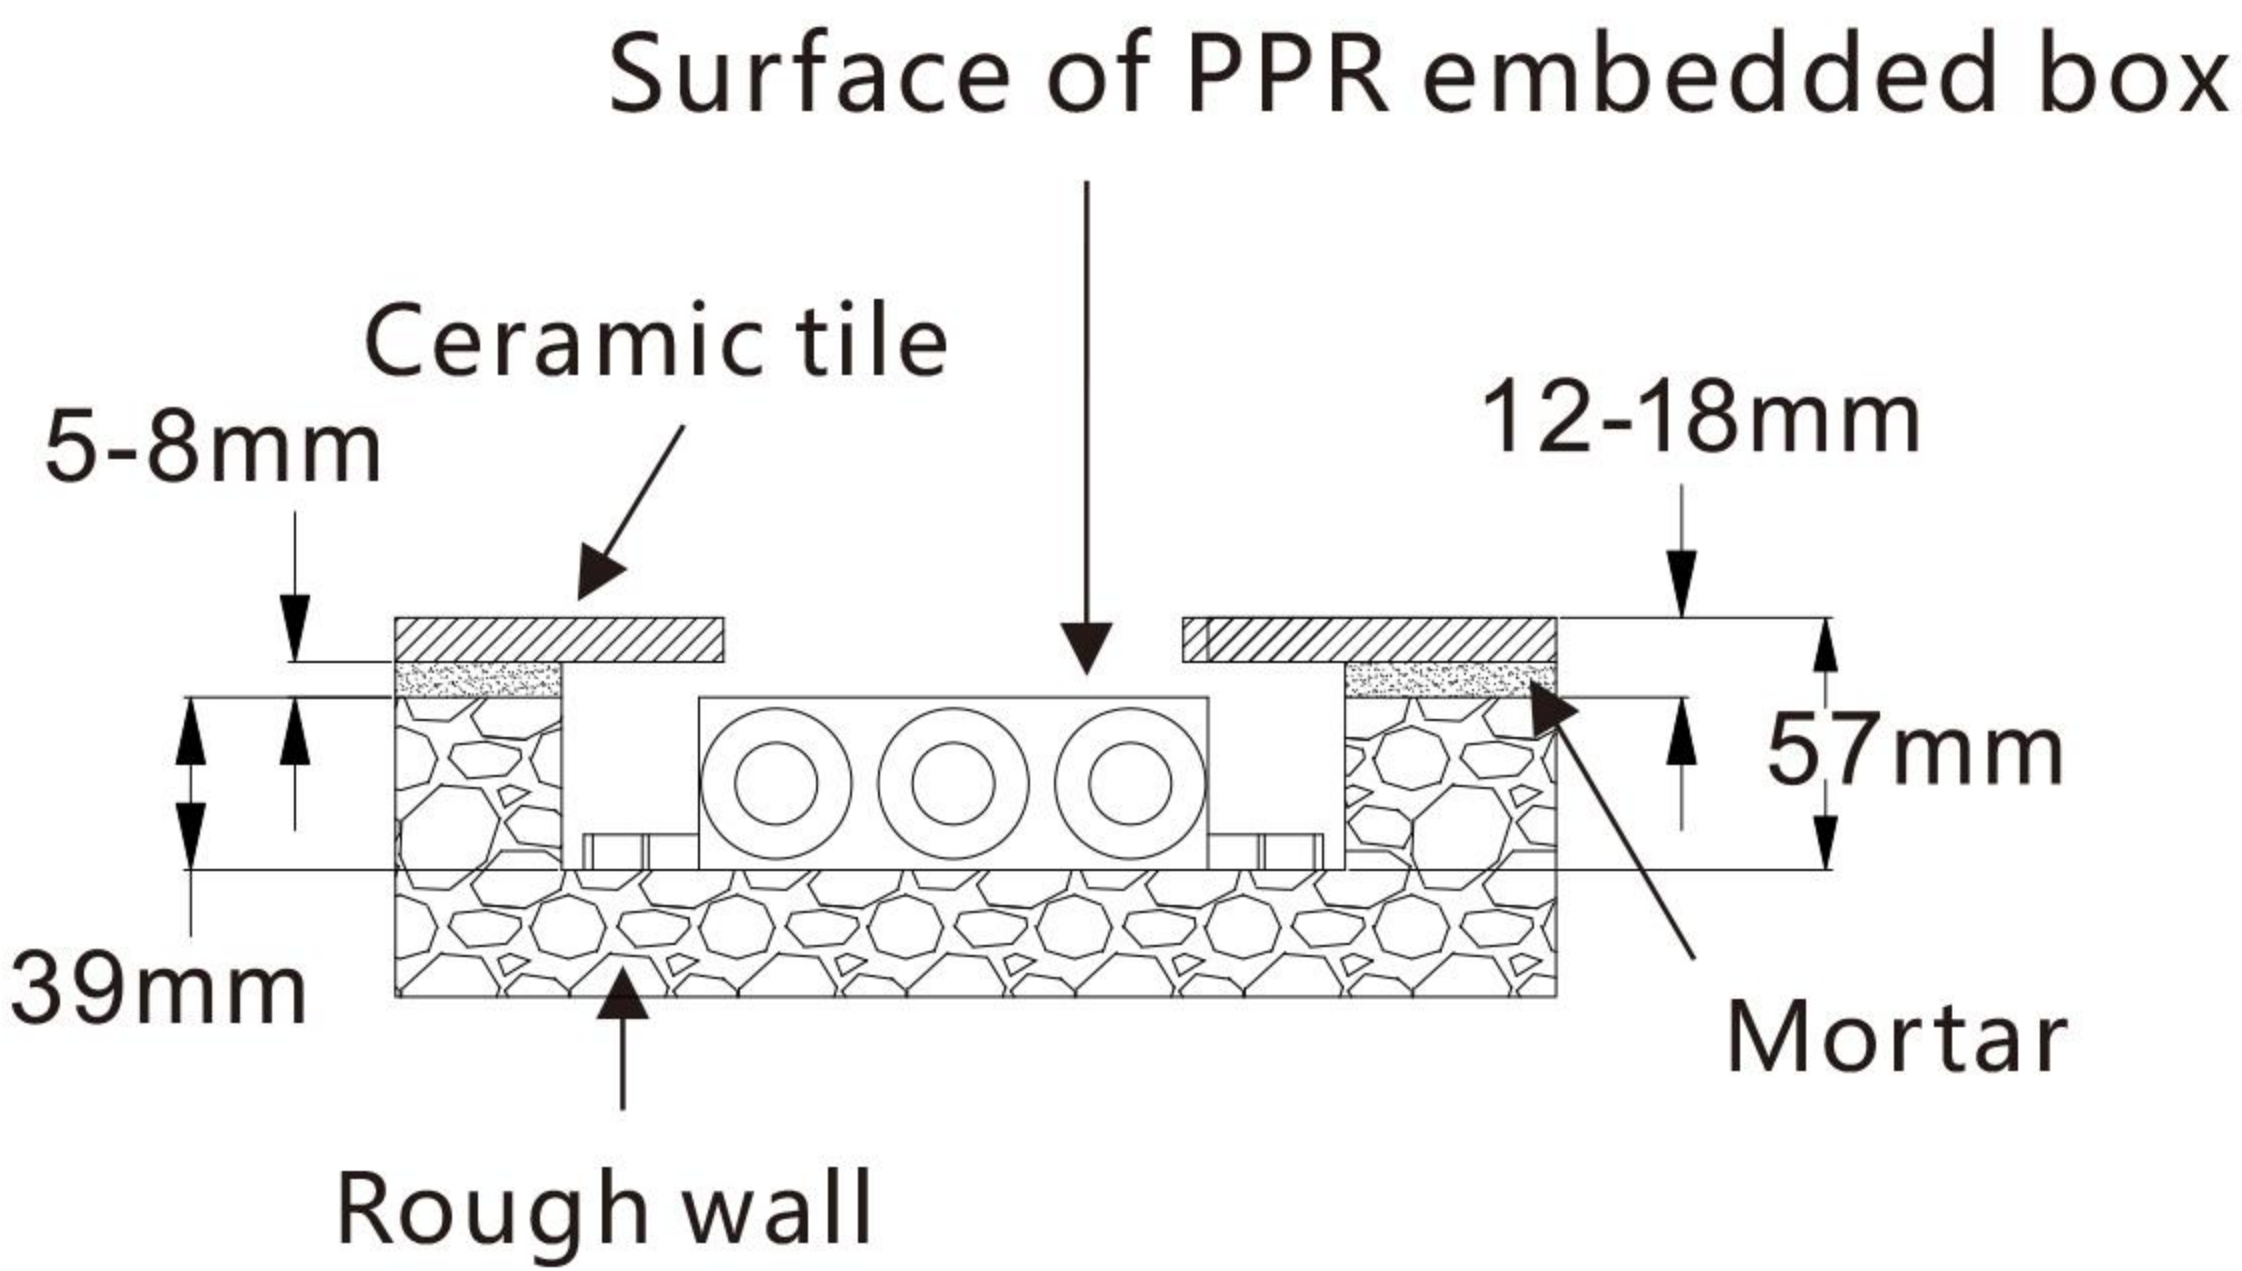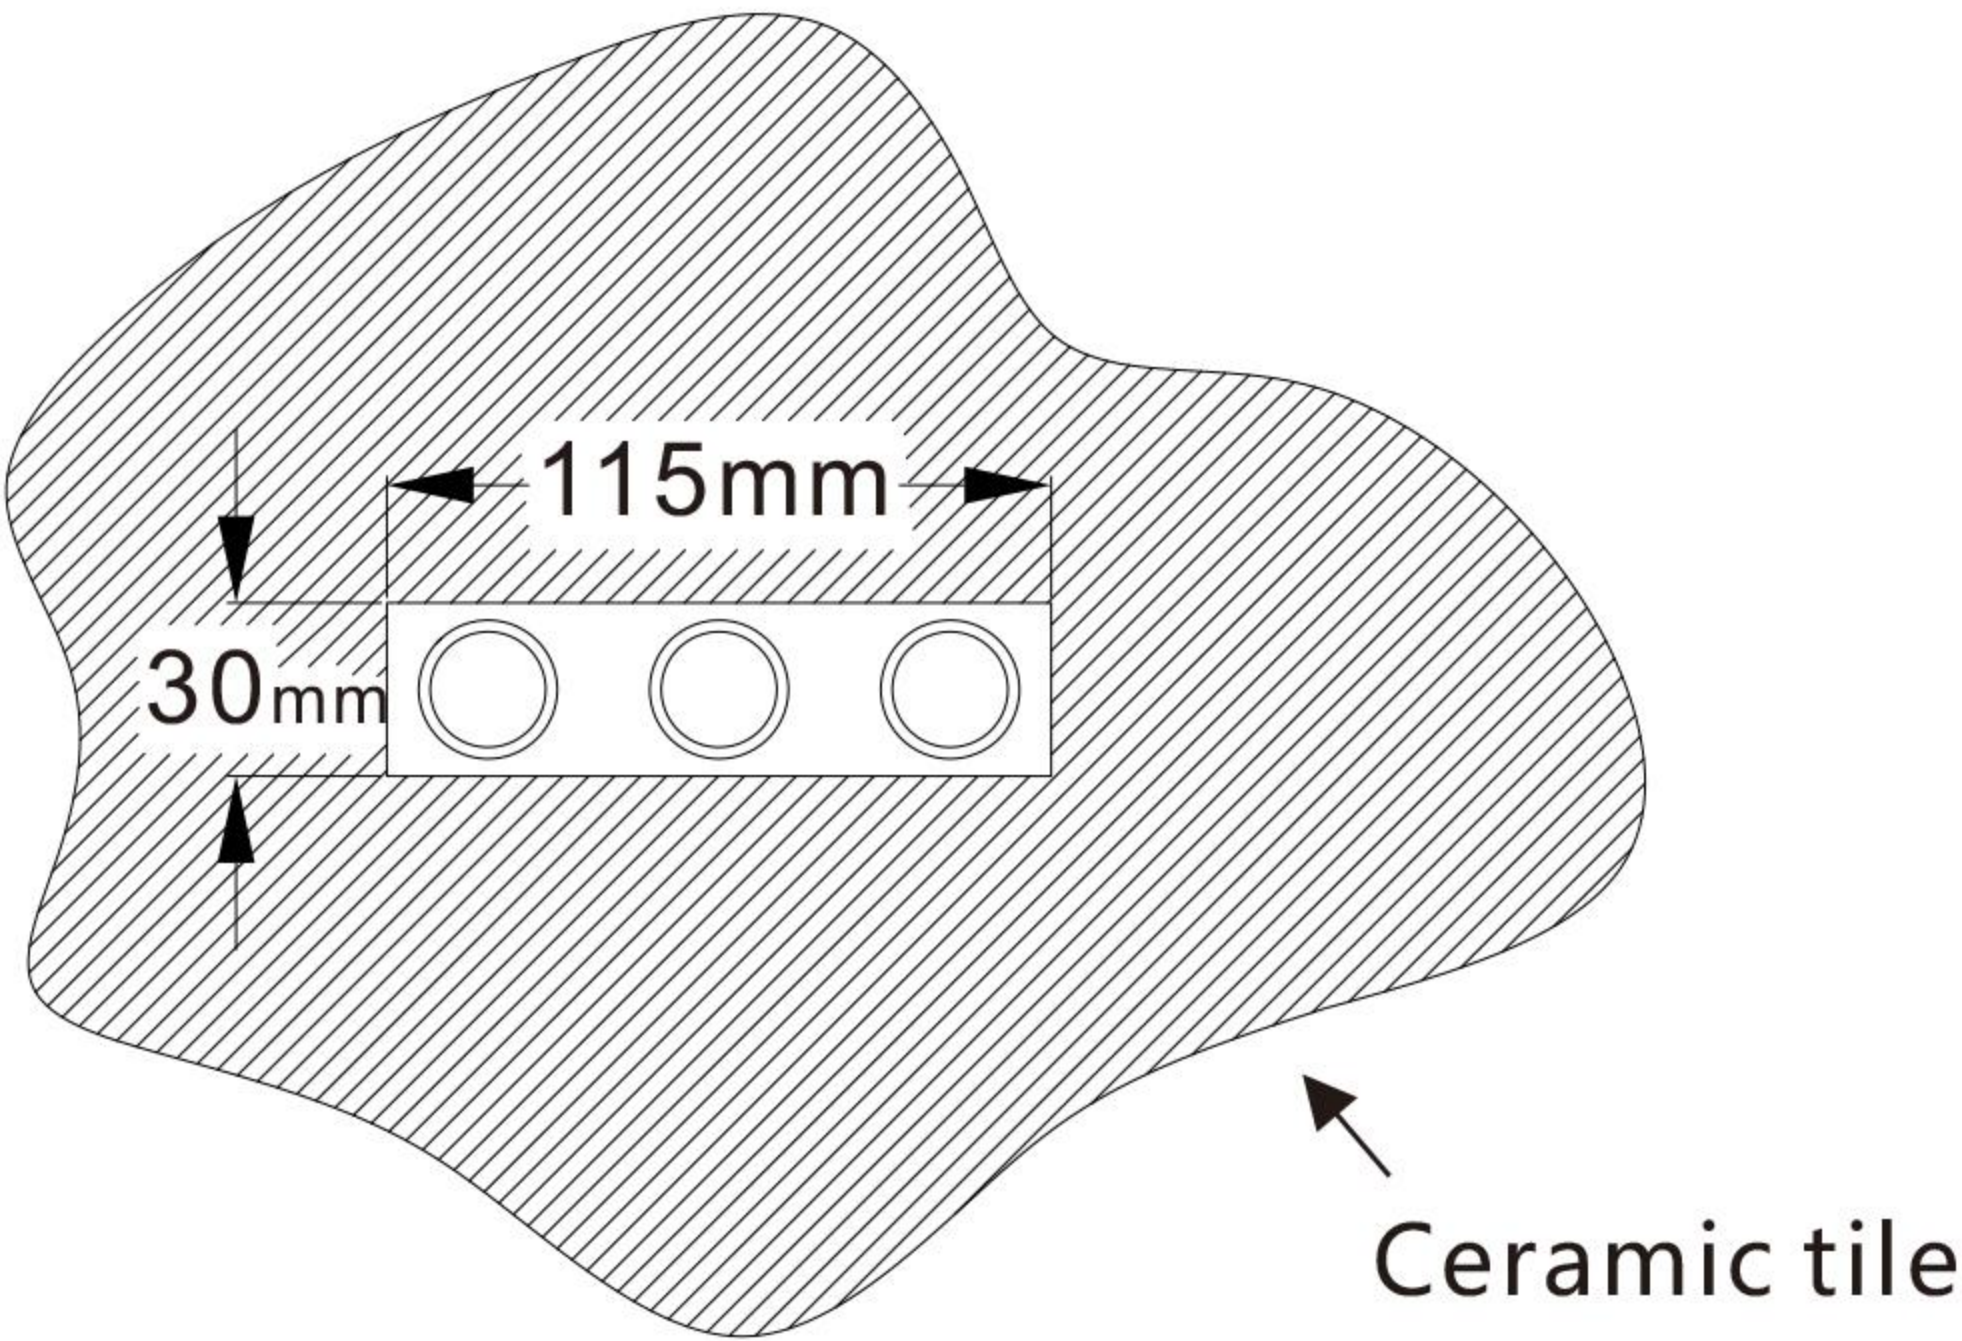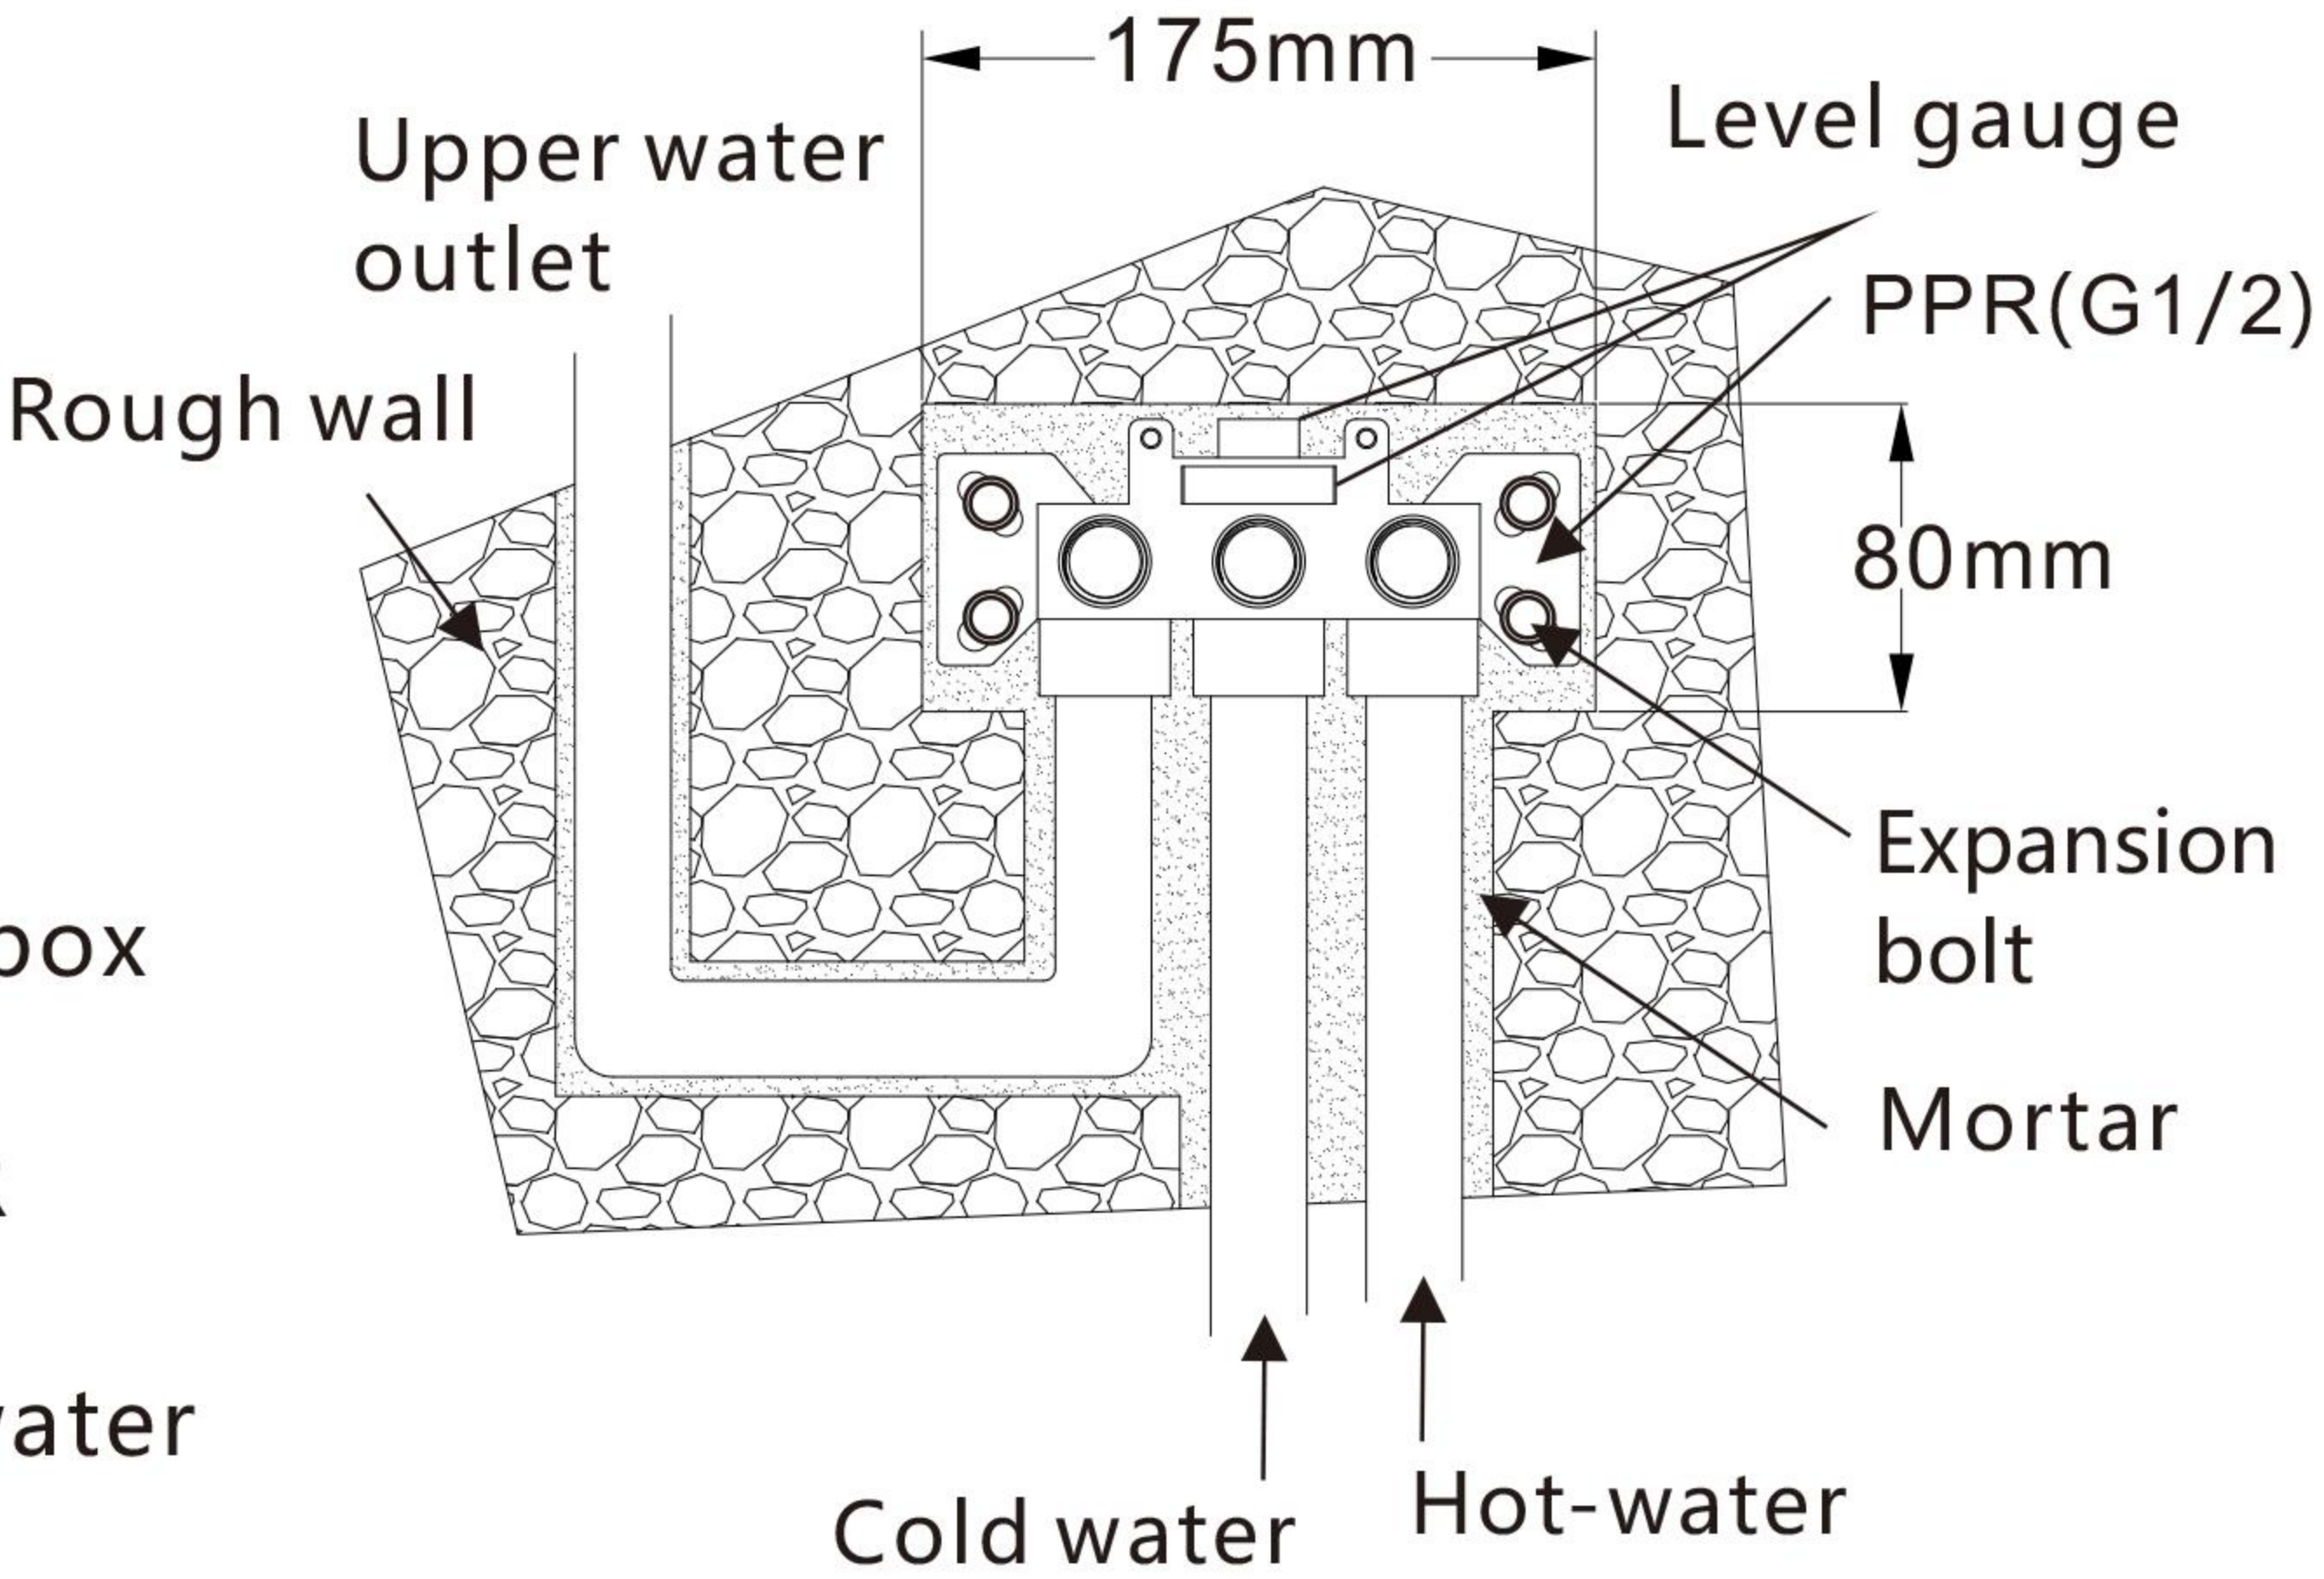




# INSTALLATION STEPS



4. Installing connecting pieces.

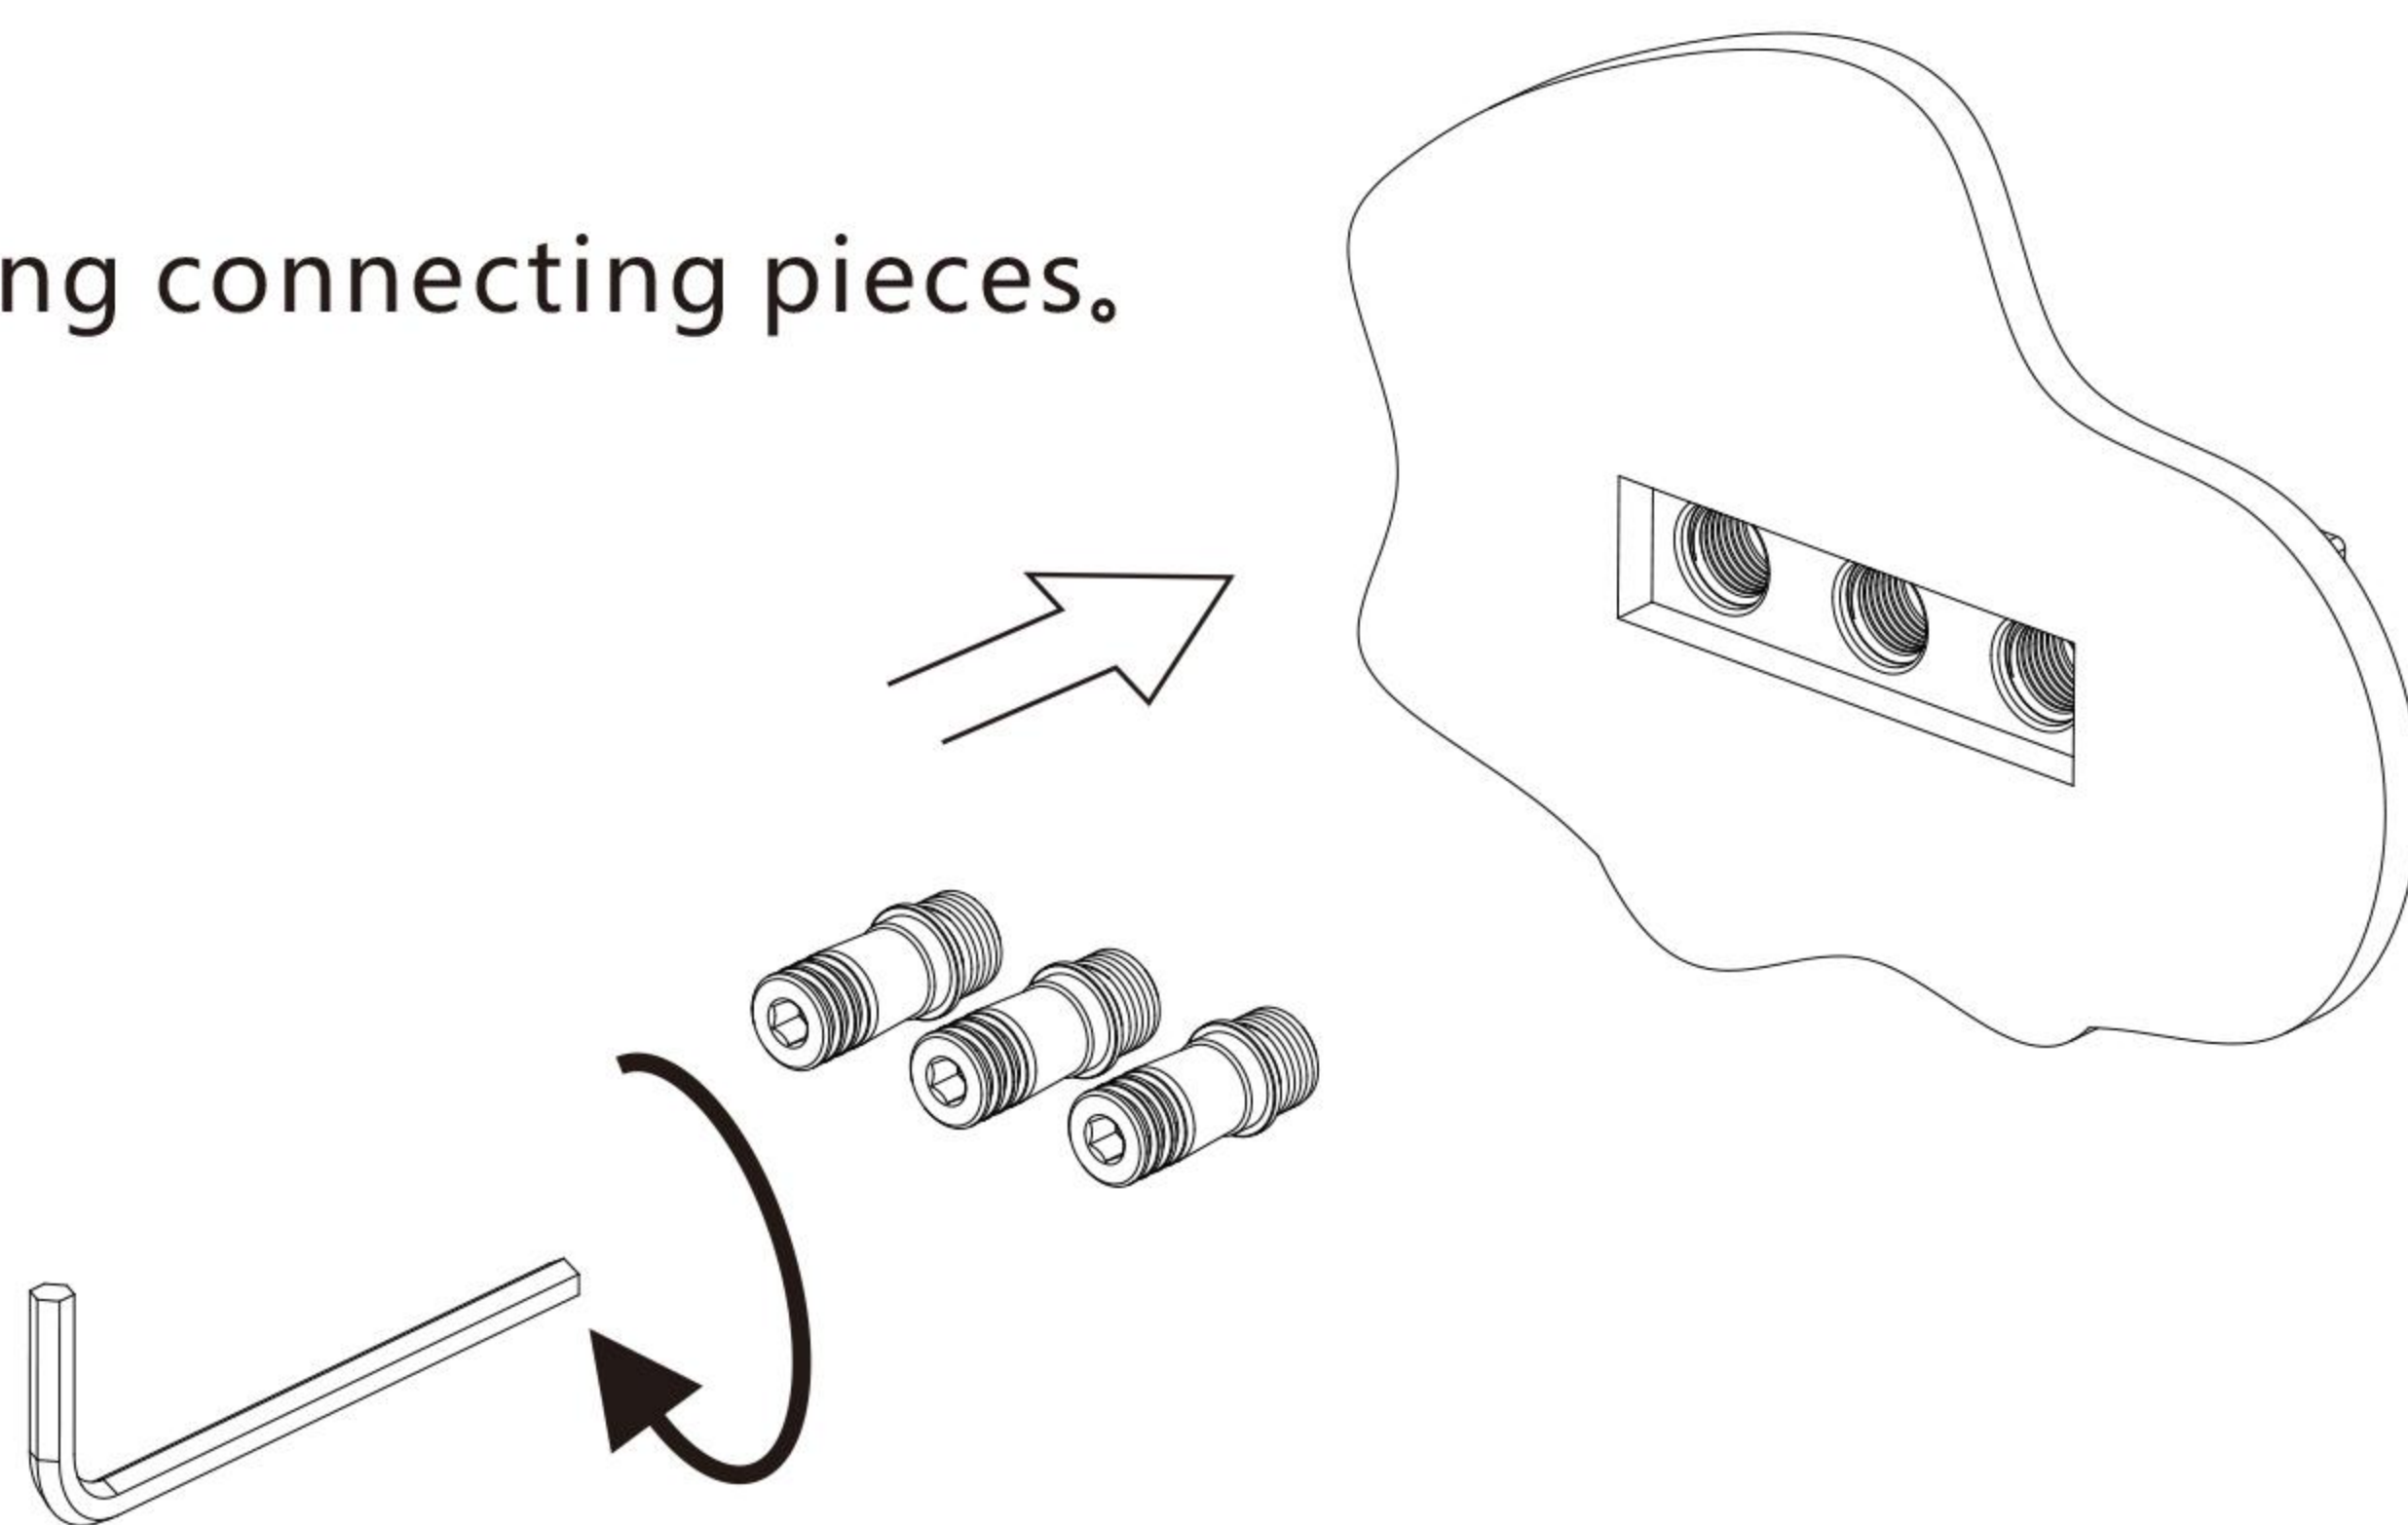

5. Insert the main body into the connecting piece and fix it with screws from below.

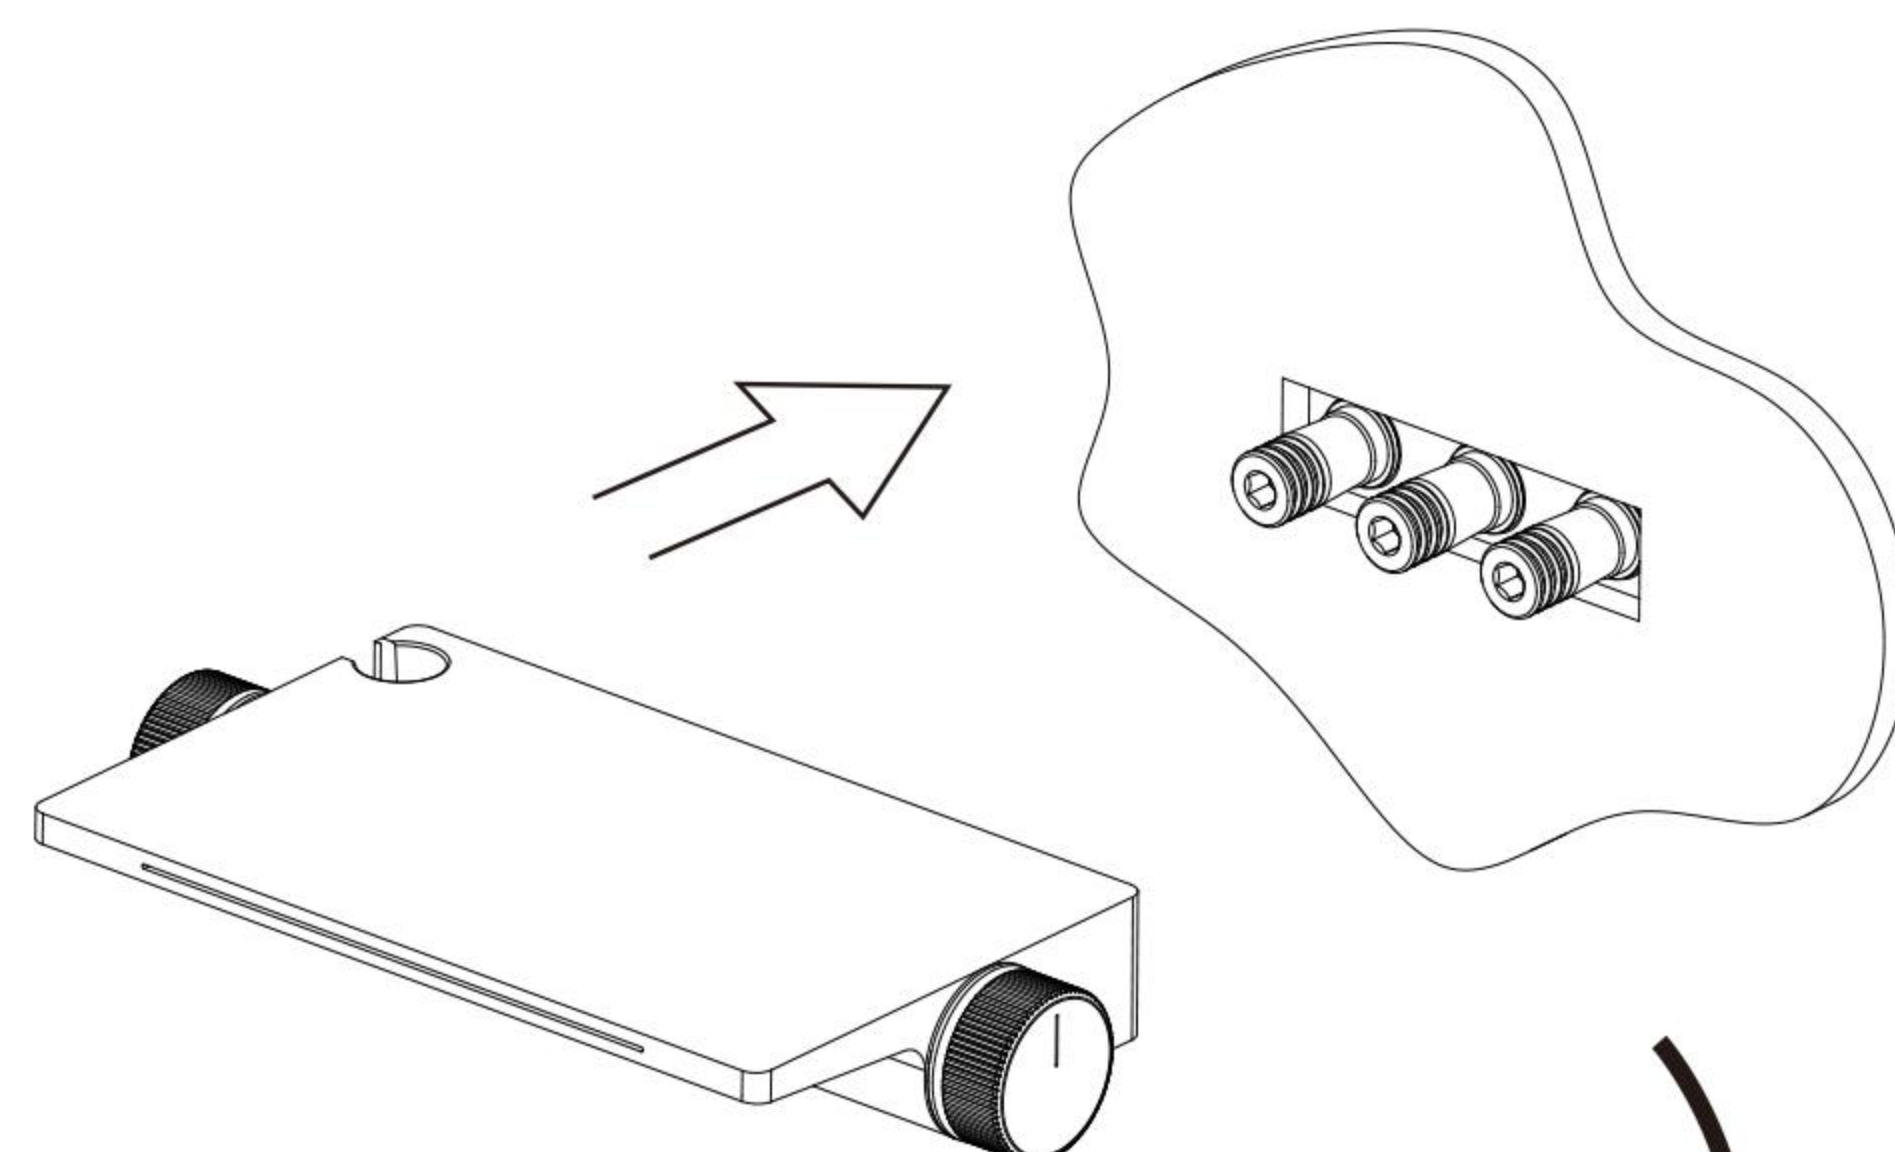

6. Connect the main body and handheld with a shower pipe.

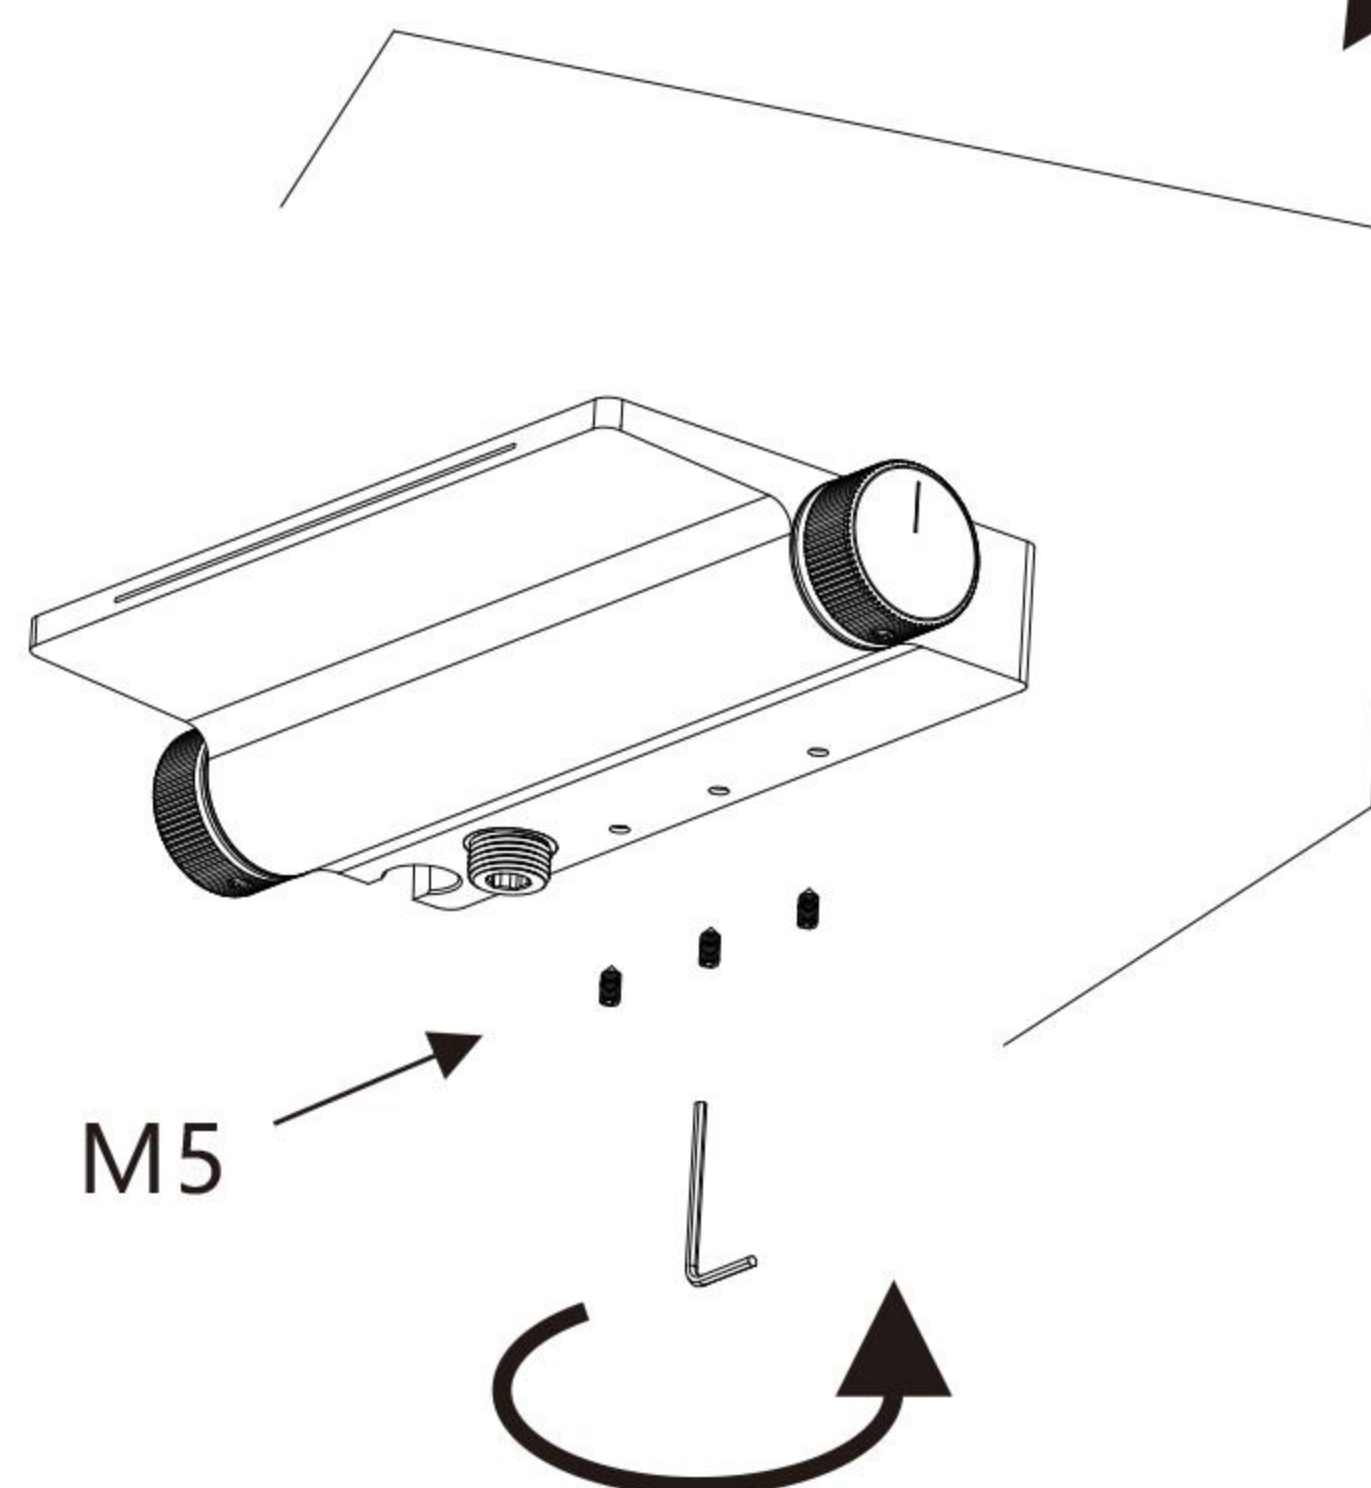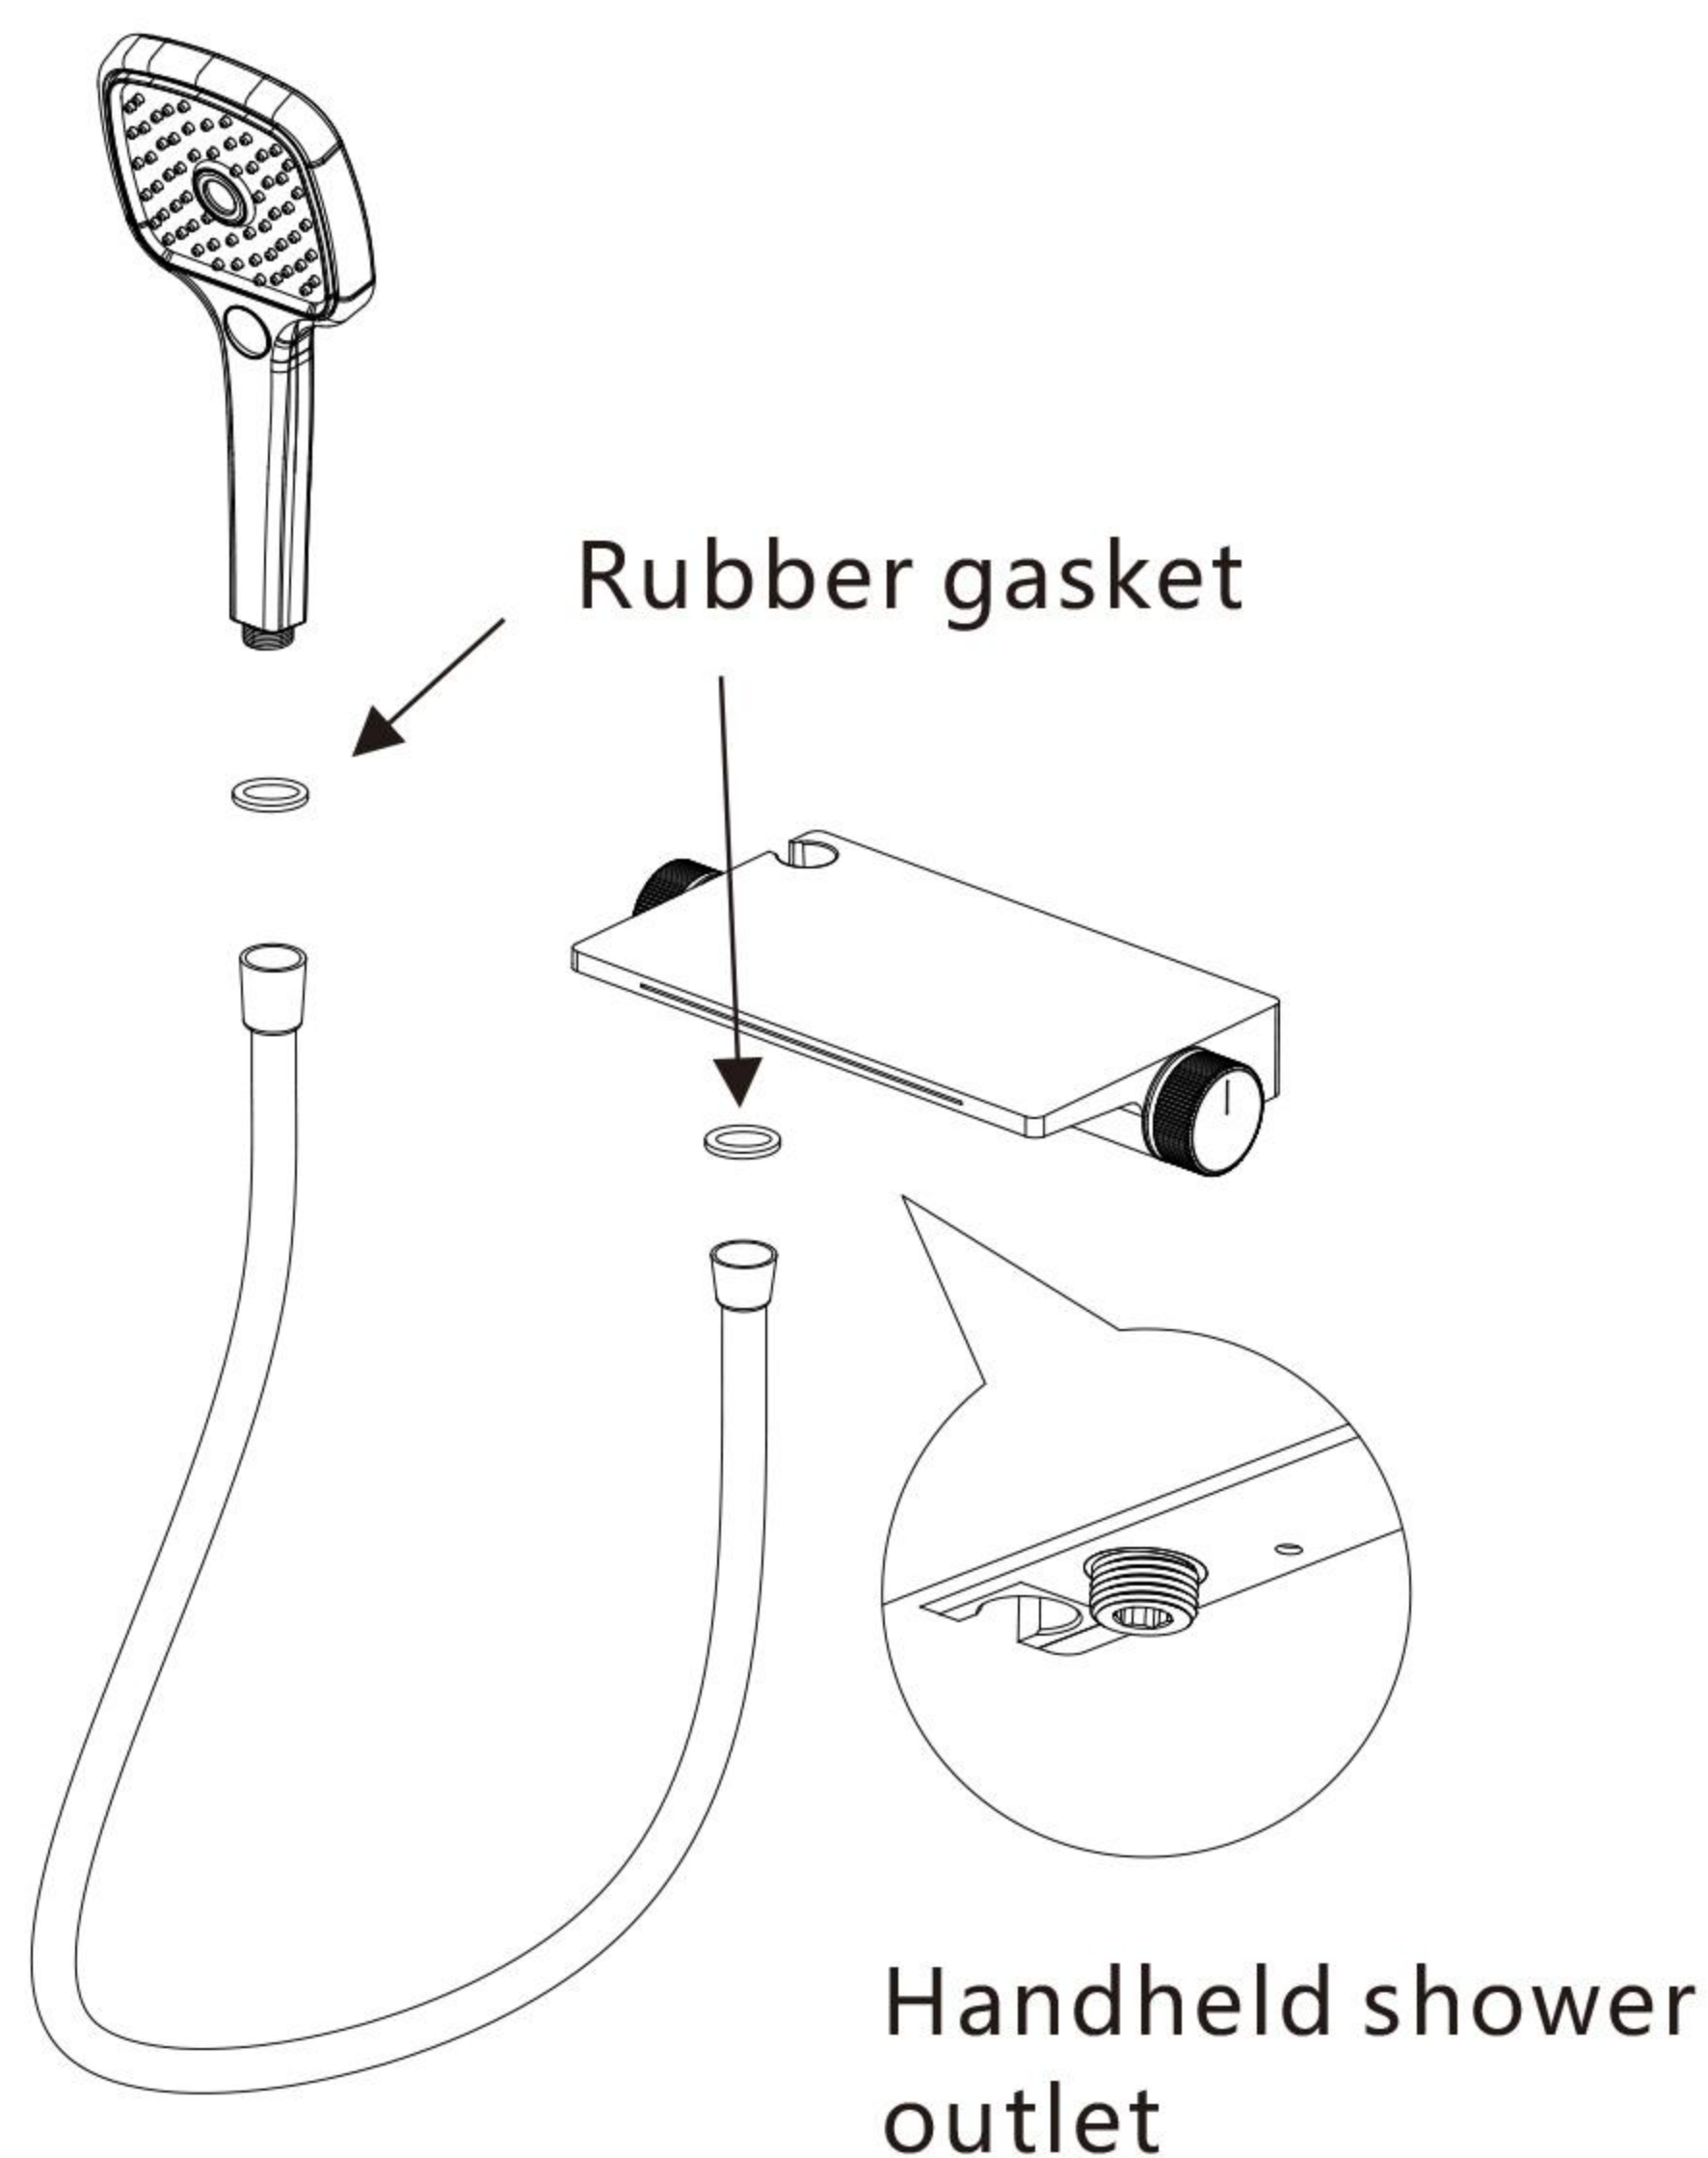

7. Check the handle and complete the installation.

## CLEANING CARE

In order to keep the appearance of faucet clean,bright and good performance, please take care of the faucet as follows;

- 1.Rinse with water only and dry with soff cotton cloth;
- 2.Use mild liquid and colorless glass cleaner to remove surface dirt and scale film, or use polish without abrasive effect;
- 3.Do not use abrasive deterfgent, polish, emery cloth, paper towel or scraper, etc.;
- 4.Do not use acid cleaner,or cleaner and soap with insoluble gran etc.;
- 5.In the process of use, mud my accumulate in the bubbler and make the water flow show, The bubbler can be unscrewed, rinsed with water, and then installed back in place.



**Please feel free to contact us if you have any questions. We will help to solve the issue together with you.**



