Assembly Instructions

Caution: You must read this before you proceed

Care & Maintenance



• Not for commercial use. For residential use only.



 Furniture may scratch floors. We recommend using furniture pads to protect your floors.



Do not put hot items directly on furniture surface.



Do not clean furniture with harsh cleansers or polish.



Do not place furniture under direct sunlight.



Do not place furniture near heating or cooling vents.



 Do not write on furniture without a padded barrier to protect the surface.



Do not place furniture outside. For indoor use only.



 Stains may be removed with mild soap solution and damp cloth.



Children should not climb or jump on the furniture.



 Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in carton for hardware packs and legs. Sets often ship in multiple boxes and may arrive a day or two apart.


Loveseat

Parts List				
Label	Picture	Description	QTY	
А		Backrest	1	
В		Left Armrest	1	
С		Right Armrest	1	
D		Seat Cushion	2	
E		Leg	4	
F	<u> </u>	Seat Board	1	
G		Frontal Seat Board	1	

<u>Hardware</u>				
Label	Picture	Description	QTY	
1)		Bolt(M8*50 MM)	9	
2		Washer(M8*16 MM)	9	
3		Allen Wrench	1	

Assembly Preparation

Before Beginning
Assembly:

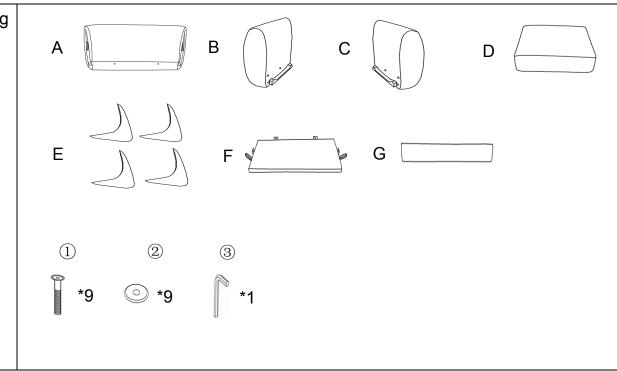



Read instructions, cover to cover-



Have 2 adults on hand for assembly-




Do not assemble on flooring or carpet-



Assemble on a clean non-marring surface (packing foam)-



Save all packaging until finished-

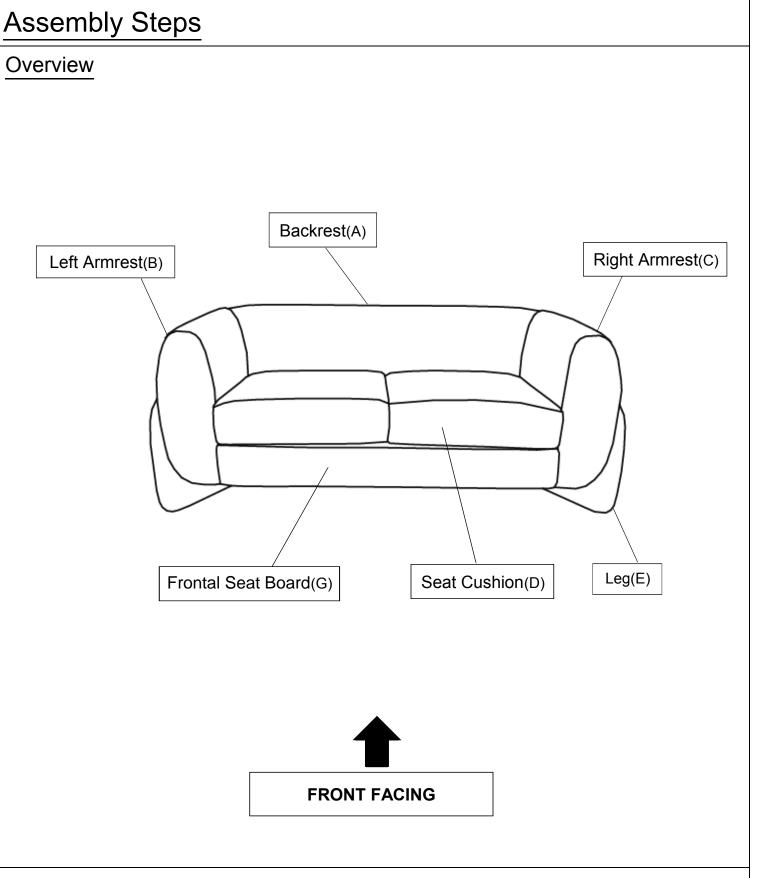


This Sofa has multiple parts and may require up to 30 minutes to assemble.

To give you anoverview of the Sofa, the above picture is to help you put the various parts into perspective.

Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Note: It is recommended that you have an adult partner to assist during the entire assembly process.


Step 1

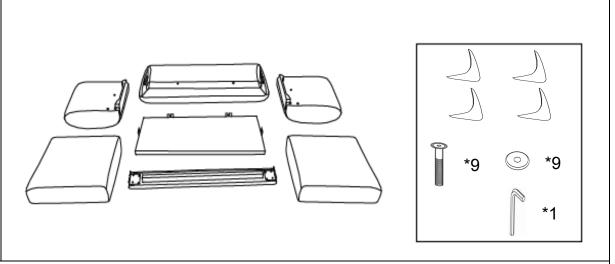

Position the Backrest(A),Left Armrest(B),Right Armrest(C),Seat Cushion(D),Leg(E),Seat Board (F) and Frontal Seat Board(G) on a clean,non-marring surface as shown.

Carefully take out the Legs(E) and Hardware from the Carton box.

Step 2

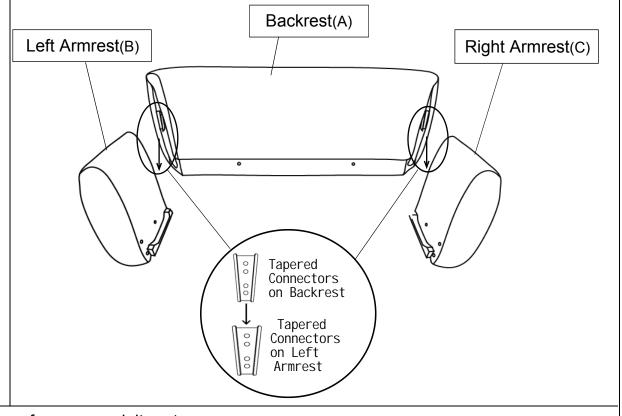

With the assistance from your adult partner:

1.1)Lift the Backrest(A) up, make sure the Backrest(A) is vertical and aligned to the Armrests.

Align the Tapered Connectors on the Backrest(A) with those on the Armrest(B&C).


Your adult partner may need to push the Armrests in towards the Backrest(A) to allow for better alignment.

Slip and Slide the Backrest,in a gradual and balanced manner into the Tapered Connectors.

1.2) Push the Backrest(A) downwards until it is fully slotted and locked into position.

Note:Make sure the Tapered Connectors on the Backrest(A) lock into the Tapered Connectors on Armrest(B&C).

Fully locked postion: Check and assess that the base of the Backrest(A) and Armrest(B&C) are aligned and level.

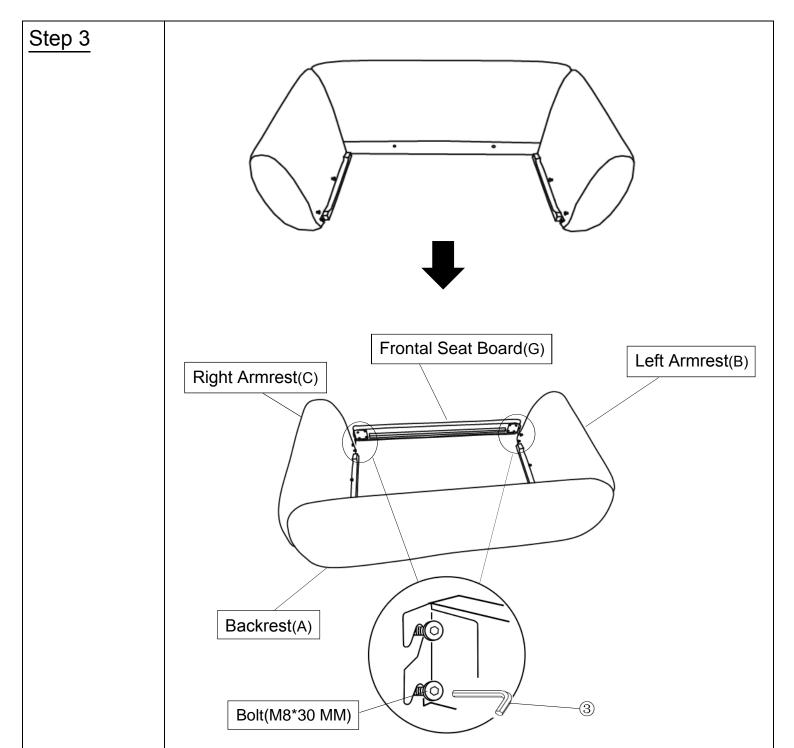


Place the Frontal Seat Board (G) as shown in the above pictures in front of the semi-sofa from step 2,hang the Brackets on the Bolts(M8*30 MM) found on the Armrests (B&C).

Then use Allen Wrench (), turning Colock wise totighten the Bolts, ensure the brackets are tightly fitted onto the Bolts(M8*30 MM).

Note: Make sure Step 2 is correctly acted, then do this step.

Step 4

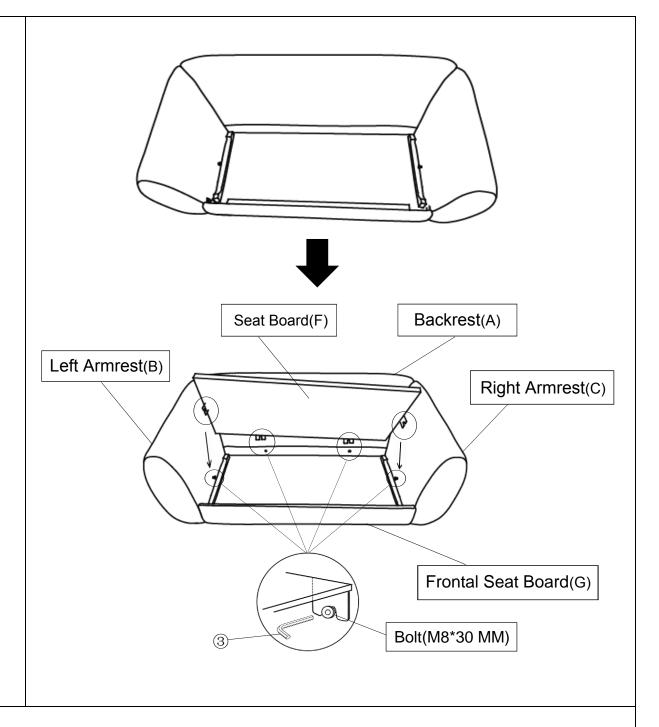


Using the Allen Wrench () and turning Counter-Clockwise, loosen all the Bolts(M8*30 MM) which are pre-assembled on the Backrest (A) and Armrests (B&C) about 3 threads out to make a small gap in which to fit the metal brackets.

Put the Seat Board (F) onto the semi-assembled parts of step3 as shown in the above pictures. Insert the brackets on the board onto the Bolts(M8*30 MM).

Then use the Allen Wrench () and turn Clockwise to tighten the Bolts, ensure the brackets are tightly fitted onto the Bolts(M8*30 MM).

Note: Make sure Step 3 is correctly acted, then do this step.

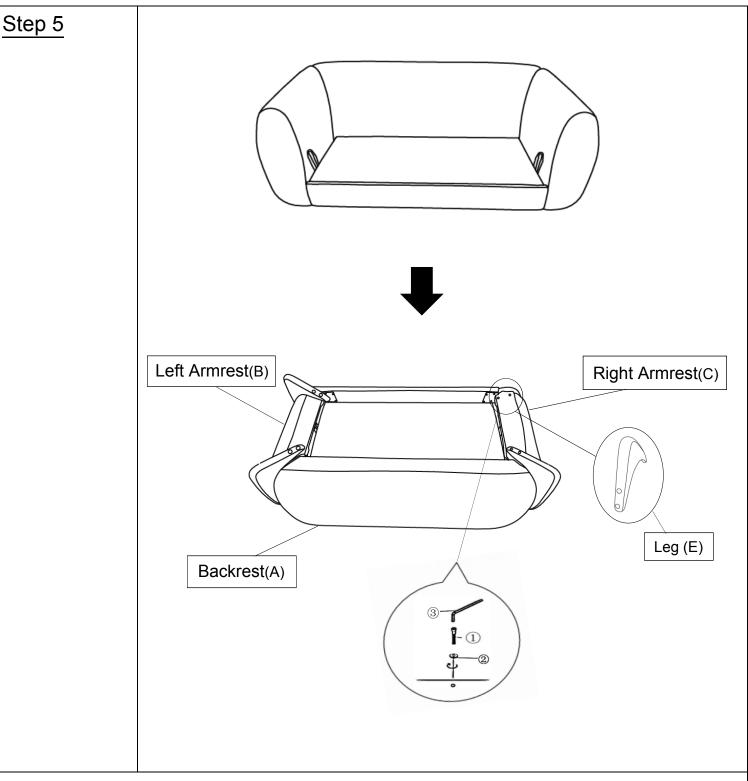

Turn the assembled Sofa as picture shown.

Attach Leg(E) to Right Armrest(C) using Bolts(),and Washers()with the Allen Wrench () as pictured above.

Tighten the Bolts fully in a sequential manner.

Repeat the same step to install the remaining Legs.

