ASSEMBLY INSTRUCTIONS ITEM NO: 194S1239-1

SWIVEL CHAIR


The hardware is placed in the box, please take out for assembly.


Note: Do not use power tools for assembly. Power tools increase the risk of over tightening which lead to splitting or cracking the wood.

PART	DRAWING	DESCRIPTION	QTY
A		Seat	1 PC
В		Middle Back Rest	1 PC
С		LSF Arm Rest	1 PC
D		RSF Arm Rest	1 PC
Е		Swivel Plate	1 PC
F		Back Cushion	1 PC

PART	DRAWING	DESCRIPTION	QTY
1	© 0	Metal Connector 3-2/4"×31/32"×1/8"	6 PC
2		Bolt Ø1/4"×31/32"	16 PC
3	©	Spring Washer Ø1/4"	16 PC
4	0	Flat Washer Ø1/4"×3/4"	16 PC
5		Allen Key M4	1 PC

STEP 1:

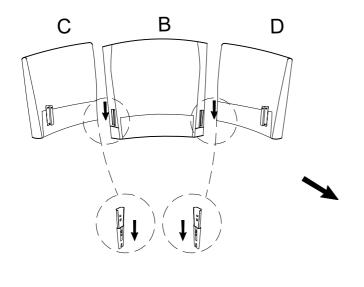

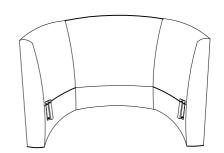


MADE IN VIETNAM Page: 1/4


ASSEMBLY INSTRUCTIONS ITEM NO: 194S1239-1

SWIVEL CHAIR



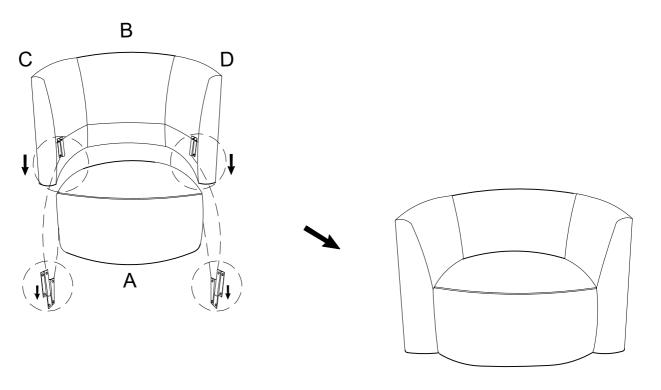

STEP 3:

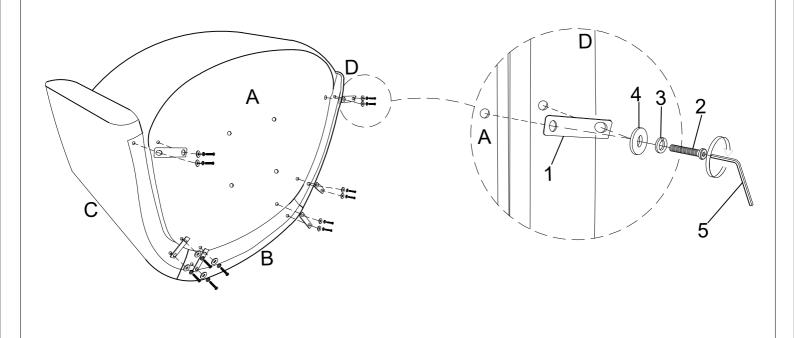


MADE IN VIETNAM Page: 2/4


ASSEMBLY INSTRUCTIONS ITEM NO: 194S1239-1

SWIVEL CHAIR



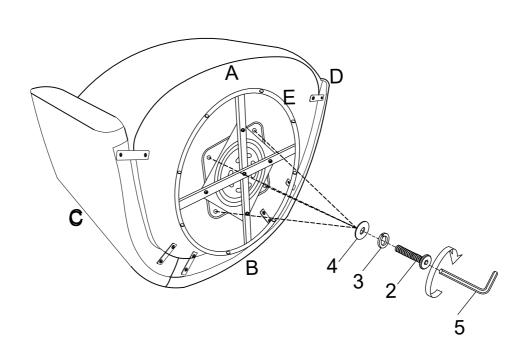

STEP 5:

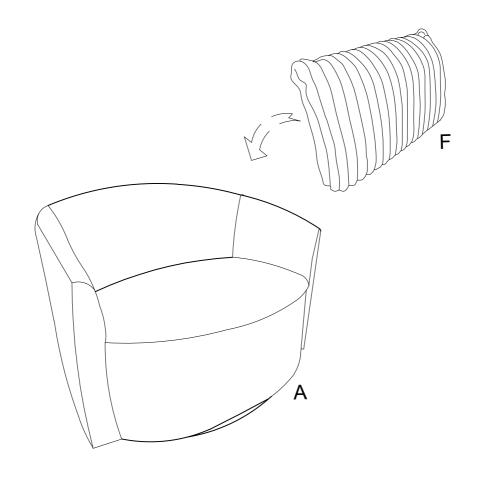

MADE IN VIETNAM Page: 3/4


ASSEMBLY INSTRUCTIONS ITEM NO: 194S1239-1

SWIVEL CHAIR

COMPLETED





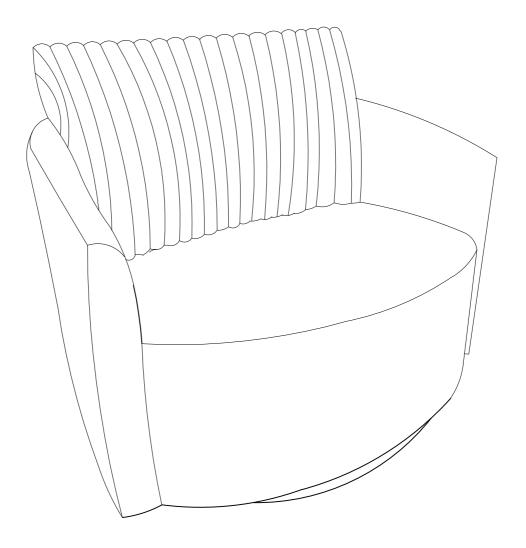

Care Instruction for Chenille & Corduroy Furniture:

In order to maintain the original appearance of your Chenille & Corduroy furniture, please follow below simple care procedures:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets.
 Sunlight and or exposure to heating and air conditioning outlets will fade/damage Chenille & Corduroy.
- Vacuum or wipe with a soft cloth to remove dust.
- Hardware may loosen over time. Periodically check to make sure all connection are tight, Re-tighten if necessary

For item use on wooden floor,hard surfaces or carpets,it is recommended to install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.

MADE IN VIETNAM Page: 4/4