

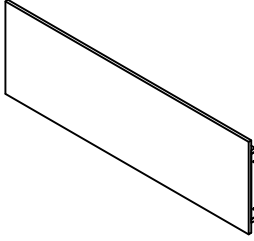




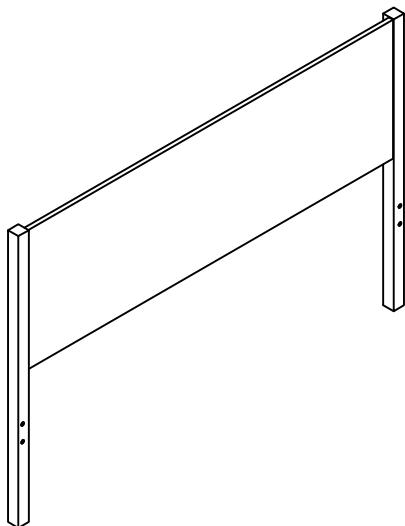


ASSEMBLY INSTRUCTIONS

QUEEN PANEL HEADBOARD


A LSF Headboard Leg	B RSF Headboard Leg	C Headboard Panel	D Bolt 1/4" x 35mm
			
1PC	1PC	1PC	4PCS
E Lock Washer 1/4" x 10mm	F Flat Washer 1/4" x 12.5mm	G L-Allen Key 4mm	
			
4PCS	4PCS	1PC	



This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

1

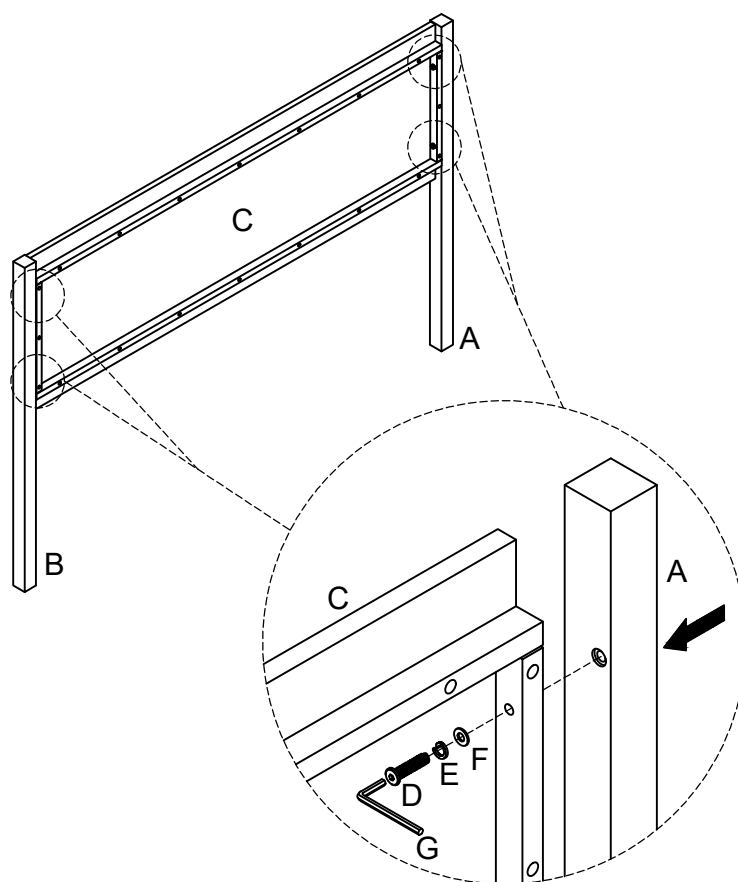Attach LSF & RSF Headboard Leg (A & B) to Headboard Panel (C) using Bolt (D), Lock Washer (E) and Flat Washer (F) with L-Allen Key (G).



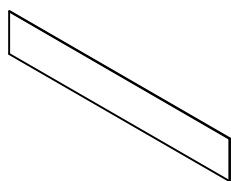
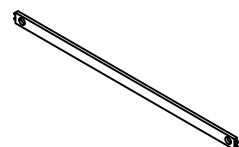
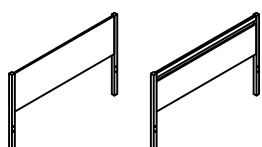
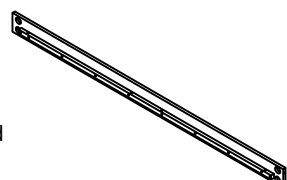
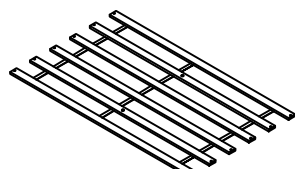





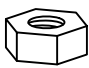
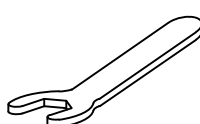
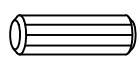



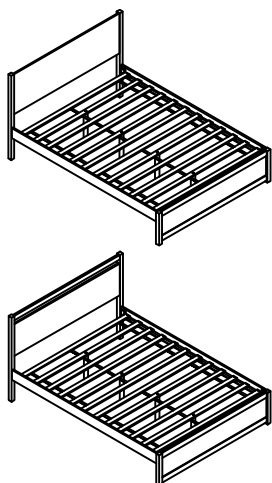
Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.

ASSEMBLY INSTRUCTIONS

144BQ-3 QUEEN FOOTBOARD & RAILS & SLATS


A LSF Footboard Leg	B RSF Footboard Leg	C Footboard Panel	D Footboard Top and Bottom Frame
			
E 1PC Headboard	F 1PC Side Rail	G 1PC Slat	H 2PCS Center Support Leg
 144BQ-1: Queen Panel Headboard 144BQ2-1: Queen Headboard (in the other carton)			
I 1PC Threaded Rod 1/4" x 60mm (Spare Hardware-1pc)	J 2PCS Lock Washer 1/4" x 10mm (Spare Hardware-1pc)	K 2SETS (12PCS) Flat Washer 1/4" x 12.5mm (Spare Hardware-1pc)	L 4PCS Half Moon Nut 28 x 14 x 7mm (Spare Hardware-1pc)
			
M 13PCS Hexagon Nut 1/4" x 9.8 x 5mm (Spare Hardware-1pc)	N 13PCS Wrench 10mm	O 13PCS Wood Dowel Ø8 x 25mm (Spare Hardware-1pc)	P 13PCS Wood Screw Ø8 x 25mm (Spare Hardware-2pcs)
			
13PCS	1PC	9PCS	26PCS



This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


1

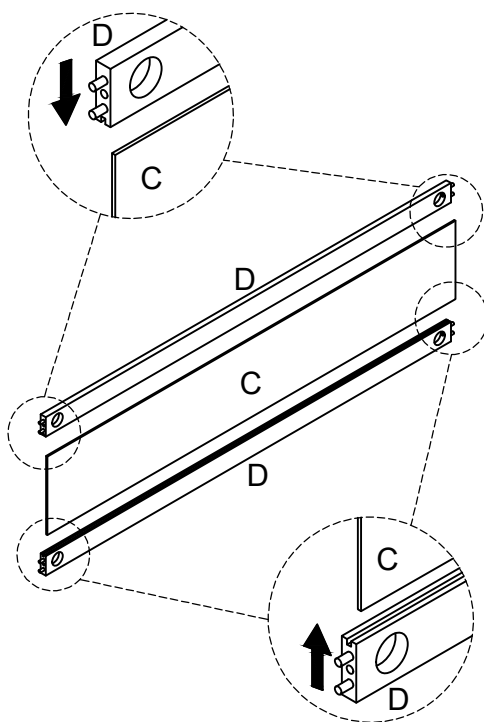Attach Footboard Top and Bottom Frame (D) to Footboard Panel (C).




2

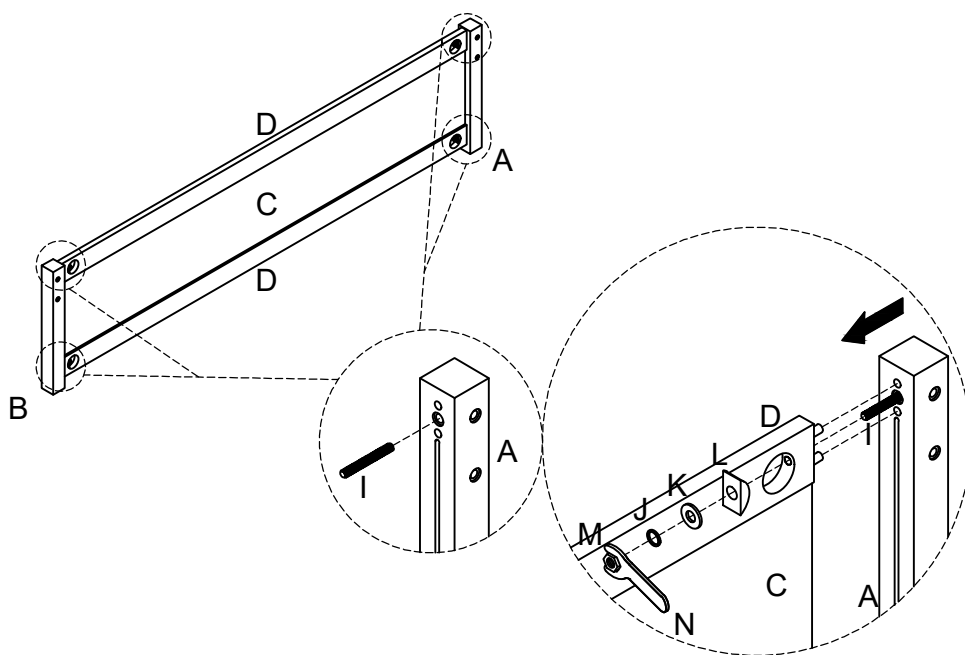Turn Threaded Rod (I) into LSF & RSF Footboard Leg (A & B). Then attach LSF & RSF Footboard Leg (A & B) to Footboard Panel (C) and Footboard Top and Bottom Frame (D) using Threaded Rod (I), Hexagon Nut (M), Lock Washer (J), Flat Washer (K) and Half Moon Nut (L) with Wrench (N).




3

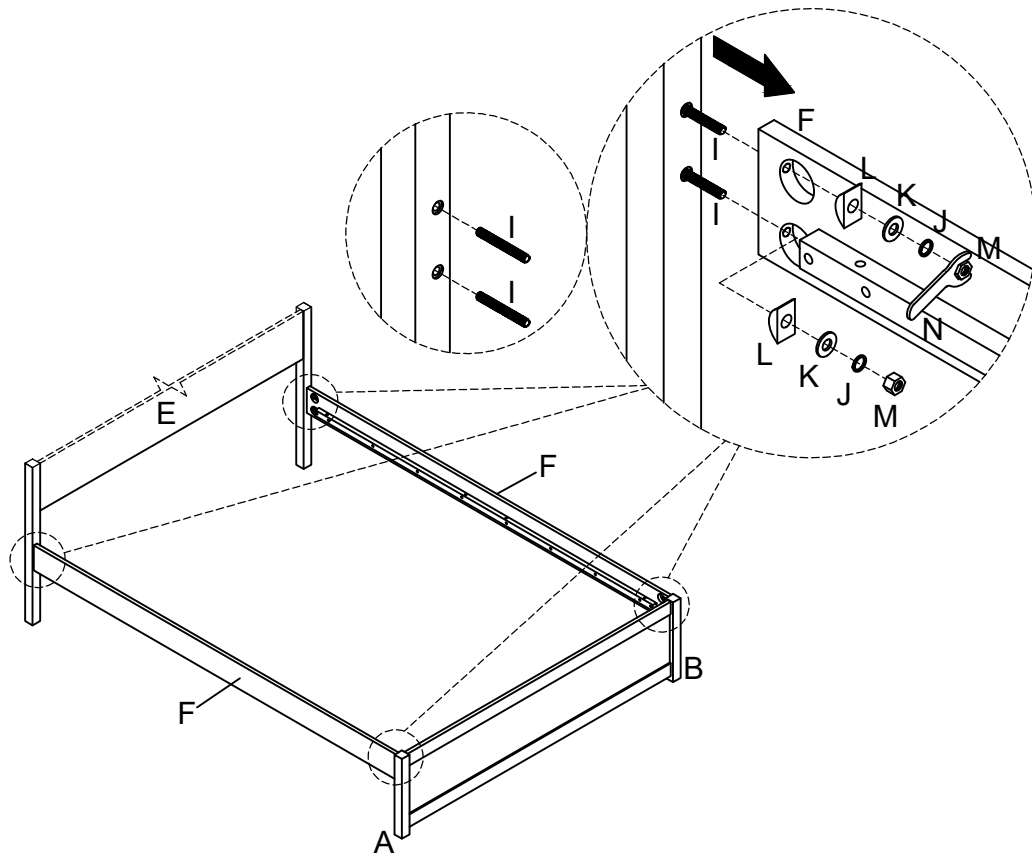Turn Threaded Rod (I) into LSF & RSF Footboard Leg (A & B) and Headboard (E). Then attach LSF & RSF Footboard Leg (A & B) and Headboard (E) to Side Rail (F) using Threaded Rod (I), Hexagon Nut (M), Lock Washer (J), Flat Washer (K) and Half Moon Nut (L) with Wrench (N).




4

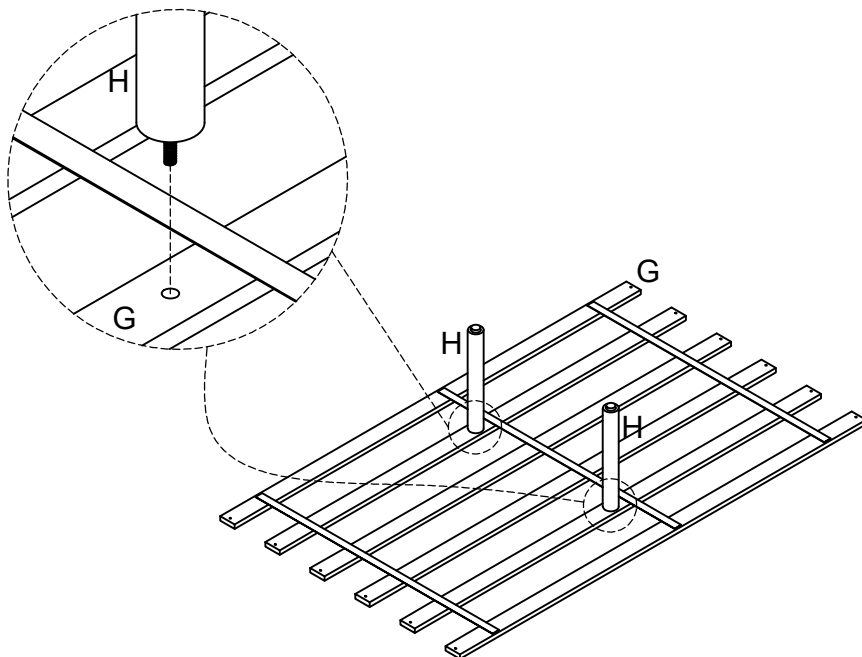Turn Center Support Leg (H) into Slat (G).



5

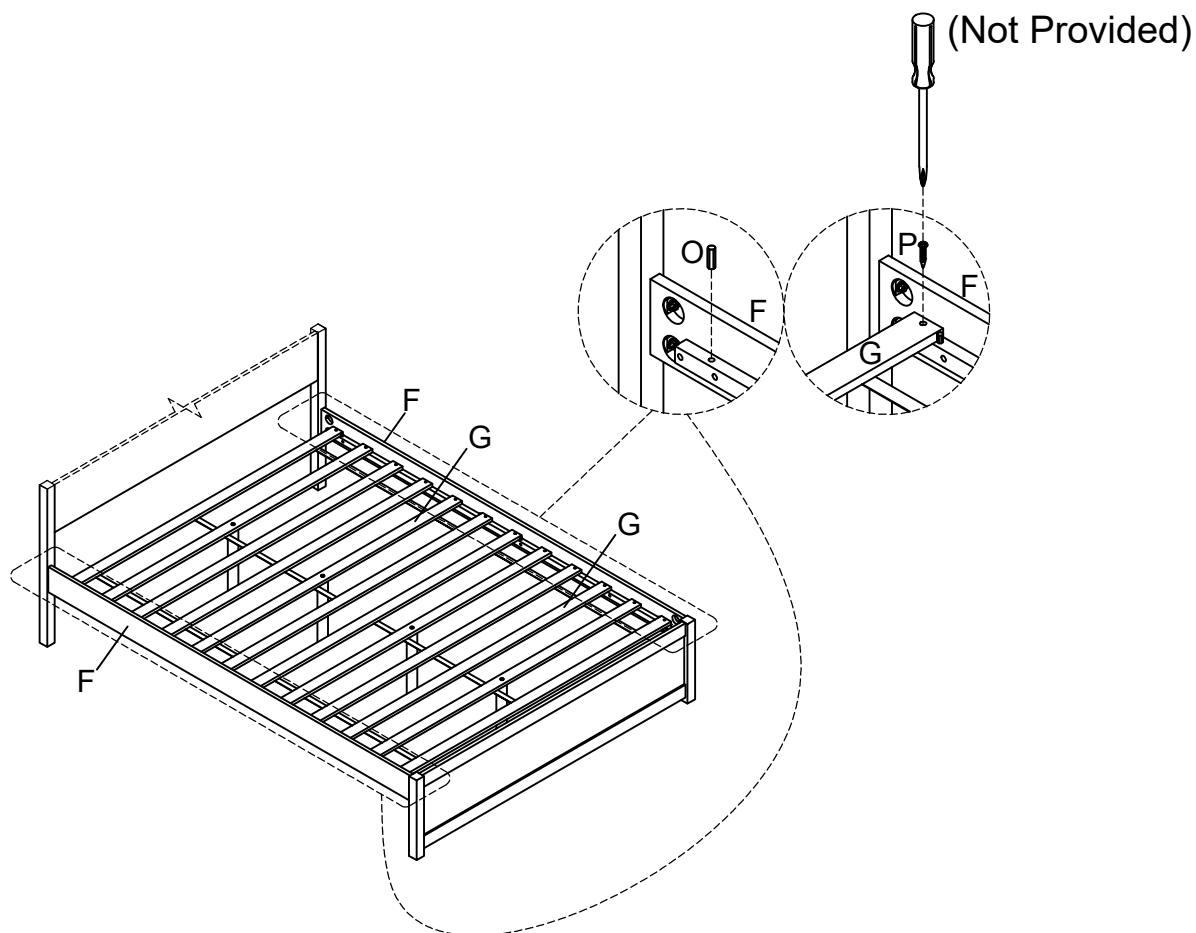Insert Wood Dowel (O) into Side Rail (F). Then attach Slat (G) to Side Rail (F) using Wood Screw (P) with Screwdriver (Not Provided).



Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.