



ASSEMBLY INSTRUCTION

SKU CODE: (WF323481)

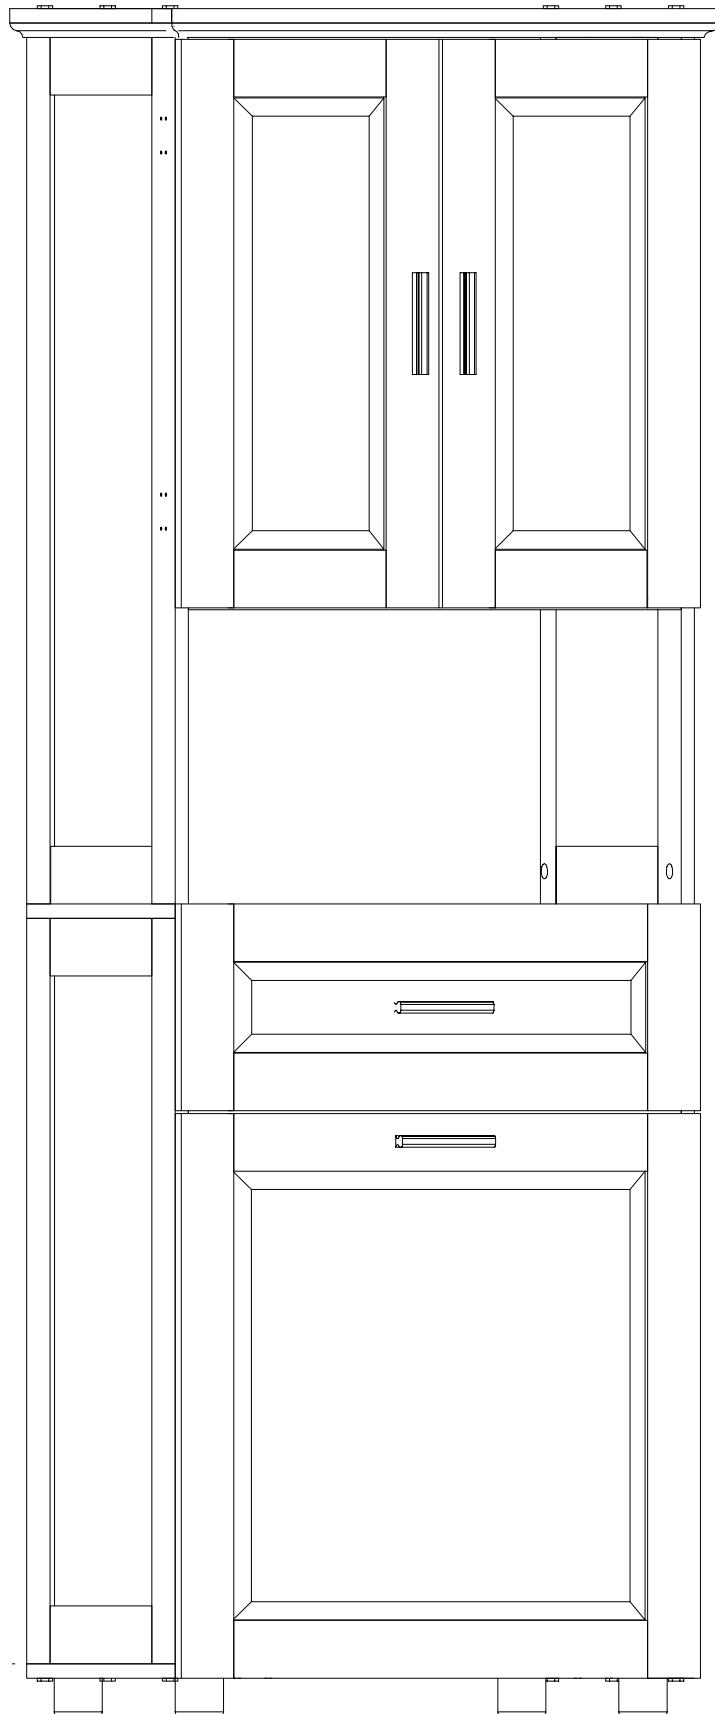


ASSEMBLY INSTRUCTION

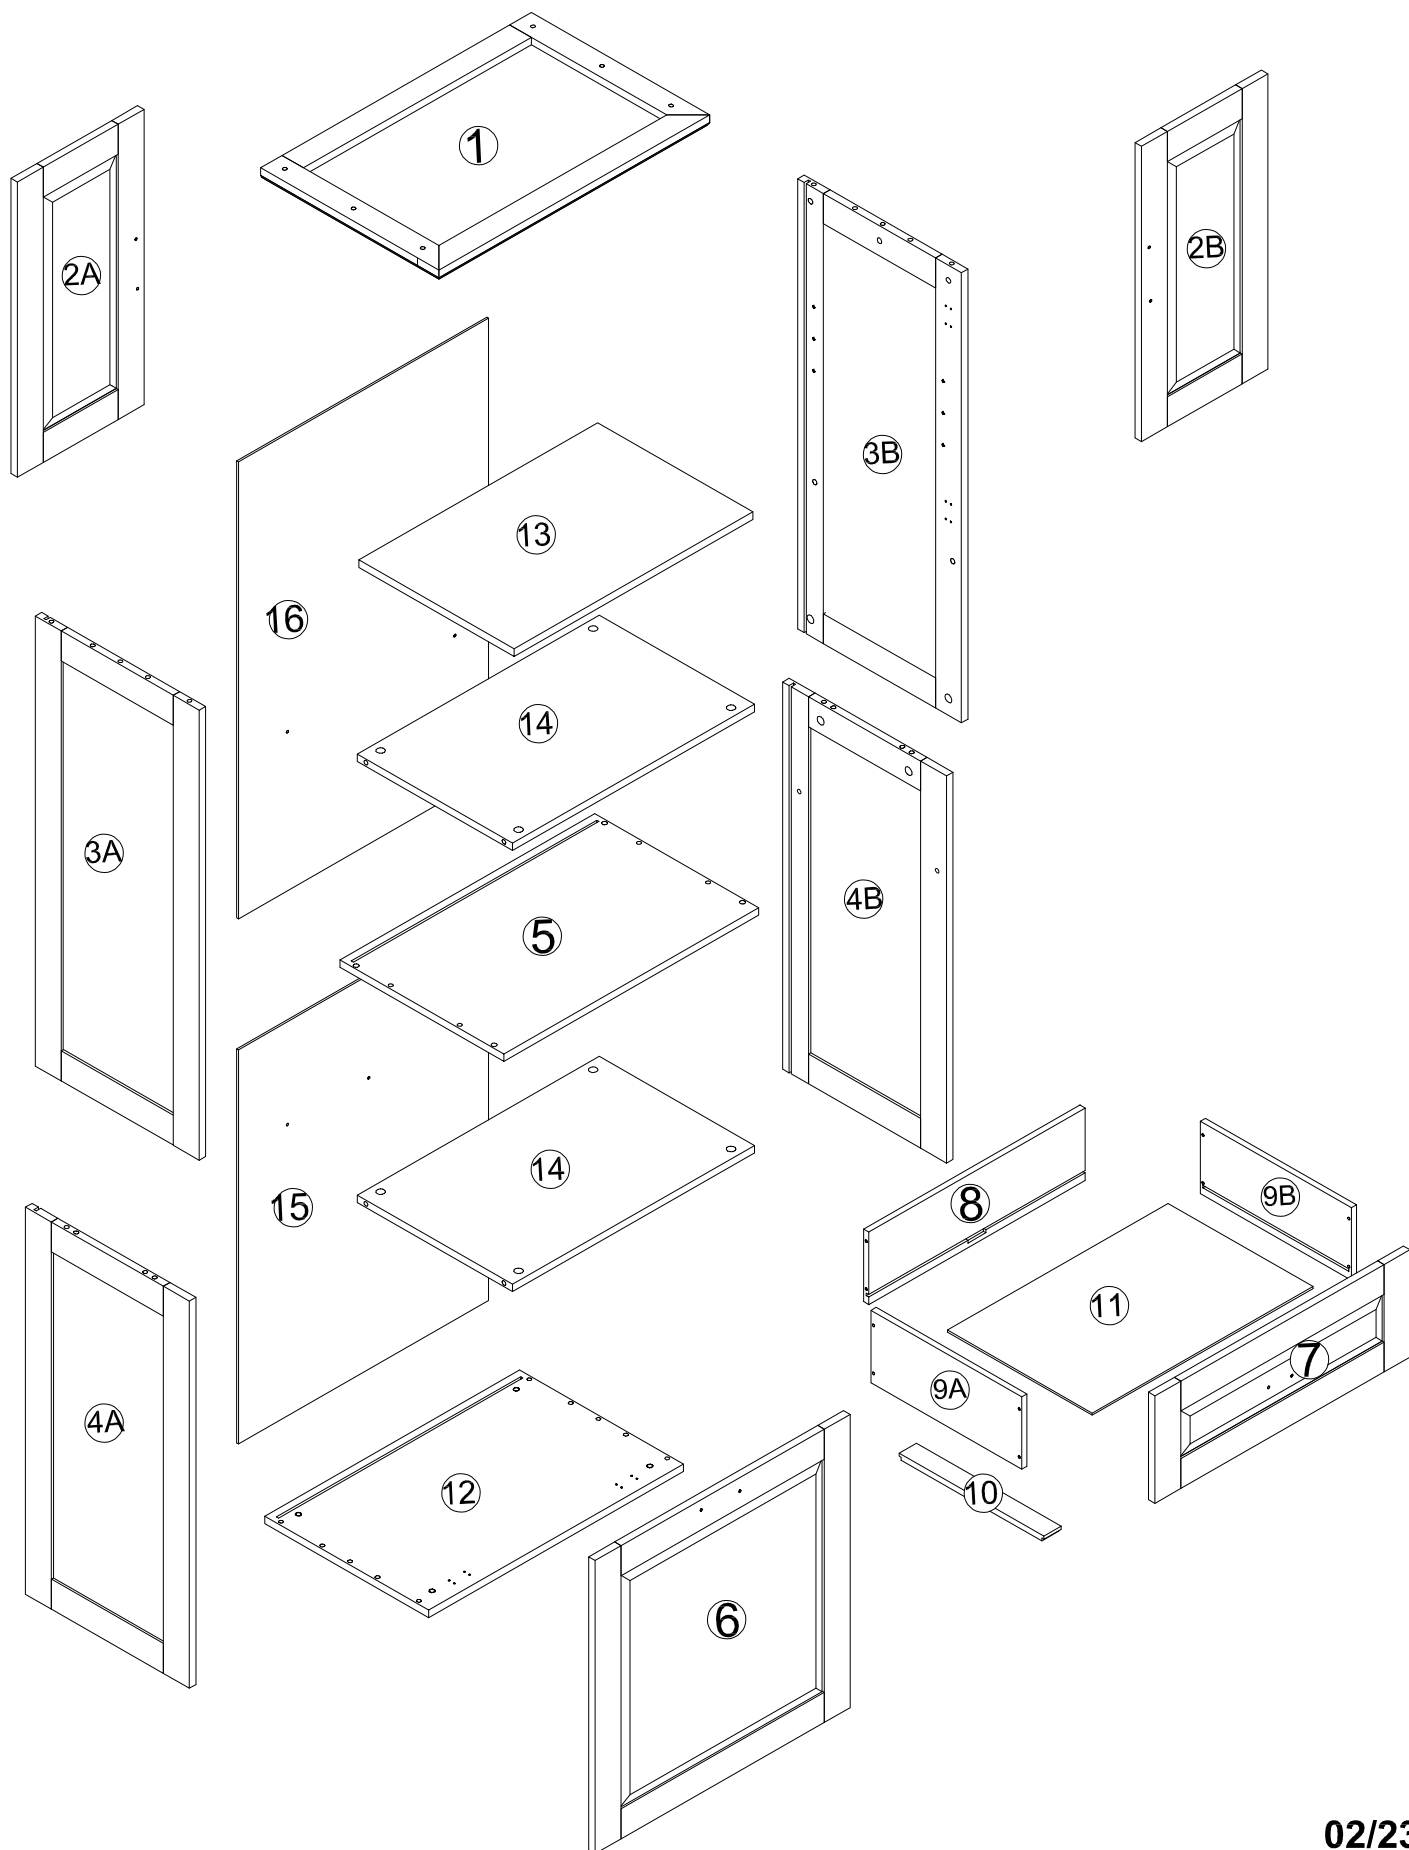


Part List

1

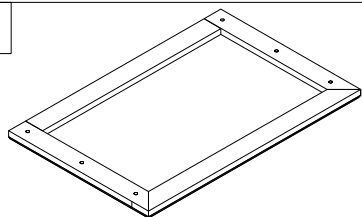


The top of the cabinet-1pcs

2A

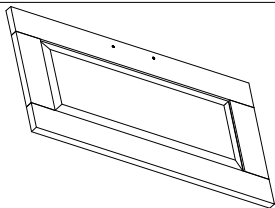


CABINET WINGS-1pcs

2B

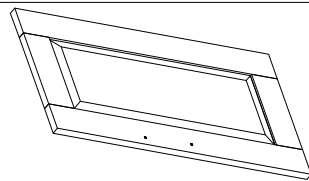


CABINET WINGS-1pcs

3A

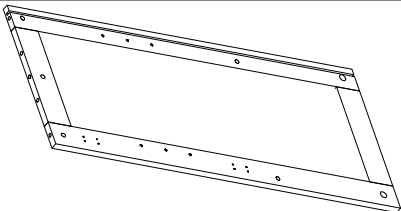


SIDE EDGE OF CABINET-1pc

3B

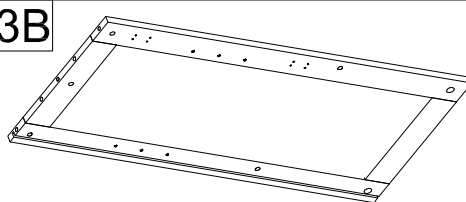


SIDE EDGE OF CABINET-1pc

4A

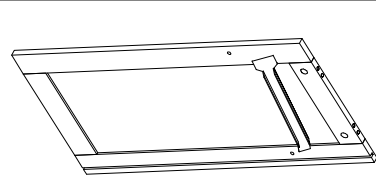


SIDE EDGE OF CABINET-1pc

4B

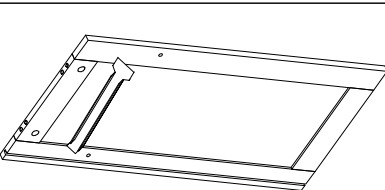


SIDE EDGE OF CABINET-1pc

5

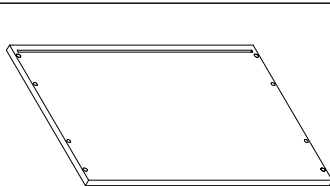


CABINET COMPARTMENT PANELS-1pcs

6

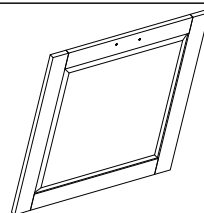


CABINET WINGS-1pcs

7

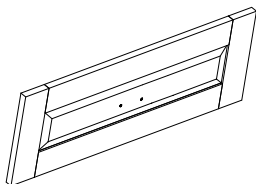


DRAWER-FRONT Panels-1pc

8

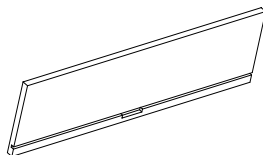


DRAWER-Back Panels-1pcs

9A

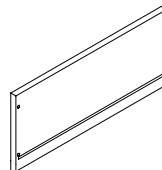


DRAWER-SIDE Panels-1pcs

9B

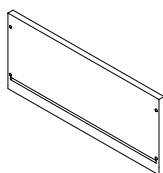


DRAWER-SIDE Panels-1pcs

10

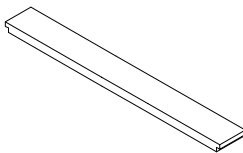


Drawers-Support Bottom-1pcs

11

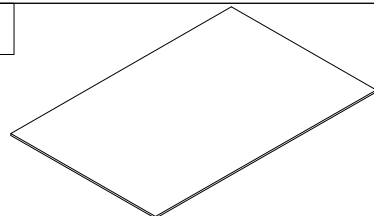


Drawer-Bottom Panels-1pcs

12

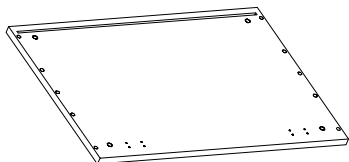


CABINET BOTTOM-1pcs

13

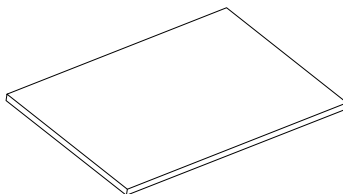


MOVING SHELVES-1pcs

14

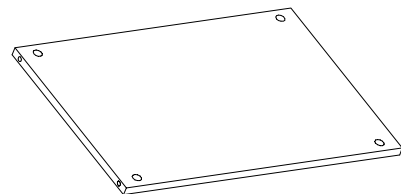


FIXED SHELF-2pcs

15

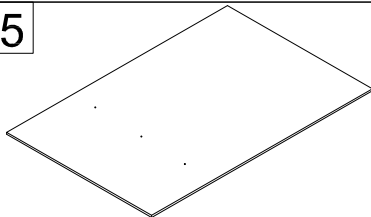


Cabinet Back-1pcs

16

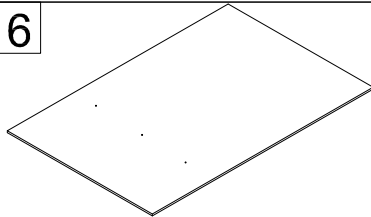




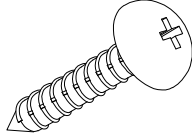

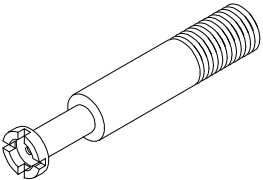

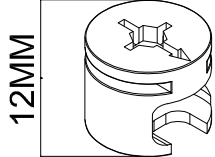
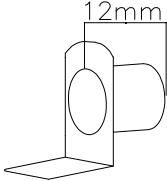
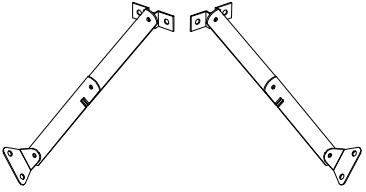


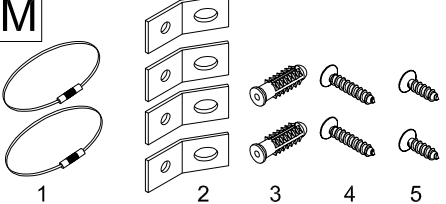


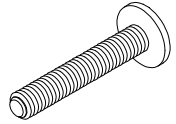



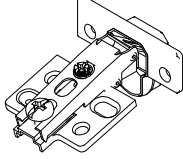

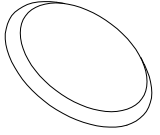
Cabinet Back-1pcs


T

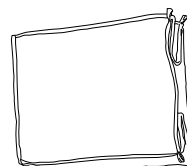

Cloth Bag-1pc






Hardware List



A  <p>Ø1/4" x 70mm Hex-Head bolts 6pcs</p>	B  <p>Ø1/4" x 10 mm Horizontal-Hole bolts 12pcs</p>	C  <p>Ø8 x 30 mm Wood dowel 8pcs</p>
D  <p>M4 x 30 mm Wood Screws 18pcs</p>	E  <p>Ø1/4" x 50mm Hex-Head bolts 6pcs</p>	F  <p>Link 1 - 16 pcs</p>
G  <p>Plastic Feet(Ø50x40) 4pcs</p>	H  <p>Link 2 - 16 pcs</p>	I  <p>Support Pin 4pcs</p>
J  <p>Crankshaft 1 set (1L-1R)</p>	K  <p>Allen Key 1pc</p>	L  <p>Handle Steel 4pcs</p>
M  <p>Wall brackets 2set</p>	N  <p>Clamp pin 2pcs</p>	O  <p>Ø8 x 60 mm Wood dowel 4pcs</p>
P  <p>M4 x 18mm Hex-Head bolts 6pcs</p>	R  <p>M3.5 x 15mm Wood Screws 4pcs</p>	Q  <p>Hanger 4pcs</p>
W  <p>M4 x 15 mm Wood Screws 58pcs</p>	X  <p>Hinge - 6Pcs</p>	<div> <div data-bbox="1045 1762 1284 2016"> Z  <p>M4 x 30mm Wood Screws 8pcs</p> </div> <div data-bbox="1284 1762 1525 2016"> Y  <p>Plastic button 16pcs</p> </div> </div>







Assembly Tools Required (Not Included)



STEP 1: Following below illustration:

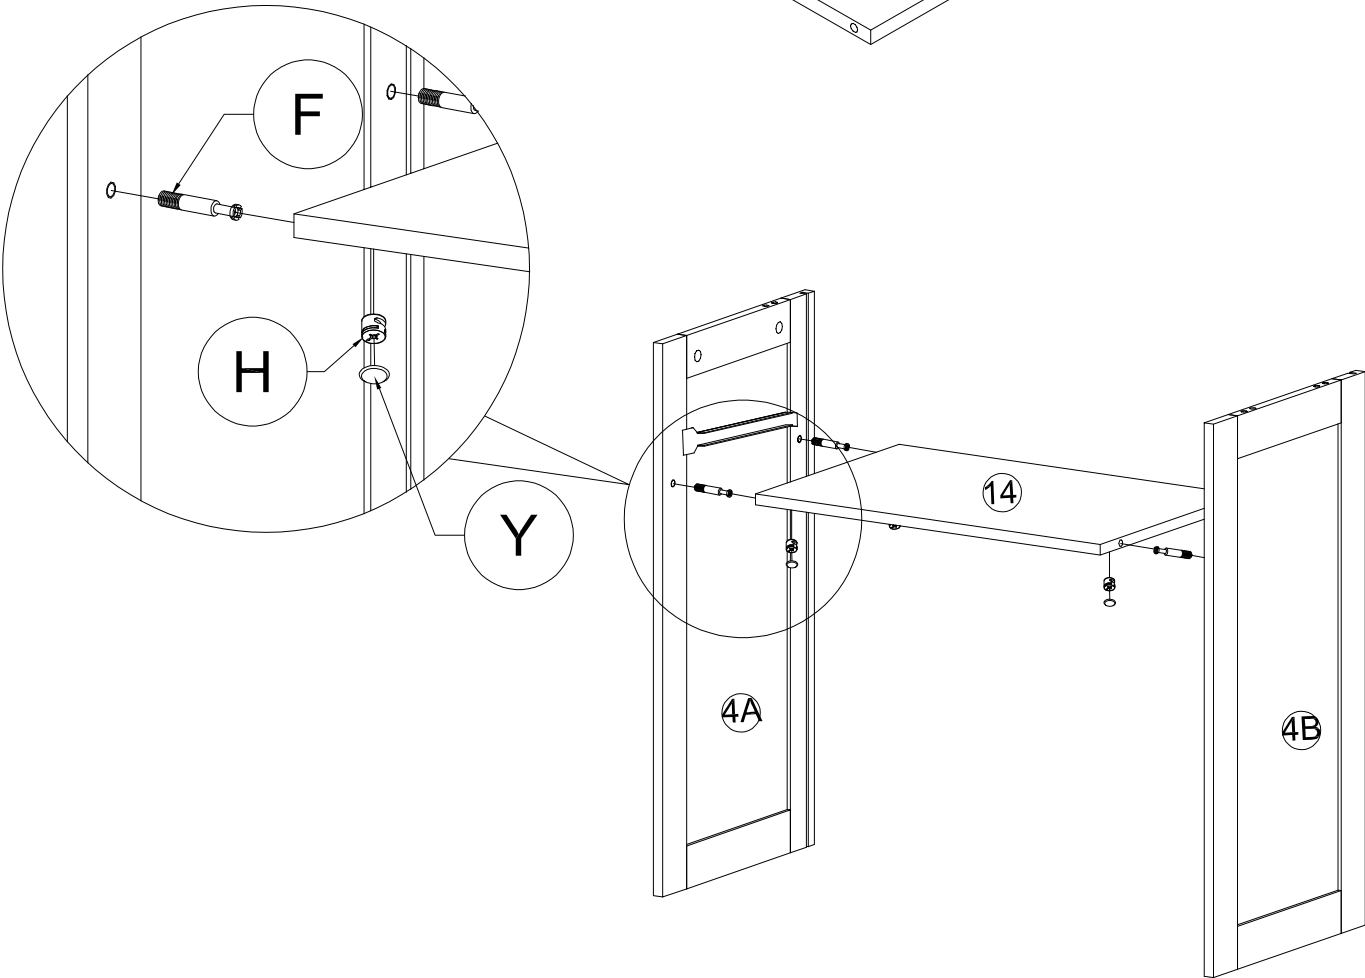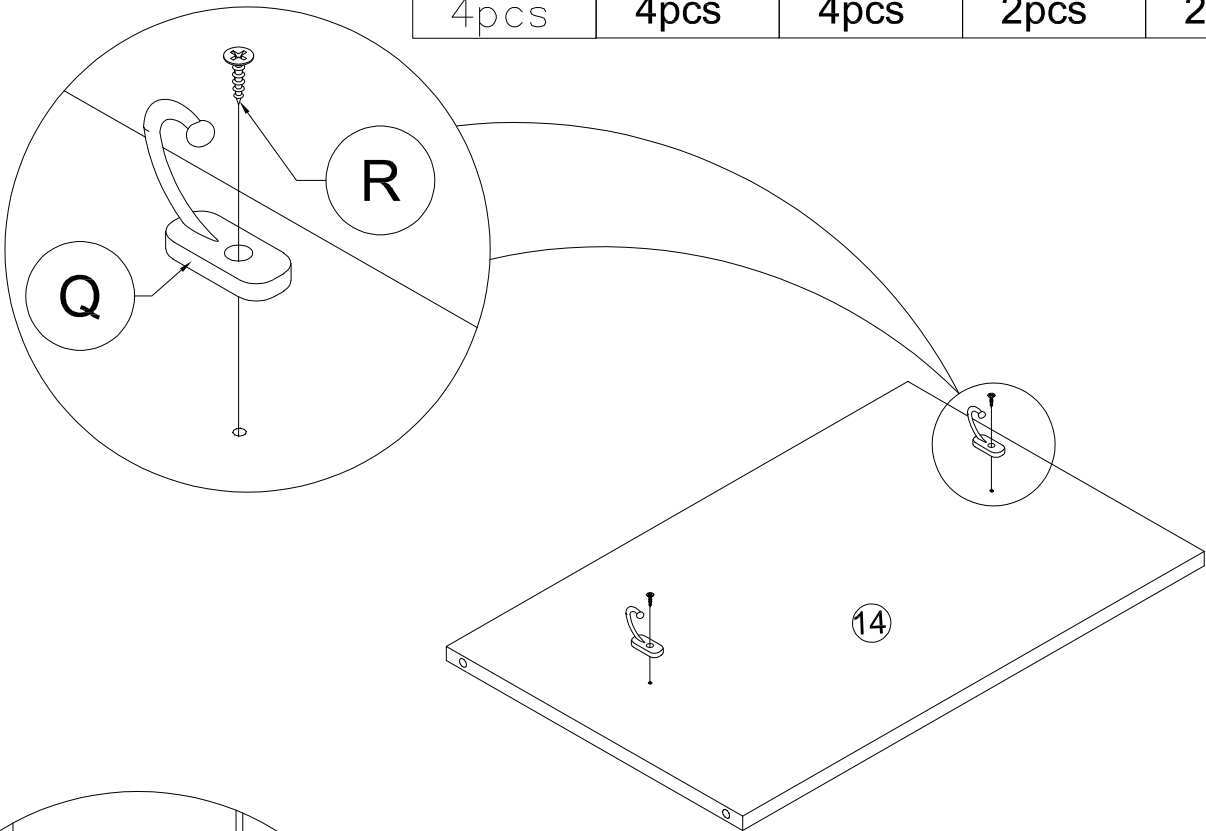Y	F	H	Q	R
				
4pcs	4pcs	4pcs	2pcs	2pcs




STEP 2: Following below illustration:





G	C	E	B
			
4pcs	4pcs	6pcs	6pcs

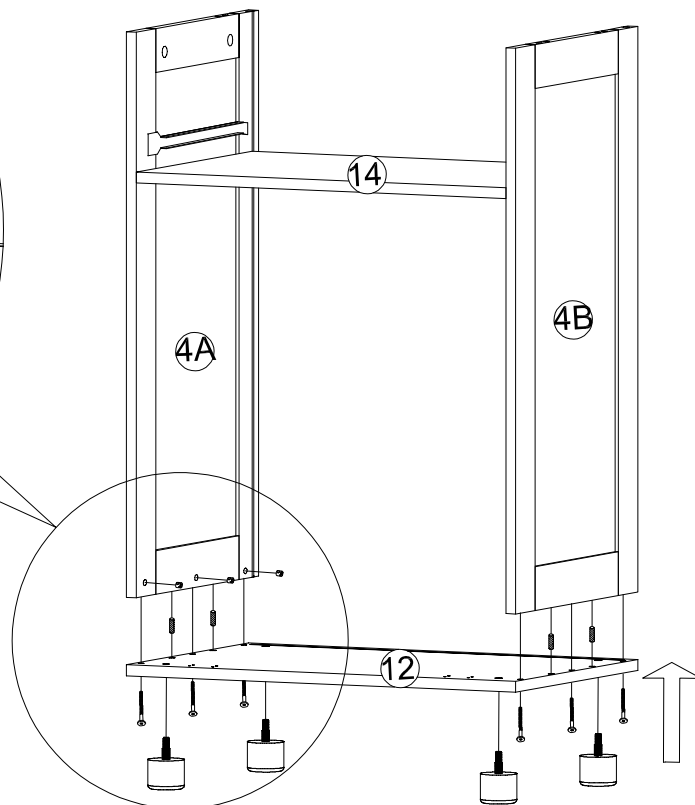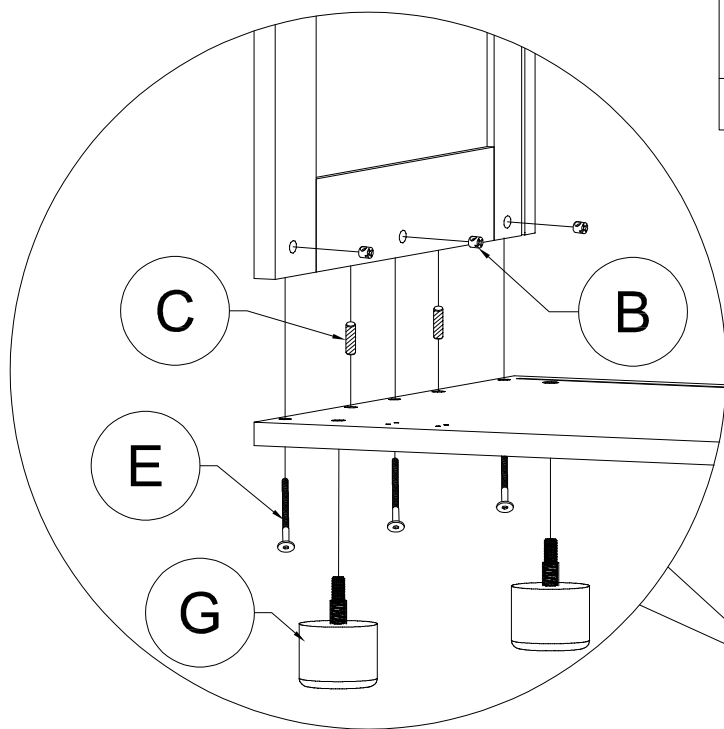


STEP 3: Following below illustration:


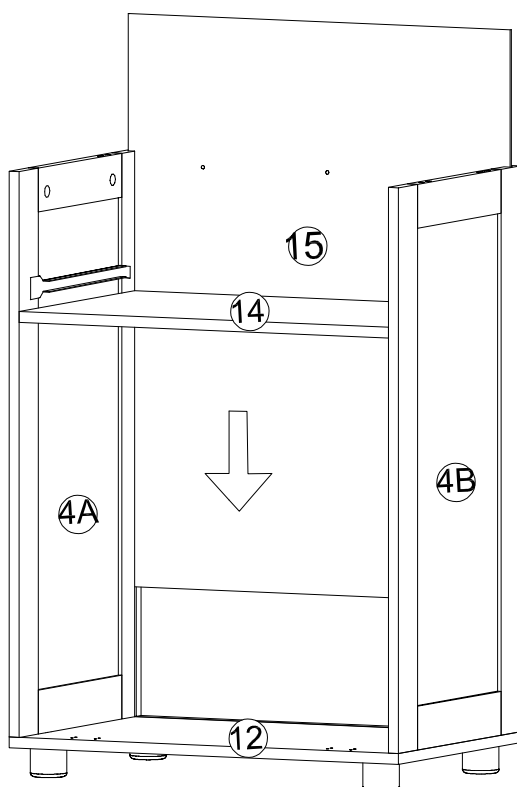



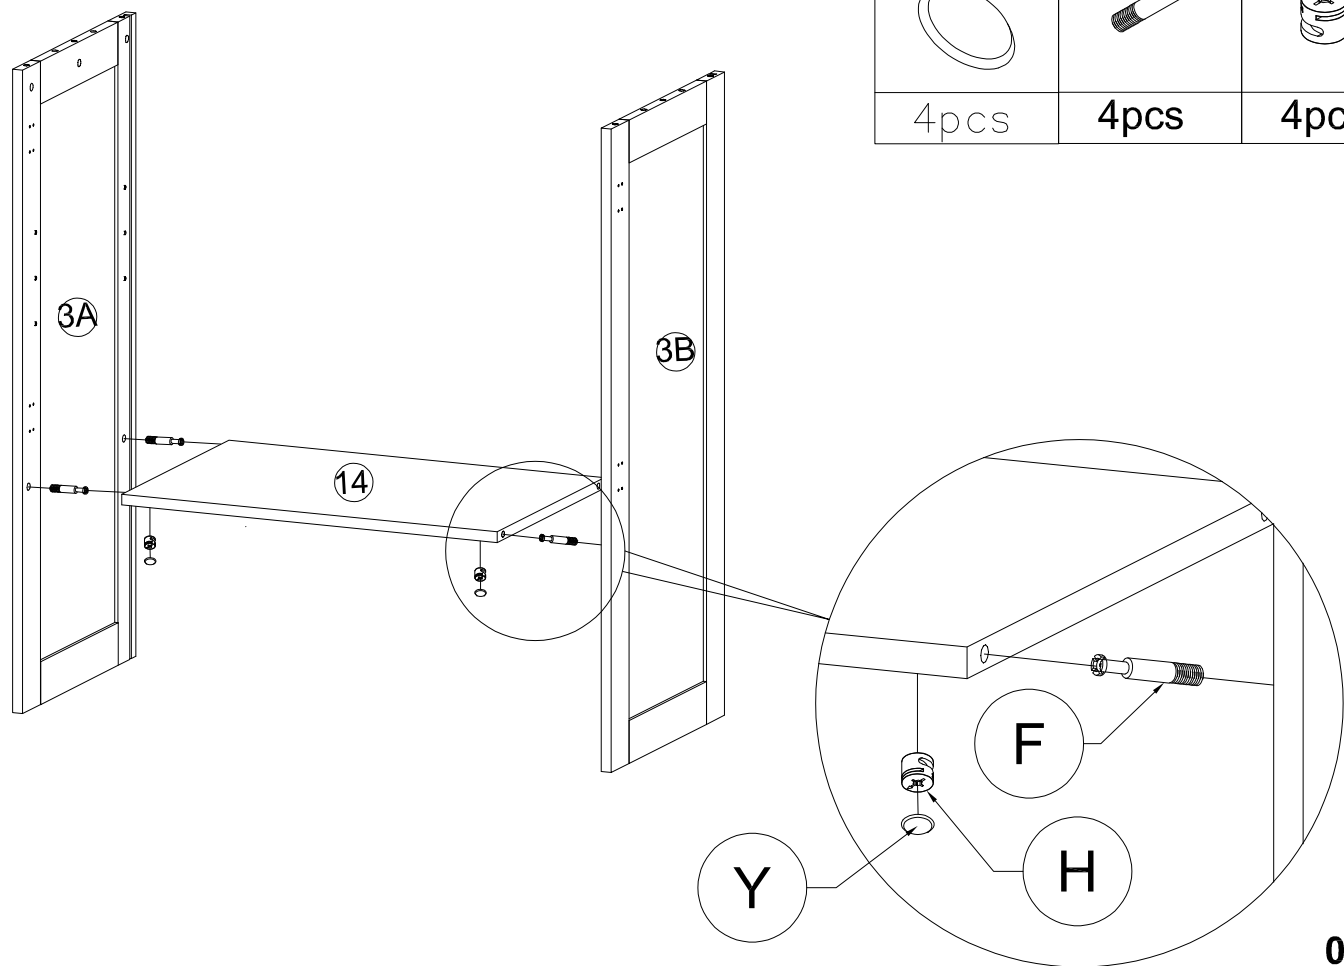
STEP 4: Following below illustration:

Y	O	F	H
			
4pcs	4pcs	4pcs	4pcs

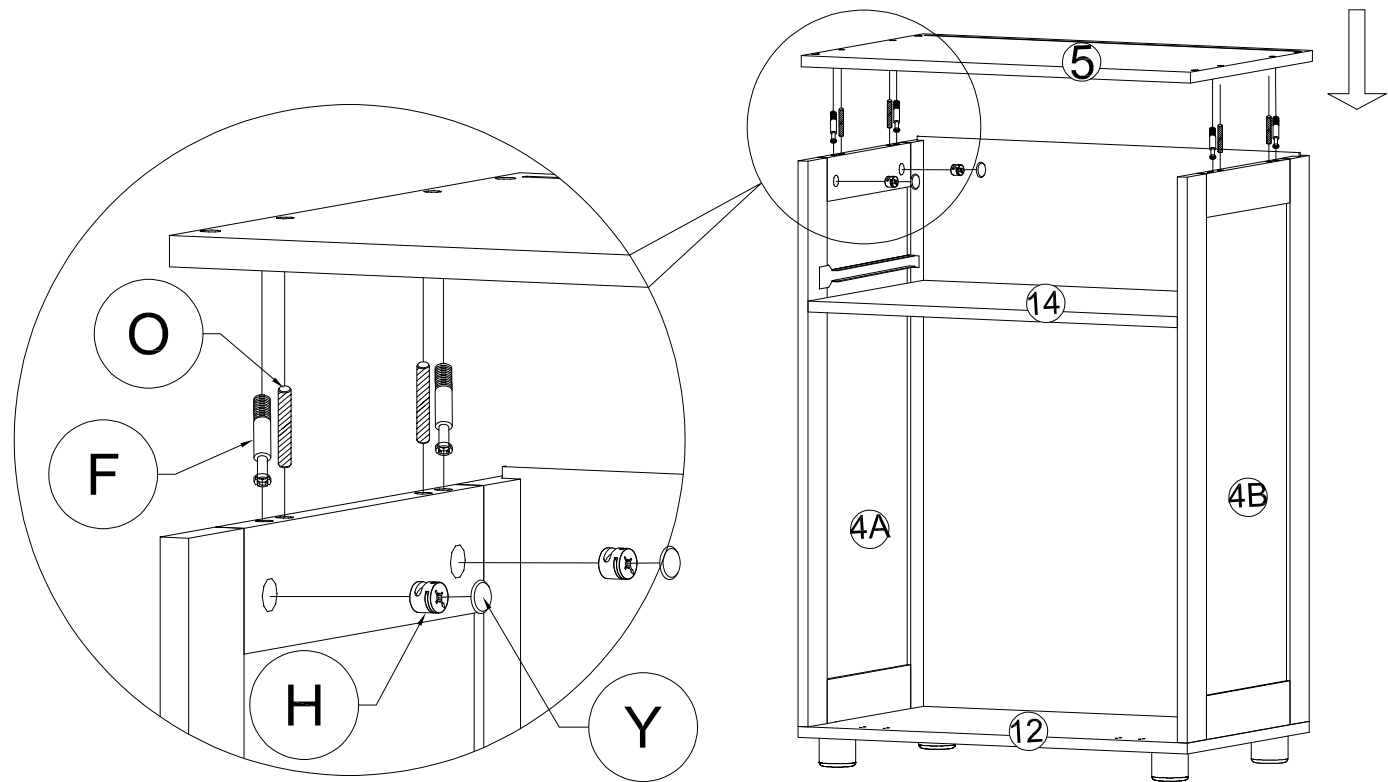




STEP 5: Following below illustration:

Y	F	H
		
4pcs	4pcs	4pcs






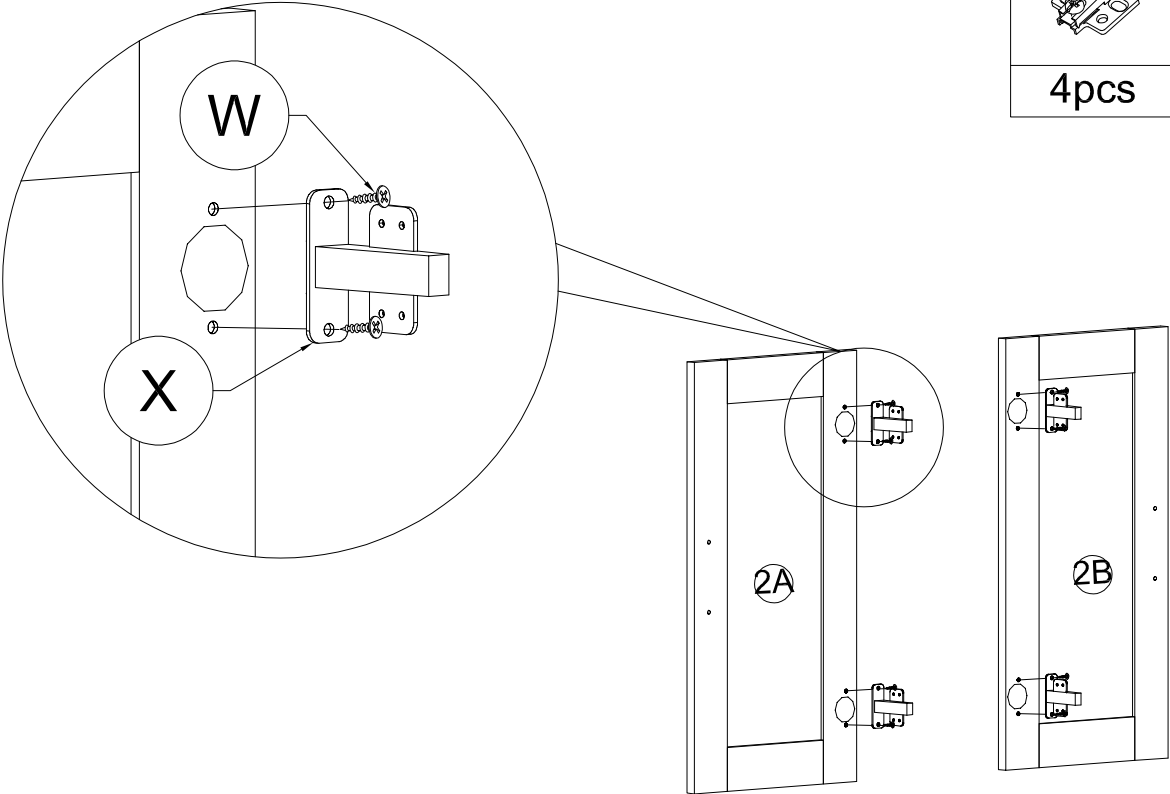




STEP 6: Following below illustration:

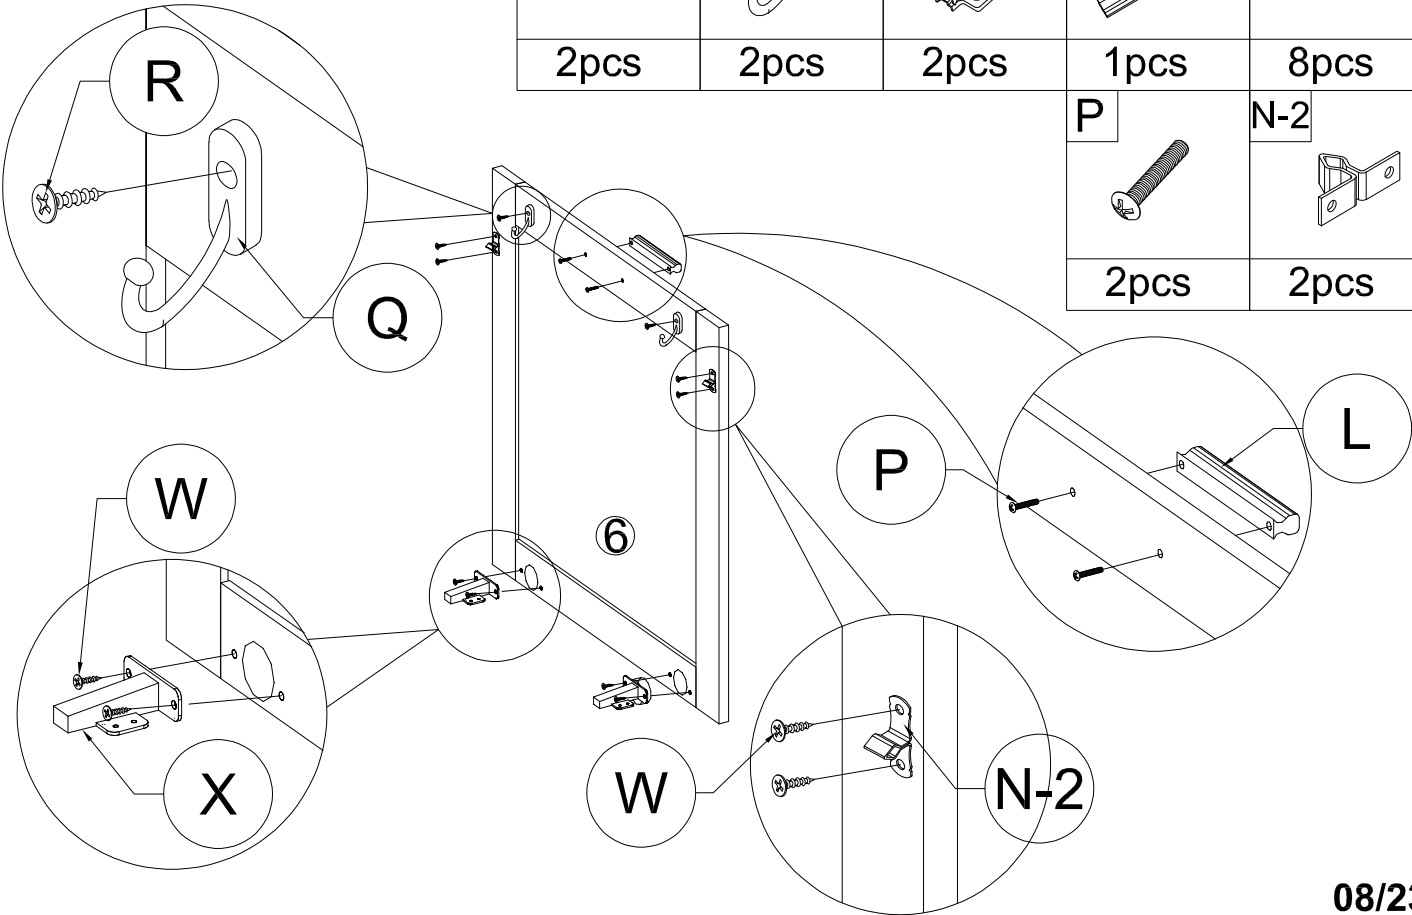




X	W
	
4pcs	8pcs



STEP 7: Following below illustration:




R	Q	X	L	W
				
2pcs	2pcs	2pcs	1pcs	8pcs
			P	N-2
				
			2pcs	2pcs

STEP 8: Following below illustration:




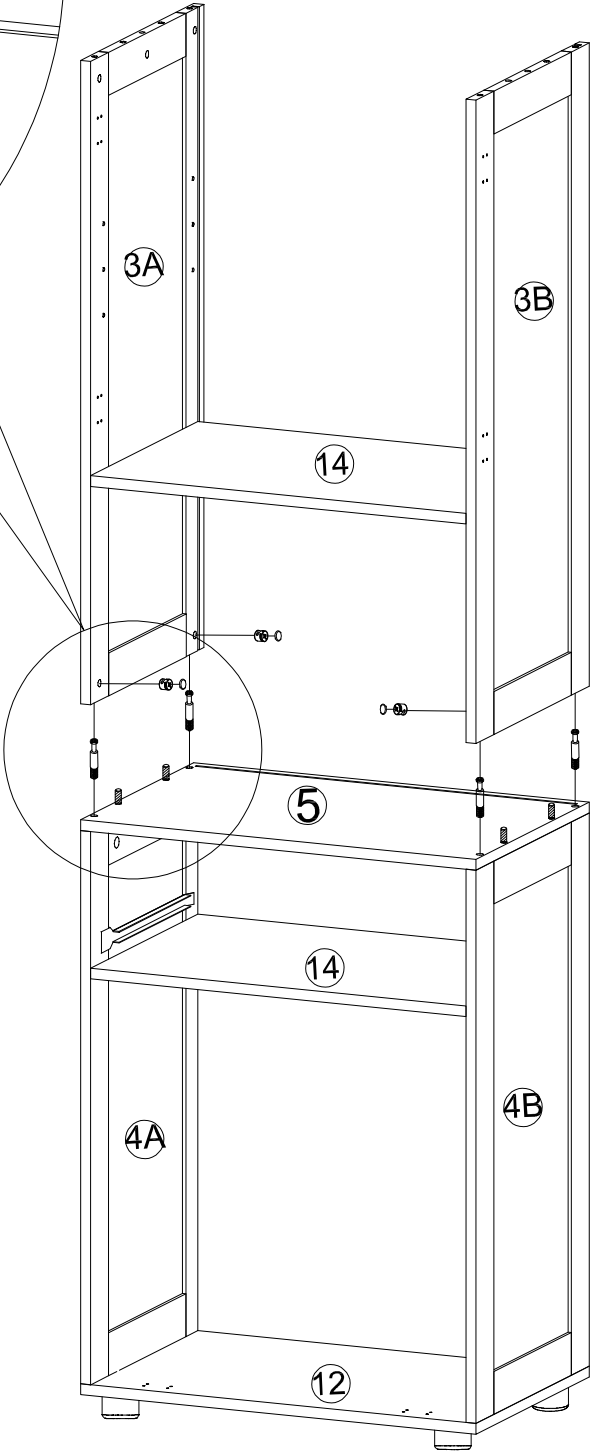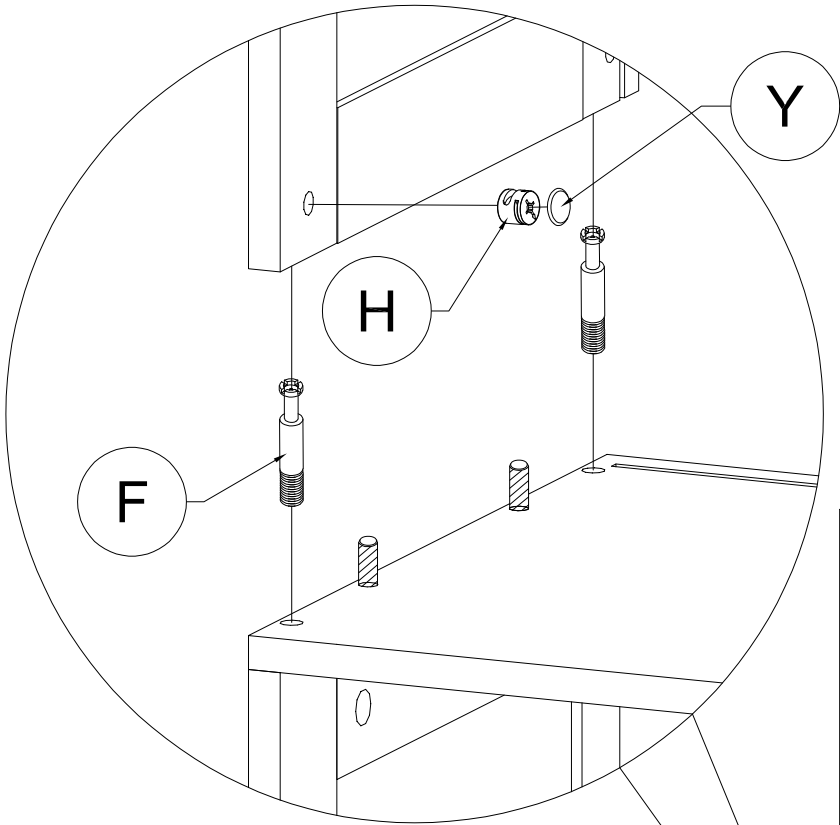Y	F	H
		
4pcs	4pcs	4pcs


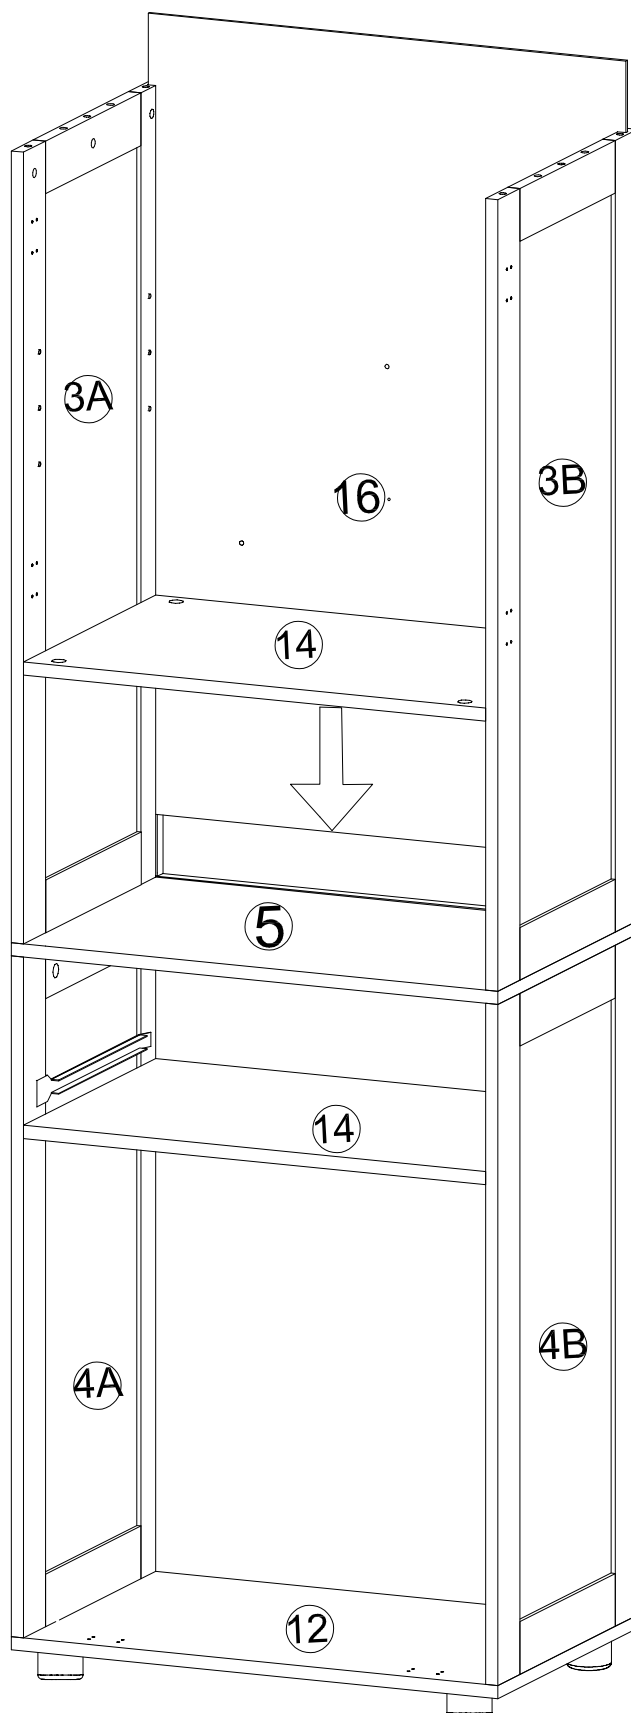


STEP 9: Following below illustration:








STEP 10: Following below illustration:

A		C		B	
6pcs		4pcs		6pcs	

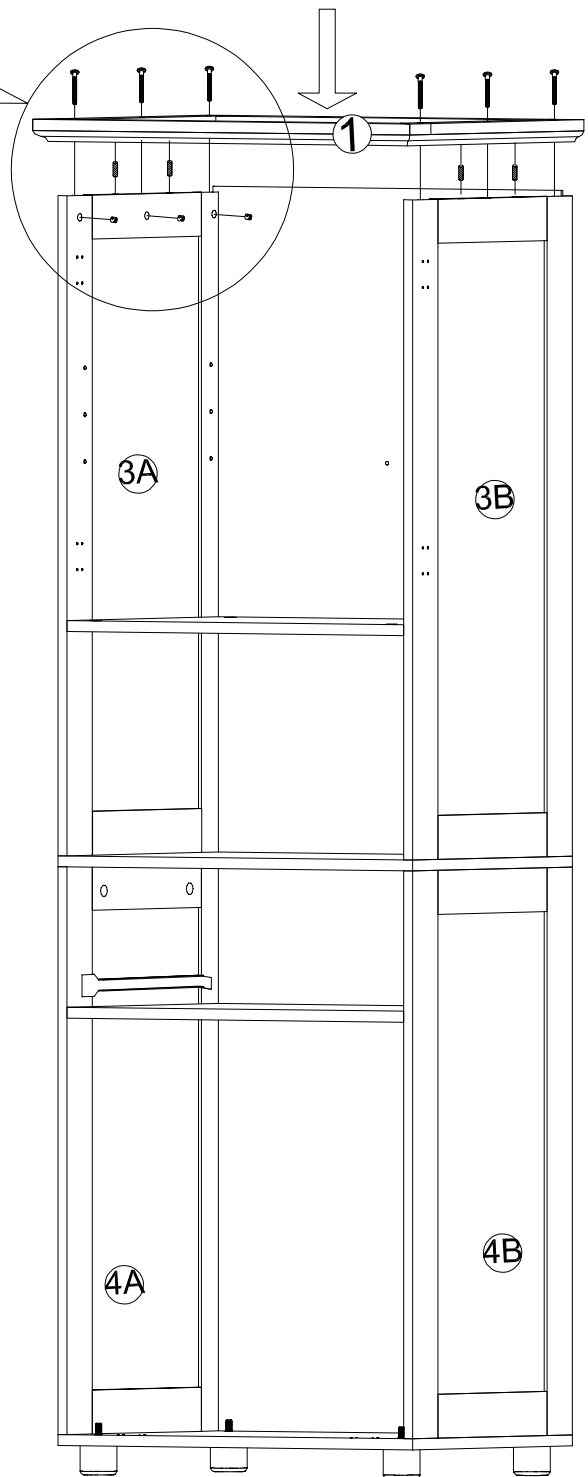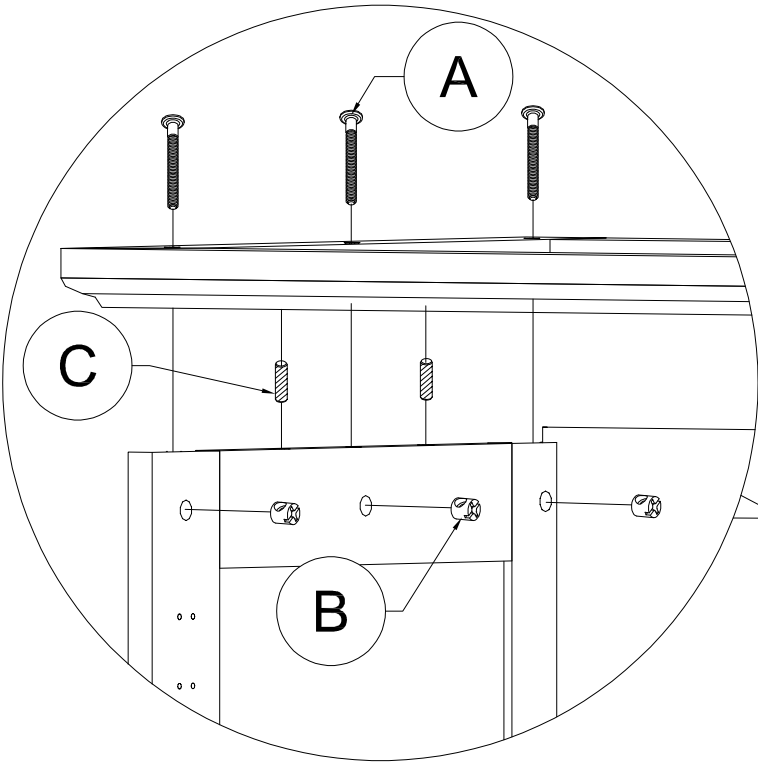

STEP 11: Following below illustration:

W	M-2	M-5	D
			
6pcs	2pcs	2pcs	18pcs

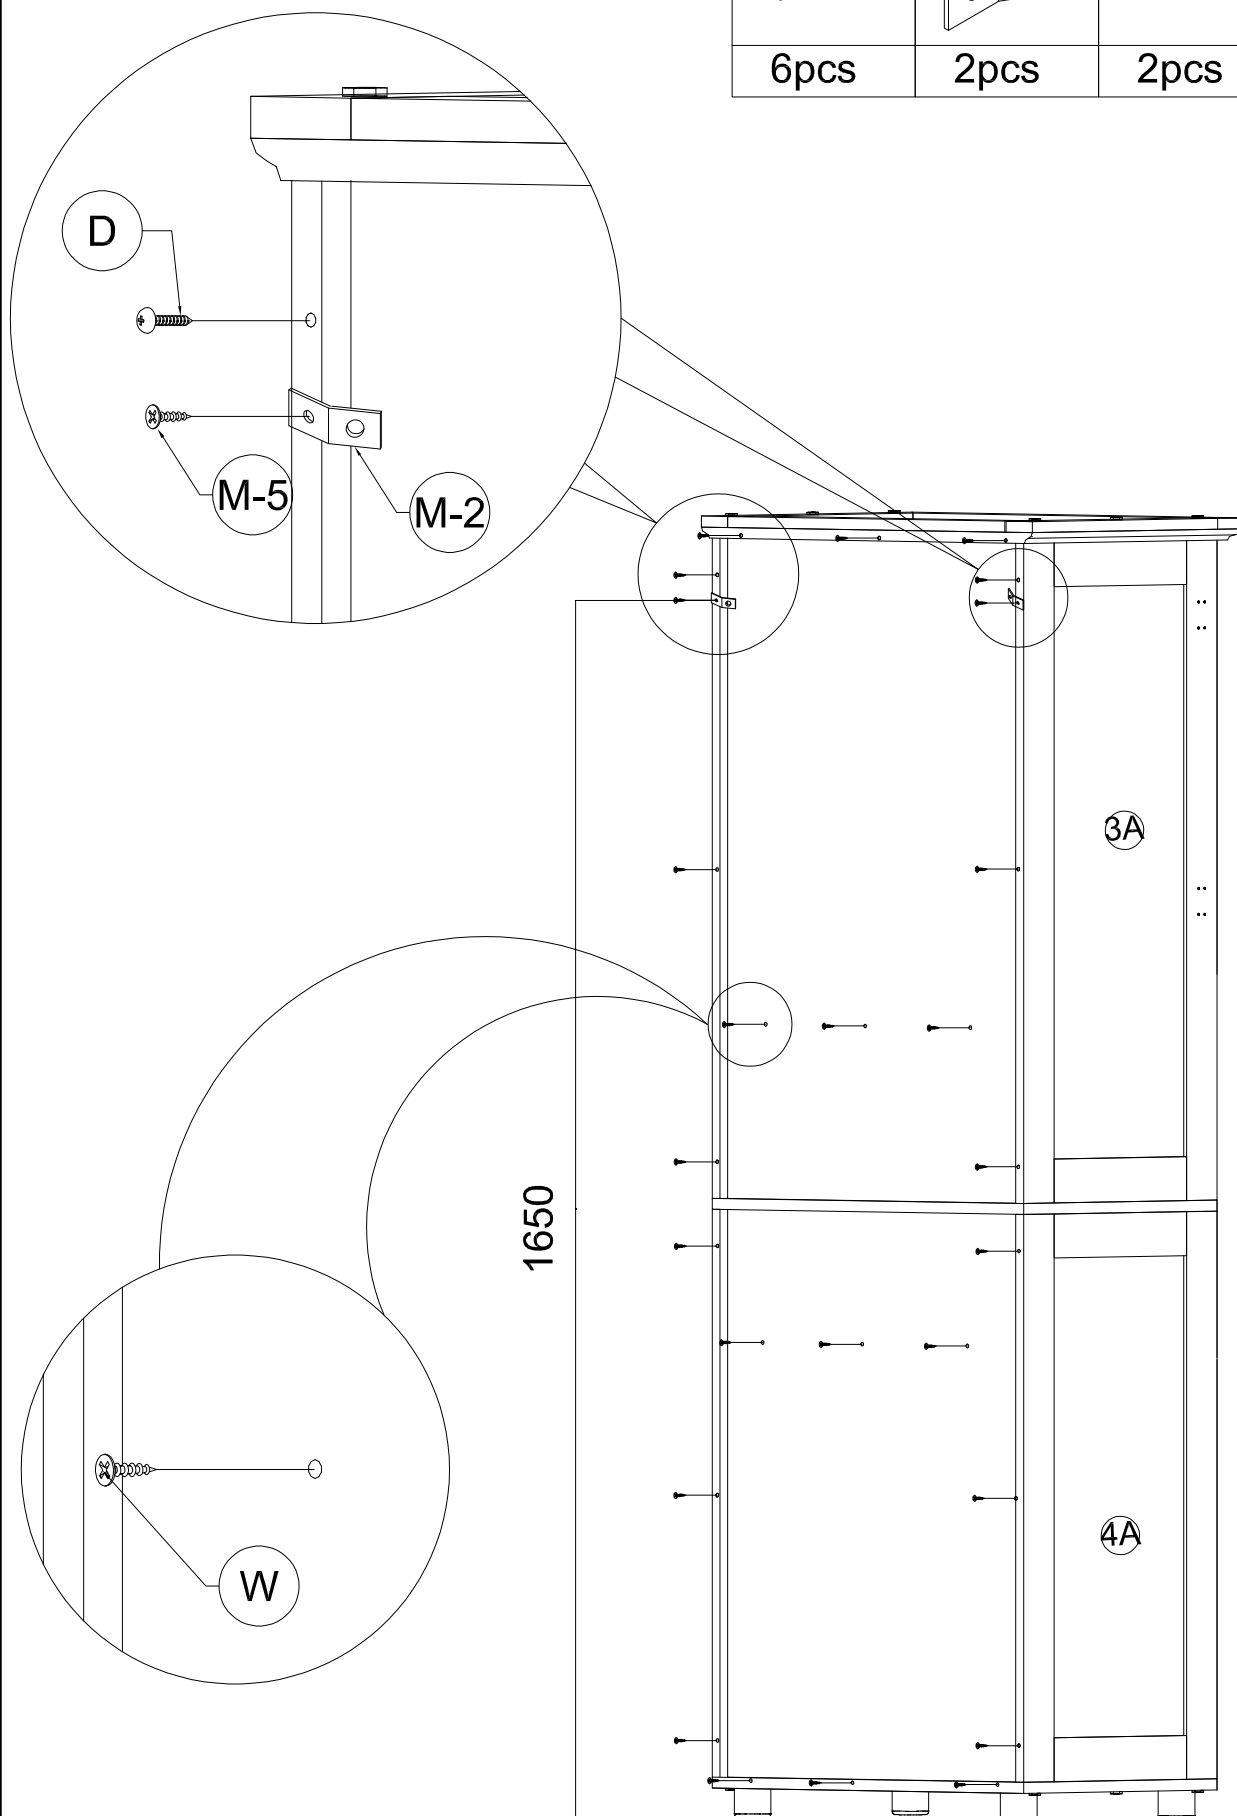


STEP 12: Following below illustration:


W






16pcs



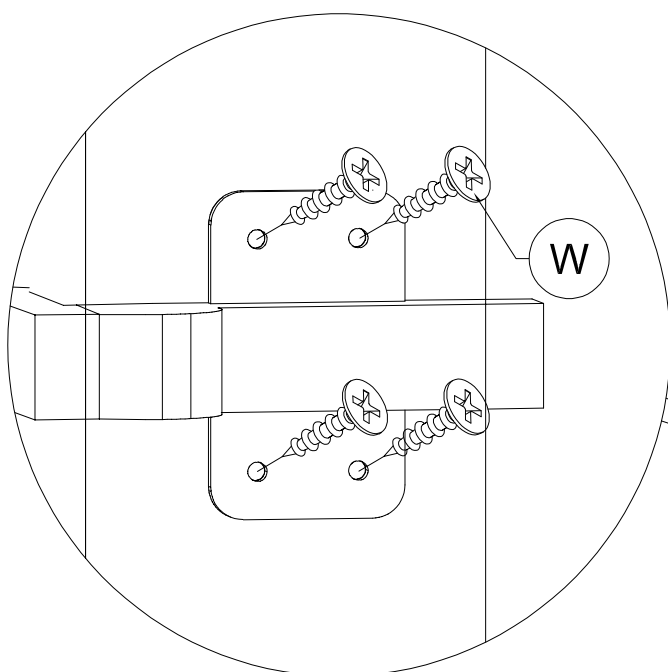


Scan the QR code to
adjust the cabinet
door clearance as
desired.

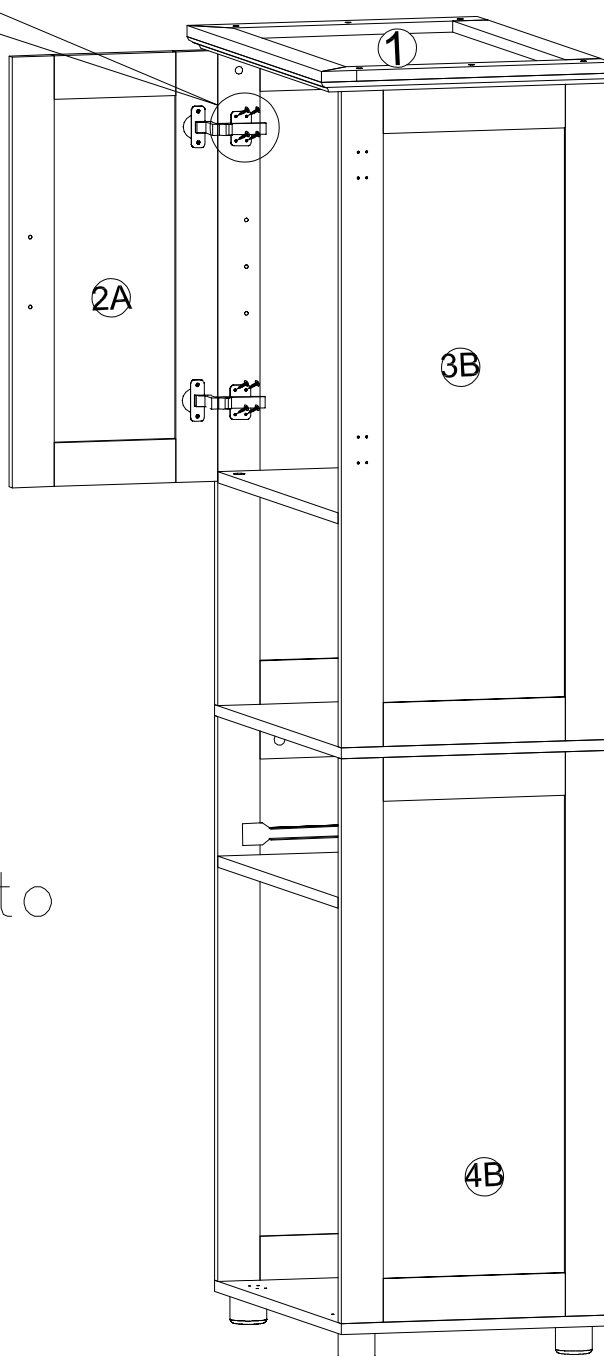

STEP 13: Following below illustration:

P	L	I
		
4pcs	2pcs	4pcs

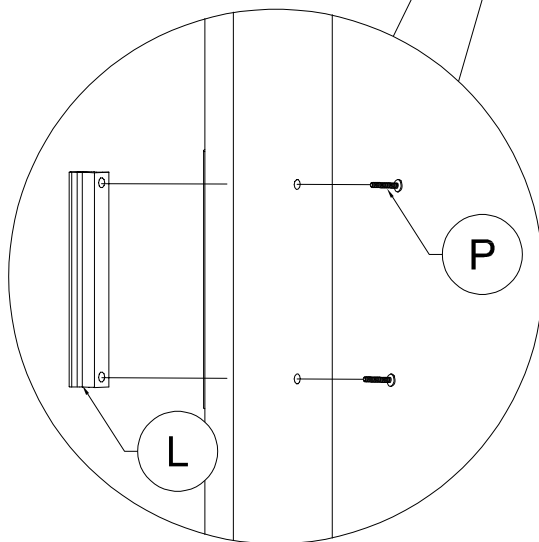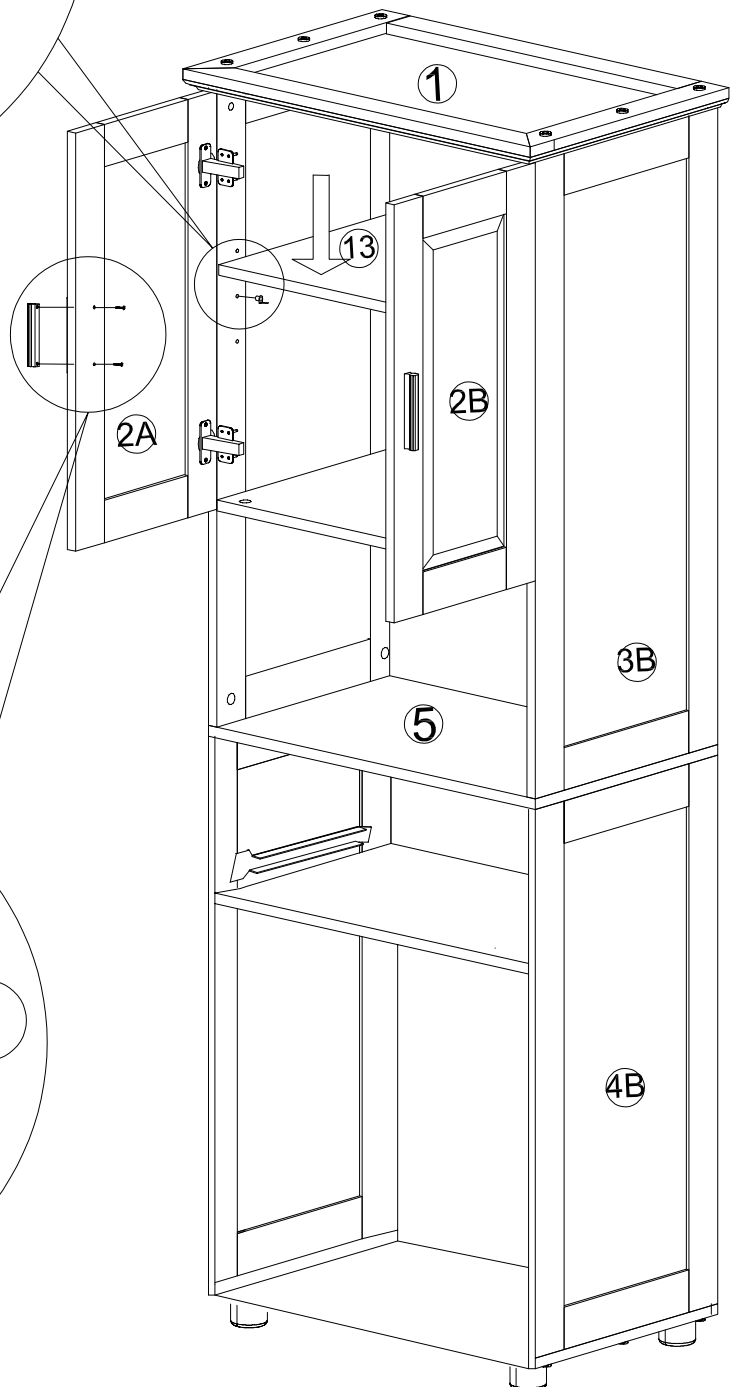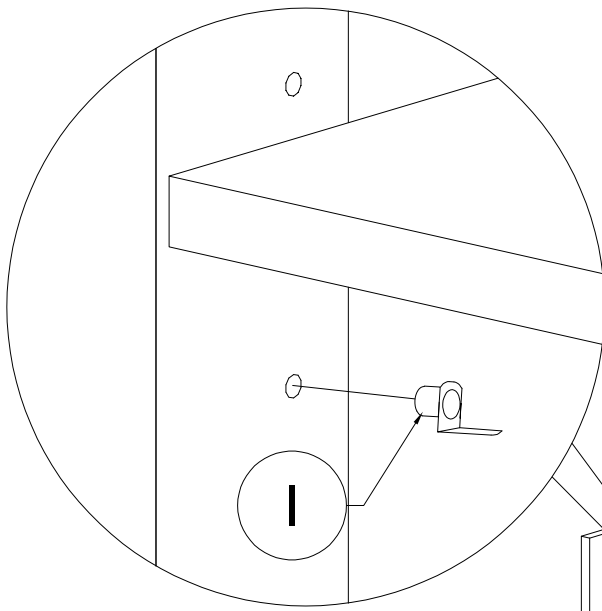


STEP 14:

Following below illustration:

Z




4pcs



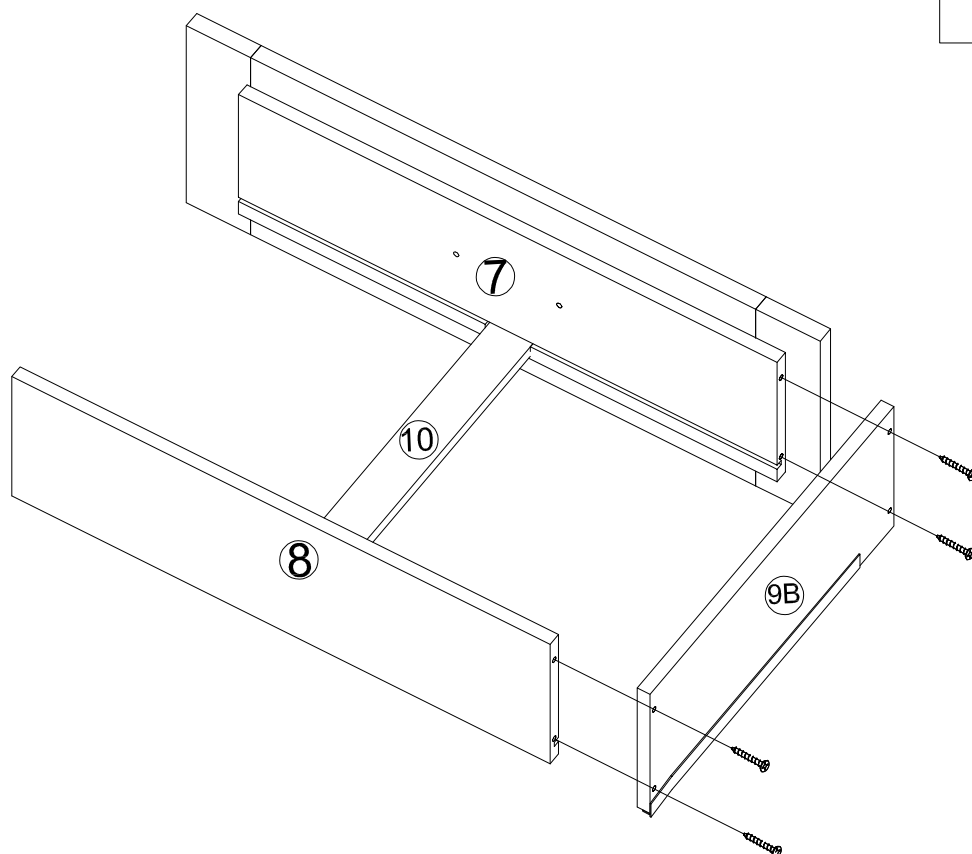



STEP 15:

Following below illustration:

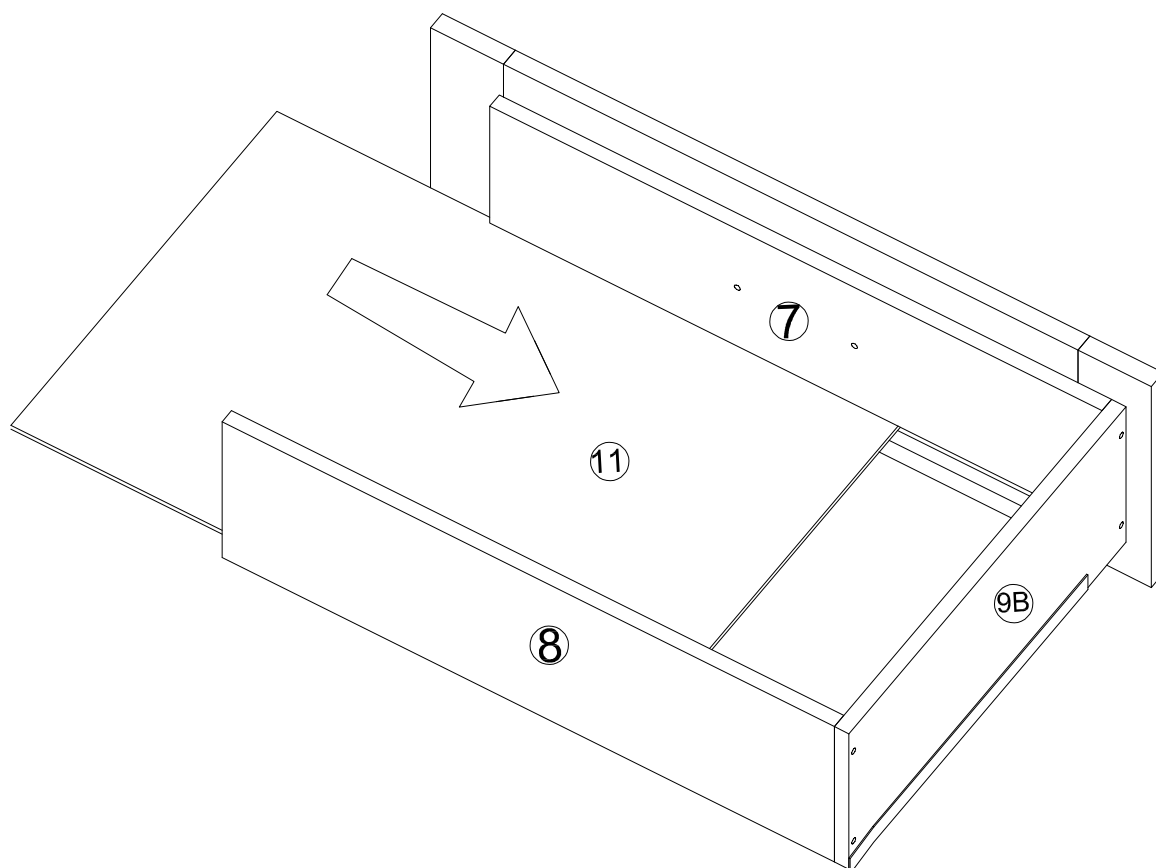




STEP 16: Following below illustration:

S	L	Z
		
2pcs	1pcs	4pcs

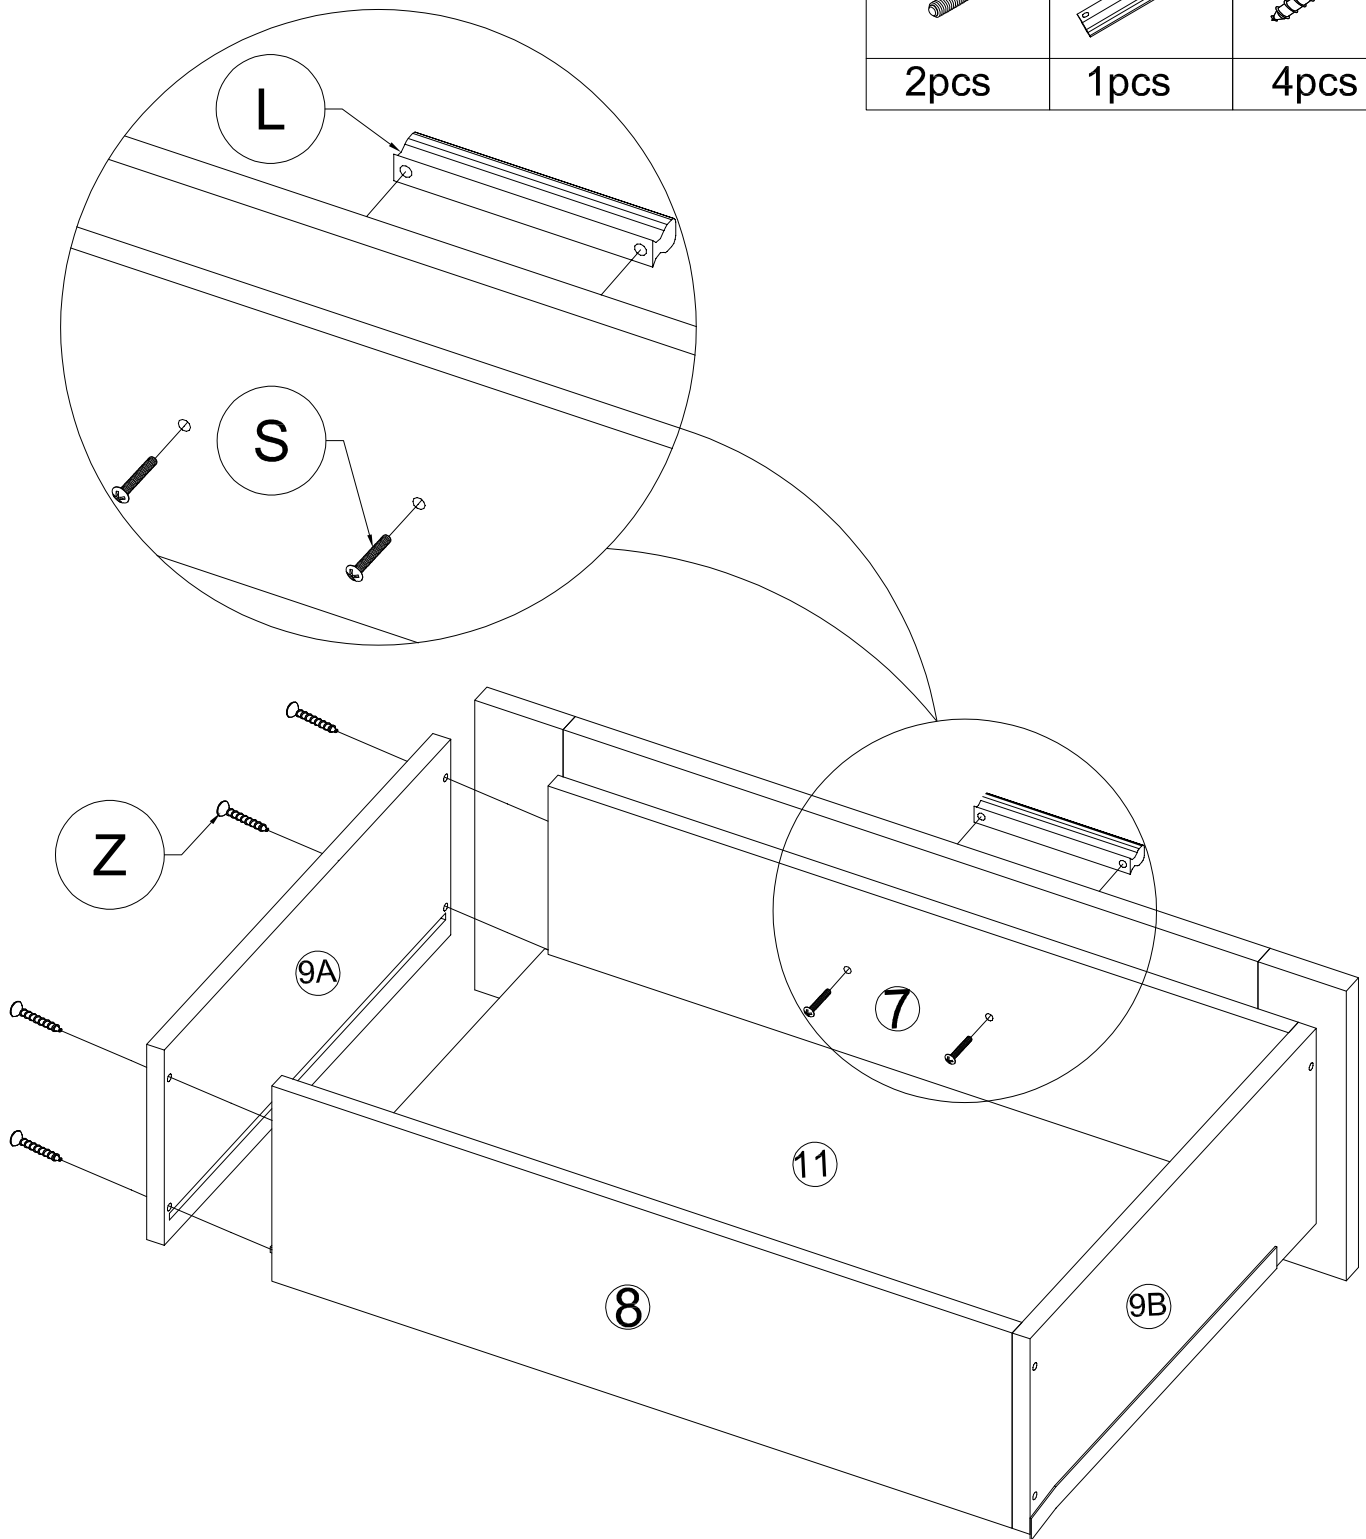


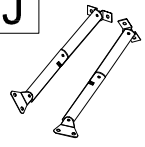
STEP 17:



Following below illustration:

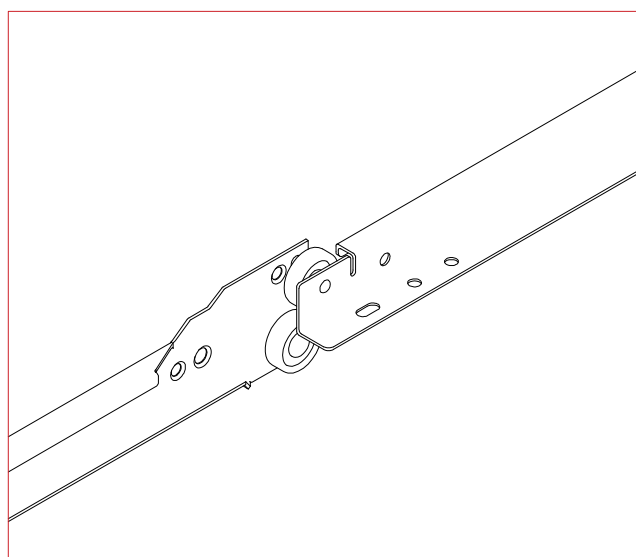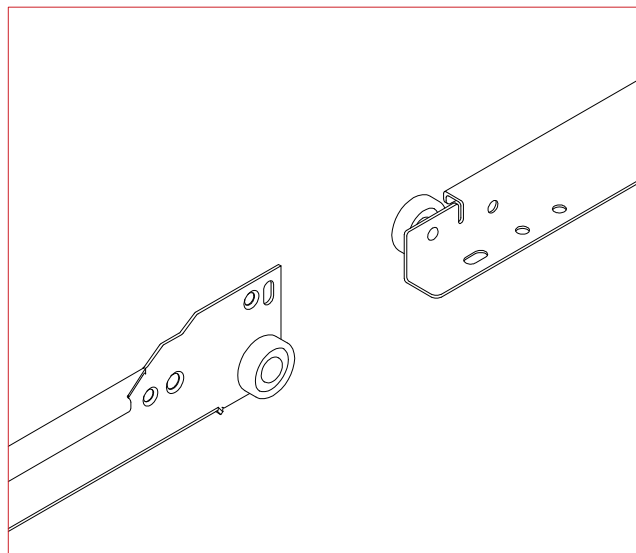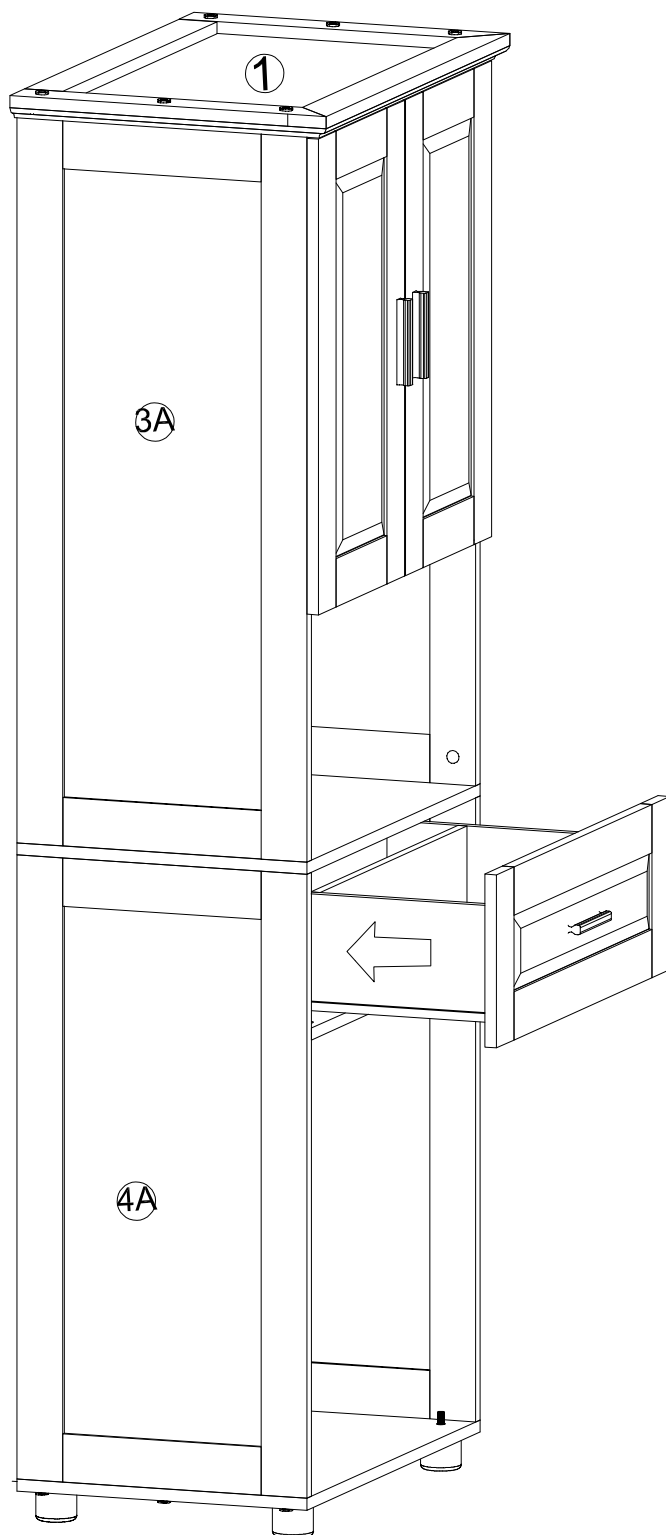



STEP 18:



Following below illustration:

W	J
	
4pcs	1 set

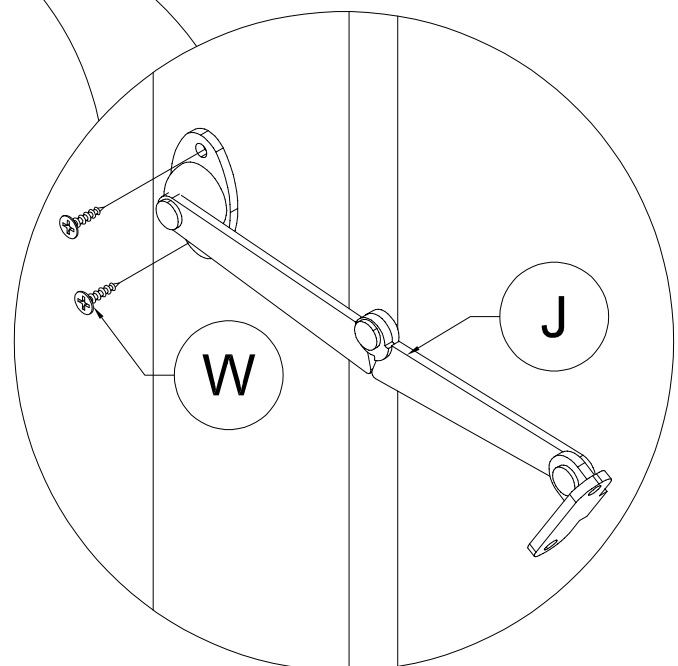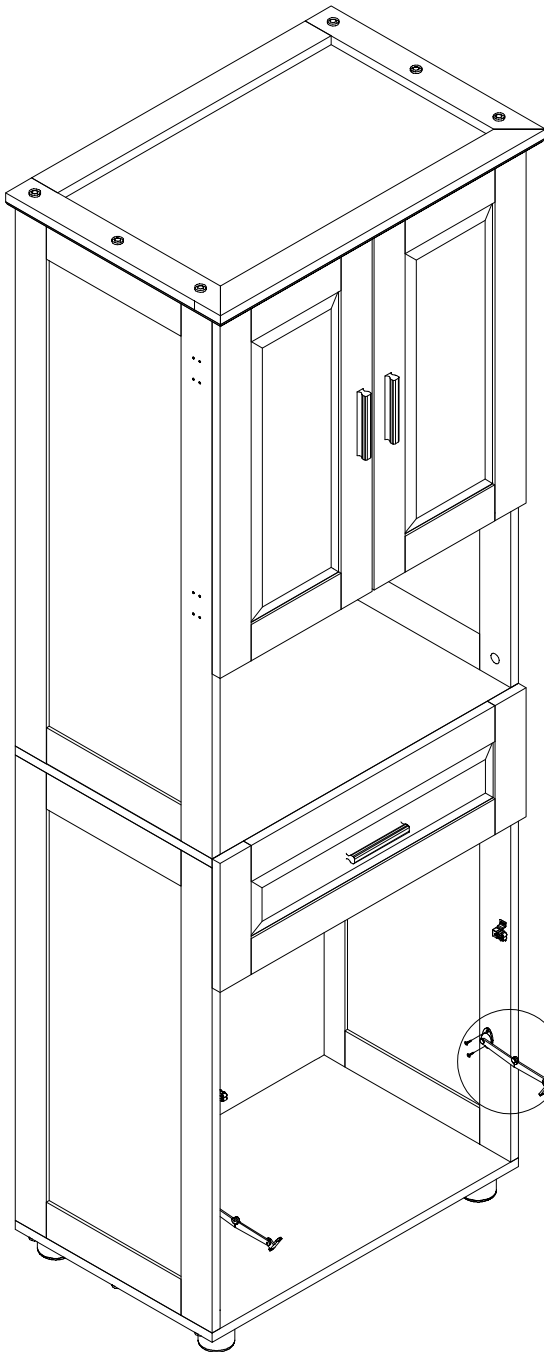

STEP 19: Following below illustration:

N.1	W
	
2pcs	16pcs

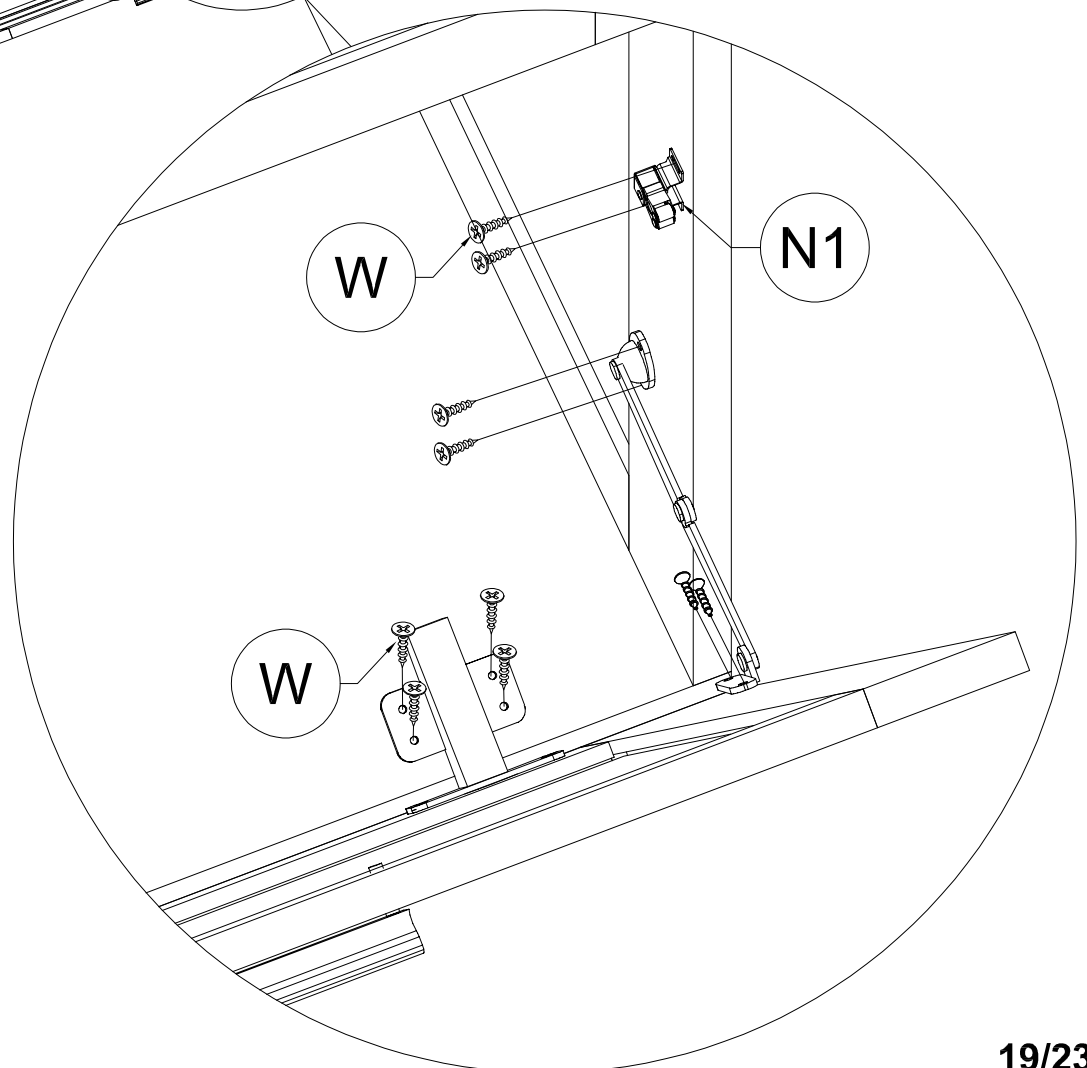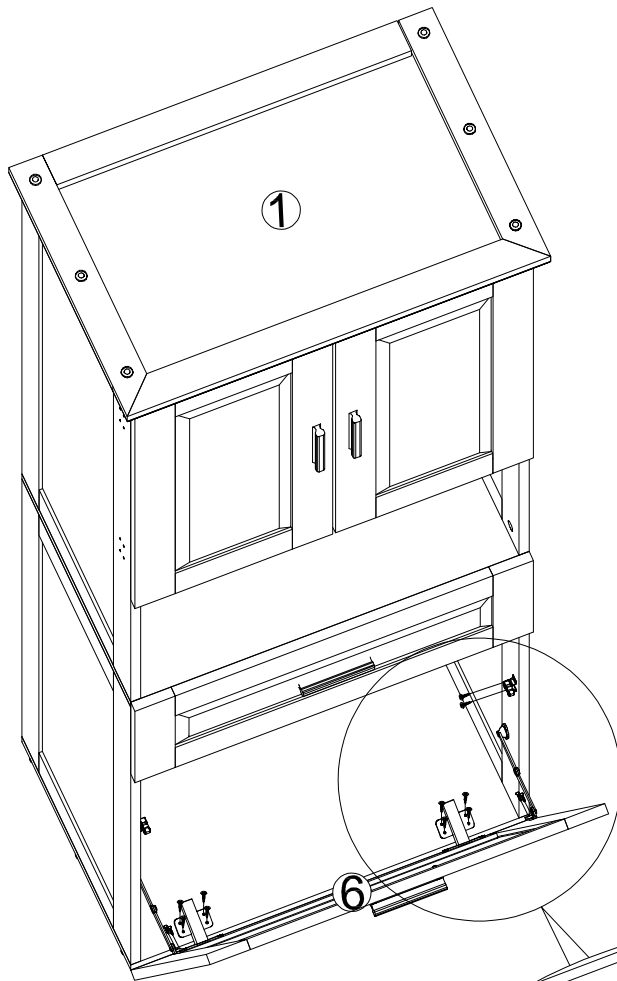


STEP 20: Following below illustration:

T








1pc

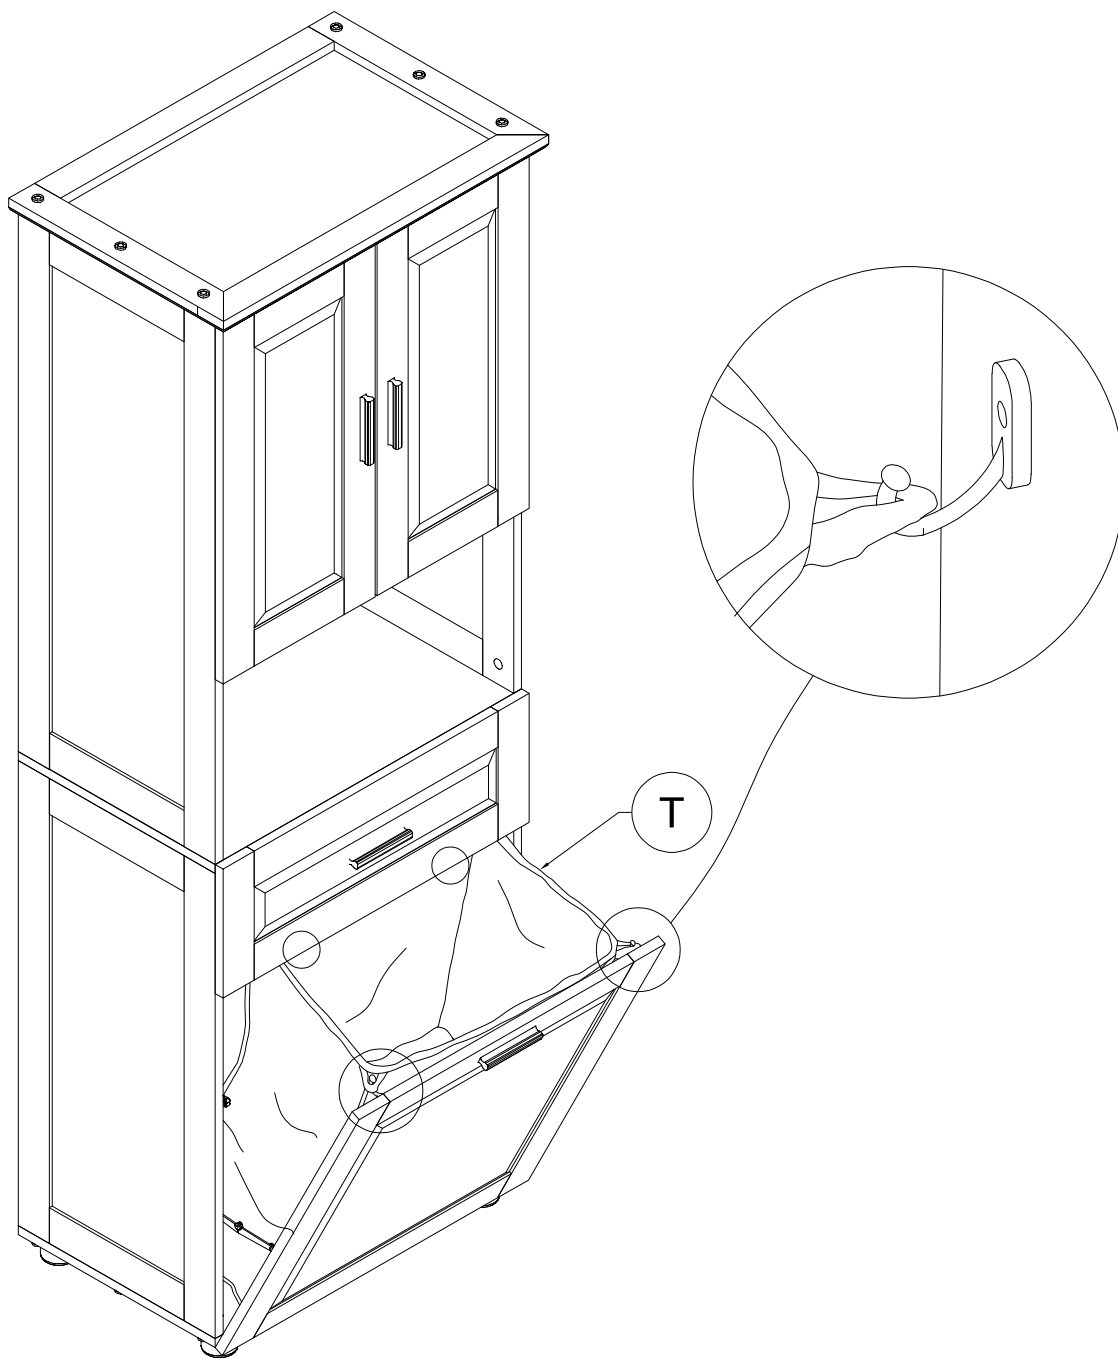

STEP 21:

Following below illustration:

M-2	M-4	M-3
		
2pcs	2pcs	2pcs

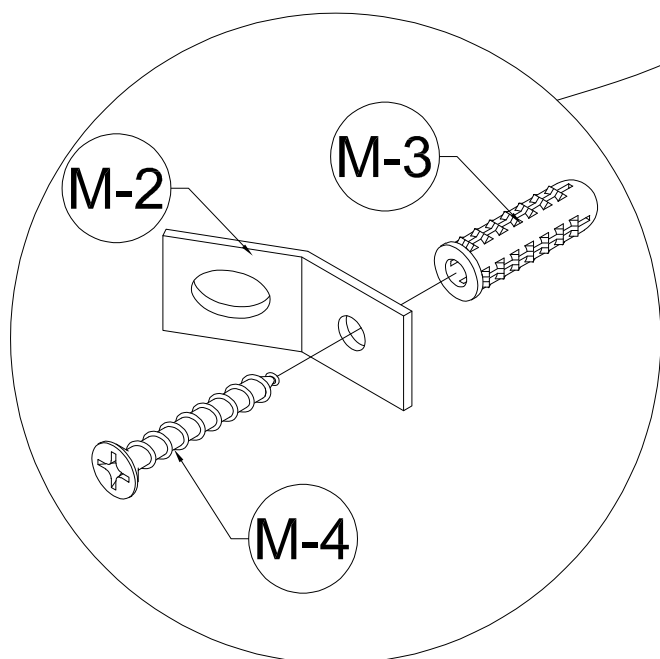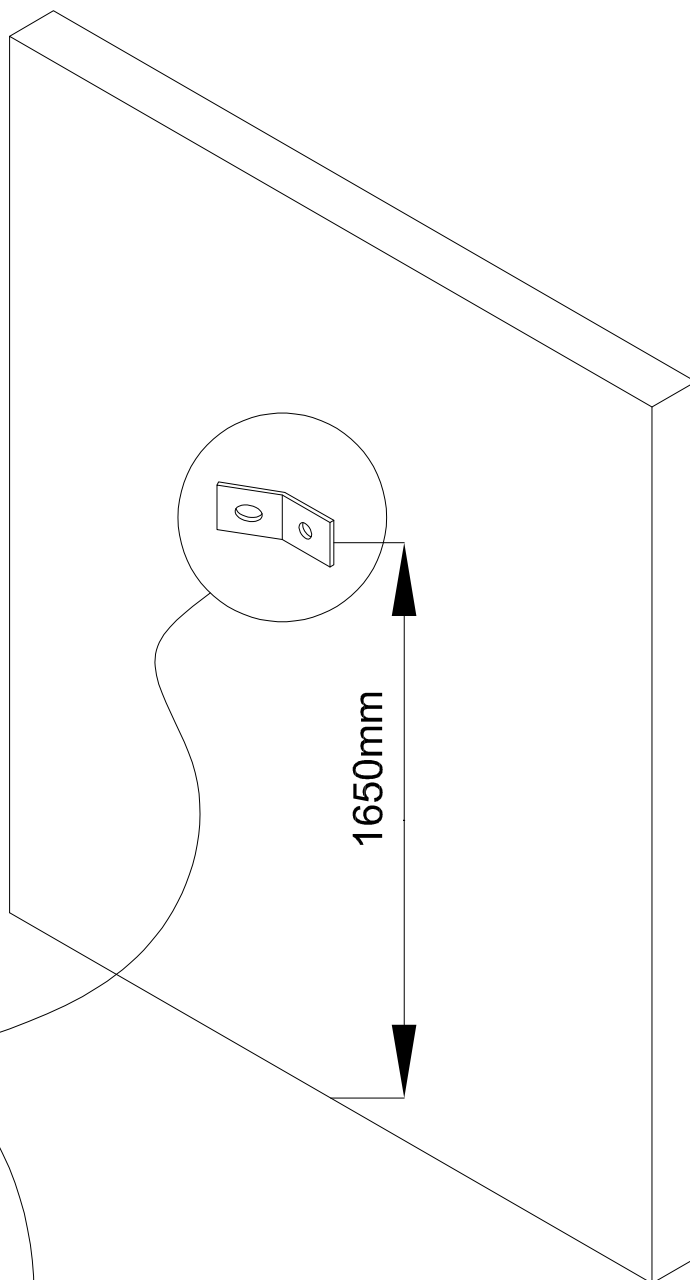



STEP 22:

Following below illustration:

M-1



2pcs

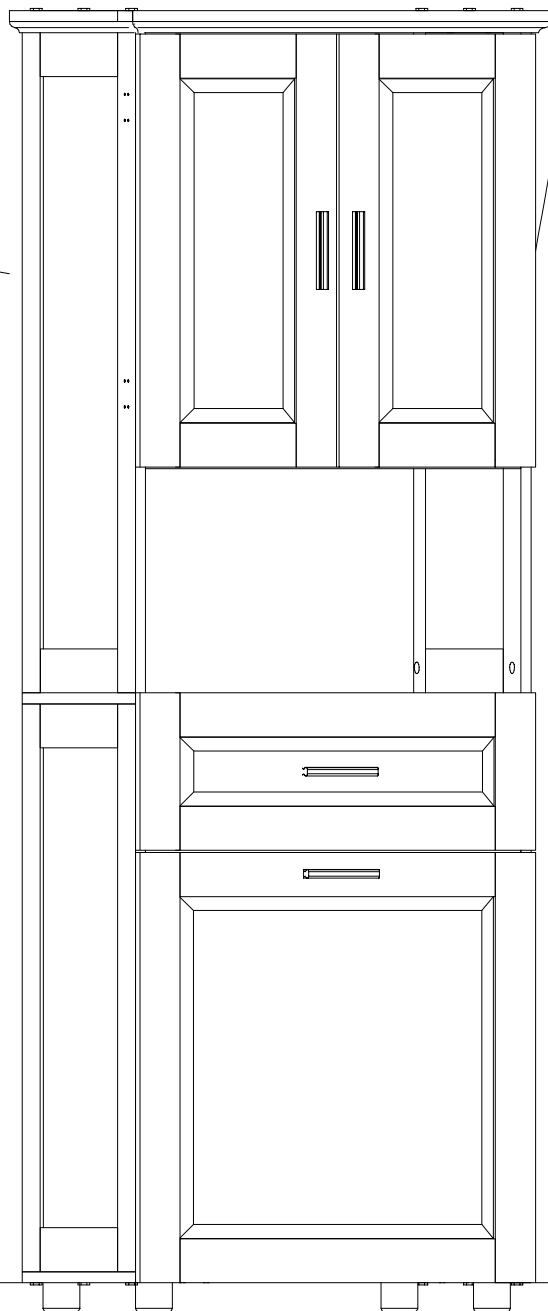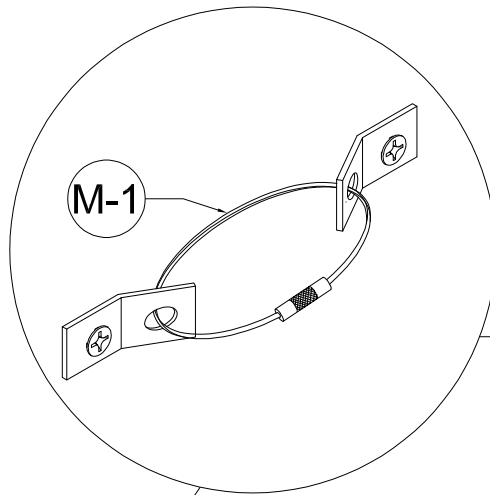

FINISH

