

WARRANTY

We strive to offer high-quality product and we also try our best to satisfy each customer that orders from us with product or service as needed.

Each customer a record of their order such as the order number, or item receipt for any items that are out of the warranty period you may also still receive replacement parts by purchasing them with our company if they are available.

**Are you having difficulty
with assembly? Missing parts?**

Please contact us : info@firstopintl.com

telephone No.: 5627813327


send an email with your order No. to us

**For return, please check the return policy with
the retailer or market place you bought from.**

Appreciate your purchasing from us.

Pop up your life by our furniture !

uixe

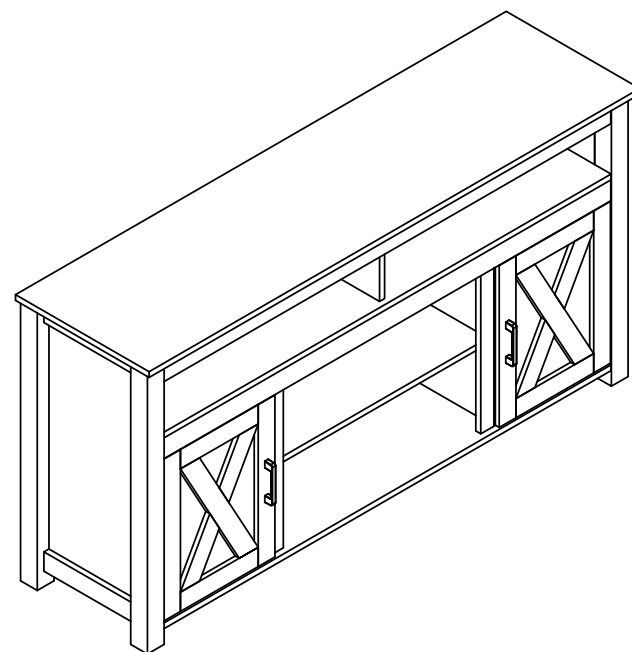

ITEM NO. TV STAND-05

NOTE:


This brochure contains IMPORTANT safety info. Please read and keep for future reference.

ATTENTION

- 1. A person who is proficient in assembly can work alone, if not, please ask someone to cooperate with this job.
- 2. When assembling the parts, please follow the orders, methods and positions of the assembly instruction.

If meeting any difficulties, please check with the instruction carefully first.

- 3. It will take about 3 hours to complete the assembly for those who are new in this field.
- 4. When assembling, at least six- square- meter space is requested.
- 5. Pay attention to the below instructions for componets assembly.
- 6. Any problems during the assembly, please contact us with email info@firstopintl.com or telephone us by 5627813327.

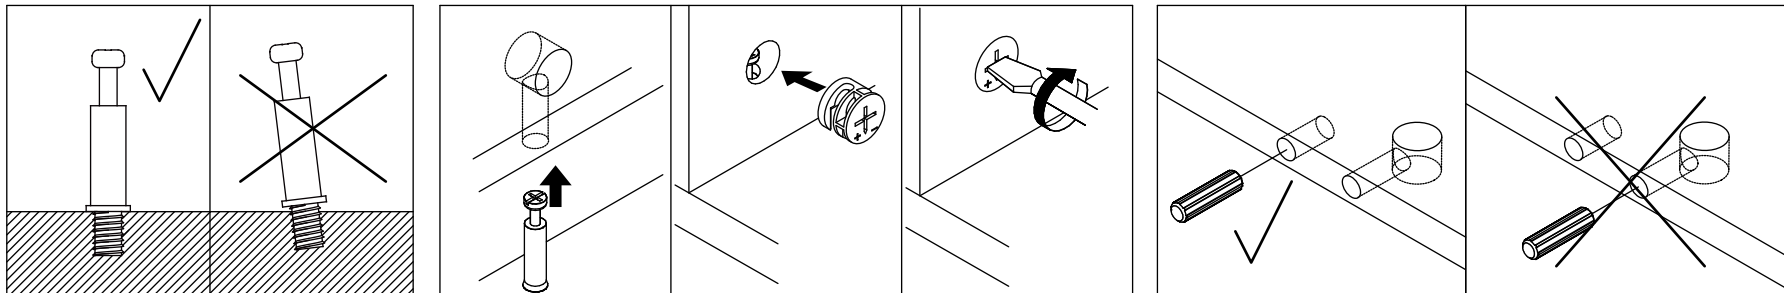

MAINTAINANCE AND WARNING

- Keep furniture away from heat and fire.
- Keep furniture away from sharp objects.
- Do not clean furniture with harsh cleansers or polish. Do not use detergents, Solvents, abrasives, spray packs or leather cleaner. Use non-color mild soap with warm water clean spills(Mix 1:10 soap to water)
- Do not place furniture under direct sunlight, material will possibly fade over time.
- Do not jump or strike on the furniture.
- Do not write on furniture without a padded barrier to protect the surface.
- Not for commercial use, For residential use only.




Weight Limitation

400LBS


PARTS LIST

① X1

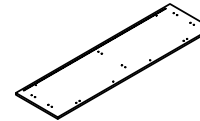


Top panel

② X2




Front bar

③ X2

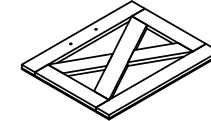


Door

④ X1

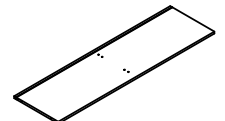


Fixed shelf

⑤ X1




Upper middle panel

⑥ X1

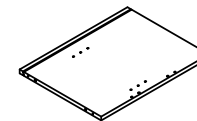


Lower right panel

⑦ X1

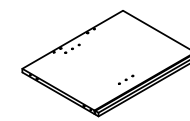


Lower left panel

⑧ X1

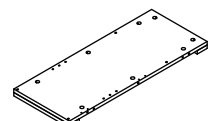


Right side panel

⑨ X1

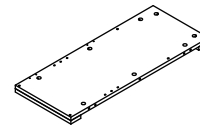


Left side panel

⑩ X1



Right vertical bar

⑪ X1




Left vertical bar

⑫ X2




Middle leg

⑬ X1




Bottom panel

⑭ X1




Middle back panel

⑮ X2



Side back panel


⑯ X2



Upper back panel


PARTS LIST

①⑦ X2




Side adjustable shelf

①⑧ X1




Middle adjustable shelf

①⑨ X1




Right front leg

②⑦ X1



Right back leg

②① X1



Left front leg


②② X1



Left back leg

HARDWARE and TOOL LIST

A X50




Bolt

B X50



Eccentric

C X46



Wood dowel

D X12




Support

E X2



M4 X 12mm
Screw

F X2




Metal plate

G X44




M3.5 X 14mm
Screw

H X4



Hinge

I X2




Handle

J X4



M4 X 20mm
Screw

K X8



M5 X 40mm
Screw

L X20




Board clasp

M X2



Expandable
plastic screw

N X2



M4 X 32mm
Screw


U X1



Allen key

SPARE

A X5




Bolt

B X5



Eccentric

C X5



Wood dowel

E X1




**M4 X 12mm
Screw**

G X4




**M3.5 X 14mm
Screw**

J X1




**M4 X 20mm
Screw**

K X1



**M5 X 40mm
Screw**



N X1





**M4 X 32mm
Screw**

Be sure to check all packing material fitting the packing list. Be careful for small parts, which may have come loose inside the carton during shipment.


ASSEMBLY INSTRUCTIONS

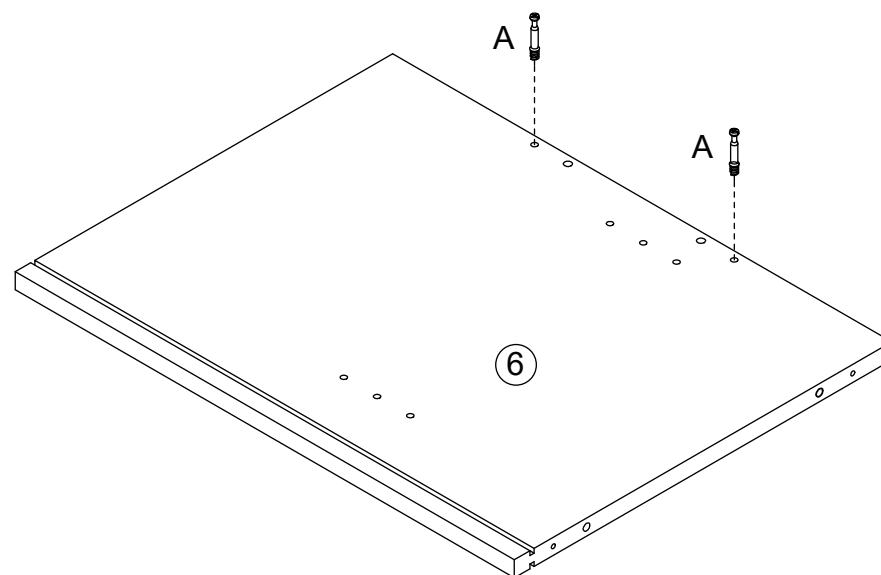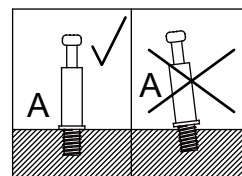


STEP 1 Insert bolts A into the panel ⑥, tighten with allen key.

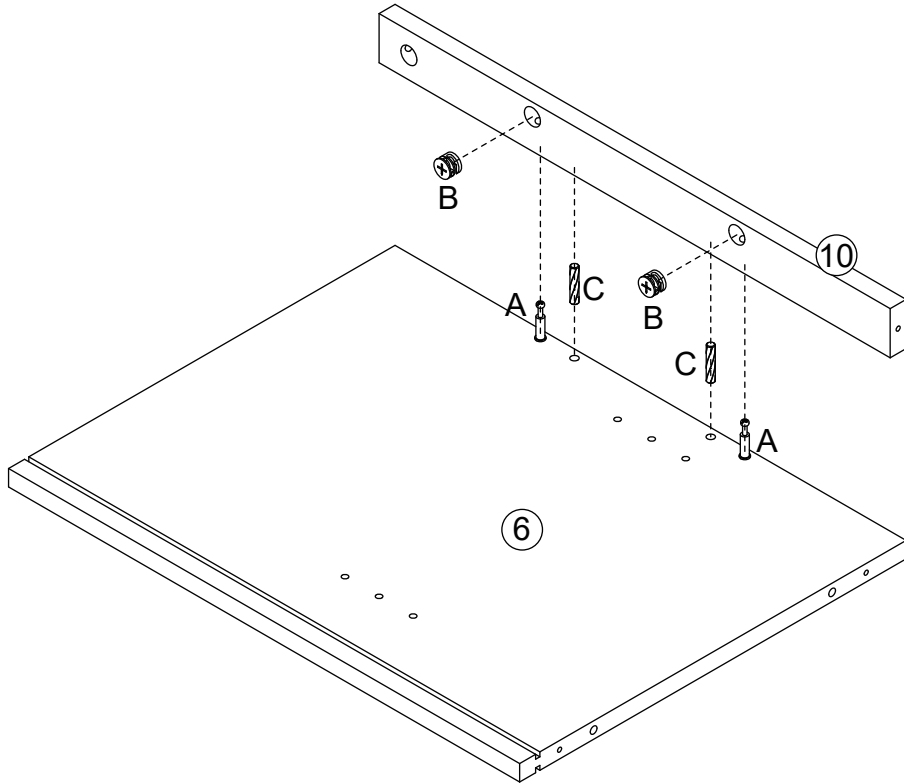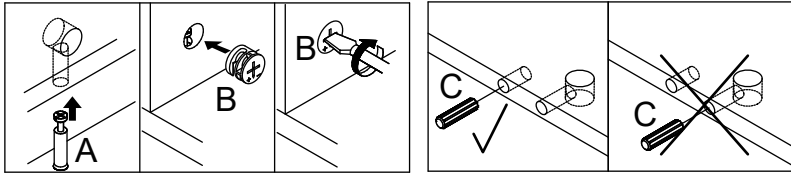


STEP 2 Do as the above instruction. Insert wood dowels C into the settled holes on panel ⑥ and bar ⑩. Put the eccentrics B into the settled holes on bar ⑩. Align the other side of bolts A with the breach of eccentrics B, tighten with allen key.

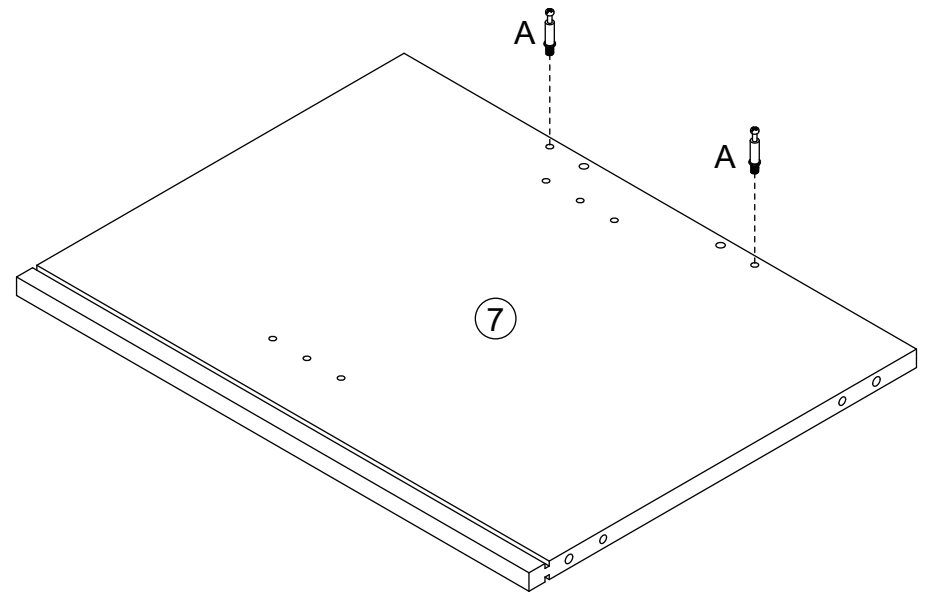


STEP 3 Insert bolts A into the panel ⑦, tighten with allen key.

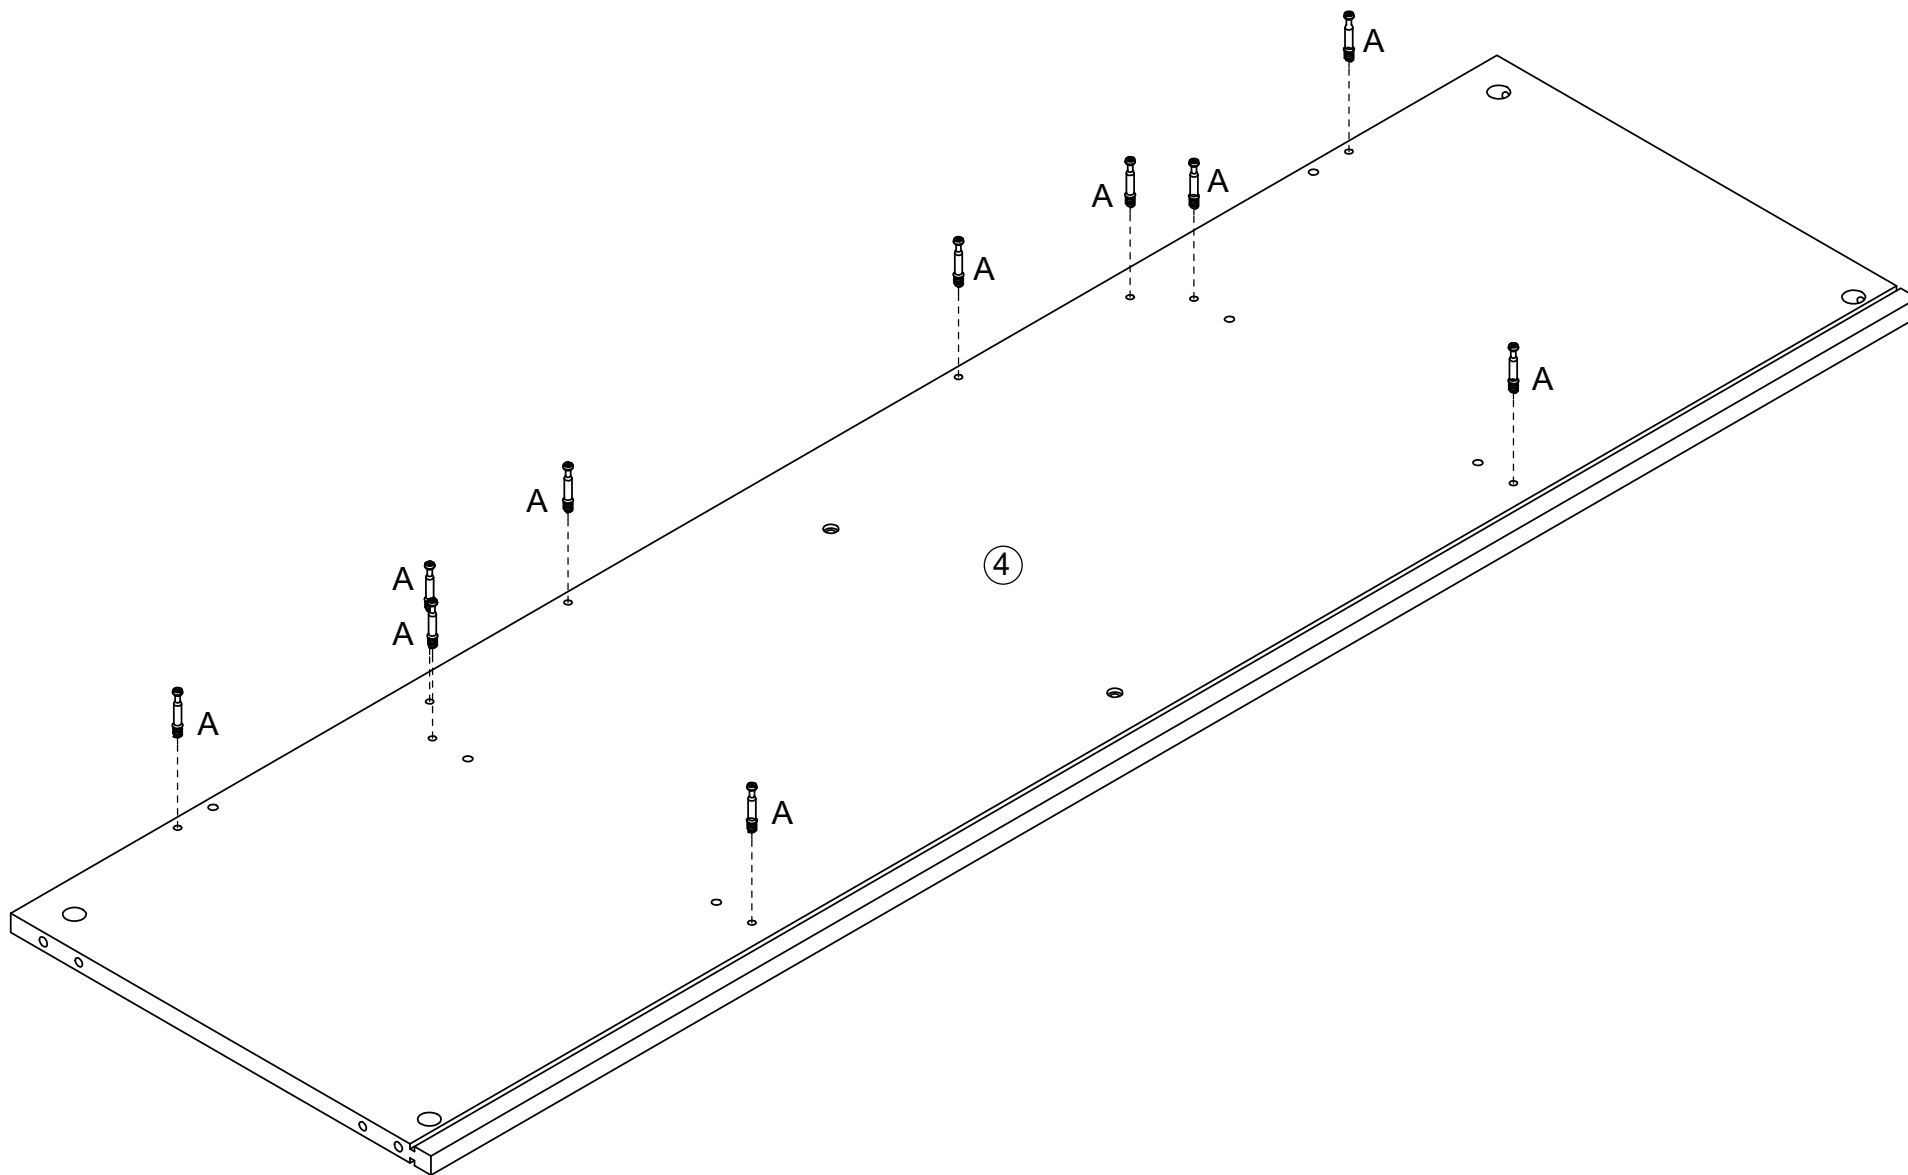


STEP 4 put the panel ④ on clean padded surface. Insert bolts A into the settled holes on the panel ④ as instruction. Tighten with allen key.

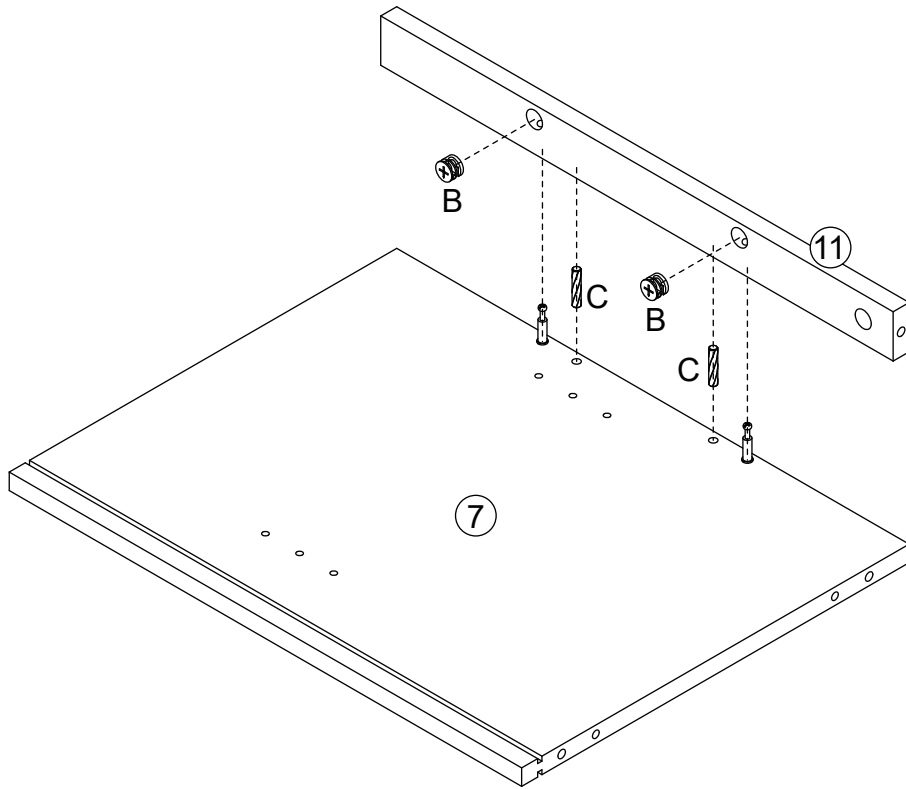


STEP 5 Do as the above instruction. Insert wood dowels C into the settled holes on panel ⑦ and bar ⑪. Put the eccentrics B into into the settled holes on bar ⑪. Align the other side of bolts A with the breach of eccentrics B, tighten with allen key.

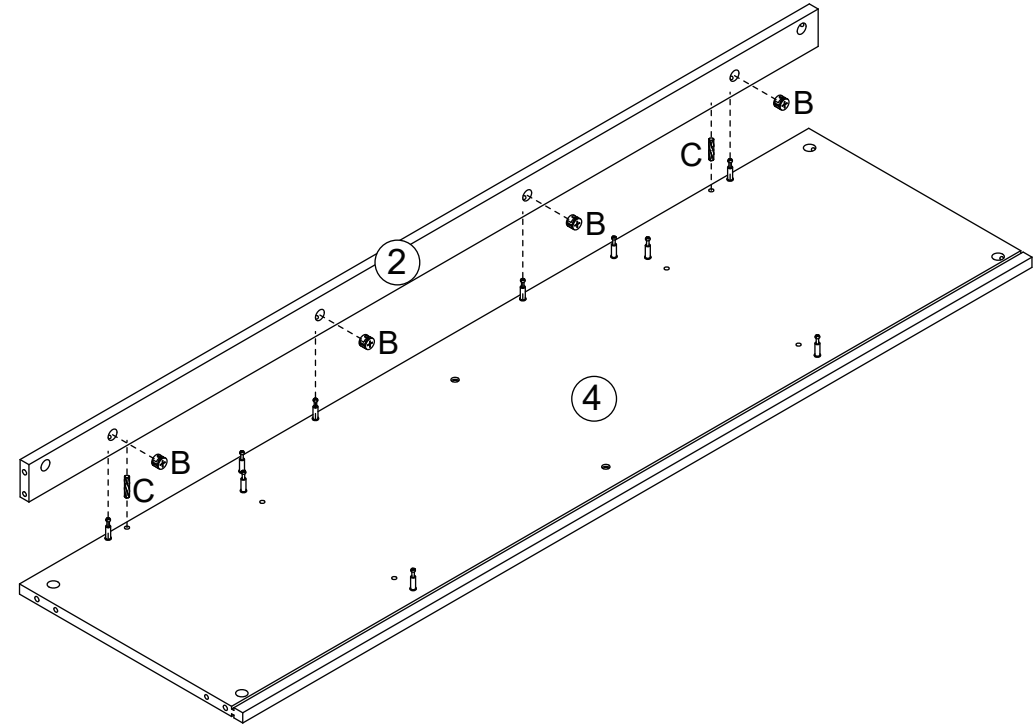


STEP 6 Do as the above instruction. Insert wood dowels C into the settled holes on panel ④ and bar ②. Put the eccentrics B into into the settled holes on bar ②. Align the other side of bolts A with the breach of eccentrics B, tighten with allen key.

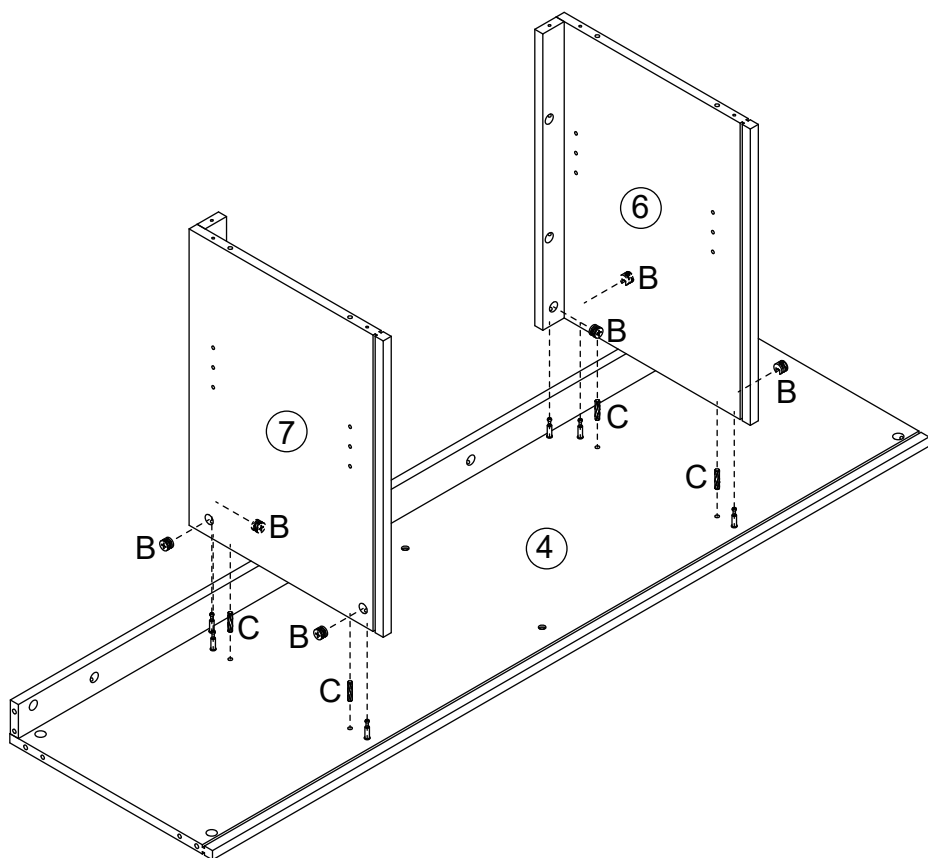


STEP 7 Do as the above instruction. Insert wood dowels C into the settled holes on panels ⑥ and ⑦. Insert eccentrics B on panels ⑥ and ⑦ accordingly. Align the other side of bolts A with the breach of eccentrics B, tighten them with allen key.

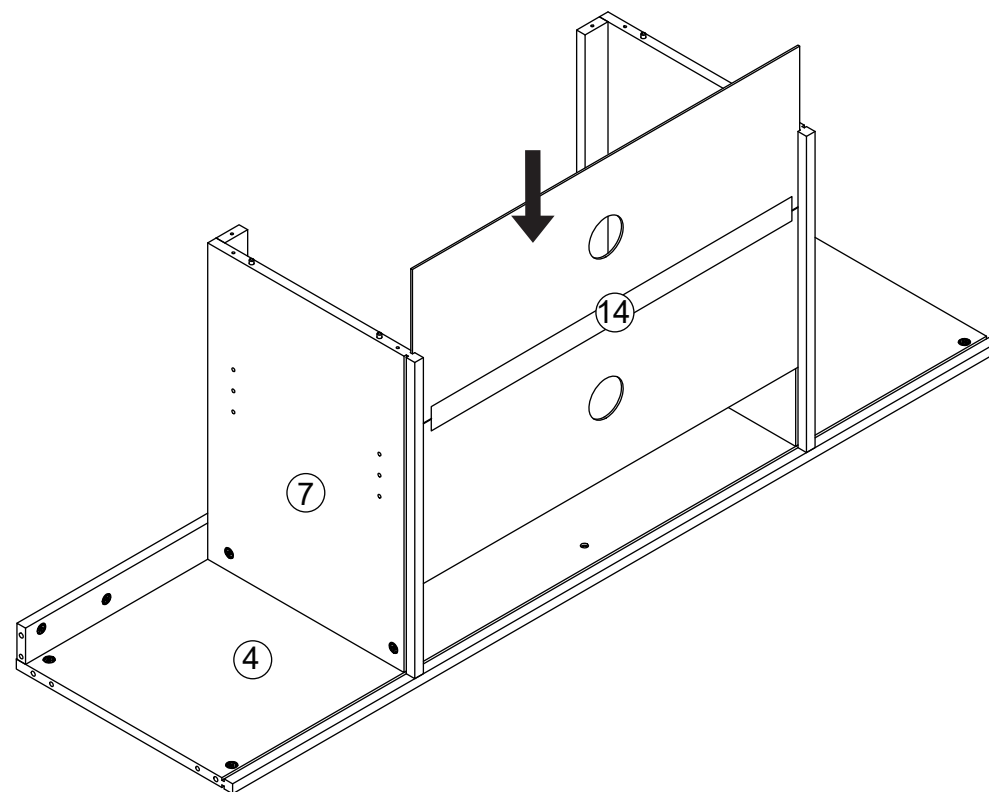


STEP 8 Put the panel ⑭ into the rail trough accordingly as instruction.

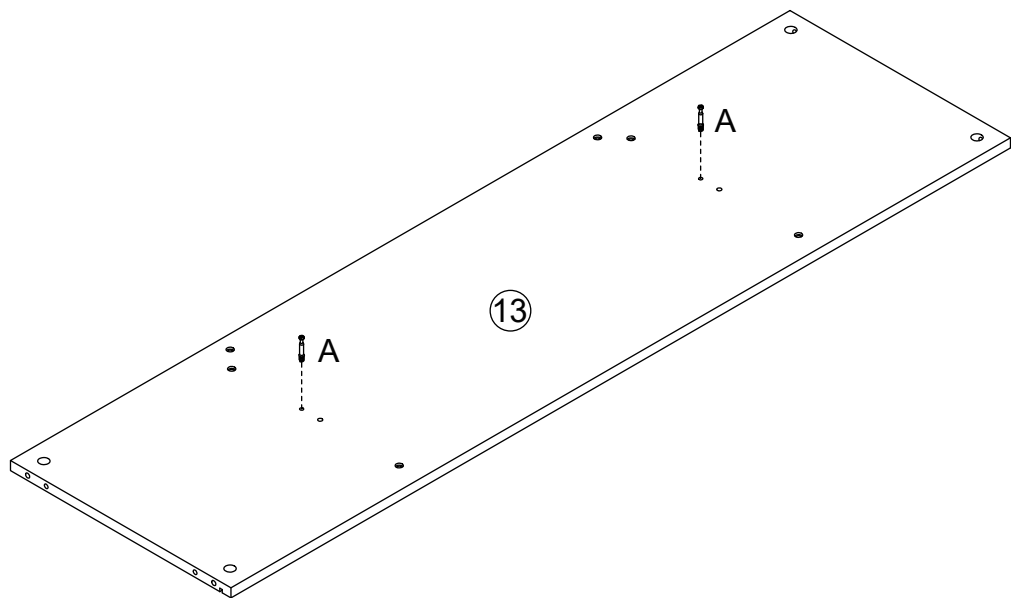


STEP 9 Insert bolts A into panel ⑬ , tighten with allen key.

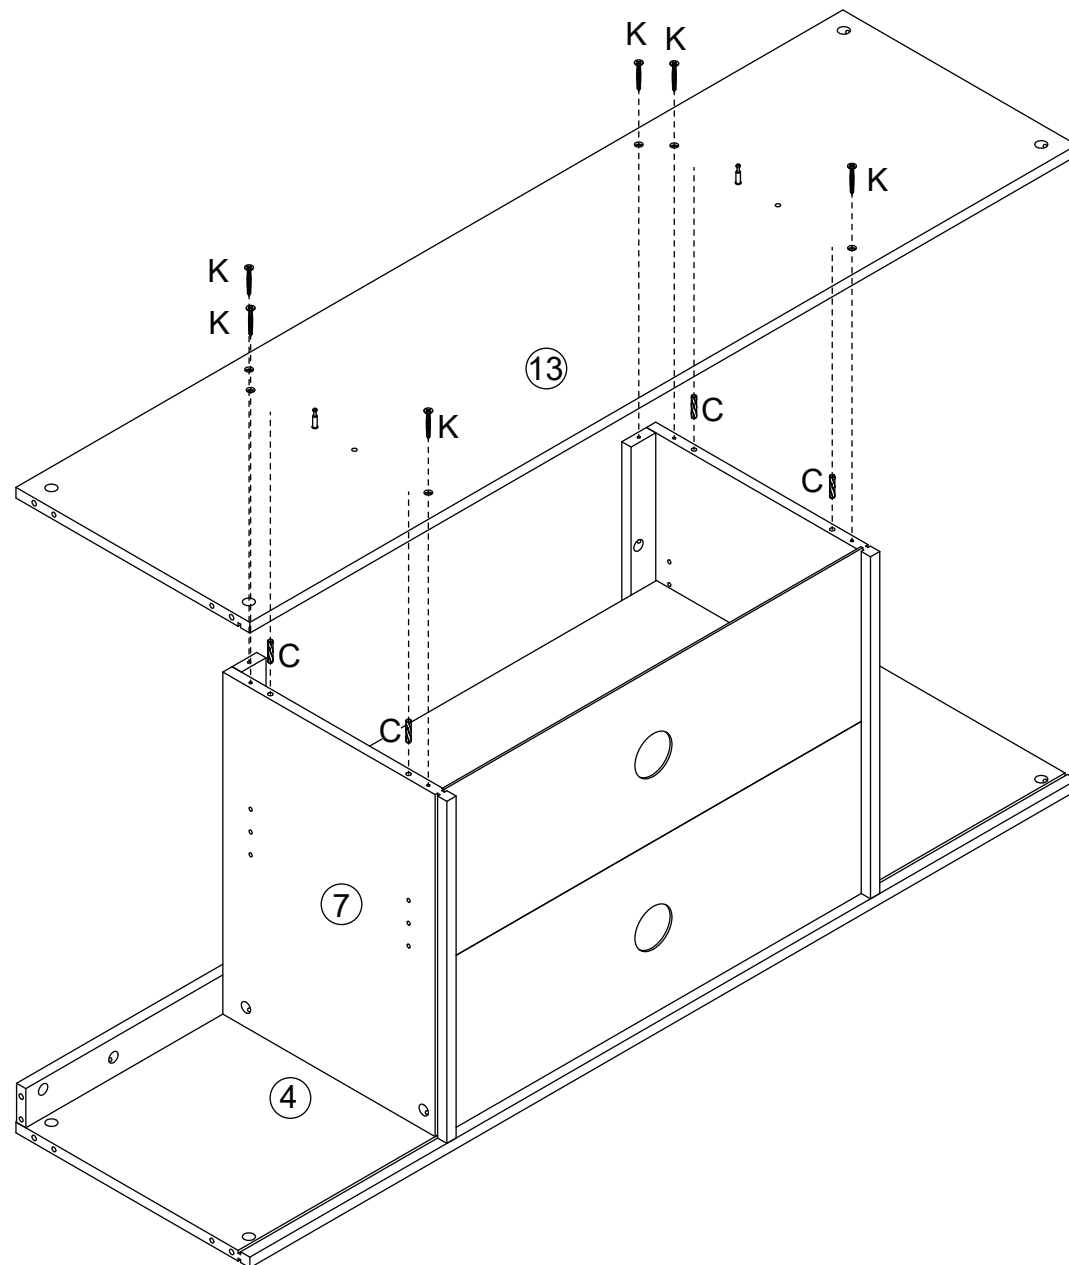


STEP 10 Connect bottom panel ⑬ to assembled part with a wood dowels C.
Tighten Screw K with allen key.

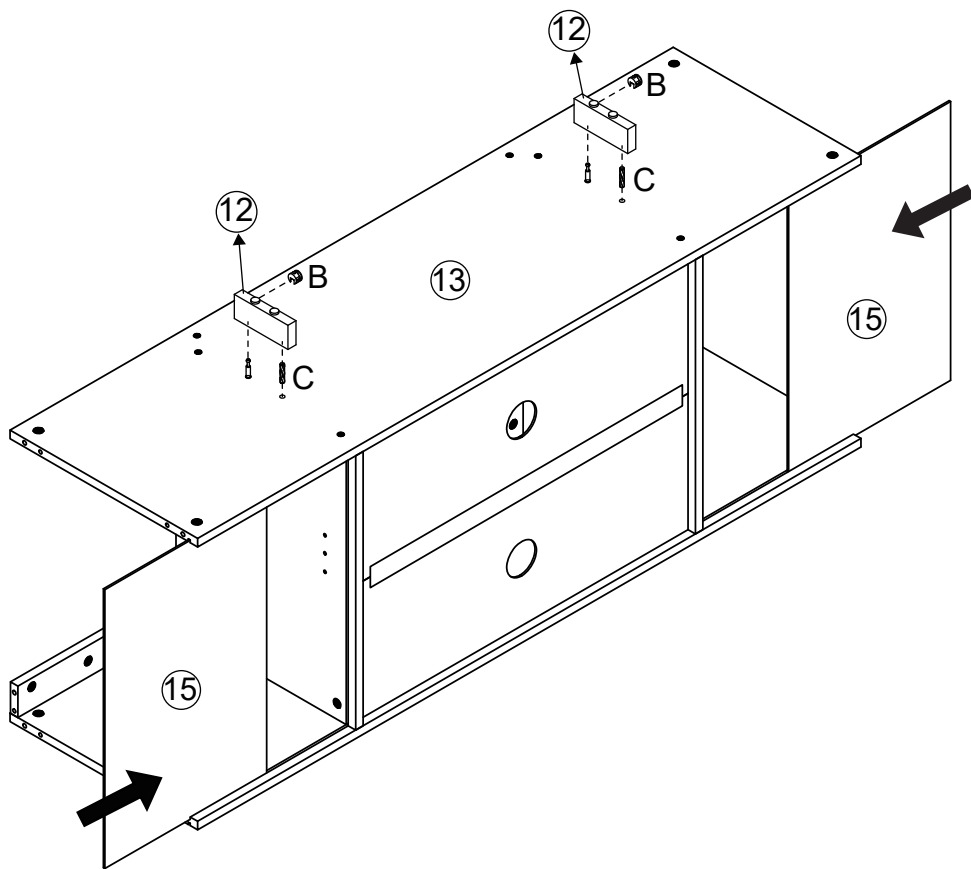


STEP 11 Start from the edge to the middle, push the panels 15 into the rail trough accordingly.
Do as the above instruction. Fix the middle legs 12 on the assembled part.

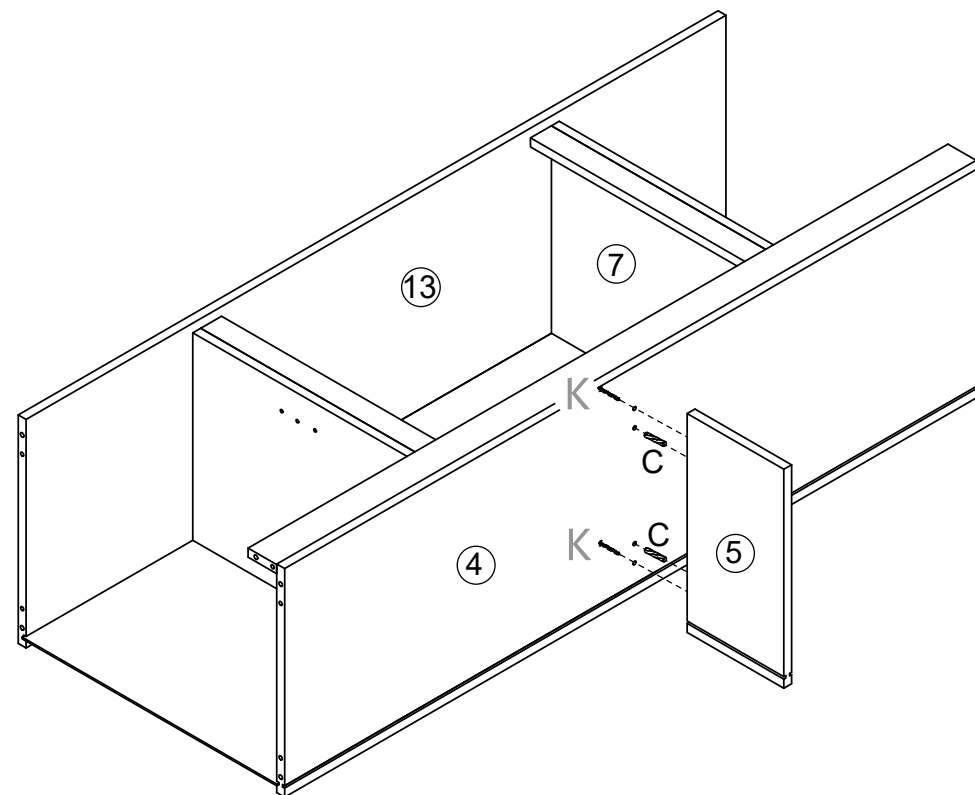


STEP 12 Place the assembled part on clean padded surface, insert wood dowels C accordingly.
Insert screws K through panel 4 to connect panel 5.

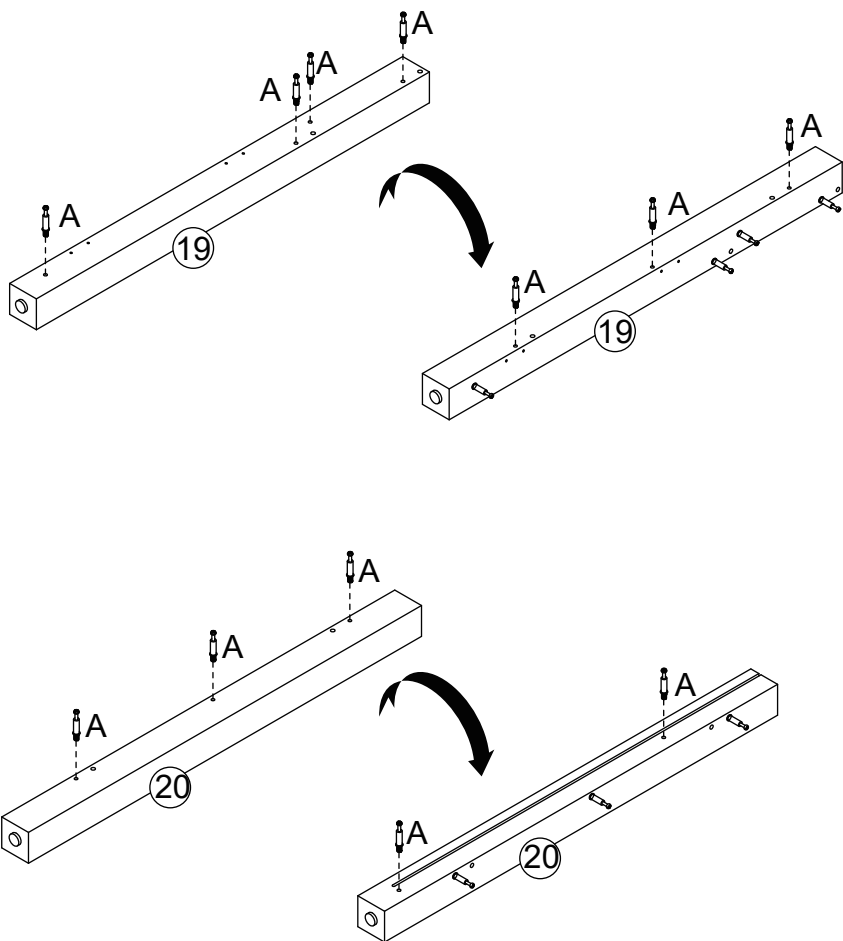


STEP 13 Insert bolts A into legs ①⑨ and ②① , tighten with screwdriver.
Turn over it to the right and insert bolts A with screwdriver.

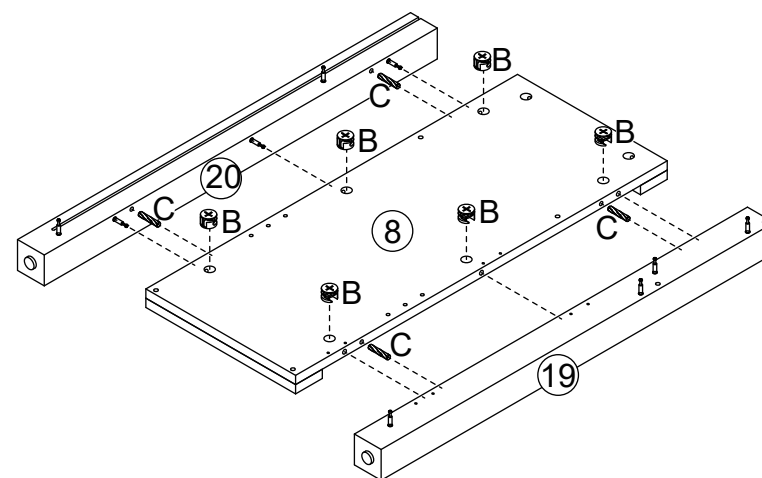


STEP 14 Connect legs ①⑨ and ②① to panel ⑧ with a wood dowels C.
Tighten eccentrics B with screwdriver.

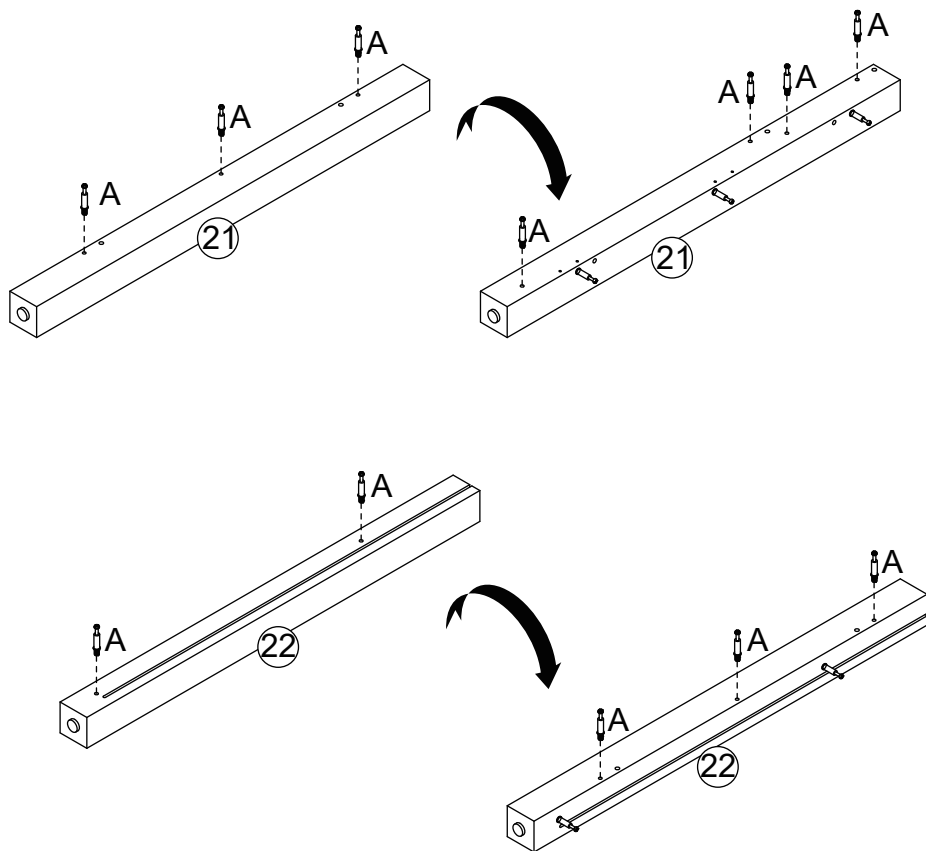

STEP 15 Insert bolts A into legs ②① and ②② , tighten with allen key.
Turn over it to the right and insert bolts A with allen key.

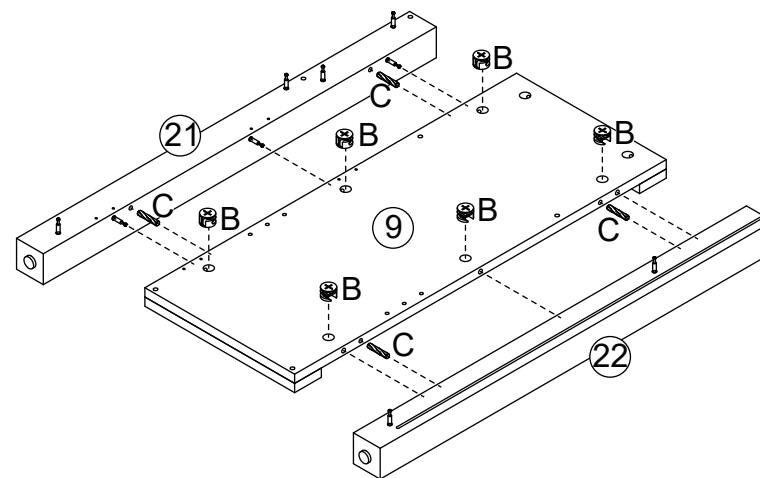

STEP 16 Connect legs ②① and ②② to panel ⑨ with wood dowels C.
Tighten eccentrics B with allen key.

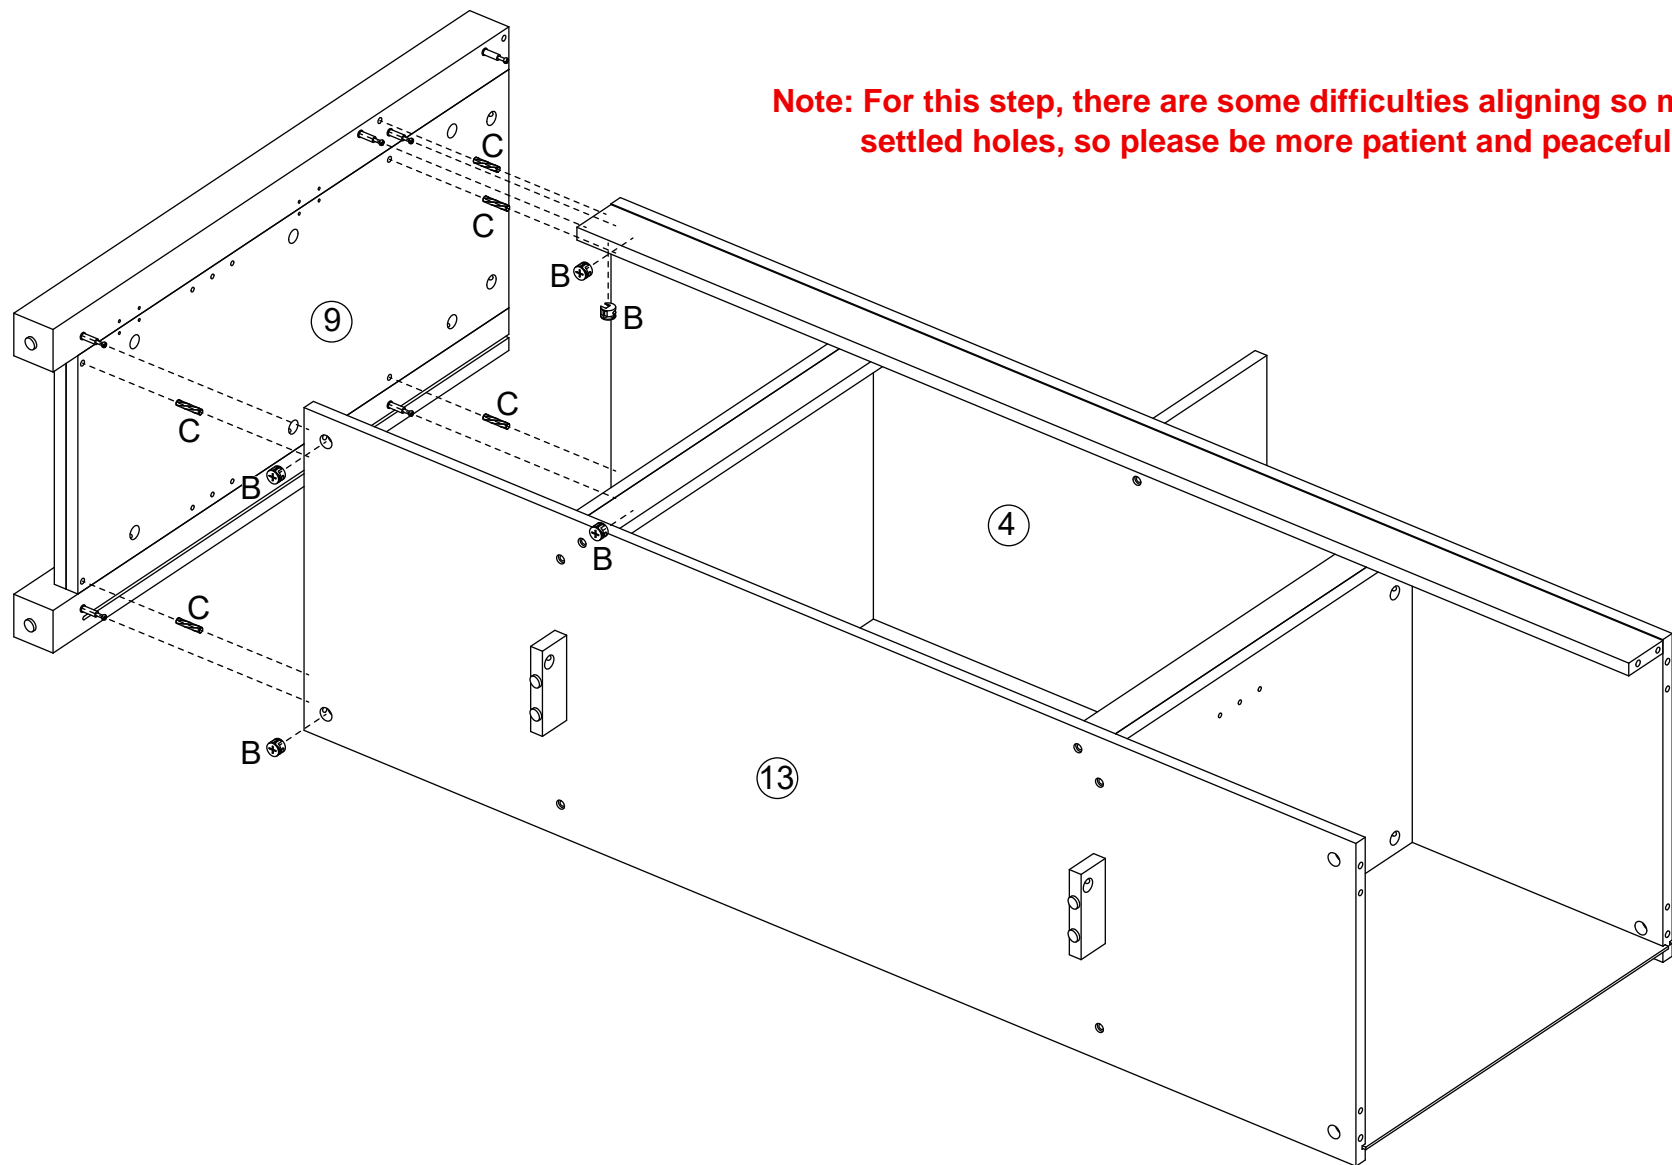


Note: For this step, there are some difficulties aligning so many settled holes, so please be more patient and peaceful.

STEP 17 Do as the above instruction. Insert wood dowels C into the settled holes on panel ⑨ and assembled part.

Insert eccentrics B on panels ④ and ⑬ accordingly.


Align the other side of bolts A with the breach of eccentrics B, tighten them with allen key.

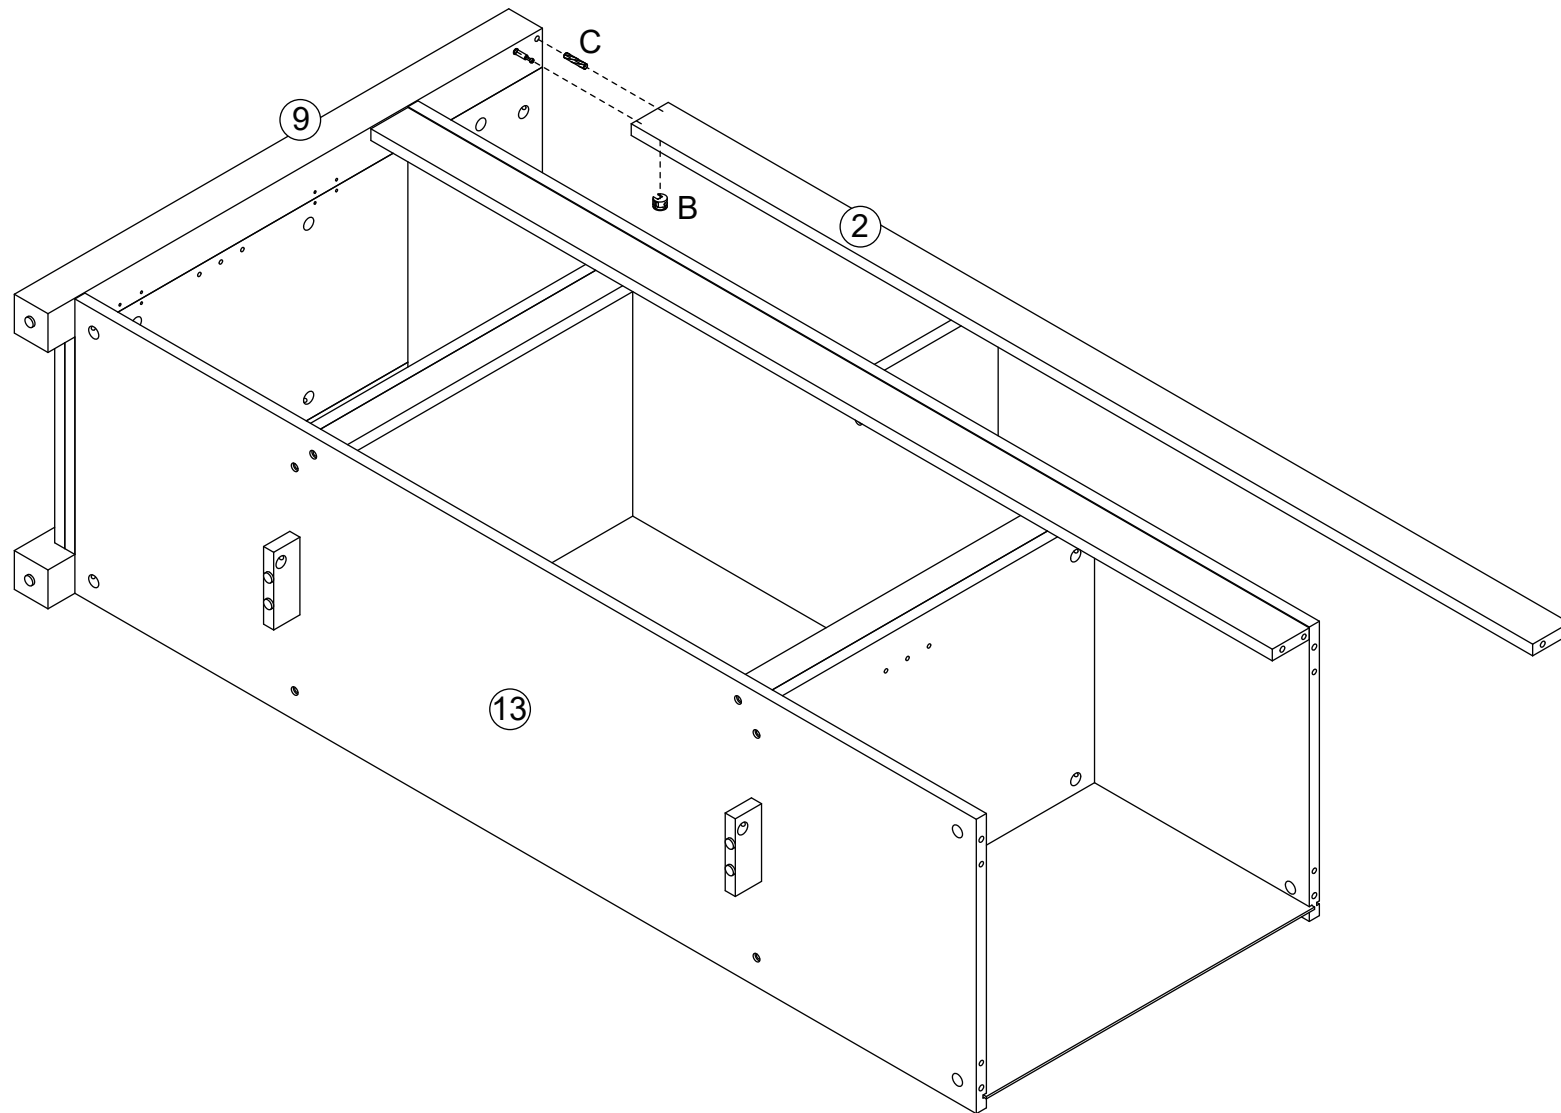

STEP 18 Do as the above instruction. Insert wood dowels C into the settled holes on panel ⑨ and bar ②.

Insert eccentrics B on panels ② accordingly.


Align the other side of bolts A on panel ⑨ with the breach of eccentrics B, tighten them with allen key.

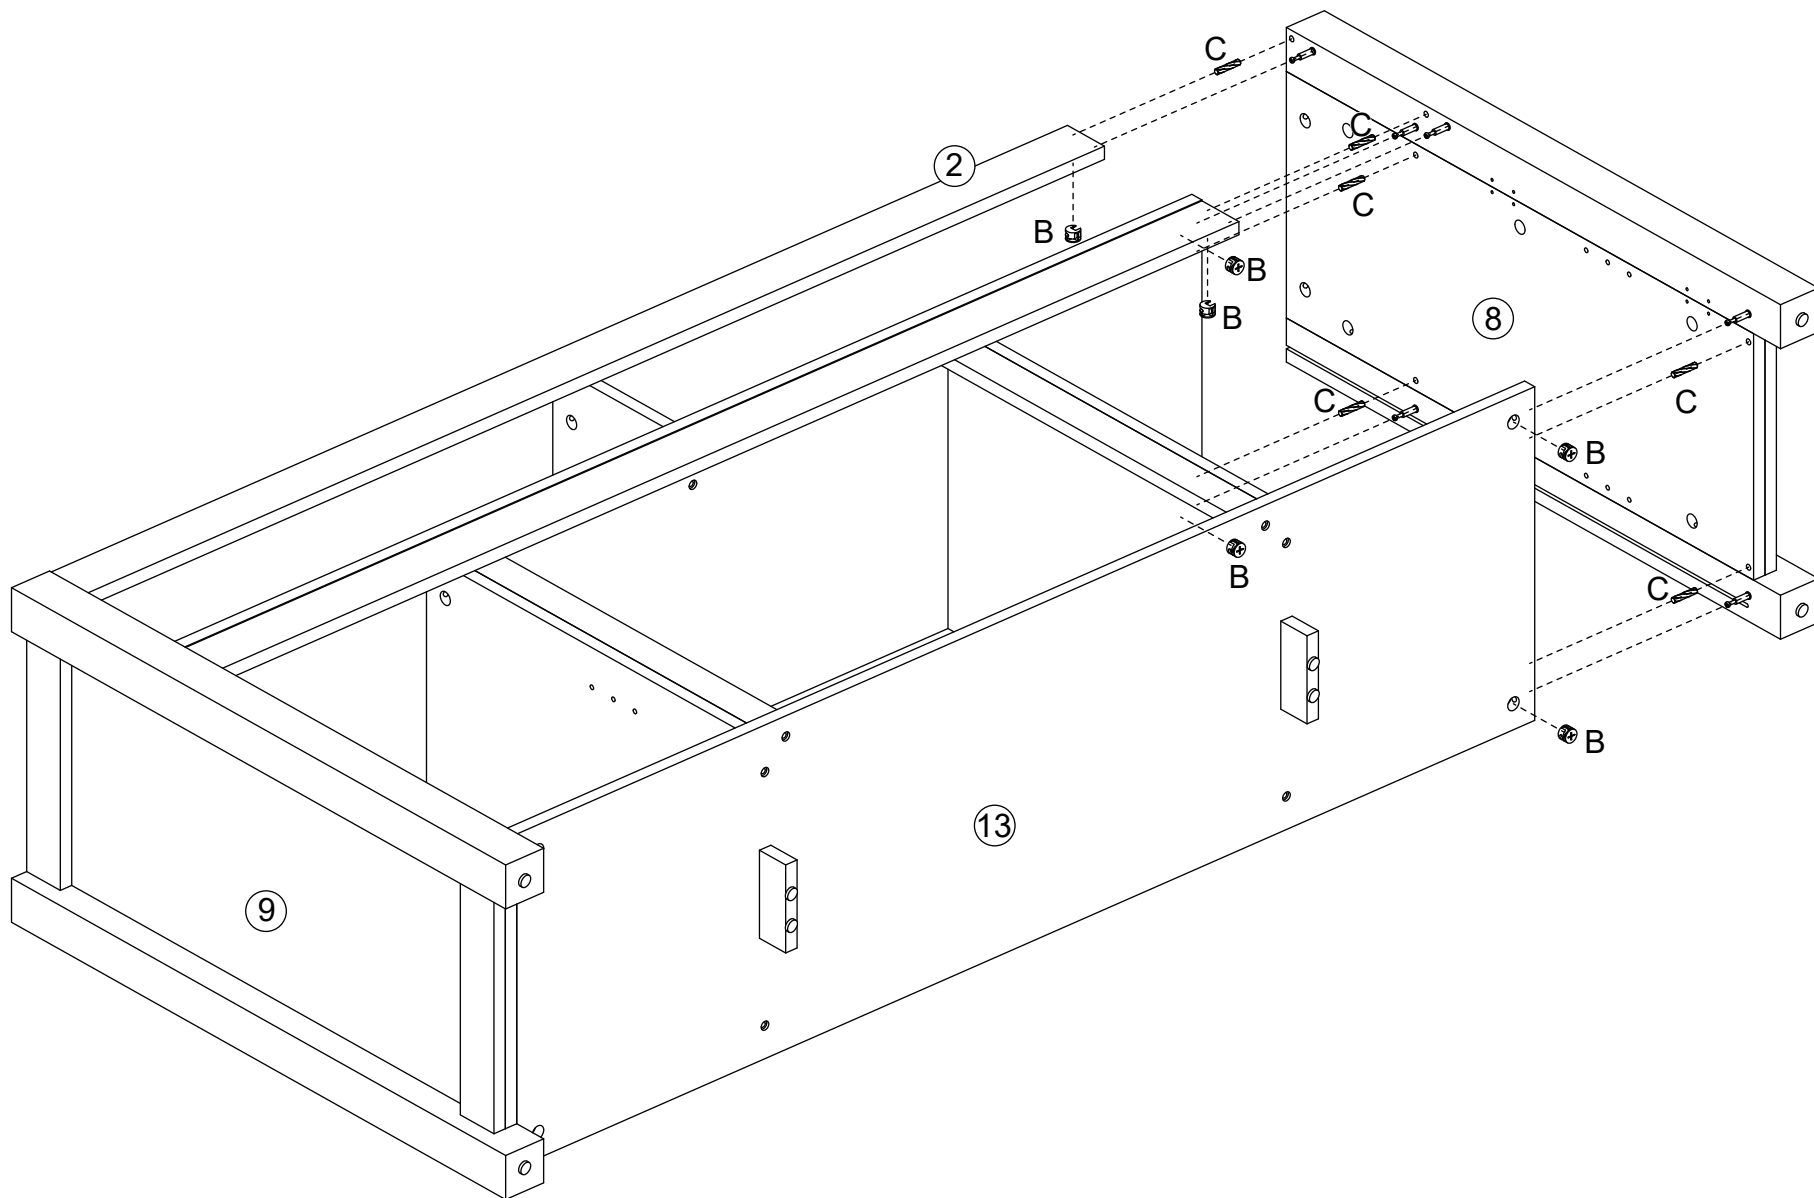


STEP 19 Do as the above instruction. Insert wood dowels C into the settled holes on panel ⑧ and the assembled part.

Insert eccentrics B on assembled part accordingly.


Align the other side of bolts A on panel ⑧ with the breach of eccentrics B, tighten them with allen key.

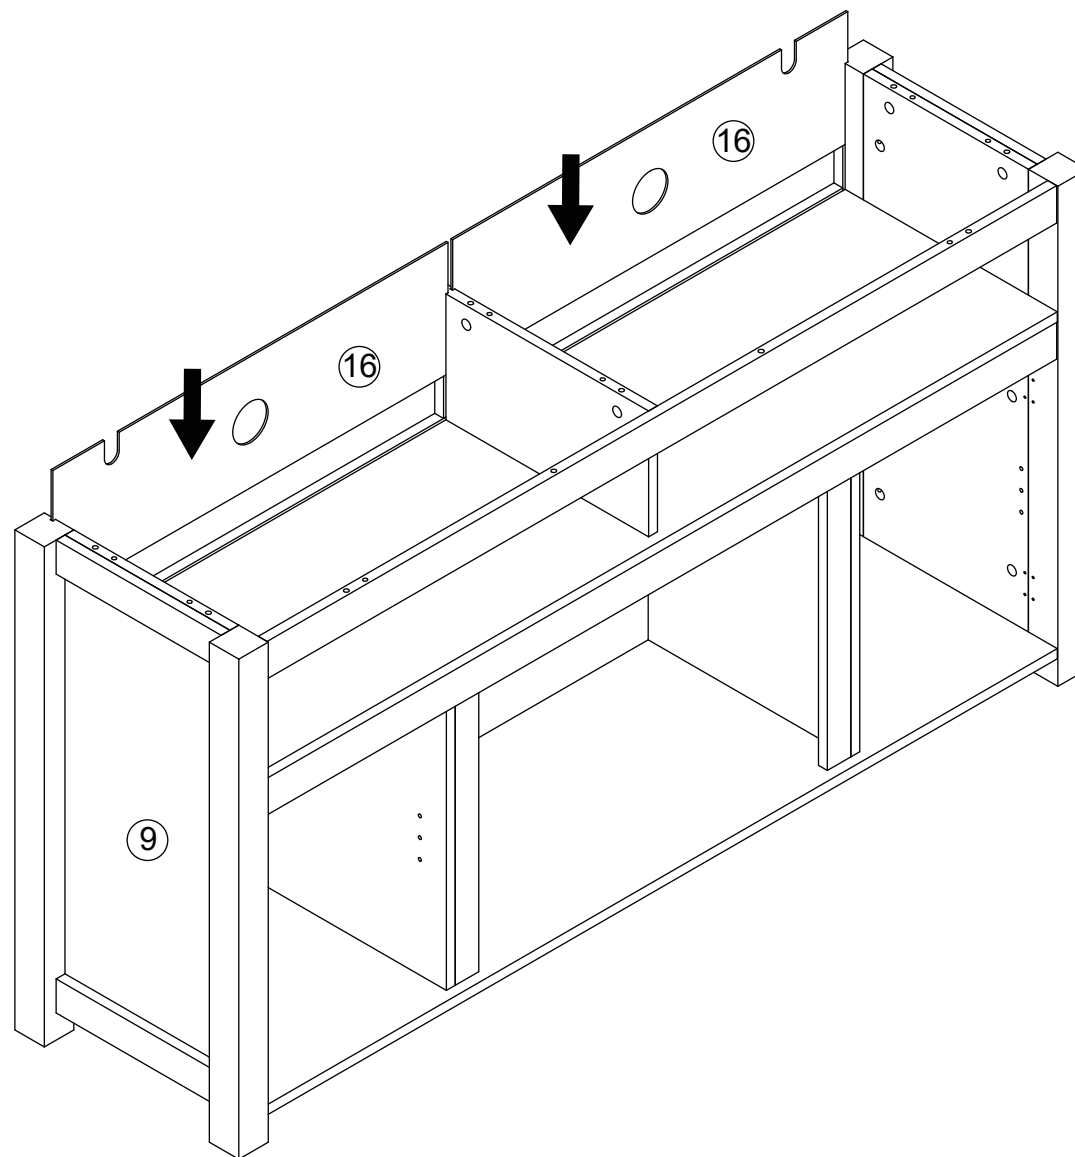


STEP 20 Put the panels ①⑥ into the rail trough accordingly as instruction.

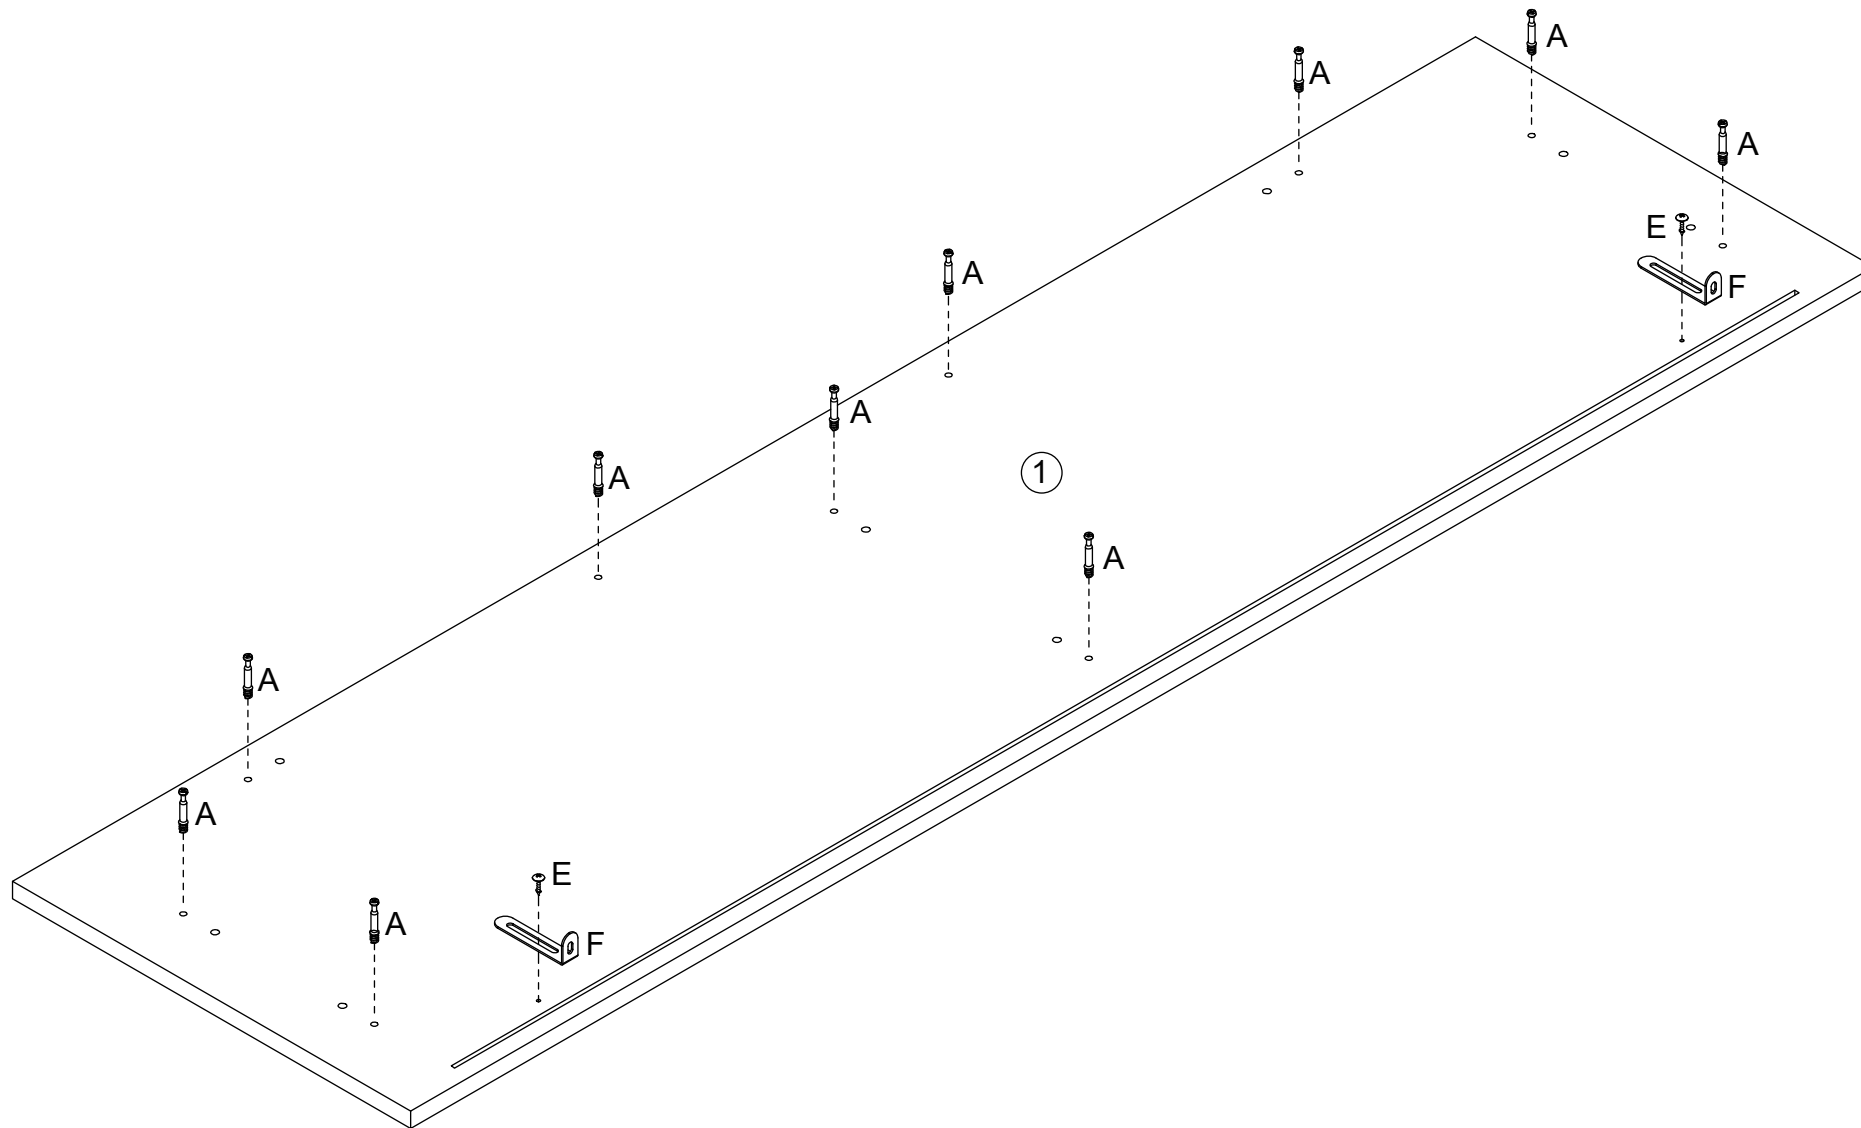


STEP 21 Insert bolts A into top panel ①, tighten with allen key.
Connect metal plate F to the top panel ① . 80% tighten them with screws E.

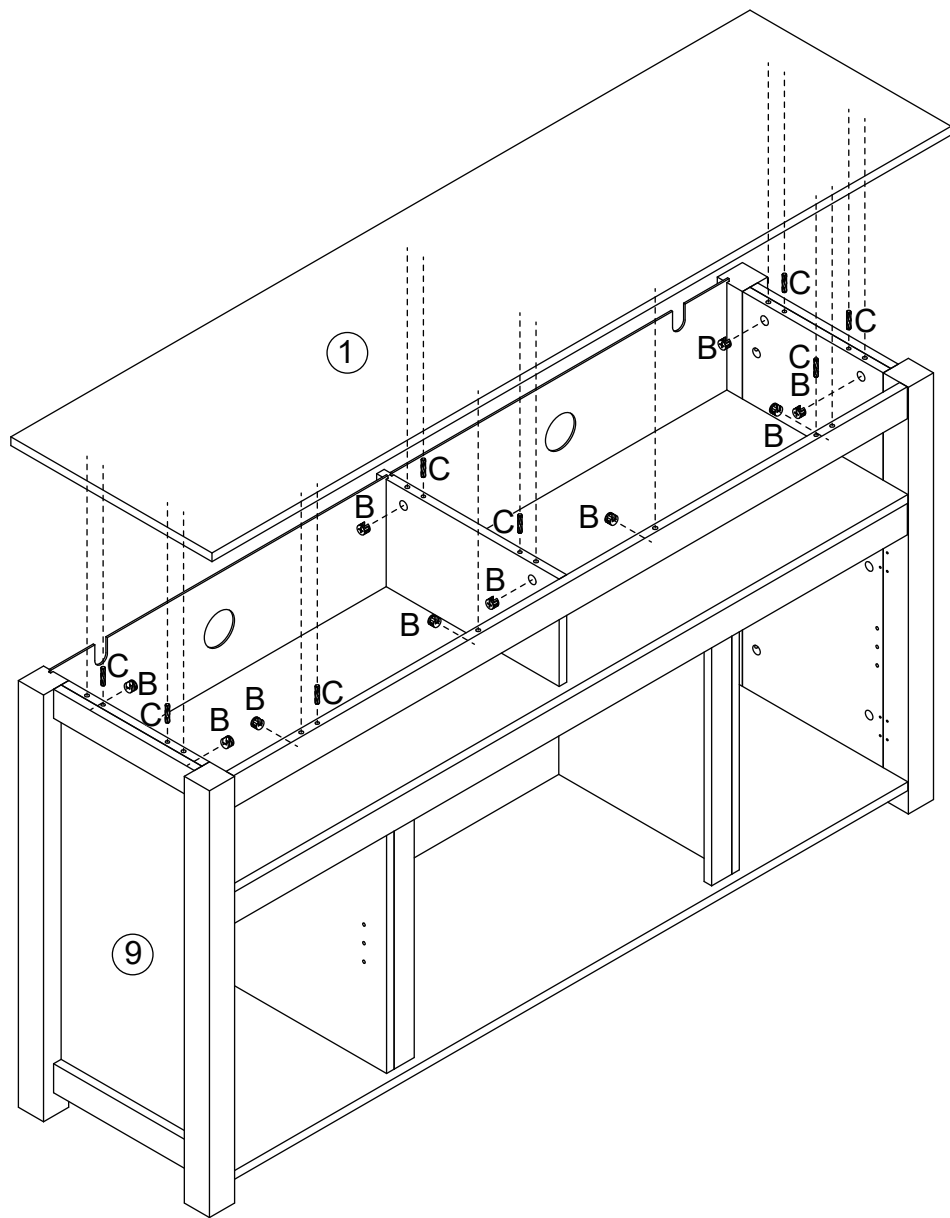



STEP 22 Connect top panel ① to assembled part with a wood dowels C.
Tighten eccentrics B .

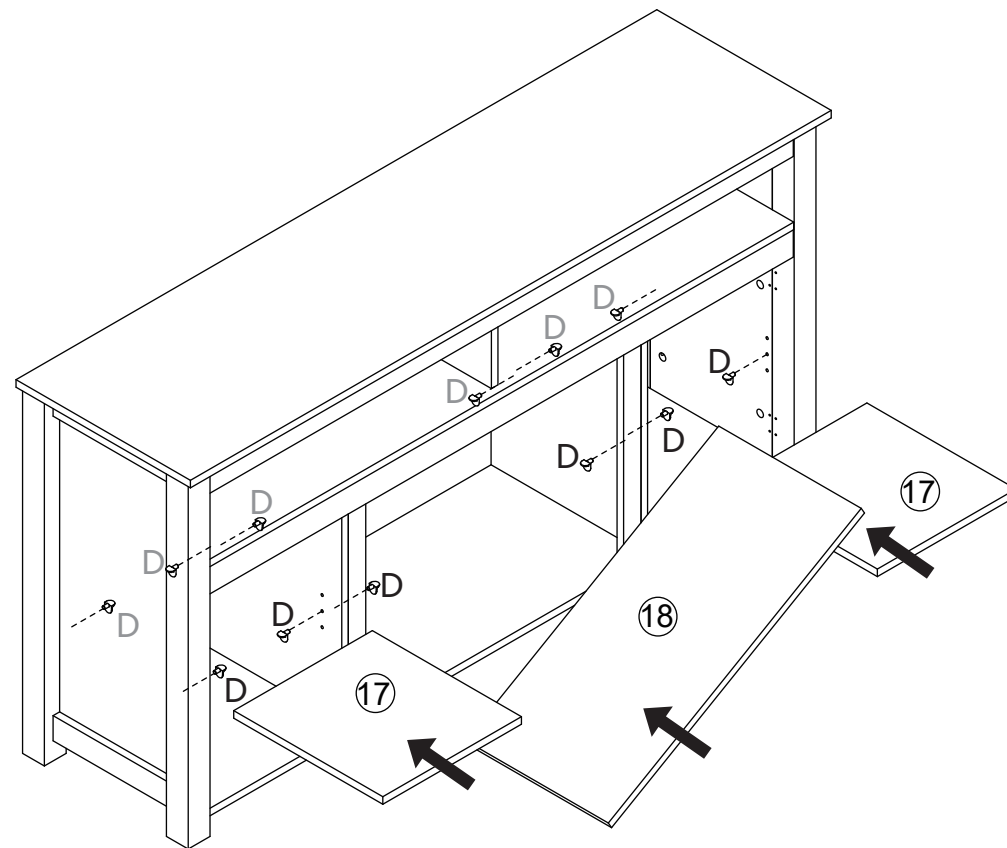


STEP 23 Insert the supports D into the settled holes in the stand as instruction, place the shelves ⑰ and ⑱ accordingly.

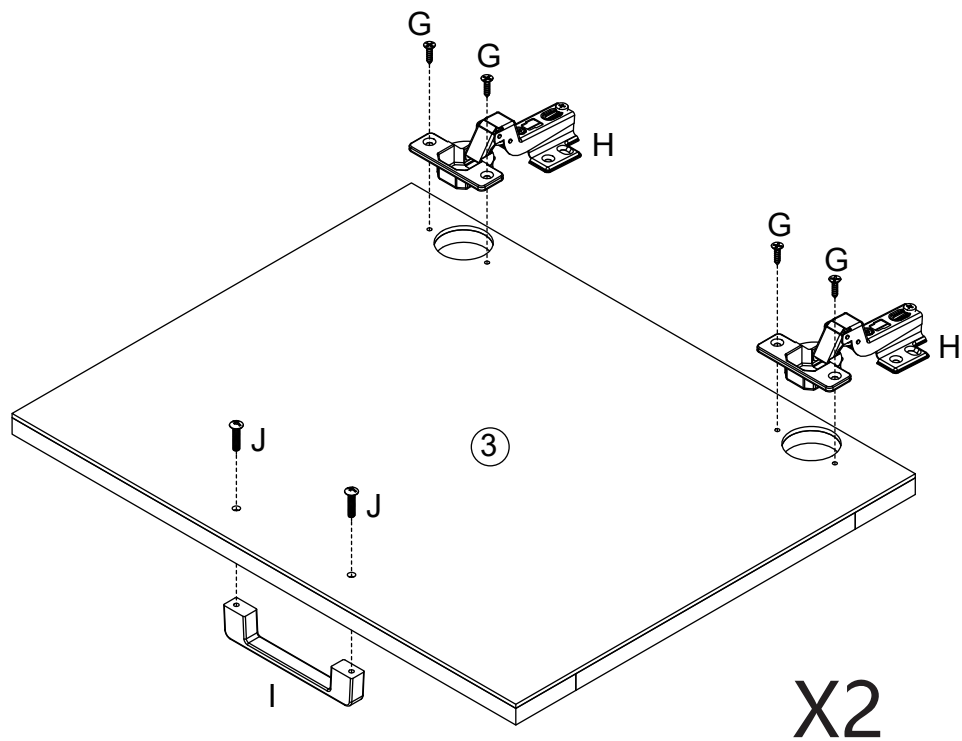


STEP 24 Connect handles I to the panel ③, tighten with screws J. Connect hinges H to the panel ③, tighten with screws G.

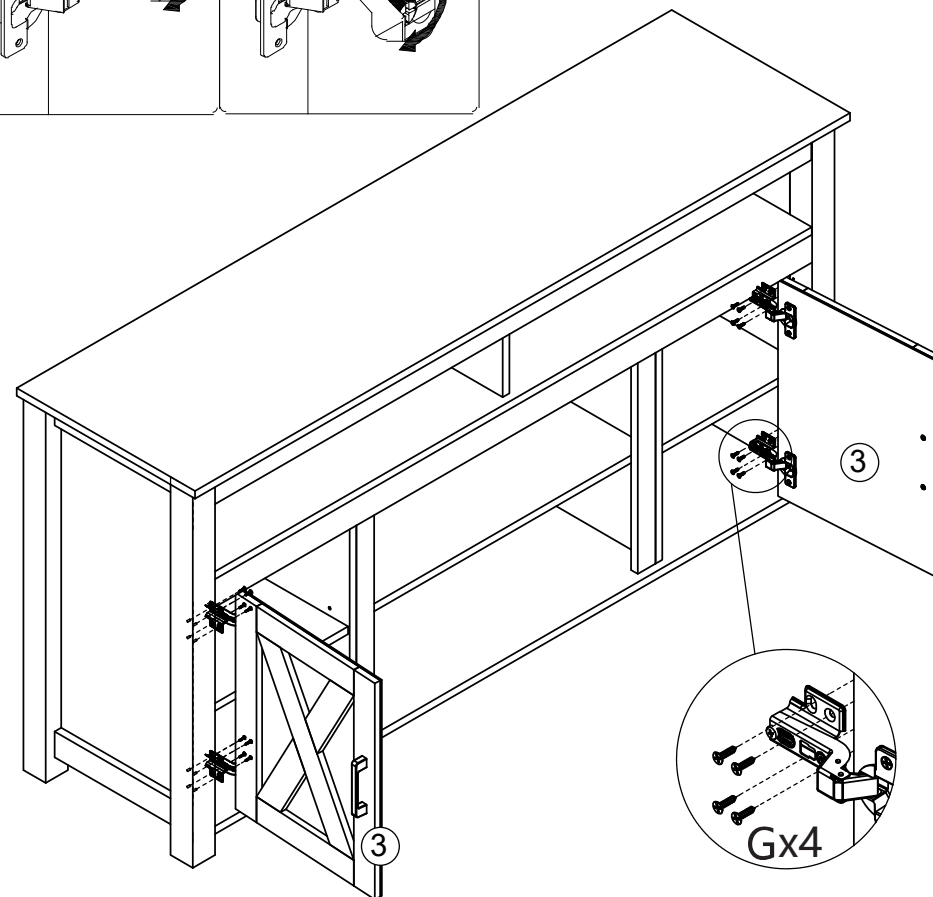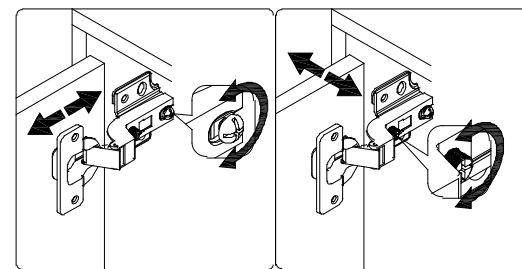

STEP 25 Do as the above instruction. Insert screws G into the settled holes on doors ③ and assembled part, tighten with allen key.
If the doors are not well-functioned, please adjust the screws on hinges.

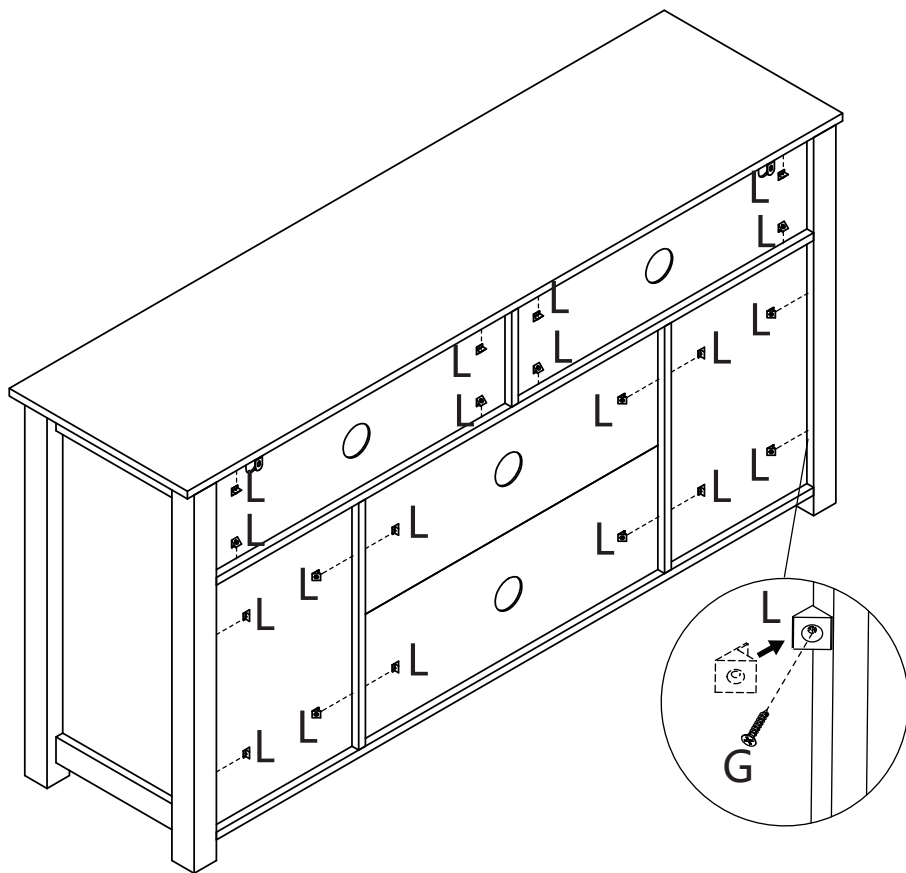

STEP 26 Do as the above instruction. Fasten the board clasps L on each corner accordingly, tighten with screws G.

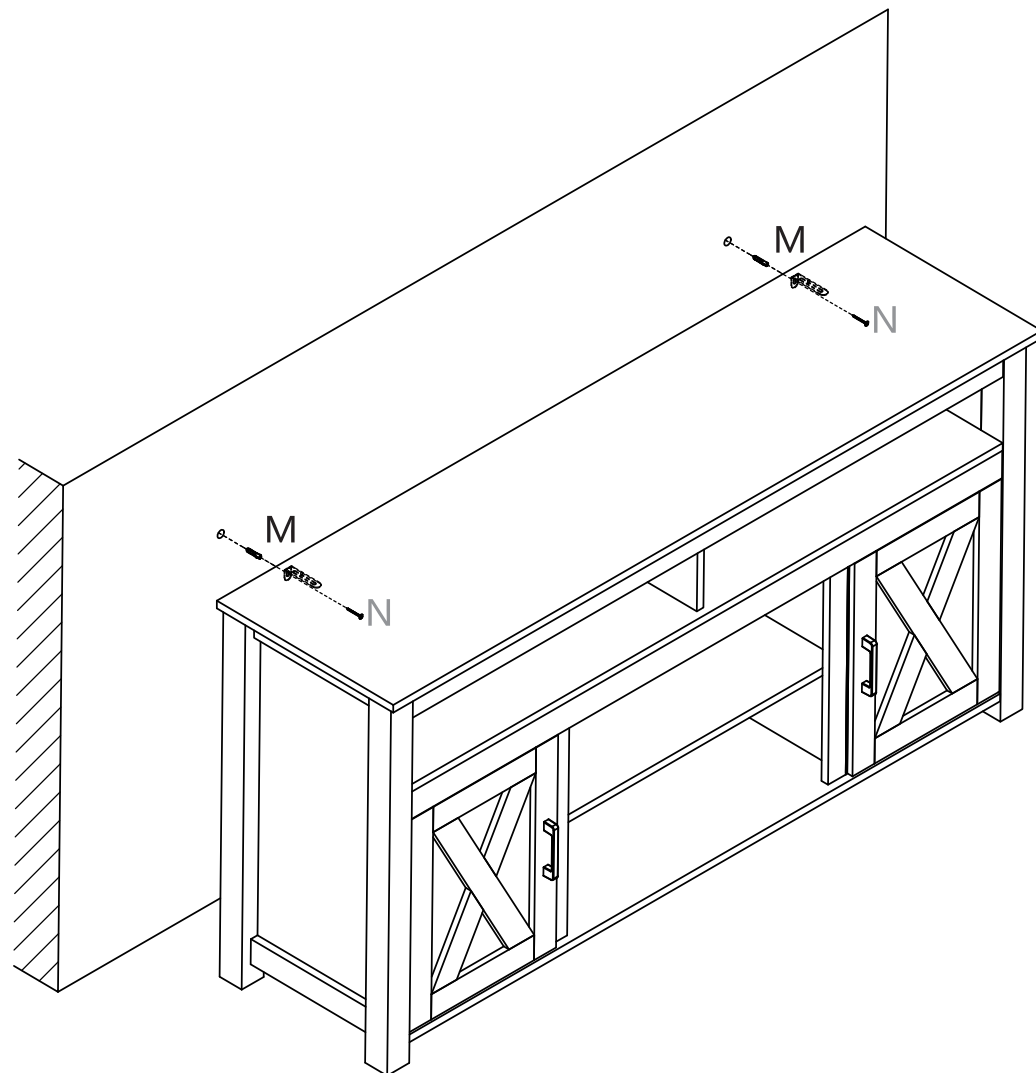

STEP 27 Measure the holes distance of metal plates F, drill the holes accordingly in the wall. Insert the expandable plastic screws M into the wall.
Connect the cabinet to the wall with screws N by going through metal plates F.
Assembly is completed.