
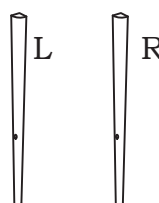












**ITEM NAME / NOM D'ITEM : TARKIZ DESK**

**ITEM # / NO. ITEM : 110512**

## PARTS LIST / LISTE DES PIÈCES

(1)	(2)	(3)	(4)	(5)
				
X1	X2	X2	X1	X1


(6)							
A.		M6 x 80mm	X2	E.		M6	X8
B.		M6 x 70mm	X8	F.		M6	X10
C.		CSK x 32mm	X4	G.		M4 x 110mm	X1
D.		10mm X 30mm	X2				

## ASSEMBLY INSTRUCTIONS / INSTRUCTIONS D'ASSEMBLAGE

**Do not FULLY TIGHTEN the screws or nuts for any step until all are in place.**


I

Tighten the hardware to 80% of full tightness, but do not fully tighten it at this step.

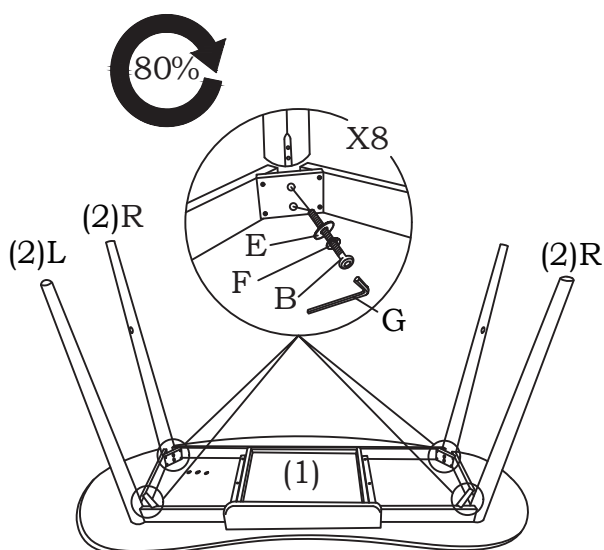


II


Ensure that all hardware is tightened completely for this step.

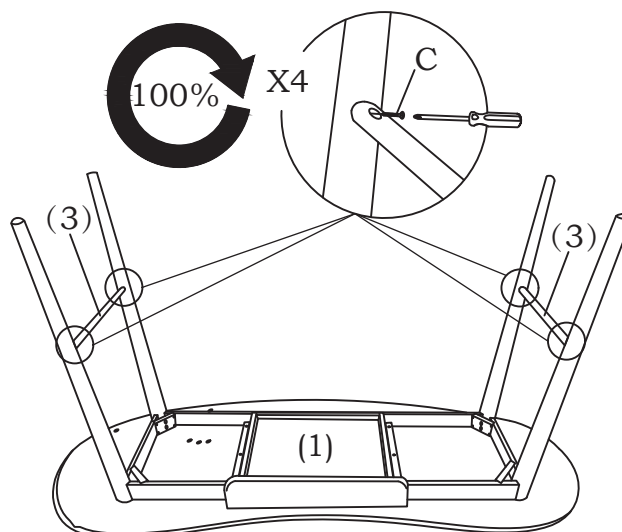


III

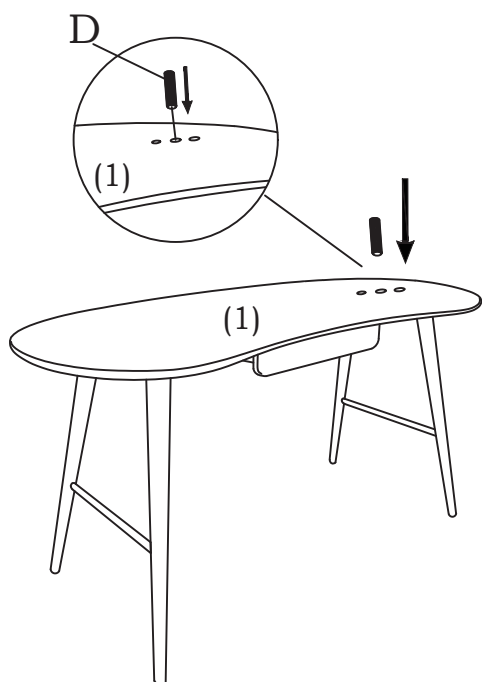

IV

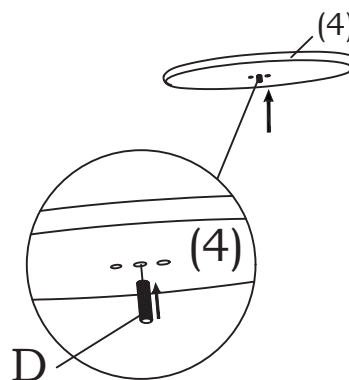

V Please ensure that the hardware is not overtightened, as this may lead to potential damage and affect overall safety.

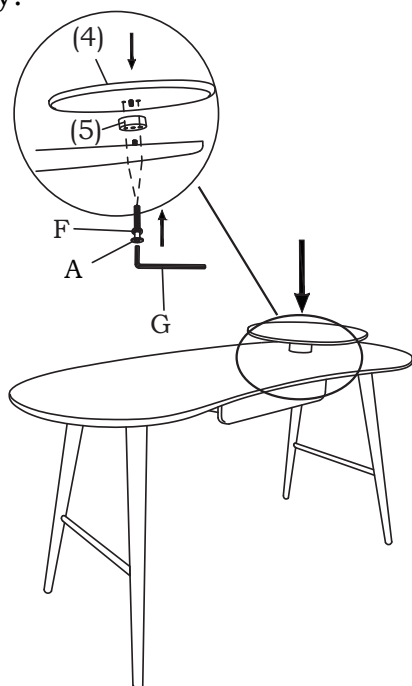

VI



For missing parts or damaged parts, please call /  
Pour pièce manquante ou endommagée, veuillez appeler:

USA, Canada and Mexico : (866)798-6663

AI-V1-C008-250124