











ASSEMBLY INSTRUCTION

Thank you for purchasing this product. Please take time to read and follow instructions below. Check that you have all parts and hardware before assembly. Parts apparently missing are often found in packing materials. If you do not have all parts listed, call us and they be sent to you immediately

! It is recommended to install protective pads under all legs and supports to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.

PARTS LIST			
NO	SKETCH	DESCRIPTION	QTY
A		Chair Back	1PC
B		LSF	2PCS
C		Rear stretcher	1PC
D		Front stretcher with metal protector	1PC


DO NOT TIGHTEN BOLTS UNTIL COMPLETELY ASSEMBLED.

HARDWARE LIST				
NO.	DESCRIPTION	SIZE	SKETCH	QTY
1	BOLT	Ø5/16" x2"		4PCS
2	LOCK WASHER	Ø5/16" x1/16"		4PCS
3	FLAT WASHER	Ø5/16" x1/16"		4PCS
4	ALLEN KEY	1/6" x2-1/4"		1PC
5	SCREW/VIS	Ø8xØ4x45mm		4PCS
6	GLUE	5*23*78		1PC

* SCREWDRIVER (NOT PROVIDED)




Step 1

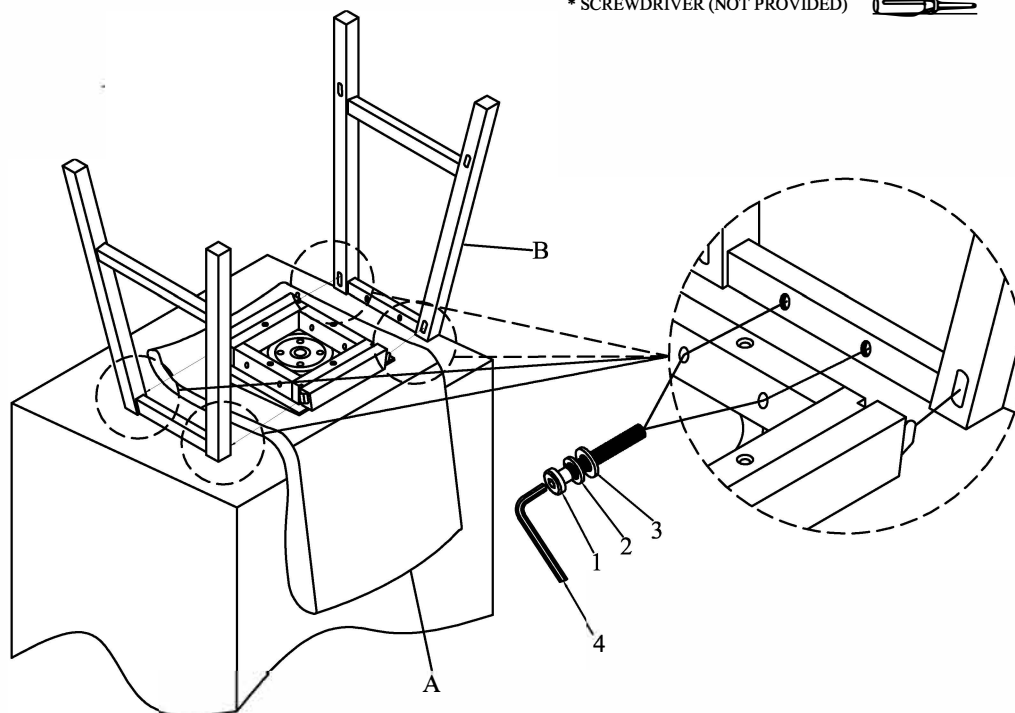

ASSEMBLY INSTRUCTION

Step 2

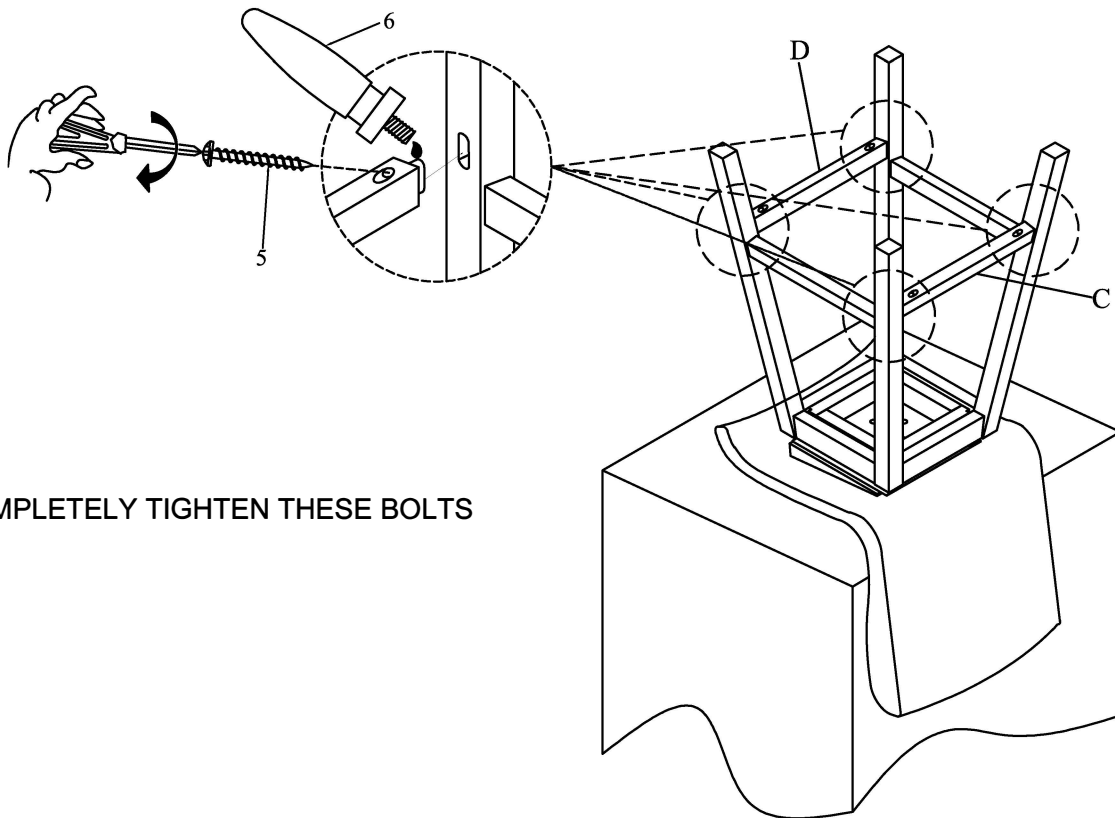

COMPLETELY TIGHTEN THESE BOLTS

COMPLETED ASSEMBLY

