


ASSEMBLY INSTRUCTIONS INSTRUCTIONS DE MONTAGE

QUEEN BED/LIT QUEEN

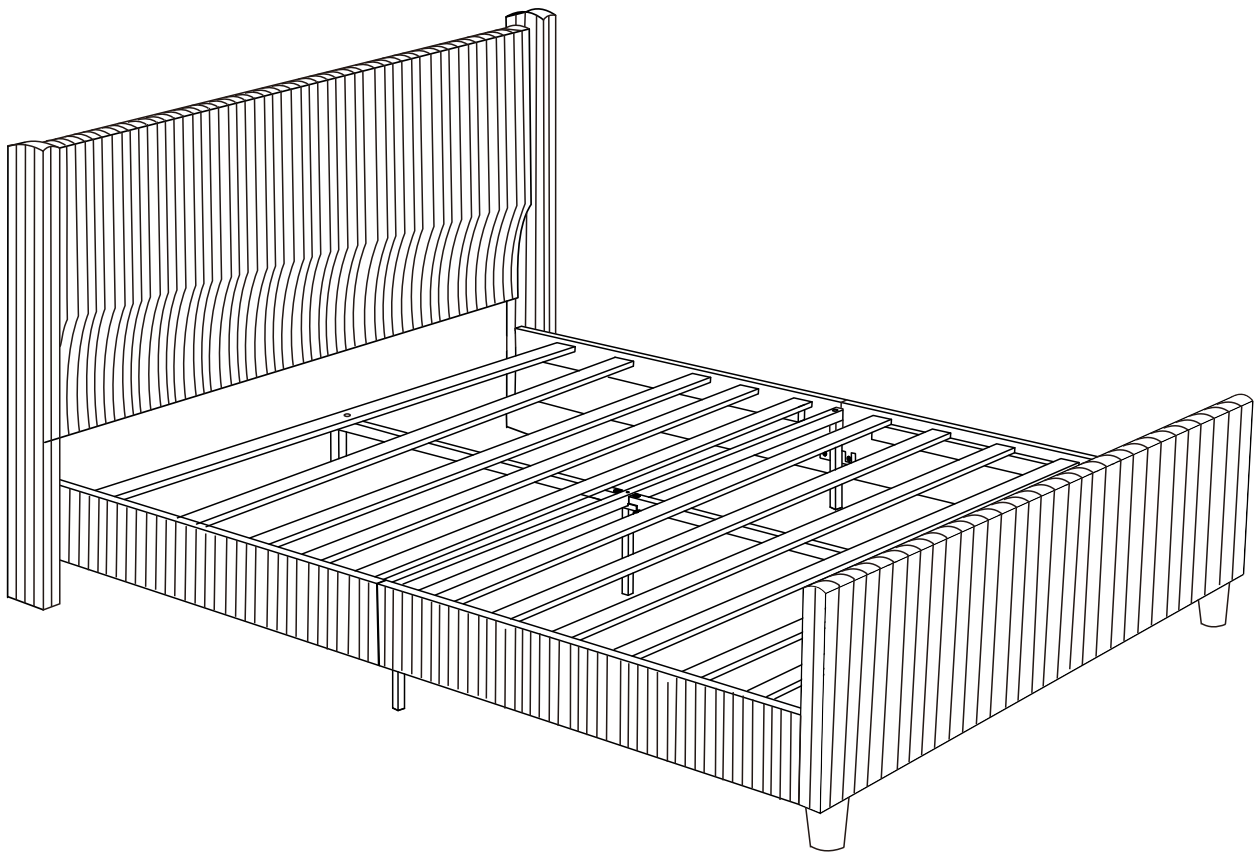


N701P170360

PAGE 1 OF 8

PAGE 1 DE 8

ASSEMBLY INSTRUCTIONS

INSTRUCTIONS DE MONTAGE

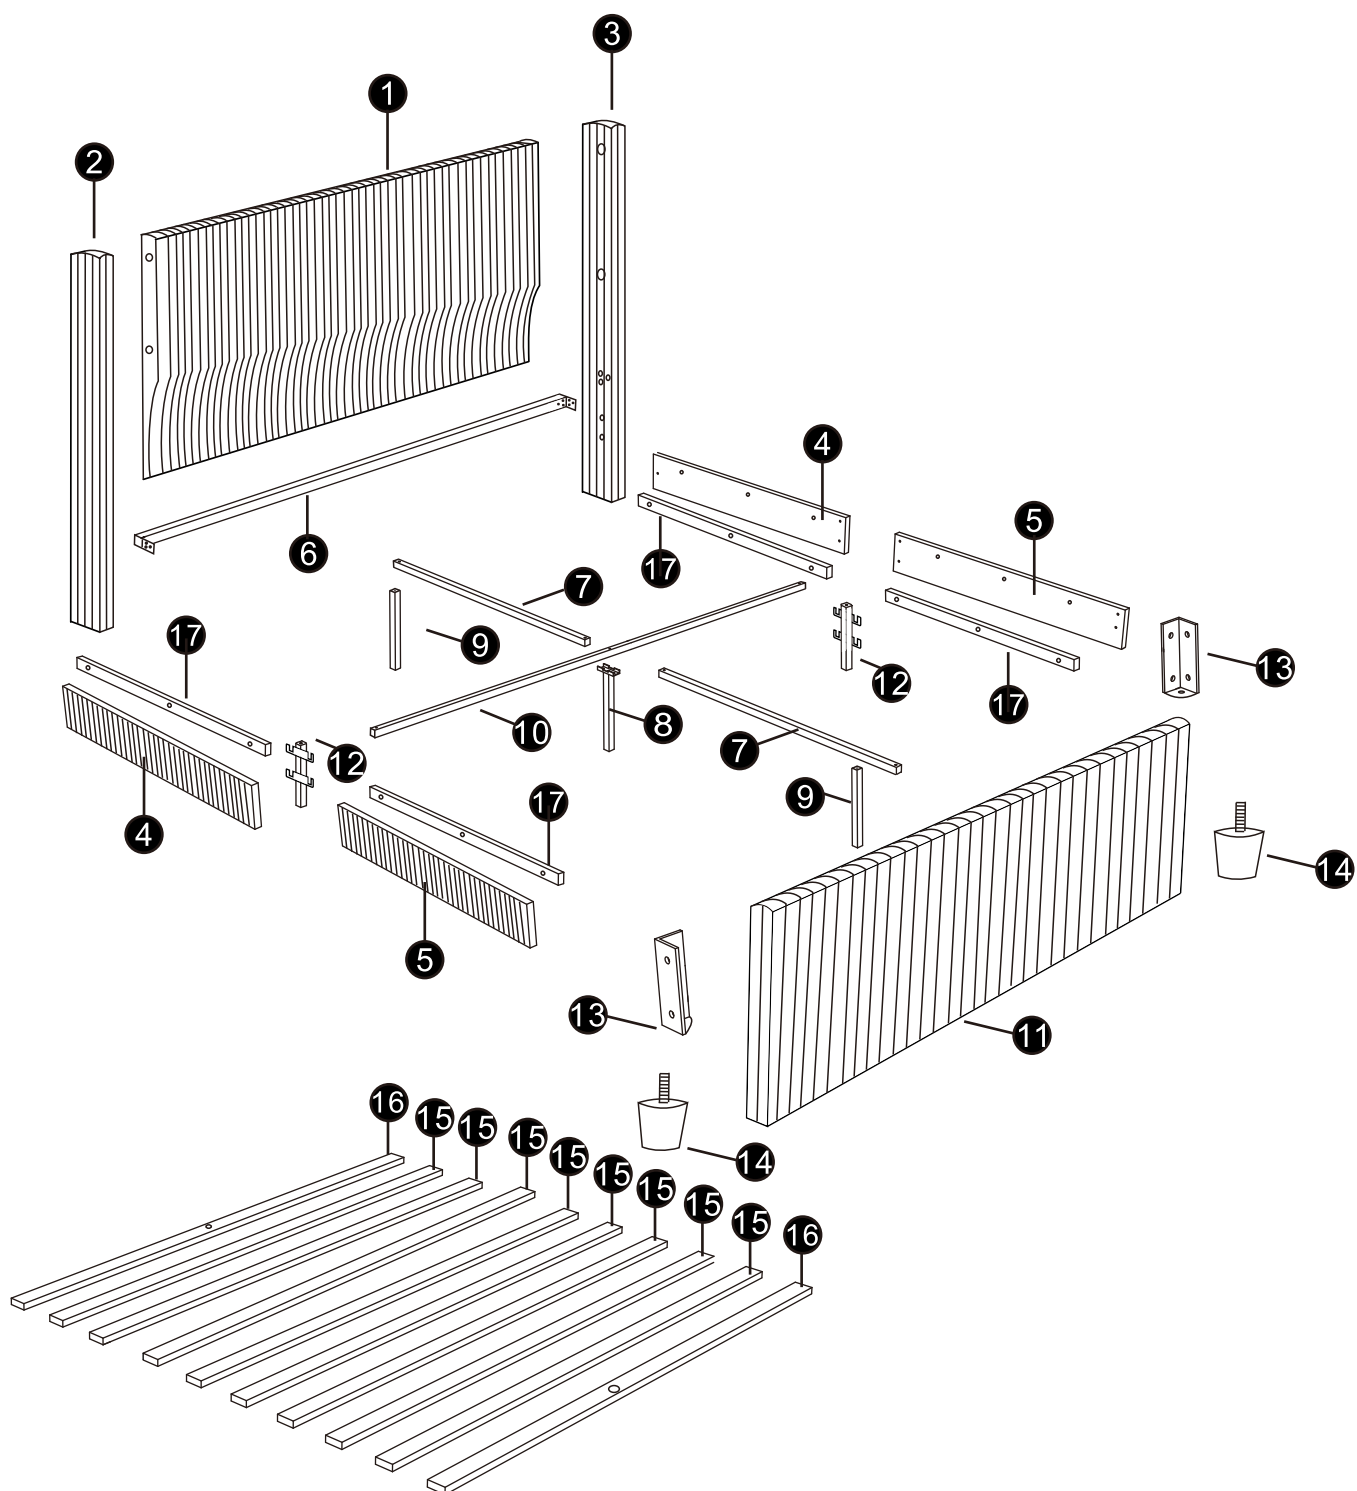













ASSEMBLY INSTRUCTIONS

INSTRUCTIONS DE MONTAGE

PARTS LIST

LISTE DE PIÈCES

N701P170360

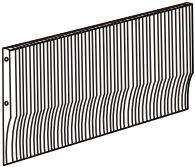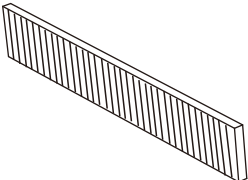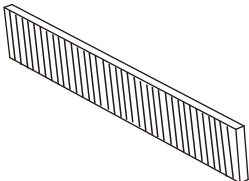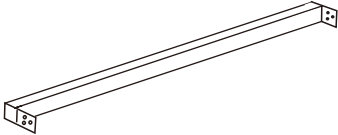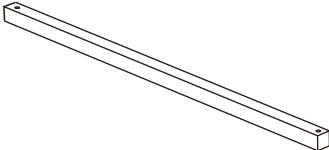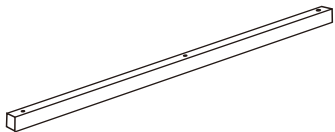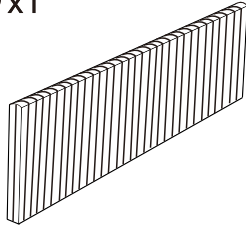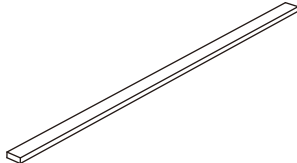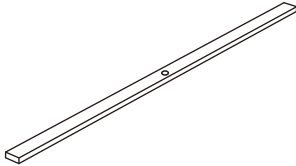1 x1 	2 x1  L	3 x1  R	4 x2 (L+R) 
5 x2 (L+R) 	6 x1  154CM	7 x2  85CM	8 x1  26CM
9 x2  23.5CM	10 x1  154CM	11 x1 	12 x2  26CM
13 x2  12CM	14 x2 	15 x8  Bed board bar lattes de lit	16 x2  Bed board bar lattes de lit
17 x4  87CM			

ASSEMBLY INSTRUCTIONS


INSTRUCTIONS DE MONTAGE

PARTS LIST

LISTE DE PIÈCES


N701P170360

A: x 21

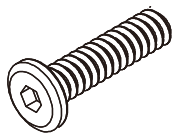

M6*35mm

B: x16

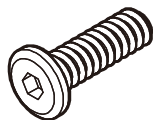


M6*20mm

C: x 20




M8

D: x8




Allen Key M6

E: x6

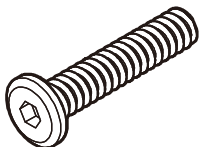

M6*50mm


G: x6



M4*25mm


ASSEMBLY INSTRUCTIONS
INSTRUCTIONS DE MONTAGE

STEP 1
ÉTAP 1

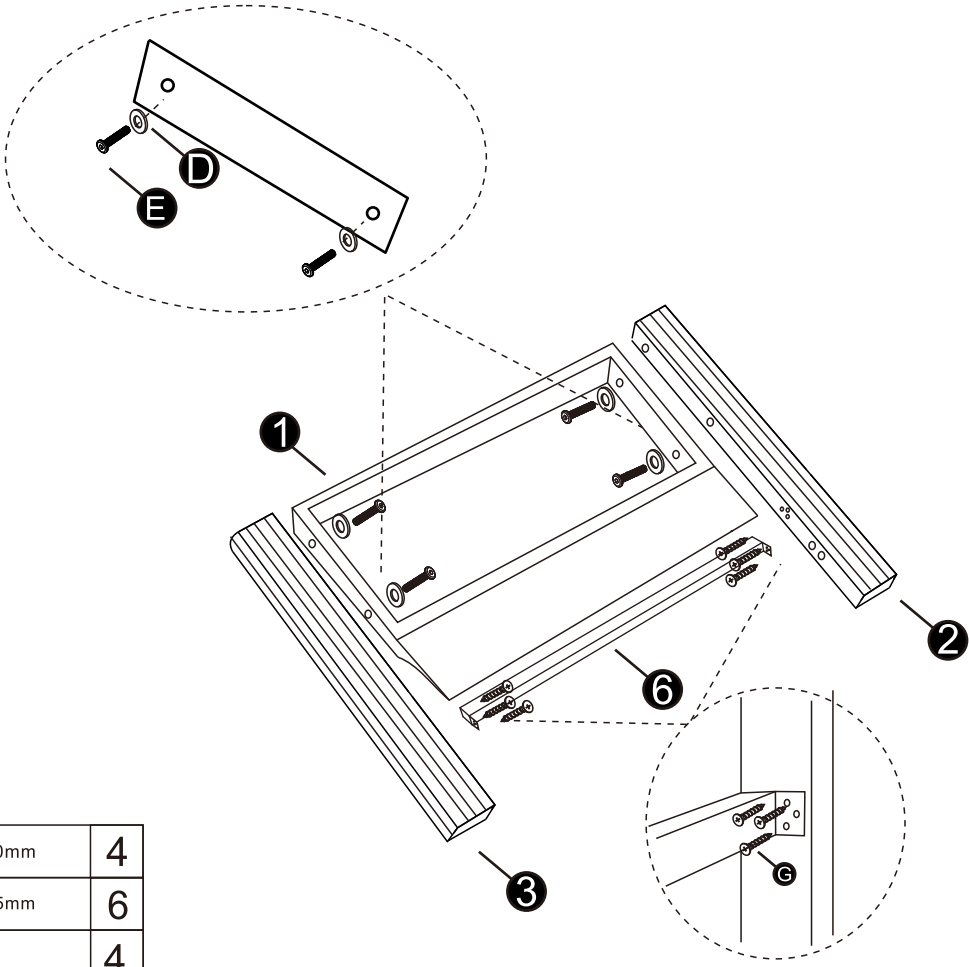

E		M6*50mm	4
G		M4*25mm	6
C			4


STEP 2
ÉTAP 2
Right

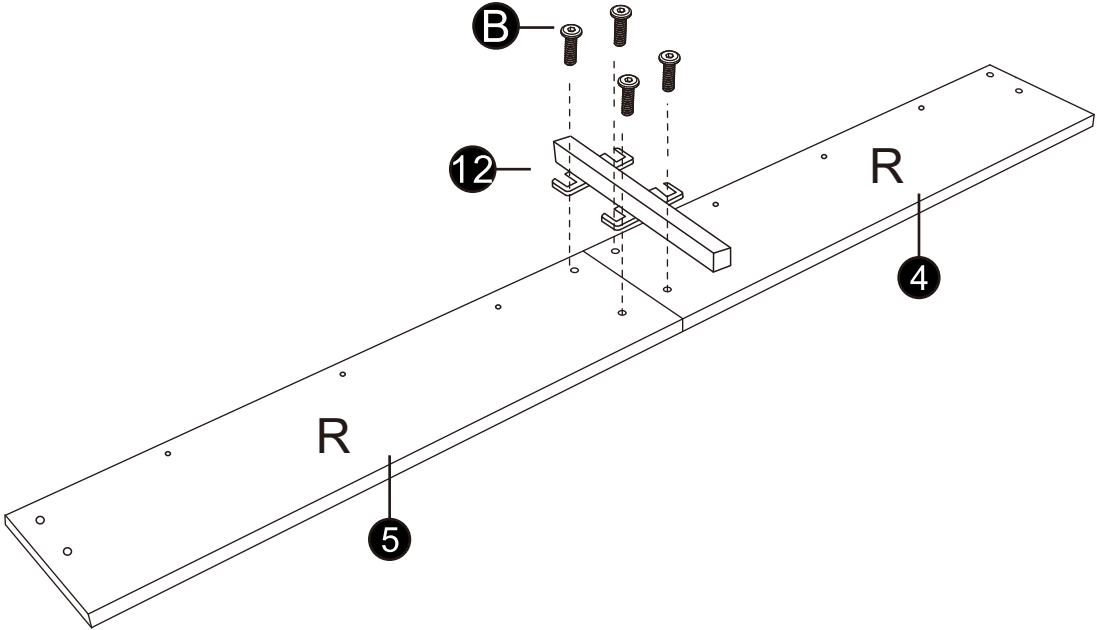

B		M6*20mm	4
---	---	---------	---


ASSEMBLY INSTRUCTIONS INSTRUCTIONS DE MONTAGE

STEP 3 ÉTAP 3 Left

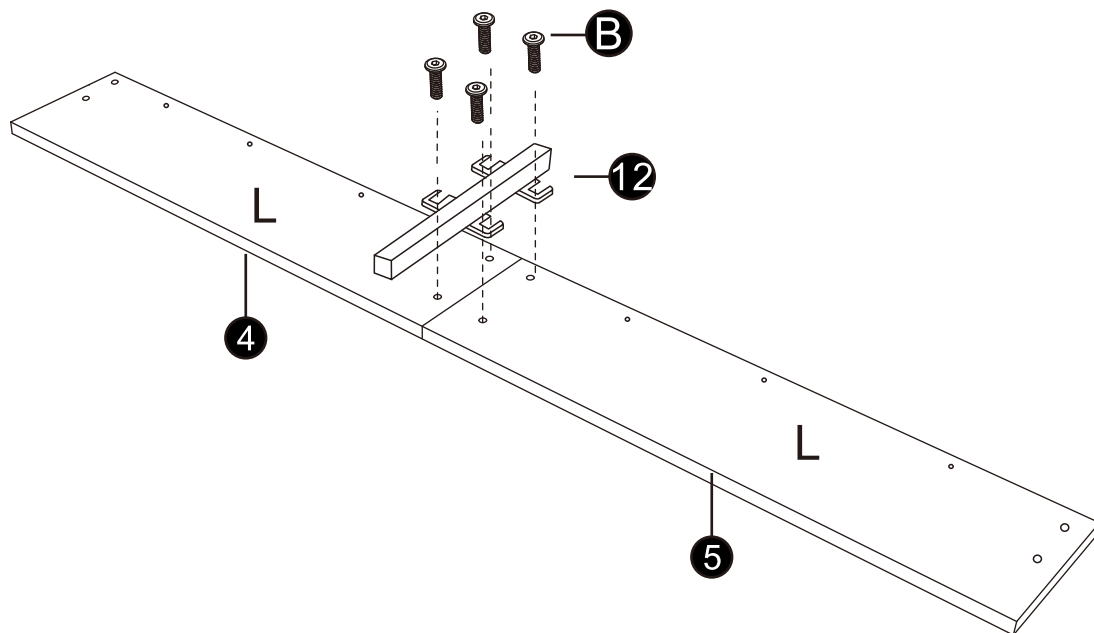

B		M6*20mm	4
---	---	---------	---


STEP 4 ÉTAP 4

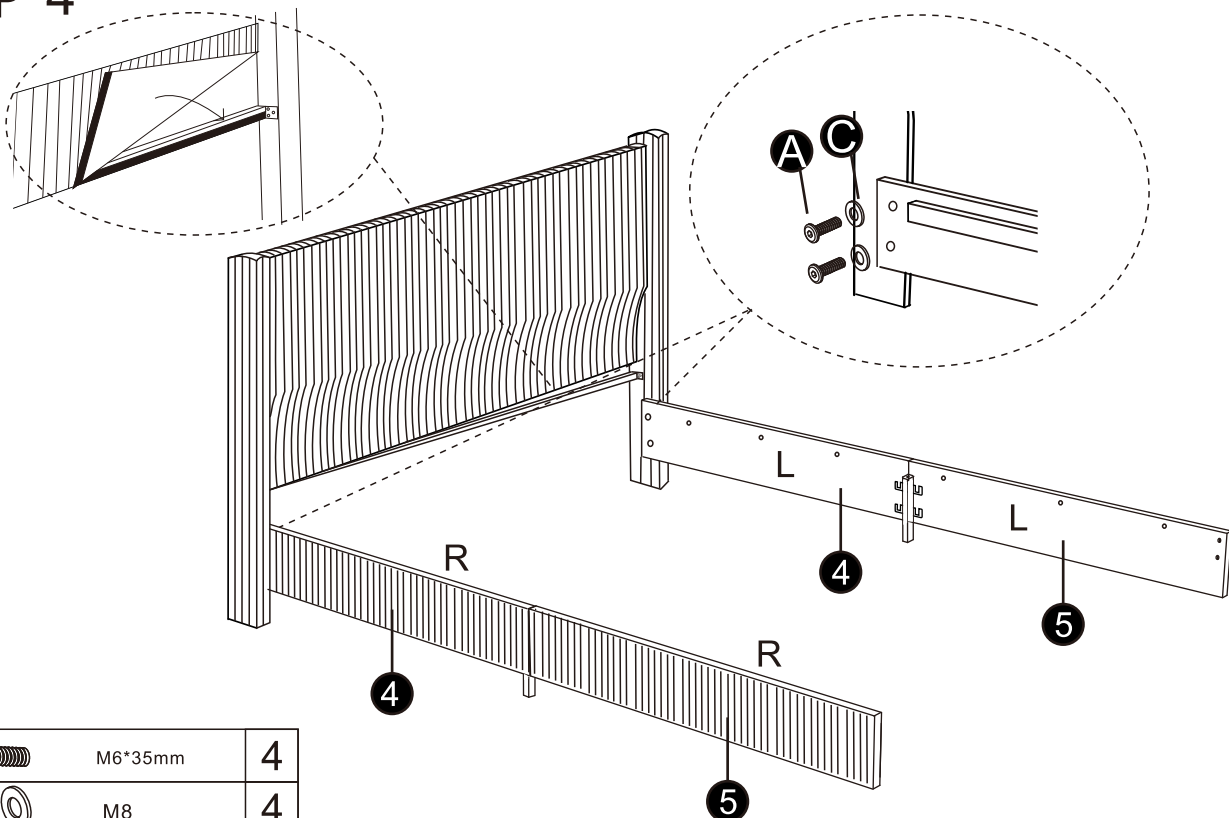

A		M6*35mm	4
C		M8	4


ASSEMBLY INSTRUCTIONS INSTRUCTIONS DE MONTAGE

STEP 5 ÉTAP 5

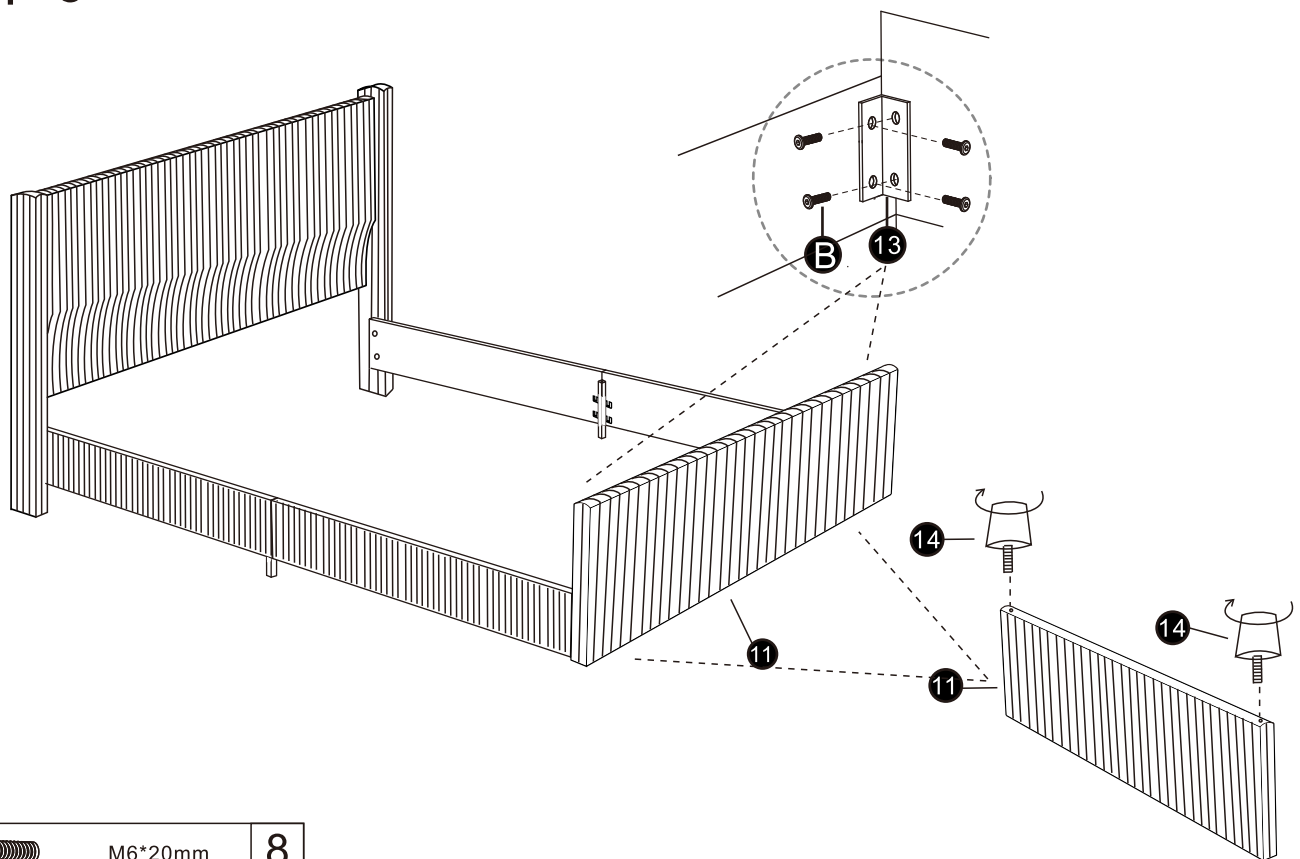

B		M6*20mm	8
---	---	---------	---


STEP 6 ÉTAP 6

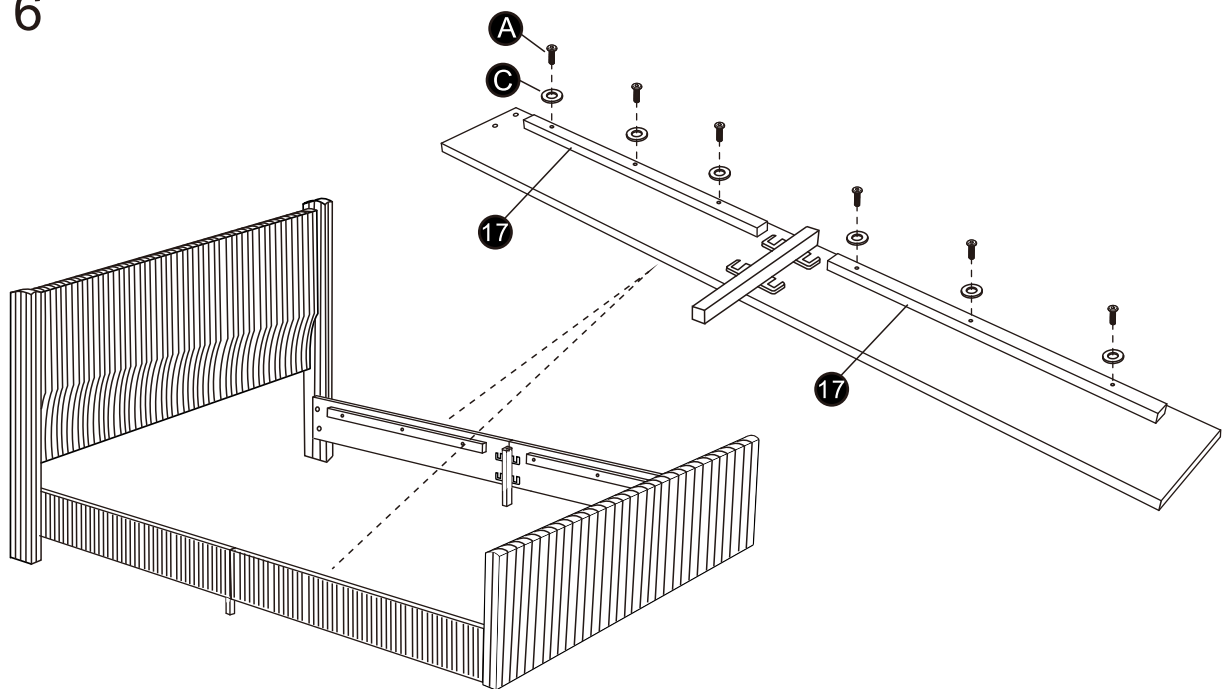

A		M6*35mm	12
C		M8	12

ASSEMBLY INSTRUCTIONS INSTRUCTIONS DE MONTAGE

STEP 7 ÉTAP 7

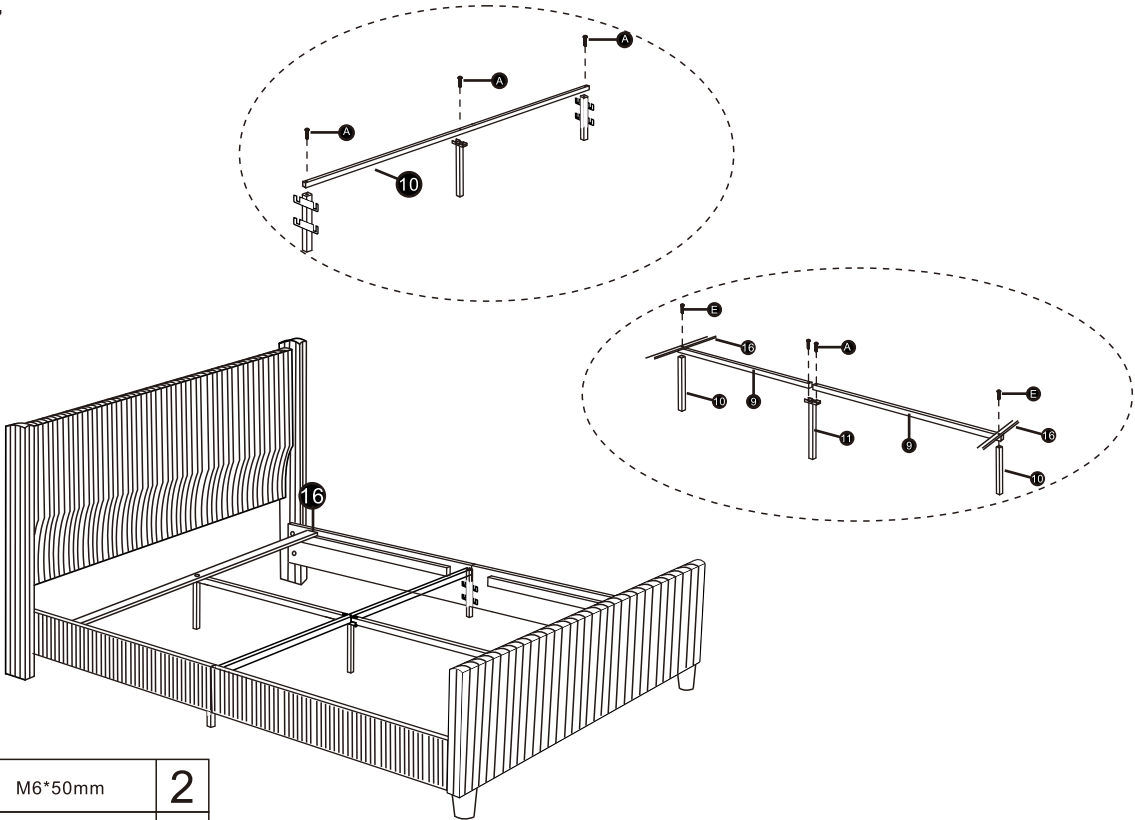

E		M6*50mm	2
A		M6*35mm	5

STEP 8 ÉTAP 8

