







<b>Product Name:</b>	Quilted Upholstered Headboard with Rubberwood Frame Platform Bed, Queen
<b>SKU #:</b>	WHIF2140


Thank you for purchasing this LuxenHome product. This product has been manufactured with the highest standards of safety and quality.

**PLEASE READ ALL INSTRUCTIONS BEFORE ASSEMBLY.**

Unpack all parts from the packaging inside the carton to ensure there are no missing or damaged parts. If any parts are missing or damaged, do not attempt to assemble or use the product.

Hardware:

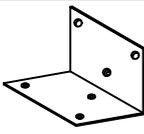
Ⓐ x1	Ⓑ x1	Ⓒ x16	Ⓓ x2	Ⓔ x6	Ⓕ x2
 M4 x 65mm	 M5 x 70mm	 JCBB M8 X 20	 JCBC M6 X 40	 JCBC M6 X 50	 CSK M4 X 25
Ⓖ x31	Ⓗ x6	Ⓘ x6	Ⓙ x12	Ⓚ x12	Ⓛ x2
 CSK M4 X 32	 M6 Spring Washer	 M6 Flat Washer	 M8 Spring Washer	 M8 Flat Washer	 Small Adjuster
Ⓜ x2					
 L-Bracket					

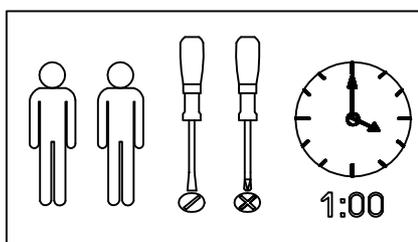


Tools required for assembly: Philips screwdriver and Flathead screwdriver (if using power tools, use with care)

<b>Product Name:</b>	Quilted Upholstered Headboard with Rubberwood Frame Platform Bed, Queen
<b>SKU #:</b>	WHIF2140

Panel:

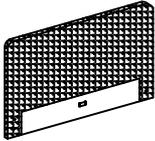
① x1	② x1	③ x1	④ x1	⑤ x2	⑥ x2
					
⑦ x1	⑧ x2	⑨ x1			
					

<b>Product Name:</b>	Quilted Upholstered Headboard with Rubberwood Frame Platform Bed, Queen
<b>SKU #:</b>	WHIF2140

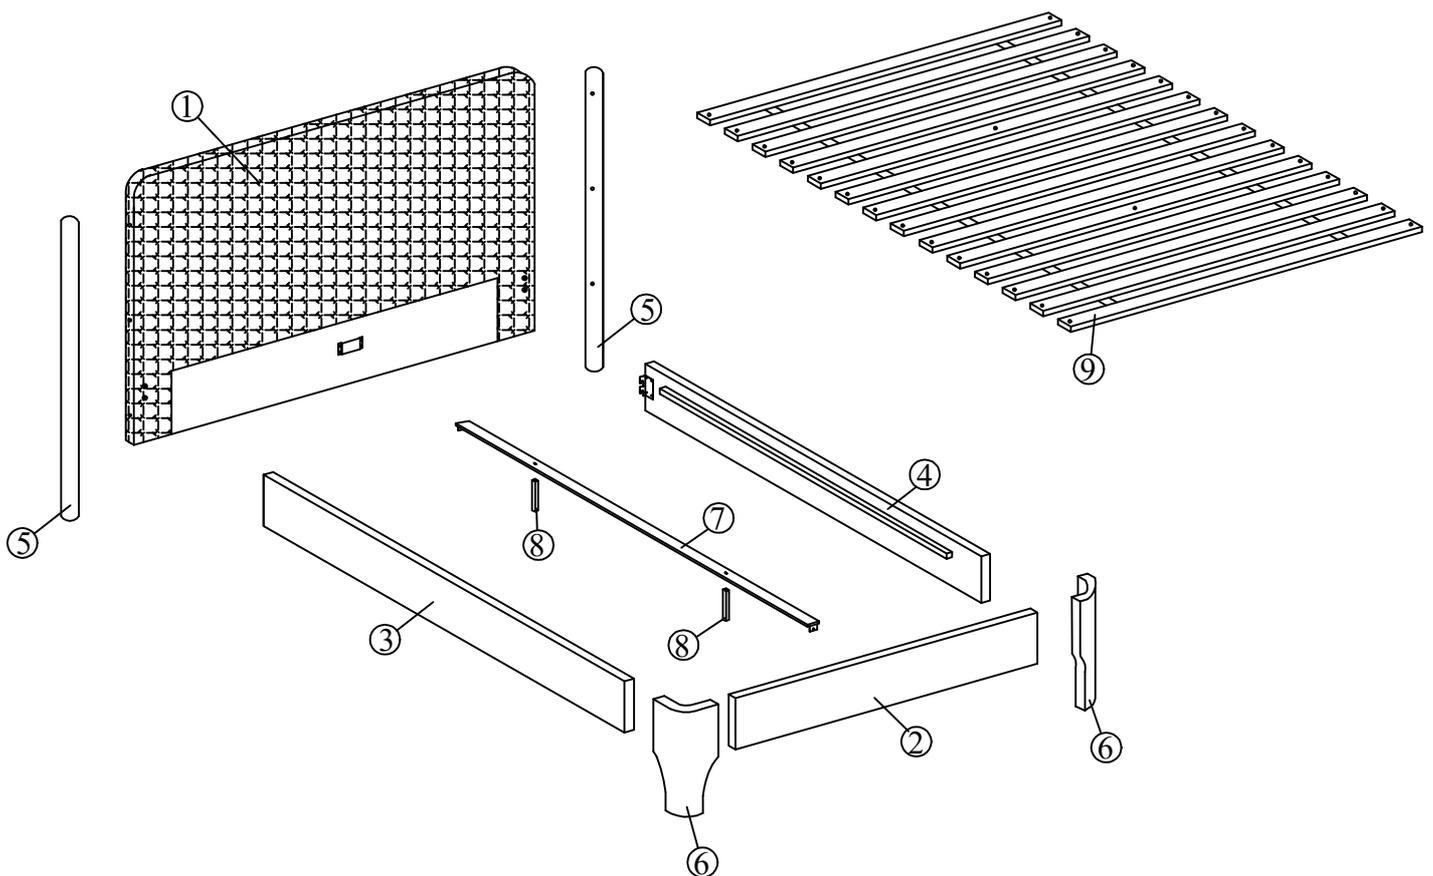

<b>Product Name:</b>	Quilted Upholstered Headboard with Rubberwood Frame Platform Bed, Queen
<b>SKU #:</b>	WHIF2140


## Step 1

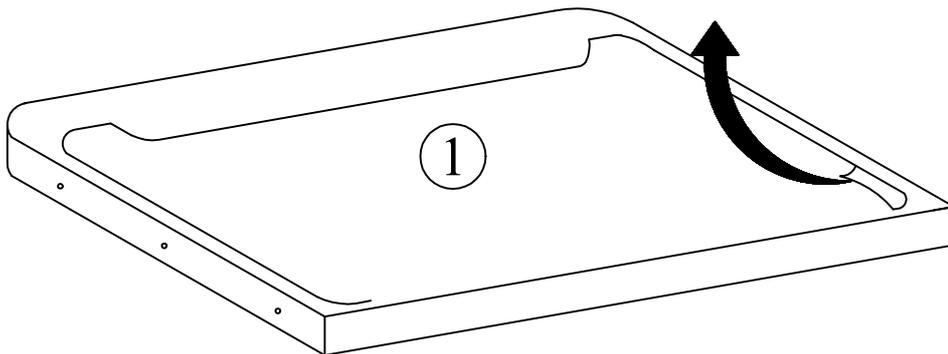

BACK VIEW

Unzip the black non-woven fabric on the back of headboard legs.

## Step 2

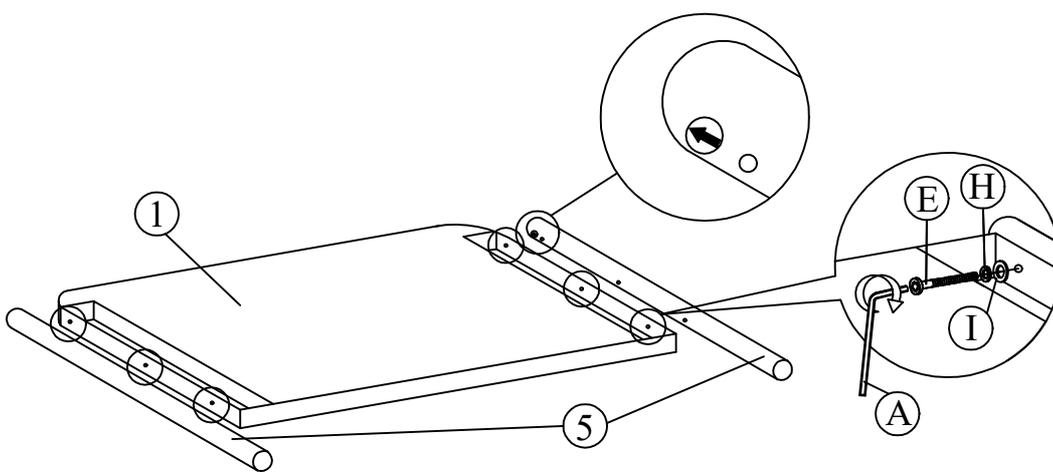


BACK VIEW

A x1
E x6
H x6
I x6

Install the headboard legs (5) to headboard (1). Tighten the legs.

<b>Product Name:</b>	Quilted Upholstered Headboard with Rubberwood Frame Platform Bed, Queen
<b>SKU #:</b>	WHIF2140


## Step 3

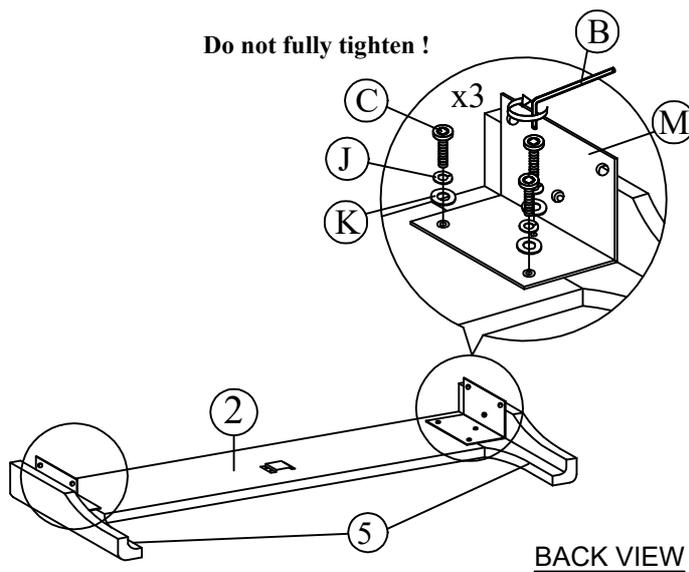

<b>B x1</b>	<b>C x6</b>
<b>J x6</b>	<b>K x6</b>
<b>M x2</b>	

Attach the footboard legs (6) to the footboard (2) with L-Bracket (M) as shown.

## Step 4

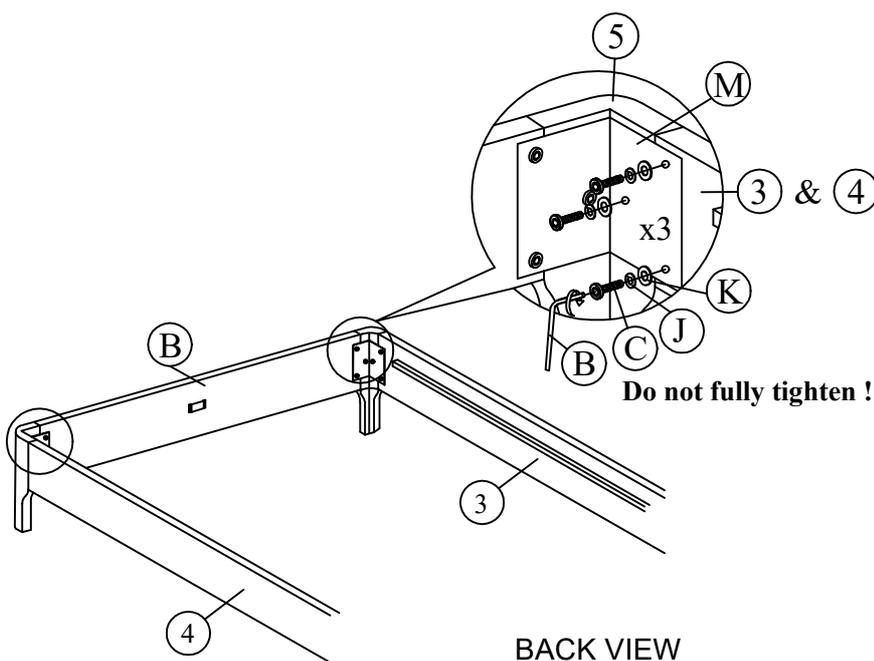


<b>B x1</b>
<b>C x6</b>
<b>J x6</b>
<b>K x6</b>

Attach footboard (2) to the side rail (3 & 4) as shown.

<b>Product Name:</b>	Quilted Upholstered Headboard with Rubberwood Frame Platform Bed, Queen
<b>SKU #:</b>	WHIF2140


## Step 5

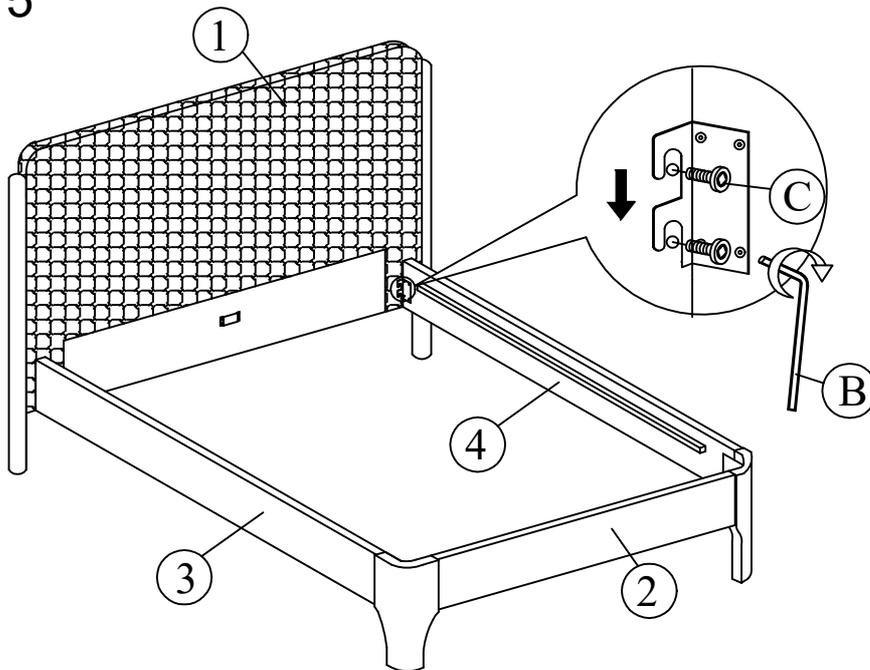

<b>B x1</b>
<b>C x6</b>

Attach side rail (3 & 4) to the headboard (1) as shown.

## Step 6

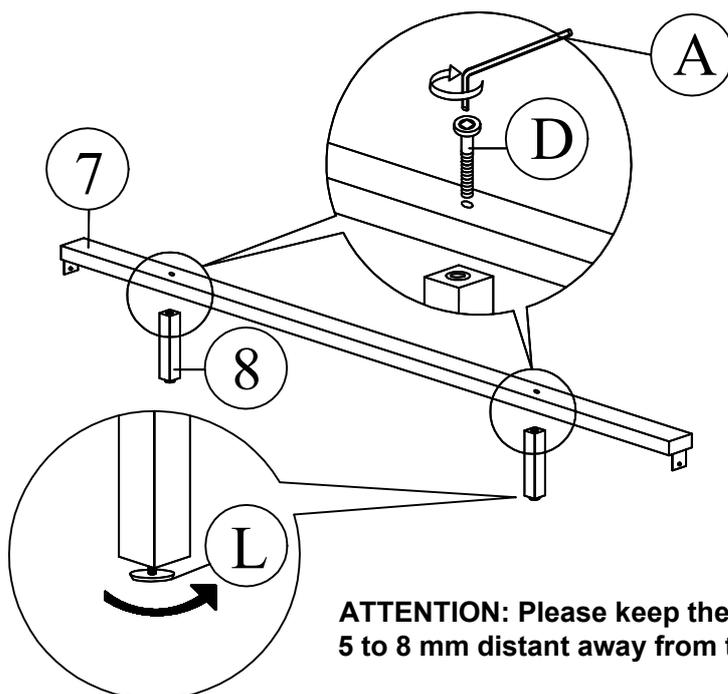



<b>A x1</b>
<b>D x2</b>
<b>L x2</b>

**ATTENTION:** Please keep the adjuster around 5 to 8 mm distant away from the floor.

Attach the support legs (8) to the center rail (7) of the bed as shown.

<b>Product Name:</b>	Quilted Upholstered Headboard with Rubberwood Frame Platform Bed, Queen
<b>SKU #:</b>	WHIF2140



## Step 7

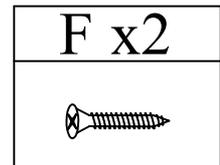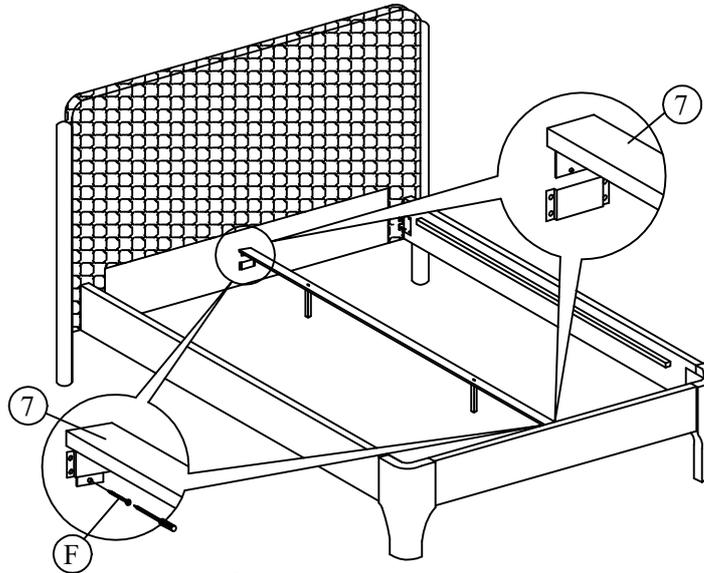

**Attention :** Please ensure that (F) screw is attached as per the A.I shown to avoid possibility of base collapsing.

Slide the center rail (7) to the headboard (1) and footboard (2). Tighten screws (F) using a screwdriver (not included) to the headboard (1) and footboard (2).

## Step 8

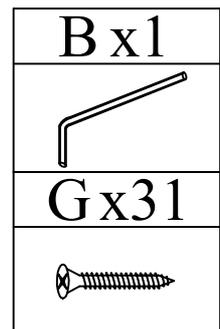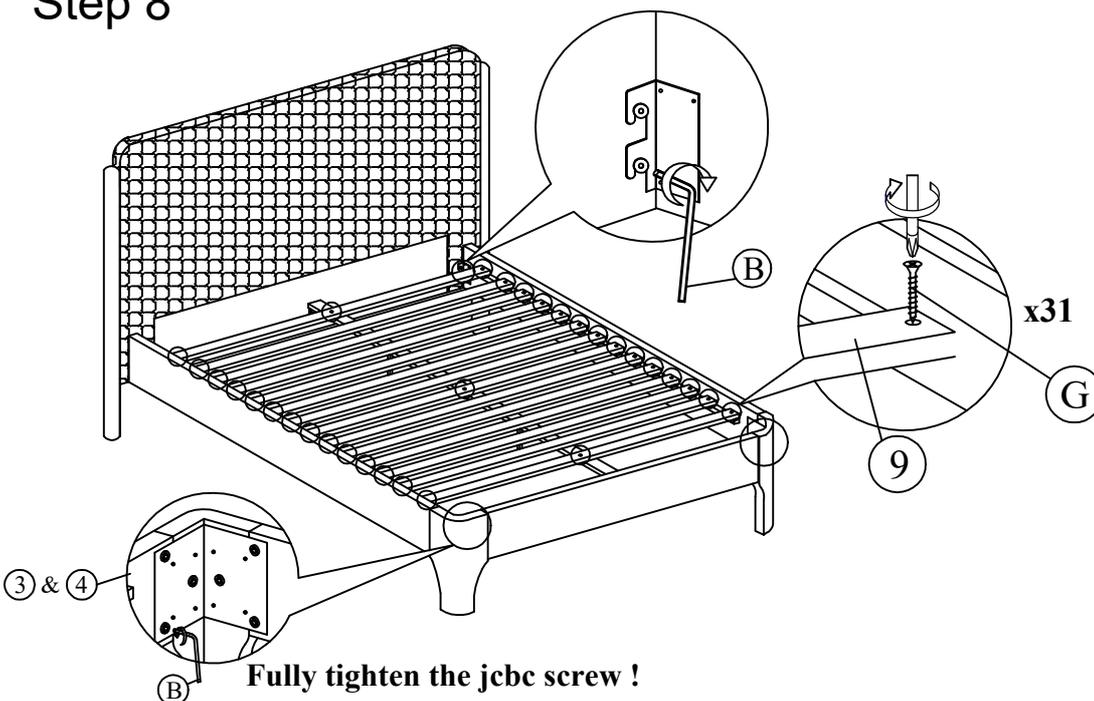

**Fully tighten the jcbc screw !**

Affix the slat (9) to the support wood on side rail (3 & 4) and the center rail (7). Tighten all the 4 corners.