


Cabinet

Assembly Instructions - Please keep for future reference

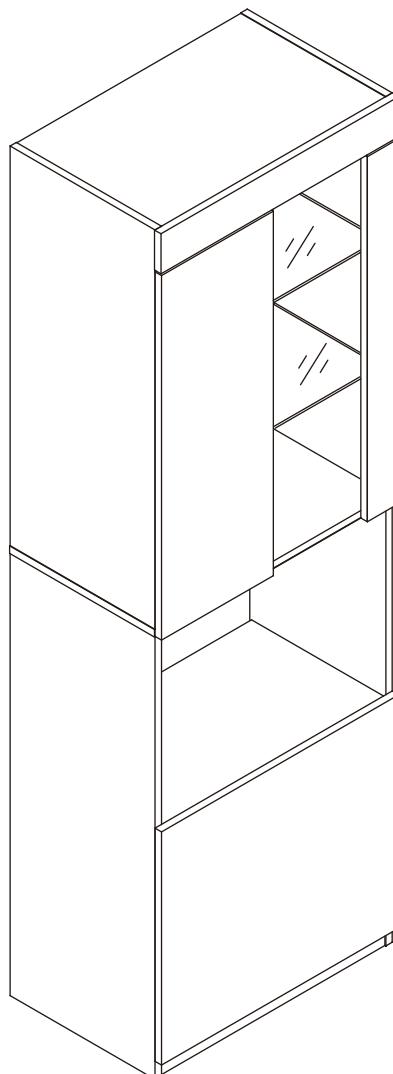

Dimensions

Width-21.7inch

Depth-13.8inch

Height-66.9inch

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

WARNING

**In order to help prevent overturning –
please follow these instructions**


To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Using Camlocks


Step 1

Connect the male camlock as dictated in the assembly instructions using a screwdriver.

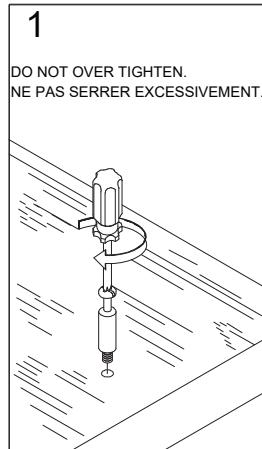

Step 2


Push the male camlock into the entry hole.

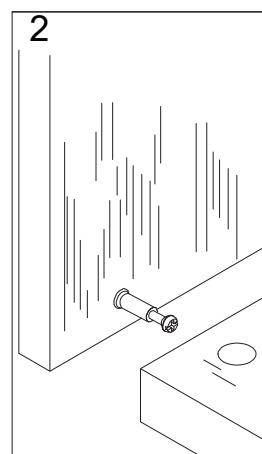

Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

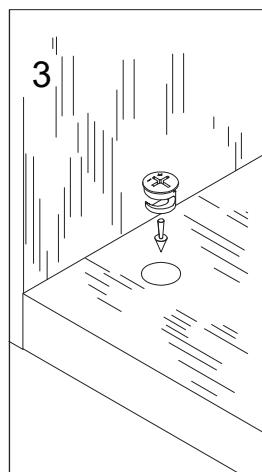


Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.

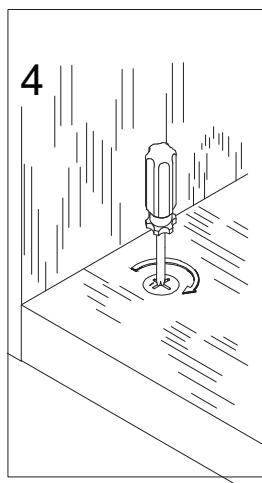


Assembly Instructions















There is a protective film,
please tear it off.




No. 17 acrylic has a protective
film on both sides, please
remove it

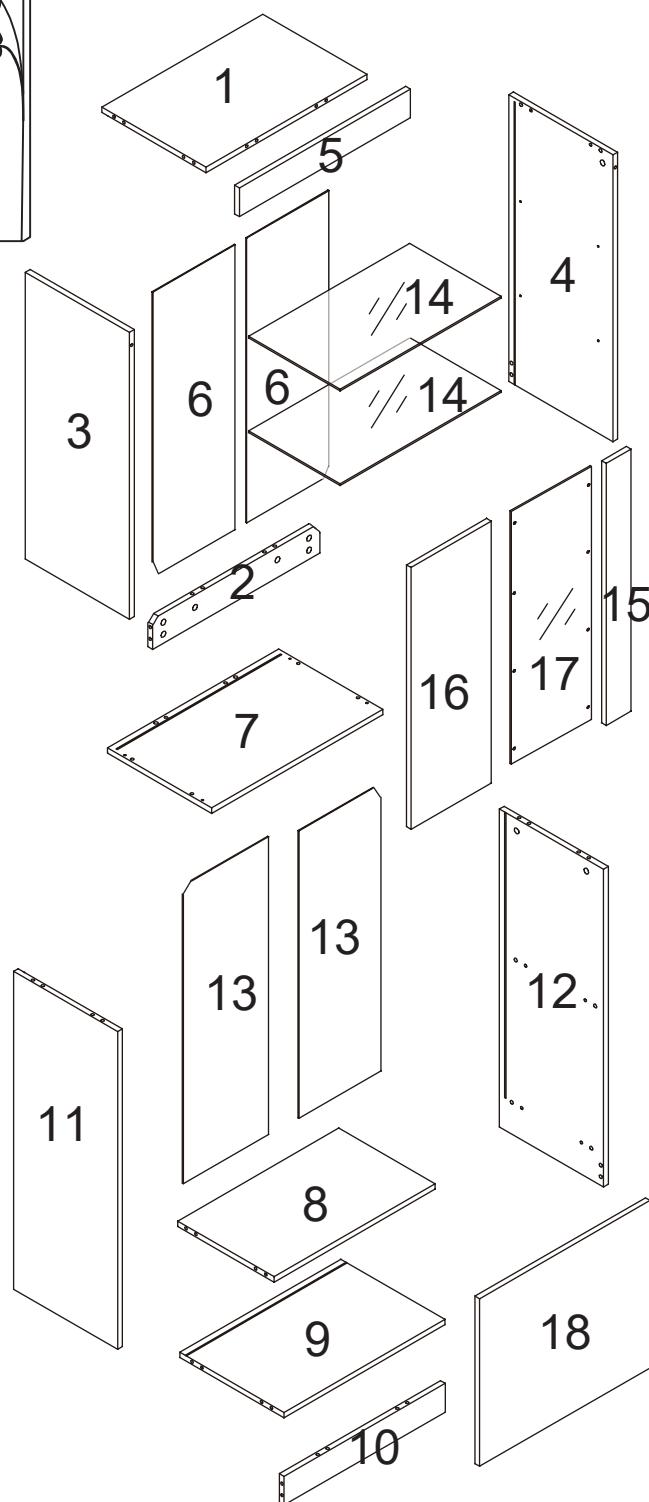

Assembly Instructions

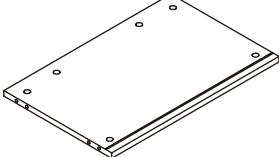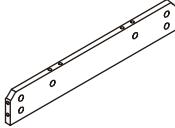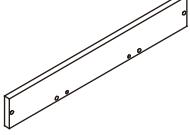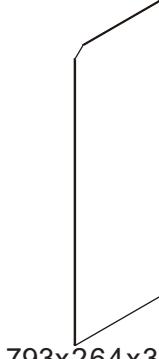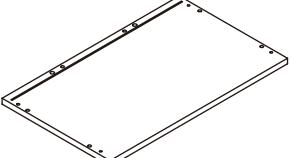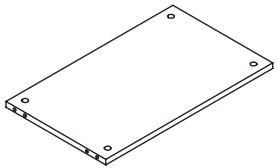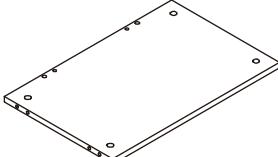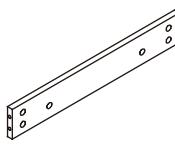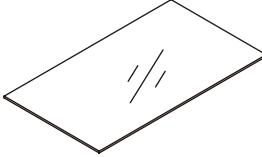			
518x335x15mm 1 x 1	518x80x15mm 2 x 1	799x335x15mm 3 x 1	799x335x15mm 4 x 1
			
550x80x15mm 5 x 1	793x264x3mm 6 x 2	550x335x15mm 7 x 1	518x310x15mm 8 x 1
			
518x334x15mm 9 x 1	518x80x15mm 10 x 1	885x335x15mm 11 x 1	885x335x15mm 12 x 1
			
800x264x3mm 13 x 2	510x295x5mm 14 x 2	730x80x15mm 15 x 1	730x250x15mm 16 x 1





Assembly Instructions

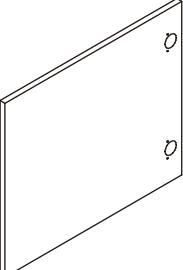			
714x258x4mm	548x466.5x15mm		
(17) x 1	(18) x 1		


Components-Fittings

Please check you have all the panels listed below



Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

 A Cam Bolt x 32+2	 B Cam Lock x 32+2	 C 8*30mm Dowel x 26+2	 D 3.5*14mm Screw x 30+2
 E 6*12mm Screw x 8+1	 F Glass clamp x 8+1	 G felt x 6+2	 H Hinge x 5
 J Backboard buckle x 16+1	 K Screwdriver x 1	 L Anti dumping x 2 set L1, L2, L3, L4, L5	 M Light Belt x 1
 N Perfect Fit x 4+2	 P 5*40mm Screw x 4+1		

1.

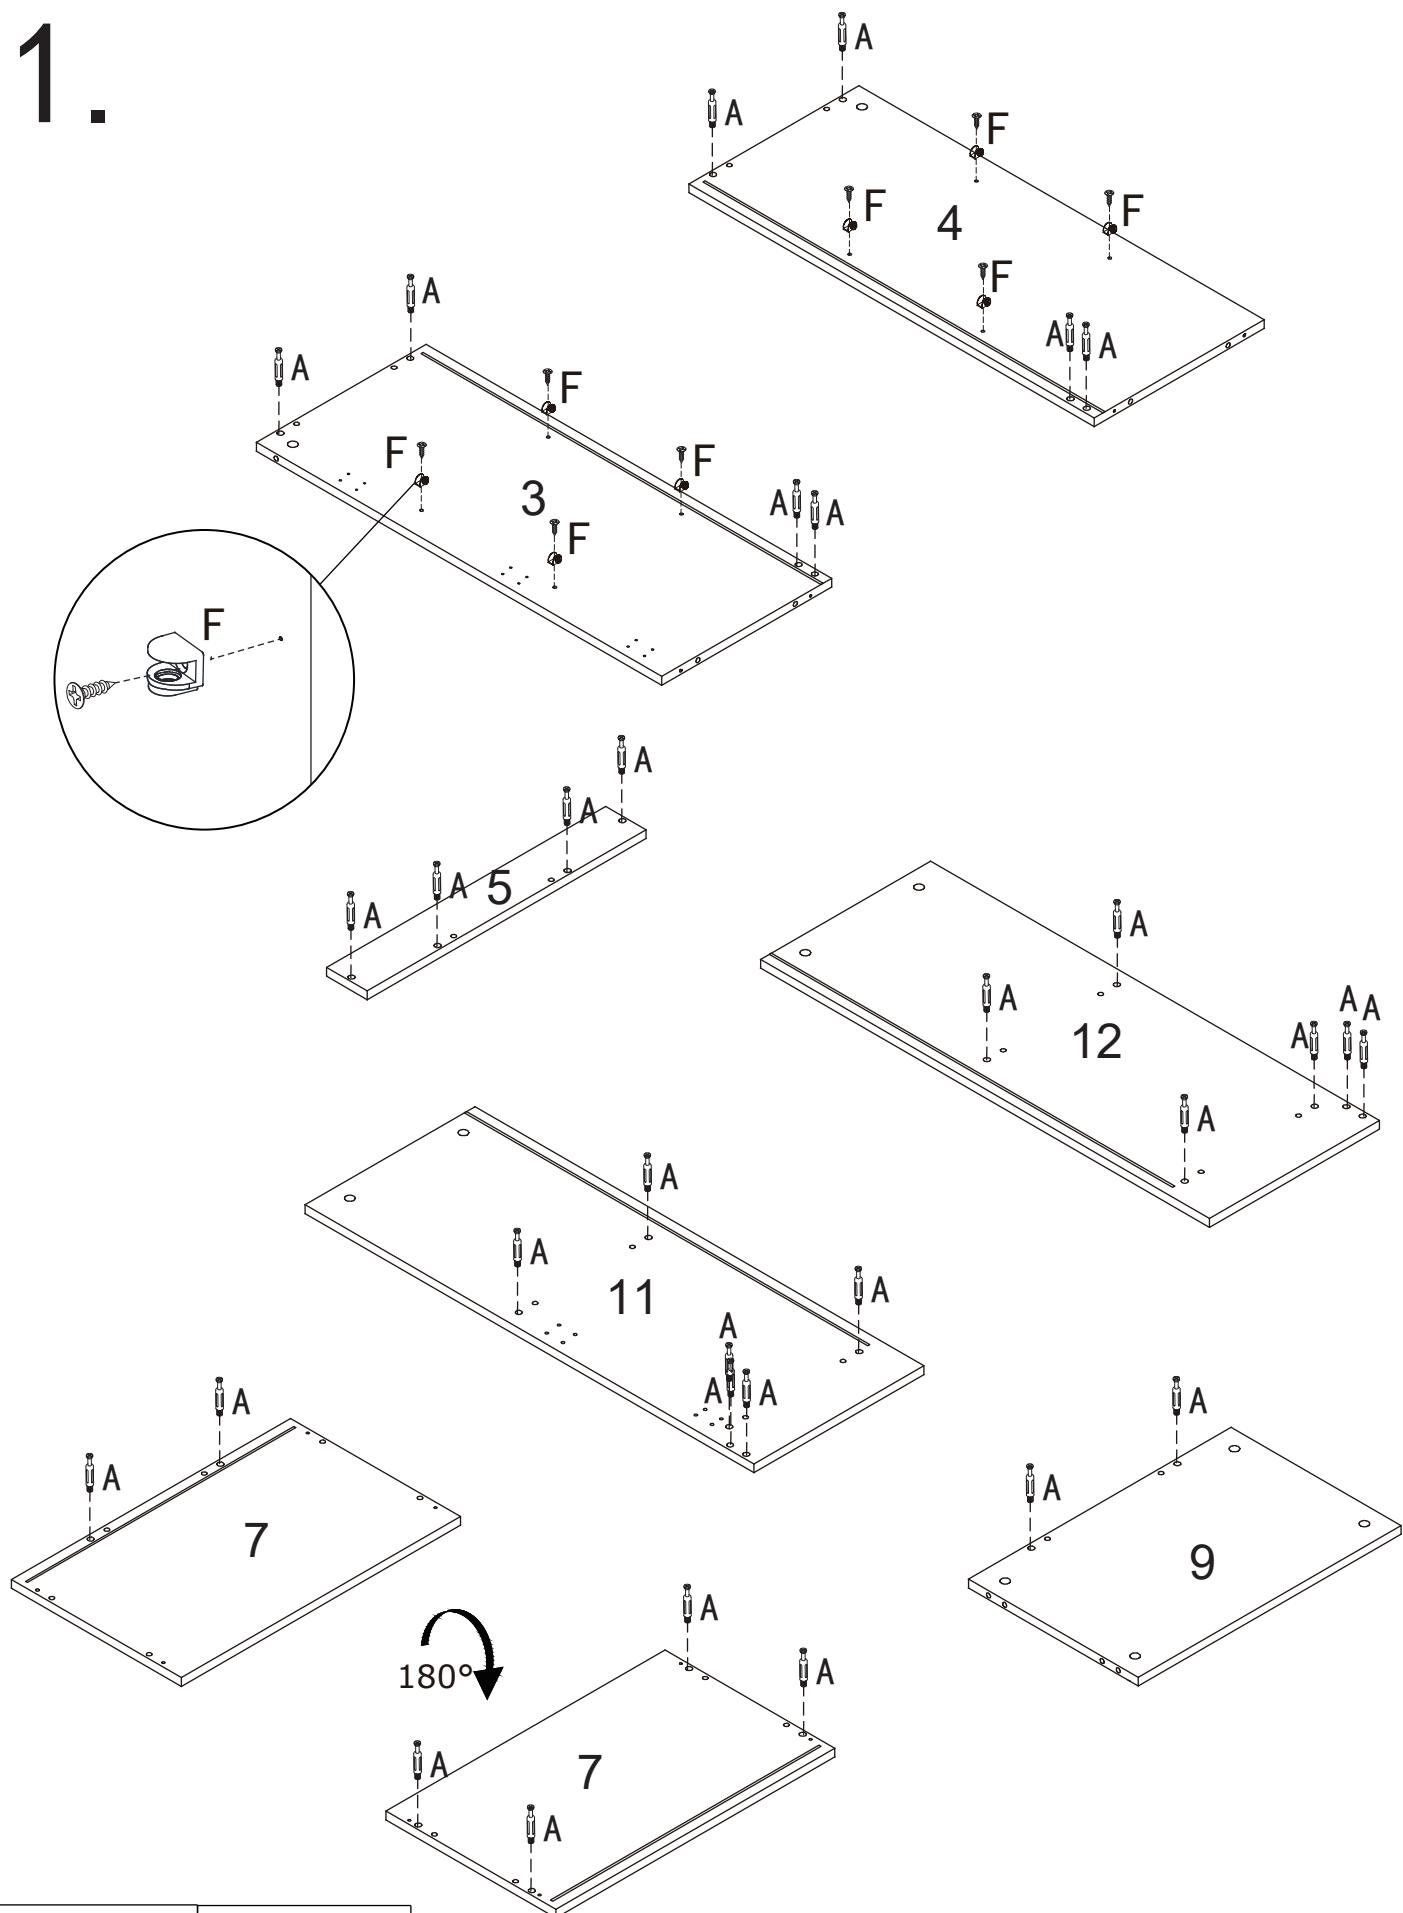

2.

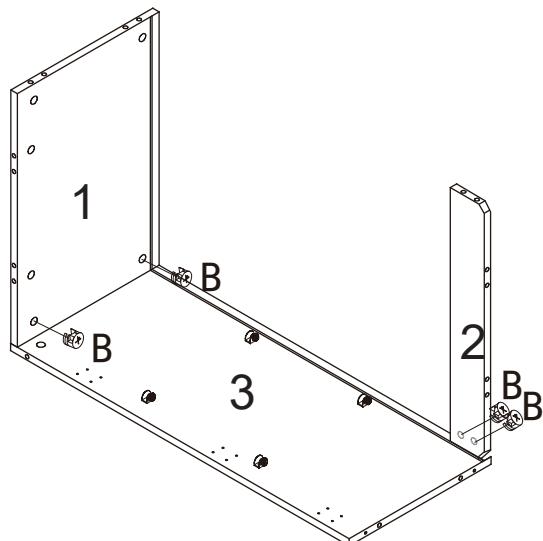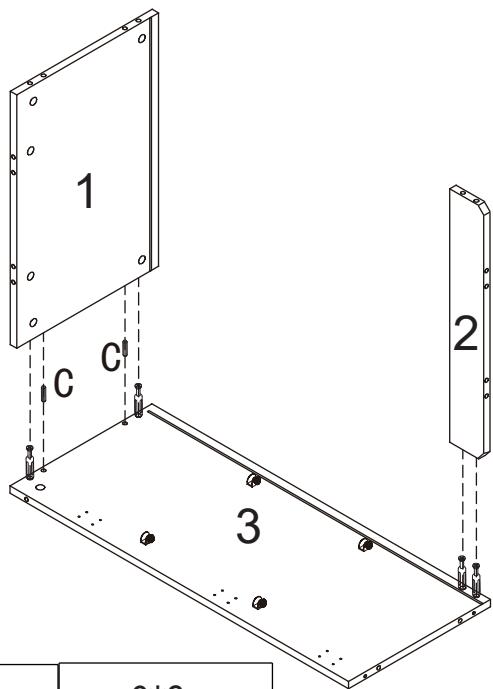

B*4





C*2



Ø 8 x 30 mm

3.

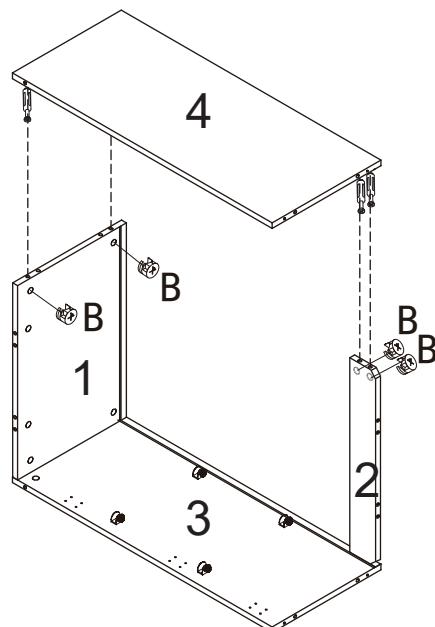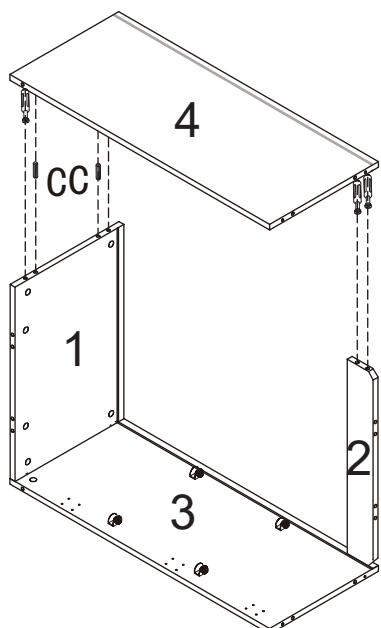

B*4




C*2



Ø 8 x 30 mm

4.

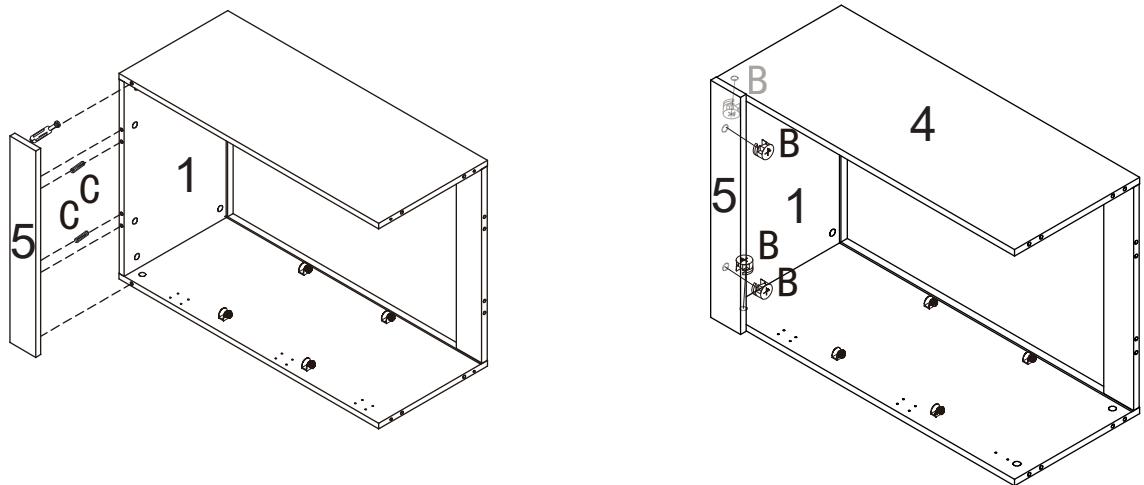

B*4




C*2




Ø8 x 30 mm

5.

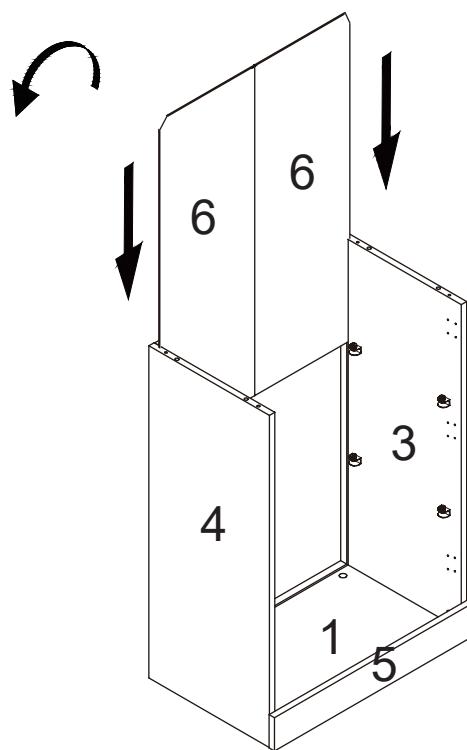

6.

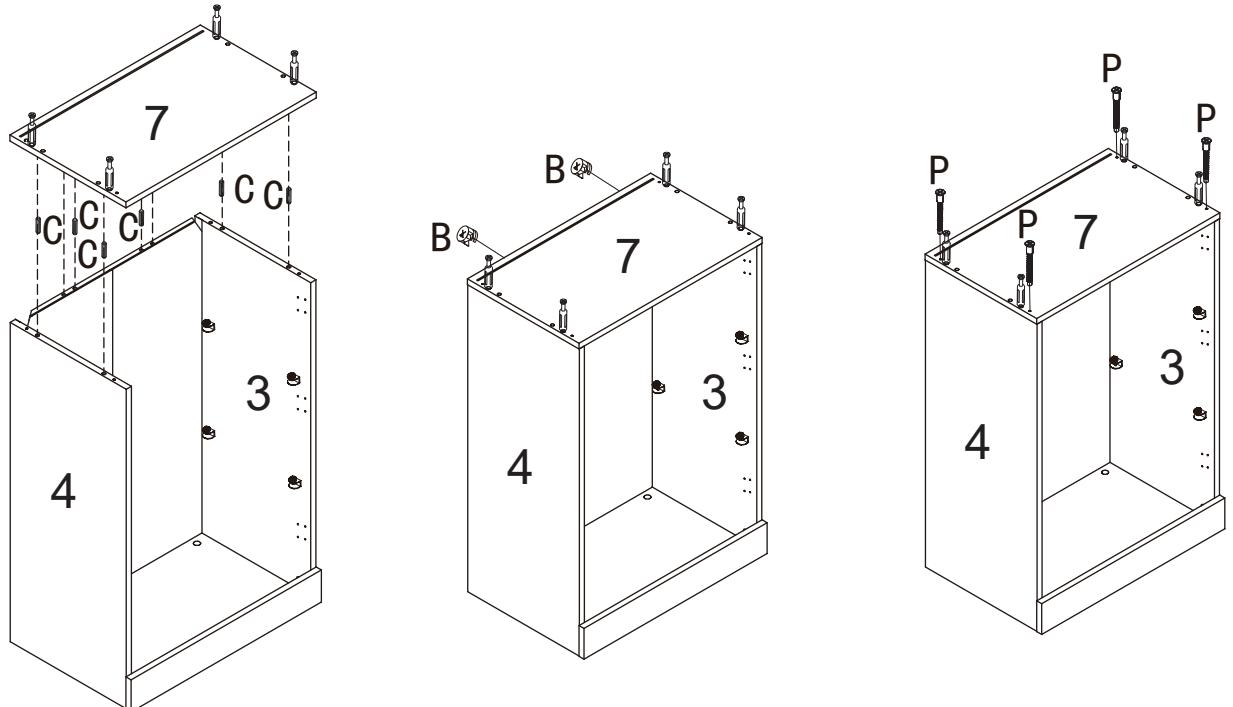

B*2



C*6




P*4



Ø 8 x 30 mm

Ø 5 x 40 mm

7.

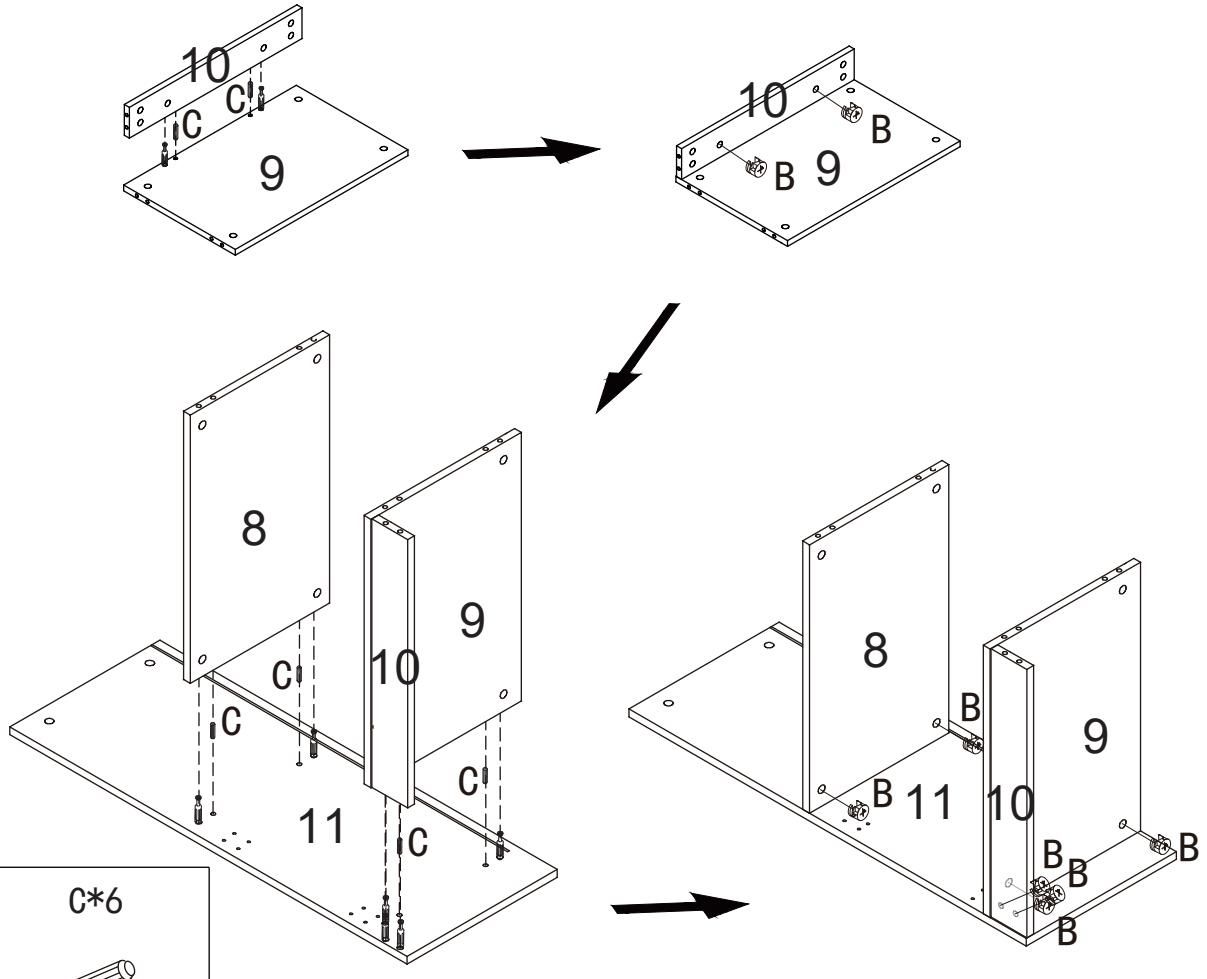

B*8




C*6



Ø 8 x 30 mm

8.

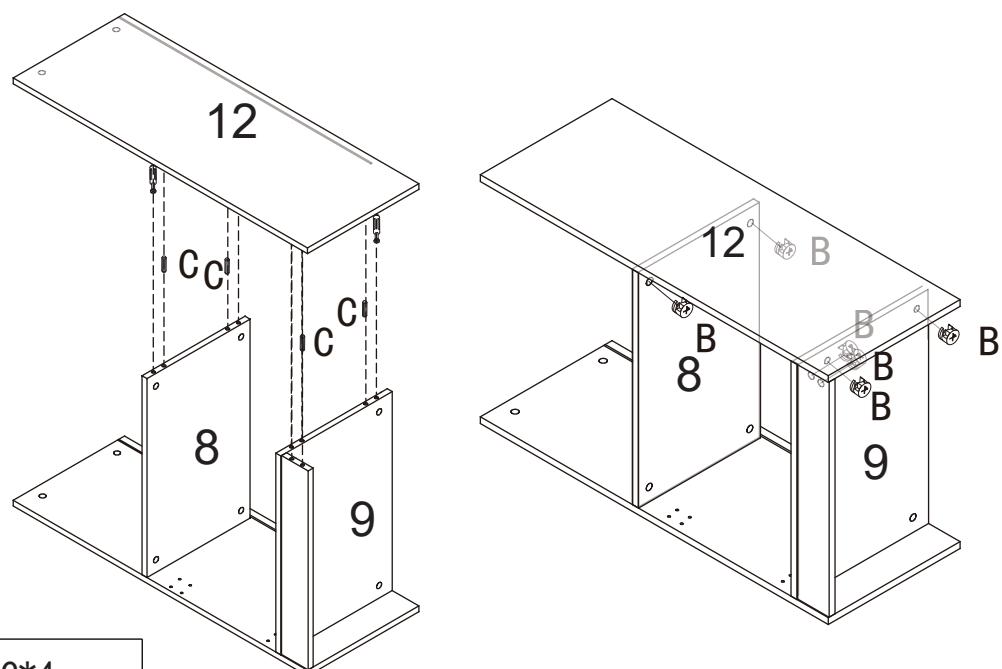

B*6




C*4



Ø 8 x 30 mm


9.

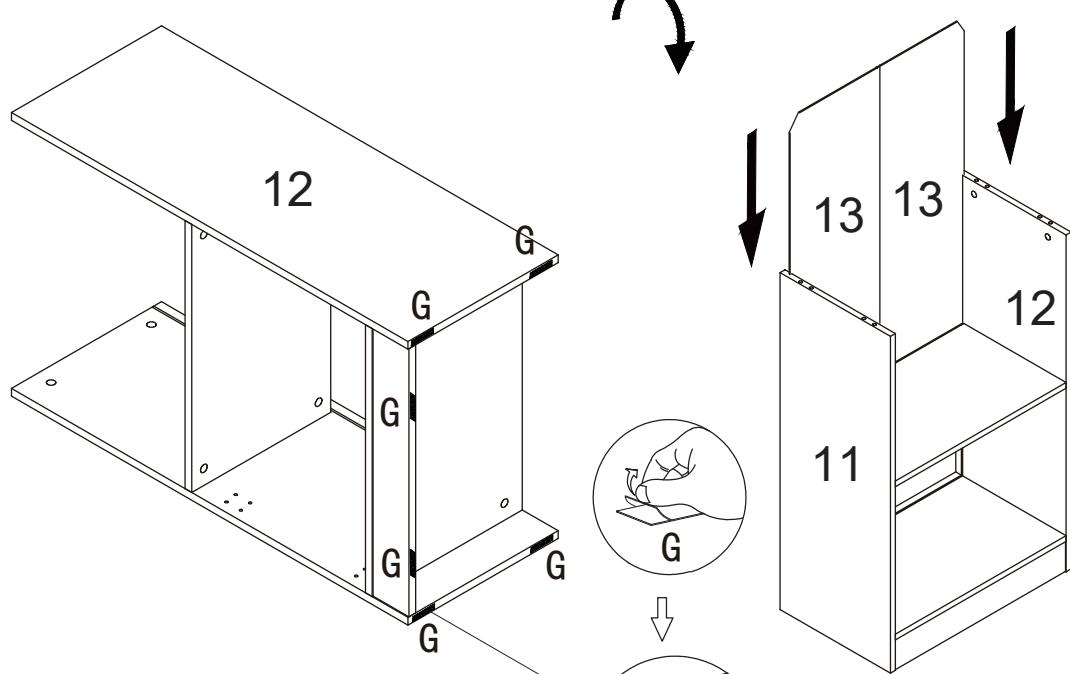

G*6




10.

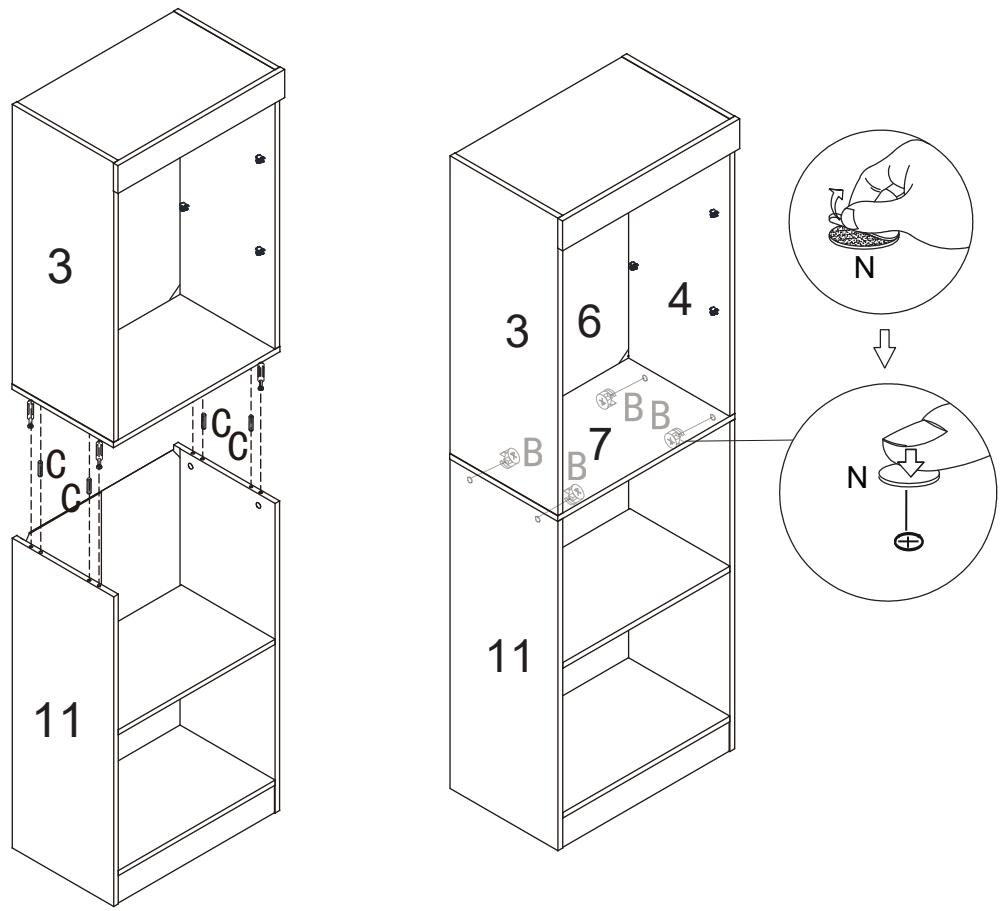


11.

Please put the strip light through the holes on the same side as No. 6 and No. 13 on the back panel, stick the top side of the No. 4 plate (to prevent obstruction of the glass), and press the bottom under the No. 7 board


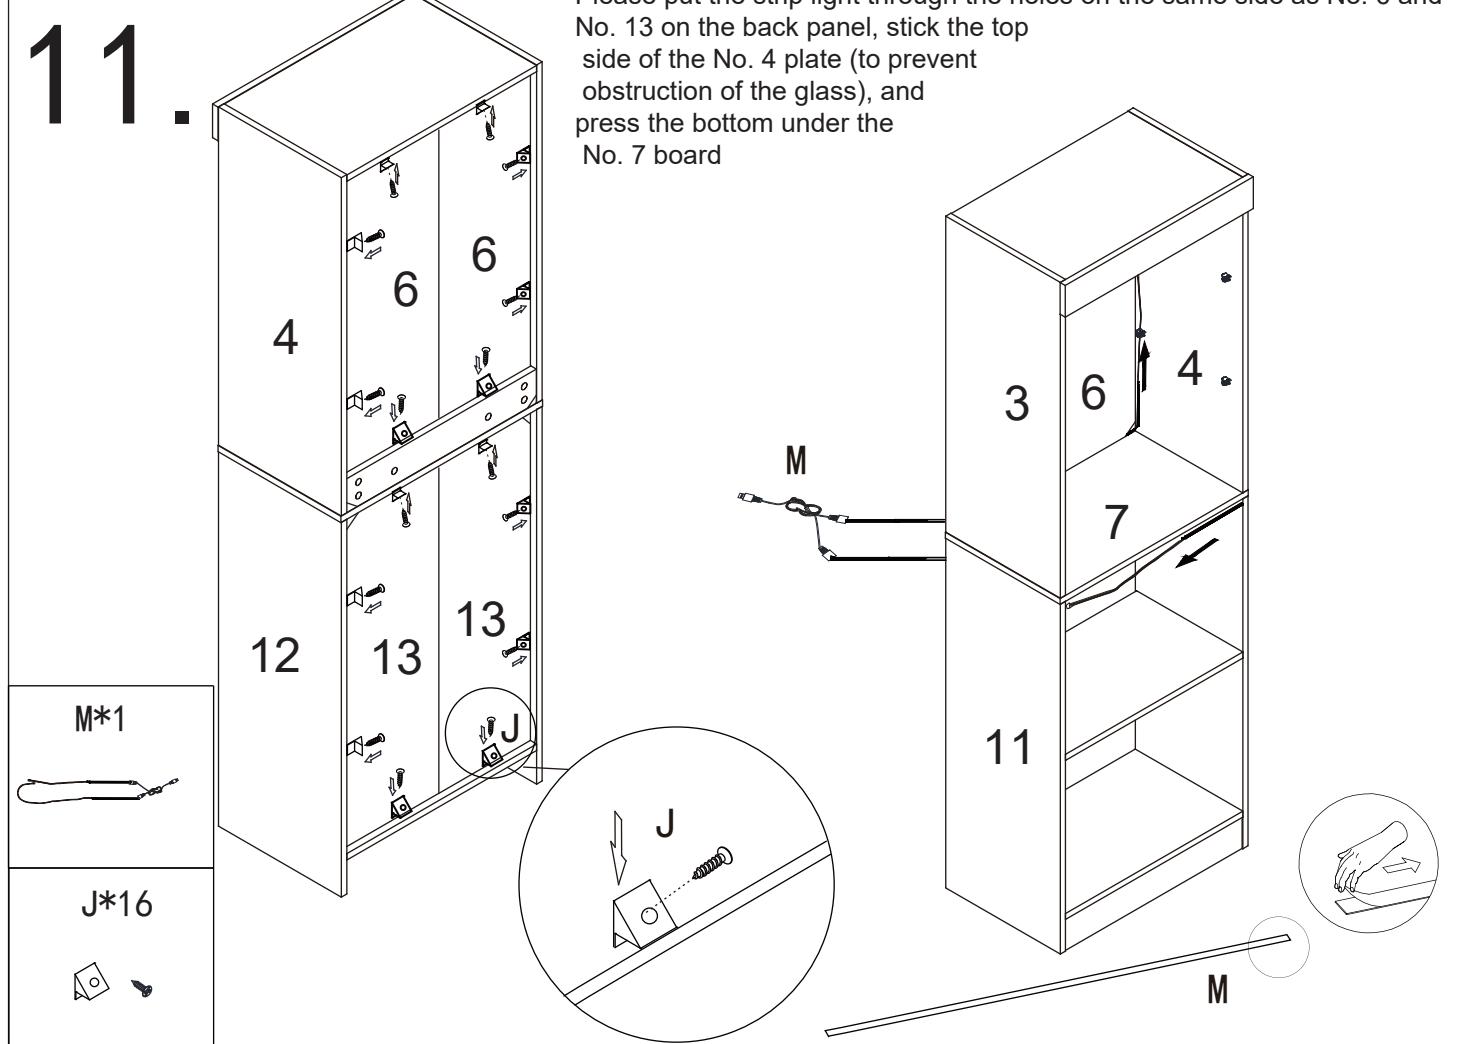


12.

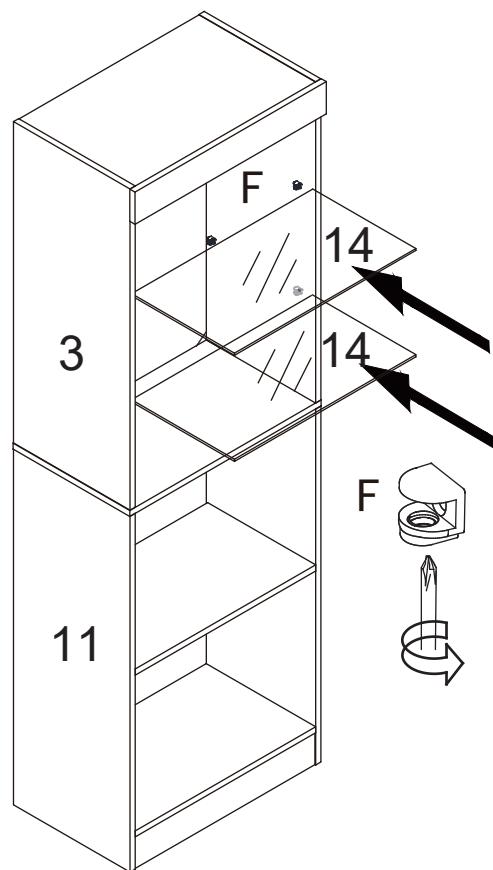


Please use a screwdriver to screw the bottom of the white shaft to fix the glass

13.

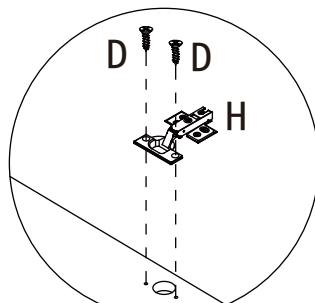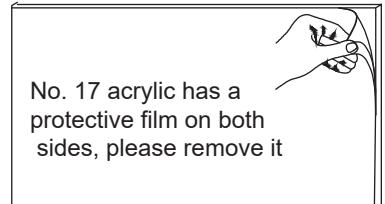

The top 17 is level with the 15 and 16 boards

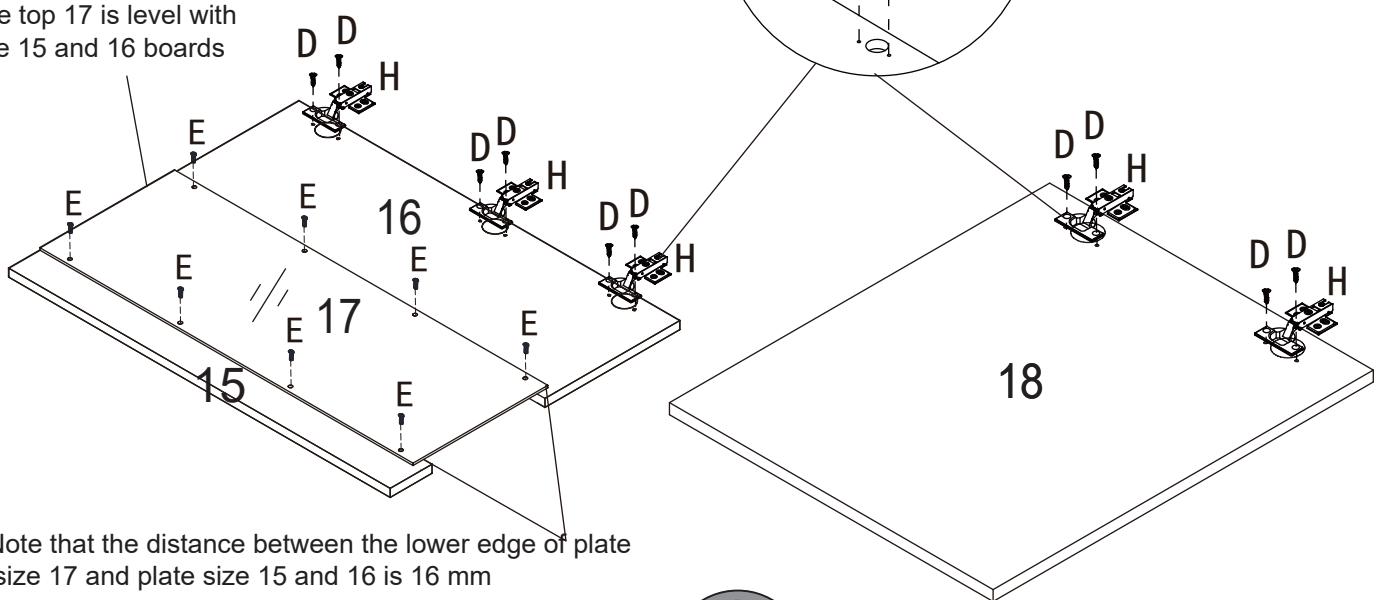

E*8



Ø6 x 12 mm

H*5











D*10



Ø3.5 x 14 mm



14.

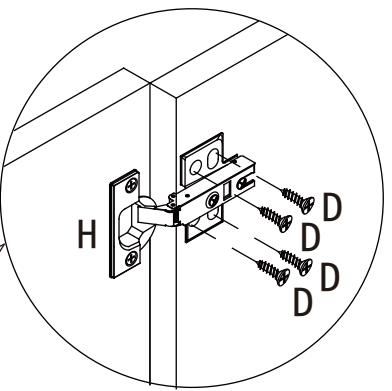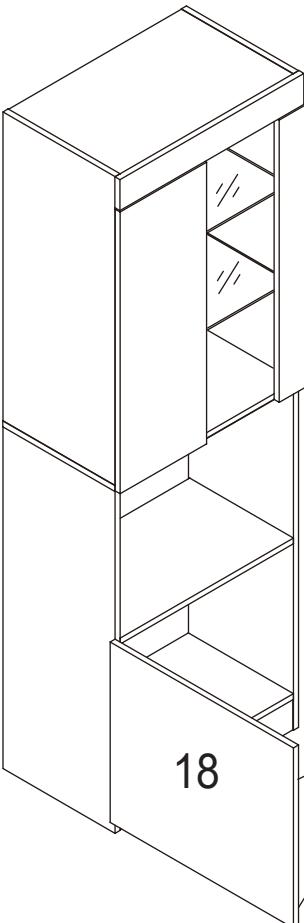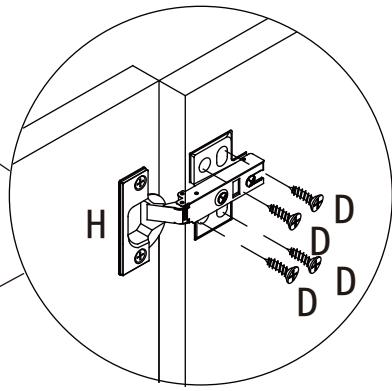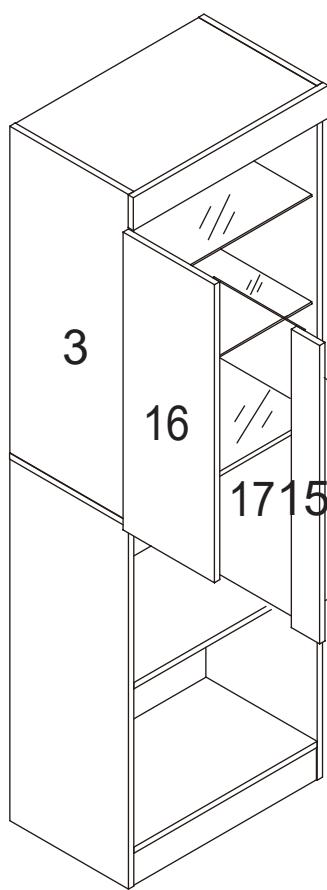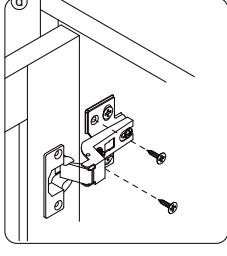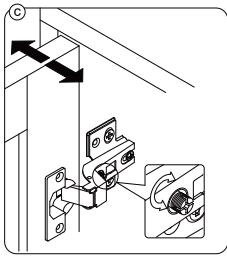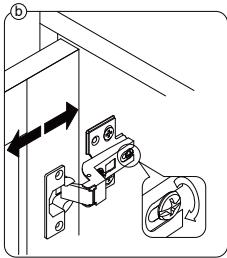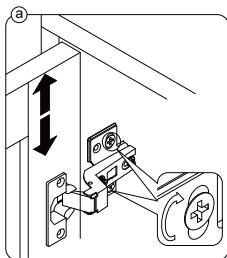


D*20




Ø3.5 x 14 mm

15.

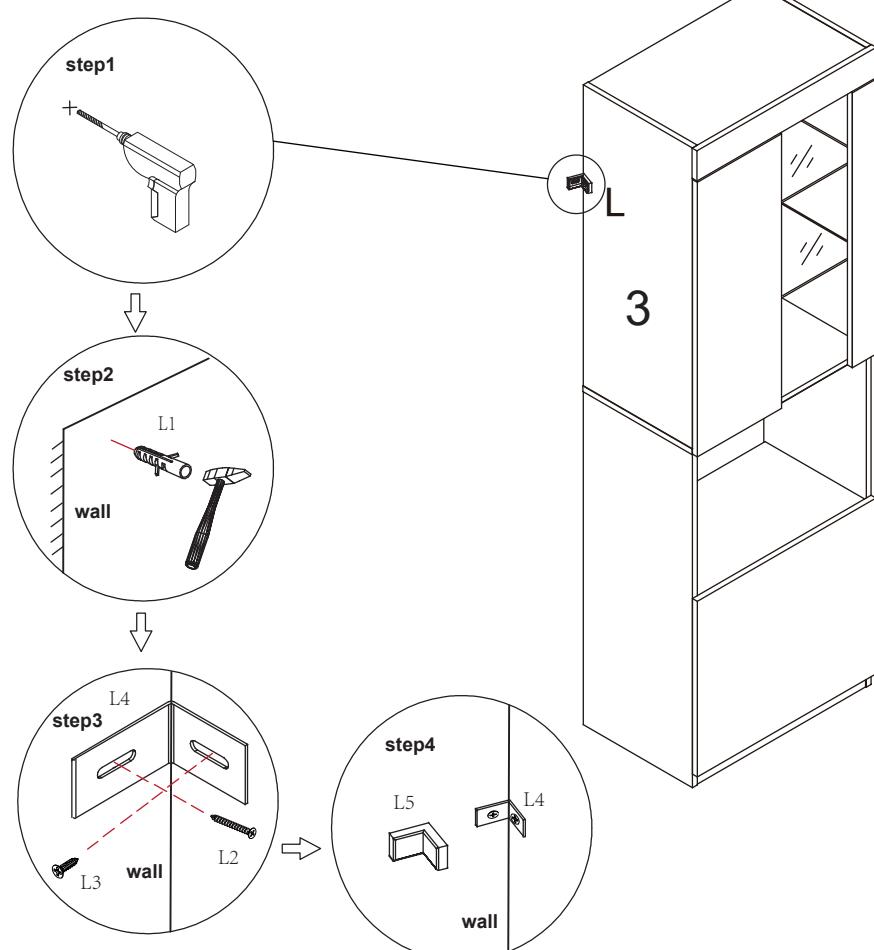

16.

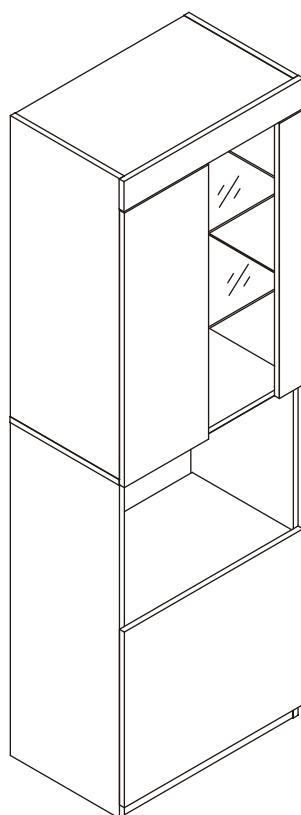


There is a protective film,
please tear it off.