


MORDEN FORT

G10 SERIES-sofa

ASSEMBLY INSTRUCTIONS

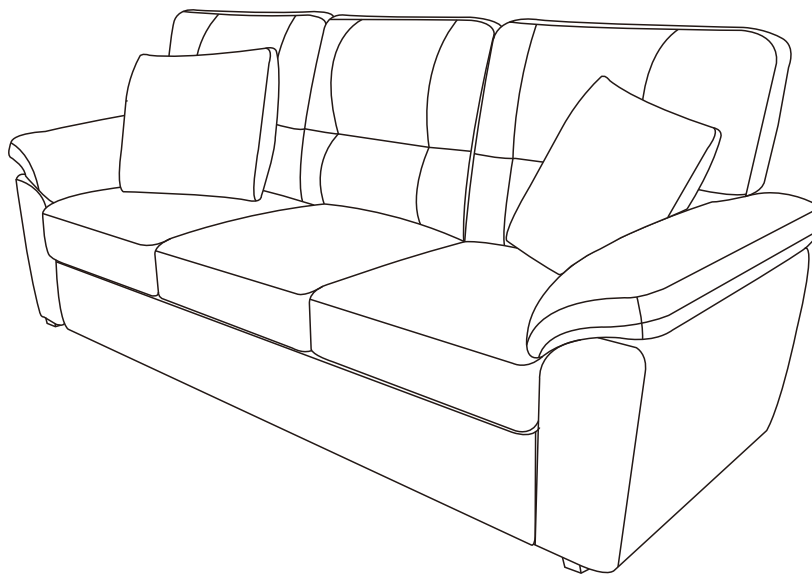

ITEM: G10 SERIES-sofa


ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.









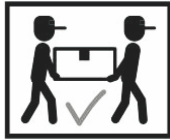


WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME 12 MINUTES


Sofa is packed in 2 cases

CARTON	PARTS IDENTIFICATION		QUANTITY
SOFA-S2	A	 SEAT BACK BOTTON RAIL	1PC
	B	 SEAT FRONT BOTTON RAIL	1PC
	G	 BACK FRAM	1PC
SOFA-S1	C	 LAFT BACK CUSHION	1PC
	D	 MIDDLE BACK CUSHION	1PC
	E	 RIGHT BACK CUSHION	1PC
	F	 SEAT BASE	1PC
	H	 LEGS	4PCS
ARM	I	 LEFT ARM	1PC
	J	 RIGHT ARM	1PC
	K	 PILLOWS	2PCS

ITEM: G10 SERIES-sofa

ASSEMBLY INSTRUCTIONS


STEP 1

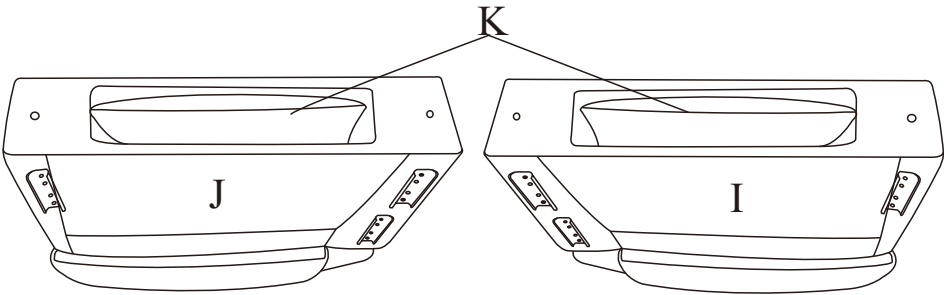

PILLOWS TAKE OUT FROM ARM INSIDE

STEP 2


Install A first then install B.

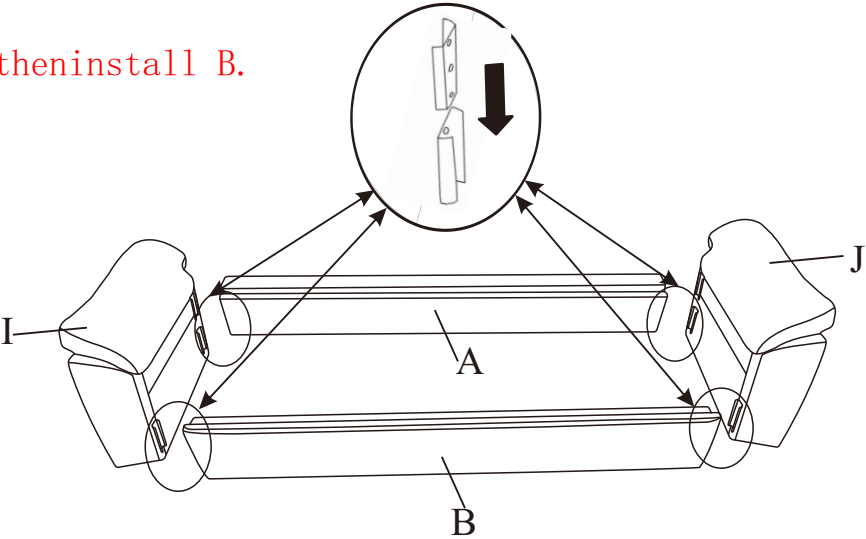

ITEM: G10 SERIES-sofa


ASSEMBLY INSTRUCTIONS

STEP 3

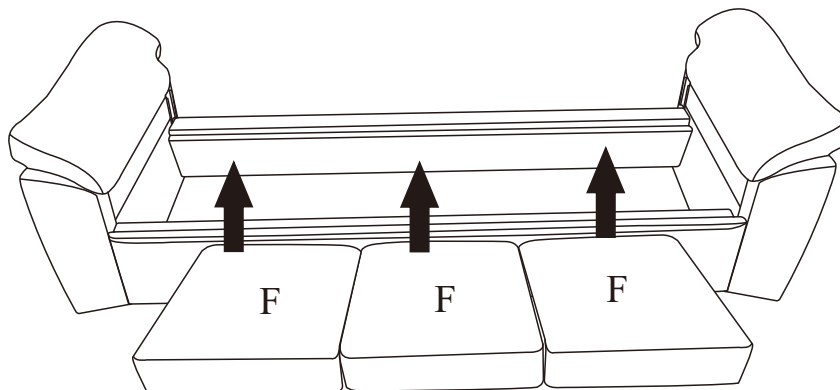


STEP 4

When assemble the back and arm together, please align and connect the both sides clips first, and then press the sofa back down in place.

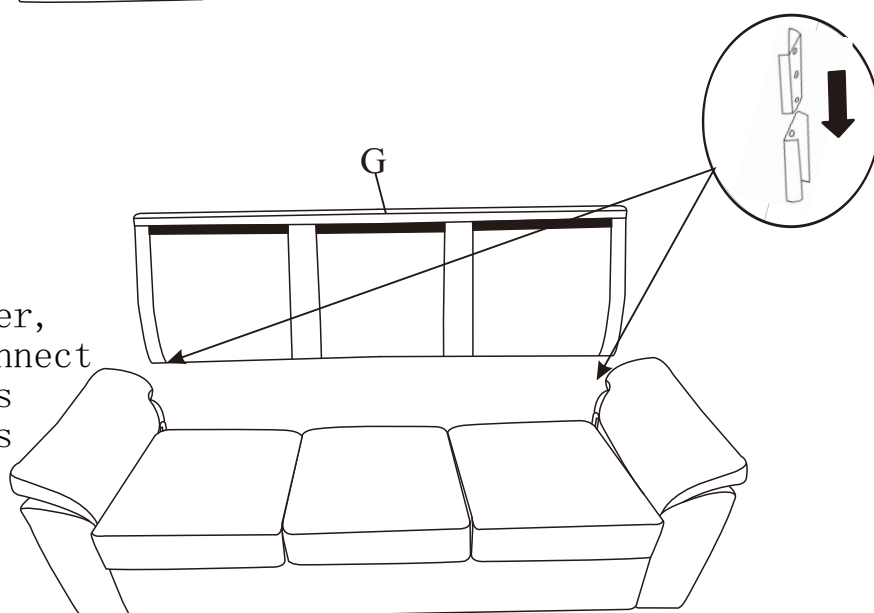


STEP 5

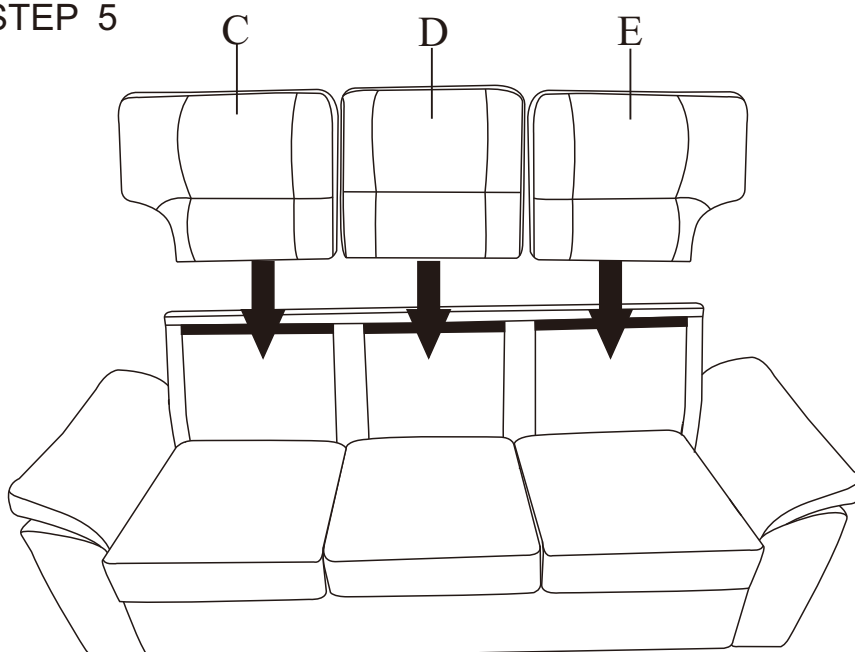

ITEM: G10 SERIES-sofa

ASSEMBLY INSTRUCTIONS

STEP 6

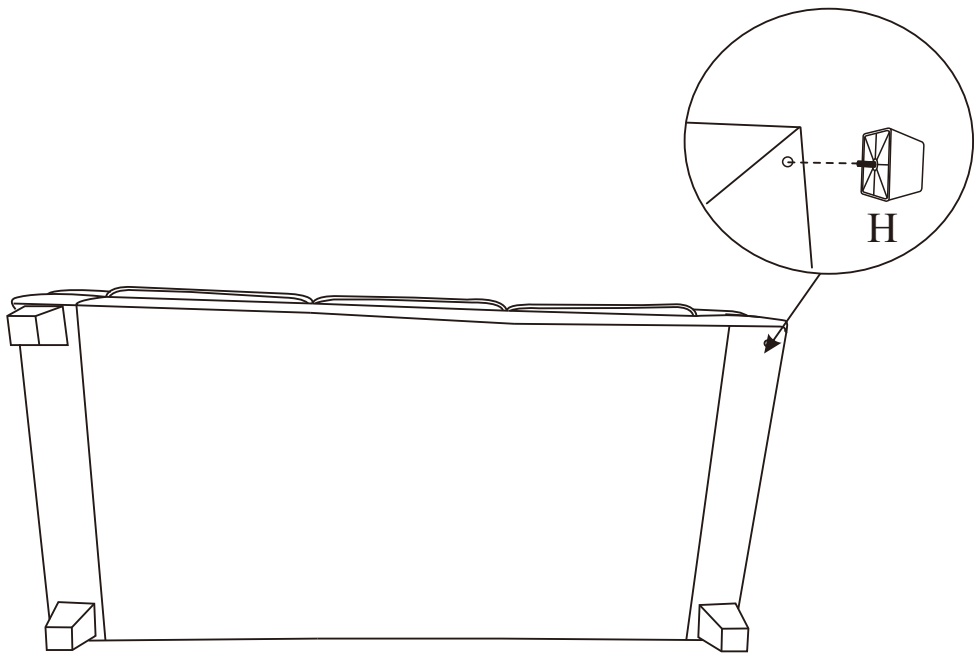

STEP 7

