


BDCHTC


Assembly Instructions

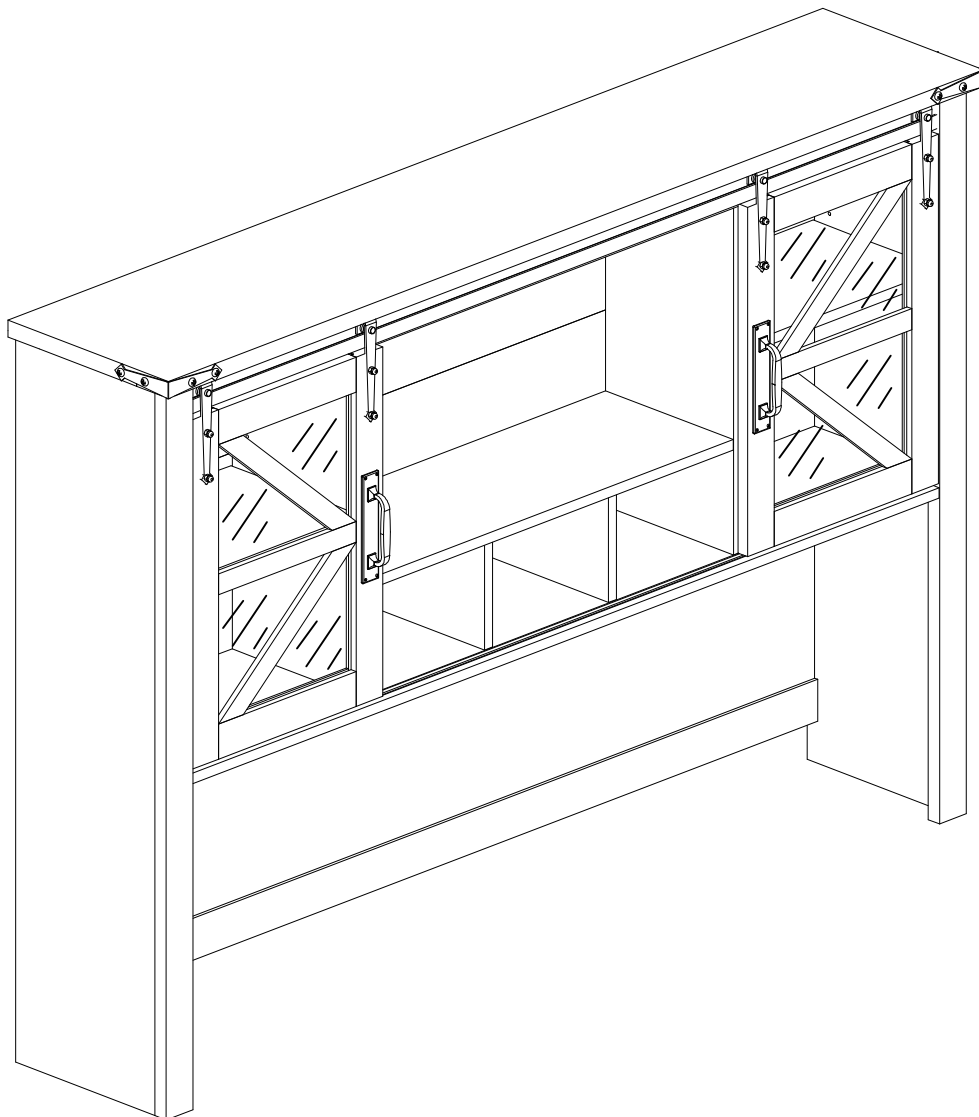


V1

General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- VI. A Phillips head screwdriver is required for the assembly of this product .

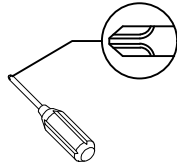

- V. The provided glue is to secure wood dowels in place . When first inserting dowels , locate the appropriate hole for the dowel , place a small amount of glue in the hole and insert the dowel . Wipe away excess glue immediately.

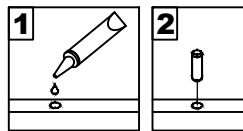


In future assembly steps when dowels are necessary to attach assembly parts together , place a small amount of glue on the end of the dowel before attaching parts together . Wipe away excess glue immediately.

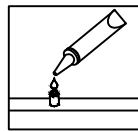


VI. HOW THE KNOCK DOWN (KD) ASSEMBLY SYSTEM WORKS


- 1.Screw the Cam Bolt into the pre-drilled hole on the panel. Make sure Cam Bolt goes into the pre-drilled hole on the end of panel for Cam Lock.
- 2.Insert the Cam Lock into the pre-drilled large hole on the panel. Make sure the arrow on the face of Cam Lock points towards Cam Bolt.
- 3.Take a Phillips screwdriver and rotate the Cam Lock clockwise to lock the Cam Bolt.
- 4.Use the sticker to conceal the Cam.

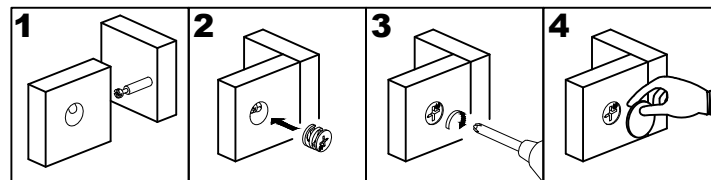


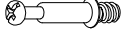


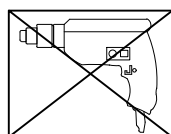




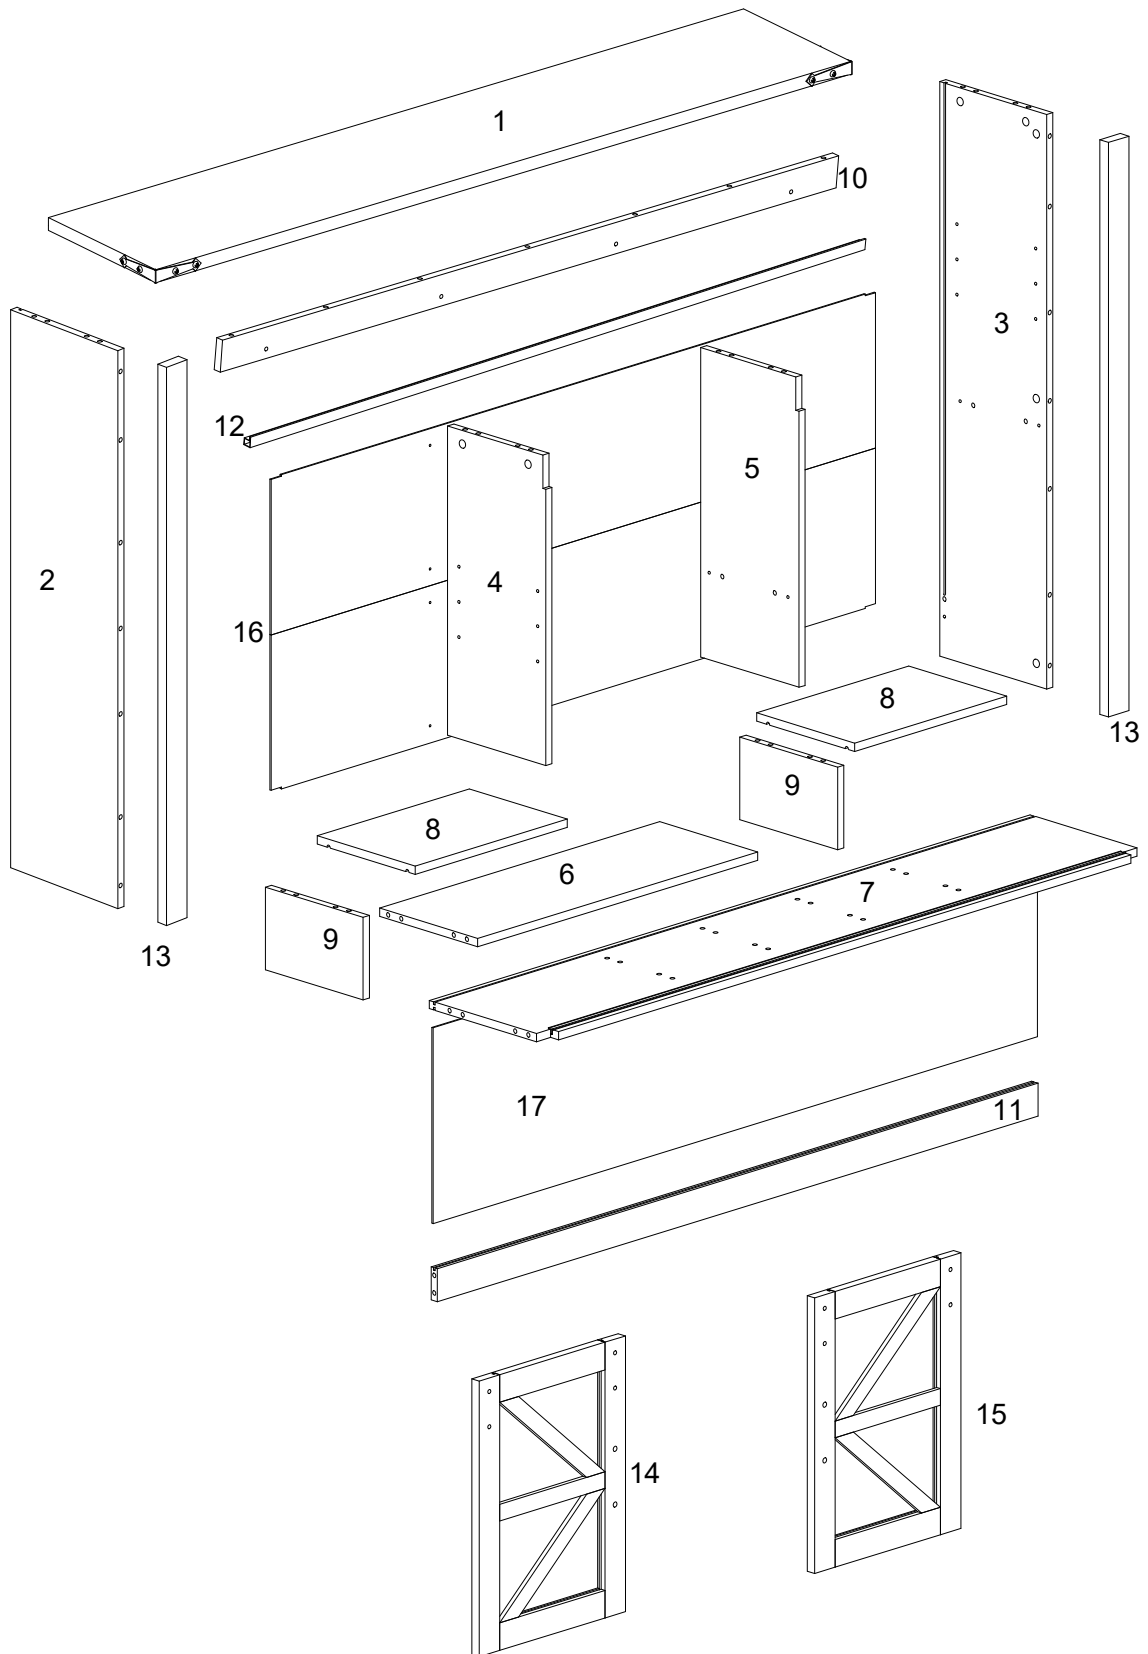



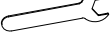

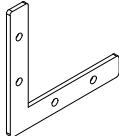
- VII. Power tools should not be used to assemble this product .

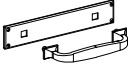


Parts List




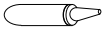



Hardware List


A		Ø8x30mm	Dowel	41 pcs
B		Ø6x35mm	Cam Bolt	32 pcs
C		Ø15x12mm	Cam Lock	32 pcs
D		Ø30mm	Cam Cover	32 pcs
E			Handle	2 pcs
F		Ø4x16mm	Handle bolt	4 pcs
G		Ø8x5x16mm	Shelf support pin	8 pcs
H		Ø6x50mm	Screw	8 pcs
I			Pulley	4 pcs
J			Nut	8 pcs
K		1/4x25mm	Bolt	12 pcs
L			Plate	4 pcs
M		Ø4x12mm	Screw	16 pcs
N			Wrench	1 pc
O		Ø4x28mm	Screw	8 pcs
P			L-Bracket	2 pcs

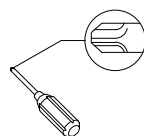

Philips head screwdriver required for assembly
(not included)


Hardware List

Q		M4	Allen Wrench	1 pc
R			Glue Tube	1 pc
S			Plastic Wedge	28 pcs
T		Ø3x17mm	Flat-head Screw	28 pcs
U			Tipping Restraint Hardware	2 sets

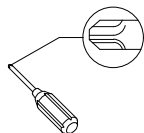


Philips head screwdriver required for assembly
(not included)


Step 1

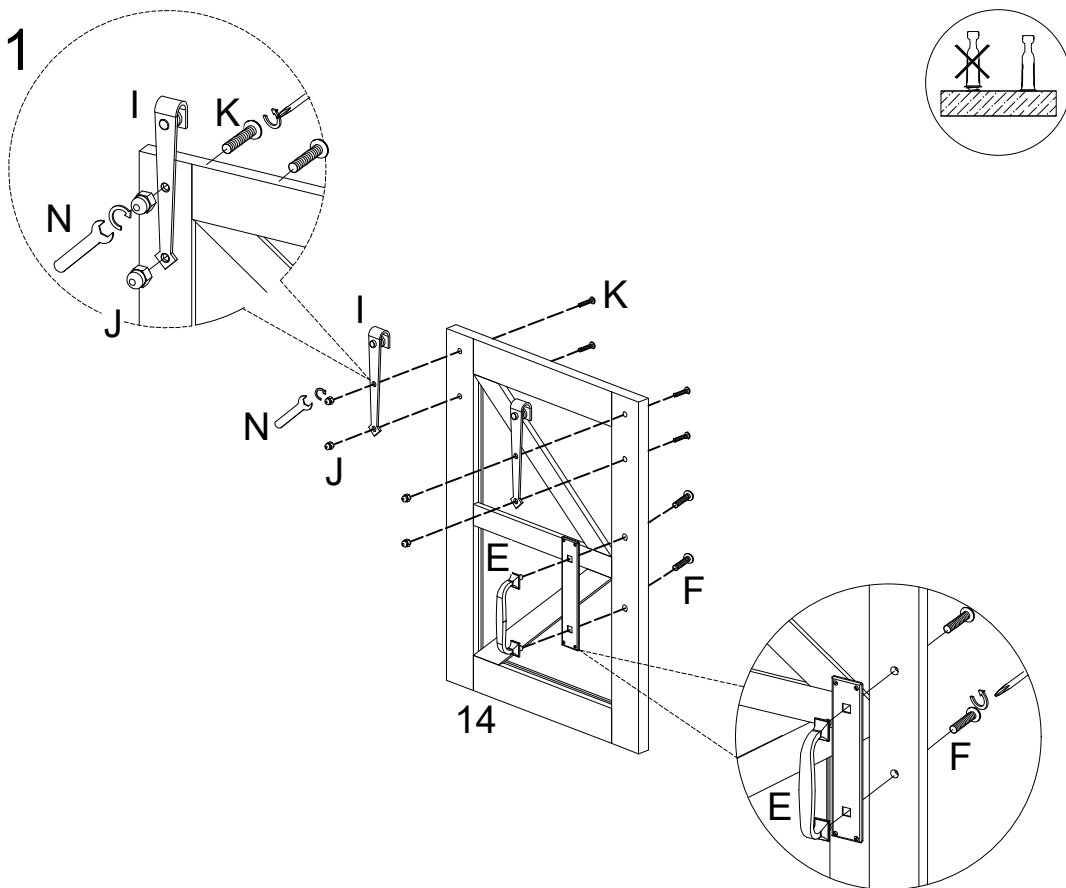


Step 2

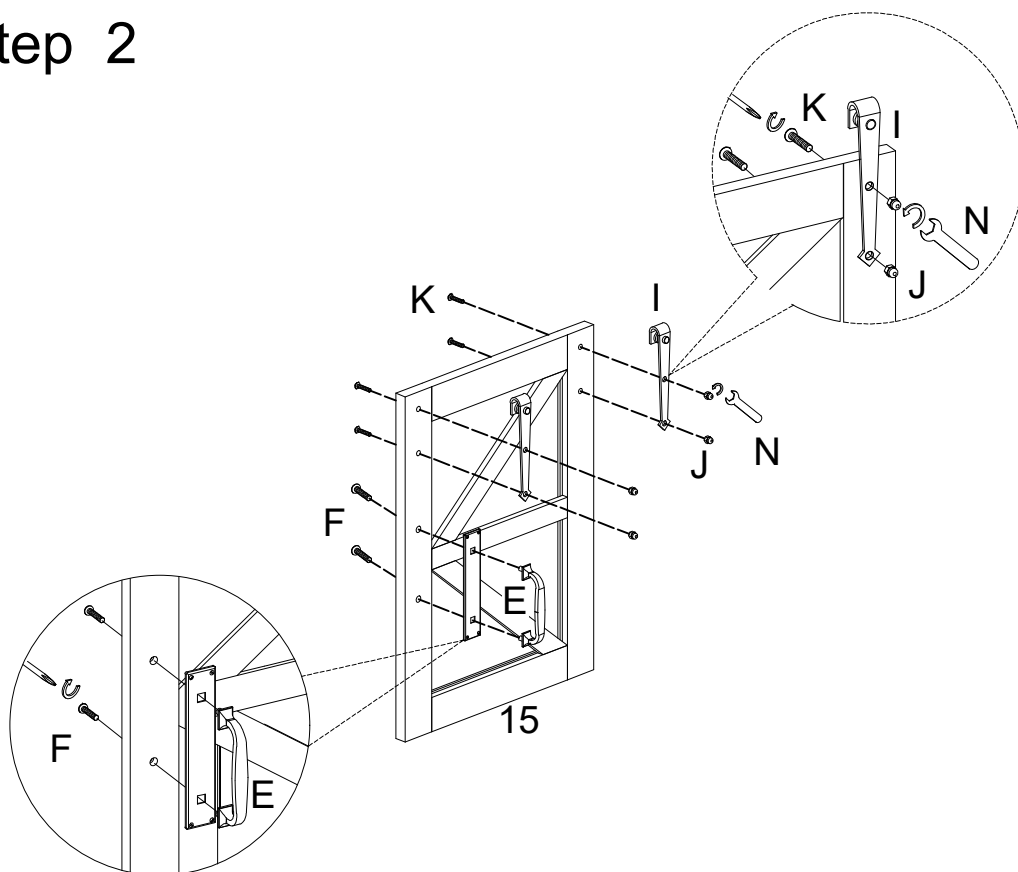


Step 3

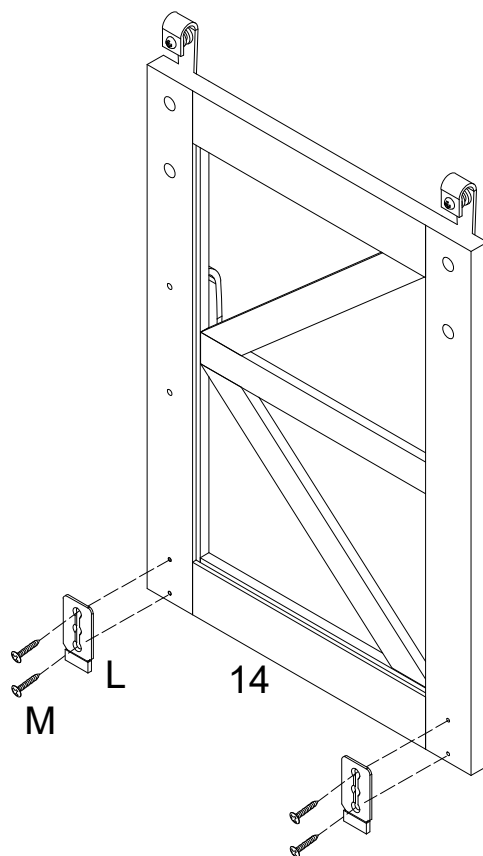


Step 4

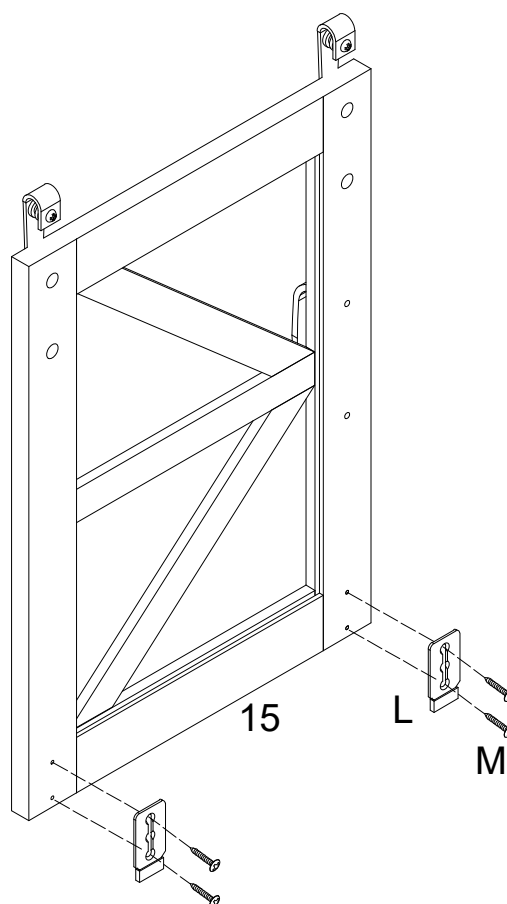


Step 5

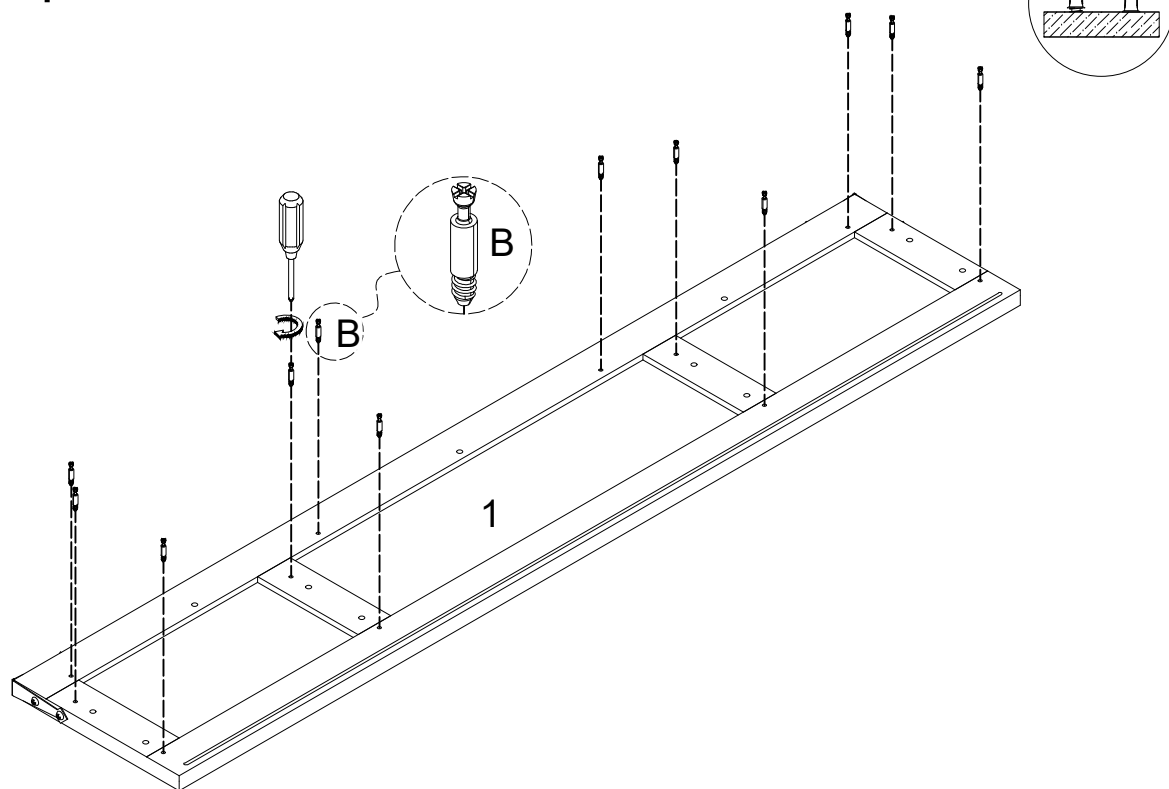


Step 6

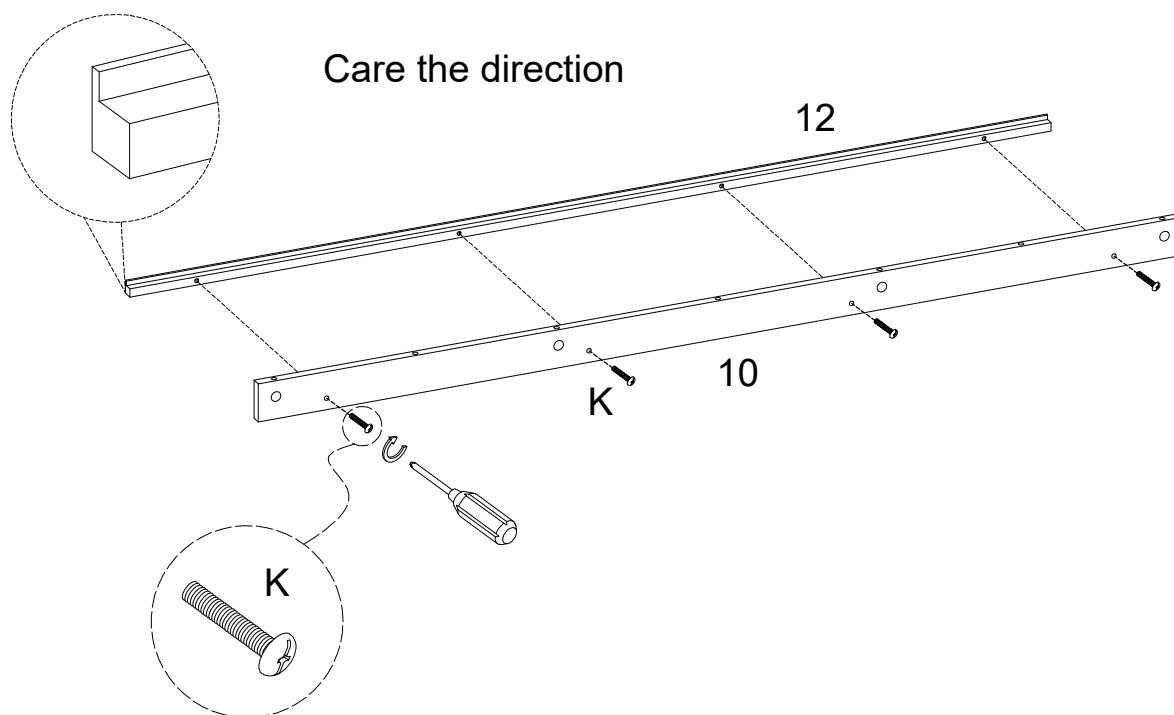

Step 7


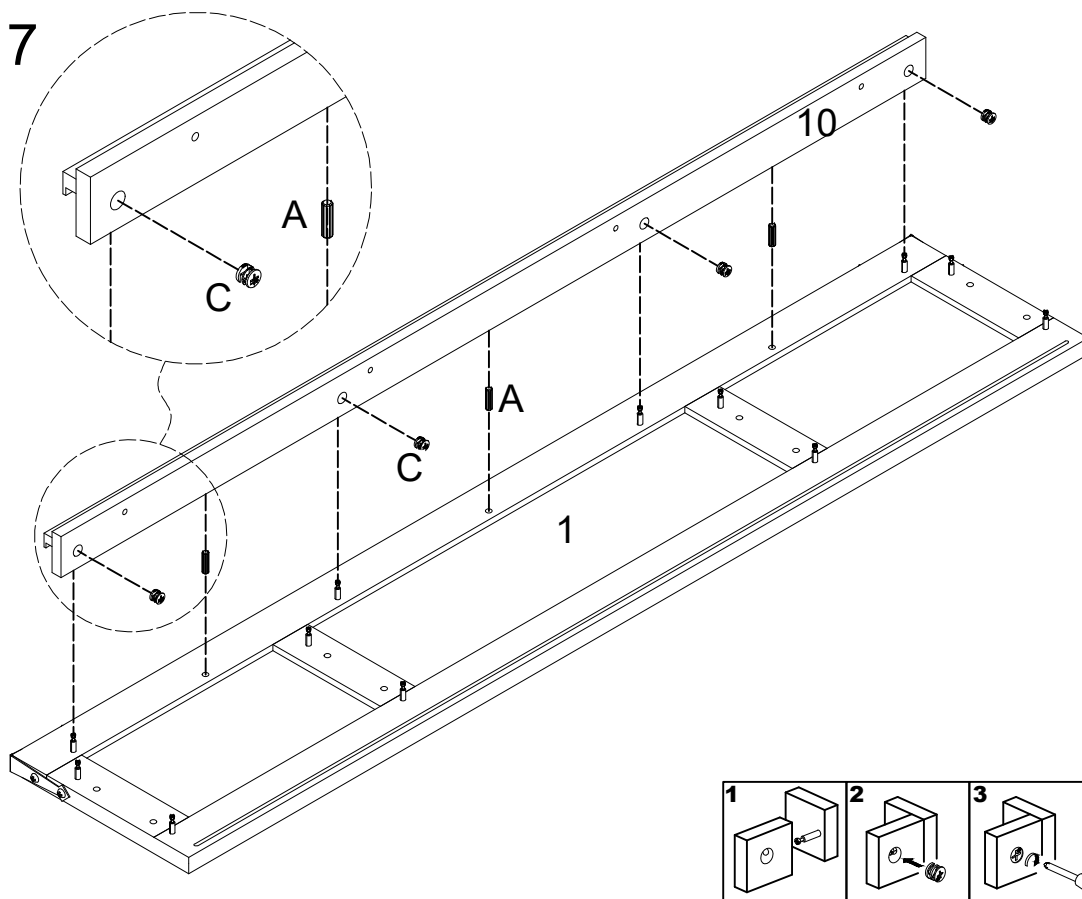


Step 8


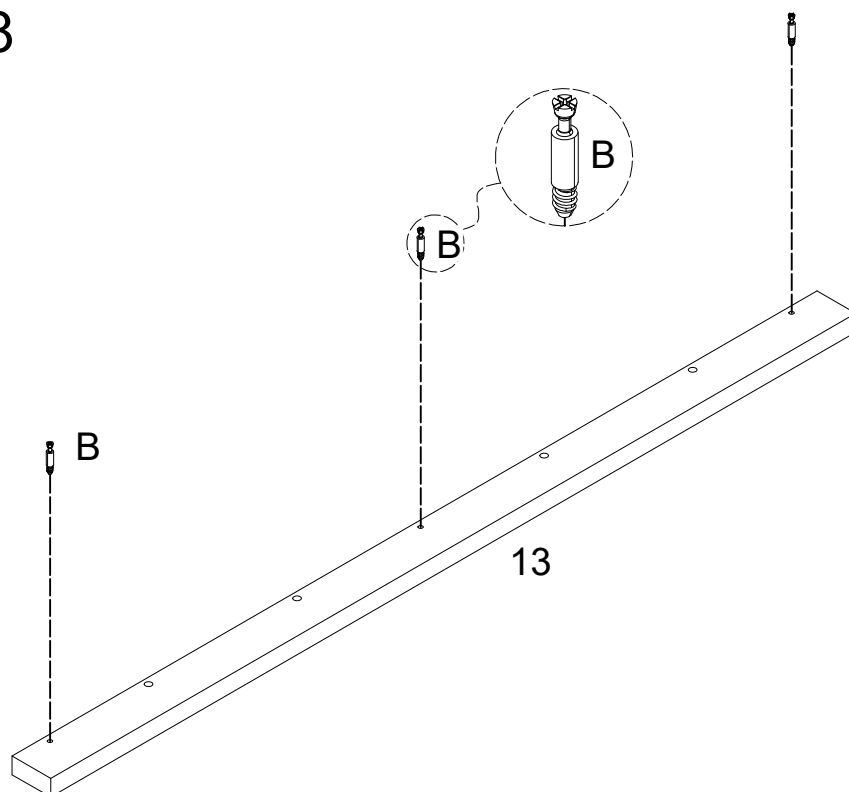


X2


Step 9

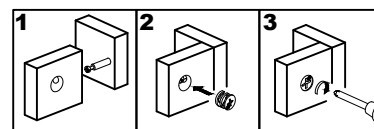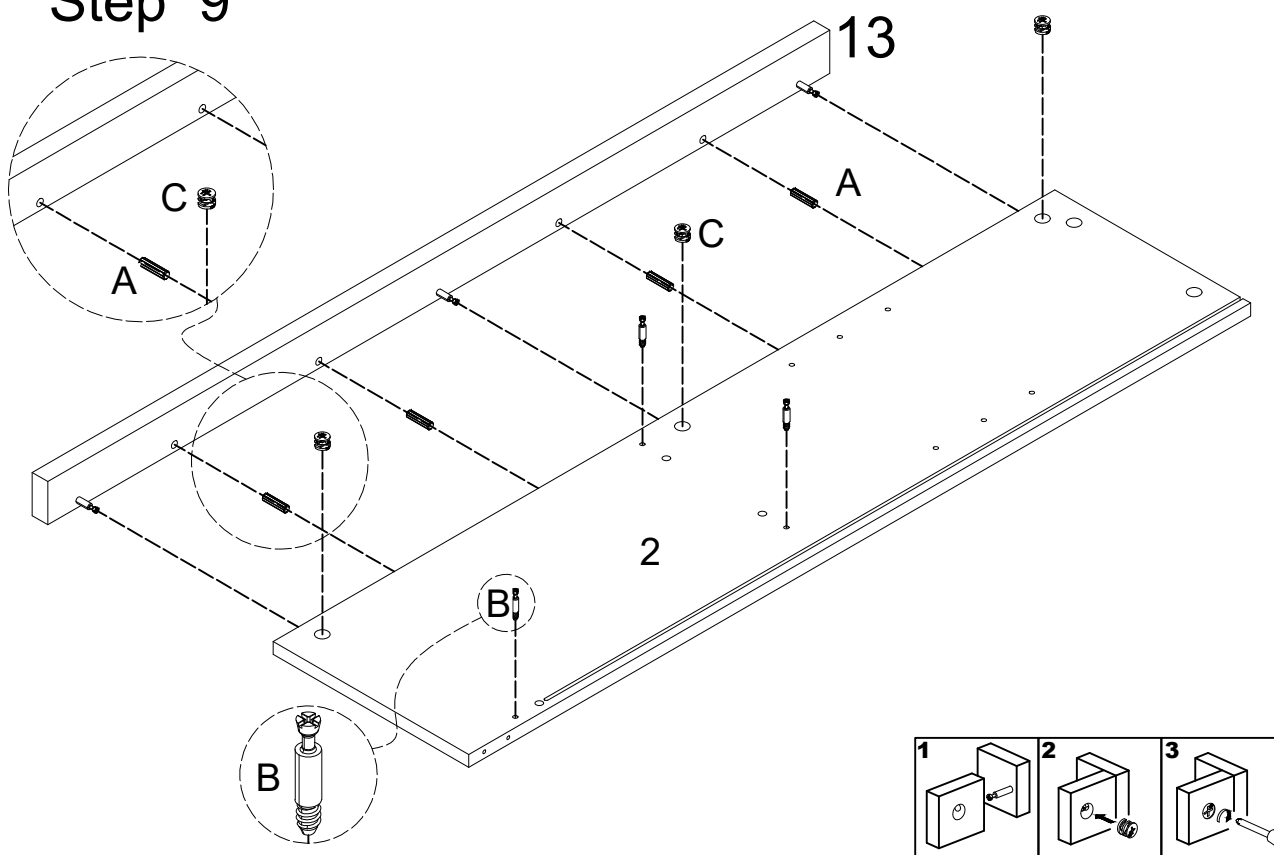


Step 10

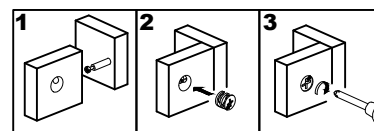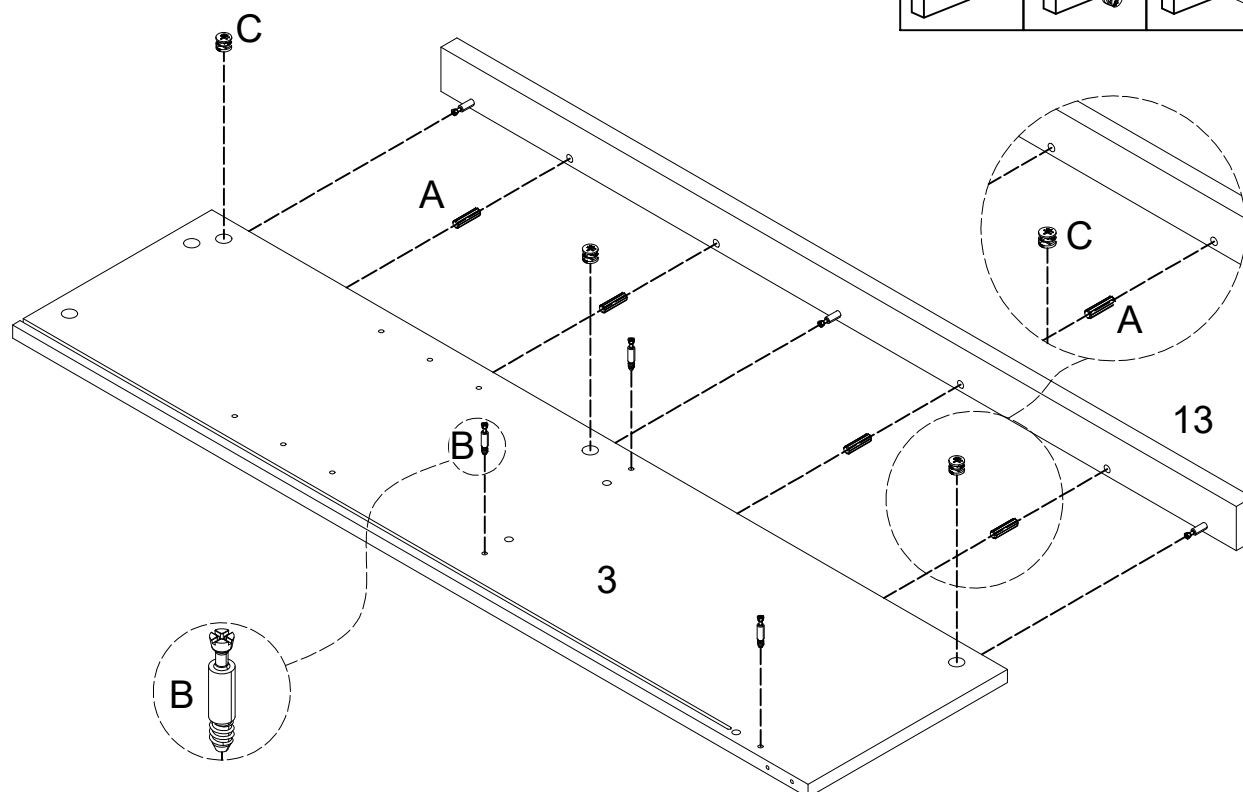


Step 11

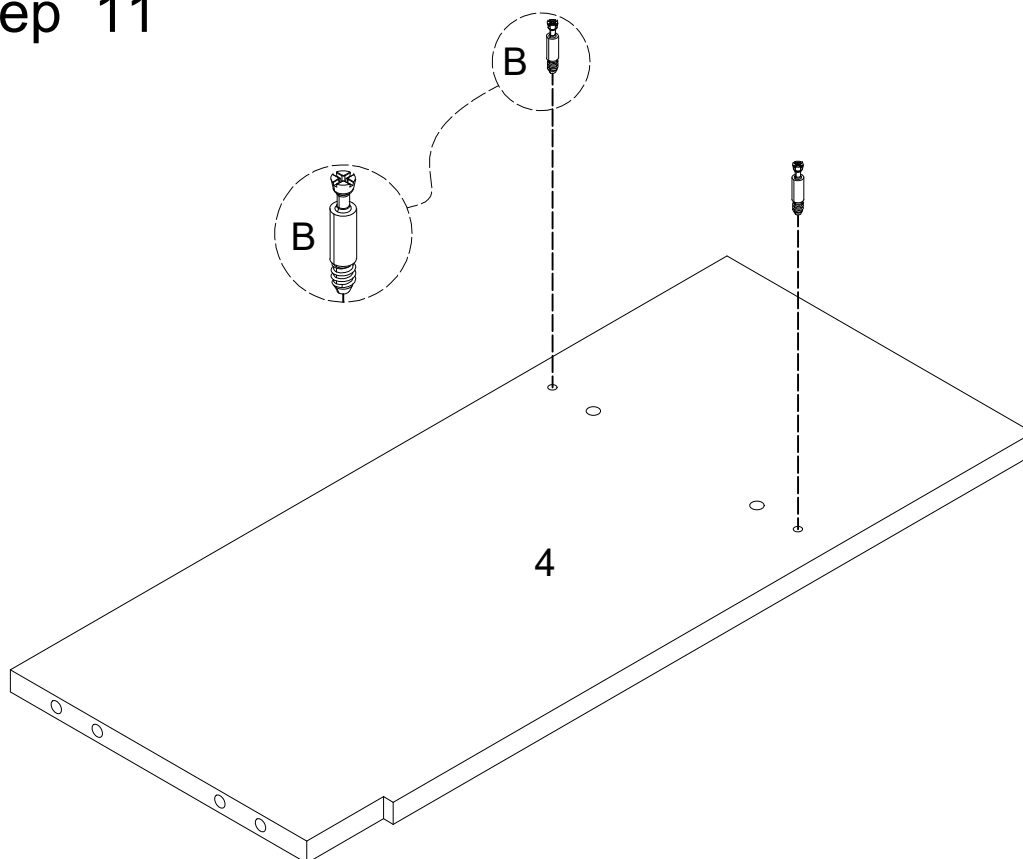



Step 12

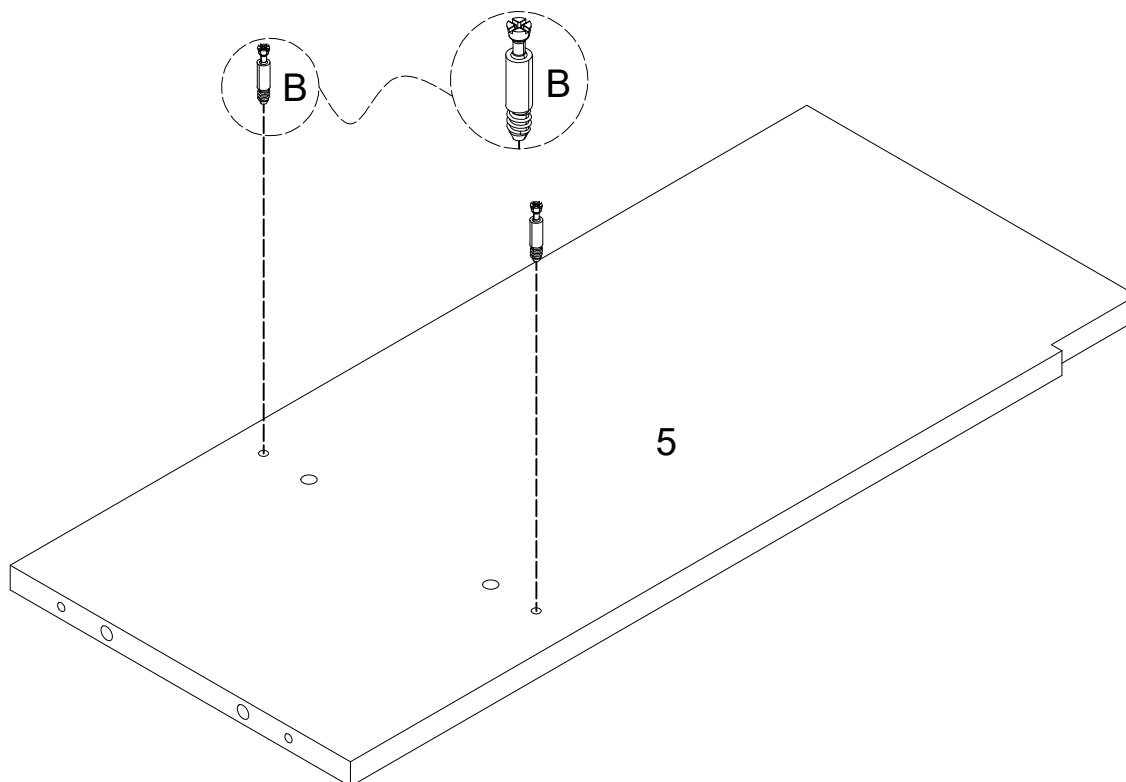


Step 13

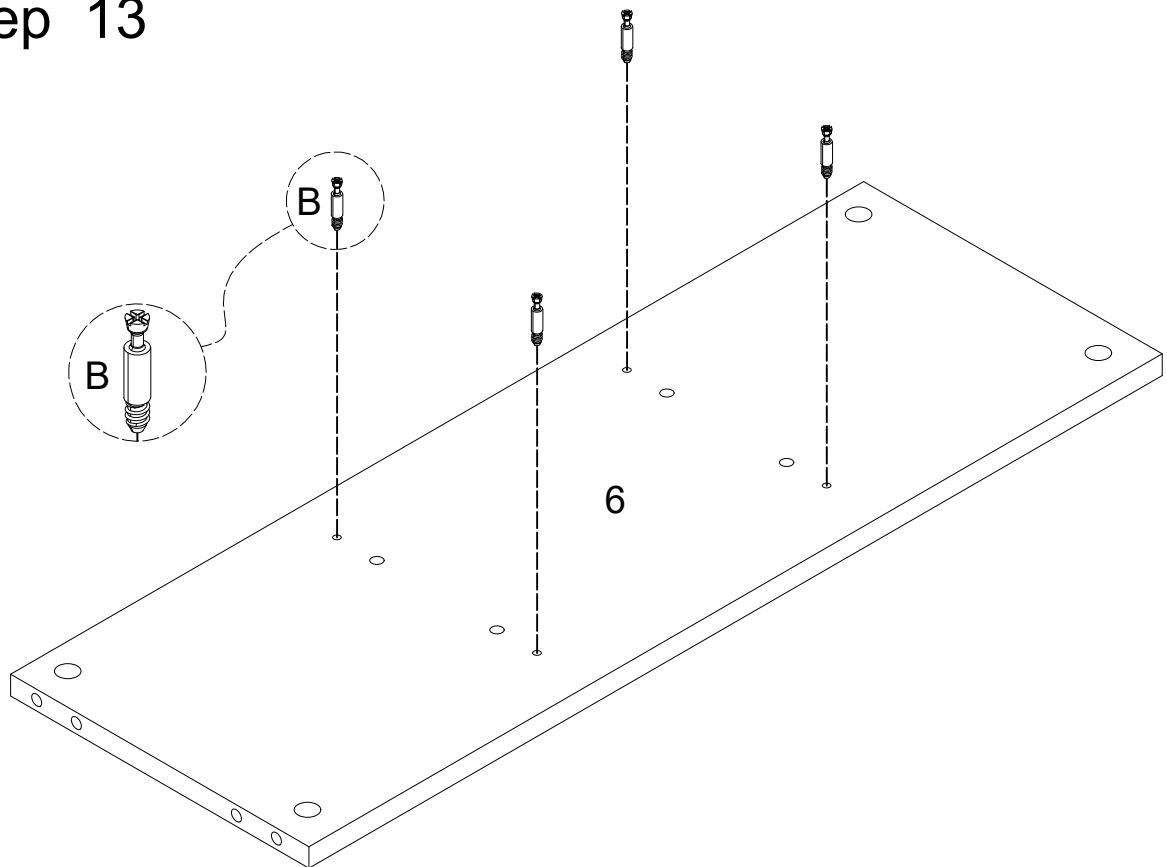


Step 14

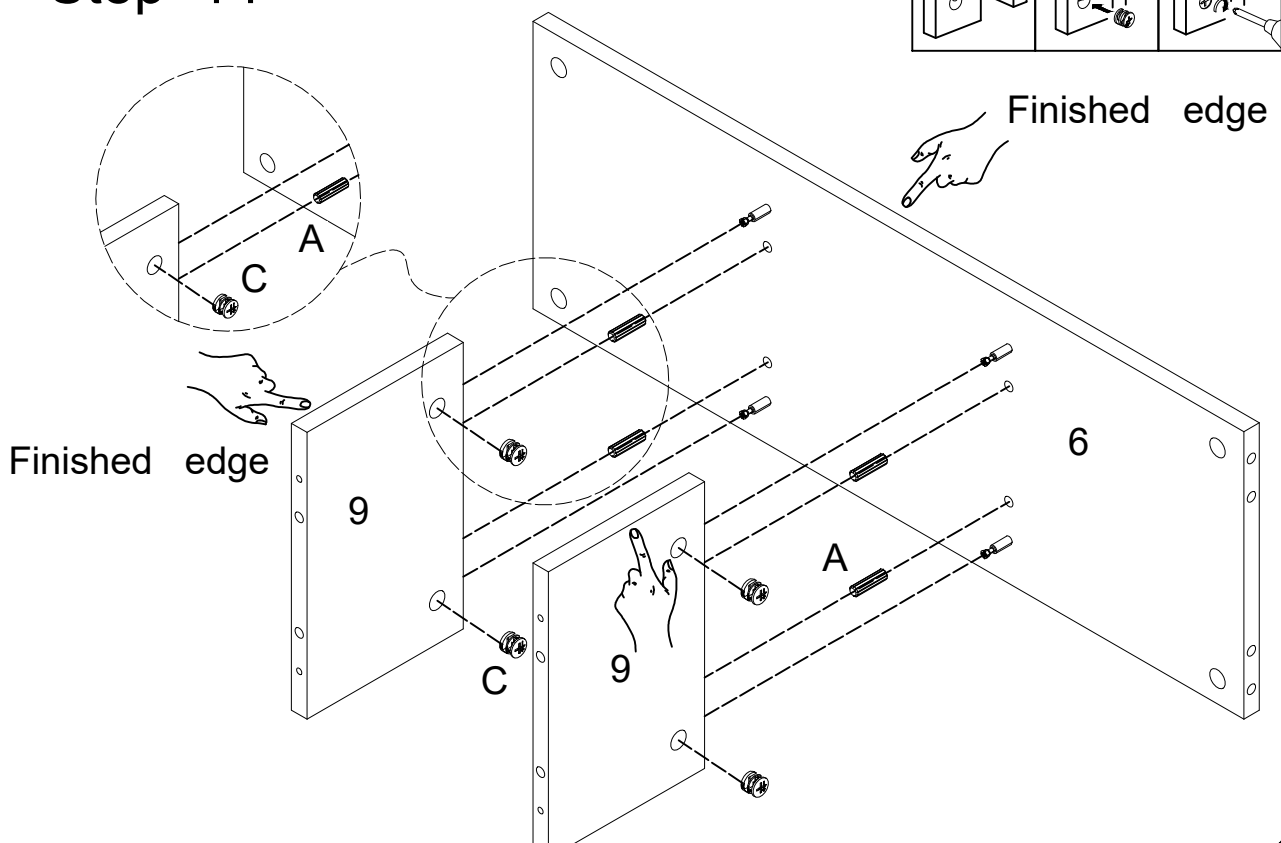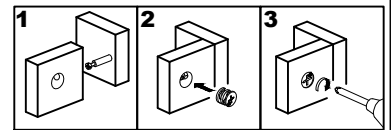


Step 15

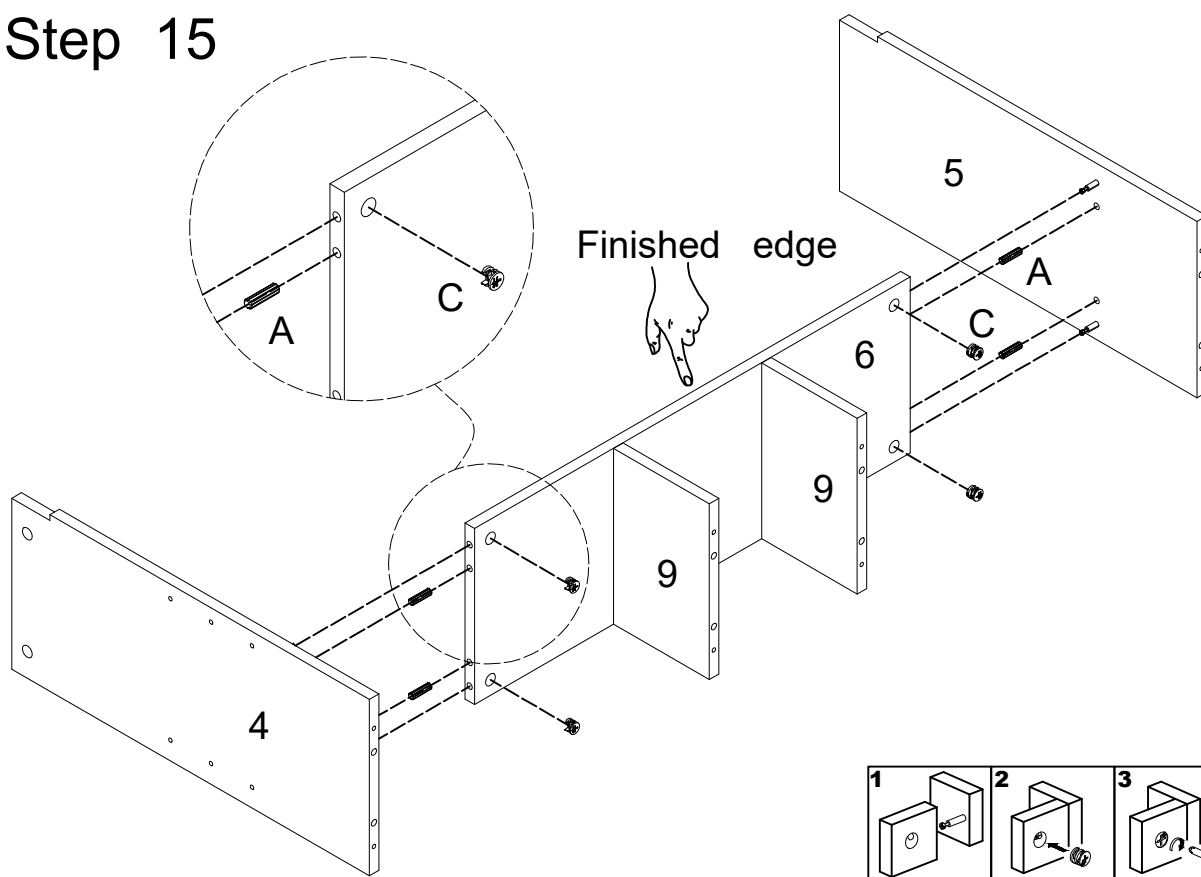


Step 16

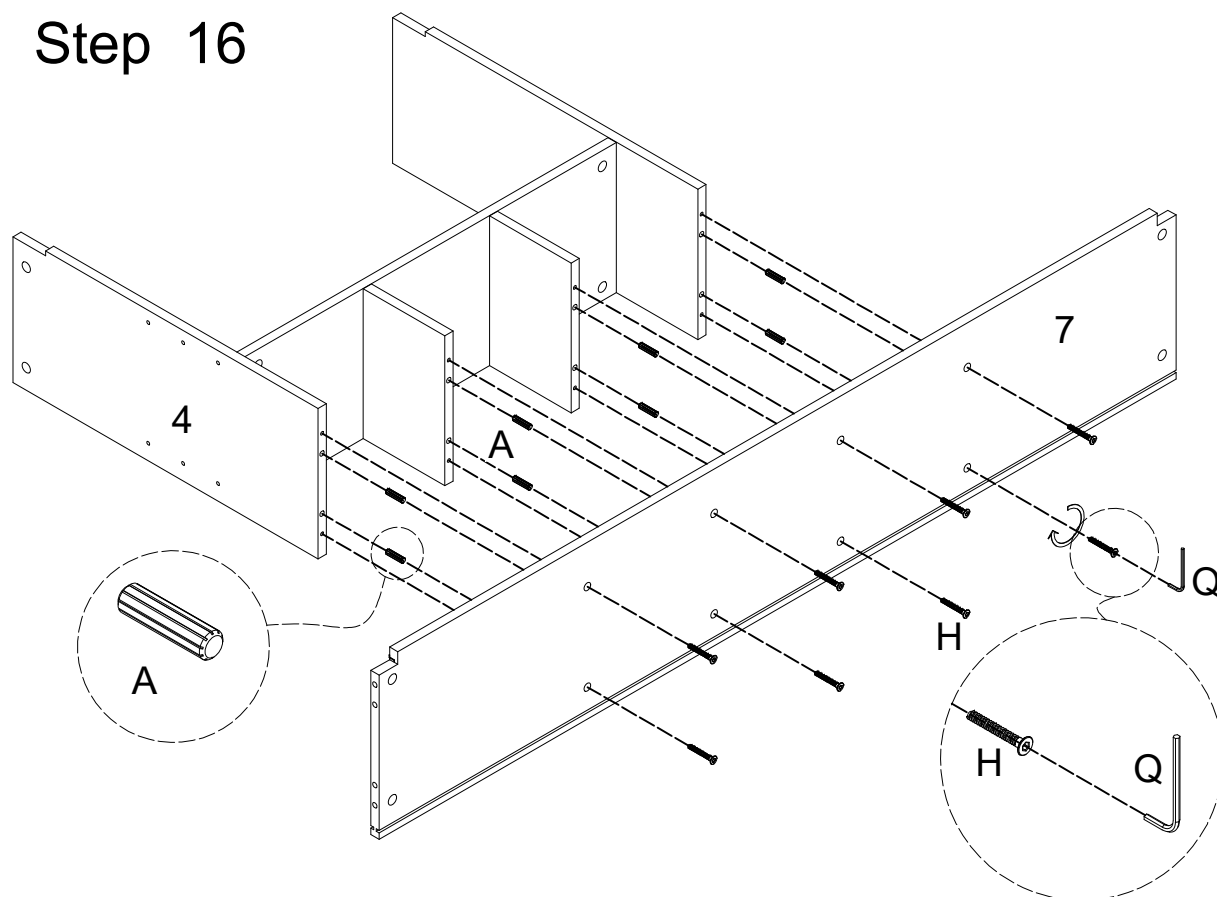


Step 17

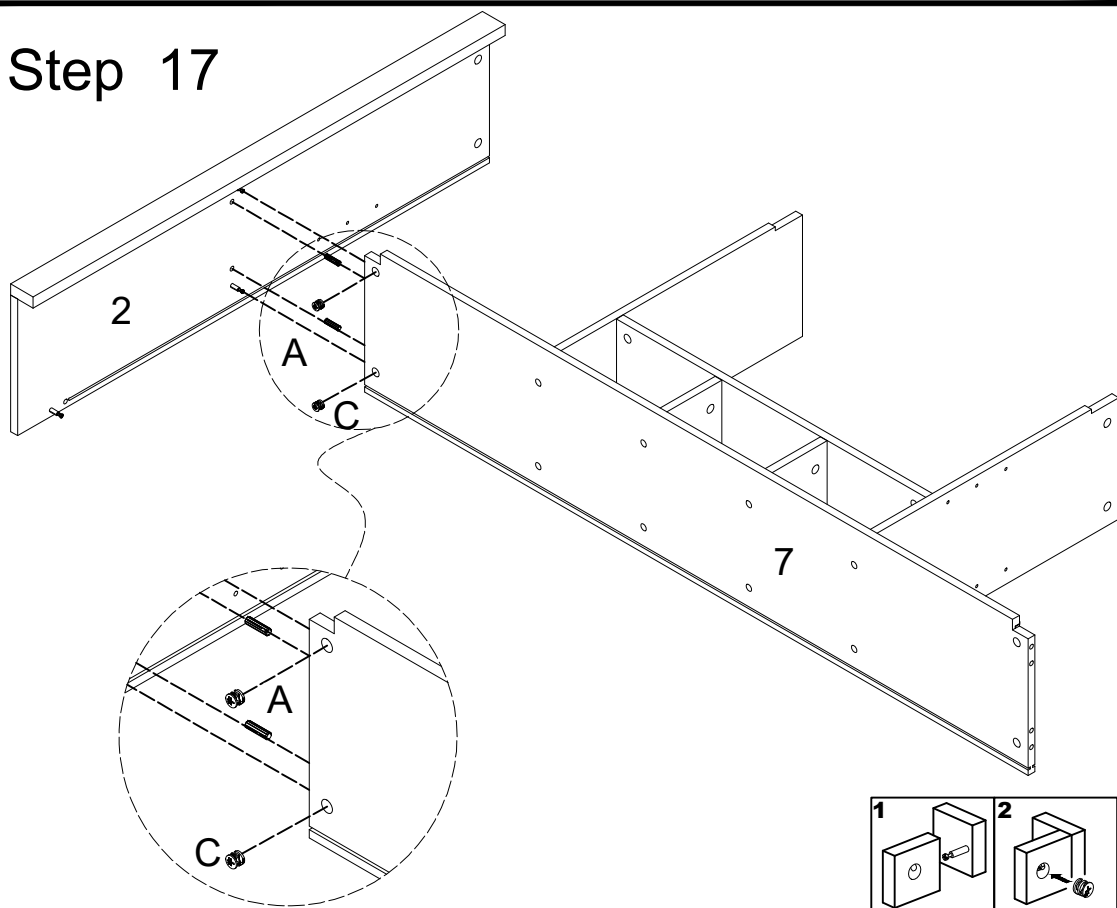


Step 18

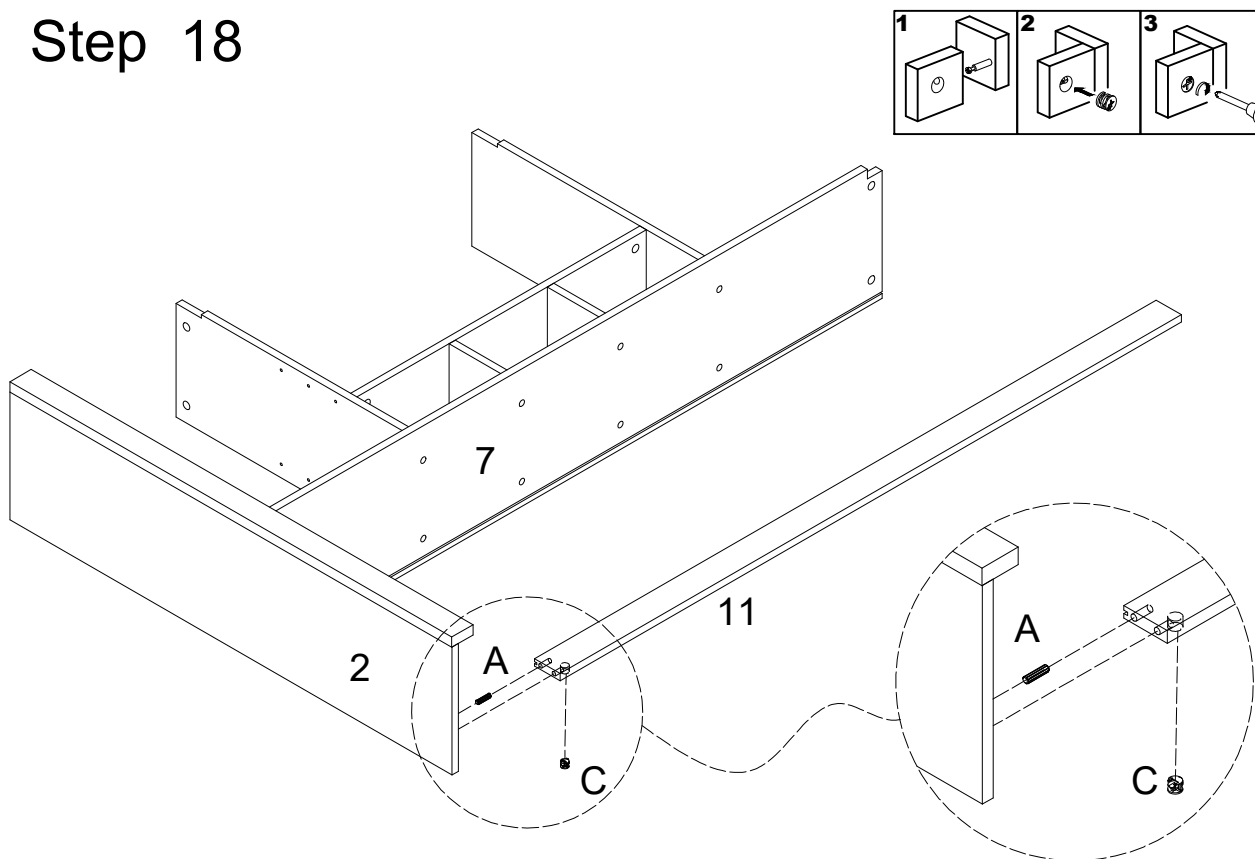


Step 19

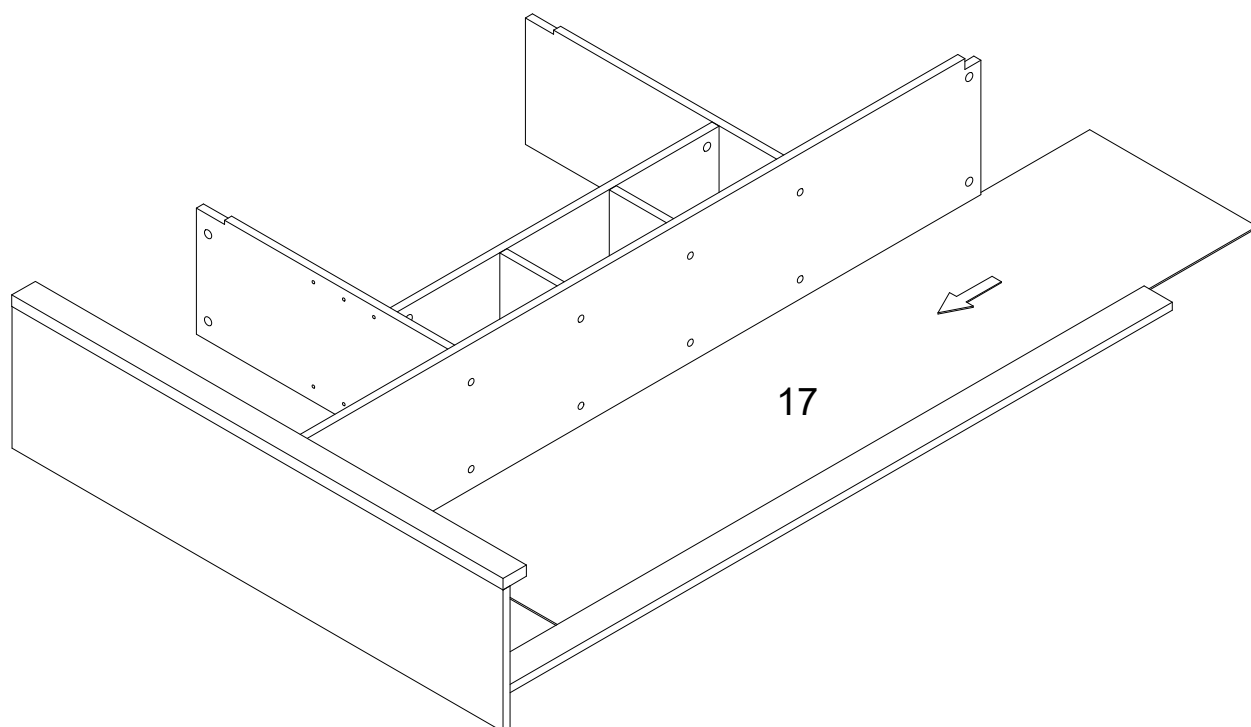

Step 20



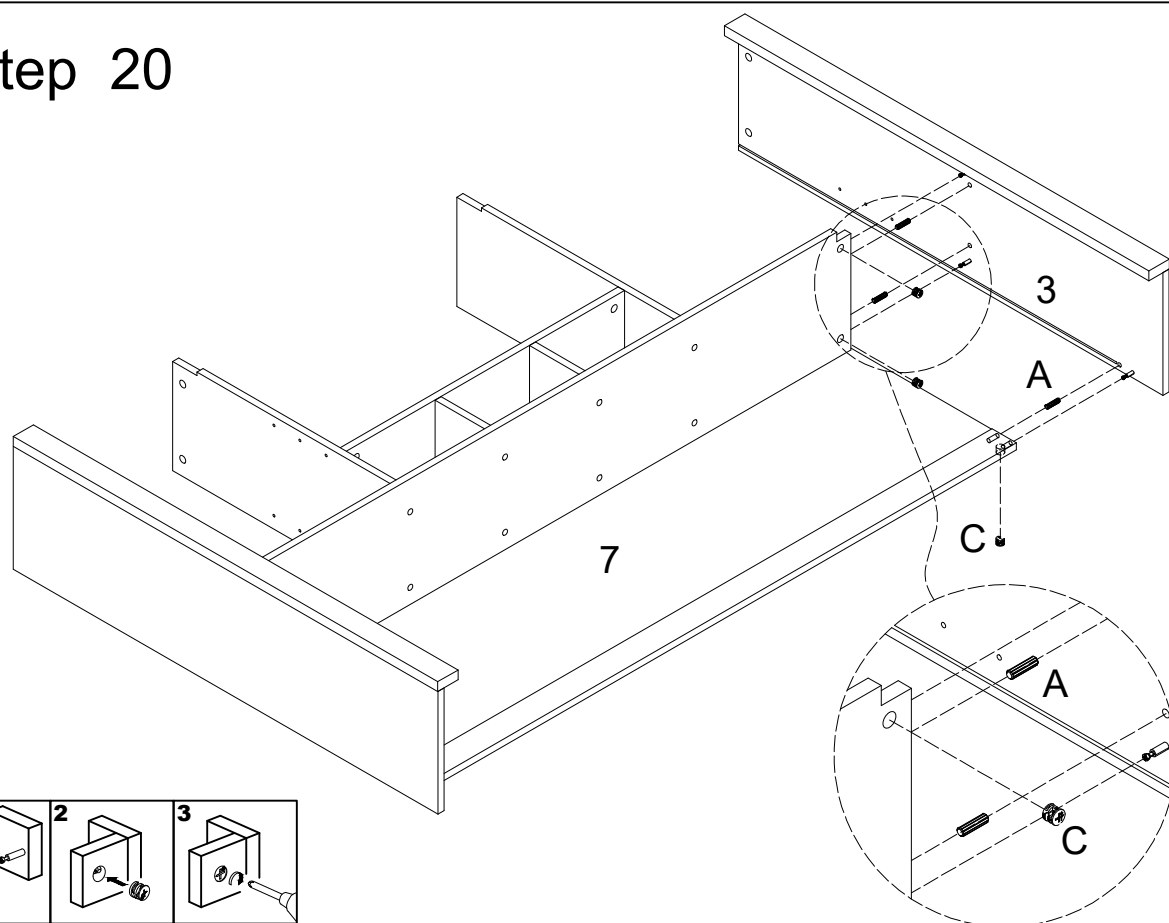


Step 21

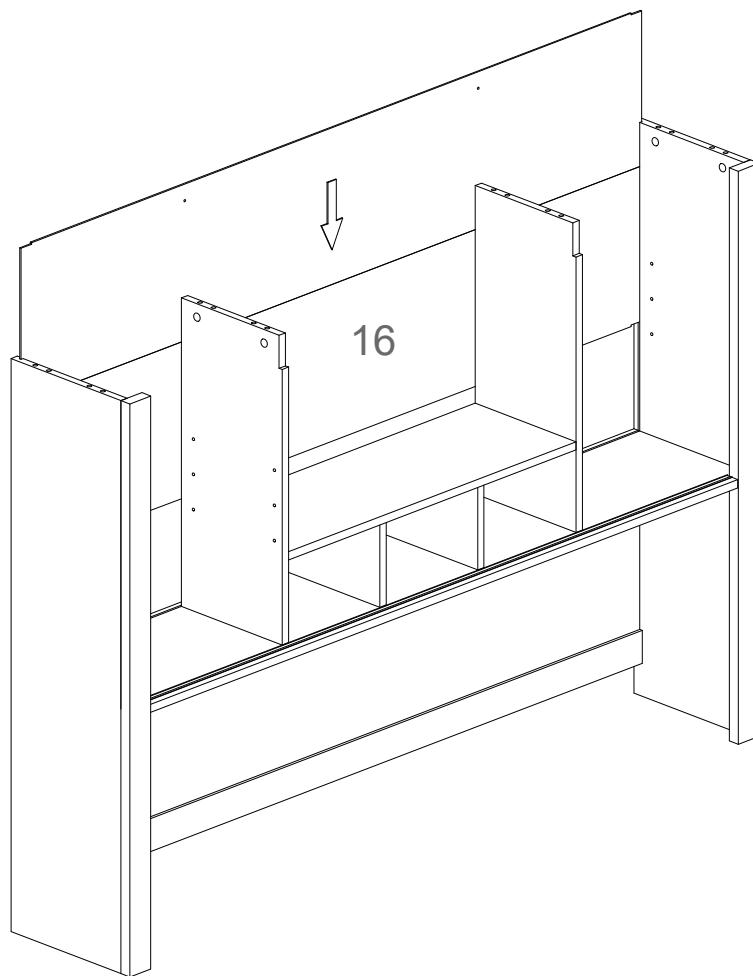


CAUTION: Heavy! You may need assistance with this step.


Step 22

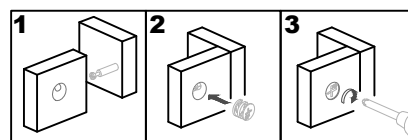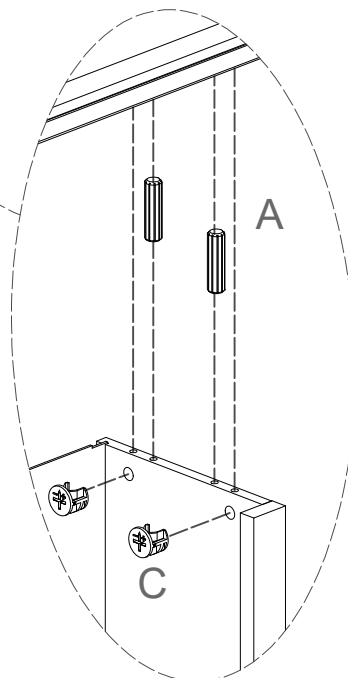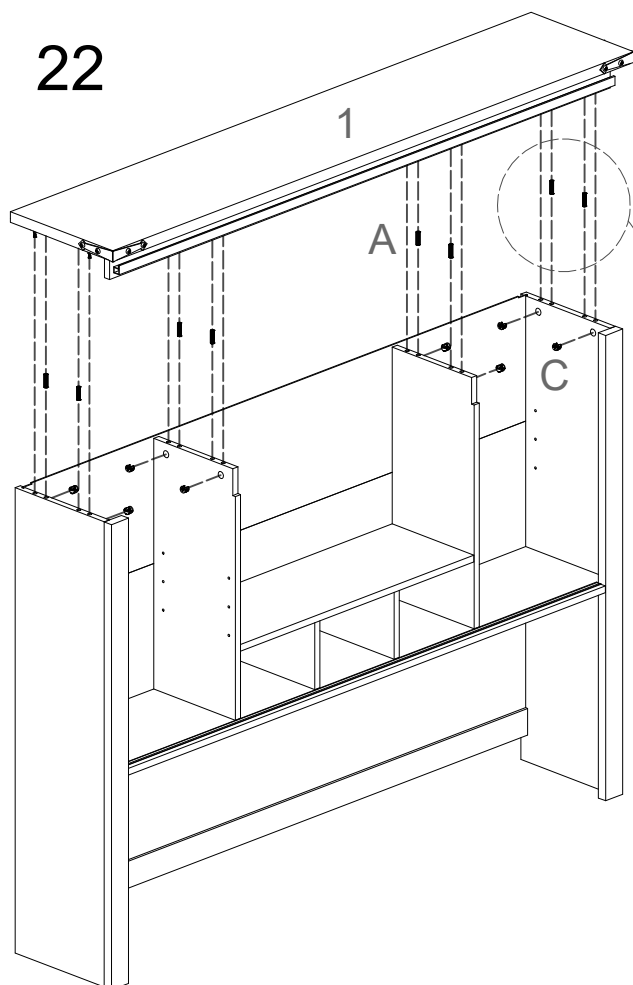


Step 23

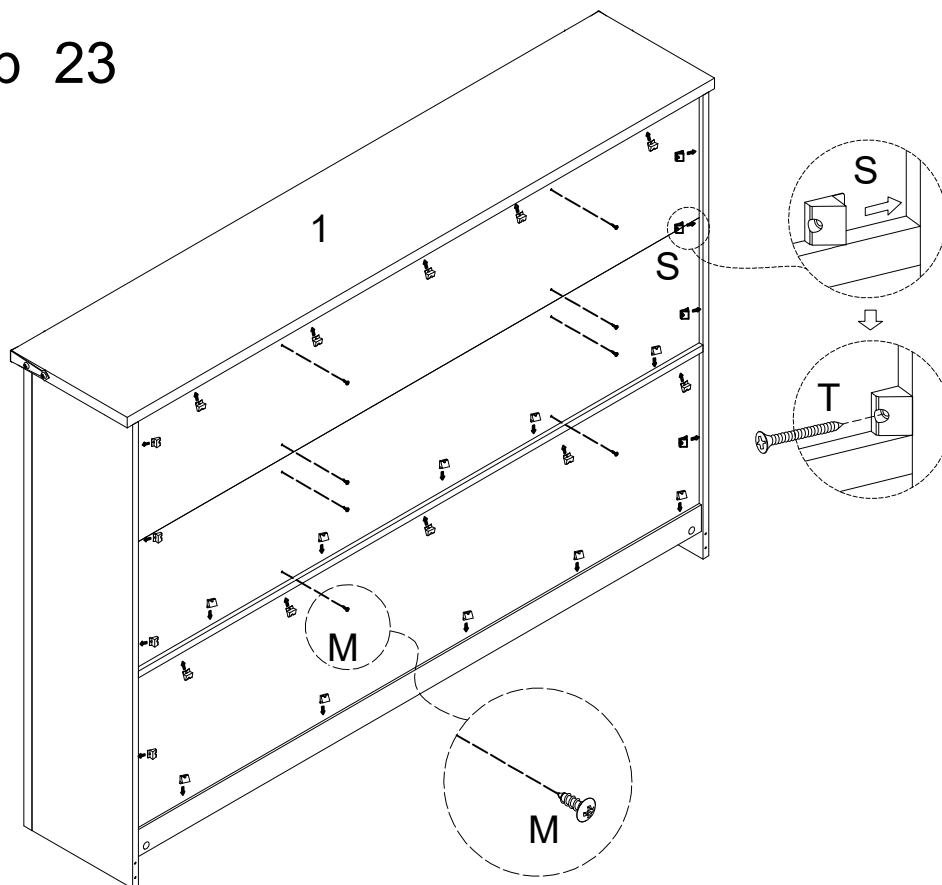


Step 24

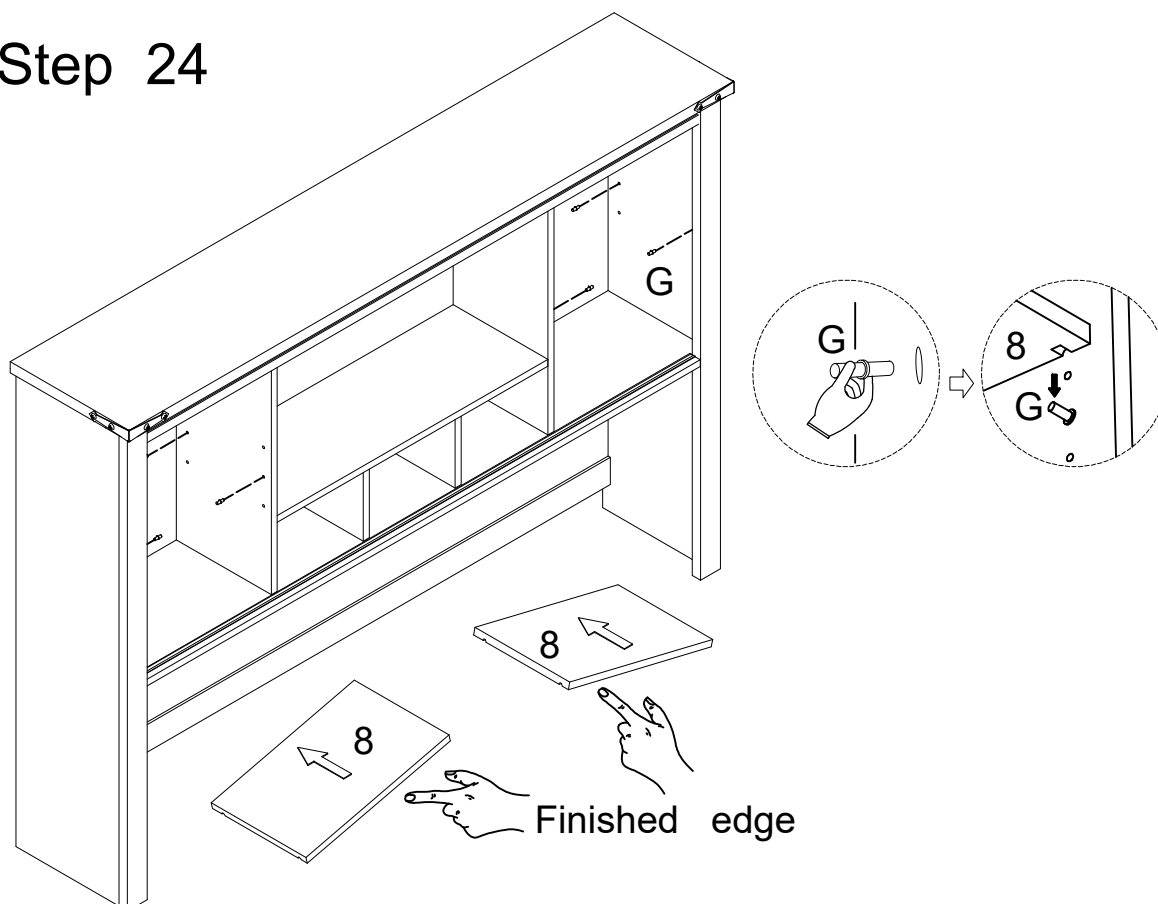



Step 25

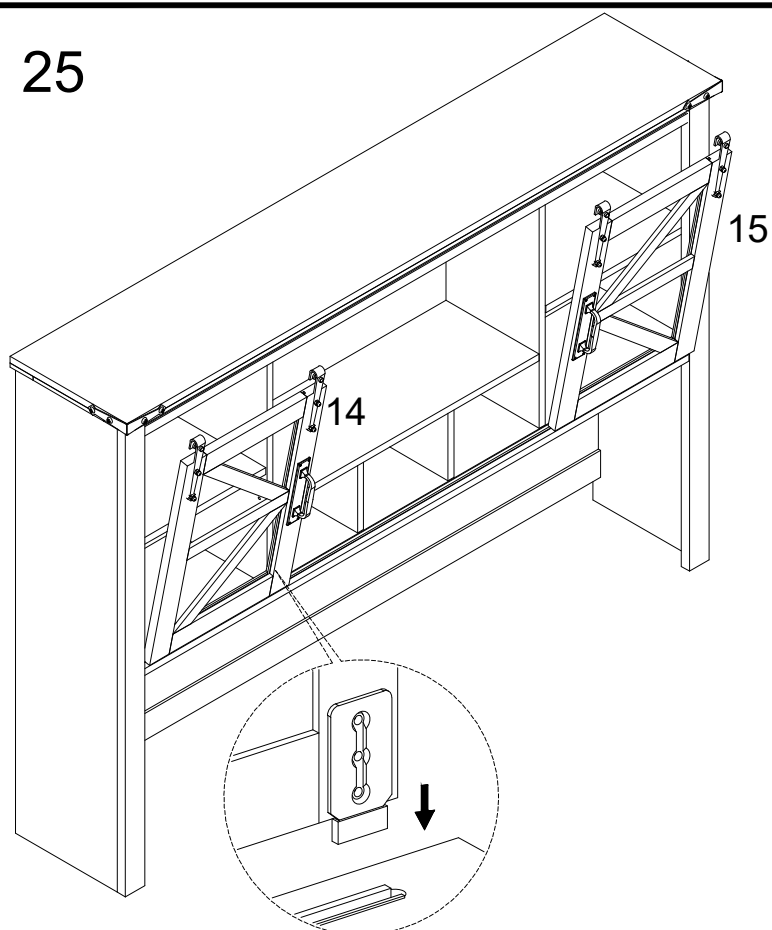

Step 26

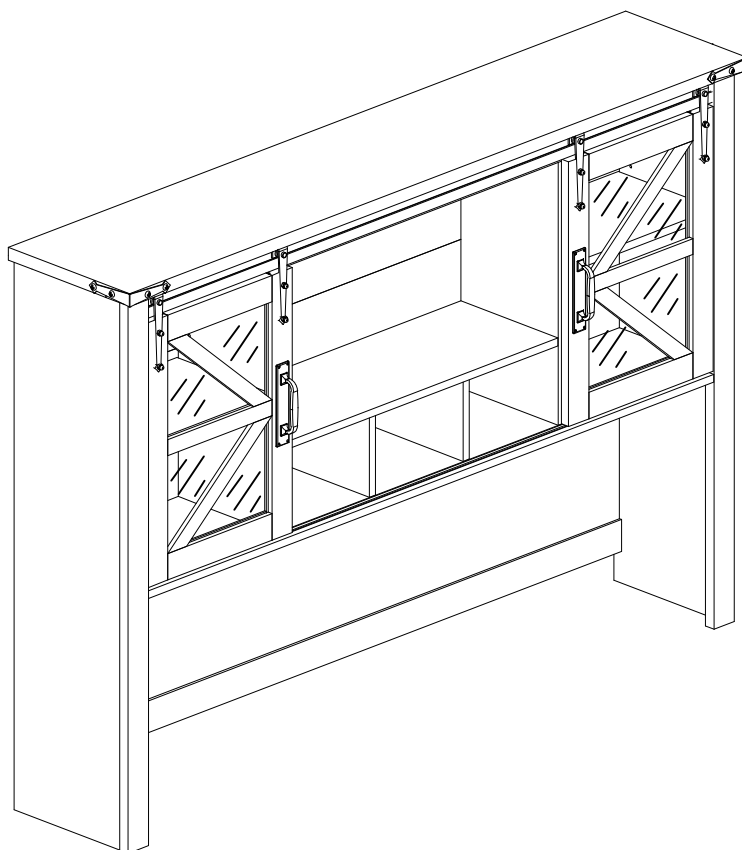

Step 27

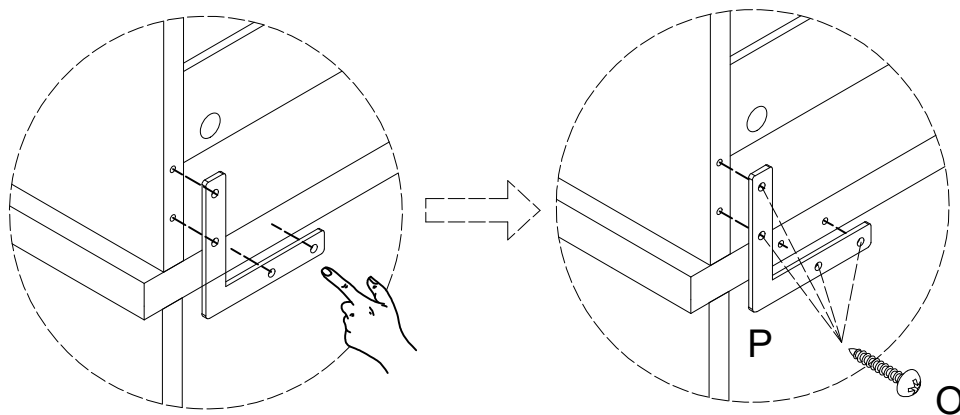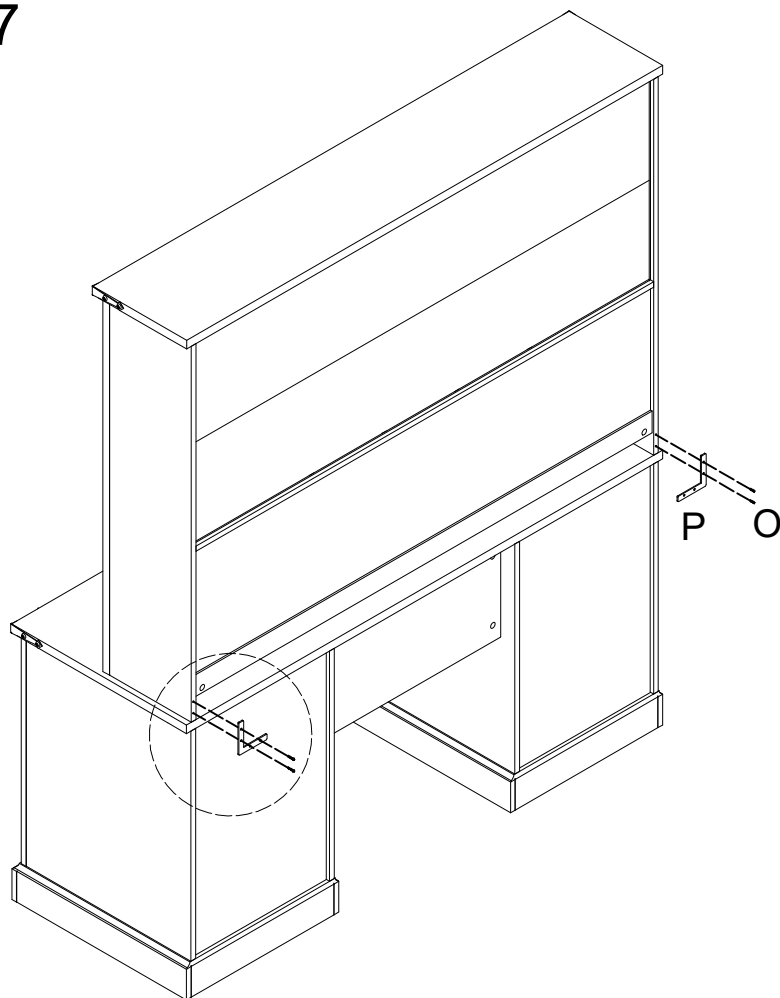


Drill Ø1/8" *5/8" pilot hole at the back of Desk Top for attaching L-brackets is recommended




CAUTION: Heavy! You may need assistance with this step.

Step 28

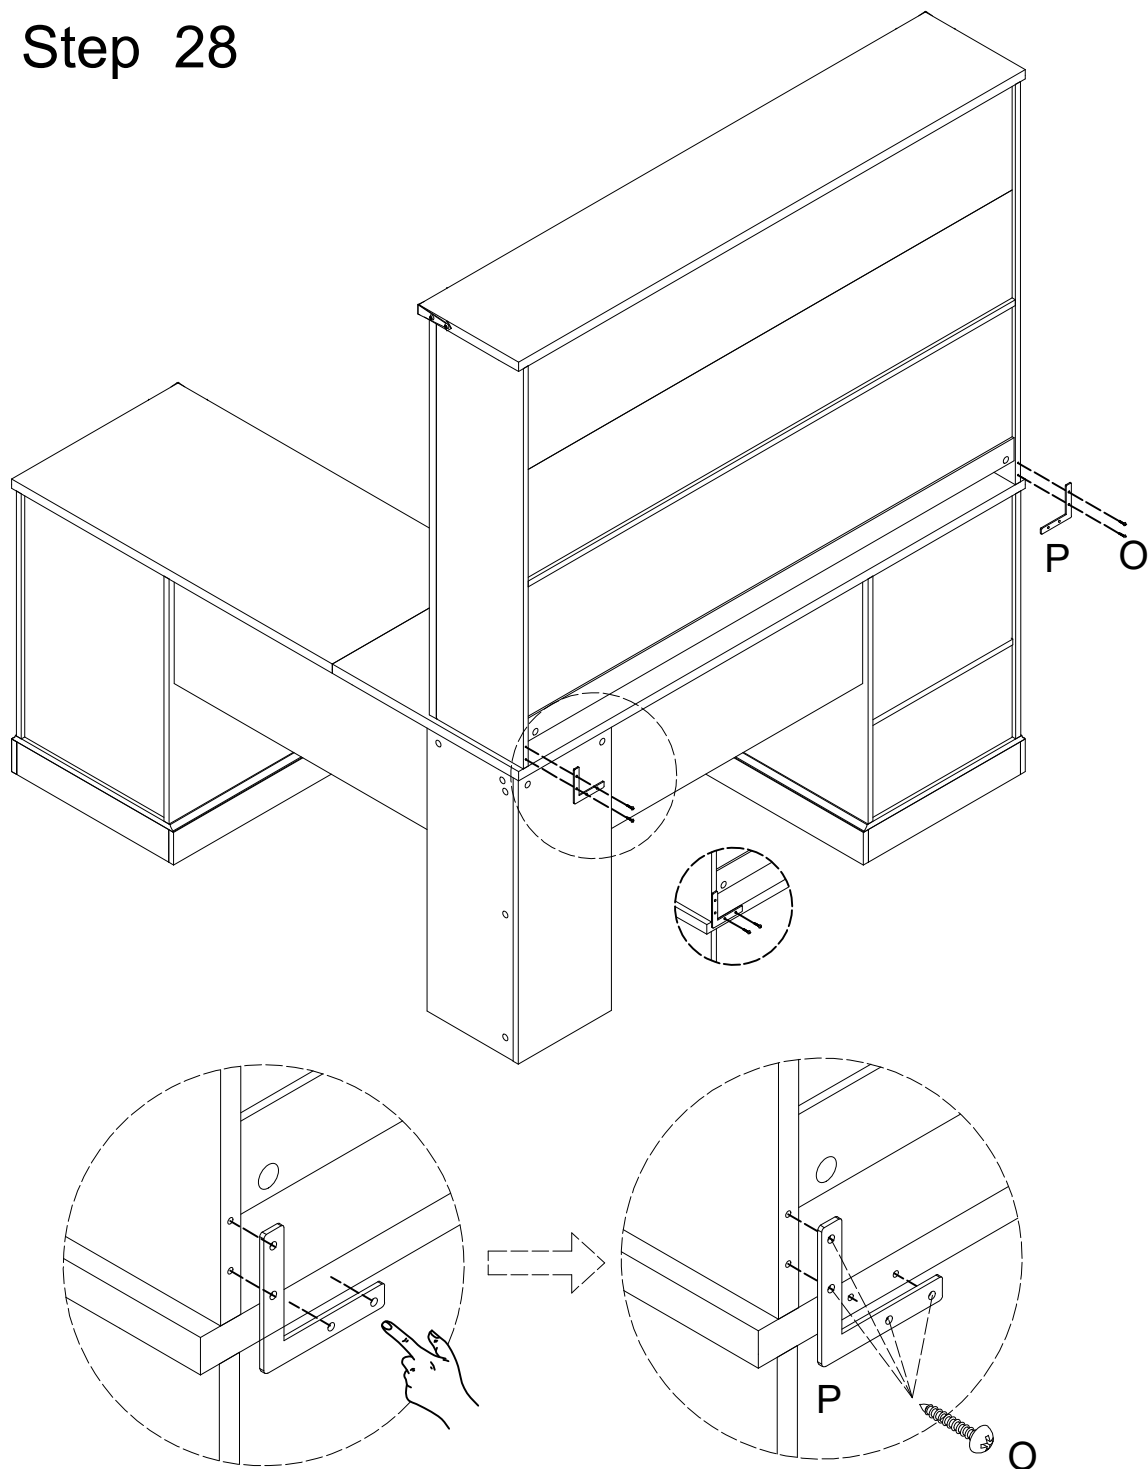


Drill $\varnothing 1/8"$ * $5/8"$ pilot hole at the back of Desk Top for attaching L-brackets is recommended

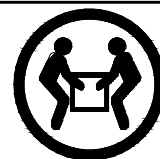

CAUTION: Heavy! You may need assistance with this step.

Step 29

Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

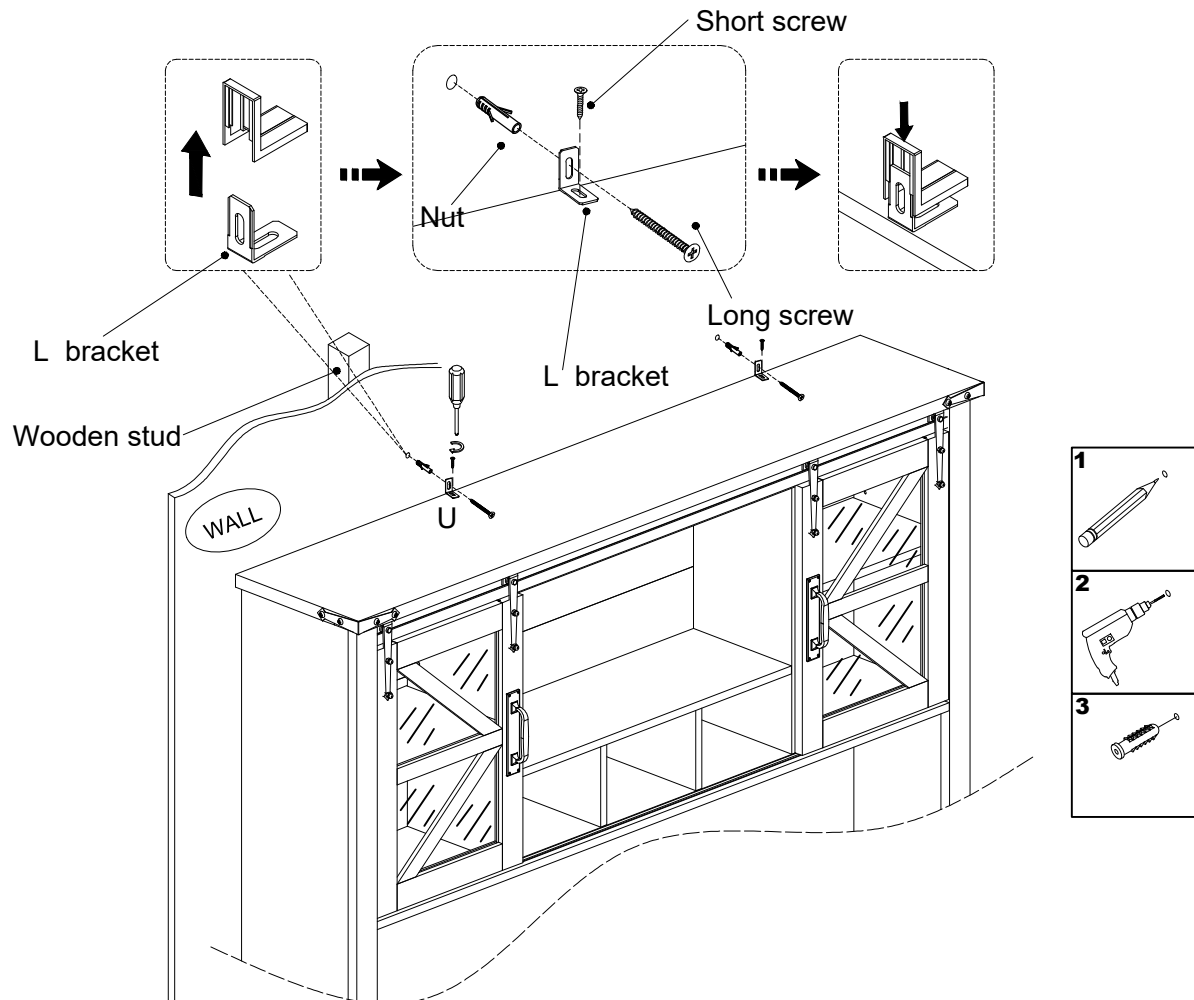

Final Assembly